



User Guide

htc one[®]_{M9}

Contents

Features you'll enjoy

Personalization	15
Imaging	17
Sound	21

Unboxing

HTC One M9	22
Slots with card trays	23
nano SIM card	24
Storage card	26
Charging the battery	29
Switching the power on or off	30
Want some quick guidance on your phone?	31

Phone setup and transfer

Setting up HTC One M9 for the first time	32
Transferring content from an Android phone	34
Ways of transferring content from an iPhone	35
Transferring iPhone content through iCloud	36
Transferring contacts from your old phone through Bluetooth	36

Other ways of getting contacts and other content	37
Transferring photos, videos, and music between your phone and computer	38
Using Quick Settings	39
Getting to know your settings	41
Updating your phone's software	42
Getting apps from Google Play	45
Downloading apps from the web	47
Uninstalling an app	48

Your first week with your new phone

Basics	49
HTC Sense Home widget	67
Motion Launch	71
Lock screen	80
Notifications	84
Working with text	87
HTC Help	94

Personalizing

Themes	95
More ways to personalize	100

HTC BlinkFeed

What is HTC BlinkFeed?	112
Turning HTC BlinkFeed on or off	113
Restaurant recommendations	114
Ways of adding content on HTC BlinkFeed	115
Customizing the Highlights feed	117
Saving articles for later	117
Posting to your social networks	118
Removing content from HTC BlinkFeed	118

Camera

Camera basics	119
Selfies and people shots	128
Split Capture	133
Panoramic shots	135
Other camera features	138
Camera settings	139

Gallery

Viewing photos and videos in Gallery	142
Adding photos or videos to an album	146
Copying or moving photos or videos between albums	147
Tagging photos and videos	147

Searching for photos and videos	149
Finding matching photos	150
Viewing Pan 360 photos	150
Changing the video playback speed	151
Trimming a video	152
Saving a photo from a video	153
Viewing a Zoe in Gallery	153
One Gallery	154

Photo Editor

Basics	155
Editing continuous shots	159
Creative effects	162

Video chat and phone calls

Video chat	172
Phone calls	174

Messages

Sending a text or multimedia message via Message+	185
Sending a text message (SMS)	185
Sending a multimedia message (MMS)	186
Sending a group message	187

Resuming a draft message	188
Replying to a message	188
Forwarding a message	189
Copying a text message to the nano SIM card	189
Deleting messages and conversations	190

Entertainment

HTC BoomSound with Dolby Audio	192
HTC Music	193
HTC Connect	199

Power and storage management

Battery	206
Phone storage	211
File Manager	214

Sync, backup, and reset

Online sync	217
Backup	219
HTC Sync Manager	224
Reset	227

People

Your contacts list	230
Setting up your profile	232
Adding a new contact	232
Editing a contact's information	234
Getting in touch with a contact	234
Importing or copying contacts	235
Merging contact information	237
Sending contact information	238
Contact groups	239
Private contacts	241

Calendar and Email

Viewing the Calendar	242
Scheduling or editing an event	244
Choosing which calendars to show	245
Sharing an event	246
Accepting or declining a meeting invitation	246
Dismissing or snoozing event reminders	247
Checking your mail	248
Sending an email message	249
Reading and replying to an email message	250
Managing email messages	252
Searching email messages	253

Working with Exchange ActiveSync email	254
Adding an email account	255
What is Smart Sync?	256

Google Search and apps

Google Now	257
Google Search	260
Google Chrome	262
Google Drive	264
Google Maps	267
YouTube	271

Other apps

HTC Dot View	273
Kid Mode	277
HTC Car	280
Scribble	284
Clock	288
VZ Navigator	289

Internet connections

Data connection	290
Managing your data usage	291

Wi-Fi connection	293
Wi-Fi Enhanced Connectivity	295
Connecting to VPN	296
Using HTC One M9 as a Mobile Hotspot	298
Sharing your mobile data connection by USB tethering	299

Wireless sharing

Bluetooth	300
NFC	304
HTC Mini+	307

Settings and security

Turning location services on or off	311
Airplane mode	312
Scheduling when to turn data connection off	312
Automatic screen rotation	313
Setting when to turn off the screen	313
Screen brightness	313
Touch sounds and vibration	314
Changing the display language	315
Glove mode	315
Installing a digital certificate	316
Pinning the current screen	316
Disabling an app	317

Assigning a PIN to a nano SIM card	317
Accessibility features	318
Accessibility settings	320
Turning Magnification gestures on or off	320
Navigating HTC One M9 with TalkBack	321

Trademarks and copyrights

Index

IMPORTANT CUSTOMER INFORMATION

Please be advised that many services and applications offered through this unique device are provided by various device manufacturers, operating system, software and application developers (e.g. Google[®], Motorola[®], Microsoft[®], BlackBerry[®]). If you use, link to or download such a service, or an application such as a non-Verizon Wireless location based GPS-type service, chat room, marketplace or social network from this device, you should carefully review the terms of such service or application. If you use any of these non-Verizon Wireless services or applications, personal information you submit may be read, collected, or used by the service or application provider and/or other users of those forums.

Verizon Wireless is not responsible for your use of those applications or information you choose to submit or share with others. Specific terms and conditions, terms of use, and privacy policies apply to those applications and services. Please review carefully any and all terms and conditions applicable to those applications and services including those related to any location-based services for any particular privacy policies, risks or waivers.

Your Verizon Wireless Customer Agreement Terms and Conditions and certain other specifically identified terms govern your use of any Verizon Wireless products and services.

About this guide

In this user guide, we use the following symbols to indicate useful and important information:



This is a note. A note often gives additional information, such as what happens when you choose to do or not to do a certain action. A note also provides information that may only be applicable to some situations.



This is a tip. A tip gives you an alternative way to do a particular step or procedure, or lets you know of an option that you may find helpful.



This indicates important information that you need in order to accomplish a certain task or to get a feature to work properly.



This provides safety precaution information, that is, information that you need to be careful about to prevent potential problems.

Important RF Notice

This device was tested for compliance with the applicable FCC and Industry Canada specific absorption rate (SAR) limits for radio frequency (RF) exposure during typical body-worn operations. To ensure that RF exposure levels remain at or below the tested levels, use a belt-clip, holster, or similar accessory that maintains a minimum separation distance of 1.0 cm between your body and the device, with either the front or back of the device facing towards your body. Such accessories should not contain any metallic components. Body-worn accessories that do not meet these specifications may not ensure compliance with applicable SAR limits and their use should be avoided.

This device has been shown to be HAC compatible for CDMA and LTE™. Hearing Aid Compatibility = M4/T4.

Important note on recoverable data

Files and other data that have been deleted, cleared, removed, or erased from your device may still be recoverable by third-party data recovery software. Even a factory reset may not permanently erase all data from your phone, including personal information.

Features you'll enjoy

Personalization


Designed with you in mind, HTC One M9 is filled with innovations that help it to adapt to your life.

Themes



Make HTC One M9 feel more personal by customizing how it looks with your own photos and then mix and match with different sets of icons, sounds, color schemes, and more. See [What is the Themes app?](#) on page 95.

HTC Sense Home

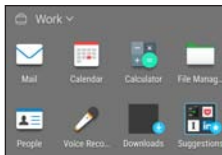


Your Home screen adapts to your needs at home, at work, and on the go. New lock screen notifications make it easier to find what you've missed, see upcoming events, get restaurant recommendations, and more. See [What is the HTC Sense Home widget?](#) on page 67 and [HTC BlinkFeed Notifications](#) on page 82.

HTC BlinkFeed



Get your favorite topics, news, social media, and more conveniently delivered to one place on your phone. Even get suggestions for points of interests and places to eat! See [What is HTC BlinkFeed?](#) on page 112.

Kid Mode

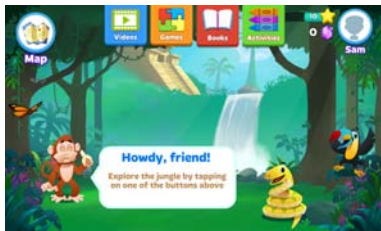

Be worry-free while your kids use your HTC One M9. Customize your little ones' experience in Kid Mode®, where they can enjoy a virtual playground with games, apps, and books that you approve of. You can check on which sites and subjects your child has been spending time on. See [Switching to Kid Mode](#) on page 277.

Imaging

Made to help you capture your memories to share with family and friends.

Bokeh



When using Bokeh mode with the main camera, you can focus on any object by just tapping it, which blurs the background for an artistic effect. See [Changing the focus in Bokeh mode](#) on page 127.

Split Capture



Use Split Capture mode to record yourself and the action in front of you. This mode uses both the front and back cameras to capture a split-screen photo or video. You can even resize the split windows. See [Using Split Capture mode](#) on page 133.

Front camera features

Enjoy using the variety of selfie-friendly features with the Camera app.

- **Live Makeup** – Before taking your selfie, use Live Makeup to smoothen your skin. See [Applying skin touch-ups with Live Makeup](#) on page 130.
- **Instant selfie shots** – Flash a smile, and the camera instantly captures your smiling face. Or, Just say “Cheese”! See [Using Auto Selfie](#) on page 130 and [Using Voice Selfie](#) on page 131.
- **Photo Booth** – Take 4 selfies and the camera automatically merges them into a single picture. See [Taking selfies with Photo Booth](#) on page 132.

One Gallery

One Gallery lets you view all your photos and videos that are stored on HTC One M9 as well as on favored online services right from the Gallery app. You can also find similar photos and videos using Image match or by searching with keywords or tags. See [One Gallery](#) on page 154.

Photo Editor

The Photo Editor app enhances your photos, from basic edits to elegant effects!



Make a photo surreal. Blend in shapes, elements, and prismatic effects. See [Prismatic](#) on page 165.




Superimpose one image onto another and create a unique composition only you can imagine! See [Double Exposure](#) on page 166.



Face Fusion uses two photos such as your selfie and a photo of your favorite celebrity to merge your looks together. See [Face Fusion](#) on page 170.

Enhanced video calling

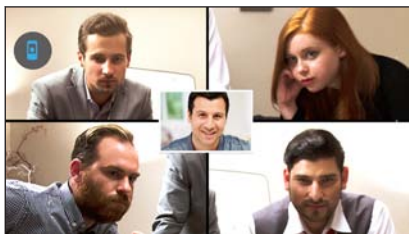

Face Tracking can detect not just you but also the people around you during a video call. Your caller will see up to 4 faces that are within your camera's field of vision.

Also, you can share what you're looking at on your phone screen to the person you're chatting with. See [Video chat and phone calls](#) on page 172.

Zoe

Use the Zoe™ app to create stories using your photos and videos combined with your own soundtrack. Right from this app, you can engage with the Zoe community to share your content and remix with other people's content. There's also the Zoe website that's accessible from your computer web browser where everyone can view shared content.

To find out how to use the Zoe app, go to www.zoe.com/help. To visit the Zoe website, go to www.zoe.com.

Sound

Discover audio bliss on HTC One M9 through its built-in speakers, headphones, or wireless speakers.

HTC BoomSound with Dolby Audio


Hear what you've been missing. HTC BoomSound™ gives you a rich, authentic sound experience, whether you're listening to music, watching a video, or playing a game. To find out more, see [Toggling modes in HTC BoomSound](#) on page 192 and [Using HTC BoomSound with headphones](#) on page 192.

HTC Connect

Simply swipe up the screen with three fingers to stream music or video from HTC One M9 to your speakers or TV. Control the volume and playback with your phone! You can even enjoy your favorite music on multiple speakers. See [What is HTC Connect?](#) on page 199.

Unboxing

HTC One M9

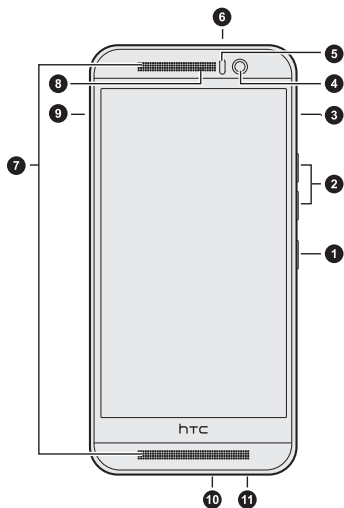


1. POWER
2. VOLUME
3. microSD™ card slot with eject hole
4. Front camera
5. Proximity sensor
6. IR sensor
7. Dual speakers
8. Notification LED
9. nano SIM card slot with eject hole
10. USB connector
11. 3.5mm headset jack

⚑ If you want to use a case, please don't cover and block the proximity sensor. Purchase a case designed for HTC One M9. A dedicated case for HTC One M9 that already has a small opening for the sensor can be purchased through any Verizon Wireless store or online at www.verizonwireless.com.

Slots with card trays

With HTC One M9 facing up, the nano SIM slot is on the left side and the microSD slot on the right side. There are trays inside the slots that are used for inserting your cards.

When inserting the eject tool into the tray eject holes to remove the card trays, make sure not to press on the trays to avoid damaging the eject mechanism inside the slots.

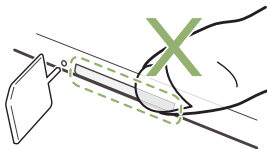


Also, if you want to use a protective case, make sure to buy a case that's designed for HTC One M9 and that doesn't block the trays.

nano SIM card

HTC One M9 uses a nano SIM card.


The nano SIM card is preinstalled on HTC One M9. If you need to remove or replace the card, refer to the following instructions.

Use a standard nano SIM card only. Inserting a modified card that is thicker than the standard nano SIM card may cause the card to not fit properly or damage the card slot.

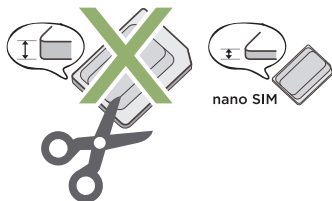


Inserting a nano SIM card

1. Hold the phone face down.
2. Insert the tip of the tray eject tool that came with your phone—or a small bent paperclip—into the tray eject hole next to the nano SIM card slot.

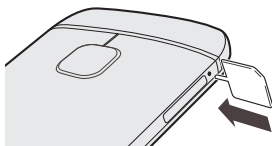

3. Push the tip all the way into the hole until the tray ejects, and then pull the tray out.
4. Place the nano SIM card into the tray, with the gold contacts facing up and cut-off corner facing out.

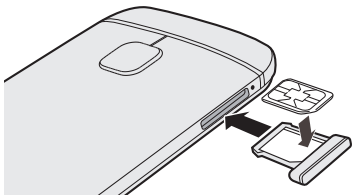

5. Insert the card tray back into the slot.


Removing a nano SIM card



Make sure to switch off HTC One M9 before removing the card.

1. Hold the phone face down.

2. Insert the tip of the tray eject tool that came with your phone—or a small bent paperclip—into the tray eject hole next to the nano SIM card slot.

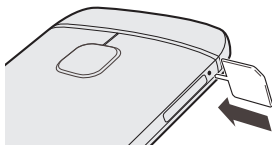

3. Push the tip all the way into the hole until the card tray ejects.
4. Pull the card tray out, and remove the nano SIM card.
5. Make sure that you insert the empty card tray back into the slot.

Storage card

Use a storage card to store your photos, videos, and music. When you need to free up phone storage space, you can also move certain apps to the storage card, if the apps support this feature.




The storage card is optional and sold separately.




- Moving apps to the storage card doesn't back up the apps. If you do a factory reset, your phone loses the apps. You'll need to reinstall them.
- When you remove the storage card and insert it in another phone, the apps on the storage card won't be installed automatically to the other phone. You'll need to reinstall them.

Inserting the microSD card

1. Hold the phone face up.
2. Insert the tip of the tray eject tool that came with your phone—or a small bent paperclip—into the tray eject hole next to the microSD card slot.

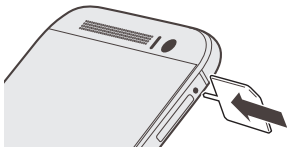

3. Push the tip all the way into the hole until the microSD card tray ejects.
4. Pull the microSD card tray out, and place the microSD card—contacts facing down—into the tray.

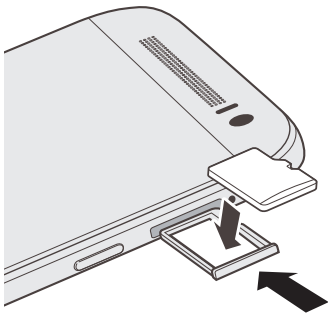

5. Insert the microSD card tray back into the slot.

Unmounting the storage card

When you need to remove the storage card while HTC One M9 is on, unmount the storage card first to prevent corrupting or damaging the files in the storage card.


1. From the Home screen, tap **⋮** > **Settings** > **Storage**.
2. Tap **Unmount SD card**.

Removing the microSD card



Make sure to unmount your microSD card before removing it.

1. Hold the phone face up and the top panel facing you.
2. Insert the tip of the tray eject tool that came with your phone—or a small bent paperclip—into the tray eject hole next to the microSD card slot.

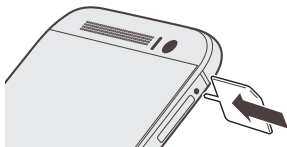

Use the tray eject tool that came with your phone.

3. Push the tip all the way into the hole until the microSD card tray ejects.
4. Pull the microSD card tray out, and remove the microSD card.

After removing the microSD card, make sure that you insert the empty microSD card tray back into the slot.


Charging the battery

Before you turn on and start using HTC One M9, it is recommended that you charge the battery.



- If the battery has been discharged for several days, you may need to charge HTC One M9 for several minutes before powering it on.
- Use only the adapter and the USB cable that came with HTC One M9 to charge the battery. When the battery power is too low, make sure to use the power adapter to charge, not the USB cable connection with your computer.

1. Insert the small end of the USB cable into the USB connector.

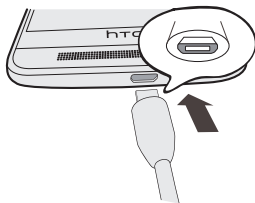

2. Insert the other end of the USB cable into the power adapter.
3. Plug in the power adapter to an electrical outlet to start charging the battery.



- As a safety precaution, the battery may stop charging to avoid overheating.
- Avoid charging the battery in hot environments.
- When you're using the web browser and charging the battery, HTC One M9 may become warmer. This is normal.
- To conserve energy, unplug the power adapter from the electrical outlet after you finish charging.

Switching the power on or off

Switching the power on

Press the POWER button until HTC One M9 vibrates.




When you turn on HTC One M9 for the first time, you'll need to set it up.


Switching the power off

1. If the display is off, press the POWER button to turn it back on.
2. Press and hold the POWER button for a few seconds.
3. Tap **Power off** on the options menu.

Want some quick guidance on your phone?

Check out the friendly walkthroughs and the FAQs in the Help app to learn how to use your phone.

- When you see a Tips & Help tile in HTC BlinkFeed®, just tap the tile to know more about the tip.
- From the Home screen, tap , and then find and tap **Help**.

You can then tap **Tips & Help** > **Search help articles & videos**, and enter what you're looking for. Or you can tap  to browse videos, how-tos, FAQs and more.

Phone setup and transfer

Setting up HTC One M9 for the first time

When you switch on HTC One M9 for the first time, you'll be asked to set it up.



You can enable TalkBack to navigate by voice feedback before selecting the language. Press and hold two fingers on the screen until you hear a message saying that accessibility mode is enabled.

Walk through the on-device setup to choose your Internet connection, sign in to your accounts, and more.

- Use Google backup if you've used it to back up your old phone before and you only need to restore apps and no other types of content. On the Get your apps & data screen, choose your old phone and the apps you want to restore to HTC One M9.

If you have other types of content to transfer or restore from your old phone, tap **Restore from this backup**, and then select **Set up as new device**.

- If you have content from another phone that you want to transfer, whether it's from an Android®, iPhone®, or other phone, you can do so using the **Get content from another phone** option in Settings.

Depending on the type of old phone that you have, see the following for more details:

[Transferring content from an Android phone on page 34](#)

[Ways of transferring content from an iPhone on page 35](#)

[Transferring contacts from your old phone through Bluetooth on page 36](#)



Some features that need to connect to the Internet such as location-based services and auto-sync of your online accounts may incur extra data fees. To avoid incurring data fees, disable these features under Settings. For more information on location services, see [Turning location services on or off on page 311](#).


Transferring content from an Android phone

On your old Android phone, download the HTC Transfer Tool and use it to transfer your content to HTC One M9.

The types of locally stored content on your old phone that the HTC Transfer Tool can transfer include contacts, messages, calendar events, music, photos, videos, and some settings. More types of data such as call histories, email accounts, and some HTC app settings can be transferred from HTC phones that have HTC Sense® 5.5 or higher.



- You need Android version 2.2 or later to use the HTC Transfer Tool on your old phone.
- If your old phone has Android version 2.1 or an earlier version, you need to use Bluetooth® transfer. For details, see [Transferring contacts from your old phone through Bluetooth](#) on page 36.

1. From the Home screen, tap  > **Settings** > **Get content from another phone**.
2. Choose whether to transfer from an HTC Android phone or other Android phone.
3. Tap **Full transfer**, and then tap **Next**.
4. Follow the steps shown on HTC One M9 to download the HTC Transfer Tool from Google Play™ to your old phone, install it, and open the tool.

5. When you see a PIN on your old phone, make sure the same PIN also appears on HTC One M9 before you continue.

If the PIN code doesn't appear, tap **Retry** on your old phone. If it still won't appear, this may mean that your old phone is unable to connect to HTC One M9. When this happens, try another transfer method.

6. Tap **Confirm** on your old phone.
7. On your old phone, choose the types of content you want to transfer, tap **Transfer**, and then tap **Yes**.
8. On your old phone, read the onscreen message, and then tap **Yes**.
9. Wait for the transfer to finish.
10. Tap **Done** on both phones.

Ways of transferring content from an iPhone

If you have an iPhone, there are 3 easy ways to transfer your contacts, messages, and other content to HTC One M9.

- Back up and restore iPhone content through iCloud®. To find out how, see [Transferring iPhone content through iCloud](#) on page 36.
- Back up iPhone content using iTunes® on your computer, and then use HTC Sync Manager to transfer the content to HTC One M9. For details, see [Transferring iPhone content and apps to your HTC phone](#) on page 226.
- If you only need to copy your contacts, you can use Bluetooth transfer. For details, see [Transferring contacts from your old phone through Bluetooth](#) on page 36.

Transferring iPhone content through iCloud

If you have an iCloud® account, sync iPhone content to your iCloud® storage, and then transfer the content to HTC One M9. You can transfer the following types of content from iCloud®: contacts, bookmarks, text messages, messages from iMessage®, calendar events, and photos.

1. From the Home screen, tap **⋮** > **Settings** > **Get content from another phone**.
2. Tap **iPhone** > **Import from iCloud backup**.
3. Follow the steps shown onscreen to back up your iPhone content to your iCloud® storage.
4. Enter your iCloud® email address and password, and then tap **Sign in**.
5. Choose the iPhone backup that you want to transfer to HTC One M9, and then tap **Next**.
6. Choose the types of content you want to transfer, and then tap **Import**.
7. Wait for the transfer to finish, and then tap **Done**.



Only some contact details can be transferred, such as the contact name, photo, postal address, email address, birthdate, anniversary date, and notes.

Transferring contacts from your old phone through Bluetooth

Use Bluetooth if you only need to transfer contacts from an iPhone, a phone that has Android version 2.1 (or earlier version), or other types of phones.

1. From the Home screen, tap **⋮** > **Settings** > **Get content from another phone**.

2. Choose whether to transfer from an Android phone, iPhone, or other phone types.
3. If you chose to transfer from an Android phone, tap **Quick transfer**. Or to transfer from iPhone, tap **Transfer contacts over Bluetooth**.
4. On your old phone, turn Bluetooth on.
5. Follow the onscreen instructions on your old and new phones to pair them and start the data transfer.



- Depending on the capabilities of your old phone, you may be able to transfer not only contacts but also other data such as calendar events and text messages through Bluetooth.
- Use your iCloud® storage or HTC Sync Manager to transfer more types of content from an iPhone.

Other ways of getting contacts and other content

There are different ways you can individually add contacts and other content to HTC One M9.

Sync with your computer

Use HTC Sync Manager to sync contacts, documents, playlists, and more between HTC One M9 and your computer running a Windows® or Mac OS® operating system.

You can also use it to transfer your iTunes backup that contains contacts, messages, and other content from an iPhone from your computer to HTC One M9.

Google Account	Google contacts are imported to HTC One M9 after you sign in to your Google Account. You can also create more Google contacts right from HTC One M9.
Social network accounts	Log in to your favorite social networks to sync contact information from them.
Microsoft Exchange ActiveSync®	HTC One M9 syncs your work contacts from the Microsoft Exchange ActiveSync Server in your workplace.
Outlook.com account	Sync personal contacts from your Microsoft Outlook.com account.
Phone contacts	You can create contacts locally on HTC One M9, if you don't prefer to store them on your online accounts.
nano SIM card	Copy all your nano SIM contacts to HTC One M9.

Transferring photos, videos, and music between your phone and computer

Here are ways you can transfer your media from or to your computer.

- Connect HTC One M9 to your computer. Your computer will recognize it just like any removable USB drive, and you can copy your media between them.
- Download and use the HTC Sync Manager software on your computer. You can set it up to automatically get music, photos, and videos off HTC One M9 to your computer. You can also sync playlists from your computer to the phone.

If you have an iPhone, you can also connect it and transfer camera roll photos to your computer using HTC Sync Manager. Then reconnect HTC One M9 and copy them over.

- Use cloud storage services to put your media in one place so you can manage them anywhere—on your computer, HTC One M9, and other mobile devices.

Using Quick Settings

In the Quick Settings panel, easily turn settings such as Wi-Fi® and Bluetooth on or off.

1. Do any of the following:
 - With two fingers, swipe down from the status bar.






- Swipe down twice from the status bar.
2. To turn a setting on or off, just tap its tile.
 3. To change the options for a setting, press and hold its tile. Or tap ⋮.

Customizing Quick Settings

You can remove, replace, or rearrange the tiles in Quick Settings.

1. With two fingers, swipe down from the top of the screen to open Quick Settings.





2. Tap  and do one of the following:
 - In the Quick Settings list, press and hold  next to the item you want to move and drag it to rearrange the list.
 - Under Hidden items, press and hold  and drag it up to make it available in Quick Settings.



There is a limit to the number of tiles that can be shown in Quick Settings. You may need to remove an existing item to make space for another one. To remove an item, drag it below Hidden items.

Getting to know your settings

Want to change the ringtone, set up a Wi-Fi connection, or add your accounts? Do this and more in Settings.

1. Open Settings either from the Notifications panel or the Apps screen.
 - Swipe down from the status bar, and then tap .
 - From the Home screen, tap  to switch to the Apps screen, and then tap **Settings**.
2. Here are some of the basic settings you can change:
 - Tap the **On/Off** switch next to an item such as Wi-Fi to turn it on or off. Tap the item itself to configure its settings.
 - Tap **Sound & notification** to set a ringtone, choose a sound profile, and configure incoming call sound settings.
 - Tap **Personalize** to change the wallpaper, add apps and widgets to the Home screen, and more.
 - Tap **Accounts & sync** to add and sign in to your different accounts, such as email, social networks, and more.
 - Tap **Security** to help secure HTC One M9, for example with a screen lock.



Tap  in Settings to quickly find options and settings.

Updating your phone's software

HTC One M9 can check and notify you if there's a new update available. You can also choose to manually check if there's an available update.



Visit www.htc.com/us/go/htc-software-updates/ for news and details about your phone's software updates.

Checking your system software version

Before installing a system software update, you can check first what Android and HTC Sense versions you have on your phone.

1. From the Home screen, tap **⋮** > **Settings** > **About**.
2. Tap **Software information**.

Installing a software update


When HTC One M9 is connected to the Internet and there's a new software update available, the update notification icon (🔄) appears in the status bar.

1. Slide the Notifications panel open, and then tap the system update notification.
2. If you don't want to download the update using your data connection, select **Update over Wi-Fi only**.
3. Tap **Download**.
4. When download is complete, select **Install now**, and then tap **OK**.

After updating, HTC One M9 will restart.



Installing an application update

When Internet connection is on and there's an available update for your HTC or Verizon Wireless apps, the update notification icon  appears in the status bar.

1. Slide the Notifications panel open, and then tap the update notification. The Updates screen opens with the list of application updates to be installed.
2. Tap an item to view its details, and then tap .
3. When you're done reviewing the updates, tap **Install**. You'll be asked to restart HTC One M9 if needed.

Installing app updates from Google Play

Some HTC apps and third-party apps get updated with improvements and bug fixes through Google Play. You can manually update apps or set your phone to automatically download and install app updates when available.

1. From the Home screen, tap , and then find and tap **Play Store**.
2. Tap  to open the slideout menu.
3. Tap **My apps**.
You'll see a list of apps installed on your phone.
4. Under Updates, tap an app.
5. Tap **Update**.
6. Tap **Accept**.



In Play Store, tap **☰** > **Settings** > **Auto-update apps** to choose how you want Google Play to update your apps.

Checking for updates manually



You need an internet connection to check for software updates. Turn on mobile data or connect to a Wi-Fi network.

Go to Settings, and then tap **System update** > **Check for new system update**. HTC One M9 checks if updates are available.

Getting apps from Google Play

Google Play is the place to go to find new apps for HTC One M9. Choose from a wide variety of free and paid apps ranging from productivity apps, entertainment, to games.



You need a Google Wallet™ account to buy paid apps or to make in-app purchases. If you already have a Google Account, just add Google Wallet by signing in with your existing username and password at wallet.google.com.

Finding and installing an app

When you install apps and use them on HTC One M9, they may require access to your personal information or access to certain functions or settings. Download and install only apps that you trust.



Be cautious when downloading apps that have access to functions or a significant amount of your data on HTC One M9. You're responsible for the results of using downloaded apps.

1. From the Home screen, tap **⋮**, and then find and tap **Play Store**.
2. Browse or search for an app.
3. When you find the app that you like, tap it and read its description and user reviews.
4. To download or purchase the app, tap **Install** (for free apps) or the price button (for paid apps).
5. Tap **Accept**.



Apps sometimes get updated with improvements or bug fixes. To automatically download updates, after installing the app, tap **⋮** > **Auto-update**.

To open the app, go to the Apps screen and tap the app.

Restoring apps from Google Play

Upgraded to a new phone, replaced a lost one, or performed a factory reset? Restore apps that you previously downloaded.

1. From the Home screen, tap **⋮**, and then find and tap **Play Store**.
2. Tap **≡** to open the slideout menu.
3. Tap **My apps**, swipe to the All tab, and then tap the app you want to restore.
4. Install the app.

For more details, refer to the Google Play help.

Downloading apps from the web

You can download apps directly from websites.



- Apps downloaded from websites can be from unknown sources. To help protect HTC One M9 and your personal data, we strongly recommend that you only download from websites you trust.
- Before you can install the downloaded app, make sure that you've set HTC One M9 to allow installation of third-party apps in **Settings > Security > Unknown sources**.

1. Open the browser, and then go to the website where you can download the app you want.
2. Follow the website's download instructions for the app.



After installing the app, make sure to go back to **Settings > Security** and clear the **Unknown sources** option.

Uninstalling an app

If you no longer need an app that you've downloaded and installed, you can uninstall it.



Most of the preloaded apps cannot be uninstalled.

From the Apps screen, press and hold the app you want to remove, and then drag it to **Uninstall**.



If you purchased an app in Play Store, you can uninstall it for a refund within a limited time. To know more about the refund policy for paid apps, refer to the Google Play help.

Your first week with your new phone


Basics

HTC Sense Home

After you've turned on and set up HTC One M9 for the first time, you'll see the Home screen.

- Set up the HTC Sense Home widget to experience the convenience of a Home screen that automatically adjusts when you're at home, work, or outdoors. See [What is the HTC Sense Home widget?](#) on page 67.
- Swipe right and you'll find HTC BlinkFeed. You can customize HTC BlinkFeed to show posts from your social networks, headlines from your favorite news media, and more. For details, see [What is HTC BlinkFeed?](#) on page 112.
- Swipe left and you'll discover space for adding your favorite widgets, apps, and more so they're just a tap away. You can also add panels. For details, see [Adding or removing a widget panel](#) on page 106.
- You can change the apps on the launch bar at the bottom of the Home screen. See [Launch bar](#) on page 103.



While you're in another screen or app, press  to return to the last Home screen you visited.

Onscreen navigation buttons

HTC One M9 has onscreen navigation buttons at the bottom of the screen which rotate when you change the orientation.

Standard navigation buttons

	Back
	Home
	Recent apps


Fourth navigation button options

	Hide navigation bar
	Turn off screen
	Auto rotate
	Notifications
	Quick settings

See [Adding a fourth navigation button](#) on page 51.



Adding a fourth navigation button

You can add a fourth navigation button to make it easier to turn the display off, toggle auto-rotate, and more.

1. From the Home screen, tap  > **Settings** > **Personalize**.
2. Tap **Change navigation buttons**.
3. Tap a fourth navigation button to add it. To have only three navigation buttons, make sure none of the fourth button options are selected.
4. Tap **Done** to save and apply your customization.

Rearranging the navigation buttons

Right-handed or left-handed? Customize the placement of the navigation buttons to fit what's most comfortable for you.

1. From the Home screen, tap  > **Settings** > **Personalize**.
2. Tap **Change navigation buttons**.
3. Rearrange the navigation buttons by dragging  next to the button names. The resulting order from top to bottom in the list will be the corresponding order from left to right on the navigation bar.
4. Tap **Done** to save and apply your customization.

Sleep mode

Sleep mode saves battery power by putting HTC One M9 into a low power state while the display is off. It also stops accidental button presses when HTC One M9 is in your bag.

Switching to Sleep mode

To turn off the display and switch to Sleep mode, you can:

- Briefly press the POWER button.
- Double-tap the lock screen.

HTC One M9 also automatically goes into Sleep mode when it's left idle for a while. You can change the time before HTC One M9 sleeps by setting the screen timeout. For details, see [Setting when to turn off the screen](#) on page 313.

Waking up from Sleep mode


- Press the POWER button.
- Use Motion Launch™ to wake up and unlock your phone directly to an app or screen. See [What is Motion Launch?](#) on page 71.

Unlocking the screen

Swipe up to unlock the screen.

If you've set up a screen lock, you'll be asked to provide your credentials before HTC One M9 unlocks.



If you've set an event reminder or an alarm, you can snooze or dismiss the event or alarm right from the lock screen. Just drag  or  up.

Motion gestures

Use motion gestures to mute HTC One M9, lower the ring volume, and more.

Lift phone to auto answer a call

To automatically answer an incoming call, lift the phone and look at the screen first to see who's calling before you hold it to your ear.

You can turn this feature on or off. Go to Settings, tap **Call**, and then select or clear **Auto answer calls**.

Flip to mute



If your phone is facing up when a call comes in, turn the phone over to mute it.

If you go to Settings and then tap **Sound & notification** > **Flip to mute**, you can set your phone to:

Mute once	Mute only once after flipping the phone. While the phone is still facing down, it will ring again when there are other incoming calls.
Mute always	After flipping the phone to mute a call, keep it always muted while it's still facing down when there are other incoming calls.

Pick up to lower volume



In a business meeting or restaurant, pick HTC One M9 up when a call comes in to lower the ring volume automatically.

You can turn this feature on or off. Go to **Settings**, tap **Sound & notification**, and then select or clear **Quiet ring on pickup**.


Increase ring volume automatically while phone is in your pocket or bag



Pocket mode makes HTC One M9 recognize when your phone is in your bag or pocket and raise the ring volume so that you can hear it in noisy environments.

You can turn this feature on or off. Go to **Settings**, tap **Sound & notification**, and then select or clear **Pocket mode**.

Rotate HTC One M9 for a better view

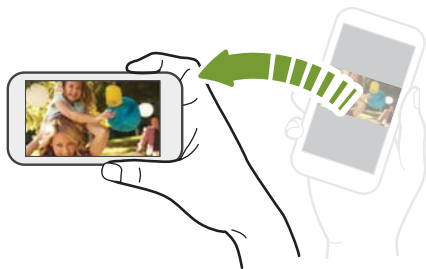

For many screens, you can automatically change the screen orientation from portrait to landscape by turning HTC One M9 sideways.

When entering text, you can turn HTC One M9 sideways to bring up a bigger keyboard.

Touch gestures

Use touch gestures to get around the Home screen, open apps, scroll through lists, and more.

Tap




- Tap the screen with your finger when you want to select onscreen items such as application and settings icons, or press onscreen buttons.
- After you've scrolled down a long list or screen (in apps such as Mail and People), tap the status bar to jump straight to the top of your screen.

Press and hold



To open the available options for an item (for example, a contact or link in a webpage), just press and hold the item.

Swipe or slide

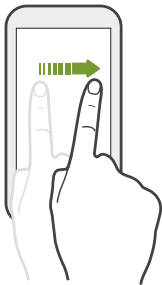


Quickly swipe your finger horizontally across the screen to go to other Home screen panels. Swipe vertically to scroll through a list, document, and more.

Drag




Press and hold your finger with some pressure before you start to drag. While dragging, don't release your finger until you have reached the target position.

Flick

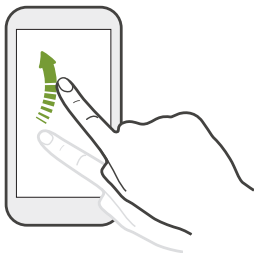

Flicking the screen is similar to swiping, except that you need to swipe your finger in light, quicker strokes, such as when moving right and left on the Home screen, or flicking through a contacts or message list.

Press and flick

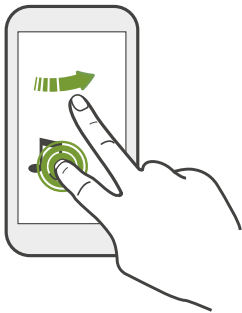


On the Home screen, you can easily move a widget or icon from one screen to another.


Press and hold the widget or icon with one finger, and flick the screen to the new location with another finger.

Slide with two fingers

In some apps, like Gallery, Messages, Mail, or the web browser, slide two fingers apart to zoom in when viewing a picture or text.

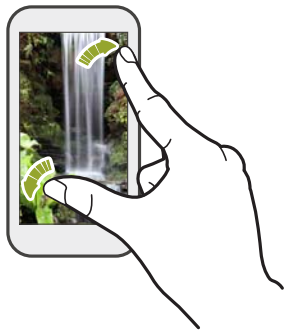

Slide two fingers together to zoom out of the picture or text.

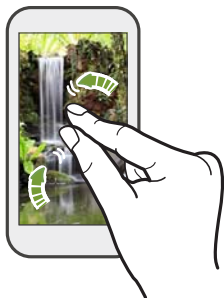


Two-finger swipe



Swipe down from the status bar using two fingers to access Quick Settings.

Three-finger swipe

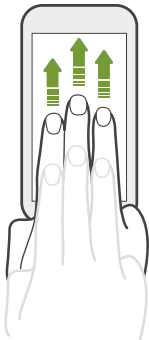

- Swipe up the screen with three fingers and HTC Connect™ streams music or video from HTC One M9 to your speakers or TV respectively. You can also share streaming media from apps such as YouTube®.
- Swipe down to disconnect from your speakers or TV.



Media gesture is turned on in Settings by default, which makes the three-finger gesture work for sharing media.

Three-finger tap





While using the Car app, tap the screen with three fingers to activate the voice command mode.



This feature may not be available in all languages.

Opening an app

- Tap an app on the launch bar at the bottom of the Home screen.
- Tap  to go to the Apps screen, and then tap the app you want to use.
- On the Apps screen, tap , and then enter the name of the app you're looking for.

Opening an app or folder from the lock screen

On the lock screen, drag an app or folder icon up to unlock the screen and directly go to the app or folder.






The shortcuts on the lock screen are the same ones on your Home screen's launch bar. To change the lock screen shortcuts, replace the apps or folders on the launch bar.

If you've set up another security layer like a screen lock pattern or PIN, you'll be asked to provide your credentials first before HTC One M9 opens the app or folder.

Sharing content

Have something to share, such as a photo or video?

- In an app, just tap the share icon:  or .
- If you don't see the icon, tap  > **Share**.

Switching between recently opened apps

When you're multitasking and using different apps on HTC One M9, you can easily switch between the apps you've recently opened.

Press  to see recently-opened apps.



- To switch back to an app, just tap it.
- To remove an app from the list in grid view, drag it up.
If you're using the card view, drag it left or right.
- Tap **⋮** > **Settings** > **Layout**, and then choose between card or grid view.

Refreshing content

In some apps, you can easily refresh content that's synced or downloaded from the Web with a simple finger gesture.

1. While viewing content such as weather or Mail inbox, scroll to the top of the screen.
2. Pull down with your finger, and then release to refresh.




Capturing your phone's screen

Want to show off your high game score or write a blog post about HTC One M9 features? It's easy to take a picture of the screen and share it from Gallery.

Press and hold POWER and VOLUME DOWN at the same time.

The image is saved in the Screenshots album in Gallery.



You can also share the image when you see  in the status bar. Open the Notifications panel and tap  under the screenshot notification. If you don't see , slide two fingers apart on the screenshot notification.

HTC Sense Home widget

What is the HTC Sense Home widget?

Get quick access to apps, shortcuts and folders you use most frequently based on where you are. With the HTC Sense Home widget, HTC One M9 continually adapts to how you use it. For example, apps you use most frequently for work, will show up when you're at your office. The HTC Sense Home widget changes depending on whether you're at home, work, or somewhere else.


Setting up the HTC Sense Home widget

Setting up the HTC Sense Home widget is quick and easy.




- If you don't see the HTC Sense Home widget, add it to your Home screen. See [Adding Home screen widgets](#) on page 104.
- Make sure you turn on location services in your phone settings. See [Turning location services on or off](#) on page 311.

1. On the setup screen of the HTC Sense Home widget, tap **Tap to personalize > Let's explore**.

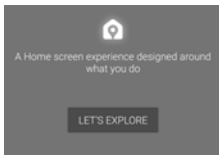

2. Tap where you are to finish setting up the widget.

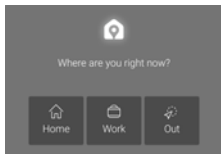

3. On the widget, tap $\vee > \text{⋮}$ > **Personalize HTC Sense Home**.
4. Select all the options on the screen, and then press \curvearrowright .

Setting your home and work locations


You can change the address for your home and work locations if you ever move to a new home or change your job.

1. On the Home screen, swipe right or left until you see the HTC Sense Home widget.
2. Tap $\vee > \text{⋮}$ > **Set locations**.
3. Tap the address area to search for the address you want to set.
4. When you've found the address on the map, tap **Done**.

Manually switching locations

The HTC Sense Home widget automatically changes locations based on where you are. You can also manually change the location in the HTC Sense Home widget.

For the HTC Sense Home widget to change locations automatically, you need to make sure that location services is turned on. See [Turning location services on or off](#) on page 311.

1. On your Home screen, slide right or left until you see the HTC Sense Home widget.
2. Tap , and then tap the location you want.




Pinning and unpinning apps

Pinning apps, shortcuts, or folders to the HTC Sense Home widget ensures they stay on the widget.

Items in the HTC Sense Home widget will have one of two states: pinned or unpinned. Unpinned items will be automatically changed to more frequently used items.


1. On the Home screen, swipe right or left until you see the HTC Sense Home widget.

2. Do one of the following:

- To pin an item, press and hold it until you see .
- To unpin an item, press and hold it until the unpinning progress bar has completed.

Adding apps to the HTC Sense Home widget



Add your favorite apps, shortcuts, or folders to the HTC Sense Home widget.

1. From the Home screen, tap .
2. Press and hold the app, shortcut, or folder you want to add to the widget.
3. Drag the item to where you want in the HTC Sense Home widget.

The app, shortcut or folder will be added to the HTC Sense Home widget and pinned in place.

Turning smart folders on and off

Smart folders are folders in the HTC Sense Home widget that dynamically change contents depending on the apps you download and use. If you don't want to see recently downloaded or recommended apps, you can turn off the smart folders.

1. On the Home screen, swipe right or left until you see the HTC Sense Home widget.
2. Tap , and then tap  > **Show/hide smart folders**.
3. Select the smart folders you want to show or hide.
4. Tap **OK**.

Motion Launch

What is Motion Launch?

Motion Launch is a combination of a motion gesture followed by a finger gesture. With Motion Launch, you don't have to reach for the POWER button to wake up HTC One M9. Using a combination of simple gestures, you can wake up to your Home screen, HTC BlinkFeed, and more.

See the following:


- [Waking up to the lock screen on page 72](#)
- [Waking up and unlocking on page 73](#)
- [Waking up to the Home widget panel on page 74](#)
- [Waking up to HTC BlinkFeed on page 75](#)
- [Auto launching the camera with Motion Launch Snap on page 76](#)
- [Making a call with Quick call on page 77](#)

Turning Motion Launch gestures on or off

Choose the Motion Launch gestures you want on or off in Settings.

1. With two fingers, swipe down from the top of the screen to open Quick Settings.



2. Tap  > Display & gestures or Display, gestures & buttons.
3. Tap **Motion Launch gestures**.
4. Select the Motion Launch gestures you want.


Waking up to the lock screen

Go from sleep mode to the lock screen without reaching for the POWER button.



If you've set up a screen lock with credentials, you'll be asked to provide your credentials first before HTC One M9 unlocks.

1. Lift the phone in portrait orientation.
2. Immediately double-tap the screen.

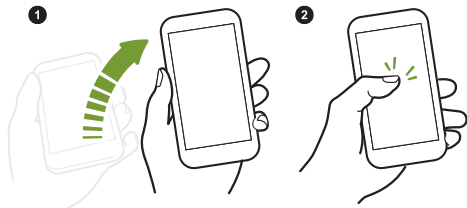


Make sure you're not touching the screen when the phone vibrates.

Waking up and unlocking

Go from sleep mode and unlock HTC One M9 to the last screen you were using without reaching for the POWER button.

F If you've set up a screen lock with credentials, you'll be asked to provide your credentials first before HTC One M9 unlocks.

1. Lift the phone in portrait orientation.
2. Immediately swipe up from the bottom half of the screen.

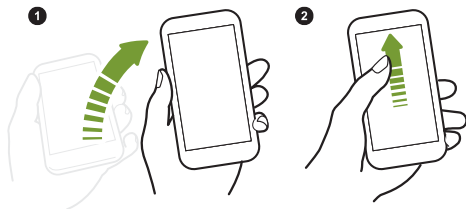


Make sure you're not touching the screen when the phone vibrates.

Waking up to the Home widget panel

Go from sleep mode to the Home widget panel without reaching for the POWER button.

F If you've set up a screen lock with credentials, you'll be asked to provide your credentials first before HTC One M9 unlocks.

1. Lift the phone in portrait orientation.
2. Immediately swipe left from the right side of the screen.

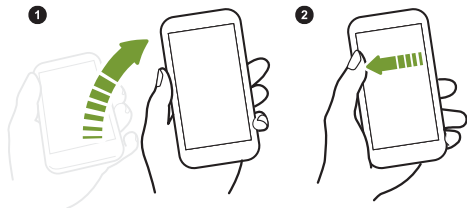


Make sure you're not touching the screen when the phone vibrates.

Waking up to HTC BlinkFeed

Go from sleep mode to HTC BlinkFeed without reaching for the POWER button.

🚩 If you've set up a screen lock with credentials, you'll be asked to provide your credentials first before HTC One M9 unlocks.

1. Lift the phone in portrait orientation.
2. Immediately swipe right from the left side of the screen.

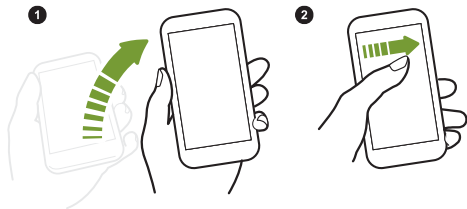


Make sure you're not touching the screen when the phone vibrates.

Auto launching the camera with Motion Launch Snap

When the screen is off, you can wake up the phone directly to the Camera app.

- Press and hold the VOLUME UP or VOLUME DOWN button, and then lift the phone in landscape orientation.
- Or first lift the phone in landscape orientation, and then press the VOLUME UP or VOLUME DOWN button right away.

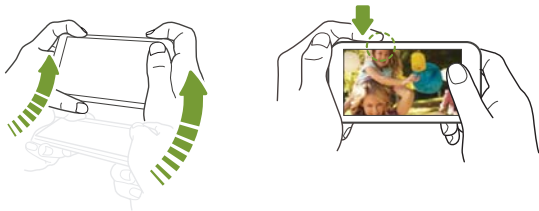

If you've set up a screen lock with credentials, you'll be asked to provide your credentials when you exit the Camera app.


Making a call with Quick call

When the screen is off and HTC One M9 is in sleep mode, easily make a call by just swiping and using voice commands.



- This feature may not be available in all languages.
- Make sure **Motion Launch gestures** and **Quick call** are turned on in **Settings > Display & gestures > Motion Launch gestures**.
- If you've set a screen lock with credentials, you'll be asked to provide your credentials first before you can make the call.

1. Lift the phone in portrait orientation.
2. Immediately swipe down from the top half of the screen.

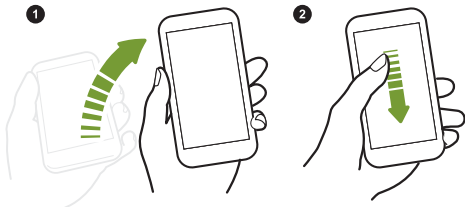

3. When you see the microphone icon on the screen, hold the phone close to your mouth, and then say "Call" and the contact name. For example, say "Call Jennifer".
4. You can then do one of the following:
 - If there are several contacts with the same first name, say the full name of the contact you want to call.
 - If a contact has several phone numbers, you'll see the following:
 1. [full name] Home
 2. [full name] Mobile
 3. [full name] Work

Just say the item number of the one you want to call. For example, say "2" to call the second one.

Or say the full name and type of phone number as shown on the screen. For example, say "Jennifer Singer Mobile".


- If you're asked to confirm, say "Yes" or "No".
- To cancel the call, say "Cancel".

Bypassing the screen lock for Quick call

If you've set a screen lock with credentials, you can set HTC One M9 to skip the security screen so you can immediately place calls with Quick call.

1. With two fingers, swipe down from the top of the screen to open Quick Settings.




2. Tap  > Display & gestures or Display, gestures & buttons.
3. Tap **Motion Launch gestures**.
4. Select the **Bypass Security** screen option.

Lock screen

Setting a screen lock

Help protect your personal information and help prevent others from using HTC One M9 without your permission.

Choose to set a screen lock pattern, numeric PIN, or other means of securing your phone. You'll be asked to unlock the screen every time HTC One M9 is turned on or when it's idle for a certain period of time.


1. From the Home screen, tap  > **Settings** > **Security**.
2. Tap **Screen lock**.
3. Select a screen lock option and set up the screen lock.
4. Tap **Lock phone after**, then specify the idle time before the screen is locked.



You can also clear **Make pattern visible** or **Make passwords visible** if you don't want your screen lock to display as you enter it onscreen.

Setting up Smart Lock

Set up your phone to detect your face or another trusted device before you can unlock the screen.

1. From the Home screen, tap  > **Settings** > **Security**.
2. Tap **Screen lock**, and then select and set up a screen lock.
This will be your backup screen lock method.
3. On the Security screen, tap **Smart Lock**.

4. Confirm your screen lock.
5. Choose what you want your phone to detect before it unlocks.
6. Follow the onscreen instructions.
7. Tap **Lock phone after**, and then specify the idle time before the screen is locked.

To help make Smart Lock more reliable and more secure, you can train HTC One M9 to recognize your face in different situations, such as when you're wearing glasses or sporting a beard.

Tap **Smart Lock**, confirm your screen lock, then tap **Trusted face > Improve face matching**. Follow the onscreen instructions.

Turning lock screen notifications on or off

You can choose to turn lock screen notifications on or off.

1. From the Home screen, tap **⋮** > **Settings** > **Sound & notification**.
2. Tap **When device is locked** > **Don't show notifications at all**.




If you change your mind later, you can tap **Show all notification content** to turn lock screen notifications on.

Interacting with lock screen notifications


Besides seeing notifications on the lock screen, you can also interact with them.

1. Tap twice on a notification to go directly to the related app.



2. To see the entire list of notifications on the lock screen, swipe down on the lock screen. You can tap on a blank area of the screen to return to the lock screen.
3. Swipe left or right on the notification to remove it.
4. Press and hold a notification to see more related information.
5. Tap  to prioritize or block notifications from the related app.

HTC BlinkFeed Notifications

From time to time, you'll see HTC BlinkFeed notifications, such as a suggestion for a nearby restaurant or a recommended article.

1. Double-tap the notification to see the full notification.
For restaurant recommendations, tap  or the notification text.
2. Tap the notification again to get more information about the restaurant recommendation or to read the article in HTC BlinkFeed.



If you don't want to see restaurant recommendations on your lock screen, go to HTC BlinkFeed, and then tap  >  > **Settings** > **Notification on lock screen**. Then clear the **Meal time bundle** option.

Changing lock screen shortcuts

To change apps (or other shortcuts) on the lock screen, change the ones on the launch bar. To find out how, see [Launch bar](#) on page 103.

Changing the lock screen wallpaper

Use the home wallpaper, or use any photo you've taken with the camera as the lock screen wallpaper.

1. From the Home screen, tap **⋮** > **Settings** > **Personalize**.
2. Under Lock screen, tap **Change wallpaper**.
3. In the pop-up menu, tap **Use home screen wallpaper** or tap **Use custom wallpaper** to select a photo from Gallery.

Turning the lock screen off

Rather not have to unlock your phone every time you wake it up? You can turn the lock screen off in Settings.

1. From the Home screen, tap **⋮** > **Settings** > **Security**.
2. Tap **Screen lock** > **No lock screen**.

To turn the lock screen on again, in Security settings, tap **Screen lock** > **Lock screen**.

Notifications


Notifications panel


Notification icons inform you of new messages, calendar events, alarms, and activities in progress such as files downloading.



When you see notification icons, open the Notifications panel to check out details of the notifications that you've received.

To open the Notifications panel, slide down from the top of the screen.

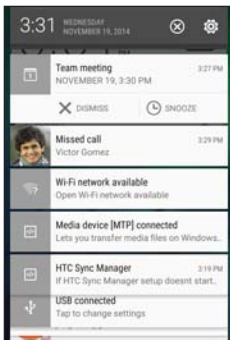

- Some notifications allow you to take immediate action. For example, tap a missed call notification to return the call or reply with a text message.
- Tap the notification icon on the left to open the corresponding app.
- To dismiss just one notification in the list, drag it left or right. To dismiss all notifications and close the Notifications panel, tap .

If you have several notifications, scroll through the list screen to see them all.



You can change what app notifications you want to receive. See [Managing app notifications](#) on page 86.

Managing app notifications


You can set the priority of app notifications or completely block notifications for apps you don't want to be notified about.

1. From the Home screen, tap **⋮** > **Settings** > **Sound & notification**.
2. Tap **App notifications**, and then tap the app you want manage.
You can also press and hold a notification, and then tap ⓘ.
3. Tap the **On/Off** switch next to Block or Priority depending on what you want to do.

Settings for app notifications are applied to notifications in the Notifications panel and the lock screen.

Notification LED

The notification LED shows a:

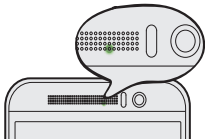

- Solid green light when HTC One M9 is connected to the power adapter or a computer and the battery is fully charged.
- Flashing green light when you have a pending notification.
- Solid orange light when the battery is being charged.
- Flashing orange light when the battery level reaches very low.

Choosing when to flash the notification LED

You can change when to flash and which apps will flash the LED when there are new notifications.

1. From the Home screen, tap **⋮** > **Settings** > **Sound & notification**.
2. Under Notification, tap **Flash notifications**. Choose whether to always flash the LED or flash it only when the screen is off.
3. Tap **App light notifications**. Choose which app notifications you want the LED to flash for.



In other apps, check their settings to find out if they have an option for flashing the LED.


Working with text



Selecting, copying, and pasting text

In HTC apps such as Mail and Messages, you can select and copy text, and then paste or share it.


1. Press and hold on a word.

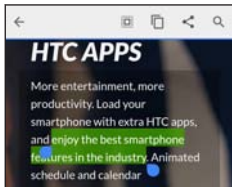2. Drag the start and end anchors to highlight the surrounding text you want to select.



3. After you have selected the text you want to copy, tap . The selected text is then copied to the clipboard.
4. In a text entry field (for example while composing an email), press and hold at the point where you want to paste the text.
5. Tap  or **Paste**.

Sharing text

1. After you have selected the text you want to share, tap .
2. Choose where to paste and share the selected text, such as in an email message or social network status update.

The HTC Sense keyboard

Typing is fast and accurate with the HTC Sense keyboard.



- Word prediction also saves typing time. As you type, you'll see word suggestions that you can choose from. You can even add words to the word prediction dictionary. See [Entering text with word prediction](#) on page 91.

- You can type words by just speaking. See [Entering text by speaking](#) on page 93.
- Turn on the Trace keyboard so you can type words by just sliding your finger from one letter to another. See [Using the Trace keyboard](#) on page 93.
- Just swipe right to access the numeric and symbol keyboard. Or swipe left to switch between languages.
- The keys have secondary numbers, punctuation symbols, or other characters that you can insert without having to switch to the numeric and symbol keyboard.
For example, just press and hold a key on the first row to insert a number.
- Choose from a wide selection of emoji.
- Show or hide navigational arrow keys on the keyboard. If you enable the arrow keys in Settings, they'll only appear on the portrait keyboard.


Entering text

The onscreen keyboard becomes available when you tap a text field in an app.

Tap the keys on the onscreen keyboard to enter letters and numbers, as well as punctuation marks and symbols.

- Tap  to enter an uppercase letter. Tap twice to turn on caps lock.
- Press and hold keys with gray characters at the top to enter numbers, symbols, or accented letters. Some keys have multiple characters or accents associated with them.
- Swipe right to show number and symbol keys. To return to the main keyboard, swipe left.
- Press  to close the onscreen keyboard.



To open the keyboard settings, press and hold the comma key if you see  above the key. Or go to **Settings > Language & keyboard > HTC Sense Input**.

Selecting a keyboard layout

Choose a keyboard layout that suits your typing style.

1. Go to Settings, and then tap **Language & keyboard > HTC Sense Input**.
2. Tap **Keyboard selection > Keyboard types**.
3. Select the keyboard layout that you want to use.

Choosing and switching between keyboard languages

If multiple keyboard languages are available on HTC One M9, you can choose which languages to enable in the onscreen keyboard.

1. Go to Settings, and then tap **Language & keyboard > HTC Sense Input**.
2. Tap **Keyboard selection**, and then choose the languages you want.

To change the keyboard language, do any of the following:

- Swipe left on the onscreen keyboard (not available if you're using trace keyboard).
- Tap the language key, for example, **EN**, until you see the keyboard language you want to use.
- Press and hold the language key, and then drag your finger to the keyboard language you want to use.

Entering text with word prediction

Ever started typing something you weren't sure how to spell? With word prediction, you'll see suggested words displayed just above the keyboard.



Word prediction and next word prediction are enabled by default.

To enter text in word prediction mode, do any of the following:

- Tap the space bar to insert a highlighted word in the suggestion list.
- Tap a word from the suggestion list.
- Tap the arrow next to the suggestion list to see more choices.



In some keyboard languages such as English and Spanish, if you've accidentally chosen a wrong word from the suggestion list, you can go back and change it by tapping the word and selecting another suggestion.

Setting a second language for word prediction

You can set the word prediction to be bilingual. As you type, you'll get word suggestions in the languages that you've selected.



This feature is available only for Latin-based languages.

1. Go to Settings, and then tap **Language & keyboard** > **HTC Sense Input**.

2. Tap **Keyboard selection** > **Bilingual prediction**, and then choose the language you want.

Adding words to the dictionary

For certain keyboard languages such as English and Spanish, you can add frequently-used names and acronyms to the word prediction dictionary to easily find them in the suggestion list.



This feature is available only for Latin-based languages.

1. Go to Settings, and then tap **Language & keyboard** > **HTC Sense Input**.
2. Tap **Personal dictionary** > **+**.
3. Enter a word.
4. Tap **OK**.



While you're entering text using the Standard keyboard layout, tapping a suggested word that's not in the dictionary (usually the first word shown in the suggestion list) automatically stores it.

Editing or deleting words in the dictionary

1. Go to Settings, and then tap **Language & keyboard** > **HTC Sense Input**.
2. Tap **Personal dictionary**.
 - To edit a word, tap the item in the list.
 - To delete items from the dictionary, tap **⋮** > **Delete**. Select the words you want to remove, and then tap **Delete**.

Using the Trace keyboard

Instead of tapping the keys on the onscreen keyboard, you can “trace” to type words.



This feature is available only for Latin-based languages.

1. Turn on the Trace keyboard in **Settings > Language & keyboard > HTC Sense Input**.
2. On the onscreen keyboard, slide your finger from one letter to the next to enter a word.
3. Lift your finger when the word is completed.
4. If you want to continue entering text, slide your finger over the letters again to enter the next word.




If the word that appears after you traced isn't the one you want, you can:

- Tap a word from the suggestion list.
- Tap the arrow next to the suggestion list to see more choices.

Entering text by speaking

No time to type? Try speaking the words to enter them.

1. Tap an area where you want to enter text.
2. On the onscreen keyboard, press and hold .

3. When you see the animated microphone button and the words “Speak now”, say the words you want to enter.



To set the voice input language, tap the language bar above the microphone button. You can choose one or more languages. Available languages may vary.

4. If a word doesn't match what you've spoken and it's underlined, tap the underlined word to delete it or to see more choices.
5. Enter punctuation marks by saying the name (for example, say “comma”).

HTC Help

Having hardware or connection problems?

Before calling for support, you can first use the Help app to troubleshoot or perform diagnostics on your phone. This helps you in finding the problem cause, and in determining whether you can resolve the problem or you need to call for support.

1. From the Home screen, tap , and then find and tap **Help**.
2. Tap **Tips & Help** and then tap .



If HTC Help is not preinstalled on your phone, you can download it from Google Play.

Personalizing

Themes


What is the Themes app?

Themes brings a quick and easy way for you to customize HTC One M9 with wallpapers, sounds, icons, and more.

Log in with your HTC account to browse from the available themes in the Themes store, or make your own.

Downloading themes



Find and download pre-made themes that make it easy for you to personalize your HTC One M9.

1. From the Home screen, tap , and then find and tap **Themes**.
2. Tap **Get Started**.
3. Sign in with your preferred account.
4. On the Recommended screen, swipe left or right under each category to browse recommended items.
5. To see all available items for a category, swipe left and tap **See all**.
6. Tap an item to see the details screen.
7. Tap **Download**.

To apply the theme after it has finished downloading, tap **Apply**. If your theme has custom sounds, all of your ringtones and alert tones will also change.

Bookmarking themes

While browsing themes, you can bookmark them so that you can easily find them later.



1. From the Home screen, tap , and then find and tap **Themes**.
2. Browse the categories to find something you like.
3. Tap the item and then tap . You'll find the bookmark in My themes. See [Finding your themes](#) on page 99.



You can remove the bookmark by tapping  again.

Creating your own theme from scratch



You can create and customize your own theme and even share it for others to download.

1. From the Home screen, tap , and then find and tap **Themes**.
2. Tap  > **Choose Home image** to set the main wallpaper for your theme.
3. Select an image from Gallery or take a photo with Camera.
4. Tap **Next**.
5. Swipe up or down to the pre-defined style to select for your theme.
If you don't want to customize your theme further, tap **Next** to save your theme.

6. Tap **Edit**, then tap any of the categories you want to customize, and experiment with the settings until you're satisfied.
7. When you're ready, tap **Preview** to see what your theme will look like.
8. Tap **Finish**, then name your theme and tap **OK** to save your theme. To apply the theme right away, make sure you select the **Apply this theme now** option.

Editing a theme

After creating a theme, you can still edit it.



1. From the Home screen, tap , and then find and tap **Themes**.
2. Tap  > **My themes** > **My current theme**.
3. Make the changes you want to the theme.
4. Tap **Save** to update the current theme.

Mixing and matching themes

After selecting a theme, you can mix and match parts from other themes such as sounds, icons, wallpapers, and more.



To mix and match themes, you need to first download theme components from the catalog.

1. From the Home screen, tap , and then find and tap **Themes**.
2. Tap  > **My themes** > **My current theme**.



3. Tap **Color** and select a color scheme.
4. Tap any of the other categories you want to change.
5. Tap an item in the category. If the category is empty, tap ▼ and choose one of the collections to select from.
6. Tap **Apply** to apply the change to your current theme.
7. Tap ◀ until you see the mix and match screen. Continue making changes until you're satisfied with the result.



8. Tap **Save copy** to save your new theme, or if you're editing a theme that you copied tap **Save** to save the changes.



Finding your themes

Themes you created or downloaded can be found in your theme collection. You'll also find the themes you bookmarked.

1. From the Home screen, tap , and then find and tap **Themes**.
2. Tap  > **My themes**.




Sharing themes

Share themes, wallpapers, icons, and more with friends and family.

1. From the Home screen, tap , and then find and tap **Themes**.
2. Browse to the theme you want to share and tap it to view the details.
3. While viewing the details page of any item in the catalog, tap  to share.

Deleting a theme

You can delete a theme if you no longer want to keep it on your phone.

1. From the Home screen, tap , and then find and tap **Themes**.
2. Tap  > **My themes** > **My collection**.
3. Tap  > **Remove**.
4. Tap the themes you want to remove from your collection.
5. Tap **Delete**.

If the theme you deleted is currently applied, it will still be applied to HTC One M9 until another theme is applied.

More ways to personalize

Personalization settings

Aside from using Themes, you can also make HTC One M9 look and sound the way you want in Settings.

- Choose a ringtone and other sounds that you like to use. See [Ringtones, notification sounds, and alarms](#) on page 101.
- Personalize your Home screen with a different wallpaper. See [Home wallpaper](#) on page 101.
- For the lock screen, you can use the same wallpaper as your Home screen or choose a different wallpaper. See [Changing the lock screen wallpaper](#) on page 83.
- Change the fonts. See [Changing the display font](#) on page 102.
- Change the apps on the launch bar. See [Launch bar](#) on page 103.
- Populate your Home screen with widgets and shortcuts. See [Adding Home screen widgets](#) on page 104 and [Adding Home screen shortcuts](#) on page 105.
- Need another widget panel? See [Adding or removing a widget panel](#) on page 106.
- Set HTC BlinkFeed or a widget panel as your main Home screen. See [Changing your main Home screen](#) on page 108.
- Organize your apps. See [Arranging apps](#) on page 109.

Ringtones, notification sounds, and alarms

1. From the Home screen, tap **⋮** > **Settings** > **Personalize**.
2. Under Sound, choose different sounds for your ringtone, system notification, and alarm.

Go to the Messages, Mail, and Calendar apps to choose sounds for new messages, email, and event reminders respectively.



Want alarms to ring louder but notifications to be more discreet? In Settings, tap **Sound & notification** > **Volumes** and set the volume levels for each sound type.

Home wallpaper

Choose from the available wallpapers, or use any photo you've taken with the camera.

1. Press and hold an empty space on a widget panel.
2. In the pop-up menu, tap **Home screen wallpaper**.
3. Choose from where you want to select a wallpaper.

To use a photo you captured with the camera, tap **Gallery**, choose and crop a photo, and then tap **Done**.

Changing the display font

You can change the font style and size of the display font or you can download new fonts online.

1. From the Home screen, tap **⋮** > **Settings** > **Personalize**.
2. Under Font, tap **Font style** and choose one of the built-in fonts or tap **+** to go online and download new fonts.
3. Tap **Font size** to choose the size of the font.


Downloading fonts


You must be logged on to your HTC Account to download fonts.


1. From the Home screen, tap **⋮** > **Settings** > **Personalize**.
2. Under Font, tap **Font style** and then tap **+**.
3. Tap **▼** to select a category.
4. Select a font style, and then tap **Download**.
5. Tap **Apply**.

Launch bar

The launch bar gives you one-touch access to commonly used apps (and other shortcuts). You can replace the apps on the launch bar with the ones you often use.

1. Press and hold the app you want to replace, and then drag it out to .

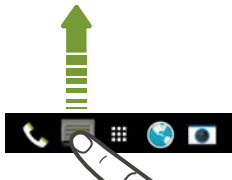

2. Tap  to go to the Apps screen.
3. Press and hold an app, and then drag it to the empty slot on the launch bar.



- You can also group apps on the launch bar into a folder. See [Grouping apps on the widget panel and launch bar](#) on page 109.
- The apps (or other shortcuts) on the lock screen are the same as the ones on the launch bar.

Adding Home screen widgets

Widgets make at-a-glance important information and media content easily available. Choose from a selection of widgets and add the most useful ones to your Home screen.

1. Press and hold an empty space on a widget panel.
2. In the pop-menu, tap **Add apps and widgets**.
3. Tap ▼ > **Widgets**.
4. Scroll through the widgets, or tap 🔍 to search for a specific widget.
Some widgets are available in different styles and sizes.
5. Press and hold and then drag the widget to a widget panel you want to add it to.

You can also add widgets that allow you to quickly switch on or off certain settings such as Wi-Fi and Bluetooth.

Changing the settings of a widget

You can modify basic settings of some widgets (for example, the People widget).

1. Press and hold a widget on your Home screen, and then drag it to ⚙️.



2. Customize the widget settings.

Resizing a widget

Some widgets can be resized after you've added them to your Home screen.

1. Press and hold a widget on the Home screen, and then release your finger. If a border appears, that means the widget is resizable.
2. Drag the sides of the border to enlarge or shrink the widget size.

Adding Home screen shortcuts

Place apps you often use on any widget panel of your Home screen. You can also add shortcuts to frequently used settings, bookmarked webpages, and more.

1. Press and hold an empty space on a widget panel.
2. In the pop-up menu, tap **Add apps and widgets**.
3. Tap ▼ > **Apps** or **Shortcuts**.
4. Scroll through the apps or shortcuts, or tap **Q** to search for one.
5. Press and hold and then drag an app or a shortcut to a widget panel you want to add it to.



To add an app from the Apps screen, press and hold the app, and then drag it to a widget panel.

Editing Home screen panels

Adding or removing a widget panel



- You won't be able to add a new widget panel if you've already reached the maximum limit.
- HTC BlinkFeed always appears as the first panel (if it's not removed). A widget panel cannot be added before HTC BlinkFeed.

1. Press and hold an empty space on a widget panel.
2. In the pop-up menu, tap **Manage home screen pages**.
3. To add a new widget panel, swipe left until you see the **+** icon, and then tap it.
4. To remove a widget panel, swipe left or right until you see the panel, and then tap **Remove**.
5. When done, press **↶**.

Arranging widget panels



A widget panel cannot be moved and inserted before HTC BlinkFeed.


1. On HTC BlinkFeed or any widget panel, slide two fingers together to customize the Home screen.

2. Press and hold a widget panel thumbnail, and then drag it left or right to the position that you want.
3. When you're done arranging widget panels, press \curvearrowright .

Moving a widget or icon


You can easily move a widget or icon from one widget panel to another.

1. Press and hold the widget or icon with one finger.
2. With another finger, flick left or right to rotate the screen to another widget panel.

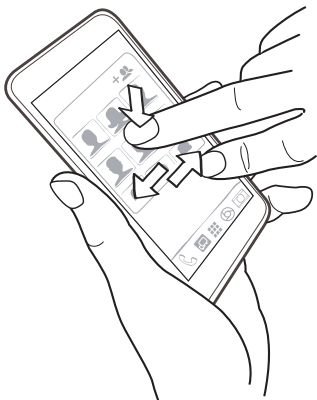


3. Release the widget or icon.

Removing a widget or icon



1. Press and hold the widget or icon you want to remove, and then drag it to .
2. When the widget or icon turns red, lift your finger.

Changing your main Home screen

Set HTC BlinkFeed or a widget panel as your main Home screen.


1. Press and hold an empty space on a widget panel.
2. In the pop-up menu, tap **Manage home screen pages**.
3. Swipe left or right until you see the panel that you want to use as your main Home screen.
4. Tap **Set as home**.
5. Press .



Pressing  from an app will first return you to the last panel you were in. Just press  again to go to your main Home screen.

Grouping apps on the widget panel and launch bar

1. Press and hold an app, and then drag it over to another app to automatically create a folder.

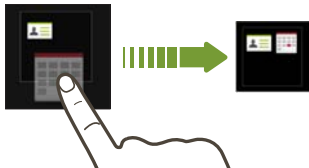

2. Tap the folder to open it.
3. Tap the folder window's title bar, and then enter a new folder name.
4. Add more apps into the folder. Tap **+**, select your apps, and then tap **Done**.

You can also add shortcuts to settings or information to a folder. Add a shortcut first to a widget panel, and then drag it over to the folder.



Removing items from a folder

1. On the launch bar or widget panel, tap a folder to open it.
2. Press and hold an app or shortcut in the folder, and then drag it out to **■**.






Arranging apps

On the Apps screen, you can rearrange the apps and change the layout.




1. From HTC BlinkFeed or any widget panel, tap **⋮**.

2. Tap , and then choose how to arrange apps, such as alphabetically. If you want to group apps into folders or rearrange them, select **Custom**.
3. Tap  > **Grid size** to choose whether to display more or fewer apps per page.

Moving apps and folders

1. On the Apps screen, tap  > **Custom**.
2. Tap  > **Rearrange apps**.
3. Press and hold an app or folder, and then do one of the following:
 - Drag the app or folder to another position on the same page. Wait until you see the occupying icon move away before releasing your finger.
 - Drag the app or folder to the  or  arrow to move it to another page.
4. When you're done moving apps and folders, tap .

Grouping apps into a folder

1. On the Apps screen, tap  > **Custom**.
2. Tap  > **Rearrange apps**.
3. Press and hold an app, and then drag it over to another app to automatically create a folder.
4. To add more apps, drag each app over to the folder.
5. To name the folder, open the folder, tap its title bar, and then enter a folder name.
6. When done, tap .

Removing apps from a folder

1. On the Apps screen, tap ▼ > **Custom**.
2. Tap ≡ > **Rearrange apps**.
3. Tap the folder to open it.
4. Press and hold an app, and then drag it out to the Apps screen. Wait until you see the occupying icon move away before releasing your finger.
5. When you're done removing apps, tap ✓.


Hiding or unhiding apps

1. On the Apps screen, tap ≡ > **Hide/Unhide apps**.
2. Select the apps you want to hide, or clear their check boxes to unhide them.
3. Tap **Done**.

HTC BlinkFeed

What is HTC BlinkFeed?

Get the latest about your interests or stay in touch with friends right on HTC BlinkFeed. Set up which social networks, news sources, and more will appear.

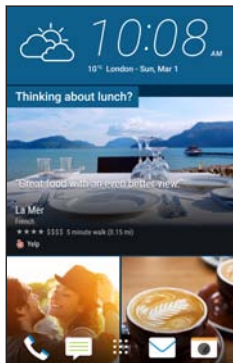

- Swipe up or down to browse stories on HTC BlinkFeed.
- Tap tiles that have recommendations for points of interests and restaurants to get directions, read reviews, and more.
- Tap a tile to view the content or to comment on a post or status update.
- While viewing a news article, swipe left or right to see more stories.
- While in HTC BlinkFeed, you can press Δ or \curvearrowright or tap the status bar to scroll to the top.
- Scroll to the top and pull down on the screen to manually refresh the stream.
- Swipe right on HTC BlinkFeed to open the slideout menu where you can choose the type of feeds or add your custom topics to display.



You'll see the clock widget on HTC BlinkFeed if you've set HTC BlinkFeed as the main Home screen.

Turning HTC BlinkFeed on or off

1. On the Home screen, slide two fingers together.



2. Tap .

3. Do one of the following:

- To turn on HTC BlinkFeed, swipe right until you see **+** **BlinkFeed**, then tap it.



- To turn off HTC BlinkFeed, swipe to the thumbnail and then tap **Remove**.

Restaurant recommendations

Can't think of what to eat? Get recommendations for restaurants nearby in HTC BlinkFeed.



Make sure you've given HTC Sense Home permission to access your location. See [Setting up the HTC Sense Home widget](#) on page 67.

1. Swipe right until you see HTC BlinkFeed.
2. Tap to open the slideout menu.
3. Tap > **Settings**.
4. Tap **Notification on lockscreen** and make sure **Meal time bundle** is selected.

To get restaurant recommendations, you'll need to actively use HTC BlinkFeed daily. Restaurant recommendations will show up as a tile in HTC BlinkFeed and also on your lock screen.

Viewing restaurant recommendations

View photos of the restaurant, get directions to the restaurant, and more.

1. When you see a restaurant recommendation tile, tap it to view more information.
2. You can do the following:
 - Tap the photo tile or **View Photos** to browse photos of the restaurant.
 - Tap the map icon or address to see the location in Google Maps™. From there, you can get directions.


- If you see a phone number, tap the phone number to call the restaurant.
- If you see numbers at the bottom, tap on a number to see alternative restaurant recommendations.

Ways of adding content on HTC BlinkFeed


Personalize HTC BlinkFeed to show articles and status updates from your favorite news sources, categories, editions, and apps.

Selecting feeds

Discover stories and articles on HTC BlinkFeed based on your interests, favorite categories, and popular news channels or websites.

1. On HTC BlinkFeed, swipe right to open the slideout menu.
2. Tap  > **Add content**.
3. Choose a category.
4. Select one or more feed sources.

You can tap a name first to check out a particular feed, and then tap  to add it to HTC BlinkFeed.

While browsing the Highlights feed, you may get recommendations for new stories or sources that may be of interest to you. Tap  in a tile that says **New** to subscribe to its website or channel's feed.

Showing content from your apps and social networks

See your friends' posts in social networks or show content from your HTC apps right on HTC BlinkFeed.



You need to sign in to your social networks to see their feeds on HTC BlinkFeed.

1. On HTC BlinkFeed, swipe right to open the slideout menu.
2. Tap **> Services & Apps**, and then select the apps and social networks you like.

Searching and adding a topic of interest



Looking for a more specific topic? Search for and select topics of interest to display them on HTC BlinkFeed.

1. On HTC BlinkFeed, swipe right to open the slideout menu.
2. Tap **Search for content**, and then enter the topic you're looking for.
3. Tap a result, and then tap **+** to add it under Custom topics.

Subscribing to multiple regional editions

Want to keep up to date on current events in more than one region? You can show one or more editions of your choice on HTC BlinkFeed.

1. On HTC BlinkFeed, swipe right to open the slideout menu.


2. Tap  > **Add content**.
3. Tap  , and then select a locale or region.
4. Select the feed sources to add.

Customizing the Highlights feed

Go to the Highlights feed to see a mix of top trending articles and status updates from the feed sources you added. You can also set the Highlights feed to only show items from your favorite news sources, categories, and apps.



You cannot add custom topics and RSS to the Highlights feed.

1. On HTC BlinkFeed, swipe right to open the slideout menu.
2. Tap  > **Settings** > **Choose Highlights topics**.
3. Select the feed sources you want to appear in Highlights.

Saving articles for later

Don't have time to read that potentially interesting article? You can bookmark articles to your reading list.

Do one of the following:

- While viewing an article, tap  .
- On HTC BlinkFeed, press and hold the tile of the article you want to bookmark. Then tap **Read later**.

To access your reading list on HTC BlinkFeed, swipe right, and then tap **News reading list** in the slideout menu.

Posting to your social networks

You can easily post a status update from HTC BlinkFeed.

1. On HTC BlinkFeed, swipe right to open the slideout menu.
2. Tap **⋮** > **Compose**, and then choose a social network.
3. Compose your status update and post it on your social network.

Removing content from HTC BlinkFeed

Whether it's a tile or an entire feed, you can remove content you don't want to see on HTC BlinkFeed.


- To remove a tile, press and hold the tile you want to remove, and then tap **Remove**.
- To remove a feed source, in the slideout menu, tap **⋮** > **Remove content**, select one or more items, and then tap **Remove**.
To unsubscribe to a localized edition, tap **⋮** on the Remove content screen. Tap **Remove editions**, select one or more items, and then tap **Remove**.

Camera

Camera basics

Camera screen

Take great photos and videos with the camera.





1. On the Home screen, tap the camera icon to open the Camera app.
2. Tap  to see all controls on the Viewfinder screen.



Choose a scene to use for taking photos.




Choose a scene to use for recording videos.

	Choose an ISO level or set it back to Auto . Higher ISO works best in low light conditions.
	Choose an exposure setting. Higher exposure settings capture more light for your photos or videos.
	Choose a white balance setting that matches your current lighting environment.
	Choose from more basic and advanced camera settings.

Choosing a capture mode

Switch to a capture mode to use for taking photos or videos.

On the Viewfinder screen, tap , and then tap a capture mode.

You can also just swipe across the Viewfinder screen to switch between capture modes:

- In landscape view, swipe from the top or bottom edge of the screen.
- In portrait view, swipe from the left or right edge of the screen.

Zooming


- Before taking a photo or video, slide two fingers apart to zoom in or together to zoom out.
- When you're recording video, you can freely zoom in or out while recording.

Turning the camera flash on or off

Tap the flash icon to choose a flash mode.

When using **Flash on** or **Auto flash** mode, the camera intelligently sets the best flash brightness for your photo.

Taking a photo

1. On the Home screen, tap the camera icon to open the Camera app.
2. Switch to **Camera** mode, if you're not in this mode. See [Choosing a capture mode](#) on page 120 for details.
3. Point the camera at what you want to capture. The camera adjusts the focus automatically as you move it.
4. When you're ready to take the photo, tap .

Tips for capturing better photos

To get better captures with the Camera app, here are some tips on what to do while taking your shots.

Improving focus and sharpness

- HTC One M9 has autofocus, which works best on a subject that is not moving too much. To change the focus, on the Viewfinder, tap the subject you want to focus on.
- If the subject is moving, on the Viewfinder, press and hold the subject to lock the focus.

- You can set the sharpness before taking a photo in the Camera settings, or manually adjust the sharpness of a photo in Photo Editor.

Generally, it is better to sharpen a blurry image rather than to reduce the sharpness in an image.





Taking well-lit photos

- HTC One M9 automatically adjusts the focus and exposure. If the image appears underexposed or that it appears dark on the Viewfinder, tap a part of the image that is in shadow. Conversely, tap a well-lit object in the image if the image seems to be overexposed. Focus on an object with a neutral tone for a balanced exposure. Keep in mind that tapping on another object may shift the focus from your subject.
- If you are using the default settings and the photo still appears too dark, switch to Night scene, but place HTC One M9 on a level surface to keep it steady.
- If there are parts of the image that are in shadows and others are in highlights, use HDR to capture multiple shots of different exposures and combine them into one shot. Keep HTC One M9 steady or place it on a level surface when using HDR.
- When taking a panoramic photo, consider the whole scene and focus on an object that has a neutral tone to help keep the exposure balanced in the composite image.
- If your subject is lit from the back, use Backlight scene to highlight the foreground and keep some details of the background.



Other tips

- In Camera settings, tap **Grid** to help frame the subject better or improve the composition.
- If taking photos under fluorescent or incandescent bulbs and the subject appears to be off-color, tap **AWB**, and then choose a white balance setting. Check the image on the Viewfinder and select the option that displays the closest color to the natural color of the subject.
- In Camera settings, you can tap **Image adjustments** and adjust the contrast, saturation, and sharpness before taking the photo.
- After capturing the photo, you can fine-tune the contrast, brightness, and other settings in Photo Editor.

Recording video






1. On the Home screen, tap the camera icon to open the Camera app.
2. Switch to **Camera** mode, if you're not in this mode. See [Choosing a capture mode](#) on page 120 for details.
3. When you're ready to start recording, tap .
4. Change focus to a different subject or area by just tapping it on the Viewfinder screen.
5. Tap the flash icon to turn the flash on or off.
6. Tap  to pause the recording, and then tap  to resume.
7. To stop recording, tap .

Setting the video resolution

1. Switch to **Camera** mode.
2. On the Viewfinder screen, tap  to show the camera options.
3. Tap .
4. Tap **Video Quality**, and then choose a video resolution.

Taking a photo while recording a video—VideoPic



Use the **Normal** video scene when you want to take a photo while recording video.

1. On the Home screen, tap the camera icon to open the Camera app.
2. On the Viewfinder screen, tap  to show the camera options.
Make sure you see the  icon which means the **Normal** video scene is selected.
3. Tap  to start recording.
4. While recording, tap  whenever you want to capture a still shot.
5. Tap  to stop recording.



Using the volume buttons for taking photos and videos



In the Camera app, you can set the VOLUME buttons to function as the shutter release or zoom controls.


1. On the Home screen, tap the camera icon to open the Camera app.

2. On the Viewfinder screen, tap .
3. Tap  > **Volume button options**.
4. Choose how you want to use the volume buttons when you're in the Camera app.

Closing the Camera app



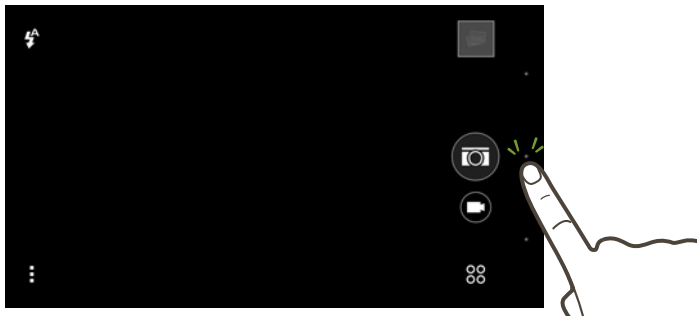

To give you a full view of the Viewfinder screen, HTC One M9 replaces , , and  with small dots.

Tap a dot to show these buttons again, and then tap  or  to close the Camera app and return to the Home screen or the previous screen.



Taking continuous camera shots

Do you want to take photos of moving subjects? Whether it's your kid's football game or a car race, you can capture the action. Use the **Auto** scene when you want to take continuous camera shots.


1. On the Home screen, tap the camera icon to open the Camera app.
2. Switch to **Camera** mode, if you're not in this mode. See [Choosing a capture mode](#) on page 120 for details.
3. On the Viewfinder screen, tap  to show the camera options. Make sure you see the  icon which means the **Auto** scene is selected.
4. Press and hold the onscreen shutter button . The camera takes up to 20 consecutive shots of your subject.
5. Choose what you want to do with the continuous shots:
 - To keep just one photo, select the photo that you like the most, and then tap **Best shot**.
 - Tap **Delete**, select the unwanted shots, and then tap **Delete** to save only the remaining shots.
 - To save the whole batch of shots, just press .


Changing the focus in Bokeh mode

Use Bokeh mode to focus on any object that you see on the Viewfinder screen and blur its background.



You need to be within a distance of 10 to 60 cm (4 in. to 2 ft) from the object you want to focus on.

1. On the Home screen, tap the camera icon to open the Camera app.
2. Tap  > **Bokeh**.
If you don't see this mode, tap **Add** > **Bokeh** to add it first to the capture modes.

3. On the Viewfinder screen, tap the object you want to focus on.
4. When you're ready to take the photo, tap .

Tap the small image thumbnail to open the photo you've just taken in Gallery and see the bokeh effect.




Selfies and people shots

Tips for taking selfies and people shots

Do you want yourself, your family, and friends to look best in your shots? Here are some camera options you can adjust or select before taking selfies and people shots.

Portrait scene

Using the Portrait scene helps a little in smoothing the skin in your selfies and people shots.



1. Switch to **Camera** or **Selfie** mode. To find out how to switch between capture modes, see [Choosing a capture mode](#) on page 120.
2. On the Viewfinder screen, tap  to show the camera options.
3. Tap .
4. Tap  to select the Portrait scene.

Live Makeup for selfies

Touch up your skin with Live Makeup before taking your selfie. See [Applying skin touch-ups with Live Makeup](#) on page 130.




Angle of selfies

Do you want the angle of your shots to look exactly the same as how you see yourself on the Viewfinder screen?

1. Switch to **Selfie** mode. To find out how to switch between capture modes, see [Choosing a capture mode](#) on page 120.
2. On the Viewfinder screen, tap  to show the camera options.
3. Tap  > **Camera options**.
4. Select the **Save mirror image** option.

Skin touch-ups for people shots

Beautify the skin of your subjects before taking their shots.

1. Switch to **Camera** mode. To find out how to switch between capture modes, see [Choosing a capture mode](#) on page 120.
2. On the Viewfinder screen, tap  to show the camera options.
3. Make sure you're using the  scene setting.
4. Tap .
5. Tap **Make-up level**, and then adjust the skin smoothing level.

Applying skin touch-ups with Live Makeup

Touch up your skin before taking your selfie. Live Makeup smoothens your skin in real time.




1. On the Home screen, tap the camera icon to open the Camera app.
2. Switch to **Selfie** or **Photo booth** mode. To find out how to switch between capture modes, see [Choosing a capture mode](#) on page 120.
3. To change the skin smoothing level, drag the slider across the adjustment bar.



The adjustment bar is shown on the Viewfinder screen by default. To hide it, tap  > , and then clear the **Live Makeup** option.

Using Auto Selfie

Keep still to take an auto selfie—or just smile! You just need to turn this feature on in the camera settings.

1. On the Home screen, tap the camera icon to open the Camera app.
2. Switch to **Selfie** mode. To find out how to switch between capture modes, see [Choosing a capture mode](#) on page 120.
3. On the Viewfinder screen, tap  to show the camera options.
4. Tap  > **Camera options**.
5. Select the **Auto Selfie** option, and then press .
6. Pose and frame yourself on the Viewfinder screen.

- To take your selfie automatically, look at the front camera, and then:
 - Stay still until the white box turns green on the Viewfinder screen.
 - Or smile at the camera. Hold your smile for a few seconds until your shot is taken.

Using Voice Selfie

Voice Selfie lets you easily take photo or video selfies using voice control. You just need to turn this feature on in the camera settings.



This feature may not be available in all languages.





- On the Home screen, tap the camera icon to open the Camera app.
- Switch to **Selfie** mode. To find out how to switch between capture modes, see [Choosing a capture mode on page 120](#).
- On the Viewfinder screen, tap to show the camera options.
- Tap > **Camera options**.
- Select the **Voice Selfie** option, and then press .
- Pose and frame yourself on the Viewfinder screen.
- Look at the front camera, and then:
 - Say **Say Cheese** or **Capture** to take a photo selfie.
 - Say **Action** or **Rolling** to record a video selfie.



You can also use voice capture with the main camera. Switch to **Camera** mode, and then turn on **Voice capture** in the camera settings. Voice capture may not be available in all languages.

Taking photos with the self-timer

When you use the self-timer, the Camera app counts down before taking the shot. You can set the countdown time.

1. On the Home screen, tap the camera icon to open the Camera app.
2. Choose a capture mode you want to use. To find out how to switch between capture modes, see [Choosing a capture mode](#) on page 120.
3. On the Viewfinder screen, tap  to show the camera options.
4. Depending on your selected capture mode, do one of the following:
 - Tap  if you see this icon, and then tap the countdown time that you want.
 - Tap  > **Self-timer**, and then drag the slider to set the countdown time.
5. To start the timer, tap . The camera takes the photo after the countdown.



Taking selfies with Photo Booth

Take several selfies and combine them into a single picture.

1. On the Home screen, tap the camera icon to open the Camera app.

2. Tap  > **Photo booth**.

If you don't see this mode, tap **Add** > **Photo booth** to add it first to the capture modes.


3. On the Viewfinder screen, tap , and then choose a layout for your selfies.
4. To start capturing, tap .

The Camera app will take four selfies, capturing each shot every 2 seconds. You can change your pose for every shot.

Split Capture

Using Split Capture mode

Use the Split Capture mode to capture your selfie and the scenery in front of you. The split-screen shot can either be both photos or both videos.

1. On the Home screen, tap the camera icon to open the Camera app.
2. Tap  > **Split Capture**.

If you don't see this mode, tap **Add** > **Split Capture** to add it first to the capture modes.

3. Drag the handle at the middle of the Viewfinder screen to adjust the size of the windows.



4. Tap to toggle between the following options:

<input checked="" type="checkbox"/> Synchronous shot	Use the main and front cameras to capture both photos or both videos at the same time.
<input type="checkbox"/> Asynchronous shot	Separately capture photos or videos with the main and front cameras. You can record different lengths of videos.

5. When taking a synchronous shot, tap to take photos or to record videos with both cameras.
6. When taking an asynchronous shot, tap to take a photo or to record a video with the main camera. Tap the button again to capture your selfie.

If you recorded video with the main camera, the video starts playing in its split window after you stop recording. After or while viewing the video, tap to record your video selfie.

If you need to retake the shot, tap to start over.

- To save the split-screen shot, tap .



If the lengths of the recorded videos in an asynchronous shot are different, the longer video will continue playing in full screen after the shorter one has finished.







Panoramic shots

Taking a panoramic photo

Get a wider shot of landscapes in one sweep.



Some camera features are not available when you're in Sweep panorama mode, such as zooming.

- On the Home screen, tap the camera icon to open the Camera app.
- Tap  > **Panorama**.
- If Pan 360 is selected, tap  > , and then tap  to switch to **Sweep panorama** mode.
- When you're ready to take the shot, tap .
- Pan left or right in either landscape or portrait view. Hold HTC One M9 as smoothly as you can to automatically capture frames.
You can also tap  to stop capturing anytime.

The camera stitches the frames into a single photo.

Taking a Pan 360 photo

The world isn't flat and your photos shouldn't be either. Take a 360-degree panorama of what's around you.



Some camera features are not available when you're in this mode, such as zooming.


1. On the Home screen, tap the camera icon to open the Camera app.
2. Tap > **Panorama**.
3. On the Viewfinder screen, tap to show the camera options.
4. Tap , and then tap to switch to **Pan 360** mode.
5. Hold HTC One M9 at face level so you'll have more room to capture scenes above or below you.
6. When you're ready to take the first shot, center the white box within the Viewfinder markers. The camera automatically captures the frame.
7. To take succeeding shots, pan HTC One M9 up, down, left, and right as smoothly as you can.

As you pan in one direction, you'll see another white box. Center the white box again within the Viewfinder markers.



Stand in the same spot even as you turn around to take more shots. For best results, remember to:

- Avoid capturing scenes with moving objects.
- Keep at least five meters distance from the scene.

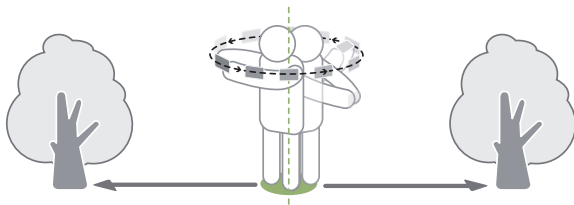

8. Pan repeatedly until you get your desired frames or when you don't see any more boxes.

To stop capturing anytime, tap .

Photos taken with Pan 360 are indicated by the icon in Gallery.





Other camera features

Using HDR

When shooting portraits against a bright background, use HDR, short for High Dynamic Range, to capture your subjects clearly. HDR brings out the details of both the highlights and shadows, even in high contrast lighting.



HDR works best when your subject is steady. The camera takes multiple shots at different exposure levels and combines them into one enhanced photo.






1. On the Home screen, tap the camera icon to open the Camera app.
2. Switch to **Camera** mode, if you're not in this mode. See [Choosing a capture mode](#) on page 120 for details.
3. On the Viewfinder screen, tap  to show the camera options.
4. Tap , and then tap .
5. To take an HDR photo, tap .

Recording videos in slow motion

Relive high speed action bit by bit and add a touch of suspense to your videos.



Audio is recorded when you're in this scene, but will only be available when video is played back in normal speed.



1. On the Home screen, tap the camera icon to open the Camera app.
2. Switch to **Camera** mode, if you're not in this mode. See [Choosing a capture mode](#) on page 120 for details.
3. On the Viewfinder screen, tap  to show the camera options.
4. Tap , and then tap .
5. Tap  to start recording.
6. To stop recording, tap .


Camera settings





Manually adjusting camera settings

Want to have expert command of your camera settings for different environments or lighting conditions? You can manually adjust the values for settings like white balance, exposure, ISO, and more.

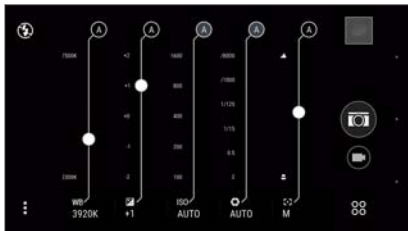1. On the Home screen, tap the camera icon to open the Camera app.
2. Switch to **Camera** mode, if you're not in this mode. See [Choosing a capture mode](#) on page 120 for details.

3. On the Viewfinder screen, tap  to show the camera options.
4. Tap  , and then tap **M** .
5. Tap a setting, and then drag its slider to make adjustments.




6. To change a setting back to auto, tap  .
7. When done, tap  . To display the settings again, just tap  .
8. When you're ready to take a photo, tap  .



You can save your customized settings as a new capture mode. See [Saving your settings as a capture mode](#) on page 140 for details.



Saving your settings as a capture mode

Save a scene or your custom settings as a new capture mode so you can conveniently use it anytime you need it.

1. On the Home screen, tap the camera icon to open the Camera app.
2. Tap  , and then tap a capture mode you want to use.




Some capture modes may not support modifying the camera settings.

3. On the Viewfinder screen, tap  to show the camera options.
4. Modify the settings as desired.
5. When done, tap  > **Save custom camera**.
6. Enter a name, and then tap **Save**.

Tap  on the Viewfinder screen, and then tap your created capture mode whenever you want to use it.



To remove a capture mode that you added, tap , press and hold the mode, and then drag it to the **Delete** option.







Gallery

Viewing photos and videos in Gallery

Reminisce about good times. Use Gallery to view all your photos and videos. View them by time, album, or location. When viewing your photos and videos, the onscreen navigation buttons will be hidden. Tap anywhere on the screen to see Gallery controls and onscreen navigation buttons.

Viewing photos and videos organized by time



Switch to Timeline view when you want to view your photos and videos according to when they were taken.

1. From the Home screen, tap , and then find and tap **Gallery**.
2. Tap  > **Timeline** to switch to Timeline view.
You'll then see tab icons for switching between different layouts.
3. Tap  to see your photos and videos individually arranged in a feed.
4. Tap  to see your photos and videos in a grid layout.
5. Tap  to see your photos and videos organized by events.
6. Tap  to see your photos and videos organized by year, then tap a month to see the shots you've taken at that time.
7. Tap a photo or video to see it in full screen.




You can also slide two fingers together or apart on the screen to scroll through the Timeline, feed, grid, and year layouts.

Viewing photos and videos by album

1. From the Home screen, tap , and then find and tap **Gallery**.
2. Tap  > **Albums** to switch to Albums view.
3. Tap a tile to open an album.
4. Tap a photo or video to see it in full screen.



Viewing photo highlights

Easily see all your favorite photos in one place. Gallery automatically groups all your most viewed or shared photos (your highlights) in one album. You can also manually edit the Highlights album.

- To view these favorite photos, open the Highlights album.
- To manually add a photo, find and view the photo in full screen, tap the photo, and then tap .
- To remove a photo from the Highlights album, press and hold the thumbnail and then tap **Remove**.

Showing or hiding albums


Have too many albums cluttering up Gallery? You can choose to show or hide albums.

1. In Gallery, tap  > **Albums**.
2. Tap  > **Show/hide albums**.

3. Choose which albums you'd like to show or hide.

Renaming an album

If you have created albums to organize photos, you can rename these albums.

1. In Gallery, tap  > **Albums**.
2. Press and hold the album that you want to rename.
3. Tap **Rename**.






Some albums, such as Camera shots and Highlights, cannot be renamed.

Viewing photos by location

Using Map view, you can view photos according to location.



Only photos with geo-tag info appear on the map.


1. From the Home screen, tap , and then find and tap **Gallery**.
2. Tap  > **Locations** to switch to Locations view.
You'll see tiles of photos taken at specific locations, with numbers that indicate how many photos were taken in each location.
3. Tap  to display Map view.

4. Zoom out or pan across the map until a numerical location indicator  appears.

The number in the location indicator shows how many photos were taken in that area.


5. Tap the location indicator to see the photos taken in that area.



Want to know where you took a particular photo? While viewing the photo in full screen, tap anywhere on the screen, and then tap  > **Show on map**. (**Show on map** is available when you've enabled **Geo-tag photos** in Camera.)

Adding location information

Want to specify more than just the city? You can add names of points of interests (POI) to your photos too.

1. In Gallery, tap  > **Locations**.
2. Tap a tile to open it.
3. Swipe to the Places tab.
4. Tap **Tap to edit location** > **Add a new place**.
5. Tap a point of interest to add a POI from Foursquare® or tap **New place** to manually enter a new name.
6. Tap **Save**.

Changing location information

1. In Gallery, tap  > **Locations**.

2. Tap a tile to open it.
3. Swipe to the Places tab.
4. Find the grouping you want to rename, then tap **⋮** and try one of the following:

Selecting another POI

1. Tap **Edit location** > **Tap to edit location**.
2. Tap a point of interest to add a POI from Foursquare or tap **New place** to manually enter a new name.
3. Tap **Save**.

Renaming the location

1. Tap **Rename this place**.
You'll only see **Rename this place** if the name is stored on HTC One M9.
2. Enter a new name.
3. Tap **Save**.

Adding photos or videos to an album

1. From the Home screen, tap **⋮**, and then find and tap **Gallery**.
2. Tap **☰**, and then choose how you want to view your photos and videos.
3. Open a group of photos and videos, such as an event in Timeline view or an album.
4. Tap **⋮** > **Add to album**.
5. Select the photos or videos you want to add, and then tap **Next**.

6. Create an album or select an album that you've already created in Gallery. To create a new album to move or copy to, tap **+**.



To add a single photo or video to an album, press and hold the photo or video. Tap **Add to album**, and then select the destination album or create a new album.



Copying or moving photos or videos between albums

1. From the Home screen, tap **⋮**, and then find and tap **Gallery**.
2. Tap **≡** > **Albums** to switch to Albums view.
3. Tap a tile to open an album.
4. Tap **⋮** > **Move to** or **Copy to**.
5. Select the photos or videos you want to move or copy and then tap **Next**.
6. Select an album to move or copy the photos or videos to. To create a new album to move or copy to, tap **+**.

Tagging photos and videos

Make your photos and videos easy to find by adding tags, such as short names or keywords.


1. From the Home screen, tap **⋮**, and then find and tap **Gallery**.
2. Tap **≡**, and then choose how you want to view your photos and videos.
3. Tap a tile to open a group of photos and videos.

4. Tap  > **Add tag**.
5. Select items that you'll tag with the same keywords, then tap **Next**.
6. Type in a keyword, and then tap .
Or, to use an existing tag, just tap it below the text field.
7. Add more keywords when needed.
8. If you need to remove a tag you've added, just tap the tag, and then tap **OK**.
9. Tap **Save**.






To tag a single photo or video, press and hold the photo or video. Tap **Add tag**, and then enter your keywords.

Viewing your tagged photos and videos

1. In Gallery, tap  > **Tags**.
You'll see tiles of your used tags, with numbers that indicate how many photos and videos belong to each tag.
2. Tap a tile to open it and view tagged photos and videos.




Renaming a tag

You can rename a tag that you've already added to your photos and videos.

1. In Gallery, tap  > **Tags**.
2. Find the tile of the tag you want to rename, then tap  > **Rename tag**.
3. Type the new tag name in the text field, then tap .

4. Tap **OK** to save your changes.

Removing tags



1. In Gallery, tap  > **Tags**.
2. Find the tile of the tag you want to modify.
3. To untag photos and videos, tap the tile, and then tap  > **Remove tag**. Select the items, then tap **Remove**.
4. To completely delete a tag, tap  in the tile, then tap **Remove tag**.




Deleting a tag will not delete any of your photos and videos.

Searching for photos and videos

You can search the Gallery using tags and photo locations.




1. From the Home screen, tap , and then find and tap **Gallery**.
2. Tap .
3. In the search field, type a tag or a location associated with the photo or video you're looking for.

You can also search for photo taken on a specific date. You must use the same date format as that set in **Settings** > **Date & time**, such as 01/13/2015.


4. Tap .
5. Select what you want from the matching results.

Finding matching photos



Looking for photos of a specific person? Use Image match to find photos faster instead of browsing through Gallery.




1. From the Home screen, tap , and then find and tap **Gallery**.
2. Tap , and then choose how you want to view your photos and videos.
3. Tap .
4. Tap **Image match** and find a photo that is visually similar to what you want to find.
5. Tap the photos that are most similar to what you want to find and do one of the following:
 - Tap **Continue** to refine the search.
 - Tap **Finish** to see the results.
6. On the Images matched screen, select all of the images you want to save to a new album, and then tap **Save**.



You can also find matching images while viewing a photo in full screen. Tap  > **Image match**.

Viewing Pan 360 photos

1. From the Home screen, tap , and then find and tap **Gallery**.
2. Tap , and then choose how you want to view your photos and videos.
3. Tap a tile to open the thumbnail view.




4. When you see the Pan 360 photo you want, tap it to view in full screen. You can identify Pan 360 photos by the  icon on the thumbnail.
5. Tap  to explore the Pan 360 photo.
6. Try any of the following:
 - Tilt HTC One M9 or drag your finger on the screen to pan the photo.
 - Tap the rotation indicator at the top left corner to re-center the photo.
 - Slide two fingers together or apart to zoom the photo.
 - Rotate two fingers to rotate the photo.
 - Tap  to save the current view of the photo.


Changing the video playback speed

Want to add a cinematic flair to your video by slowing down a particular scene? You can vary the playback speed of a selected section of a slow motion video.



You can only change the video playback speed of videos captured using the slow motion scene in the Camera app.

1. In Gallery, open the video you want to play in full screen. You can identify slow motion videos by the  icon on the thumbnail.
2. Tap  to switch between normal and slow motion playback.
3. To adjust the playback speed of the video, tap  > **Edit** > **Adjust playback speed**.
4. Frame the sequence you want to slow down by moving the left and right sliders.

5. Drag the slider up or down to choose how fast you want the sequence to play.
6. Tap  to watch the result.
7. Tap **Save**.



The edited video is saved as a copy. The original video remains unedited.

Trimming a video

1. In Gallery, open the video you want to play in full screen.
2. Tap the onscreen controls to pause or resume playback, adjust the volume, and more.



Tap  to share the video on your home network.

3. To trim the video, tap  > **Edit**.
4. Drag the trim sliders to the part where you want the video to begin and end.
5. Tap  to preview your trimmed video.
6. Tap **Save**.

The trimmed video is saved as a copy. The original video remains unedited.

Saving a photo from a video





It's easy to save a still shot from a video.

While you're watching a video in Gallery, tap  to capture a still shot.

You can also pause the playback and drag the slider to the image you want before tapping .

Viewing a Zoe in Gallery

When you view a group of photos and videos such as in an album, Gallery automatically composes a Zoe. A Zoe is a collection of photos and videos that Gallery has preselected, with added background music and special effects.

1. From the Home screen, tap , and then find and tap **Gallery**.
2. Tap , and then choose how you want to view your photos and videos.
If you are in Timeline view, you need to go to the Events  or Year  tab.
3. Tap a tile to open a group of photos and videos. You'll then see a preview of the Zoe play automatically.

If you want to edit the Zoe in the Zoe app, tap the Zoe tile in portrait view.

To learn more about the Zoe app, go to the [Zoe Tips & Help page](#).

One Gallery




See all your photos and videos in one place.

With One Gallery, you can view all the photos and videos that are stored on HTC One M9 as well as on favored online services right from the Gallery app on your phone.

What's more, you can easily find similar photos and videos using Image match or by searching with keywords or tags. See [Finding matching photos](#) on page 150 and [Searching for photos and videos](#) on page 149.

Turning on One Gallery

One Gallery lets you view your Facebook, Flickr[®], Google Drive[™], and Dropbox pictures and videos in Gallery.

1. From the Home screen, tap , and then find and tap **Gallery**.
2. Tap  > **General Settings** > **One Gallery**.
3. Tap **Next** and then select the online account you want to sign in with.
4. Choose the online services whose photos and videos you want to see in Gallery. One Gallery will then sync with the accounts.
5. After the accounts have been synced, tap .


You'll then be able to see your online photos and videos in Gallery.

Photo Editor

Basics

Choosing a photo to edit

You can select photos to edit from Photo Editor or Gallery.

1. From the Home screen, tap , and then find and tap **Photo Editor**.
2. Tap **Gallery** to open an existing photo on your phone, and then browse for the item to edit.

Or, tap **Camera** if you want to take a new photo to edit.


A slideout menu appears where you can choose editing options.






You can also tap  while viewing a photo in full screen from the Gallery app.

Adjusting your photos

Use the available adjustment tools to crop, rotate, flip, or straighten photos.








1. From Photo Editor, choose the photo you want to edit.
See [Choosing a photo to edit](#) on page 155 to find out how.
2. In the slideout menu that opens, tap **Essentials** > .




3. Choose to rotate, crop, flip, or straighten the photo.
4. Tap  and make more adjustments, if needed.
5. Press  to return to the Essentials screen.
6. Tap  to save changes.

Except for when applying rotation, edited photos are saved as new photos. The original remains unedited.






Drawing on a photo

Scribble on your photos for fun or to highlight an interesting part.


1. From Photo Editor, choose the photo you want to edit.
See [Choosing a photo to edit](#) on page 155 to find out how.
2. In the slideout menu that opens, tap **Flair** > .
3. Drag the stroke slider to adjust the stroke thickness.
4. Tap  to open the toolbar, choose a pen type, and then tap  to hide the toolbar.
5. Choose a pen color from the color bar.
6. Draw on the photo.
You can tap  to switch to full screen view.
7. To undo or redo an action, open the toolbar, and then tap  or .
- Or, you can use the eraser from the toolbar to remove specific parts of your drawing.
8. Tap  when done.

9. Tap , and then tap  to toggle between the before and after photos.
10. Tap  to save changes.
The edited photo is saved as a new photo. The original photo remains unedited.

Applying photo filters

1. From Photo Editor, choose the photo you want to edit.
See [Choosing a photo to edit](#) on page 155 to find out how.
2. In the slideout menu that opens, tap **Essentials**.
3. Tap , and then choose one of the available filters.
4. Tap .
5. Tap , and then tap  to toggle between the before and after photos.
6. Tap  to save changes.
The edited photo is saved as a new photo. The original photo remains unedited.

Creating and applying a custom filter




1. From Photo Editor, choose the photo you want to edit.
See [Choosing a photo to edit](#) on page 155 to find out how.
2. In the slideout menu that opens, tap **Essentials**.
3. Tap , and then scroll to the end of the predefined filters bar.
4. Tap **Custom**.

5. Make changes to the filter by adjusting the controls on exposure, saturation, white balance, and more.
6. If you need to rearrange the order of your settings to achieve a particular effect, you can press and hold a setting and drag it to a new position. Rearranging the settings may reset values to the default.
7. Tap > .
8. Press ↶ to return to the Essentials screen.
9. Tap ✓ to save changes.
The edited photo is saved as a new photo. The original photo remains unedited.

Retouching photos of people

1. From Photo Editor, choose the photo you want to edit.
See [Choosing a photo to edit](#) on page 155 to find out how.
2. In the slideout menu that opens, tap **Touch up**.
3. Choose a facial touch-up to apply, and then customize its settings.
4. Tap > .
5. Tap ▲ , and then tap * to toggle between the before and after photos.
6. Tap ✓ to save changes.
The edited photo is saved as a new photo. The original photo remains unedited.

Fixing red eye in photos


1. From Photo Editor, choose the photo you want to edit.
See [Choosing a photo to edit](#) on page 155 to find out how.
2. In the slideout menu that opens, tap **Essentials**.
3. Tap , and then tap .
4. Tap  to save changes.
The edited photo is saved as a new photo. The original photo remains unedited.


Editing continuous shots

Always Smile

Finding it difficult to choose a group shot with the most smiles and the fewest blinks? Retouch a group shot so everyone looks their best in the photo.



This feature is available for burst shots captured with continuous shooting mode. You can identify burst shots by the  icon on the thumbnail.

1. From Photo Editor, choose the photo you want to edit.
See [Choosing a photo to edit](#) on page 155 to find out how.
2. In the slideout menu that opens, tap **Effects** > . You'll see circles around any faces detected in the photo.


3. Select one face at a time and drag it sideways with your finger to select the expression you want.
4. Tap ✓ when done.
5. Tap ▲ , and then tap * to toggle between the before and after photos.
6. Tap ✓ to save changes.


The edited photo is saved as a new photo. The original photo remains unedited.

GIF creator


Create an animated gif that you can quickly upload and share.



This feature is available for burst shots captured with continuous shooting mode. You can identify burst shots by the  icon on the thumbnail.



1. From Photo Editor, choose the photo you want to edit.
See [Choosing a photo to edit](#) on page 155 to find out how.
2. In the slideout menu that opens, tap **Effects** > . You'll see an animation of the frames.
3. Drag the trim sliders to the part where you want the animated gif to begin and end.
4. Tap > .
5. On the next screen, you can choose the direction you want the animation to play, set the speed of the animation, choose which frames you want to include, and more.


6. Tap ✓ when done.
7. Select the file quality of your animation, and then tap **OK**.

The animation is saved as a gif. You can identify a gif by the  icon on the thumbnail in Gallery.

Sequence Shot

Hop, skip, or jump. Create a sequence shot to stitch a series of actions into one photo.

 This feature is available for burst shots captured with continuous shooting mode. You can identify burst shots by the  icon on the thumbnail.


1. From Photo Editor, choose the photo you want to edit.
See [Choosing a photo to edit](#) on page 155 to find out how.
2. In the slideout menu that opens, tap **Effects** > . You'll see frames that you can combine in one photo.
3. Select the frames that you want to include in the sequence shot.
4. Tap ✓ when done.
5. Tap ▲, and then tap * to toggle between the before and after photos.
6. Tap ✓ to save changes.







The edited photo is saved as a new photo. The original photo remains unedited.

Object Removal

Did a pedestrian or passing car ruin your otherwise perfect shot of a famous landmark? Retouch the photo to remove unwanted people or objects.



This feature is available for burst shots captured with continuous shooting mode. You can identify burst shots by the  icon on the thumbnail.

1. From Photo Editor, choose the photo you want to edit.
2. In the slideout menu that opens, tap **Effects** > . You'll see frames around areas in the photo where objects have been automatically removed.
3. To retain an object, tap  on its image on the film strip.
4. Tap  when done.
5. Tap , and then tap  to toggle between the before and after photos.
6. Tap  to save changes.









The edited photo is saved as a new photo. The original photo remains unedited.

Creative effects

Shapes

Add some pattern to your photo by adding and blending shapes.

1. From Photo Editor, choose the photo you want to edit.
See [Choosing a photo to edit](#) on page 155 to find out how.

- In the slideout menu that opens, tap **Effects** > .
- Choose a shape to add to your photo.
- Select a shape color by dragging the color slider.
- Drag the shape to move it.
- Drag your fingers apart or together on the shape to adjust its size.
- Press and hold the shape with two fingers and then drag your fingers in a circular motion to rotate it.
- Tap  to open the toolbar.
- Tap , choose a different blending option for the selected layer, and then tap .
- Tap  > , and then drag the slider to adjust the shape's opacity.
- If you want to adjust your photo to blend with the shape, tap  to switch from the shape layer to the photo layer.
- Tap a setting to adjust its values, and then tap .






13. Tap ✓ to save changes.



The edited photo is saved as a new photo. The original photo remains unedited.

Photo Shapes


Photo Shapes lets you add a shape to your image and fill it with another photo.

1. From Photo Editor, choose the photo you want to edit.
See [Choosing a photo to edit](#) on page 155 to find out how.
2. In the slideout menu that opens, tap **Effects** > .
3. Choose a second image to be the fill for your selected shape.
4. Choose a shape to add to your photo.
5. Tap  to switch to the shape layer. You should see the shape layer icon .
6. Drag the shape mask to move it.



7. Drag your fingers apart or together on the shape mask to adjust its size.
8. Press and hold the shape mask with two fingers, and then drag your fingers in a circular motion to rotate it.
9. Tap  to return to the image layer , and then drag your fingers apart or together on the image to adjust the image size inside the mask.

10. Tap ▲ to open the toolbar.
11. Tap ●, choose a different blending option for the selected layer, and then tap >.
12. Tap ▲ > [🔧], and then tap a setting to adjust its values.
13. If you want to adjust your photo to blend with the image fill, tap 🔄 to switch from the image fill layer to the photo layer.

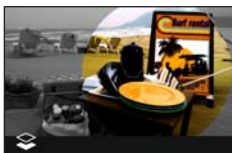






14. Tap a setting and drag the slider to adjust its values, and then tap >.
15. Tap ✓ to save changes.

The edited photo is saved as a new photo. The original photo remains unedited.

Prismatic

Got a bright and colorful image? Use Prismatic effect for fresh crystal prism patterns.

1. From Photo Editor, choose the photo you want to edit.
See [Choosing a photo to edit](#) on page 155 to find out how.
2. In the slideout menu that opens, tap **Effects** > ▲.
3. Choose a prismatic pattern to apply to your photo.
4. Tap [🔍] to switch to the shape layer. You should see the shape layer icon [🔍].

5. Drag the shape to move it.
6. Drag your fingers apart or together on the shape to adjust its size.
7. Press and hold the shape with two fingers, and then drag your fingers in a circular motion to rotate it.
8. Tap  to return to the image layer , and then drag your fingers apart or together on the image to adjust its size.
9. Tap  to open the toolbar.
10. Tap , adjust the settings for your photo layer, and then tap .





11. Tap  to save changes.

The edited photo is saved as a new photo. The original photo remains unedited.






Double Exposure

With Double Exposure, combine and blend two photos and create something surreal.

1. From Photo Editor, choose the photo you want to edit.
See [Choosing a photo to edit](#) on page 155 to find out how.

- In the slideout menu that opens, tap **Effects** > .
- Choose your second image. This will be your top layer .



- Drag the layer to move it.
- Drag your fingers apart or together on the layer to adjust its size.
- Tap  to open the toolbar.
- Tap , choose a different blending option for the selected layer, and then tap .
- Tap  > , tap a setting, and then drag the slider to adjust its values.



- If you want to adjust your background layer to blend with the top layer, tap  to switch to the background layer.






- Tap a setting and drag the slider to adjust its values, and then tap . The edited photo is saved as a new photo. The original photo remains unedited.



Elements

Add animated elements to your photo.

- From Photo Editor, choose the photo you want to edit. See [Choosing a photo to edit](#) on page 155 to find out how.
- In the slideout menu that opens, tap **Effects** > .
- Tap an element type to apply to your photo.
- Tap  to open the toolbar.

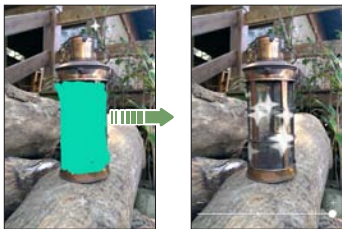5. Tap , draw an animation path or area for the selected effect, and then tap .



6. Tap  to adjust the animation speed and intensity.
7. Press and hold an area with two fingers, and then drag your fingers in a circular motion to rotate the animation.
8. When you are satisfied with the result, tap  and choose to save as a photo or video.


Face Fusion

Wonder what you would like if you shared the same features as another person? Face Fusion uses a person's photo and a target face to merge the two photos into one.



To use Face Fusion, be sure that:

- The faces in each photo have to be 100 x 100 pixels or larger in size.
- Facial shots are without glasses and are not covered by hair, a hat, or any other item.
- Subjects should look towards the camera for best results.

1. From Photo Editor, choose the photo you want to edit.
See [Choosing a photo to edit](#) on page 155 to find out how.
2. In the slideout menu that opens, tap **Effects** > .
3. Tap **+** and then browse to the photo that you want to merge with.

4. Drag the slider to apply Face Fusion to the image.



- To choose another target face, just tap the thumbnail of the target person and browse to a new photo.
5. When you are satisfied with the result, tap ✓ and choose to save as a photo or video.

Video chat and phone calls


Video chat


Face Tracking


While doing a video chat using a third-party video chat app, Face Tracking focuses on your face and others around you, and tracks faces that are within the camera's angle of view. Face Tracking can track a maximum of 4 faces.

1. Open your video chat app, and then tap  to open the menu.





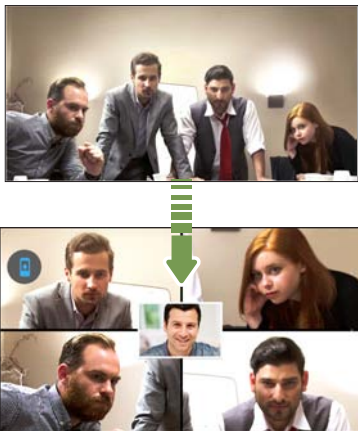



2. Tap  to turn on Face Tracking. As other people around you enter the front camera's field of vision, each person will appear in a window on the video chat screen. Your camera will zoom in or out to keep the faces in focus when you move.



3. Drag the mini-window anywhere you want.
4. Depending on the video chat app, you can single or double-tap the mini-window to switch screens with the called participant.
5. Tap  again to turn off Face Tracking.

Sharing your phone screen

Want to show off some pics or teach your friend how to use a phone feature? Screen Share allows you to show your phone screen to the person you're video chatting with. You need a third-party video chat app to use Screen Share.

1. On the video chat screen, tap  >  to activate Screen Share.
2. On your phone, go to the screen you want to share and then tap . You can go to any screen on your phone and the person you're chatting with will see it.
3. While sharing your screen, you can:
 - Tap  to draw. Trace your finger across the screen to call out important parts.
 - Tap  to pause screen sharing.
 - Tap  to stop screen sharing.

Phone calls

Making a call with Smart dial

You can either dial a number directly, or use Smart dial to quickly place a call. Smart dial searches and calls a stored/synced contact or a number from your call history.

1. On the Home screen, tap the phone icon to open the **Phone** app.
2. Enter the phone number or first few letters of the contact's name to see the top matching contact.
3. If there are a number of matches found (for example, 8 matches), tap the number to see all the matches.

4. Tap the contact you want to call.



- To check other phone numbers associated with the contact, tap beside the contact name.
- If the phone number has an extension, tap after connecting to the main line and then dial the extension number.

Making a call with your voice

Call a contact hands-free using your voice.

1. On the Home screen, tap the phone icon to open the **Phone** app.
2. Tap .
3. Say the name of contact you want to call. For example, say "Call [person's name in phonebook]."
4. Follow screen instructions to make the call.

Dialing an extension number

To skip voice prompts when dialing an extension number, do one of the following:

- After dialing the main number, press and hold *. A comma (,) is added to the number you are dialing. Enter the extension number, and then tap the call button. You will be connected to the mainline and then to the extension number.

- After dialing the main number, press and hold # to add a semicolon (;). Enter the extension number after the semicolon , and then tap the call button. After connecting to the main line, tap **Send** to dial the extension number.

You can save phone numbers with an extension in the People app.

Returning a missed call



You'll see the missed call icon  in the status bar when you miss a call.

1. Slide the Notifications panel open to check who the caller is.
2. To return the call, tap **Call back**.

If you have multiple missed calls, tap the missed calls notification to open the Call History tab.

Speed dial

Use Speed dial to call a phone number with a single tap.

1. On the Home screen, tap the phone icon to open the **Phone** app.
2. Tap  > **Speed dial** > . You can also press and hold an unassigned key on the dialpad, and then tap **Yes**.
3. Select a contact from the list.
4. On the Speed dial screen, choose the phone number of the contact to use, and a speed dial key to assign.
5. Tap **Save**.

To use Speed dial, press and hold the speed dial number you want to call.

Calling a number in a message, email, or calendar event

When you receive a text message, email, or calendar event that has a phone number in it, you can just tap the number to place a call.

Making an emergency call

In some regions, you can make emergency calls from HTC One M9 even if the nano SIM card has been blocked or if you don't have one installed.



If you don't have a network signal, you won't be able to make an emergency call.

1. On the Home screen, tap the phone icon to open the **Phone** app.
2. Dial the emergency number for your locale, and then tap **Call**.



If you've enabled but forgotten your lock password or lock pattern, you can still make emergency calls by tapping **Emergency call** on the screen.

Receiving calls



When you receive a phone call from a contact, the Incoming call screen appears.



HTC One M9 will automatically adjust the ringtone volume when you use the polite ringer and pocket mode features.

Answering or rejecting a call

Do one of the following:

- Tap **Answer** or **Decline**.
- If you've set up a lock screen, drag  or  upwards.
- Press the POWER button twice to reject a call.

Muting the ringing sound without rejecting the call

Do one of the following:

- Press the VOLUME DOWN or VOLUME UP button.
- Press the POWER button.
- Place HTC One M9 face down on a level surface.



If **Flip to mute** option in **Sound & notification** settings is set to **Mute once**, HTC One M9 will still ring when there are subsequent incoming calls.

What can I do during a call

When a call is in progress, use the buttons onscreen to mute or unmute the microphone or to turn the speakerphone on or off.

Turning the speakerphone on or off during a call



To decrease potential damage to your hearing, do not hold HTC One M9 to your ear when the speakerphone is on.

- On the call screen, tap . The speakerphone icon appears in the status bar.
- To turn the speakerphone off, tap .

Muting the microphone during a call

On the call screen, tap to toggle between turning the microphone on or off. When the microphone is turned off, the mute icon appears in the status bar.

Ending a call


Do one of the following to end the call:

- On the call screen, tap **End Call**.
- Slide the Notifications panel open, then tap **End Call**.

Setting up a three-way call


Three-way calling with your friends, family, or co-workers is easy. Make the first call, and then dial another number to add it to the call.

1. Make a call to the first participant.
2. When connected, tap > **Add call**, and then dial the number of the second participant. The first participant is put on hold when you dial the second participant.


3. When connected to the second participant, tap .
4. To end the call, tap **End call**.

Call History



Use Call History to check missed calls, your dialed numbers, and received calls.

1. On the Home screen, tap the phone icon to open the **Phone** app.
2. Swipe to view the Call History tab.
3. Do one of the following:
 - Tap a name or number in the list to call.
 - Press and hold a name or number in the list to display the options menu.
 - Tap  to display just a particular type of call such as missed calls or outgoing calls.

Adding a new phone number to your contacts from Call History

1. On the Call History tab, tap  next to the new phone number.
2. Choose whether to create a new contact or save the number to an existing contact.

Clearing the Call History list

1. On the Call History tab, tap  > **Remove call history**.
2. Select the items you want to delete, or tap  > **Select all**.
3. Tap **Delete**.

Blocking a caller

When you block a phone number or a contact, all calls from the phone number or contact will be declined automatically.

On the Call History tab, press and hold the contact or phone number you want to block, and then tap **Block caller**.



You can always remove a caller from your blocked list. On the Call History tab, tap **⋮** > **Blocked contacts**. In the All tab, press and hold a contact, and then tap **Unblock contacts**.

Switching between silent, vibrate, and normal modes

Do one of the following:

- To change from silent to normal mode, press the VOLUME UP button.
- To change from vibrate to normal mode, press the VOLUME UP button twice.
- Go to Settings, and then tap **Sound & notification** > **Sound profile**.

Global Ready

HTC One M9 offers you reliable, consistent voice service at home and abroad.

Use one phone and one number for voice coverage in more than 205 countries. Get one bill for both domestic and international calls.

In order to get the full benefits of Global Phone service you must subscribe to a Global Phone calling plan. Go to verizonwireless.com/global for rates, countries, coverage limitations and features.



Voice and data roaming charges may apply. Data service plans sold separately.

Using Assisted dialing

When you're on a trip abroad, it's easy to dial friends and family from home. Your home country code is automatically added when you make calls to your contacts while roaming.



1. On the Home screen, tap **Phone**.
2. Enter the phone number or first few letters of the contact's name to see the top matching contact.
3. If there are a number of matches found (for example, 8 matches), tap the number to see all the matches.
4. Tap the contact you want to call.

If you selected a contact whose phone number has a leading zero, HTC One M9 will automatically prepend it with your home country code when dialing. If there's already a plus (+) sign and country code before the phone number, HTC One M9 will just dial as is.





HTC One M9 dials as is and does not prepend your home country code when you call phone numbers that are not stored in HTC One M9. When manually entering a phone number to call, you need to enter a plus (+) sign and country code before the number.

Editing a country's international call settings


1. From the Home screen, tap , and then tap **Settings > Call**.
2. Tap **Assisted Dialing > Reference Country**.
3. Under Reference Country, select the country whose settings you want to edit.
4. Tap  > **Edit**.
5. Edit the **Country Code**, **IDD Prefix** (International Direct Dial), **NDD Prefix** (National Direct Dial), **Area/City Code** and **National Number Length** (length of phone number).
6. Tap **Save**.
7. Tap **Done**.

Resetting the reference country to default

1. From the Home screen, tap , and then tap **Settings > Call**.
2. Tap **Assisted Dialing > Reference Country**.
3. Under Reference Country, tap the bar and select the country whose settings you want to set to default values.
4. Tap  > **Set Default**.
5. Tap **Done**.



Turning off Assisted dialing

1. From the Home screen, tap , and then tap **Settings > Call**.
2. Tap **Assisted Dialing**.

3. Clear the **Use Assisted Dialing** option.
4. Tap .




Messages

Sending a text or multimedia message via Message+

1. Open the Message+ app.
2. Tap .
3. Enter a contact name or mobile number in the **To** field, or tap  to select a contact from the People app.
4. Tap the box that says **Type a message**, and then enter your message.





Your text message becomes a multimedia message when you attach an item or if you are sending to multiple recipients. Group Messages are also charged as a multimedia message (MMS).

5. To add a multimedia attachment, tap , choose an attachment type, and then select or create the item to attach.
6. Tap  to send, or tap  to save the message as a draft.


For more information about Verizon Messages, visit www.verizonwireless.com/vzmessages.

Sending a text message (SMS)

1. From the Home screen, tap , and then find and tap **Messages**.

2. Tap **+**.
3. Enter a contact name or mobile number in the **To** field.
4. Tap the area that says **Add text**, and then enter your message.
5. Tap , or press  to save the message as a draft.






- There is a limit on the number of characters for a single text message (displayed above ). If you exceed the limit, your text message will be delivered as one but will be billed as more than one message.
- Your text message automatically becomes a multimedia message if you enter an email address as the recipient, attach an item, or compose a very long message.

Sending a multimedia message (MMS)



Before attaching and sending a high-resolution video, compress it first so that the file size doesn't exceed the message size limit.

1. From the Home screen, tap , and then find and tap **Messages**.
2. Tap **+**.
3. Enter a contact name, mobile number, or email address in the **To** field.
4. Tap the area that says **Add text**, and then enter your message.
5. Tap , and then choose an attachment type.




6. Select or browse for the item to attach.
7. After adding an attachment, tap  to see options for replacing, viewing or removing your attachment.
8. Tap , or press  to save the message as a draft.

Sending a group message

Group messaging makes it easy to send a message to multiple contacts all at once. You can choose to send a group SMS or group MMS.



The text or MMS message you send for each recipient will count towards your monthly message allowance. For example, if you send a group text message to five contacts, five text messages will be deducted from your monthly message allowance.

1. From the Home screen, tap , and then find and tap **Messages**.
2. Tap .
3. Tap , and then select multiple recipients.
4. To send a group SMS, tap **Group conversation**, and then select **Individual messages**. To send your message as a group MMS, select **Group conversation** back.

Individual messages

Your message will be sent to the recipients as a text message and you will be charged by Verizon Wireless for each message sent. Replies of your recipients are sorted separately.

Group conversation

Similar to a group chat, sending a group MMS lets your recipients join the conversation you've started.

HTC One M9 also organizes message replies in a single conversation thread. If this is your first time to send a group MMS, you may need to enter your mobile phone number.

5. Tap the area that says **Add text**, then enter your message.
6. Tap .

Resuming a draft message

If you switch to another app or if you receive an incoming call while composing a text message, the message is automatically saved as a draft.


1. From the Home screen, tap , and then find and tap **Messages**.
2. Tap a draft message, and then edit the message.



To see all draft messages in one place, tap , and then tap **Filter > Drafts**.

3. Tap .

Replying to a message



1. From the Home screen, tap , and then find and tap **Messages**.
2. Tap a contact (or phone number) to display the exchange of messages with that contact.

3. Tap the area that says **Add text**, and then enter your message.
4. Tap .


Replying to a contact's other phone number

When a contact has multiple phone numbers stored on HTC One M9, you can select which phone number to reply to.


Keep in mind that if you don't select another number, your response will be sent to the phone number that your contact used to send the last message.

1. While viewing the exchange of messages with a contact, tap  and select which phone number you want to reply to.
2. Tap the area that says **Add text**, then enter your reply message.
3. Tap .

Forwarding a message

1. From the Home screen, tap , and then find and tap **Messages**.
2. Tap a contact (or phone number) to view the exchange of messages with that contact.
3. Tap a message, and then tap **Forward**.

Copying a text message to the nano SIM card

1. From the Home screen, tap , and then find and tap **Messages**.
2. Tap a contact (or phone number) to display the exchange of messages with that contact.

3. Tap the message, and then tap **Copy to SIM**. The  icon is displayed.


Deleting messages and conversations

Open the Messages app and do any of the following:

Delete a message Open the conversation thread with a contact, tap the message, and then tap **Delete message**.

To delete multiple messages within a conversation, tap  > **Delete messages** > **Delete by selection**, and then select the messages to delete.

Delete a conversation Press and hold a contact (or phone number), and then tap **Delete**.

To delete multiple conversations, tap  > **Delete threads**, and then select the conversations to delete.




In the Messages settings, tap **General** > **Delete old messages** to auto delete old messages.

Preventing a message from being deleted

You can lock a message to prevent it from being deleted even if you delete the other messages in the conversation.

1. Open the Messages app.
2. Tap a contact (or phone number) to display the exchange of messages with that contact.


3. Tap the message that you want to lock.
4. Tap **Lock message** on the options menu. A lock icon  is displayed.

Entertainment

HTC BoomSound with Dolby Audio

toggling modes in HTC BoomSound

Turn on HTC BoomSound with Dolby Audio™ in Settings and experience a whole new level of mobile audio from the speakers on HTC One M9.


1. From the Home screen, tap , and then find and tap **Settings**.
2. Tap **HTC BoomSound with Dolby Audio** to toggle between Theater mode and Music mode.



HTC BoomSound with Dolby Audio is not available over HDMI, Bluetooth, Miracast™, or USB audio out.

Using HTC BoomSound with headphones

Turn on HTC BoomSound with Dolby Audio and put on your headphones to enjoy refined audio details in a more personal way.

1. From the Home screen, tap , and then find and tap **Settings**.
2. Plug your headphones into the headphone jack.
3. Tap the HTC BoomSound with Dolby Audio **On/Off** switch.

4. Tap **HTC BoomSound with Dolby Audio**, and then select an option from the Choose your headphones screen. HTC One M9 remembers the headphone profile you chose so you don't have to select it again next time.



HTC BoomSound with Dolby Audio is not available over HDMI, Bluetooth, Miracast, or USB audio out.

HTC Music

Listening to music


Enjoy your favorite songs on HTC One M9 using the Music app.





When you open the Music app for the first time, you'll be asked if you would like to automatically download related content, such as album covers and artist photos, to HTC One M9.


1. From the Home screen, tap **⋮**, and then find and tap **Music**.
2. Swipe to the different tabs to browse by category.
3. Tap a song to play.
4. Tap the onscreen icons to control music playback, repeat songs, and more.



 Press and drag your finger across the progress bar to jump to any part of the song.

 Turn shuffle on or off. (Shuffle is off when button is gray.)

 Cycle through the repeat modes: repeat all songs, repeat current song, and don't repeat.

 Play your music on a DLNA® compliant TV or audio system, HTC Media Link HD, or stereo Bluetooth device.



 Minimize the Now playing screen to continue browsing your music collection.



When you're listening to music and the screen display turns off, press **POWER** to turn the screen back on and control the music playback directly on the Lock screen.

Music playlists

Personalize your music experience by creating music playlists. Make a playlist containing just your favorite songs or create one to match your mood for the day. You can make as many playlists as you like.

1. From the Home screen, tap , and then find and tap **Music**.
2. Swipe to the Playlists tab.
3. Tap , and then enter a playlist name.

- To add songs, tap **+** beside the title text box, browse your music collection, and then tap a song to add.

Repeat this step to add more songs.

- You can also:

Rearrange songs	Drag ≡ to move the song to its new position.
Delete songs	Select the songs you want to remove from the playlist.
Change playlist name	Type the new name of the playlist in the title text box.

- Tap **Save**.

You'll find newly created playlists on the Music app's Playlists tab.

To edit or delete a playlist you've created, from the Playlists tab, tap a playlist to open it, and then tap **⋮** > **Edit playlist** or **Delete**.

Adding a song to the queue

While playing a song, you can also browse other tracks stored on HTC One M9. Add a song or an album to the queue so it plays when the current playlist has finished playing.



- While a song is playing, browse for other tracks.
- Do any of the following:
 - Browse for the album or playlist that you want, press and hold it, and then tap **Add to queue**.
 - Browse for an artist or song, and then tap **⋯** > **Add to queue**.


The songs you've added appear on the Queue tab.

Updating album covers and artist photos





To save on data usage, you might want to connect to a Wi-Fi network when updating your album covers and artist photos. In Music settings, select **Wi-Fi only**.

1. From the Home screen, tap , and then find and tap **Music**.
2. Swipe to the Artists or Albums tab.
3. Tap  > **Update artist photos** or **Update album art**.

If you want HTC One M9 to automatically check and update your music collection, tap  on the Music app's main screen, and then tap **Settings**. Select **Album art** and **Artist photos**.

Setting a song as a ringtone

Pick a song from your Music library and set it as your ringtone or as ringtone for a favorite contact.

1. From the Home screen, tap , and then find and tap **Music**.
2. Play the song that you want to set as a ringtone.
3. Tap  > **Set as ringtone**.
4. Tap **Phone ringtone** or **Contact ringtone**.

If you select **Contact ringtone**, choose the contacts you want to associate the ringtone with.

Trimming an MP3 ringtone

Use the Music app's ringtone trimmer if you want to set only a part of the song as ringtone.

1. Play the song that you want to set as a ringtone.
2. Tap **⋮** > **Set as ringtone** > **Trim the ringtone**.
3. Drag the trim sliders **⏮** to the part where you want the ringtone to begin and end.

For a more precise trimming, tap the left or right arrow buttons. Time markers indicate where you are on the song.

4. When you're done trimming, tap **Set as**.
5. Choose whether to set your trimmed song as your **Phone ringtone** or **Contact ringtone**.




You can see your new ringtone in the phone settings. Go to **Settings > Sound & notification > Ringtone**.

Viewing song lyrics


Love a song so much that you want to sing along? HTC One M9 gives your music an extra kick with song lyrics and cool music visualizations.





To save on data usage, connect to a Wi-Fi network when downloading lyrics. In Music settings, select **Wi-Fi only**.

1. From the Home screen, tap , and then find and tap **Music**.
2. Browse to the song you want to play and tap it.
3. Swipe to the Visualizer tab to view the lyrics. Song lyrics appear onscreen if content has been successfully downloaded.



Want a different visual for your music? Tap  > **Scene** and select a scene. If you want the scene to change for every song, select **Random**.

4. Tap the screen to display the lyrics in full screen.
5. To jump to another part of the song, tap the screen to make the progress bar appear. Press and drag your finger across the progress bar, or press and hold  or .



Not all languages are supported.

Finding music videos on YouTube

It's easy to find music videos of the song you're listening to on YouTube.

On the Now playing screen, tap **⋮** > **Search** > **YouTube**.

HTC Connect

What is HTC Connect?

With HTC Connect, wirelessly stream music or video from HTC One M9 to your speakers or TV by just swiping up the screen with 3 fingers.

You can stream media to any of the following types of devices:

- Blackfire™ compliant multi-room speakers
- Multi-room speakers that support the Qualcomm® AllPlay™ smart media platform
- DLNA compatible speakers and TV
- Miracast compatible display devices
- Bluetooth speakers
- HTC certified consumer electronic devices or accessories that have the HTC Connect logo:






Some devices may need to be paired before you can share to them.

To see a list of supported devices or accessories, go to htc-connect.com/certified-devices.html. For more information about HTC Connect, see www.htc-connect.com.


Using HTC Connect to share your media

Before you start, make sure you have set up your speakers, TV, or appliance to connect to your Wi-Fi network. Refer to its documentation on how to set it up.

1. Open and play any music or other media content that you want to share from HTC One M9.
2. Swipe up with three fingers on the screen.

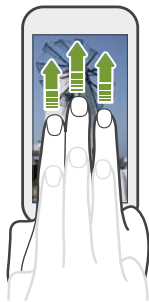

3. Choose the device you want to connect to.

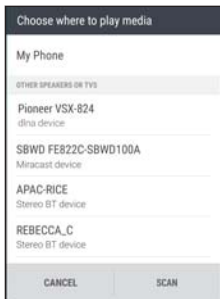

4. Once connected, use your phone to control the volume, pause or resume playback, and more.
5. To stop wireless media sharing and disconnect from the device, swipe down with three fingers on the screen.

Streaming music to Blackfire compliant speakers



Play music simultaneously to multiple Blackfire compliant speakers from HTC One M9.

Before you start, make sure your speakers are connected to your Wi-Fi network. Refer to the documentation that comes with your speakers to set up and connect them to your Wi-Fi network.

1. After connecting your speakers to your Wi-Fi network, open a music app on HTC One M9.
2. Swipe up with three fingers on the screen.
HTC One M9 then turns Wi-Fi on automatically and scans for media devices on your Wi-Fi network. You'll see the available speakers listed.
3. Tap the speaker you want to connect to.
4. In the music app, start playing music. You'll then hear the music play from the speaker you've selected.
5. To switch between speakers or to group them, swipe up the screen again with three fingers.
 - To stream music to another speaker, just tap it.

- To group speakers so that music plays through them at the same time, tap the **Group** button next to a speaker name, select the other speakers you want to group it with, and then tap **OK**.



Renaming the speakers

You can rename your Blackfire compliant speakers in Settings.

1. Make sure the speakers are connected to your Wi-Fi network.
2. From the Home screen, tap **⋮** > **Settings** > **HTC Connect**.
HTC One M9 then turns Wi-Fi on automatically and scans for media devices on your Wi-Fi network. You'll then see the available Blackfire speakers listed.
3. Tap **⋮** next to a speaker name.
4. Enter the new speaker name, and then tap **Done**.

Streaming music to speakers powered by the Qualcomm AllPlay smart media platform

Before you start, make sure your speakers are connected to your Wi-Fi network. Refer to the documentation that comes with your speakers to set up and connect them to your Wi-Fi network.

1. After connecting your speakers to your Wi-Fi network, open a music app on HTC One M9.
2. Swipe up with three fingers on the screen.
HTC One M9 then turns Wi-Fi on automatically and scans for media devices on your Wi-Fi network. You'll then see the available speakers listed.
3. Tap the speaker you want to connect to.
4. In the music app that you're using, start playing music. You'll then hear the music play from the speaker you've selected.
5. To switch between speakers or to group them, swipe up the screen again with three fingers.
 - Just tap another speaker to stream music to it.

- To group speakers so that music plays through them at the same time, tap the **Group** button next to a speaker name, select the other speakers you want to group it with, and then tap **OK**.



Power and storage management

Battery

Displaying the battery percentage

You can check the percentage of remaining battery power right from the status bar.

1. From the Home screen, tap **⋮** > **Settings** > **Power**.
2. Select **Show battery level**.

Checking battery usage

See a ranking list of apps that are using the battery. You can also see how much and how long the battery has been used for each app.

1. From the Home screen, tap **⋮** > **Settings** > **Power**.
2. Tap **Battery usage**, and then tap an app to check how it's using the battery. You'll see how much battery power is used by resources such as the CPU for the app and other use details.



If you see buttons while viewing an app's battery use details, you can tap them to adjust settings that affect battery usage, stop the app, and more.

Checking battery history

Check how long you've been using HTC One M9 since the last charge. You can also see a chart that shows how long the screen has been on, and how long you've been using connections like the mobile network or Wi-Fi.

1. From the Home screen, tap **⋮** > **Settings** > **Power**.
2. Tap **History**.
3. If you've used HTC One M9 for a long time since the last charge, swipe left or right to scale the graph that details battery usage over time.

You can also slide two fingers together or apart to scale the graph.

Extreme power saving mode

In times when you don't need to use much of your phone, turn Extreme power saving mode on to extend battery life longer. In this mode, standby time can last longer than usual, and you can only use the most basic functions such as phone calls, text messaging, and email.

1. From the Home screen, tap **⋮** > **Settings** > **Power**.
2. Tap the Extreme power saving mode **On/Off** switch to turn extreme power saving mode on or off.

If you want to set when to automatically switch this mode on, tap **Extreme power saving mode** and select a battery level.

Tips for extending battery life

How long the battery can last before it needs recharging depends on how you use HTC One M9. HTC One M9 power management helps to increase battery life.

If you like more control by tweaking settings on your own, try out some of these battery saving tips.

Check your battery usage

Monitoring your battery usage helps you identify what's using the most power so you can choose what to do about it. For details, see [Checking battery usage](#) on page 206.

Manage your connections

- Turn off wireless connections such as mobile data, Wi-Fi, or Bluetooth when not in use.
- Turn GPS on only when a precise location is needed, such as while using navigation or location-based apps. See [Turning location services on or off](#) on page 311.
- If the **Sleep mode** option in **Settings > Power** is enabled, at low peak times, your phone will turn off the data connection after the screen has been off for 15 minutes and there's no network activity (no downloads, streaming, or data usage). The data connection resumes when you switch the screen back on.
- Turn on Airplane mode when you don't need any wireless connections and you don't want to receive calls or messages.

Manage your display

Lowering the brightness, letting the display sleep when not in use, and keeping it simple helps save battery power.

- Use automatic brightness (the default), or manually lower the brightness.
- Set the screen timeout to a shorter time.
- Don't use a live wallpaper for your Home screen. Animation effects are nice to show off to other people but they drain your battery.
Changing your wallpaper to a plain, black background can also help a little. The less color is displayed, the less battery is used.

For more details, see [Settings and security](#) on page 311 and [Personalizing](#) on page 95.

Manage your apps

- Install the latest software and application updates. Updates sometimes include battery performance improvements.
- Uninstall or disable apps that you never use.

Many apps run processes or sync data in the background even when you're not using them. If there are apps that you don't need anymore, uninstall them.


If an app came preloaded and can't be uninstalled, disabling the app can still prevent it from continuously running or syncing data. See [Disabling an app](#) on page 317.


Limit background data and sync

Background data and sync can use a lot of battery power if you have many apps syncing data in the background. It's recommended not to let apps sync data too often.


Determine which apps can be set with longer sync times, or sync manually.

- In Settings, tap **Accounts & sync** and check what types of data are being synced in your online accounts. When the battery is starting to run low, temporarily disable syncing some data.
- If you have many email accounts, consider prolonging the sync time of some accounts.

In the Mail app, select an account, tap  > **Settings** > **Sync, Send & Receive**, and then adjust the settings under Sync schedule.

- When you're not traveling from one place to another, sync weather updates of only your current location, rather than in all of your named cities. Open the Weather app, and then tap  to edit and remove unneeded cities.
- Choose widgets wisely.

Some widgets constantly sync data. Consider removing the ones that are not important from your Home screen.

- In Play Store, tap  > **Settings**, and then clear **Add icon to Home screen** to avoid automatically adding Home screen app shortcuts whenever you've installed new apps. Also tap **Auto-update apps** > **Do not auto-update apps** if you're fine with updating apps from Play Store manually.

Other tips

To squeeze in a little bit more battery power, try these tips:

- Tone down the ringtone and media volume.
- Minimize the use of vibration or sound feedback. In Settings, tap **Sound & notification** and choose which ones you don't need and can disable.
- Check your apps' settings as you may find more options to optimize the battery.

Phone storage

Types of storage

Want to know what types of storage you can use for your apps, data, and files?

HTC One M9 has these storage types:

Phone storage	<p>This storage combines both the internal storage, where apps, email, data, and text messages are stored, and the file storage, where photos, videos, and music files are kept.</p> <p>If you are running out of phone storage, see Making more storage space on page 213 for some tips on how to free up space.</p>
Storage card	<p>Use a storage card for storing more files. You can also set some apps to store data or files directly to the card.</p>
USB storage	<p>When you plug in an external USB storage device (such as a USB flash drive or an SD card reader), you can view photos and videos stored on the device right from Gallery and play songs stored on the device in Music. You can also open PDFs and edit Office documents.</p> <p>You need a special cable to connect HTC One M9 and a USB storage device. HTC One M9 supports USB storage devices (except portable hard drives) up to 128 GB.</p>



- Moving apps to the storage card doesn't back up the apps. If you do a factory reset, your phone loses the apps. You'll need to reinstall them.
- When you remove the storage card and insert it in another phone, the apps on the storage card won't be installed automatically to the other phone. You'll need to reinstall them.

Copying files to or from HTC One M9

You can copy your music, photos, and other files to HTC One M9.



Save and close your files before copying them from your computer to HTC One M9, or vice versa.

1. Connect HTC One M9 to the computer using the supplied USB cable. You'll see options for viewing or importing files on the computer screen.
2. Choose to view files.
3. Copy the files from your computer to HTC One M9, or vice versa.
4. After copying the files, disconnect HTC One M9 from the computer.

Making more storage space

As you use HTC One M9, you'll accumulate data and fill its storage capacity over time. Here are some tips on how to increase storage space.

Run the storage wizard

Free up space in the storage by uninstalling apps and deleting files you no longer want to keep. In Settings, tap **Storage** > **Make more space**.

Manage photos and videos

- After taking continuous camera shots, keep only the best shot. Discard the rest, if you don't need them.
- After editing a photo or trimming a video, the original file is kept. Delete original files or move them elsewhere, such as to your computer.
- If you're only sending videos through MMS, use a lower resolution. Hi-res video takes up more space. In Camera settings, tap **Video Quality** to change the resolution.

Remove unused themes

Themes can quickly consume up storage space because themes can include images, sounds and icons. Remove themes you're not using. See [Deleting a theme](#) on page 99.

Back up data and files

Keep only the most recent data in your apps and files that you often need to use. You can back up your other data and files. For some tips, see [Ways of backing up files, data, and settings](#) on page 219.

Disable some apps

See [Disabling an app](#) on page 317.

Move some apps to the storage card

Some third-party apps can be moved from the phone storage to the storage card. Go to **Settings > App manager > On SD card** to see which apps can be moved. To move, tap an app, and then tap **Move**.



- Moving apps to the storage card doesn't back up the apps. If you do a factory reset, your phone loses the apps. You'll need to reinstall them.
- When you remove the storage card and insert it in another phone, the apps on the storage card won't be installed automatically to the other phone. You'll need to reinstall them.


File Manager

About File Manager

Use the File Manager app to browse and organize your files and folders on your phone storage and storage card.

You can also browse for files and folders on your external USB storage device when you have it connected to your phone. For details, see [Types of storage](#) on page 211.

Switching between storage types

1. From the Home screen, tap , and then find and tap **File Manager**.

2. Swipe left or right to switch to a file storage where you want to browse or organize your files.

Searching for files

1. In File Manager, tap **Q** .
2. In the search box, enter a few characters of the filename. Matching filenames from the root and subfolders are then displayed.
3. Tap a file to open it.


Sorting your files

1. In File Manager, tap **≡** > **Sort**.
2. Choose how you want to sort your files and folders.

Copying or moving files

1. In File Manager, browse for the file or folder.
2. Select items to copy or move.
3. Tap **Copy** or **Move to**.
4. Press **↵** , and then browse for the folder where you want to copy or move the files.
Or tap **≡** > **Create folder** to create a new folder.
5. Tap **Paste**.

Favoriting files

1. In File Manager, browse for the file or folder.
2. Select items to favorite.
3. Tap .

To remove an item from the Favorites tab, select the item and tap **Remove from favorites**.

Deleting files or folders



1. In File Manager, browse for the file or folder.
2. Select items to delete.
3. Tap **Delete**.

Sync, backup, and reset

Online sync

Adding your social networks, email accounts, and more




You can sync contacts, calendars, and other information from your social networks, email accounts, and online services on HTC One M9. Depending on the account type, signing in to your online accounts lets you sync updates between HTC One M9 and the Web.

1. From the Home screen, tap  > **Settings** > **Accounts & sync**.
2. Tap .
3. Tap the account type you want to add.
4. Follow the onscreen instructions to enter your account information.



- In **Settings** > **Accounts & sync**, tap the Auto sync **On/Off** switch to turn automatic sync of all your accounts.
- You can add several Google Accounts.

Syncing your accounts




1. From the Home screen, tap  > **Settings** > **Accounts & sync**.
2. Tap the Auto sync **On/Off** switch to turn automatic sync of all your accounts on or off.
3. To manually sync individual accounts, tap an account type, and then do one of the following:
 - Tap  next to the account you want to sync, and then tap **Sync now**.
 - Tap  > **Sync now** on the Account settings screen.



On the Account settings screen, you can also change the sync settings for an account.

Removing an account

Remove accounts from HTC One M9 if you no longer use them. Removing an account does not remove accounts and information from the online service itself.

1. From the Home screen, tap  > **Settings** > **Accounts & sync**.
2. Tap an account type.
3. Tap  next to the account you want to remove.
Or if you're on the Account settings screen, tap .
4. Tap **Remove**.



Some personal data may be retained by the third-party app after you have removed the account from HTC One M9.

Backup

Ways of backing up files, data, and settings

Worried that you might lose important stuff on HTC One M9? Back up HTC One M9 before you erase the storage, do a factory reset, or upgrade to a new phone.

HTC Sync Manager

Use HTC Sync Manager to import music, photos, and videos from HTC One M9 to your computer. You can also sync locally stored contacts, calendar events, bookmarks, and playlists between HTC One M9 and your computer.

Likewise, HTC Sync Manager is a good alternative if you don't want to back up your accounts, settings, and other personal content to the cloud. You can use it to create backups of HTC One M9 on your computer.

Other backup options

If you want, you can separately back up your data or files.

Some apps allow you to back up data to the phone storage or storage card so you can easily restore them after a factory reset. Just make sure not to erase the phone storage or storage card when you do a factory reset.



- Moving apps to the storage card doesn't back up the apps. If you do a factory reset, your phone loses the apps. You'll need to reinstall them.
- When you remove the storage card and insert it in another phone, the apps on the storage card won't be installed automatically to the other phone. You'll need to reinstall them.

Messages Back up your text messages to the phone storage or storage card, or save them as an email attachment.

Contacts

- Save contacts and other personal data to your online accounts so you can just sync them when switching to another phone.
- If you have locally stored contacts in the People app, export them to the phone storage or storage card.

Files Manually copy and paste files by connecting HTC One M9 to your computer as a disk drive.

Other data Check other apps to see if they support exporting data to the phone storage or storage card.

Verizon Cloud

Keep your digital lives connected, even when real life has you on the go. Sync and save your important photos, videos, music and documents with Verizon Cloud's storage. Go to verizonwireless.com/cloud.

Backing up your data locally

If you want to separately back up your content such as contacts and text messages on HTC One M9, here are some tips on how to export or import your data.

Backing up your contacts

1. From the Home screen, tap **⋮**, and then find and tap **People**.
2. On the People tab, tap **⋮** > **Manage contacts**.
3. Tap **Import/Export contacts** > **Export to phone storage** or **Export to SD card**.
4. Select an account or type of contacts to export.
5. To help protect your data, tap **Yes**, and then set a password for this backup. Be sure to remember this password. You'll need to enter it again when importing contacts.
If you don't need a password, tap **No**.
6. Tap **OK**.

Restoring contacts

1. On the People tab, tap **⋮** > **Manage contacts**.
2. Tap **Import/Export contacts** > **Import from phone storage** or **Import from SD card**.
3. If you have more than one account set up, tap the type for the imported contacts.
4. If you have multiple backups available, select the backup you want to import, and then tap **OK**.



5. Enter the password you've set for this backup, and then tap **OK**.

Backing up your text messages

Keep important text messages by backing them up to the phone storage. You can easily restore backed up text messages after you've deleted them from your message list.



Text messages in the secure box and blocked messages will not be backed up. To include such messages to your backup, move them first to the general message box.

1. From the Home screen, tap , and then find and tap **Messages**.
2. Tap  > **Back up/Restore SMS** > **Back up** > **Back up SMS**.
3. To help protect your data, set a password for your backup. Be sure to remember this password. You'll need to enter it again when restoring messages.
If you don't need a password, select **Do not password protect this backup**.
4. Enter a name for your backup file, and then tap **OK**.

Backing up text messages by email





You need to set up your email account in the Mail app.

1. From the Home screen, tap , and then find and tap **Messages**.
2. Tap  > **Back up/Restore SMS**.

3. Tap **Back up** > **Back up SMS via mail**.
4. To help protect your data, set a password for your backup. Be sure to remember this password. You'll need to enter it again when restoring messages.
If you don't need a password, select **Do not password protect this backup**.
5. Enter your email address.
6. Compose your email message, and then send it.

Restoring text messages

1. From the Home screen, tap , and then find and tap **Messages**.
2. Tap  > **Back up/Restore SMS** > **Restore**.
3. Choose how you want to restore the messages, and tap **Next**.
4. Tap the backup to import.
5. Enter the password you've set for this backup. If you didn't set a password, select **This backup file is not password protected**.
6. Tap **OK**.

To restore text messages that were backed up via email, open the email message with the backup file attachment from the Mail app. Tap the attachment to download it first, and then tap it again to open the backup file to import. Enter the password you've set for this backup or select **This backup file is not password protected**.

HTC Sync Manager

About HTC Sync Manager

HTC Sync Manager supports a computer running a Windows or Mac® operating system.

Here's what you can do with HTC Sync Manager.

View and manage media on your computer and phone

- Browse and manage music, photos, and videos that are on your computer and your phone.
- Import iTunes and Windows Media® Player playlists from your computer to HTC Sync Manager.
- Play music, videos, and playlists using the built-in player.

Transfer content

- Transfer iPhone photos, text messages, contacts, and more to your HTC phone. You can also find and install the same apps that you were using on your iPhone.
- Import all music, photos, and videos from your HTC phone to your computer.
- Copy selected music, photos, or videos from your computer to your phone.
- Import documents from your computer to your phone.

Back up and restore

Back up your HTC phone to your computer so you can easily restore your backup to the same phone or to another HTC phone.

Sync playlists and data

Sync music playlists and data such as contacts and calendar between your phone and your computer.

Installing HTC Sync Manager on your computer



- You can install HTC Sync Manager on Windows XP or later versions. To install it on a Mac computer, you need Mac OS 10.6 or later versions.
- If you have problem in installing HTC Sync Manager, close all your running programs and reinstall. If the problem persists, temporarily disable your anti-virus program and try installing again.

1. Download the HTC Sync Manager installer from the HTC support site: htc.com/hsm/.
2. Launch the installer and follow the onscreen instructions.
3. Connect your phone to your computer using the supplied USB cable. HTC Sync Manager opens.



If you disabled your anti-virus program, make sure to turn it back on after installing HTC Sync Manager.

Transferring iPhone content and apps to your HTC phone

With HTC Sync Manager, easily transfer iPhone content such as contacts, messages, wallpaper, camera photos, and more to your HTC phone. If you're using an HTC phone that has HTC Sense 6, HTC Sync Manager also enables your phone to find and install the same apps that you were using on your iPhone.



You need to use iTunes 9.0 or later to back up your iPhone content first to your computer.

1. Connect your iPhone and your HTC phone to your computer.
2. In HTC Sync Manager, click **Home > Transfer & Backup**.
3. Click the **Get Started** button.
4. If you haven't used iTunes to back up your iPhone content to your computer, please do so before proceeding.
5. Select your iPhone backup file, and then click **OK**.
6. Select the types of content you want to transfer to your HTC phone.
You can choose whether to replace the content on your HTC phone with the iPhone content.
7. Click **Start**. Wait for HTC Sync Manager to finish transferring content.


8. When done, slide open the Notifications panel on your HTC phone, and then tap .

Choose which apps you were using on iPhone you want to find in Google Play and download to your HTC phone.

Getting help

To find out more about using HTC Sync Manager, download the user guide PDF from the HTC support site (htc.com/hsm/). Or open the Help that comes with the software.



On Windows, click  in HTC Sync Manager, and then click **Help**.

Reset

Restarting HTC One M9 (Soft reset)

If HTC One M9 is running slower than normal, is unresponsive, or has an app that is not performing properly, try rebooting and see if that helps solve the problem.

1. If the display is off, press the POWER button to turn it back on.
2. Press and hold the POWER button, and then tap **Restart**.
3. When asked to confirm, tap **Restart**.

HTC One M9 not responding?

If HTC One M9 does not respond when you touch the screen or press the buttons, you can still restart it.

Press and hold the POWER and VOLUME UP buttons for at least 10 seconds. HTC One M9 then restarts.

Resetting HTC One M9 (Hard reset)

If HTC One M9 has a persistent problem that cannot be solved, you can perform a factory reset (also called a hard reset or master reset). A factory reset reverts the phone back to its initial state — the state before you turned on the phone for the first time.




Factory reset will remove all data on your phone storage, including apps you've downloaded and installed, your accounts, your files, as well as system and app data and settings. Be sure to back up any data and files you want to keep before you do a factory reset.



A factory reset may not permanently erase all data from your phone, including personal information.

Performing a factory reset from settings

1. From the Home screen, tap  > **Settings** > **Backup & reset**.

2. Tap **Reset phone**.

To also delete media and other data from your storage card, select **Erase SD card**.

3. Tap **OK**.

Performing a factory reset using hardware buttons

If you can't turn HTC One M9 on or access settings, you can still perform a factory reset by using the hardware buttons.


1. Press and hold the **VOLUME DOWN** button, and then press and hold the **POWER** button.
2. Wait for the phone to vibrate, and then release the **POWER** and **VOLUME DOWN** buttons.
3. When options appear, press **VOLUME DOWN** to select **FACTORY RESET**, and then press the **POWER** button.

People

Your contacts list

The People app lists all contacts you've stored on HTC One M9 and from online accounts you're logged in to. Use the People app to easily manage communications with people that matter to you.


1. From the Home screen, tap , and then find and tap **People**.

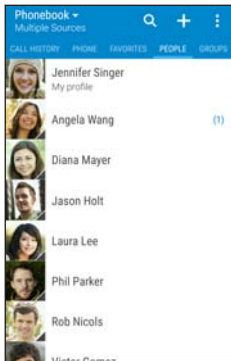

2. On your contacts list, you can:
 - View your profile and edit your contact information.

- Create, edit, find, or send contacts.
- Tap a contact photo to find ways to quickly connect with the contact.
- See when a contact has sent you new messages.



To sort your contacts by their first or last name, tap  > **Settings** > **Sort contacts by**.




Filtering your contacts list

When your contacts list gets long, you can choose which contact accounts to show.


1. On the People tab, tap ▼ .
2. Choose the accounts that contain the contacts you want to display.
3. Press ↶ .

Finding people

Search for contacts stored on HTC One M9, your company directory if you have an Exchange ActiveSync account, or social networks you've signed into.




1. From the Home screen, tap , and then find and tap **People**.
2. On the People tab, you can:
 - Find people in your contacts list. Tap , and then enter the first few letters of the contact name in the Search people box.
 - Find people on your company directory. Tap , enter the first few letters of the contact name in the Search people box, and then tap **Search contacts in your Company Directory**.



Aside from searching for a contact by name, you can search using a contact's email address or company name. On the People tab, tap  > **Settings** > **Search contacts by**, and then choose a search criteria.




Setting up your profile

Store your personal contact information to easily send it to other people.

1. From the Home screen, tap , and then find and tap **People**.
2. Tap **My profile**.
3. Tap **Edit my contact card**.
4. Enter or edit your name and contact details.
5. Tap  or the current photo to change your contact photo.
6. Tap .

Aside from your contact details, swipe to the Updates tab to see updates you've posted on your social networks.

Adding a new contact

1. From the Home screen, tap , and then find and tap **People**.
2. On the People tab, tap .
3. Tap the **Name** field, and then enter the contact name. Tap  to separately enter the contact's given, middle, or family name and name suffix, such as Jr.
4. Select the Contact type. This determines which account the contact will sync with.

5. Enter the contact information in the fields provided.
6. Tap ✓.

When you tap the added contact in your contacts list, you'll see the contact information and your exchange of messages and calls. Depending on the contact type, you may also see the person's social network updates or events.

How do I add an extension number to a contact number?



While creating a new contact or editing a contact's details in People, you can add an extension number to their number so you can skip the voice prompts when calling.

1. After entering the number of the main line, do one of the following:
 - Tap **P()** to insert a pause before the phone dials the extension number. To insert a longer pause, enter **P()** several times.
 - Tap **W()** to be prompted to confirm the extension number.
2. Enter the extension number.


Editing a contact's information




Social network contacts cannot be edited.

1. From the Home screen, tap , and then find and tap **People**.
2. On the People tab, press and hold the contact, and then tap **Edit contact**.
3. Enter the new information.
4. Tap .

Getting in touch with a contact

1. From the Home screen, tap , and then find and tap **People**.
2. Tap a contact's photo (not the name), and then choose how you want to get in touch with that contact.

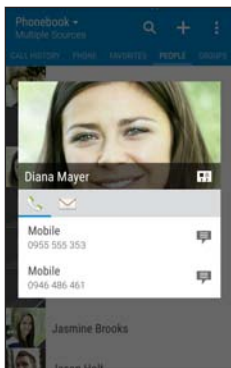

For more ways of getting in touch with your contact, tap an icon below the contact photo.

Importing or copying contacts

Importing contacts from your nano SIM card

1. From the Home screen, tap **⋮**, and then find and tap **People**.
2. On the People tab, tap **⋮** > **Manage contacts**.
3. Tap **Import/Export contacts** > **Import from SIM card**.
4. If prompted, select which account you'd like to import your contacts to.
5. Select the contacts you want to import.

6. Tap **Save**.

Importing a contact from an Exchange ActiveSync account

1. On the People tab, tap **Q** and enter the contact's name or email address in the search box.
2. Tap **Search contacts in your Company Directory**.
3. Tap the name of the contact you want copied to HTC One M9.
4. Tap **+** to import the contact.

Copying contacts from one account to another



Contacts from your social network accounts may not be copied.




1. On the People tab, tap **☰** > **Manage contacts**.
2. Tap **Copy contacts**, and then choose a contact type or online account to copy from.
3. Select a contact type or account you want to save to.

Merging contact information


Avoid duplicate entries by merging contact information from different sources, such as your social network accounts, into one contact.

Accepting contact link suggestions


When HTC One M9 finds contacts that can be merged, you'll see a link notification when you open the People app.

1. From the Home screen, tap , and then find and tap **People**.
2. On the People tab, tap the Contact link suggestion notification when available. You'll see a list of suggested contacts to merge.
3. Tap  next to the contact you want to merge. Otherwise, tap  to dismiss the link suggestion.





If you don't want to receive contact link suggestions, on the People tab, tap  > **Settings**. Clear the **Suggest contact link** option.

Manually merging contact information

1. On the People tab, tap the name of the contact (not the icon or photo) you want to link.
2. Tap  > **Link**.
3. You can:
 - Under **Suggest links**, link the contact to an account.

- Under **Add contact**, tap one of the options to link to another contact.

Breaking the link

1. On the People tab, tap the name of the contact (not the icon or photo) whose link you want to break.
2. Tap  > **Link**.
3. Under the **Linked contacts** section, tap  beside an account to break the link.


Sending contact information

1. From the Home screen, tap , and then find and tap **People**.
2. On the People tab, do one of the following:

To send	Do this
Someone's contact information	Press and hold the name of the contact (not the icon or photo), and then tap Send contact as vCard .
Your contact information	Press and hold My profile , and then tap Send my profile .

3. Choose how you want to send the vCard.
4. Select the type of information you want to send.
5. Tap **Send**.

Sending multiple contact cards




1. On the People tab, tap  > **Send contacts**.
2. Select the contacts whose contact information you want to share
3. Tap **Send**.
4. Choose how you want to send the contact cards.

Contact groups

Organize your friends, family, and colleagues into groups so you can quickly send a message or email to everyone in the group. We've also set up the Frequent group to automatically add the contacts you dial or get calls from the most.

HTC One M9 also syncs with groups you've created in your Google Account.

Creating a group

1. From the Home screen, tap , and then find and tap **People**.
2. On the Groups tab, tap .
3. Enter a name for the group, and then tap  > **Add contact to group**.
4. Select the contacts you want to add, and then tap **Save**.
5. When your group is complete, tap **Save**.

Sending a message or email to a group



You will be charged for each text message sent. For example, if you send a message to a group of five people, you will be charged for five messages.

1. On the Groups tab, tap the group you want to send a message or email to.
2. Go to the Group action tab.
3. Choose if you want to send a group message or group email.

Editing a group

1. On the Groups tab, press and hold the group, and then tap **Edit group**.
2. You can:
 - Change the group name. You can only change the name for groups that you have created.
 - Add more contacts to the group. Tap **⋮** > **Add contact to group**.
 - Select the contacts you want to remove from the group.
3. Tap **Save**.


Removing contact groups

1. On the Groups tab, tap **⋮** > **Edit groups**.
2. Select the contact groups you want to remove.
3. Tap **Save**.

Private contacts




If you don't want to show a contact's name and photo on the lock screen when you have an incoming call, add the contact to your private contacts list.

Adding a contact to the private contacts list

1. From the Home screen, tap , and then find and tap **People**.
2. On the People tab, press and hold the contact, and then tap **Add to private contacts**.

To view your private contacts list, on the People tab, tap  > **Manage contacts** > **Private contacts**.



Organizing your private contacts

1. On the People tab, tap  > **Manage contacts** > **Private contacts**.
2. To add contacts to the private contacts list, tap , select the contacts you want to add, and then tap **Save**.
3. To remove private contacts from the list, tap  > **Remove private contact**, select the contacts you want to remove, and then tap **Remove**.


Calendar and Email

Viewing the Calendar

Use the Calendar app to view your events, meetings, and appointments. If you've signed into your online accounts, related events will also appear in Calendar.

1. From the Home screen, tap , and then find and tap **Calendar**.
2. Tap , and then choose a calendar view.



If you see the current date  icon, tap it to return to the current date.

Month view

In month view, you will see markers on days that have events. Upcoming events for the day are also shown at the bottom of the screen.

- Swipe left or right across the screen to view succeeding or previous months.
- Tap a day to view the events for that day.
- Press and hold a day to see more options.

Day and agenda views

Day view shows your day's schedule and weather forecast for the next few days, while agenda view gives a quick glance of all your day's events.

- Swipe left or right across the screen to view succeeding or previous days.
- Tap an event to view its details.
- If the event is a contact's birthday or anniversary, tap it to send a greeting.



Need to see the event time in another time zone? In Day view, tap **⋮** > **Select 2nd time zone** > **Choose location**, and then enter the city name.

Week view

Week view displays a chart of the events of one week.


- Swipe left or right across the screen to view succeeding or previous weeks.
- Tap an event (shown as colored blocks) to view its details.
- Check the week number in the upper left corner of the chart.
- Select the day you start a week by tapping **⋮** > **Settings** > **First day of week**.



Scheduling or editing an event

You can create or edit events on HTC One M9, and also sync events with your Exchange ActiveSync calendar. You can also create, modify, and sync events with your Google calendar.




Editing events is not supported for all accounts.

1. From the Home screen, tap , and then find and tap **Calendar**.
2. On any Calendar view, do one of the following:

Create an event	Tap  . Tap  , and then select the calendar you will add the event to.
------------------------	---

Edit an event	View an event, and then tap  .
----------------------	---

3. Enter and set the event details. Aside from setting the event name, date, time, and location, you can:

Invite contacts from your Exchange ActiveSync or Google account	Tap  , and select the contacts you want to invite.
--	---

Set the event to repeat	Tap the Does not repeat button, and then select a repeat schedule. You can then set the repeat frequency and end date.
--------------------------------	---

Create an event note	While viewing the event details, tap Create note .
-----------------------------	---

4. Tap **Save**.




If you've invited people to the event, tap **Send** or **Send update**.

Checking your schedule for an event

Avoid juggling multiple meetings at the same time. In Calendar, you can check your appointments to see if a new event would conflict with your schedule.

1. When creating or editing an event, tap **Check calendar**.
2. Press and hold the event box, and then drag it to an available time slot.
3. Drag the top and bottom nodes to adjust the event's time duration. You'll see a message if there are conflicts with other scheduled events.
4. Tap **Done** to return to the event screen, and then save your event.

Choosing which calendars to show



1. From the Home screen, tap , and then find and tap **Calendar**.
2. Tap  > **Accounts (All calendars)** or **Accounts (Multi-calendar)**.
3. Select or clear an account you wish to show or hide.
If you have multiple calendars under an online account, tap  to select the items to include.
4. Tap **Save**.




Calendars are synced on HTC One M9, even if they are hidden.

Sharing an event

You can share a calendar event as a vCalendar using Bluetooth or by sending it as a file attachment with your email or message.

1. From the Home screen, tap , and then find and tap **Calendar**.
2. Do one of the following:
 - While viewing an event, tap  > **Share via**.
 - In day, agenda or week view, press and hold an event and then tap **Share via**.
3. Choose how you want to send the event.



You can also forward accepted meeting invitations from your Exchange ActiveSync calendar. While viewing an event, tap  > **Forward**. Compose your email message, and then send it.

Accepting or declining a meeting invitation

Switch to Invites view to see meeting invitations which you have not yet accepted or declined.



You must set up an Exchange ActiveSync account to receive meeting invitations in Calendar.

1. From the Home screen, tap , and then find and tap **Calendar**.
2. Tap  > **Invites**, and then tap a meeting invitation.


3. Accept, decline, or tentatively accept the invitation, or propose a new time.



Tap  to choose from more options, such as moving the invitation to a folder.


If you need to cancel an accepted meeting invitation or propose a new time, view the event details in Calendar, and then tap **Response**.

Dismissing or snoozing event reminders

If you have set at least one reminder for an event, the upcoming event icon  will appear in the notifications area of the status bar to remind you.

1. Slide the Notifications panel open.
2. If the notification shows that there are multiple reminders, tap it to see all the reminders. You can then choose to snooze or dismiss them.
3. If you see a single event notification, spread your two fingers on the notification to expand it. You can then:
 - Tap **Snooze** or **Dismiss**. Or drag the notification left or right to dismiss it.
 - Tap **Send mail** to send a quick response to the meeting attendees.






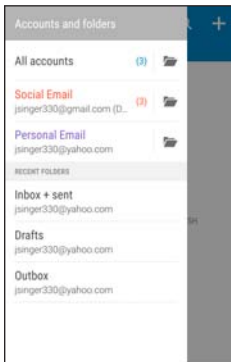
To edit the preset quick responses or add your own, open Calendar, and then tap  > **Settings** > **Quick response**.

If you don't want to dismiss or snooze the calendar reminders, press  from the Notifications panel to keep them pending in the notifications area of the status bar.

Checking your mail

The Mail app is where you read, send, and organize email messages from one or more email accounts that you've set up on HTC One M9.



1. From the Home screen, tap , and then find and tap **Mail**. The inbox of one of your email accounts appears.
2. Do any of the following:
 - Tap an email message to read.
 - To display email messages in another mail folder, tap  > **Folder**, and then tap the folder you want to view.
 - To switch between email accounts or view email messages from all your accounts, tap .





- To change an email account's settings, select the account first and then tap  > **Settings**.

Organizing your inbox


Do you have a big pile of email messages in your inbox? Organize your email messages into tabs and quickly find the messages you want.


1. Switch to the email account that you want to use.
2. In the inbox, tap  > **Edit tabs**.
3. Select the tabs you want to add to the inbox.
4. To arrange the tabs, drag , and then move the tab to its new location.
5. Tap **Done**.
6. Swipe to the added tab to check your email messages.

Sending an email message

1. From the Home screen, tap , and then find and tap **Mail**.
2. Switch to the email account that you want to use.
3. Tap .
4. Fill in one or more recipients.



Want to loop in more recipients in a carbon copy (Cc) or blind carbon copy (Bcc) of the email message? Tap  > **Show Cc/Bcc**.



5. Enter the subject, and then compose your message.
6. Do any of the following:
 - Add an attachment. Tap  and then choose what you want to attach.

- Set the priority for an important message. Tap  > **Set priority**.
7. Tap .




To save the email as draft and send it later, tap  > **Save**. Or press .

Resuming a draft email message

1. In an email account inbox, tap  > **Folder** > **Drafts**.
2. Tap the message.
3. When you finish editing the message, tap .

Reading and replying to an email message

1. From the Home screen, tap , and then find and tap **Mail**.
2. Switch to the email account you want to use.
3. In the email account inbox, tap the email message or conversation you want to read.



If you want to read a particular message inside an email conversation, tap  to expand the conversation, and then tap the email message.


4. Tap **Reply** or **Reply All**.



Tap  for more actions for the email.

Quickly replying to an email message

You can quickly respond to a new email message from the Home screen or lock screen.

1. When you receive a new email message notification, slide the Notifications panel down.
2. On the email preview, tap **Reply all**.
If you have several notifications and you don't see the email options, expand the email preview by sliding two fingers apart on the notification.
3. Compose your reply message and tap .

Saving an image in an email message



- Depending on your mail size limit settings, you may need to tap **Display images** to see images that are embedded in an email.
- Inline images may not display correctly when using certain mail accounts.

While viewing an email message, press and hold an embedded image, and then tap **Save image**. You'll find the saved image in the All downloads album in Gallery.

You can also copy the image to the clipboard or set it as your wallpaper.

Managing email messages

The Mail app provides easy ways to sort, move, or delete your email messages.

Sorting email messages


Customize how you sort your email messages.

In an email account inbox, tap  > **Sort**, and select from the sorting options.

Moving email messages to another folder

1. Switch to the email account you want to use.
2. Select the email messages you want to move.




To select all, select one email message first, and then tap  > **Select all**.

3. Tap **Move to**, and then select a folder.

Deleting email messages




1. Switch to the email account you want to use.
2. Select the email messages you want to delete.



To select all, select one email message first, and then tap  > **Select all**.

3. Tap **Delete**.

Searching email messages

1. From the Home screen, tap , and then find and tap **Mail**.
2. Tap .
3. If you want to refine or filter your search, tap , check the search options, and then tap **OK**. For example, you can focus the search on a part of an email or filter email messages that have attachments or tagged as high priority.
4. In the search box, enter the words you want to search for.
5. Tap a result to open the email message.

Searching for emails from a contact


Do you remember the sender, but can't find a particular email from him or her?

1. Switch to the email account you want to use.
2. Press and hold an email message from a contact.
3. Tap **Show all mail from sender**. A list of email messages from that contact appears.


Working with Exchange ActiveSync email

Enjoy the powerful email features of Microsoft Exchange ActiveSync right on HTC One M9. Flag important email messages, set your out of the office reply, or send invites to your next team meeting while you're on the go.


Flagging an email

1. From the Home screen, tap , and then find and tap **Mail**.
2. Switch to your Exchange ActiveSync account.
3. While viewing the inbox, tap the flag icon that appears beside an email message or conversation.




To flag an email message inside a conversation, tap  to expand the conversation, and then tap the flag icon of the email message.

Setting your Out of the office status

1. Switch to your Exchange ActiveSync account.
2. Tap  > **Out of the office**.
3. Tap your current office status, and then select **Out of the office**.
4. Set the dates and times.
5. Enter the auto-reply message.
6. If you want a different auto-reply message for recipients outside your organization, tap the **Send replies to external senders** option, and then enter the auto-reply message in the box.


7. Tap **Save**.



Sending a meeting request

1. Switch to your Exchange ActiveSync account.
2. Tap  > **New meeting invitation**.
3. Enter the meeting details.
4. Tap **Save**. Or tap **Send** if you've invited people to the meeting.

Adding an email account

Set up additional email accounts such as another Microsoft Exchange ActiveSync account or an account from a Web-based email service or email provider.

 If you're adding a Microsoft Exchange ActiveSync or a POP3/IMAP email account, ask your network administrator or email service provider for additional email settings that you may need.

1. From the Home screen, tap , and then find and tap **Mail**.
2. Tap  > **Add account**.
3. Select an email account type from the list of email providers. Otherwise, tap **Other (POP3/IMAP)**.
4. Enter the email address and password for your email account, and then tap **Next**.



Some email accounts allow you to set the sync schedule. By default, HTC One M9 uses Smart Sync to save battery power. See [What is Smart Sync?](#) on page 256.

5. Enter a name for your email account, and then tap **Finish setup**.

What is Smart Sync?

Smart Sync automatically extends the sync time the longer the Mail app is inactive. Set your email account to Smart Sync when you don't need to check new email messages frequently. Smart Sync helps save battery power.

If you want to receive email messages as they arrive, select another **Peak time sync** and **Off-peak sync** schedule in the email account's **Sync, Send & Receive** settings.

Google Search and apps

Google Now

Getting instant information with Google Now

Do you want to check the weather or your morning commute time before you start your day? Google Now™ delivers quick and up-to-date information that matters to you—all without the search.

Depending on your location, time of day, and previous Google searches, Google Now displays information cards that include:

- The day's weather and the weather forecast for upcoming days.
- The traffic conditions on your way to work or your commute back home.
- The directions and travel time to your next appointment.
- The next train or bus arriving at your platform or bus stop.
- Your favorite team's score and stats while you enjoy the game.
- Time or location based reminders that you can set.



Open the Google Search app to use Google Now. From the Home screen, tap , and then find and tap **Google**. Or just swipe up from the onscreen navigation buttons.

Setting up Google Now



Before setting up Google Now:




- Make sure that you're signed in to your Google account.
- Turn location services on and make sure that you have an Internet connection. For more information on location services, see [Turning location services on or off](#) on page 311.

1. From the Home screen, tap , and then find and tap **Google**.
2. Tap **Set up**.
3. Read the information screen and then tap **Yes, I'm in**. Google Now information cards will start to appear on the Google search screen.
4. To see all available information cards, swipe up the screen and tap **More**.
5. To keep a card from appearing on the Google search screen, tap  on the card you want to hide, and then tap **No**.

Depending on the information that you've allowed to share, more information cards will appear on the Google search screen as you use HTC One M9 to search the Web, create appointments, set reminders, and more.

Changing card settings

You can easily customize the settings of Google Now cards to suit your information needs. For example, you can change the weather units in the Weather card or your transportation mode in the Traffic card.




1. From the Home screen, tap , and then find and tap **Google**.
2. Do any of the following:
 - To change a card setting, such as the weather unit on the Weather card, tap , and then tap the arrow buttons when available.
 - To change specific card information such as your work address, sports teams, or stocks you follow, tap  on the search bar, and then tap **Customize**. Choose the information you want to change.

Setting reminders in Google Now

Creating reminders in Google Now is an easy way to keep tab of things to do. You can set time or location-based reminders. When the reminder time is up or when you've arrived at the specified location, Google Now displays the Reminder card in the Google search screen and sounds a notification to alert you.





This feature may not be available in all languages.

1. From the Home screen, tap , and then find and tap **Google**.
2. Tap , and then tap **Reminders**.
3. Tap .
4. Enter the reminder title, such as the task you want to be reminded of.

5. Select **When** to set a time-based reminder or **Where** to set a location-based reminder.
6. Set the reminder time or location details.
7. Tap ✓.

When the reminder time is due or when you've arrived at the location, the Reminder card will appear in the Google search screen. You can then dismiss or snooze the reminder.


Turning off Google Now

1. From the Home screen, tap , and then find and tap **Google**.
2. Tap , and then tap **Settings** > **Now cards**.
3. Tap the **On/Off** switch next to **Show cards**, and then tap **Turn off**.

Google Search

Searching HTC One M9 and the Web



You can search for information on HTC One M9 and on the Web. In the Google Search app, start your search by entering a keyword or by using Google Voice Search™.

To open Google Search, from the Home screen, tap , and then find and tap **Google**. Or just swipe up from the onscreen navigation buttons.



Some apps, such as People or Mail, have their own search function, which you can use to search only within those apps.

Performing searches on the Web and HTC One M9




1. From the Home screen, tap , and then find and tap **Google**.
If you've already set up a Google account on HTC One M9, you will be given the option to sign in to Google Now. To sign in to Google Now at a later time, tap . See [Getting instant information with Google Now](#) on page 257.
2. In the search box, enter what you want to search for. As you type, matching items on HTC One M9 and suggestions from Google web search are shown.
3. If what you're searching for is in the list of suggestions, tap the item to search for it or open it in its compatible app.





You can also filter web search results by tapping any of the categories on the filter bar at the bottom of the screen.


Searching the Web with your voice

Use Google Voice Search to find information on the Web by speaking to HTC One M9.

1. From the Home screen, tap , and then find and tap **Google**.
2. Tap , and then say what you want to search for. After speaking, matching items from Google web search are shown.
3. If what you're searching for is in the list, tap the item to open it in its compatible app. Otherwise, tap  to search again.

Setting search options


1. From the Home screen, tap , and then find and tap **Google**.
2. Tap , and then tap **Settings**.
3. Tap an option you want to set.

To get help or provide feedback, tap , and then tap **Help & feedback**.

Google Chrome

Browsing the Web


Visit your favorite websites or search the Web using Google Chrome™.



1. From the Home screen, tap , and then find and tap **Chrome**.
2. Tap the URL box at the top of the screen.
3. Enter the webpage address or search keywords.

4. On a webpage, you can:
 - Tap a link to open it, or press and hold a link to see more options.
 - Tap an email address to send a message to the email address.
 - Press and hold an image to save or copy it.


Using browser tabs

Open multiple browser tabs and quickly switch from one webpage to another.

From the Home screen, tap , and then find and tap **Chrome**.

- To add a browser tab, tap  > **New tab**. Repeat the same to open new browser tabs.
- To switch between tabs, tap  and then tap the tab you want to view.



You can turn off the feature that combines browser tabs with recent apps. Tap  > **Settings** > **Merge tabs and apps** and set it to off.



Setting browser options

Customize Google Chrome to suit your browsing style. You can set accessibility, privacy, security options, and more.

From the browser screen, tap  > **Settings**.

Bookmarking a webpage

Add your favorite webpages as bookmarks so you can access them quickly.

1. While viewing a webpage, tap  > .
2. On the Add Bookmark screen, you can edit the bookmark name and save the bookmark in a new category folder.

3. Tap **Save**.

To view and open a bookmark, tap **⋮** > **Bookmarks**. Navigate to the bookmark you want to open, and then tap it.

Clearing your browsing history

1. While viewing a webpage, tap **⋮** > **Settings** > **Privacy**, and then tap **Clear browsing data** at the top of the screen.
2. Choose which types of data to delete, and then tap **Clear**.

Private browsing

You can use incognito tabs to browse the Web with more privacy. Browser cookies are deleted and not shared when you close all incognito tabs. Pages you view in incognito also won't appear in your browser history (except for files you've downloaded).

From the browser screen, tap **⋮** > **New incognito tab**.

Google Drive

Using Google Drive on HTC One M9

Store your photos, documents, and other files on Google Drive to access them on HTC One M9, your computer, and your other mobile devices.

On HTC One M9, just use your Google Account to sign in to your Google Drive storage. You can then:

- Use Gallery to upload your captured photos to Google Drive.
- Share a link to your Google Drive files by email.


- View and edit Office documents that are stored in Google Drive. After creating new Office documents, you can also save them to Google Drive.
- View PDFs that are stored in Google Drive. You can also export Office documents as PDFs to Google Drive.
- Check your available Google Drive storage space in Settings.
- Use the Google Drive app to manage your online storage.




Uploading files requires you have the Drive app installed on HTC One M9. If this app is not preloaded, you can download and install it from Google Play.

Activating your free Google Drive storage

Use up to 115GB of free Google Drive storage. In addition to the default storage that you get from Google Drive, HTC One M9 features an additional 100GB of online storage free for two years. Sign in to your Google Account on HTC One M9—and not from your computer or other non-HTC phones—to claim this offer.

1. From the Home screen, tap , and then find and tap **Drive**.
2. If this is your first time to open the Drive app, walk through the product tour until you see the additional storage offer.

If you've opened this app before and currently don't see the screen for redeeming the offer, tap  > **Settings** > **Product Tour** to walk through the product tour.

3. On the screen that shows the additional storage offer, tap **Redeem**.
Or to claim the offer at a later time, tap **Offer Details** and check up to when you can redeem the offer.



- If the Drive app is not preloaded on your phone, download it from Google Play.
- Additional terms and requirements may apply, including a subscription fee, after your two-year trial expires. For details, refer to the terms and conditions on the Google Drive support site at support.google.com/drive/?p=drive_offers_htc.
- The Drive app is owned by Google and is not provided by or associated with HTC Corporation.

Checking your Google Drive storage space

In Settings, you can check your available Google Drive storage space.



Before your Google Drive storage info appears in Settings, you need to access your Google Drive from an HTC app first. For example, use the Mail app to share a link to your Google Drive file.



From the Home screen, tap **⋮** > **Settings** > **Storage**. Under Online storage, you'll see your Google Drive storage space.

You can also check your online storage space in the Drive app. Tap **☰**, and you'll see your storage space on the slideout menu.

From time to time, check back on how much online storage space you still have before you upload more content.

Uploading your photos and videos to Google Drive

Use Gallery to upload your photos and videos to Google Drive.

1. In Gallery, tap , and then choose how you want to view your photos and videos.
2. Tap an album or event that contains the photos and videos you want to upload.
3. Tap .
4. From the selection menu, tap **Drive**.
5. Select the photos and videos you want to upload, and then tap **Next**.
6. Choose or create a folder in Google Drive.
7. Tap **Save** to upload.

Google Maps

About Google Maps

Google Maps lets you track your current location, view real-time traffic situations, and receive detailed directions to your destination.








It also provides a search tool where you can locate places of interest or an address on a map, or view locations at street level.



- To find your location with Google Maps, you need to enable location sources.
- The Google Maps app does not cover every country or city.

Getting around maps

When you open Google Maps, you can easily find your location on the map or check out nearby places by panning and zooming in and out on the map.

1. From the Home screen, tap , and then find and tap **Maps**.
2. Tap  to show your current location. The blue marker  or  shows your current location on the map.
3. Tap  to turn Compass mode on. In Compass mode, the map orients itself depending on the direction you're facing. To exit Compass mode, tap .
4. If you want to see more information overlaid on the map, tap , and then tap a map view such as **Traffic** or **Public transit** to toggle the view on and off.

Navigating the map

You can navigate the map using finger gestures.

- Slide your finger in any direction to pan.
- Double-tap the map or slide two fingers apart over an area to zoom in.
To zoom in while holding the phone with one hand, double-tap with your thumb and hold the second tap, and then drag your thumb down.
- Double-tap the map with two fingers or slide two fingers together over an area to zoom out.
To zoom out while holding the phone with one hand, double-tap with your thumb and hold the second tap, and then drag your thumb up.
- Press and hold an area with two fingers and then drag your fingers in a circular motion to rotate the map.
- Press and hold an area with two fingers and then slide up to see an angled view of the map. Slide down to return to overhead view.

Searching for a location

Use Google Maps to search for a location, such as an address or a type of business or establishment (for example, museums).

1. From the Home screen, tap **📍**, and then find and tap **Maps**.
2. Tap the search box and then enter the place you want to search for.
3. Tap the **Enter** key on the keyboard or tap a suggested search item. If there is only one search result, it will be marked with a place marker 📍.





4. If there are multiple search results, they will be indicated by red dots or smart map icons. Swipe up from the bottom to see all of the search results.
5. If available, tap **≡** to narrow the search results.
6. Tap a card from the search results to check the address, get directions, see the location in Street View (if available), and more.

7. To check the next or previous location on the search, swipe the info sheet left or right.


To clear the map and search for another location, swipe the info sheet down (if it's expanded), and then tap **X**.

Getting directions

Get detailed directions to your destination. Google Maps provides travel directions by car, public transit, bike, or foot.

1. From the Home screen, tap , and then find and tap **Maps**.
2. Tap .
3. Choose how you want to get to your destination.
4. Use your current location as starting point, or tap **Your location** to enter your starting point or select a location from your search history.
5. Tap **Choose destination**, and then enter or select your destination.



If you're taking public transit, tap  to set the date and time of travel, or tap **Options** to set your route preferences.


6. Tap a route or transit option to view the directions on the map. You'll also see the travel duration on the info sheet at the bottom of the screen.
7. Tap the info sheet to view the directions in a list.

When you're finished viewing or following the directions, tap **X** to reset the map. Your destination is automatically saved in the Google Maps history.


YouTube


Watching videos on YouTube


Check out the latest video sensations using the YouTube app.

1. From the Home screen, tap , and then find and tap **YouTube**.
2. Browse or search for a video.
3. When you find the video that you like, tap it.



Want to watch the video at a later time instead? Tap  next to the video title, and then tap **Add to > Watch later**. You can access the video again from your account profile's Watch Later list.

4. While watching a video, you can:
 - Turn HTC One M9 sideways to watch the video in full screen.
 - Tap the video screen to pause or to resume playback, or drag the slider to jump to a different part of the video.
 - Scroll down the video information panel to see related videos and comments from other viewers.
 - Browse other videos by minimizing the video screen. Tap  or drag the video screen down to minimize. To close the video thumbnail, swipe it left or right.




Minimize the video screen, and then tap  to open the slideout menu. You can view your account profile and manage your subscriptions and video lists.


Creating video playlists

Organize your favorite videos into playlists and watch them in the YouTube app.



Make sure that you're signed in to your Google account.

1. From the Home screen, tap , and then find and tap **YouTube**.
2. Browse or search for a video.
3. Tap  next to the video title, and then tap **Add to > New playlist**.
4. Enter the playlist name, and then tap **OK**.
If you don't want to share the video playlist, select **Private** before you tap **OK**.
5. To add another video to your playlist, browse or search for the video, and then tap  next to the video title.
6. Tap **Add to**, and then tap the playlist name.

To access and watch your video playlists, minimize the video screen and then tap  to open the slideout menu. Tap the playlist you want.

Other apps

HTC Dot View

Personalizing HTC Dot View

If you bought the HTC Dot View™ case designed for HTC One M9, use its app to personalize what's seen through the case.


To use the app, tap  > **HTC Dot View**.




The HTC Dot View app is available in Google Play. Make sure to install the latest app update.


Wallpaper

Choose a preset wallpaper, or create your own dotted wallpaper from a photo.

1. In the HTC Dot View app, tap **Theme**.
2. Choose a preset pattern as your wallpaper.
To create your own wallpaper, tap , and then choose whether to use an existing photo from Gallery or take a new photo.
3. If you selected or taken a photo, crop the photo, and then tap **Done**.
4. Tap **Apply**.

For best results when creating your own wallpaper, use a simple image with distinct colors between the subject and background. For example, use an image that shows a high-contrast subject on a simple background.

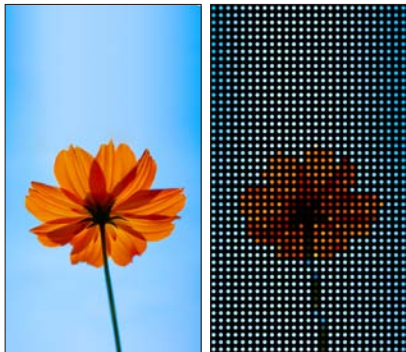

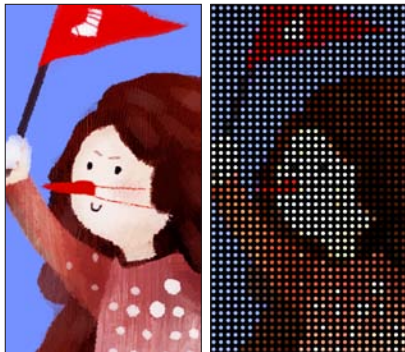

Types of notifications to display

Alerts for clock alarms, timers, and calendar events will automatically display through the HTC Dot View case. You can choose whether to display or hide notifications for apps—which include Mail, Messages, Phone, and more.

1. In the HTC Dot View app, tap **Notification settings**.
2. Choose which app notifications you want to show or hide.

Not seeing recent calls on HTC Dot View?

By default, up to 3 received or dialed numbers will be displayed on HTC Dot View.

- If you're not seeing them, open the HTC Dot View app, and then select **Show call history**.

- If you've set a screen lock with credentials, you need to select **Bypass security screen** to display the recent calls.

Music controls or app notifications not appearing on HTC Dot View?

Check if HTC Dot View Music Controls and Notifications are enabled in Settings.

1. Go to **Settings**, and then tap **Security > Notification access**.
2. Tap the **HTC Dot View Music Controls** and **HTC Dot View Notifications** options if they're not selected.

Need more details?

For more details, see the HTC Dot View Get started guide that comes with the case.

Kid Mode

Switching to Kid Mode

Use Kid Mode to let your kids have fun and learn on your phone without them accessing anything they shouldn't. While your kids enjoy a huge collection of games, videos, and storybooks, you can also check on their learning progress.

To learn more about Kid Mode, visit www.zoodles.com.



This feature may not be available on all phones.


Creating a child profile


You can add several child profiles to customize the learning experience for each of your kids.

1. From the Home screen, tap **⋮**, and then find and tap **Kid Mode**. The first time you use Kid Mode, you need to create or sign in to your account.
2. If prompted, follow the instructions on the screen to set a child lock.
3. Fill out the profile information, and then tap **Create profile**.
4. Tap **Finish**, or tap **Add a child** to create a new profile.

Exploring Kid Mode

Enjoy the different child-friendly activities in Kid Mode.

1. From the Home screen, tap , and then find and tap **Kid Mode**.
To easily switch to Kid Mode, you can also press and hold the POWER button, and then tap **Kid Mode**.
2. Tap a child profile.
3. To begin exploring Kid Mode, tap **Jungle**.
4. Tap the icons to access games and apps, record storybook readings, and more.

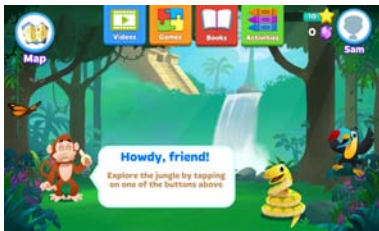

5. To exit the playground and return to the main screen, tap **Map > Profiles**.

Using the Parent Dashboard

The Parent Dashboard is where you can change the app settings, select learning subjects to promote, and more.

1. On the Kid Mode main screen, tap **Parent Dashboard**.

2. Tap **Continue to dashboard**.
3. Confirm your action by entering the required information.
4. Tap an option to change the settings or to review your child's activities on the app.

Promoting subjects for your child

Choose the learning subjects that you want your kids to focus on, even as they have fun in Kid Mode.

1. On Parent Dashboard, tap **Controls**.
2. On the Promote Subjects screen, drag the sliders of the different learning subjects to increase or decrease the related apps, games, and videos shown to your child.

Checking your kid's progress

1. On Parent Dashboard, tap **Overview**.
2. Tap > until you see details about your child's overall progress and time spent in each subject.

If you've upgraded to a premium plan, tap **Assessment** for more information on your child's learning goals.

Setting child-accessible apps in Kid Mode

When in Kid Mode, you can choose which apps on HTC One M9 your child will have access to.

1. On Parent Dashboard, tap **Controls**.

2. Tap **>** until you get to the Add your apps screen. You'll see a list of apps on HTC One M9.
3. Tap the plus button beside the app that you want your child to be able to use in Kid Mode.

Allowing incoming calls while in Kid Mode

Want to receive or block incoming calls while in Kid Mode?

1. On the Parent Dashboard, tap **≡** to open the slide-out menu.
2. Tap **Settings > Device**.
3. Tap **>**, and then select or clear the **Allow incoming calls** option.

Closing Kid Mode

On the Zoodles® main screen, tap **✕** and then confirm your action by entering the required information.


HTC Car

On the road with Car

Now when you drive, you can easily use HTC One M9 to reach your destination, keep you entertained, and help you stay in touch with the people that matter to you. Access music, phone calls, maps, and more with Car.

1. Car instantly launches when you mount HTC One M9 in HTC Car Kit.
2. Swipe up or down to see what you can do in Car.



When using Car, return to the main screen from any other screen by pressing .

When you remove HTC One M9 from HTC Car Kit, Car will automatically exit. You can also manually close Car by pressing  from the main screen.

Using voice commands in Car

Use your voice to control Car.



This feature may not be available in all languages.

1. In Car, tap the screen with three fingers to activate voice command mode.
2. Do one of the following:

Call someone	Say "Call [person's name in phonebook]"
Play music	Say "Play [song title, album, artist name, or genre]"
Find something on the map	Say "Navigate". When you hear Car ask you where you want to go, say the address or name of a point of interest.



You can also activate voice command mode by:

- Tapping **Speak** on the main screen in Car.
- Pressing the answer button on supported Bluetooth headsets.

Finding places in Car

1. In Car, tap **Navigation**.
2. To search for a place, tap **Q** and enter a location in the search box.
3. To look up a previously searched for place, tap **Previous**.
4. To get directions for an upcoming event in Calendar, tap **Appointments** and then tap an upcoming appointment.

Exploring what's around you

Feeling adventurous? With just a few taps, you can find interesting places around you quickly.

1. In Car, tap **Navigation**.
2. Tap a category, for example **Restaurant** or **Parking** to see what's available near you.
3. Tap **Q** to enter your own search keywords.

Playing music in Car

1. In Car, tap **Music**.
2. Swipe left or right to browse by category.
3. Tap **Q** to search your collection.
4. Tap an album, song, or playlist to listen to it.

Making phone calls in Car

- Tap **Dialer** to open the dialpad.
- Tap **People** and then browse a category or search by entering a name.
- Tap **Speak** and say "Call" and the person's name. For example, say "Call Jennifer Singer".

Handling incoming calls in Car

When you receive an incoming call, you can easily answer or decline.

- If you hear a voice prompt, say "yes" or "no" to answer or decline a call.
- Tap **Answer** or **Decline**.

Customizing Car

- To change the default behavior of Car, tap **Settings**.
- To add more apps to Car, tap **+** and select an app.







Scribble

Using Scribble





Want to make a page for your digital scrapbook? Use the Scribble app to get artistic and combine photos, text, and illustrations in a note.


With several templates to choose from, you can even create lists or track your budget. Have a greeting card ready and link it to your friend's birthday in Calendar to send in a few taps.



Composing a note

1. From the Home screen, tap , and then find and tap **Scribble**.
2. Choose a template when you're prompted. Or, tap .
3. In the box that says **Title text here**, type in your note title.
4. Use the editing tools to enter text, record audio, and more.
5. Draw figures and insert images such as photos and illustrations. To find out how, see [Inserting images and illustrations in a note](#) on page 285.
6. Tap  for other options, such as changing the template, linking the note to an event, and more.
7. Tap  or  to undo or redo your actions.
8. Press  to save the note.

Inserting images and illustrations in a note

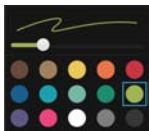1. While composing a note, you can:
 - Tap  to take a photo, or tap  > **Insert picture** to select an image from Gallery.
 - Tap  to draw, or tap  to write text. You can change the pen characteristics.



- Tap  to insert a sticker.
- 
- A grid of six stickers on a black background. The top row features a brown dog, a white dog, and a blue penguin. The bottom row features a blue fish, a black and white patterned object, and a yellow flower.
2. Press and hold an image to move, resize, or delete it. You can also use two fingers to rotate an image.

Creating a photo blog note

Think photos can best convey your story? Group photos into a note, and make it more entertaining by including photo collages, stickers, and more.



If inserting a collage, first group the photos in the same event or album in Gallery.

1. From the Home screen, tap , and then find and tap **Scribble**.
2. Tap  and choose the photo blog template.
3. Tap  to take a photo or select photos in Gallery to group them in a collage.



4. When inserting a collage, press and hold it, and then select a layout. You can also:
 - Press and hold, and then drag around a photo within the frame to put the subject in the center of the frame.
 - Press and hold, and then drag a photo over another to re-arrange them.
 - Slide two fingers apart to zoom in on a photo, or slide two fingers together to zoom out.
 - Tap another layout to change the current layout.

5. Tap the area above the date, and then use the editing tools to insert text and illustrations.
6. To add another page, tap **+**. You'll see an onscreen message if you reached the maximum number of pages.
7. Press **↩** to save the note.

Grouping notes into a notebook

- To group notes into a new notebook, tap **⋮** > **Group**.
- To group notes into an existing notebook, tap **⋮** > **Move to**.
- To create a new notebook, swipe to the Notebooks tab, and then tap **+**.

Publishing and sharing a note

Upload and share your creative work on the Web and get your own Scribble blog site.

1. With a note opened, tap **🌐**.
2. Tap **Share article**.
3. Select the account you want to use to publish the note to.
4. Type a description or tag your note.
5. Make sure that **Share your post** is selected.
6. Under **Share to**, tap where you also want to share the link that will be created. You'll be prompted to complete the action in the apps you selected.
7. Tap **Done**.

To view notes you've shared, swipe to the Share tab on the Scribble main screen.


Clock

Using the Clock

Get more from the Clock app than just the regular date and time. Use HTC One M9 as a world clock to see the date and time in cities across the globe. You can also set alarms or track your time using the stopwatch or timer.

Setting an alarm



You can set up one or more alarms.

1. From the Home screen, tap , and then find and tap **Clock**.
2. On the Alarms tab, select the check box of an alarm and then tap that alarm.
3. Under Set alarm, use the scroll wheels to set the alarm time.
4. If you want the alarm for multiple days, tap **Repeat**.
5. Tap **Done**.



- To turn off an alarm, clear the check box of that alarm.
- If you need to set more than three alarms, tap **+**.

Setting the date and time manually

1. From the Home screen, tap , and then find and tap **Clock**.
2. On the World Clock tab, tap  > **Local time settings**.

3. Clear **Automatic date & time** and **Automatic time zone**, and then set the time zone, date, and time as required.



To display military time, choose the Use **24-hour format** option.

VZ Navigator

Using VZ Navigator

Get premium GPS voice navigations and 3D maps with spoken real-time traffic alerts. Find movie times, event info and gas stations. For more information about VZ Navigator, visit: www.verizonwireless.com/vznavigator.

1. Open the VZ Navigator app.
2. Tap **Accept** on the message box.
3. Select the options you want on the VZ Navigator setup screen, and then tap **Accept**.
4. Do any of the following:
 - To use VZ Navigator, tap **Go To**. VZ Navigator provides maps, turn-by-turn 3D navigation, speech input and more so you can get to your destination on time. This is a subscribed service.
 - To use VZ Navigator Maps, tap **Map**. VZ Navigator Maps lets you access free maps with traffic and satellite views and more. You can do a search for local gas prices and points of interest and share your location by phone, email, or social network.


Internet connections

Data connection

When you turn on HTC One M9 for the first time, it will be automatically set up to use the mobile network of Verizon Wireless (if a nano SIM card is inserted).

Turning the data connection on or off

Turning your data connection off saves battery life and money on data charges.

1. From the Home screen, tap , and then find and tap **Settings**.
2. Tap the Mobile data **On/Off** switch to turn the data connection on and off.



If you don't have the data connection turned on and you're also not connected to a Wi-Fi network, you won't receive automatic updates to your email, social network accounts, and other synced information.

Turning data roaming on or off

Connect to Verizon Wireless partner networks and access data services when you're out of Verizon Wireless coverage area.



Using data services while roaming is not part of your subscribed monthly data access allowance. Check with Verizon Wireless for data roaming rates before you enable data roaming.

1. From the Home screen, tap **⋮**, and then find and tap **Settings**.
2. Tap **Mobile data > Data roaming**, and then select a data roaming option.

Managing your data usage

If you're on a limited data allowance, it's important to keep track of the activities and apps that usually send and receive data, such as browsing the web, syncing online accounts, and sending email or sharing status updates.

Here are some other examples:

- Streaming web videos and music
- Playing online games
- Downloading apps, maps, and files
- Refreshing apps to update info and feeds
- Uploading and backing up your files to your online storage account
- Using HTC One M9 as a Wi-Fi hotspot
- Sharing your mobile data connection by USB tethering


To help you save on data usage, connect to a Wi-Fi network whenever possible and set your online accounts and emails to sync less frequently.

Keeping track of your data usage


Monitor your data usage to help prevent going over your monthly data allowance.




Data usage measured by HTC One M9 may differ from, and be less than, your actual data usage.

1. From the Home screen, tap , and then find and tap **Settings**.
2. Under Wireless & Networks, tap **Data usage**.
3. On the Mobile tab, select **Limit mobile data usage** and tap **OK** to automatically disable your data connection when you reach the set limit.
4. Drag the upper **LIMIT** line to set your monthly data limit.
5. Select **Alert me about data usage**, and then drag the lower **ALERT** line to set an alert before you reach your monthly data limit.
6. Tap **Reset data usage**, and then set the day of the month when your usage cycle resets. This date is usually the start of your monthly billing cycle.



If you're connecting HTC One M9 to another portable Wi-Fi hotspot, tap  > **Mobile hotspots** to restrict background data from downloading that may incur extra data fees.

Viewing the data usage of apps

1. From the Home screen, tap , and then find and tap **Settings**.
2. Under Wireless & Networks, tap **Data usage**.
3. Scroll down the screen to see a list of apps and their data usage info.
4. Tap an app to see more details.


Wi-Fi connection

To use Wi-Fi, you need access to a wireless access point or “hotspot”.





The availability and strength of a Wi-Fi signal varies depending on objects the Wi-Fi signal has to pass through (such as buildings or a wall between rooms).


Turning Wi-Fi on or off

1. From the Home screen, tap , and then find and tap **Settings**.
2. Tap the Wi-Fi **On/Off** switch to turn Wi-Fi on or off.
3. Tap **Wi-Fi** to see a list of detected wireless networks.



- To manually scan for Wi-Fi networks, tap  > **Scan**.
- If the wireless network that you want is not listed, tap  > **Add network** to manually add it.

Connecting to a Wi-Fi network

1. Turn Wi-Fi on, and check the list of detected Wi-Fi networks. See [Turning Wi-Fi on or off](#) on page 293.
2. Tap a Wi-Fi network you want to connect to.
3. If you selected a secured network, enter the network key or password.
4. Tap **Connect**. You'll see the Wi-Fi icon  in the status bar when connected.

Disconnecting from the current wireless network

1. With two fingers, swipe down from the top of the screen to open Quick Settings.
2. If Wi-Fi connection is off, tap the **Wi-Fi** tile to turn it on.
3. Tap **⋮**. Detected Wi-Fi networks will be listed.
4. Tap the wireless network that HTC One M9 is connected to, and then tap **Disconnect**.

If you want to remove the settings for this network, press and hold the network name, and then tap **Forget network**.

Connecting to a different Wi-Fi network

1. With two fingers, swipe down from the top of the screen to open Quick Settings.
2. If Wi-Fi connection is off, tap the **Wi-Fi** tile to turn it on.
3. Tap **⋮**. Detected Wi-Fi networks will be listed.



To manually scan for available Wi-Fi networks, tap **⋮** > **Scan**.

4. Tap a Wi-Fi network to connect to it.

Wi-Fi Enhanced Connectivity

When you open an app that needs Internet connection, HTC One M9 automatically scans for available Wi-Fi networks when Wi-Fi is on.



Connecting to the Internet using Wi-Fi helps prevent you from going over your subscribed monthly data allowance while using data applications.

- When prompted, tap a Wi-Fi network to connect to, and then tap **Connect**. If you selected a secured network, you'll be asked to enter the network key or password.
- If you don't want to connect to a Wi-Fi network, tap **Not now**.

Turning off Wi-Fi Enhanced Connectivity

1. With two fingers, swipe down from the top of the screen to open Quick Settings.
2. If Wi-Fi connection is off, tap the **Wi-Fi** tile to turn it on.
3. Tap **⋮**.
4. Tap **⋮** > **Advanced**, and then clear the **Show Wi-Fi pop-up** option.

Connecting to VPN

Add virtual private networks (VPNs) so you can connect and access resources inside a local network, such as your corporate network.

Before you can connect to your organization's local network, you may be asked to:

- Install security certificates
- Enter your login credentials
- Download and install a required VPN app on HTC One M9

Contact your network administrator for details. Also, HTC One M9 must first establish a Wi-Fi or data connection before you can start a VPN connection.



Adding a VPN connection



You must first set a lock screen PIN or password before you can use credential storage and set up the VPN.

1. From the Home screen, tap **⋮**, and then find and tap **Settings**.
2. Under Wireless & Networks, tap **More**.
3. Tap **VPN > ⋮ > Add VPN profile**.
4. Enter the VPN settings and set them up according to the security details your network administrator gave you.
5. Tap **Save**.

Connecting to a VPN

1. From the Home screen, tap , and then find and tap **Settings**.
2. Under Wireless & Networks, tap **More**.
3. Tap **VPN**.
4. Tap the VPN that you want to connect to.
5. Enter your log in credentials, and then tap **Connect**. When you're connected, the VPN connected icon  appears in the notification area of the status bar.

You can then open the web browser to access resources such as your corporate network intranet.

Disconnecting from a VPN

1. Slide the Notifications panel open.
2. Tap the VPN notification, and then tap **Disconnect**.

Using HTC One M9 as a Mobile Hotspot

Share your data connection with other devices using Mobile Hotspot.



- Make sure the data connection is turned on.
- If you want to add a Mobile Hotspot plan, contact Verizon Wireless for details.

1. Go to Settings, and then under Wireless & networks, tap **More**.
2. Tap **Mobile network sharing > Mobile Hotspot**.
The first time you turn on the mobile hotspot, you'll need to set it up.
3. Enter a hotspot name or use the default.
4. Enter a password or use the default.



- The password is the key other people need to enter on their device so they can connect and use HTC One M9 as a wireless router.
- To help minimize security risks, use the default security settings.

5. Tap the Mobile Hotspot **On/Off** switch to turn it on.

HTC One M9 is ready to be used as a Mobile Hotspot when you see  on the status bar.



Devices connected to your Mobile Hotspot use data from your data plan.

Sharing your mobile data connection by USB tethering

No Internet connection available for your computer? No problem. Use the data connection of HTC One M9 to connect to the Internet.




- To make sure that the USB drivers for HTC One M9 are up-to-date, install the latest version of HTC Sync Manager on your computer.
- Mobile Broadband Connect is a subscribed service. Contact Verizon Wireless for details.
- Make sure that mobile data is turned on.

1. Go to Settings, and then under Wireless & networks, tap **More**.
2. Tap **Mobile network sharing**.
3. Tap **USB network setting**, and then select **Mobile Broadband Connect**.
4. Connect HTC One M9 to your computer using the provided USB cable. The next time HTC One M9 connects to a computer, it will remember your settings.

Wireless sharing

Bluetooth

Turning Bluetooth on or off

1. From the Home screen, tap , and then find and tap **Settings**.
2. Tap the Bluetooth **On/Off** switch to turn the Bluetooth connection on and off.
3. Tap **Bluetooth** to see a list of available devices.



Turn off Bluetooth when not in use to save battery power, or in places where using a wireless device is prohibited, such as on board an aircraft and in hospitals.

Connecting a Bluetooth headset

You can listen to music over a Bluetooth A2DP stereo headset, or have hands-free conversations using a compatible Bluetooth headset.



Before you connect your headset, make it discoverable so HTC One M9 can find it. Refer to your headset manual for details.

1. Turn Bluetooth on and check the list of available devices.
See [Turning Bluetooth on or off](#) on page 300.

1. If you don't see your headset listed, tap **Scan for devices** to refresh the list.
2. Tap the name of your headset in the Available Devices section. HTC One M9 pairs with the headset and the headset connection status is displayed in the Paired Devices section.
3. If prompted to enter a passcode, try 0000 or 1234, or consult the headset documentation to find the passcode.

When the Bluetooth headset is connected, you'll see  in the status bar.

Reconnecting a Bluetooth headset


Normally, you can easily reconnect your headset by switching on Bluetooth on HTC One M9, and then turning on the headset.

However, you might have to connect manually if your headset has been used with another Bluetooth device.

1. Turn Bluetooth on and check the list of paired devices.
See [Turning Bluetooth on or off](#) on page 300.
2. Tap the headset's name in the Paired Devices section.
3. If prompted to enter a passcode, try 0000 or 1234, or consult the headset documentation to find the passcode.

If you still cannot reconnect to the headset, follow the instructions in [Unpairing from a Bluetooth device](#) on page 302, and then follow the steps under [Connecting a Bluetooth headset](#) on page 300.

Unpairing from a Bluetooth device

1. Turn Bluetooth on and check the list of paired devices.
See [Turning Bluetooth on or off](#) on page 300.
2. In the Paired devices section, tap  next to the device to unpair.
3. Tap **Unpair**.


Receiving files using Bluetooth

HTC One M9 lets you receive various files with Bluetooth, including photos, music tracks, contact info, calendar events, and documents such as PDFs.



Refer to the device's documentation for instructions on sending information over Bluetooth.

1. Turn Bluetooth on.
See [Turning Bluetooth on or off](#) on page 300.
2. On the sending device, send one or more files to HTC One M9.
3. If asked, accept the pairing request on HTC One M9 and on the sending device. You may also be prompted to enter the same passcode or confirm the auto-generated passcode on both devices.
You'll then get a Bluetooth authorization request.
4. Tap **Pair**.
5. When HTC One M9 receives a file transfer request notification, slide the Notifications panel down, tap the incoming file notification, and then tap **Accept**.

6. When a file is transferred, a notification is displayed. Slide the Notifications panel down, and then tap the relevant notification to view the file.
7. You can also tap  > **Show received files** to view files received via Bluetooth.

NFC


Using NFC

With built-in NFC (near field communication) on HTC One M9, you can share content to another NFC-capable mobile device in an instant.



NFC may not be available in some phones.

Beam webpages, photos, contact information, and more by holding HTC One M9 and the other device back to back.

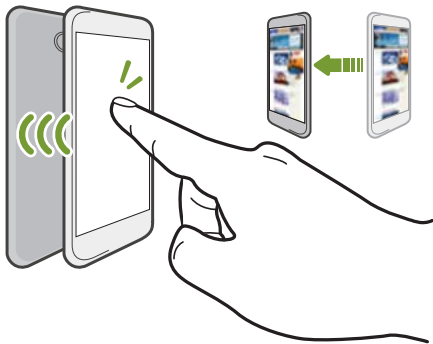

You can also use NFC for contactless payment. Contact Verizon Wireless to find out about the availability of NFC payment services.

Turning NFC on or off

1. Go to Settings, and then under Wireless & networks, tap **More**.
2. Tap the NFC **On/Off** switch to turn it on and off.


Beaming content



Make sure that both devices are unlocked and have NFC turned on. If the other device has an Android Beam™ option, make sure it is also turned on.

1. While viewing the content that you want to share, in the share options, tap **Android Beam**.

2. Hold HTC One M9 and the other phone back to back.

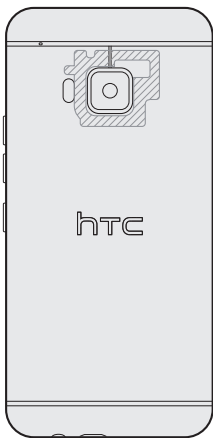

Make sure that the NFC area (shaded part) of HTC One M9 and the other phone's NFC area are close to one another. Experiment by slightly moving the phones until a connection is made.

3. Tap the screen.

The shared content appears on the other screen. For some items that you've shared (such as contact information), additional instructions on how to save the item will appear on the receiving device.

HTC Mini+

About HTC Mini+

Want to multitask and take calls, read text messages, and more while browsing the Web or watching videos? Buy the HTC Mini+ and use it with HTC One M9.

Here are some of the things you can do right on HTC Mini+:

- See instant notifications of text messages, calendar events, and email messages.
- Make and receive phone calls.
- View new text messages. Choose a preset response to send a quick reply, or call the sender.
- View ongoing and upcoming calendar events.
- Dismiss or snooze the alarm.
- Use as a laser pointer.
- Use as a remote control for HTC One M9. Remotely play music, control the shutter to take photos, or control a PowerPoint® presentation.

For complete details on how to use HTC Mini+, see its user guide.

Connecting HTC Mini+ to your phone

Use NFC or Bluetooth to pair and connect HTC Mini+ to your phone.



NFC may not be available in some phones.

You only need to pair once. The next time you turn on HTC Mini+, it will automatically reconnect to your phone.

For more convenience, you can purchase and pair with several HTC Mini+ devices. For instance, you can have a device in your living room, bedroom, and study room. You can pair your phone with all HTC Mini+ devices, but your phone can only connect to two at the same time. Disconnect an HTC Mini+ device first before connecting to another one.

Pairing via NFC



If you're using a protective case with your phone, remove it first before using NFC to pair and connect.

1. Go to Settings, and then under Wireless & networks, tap **More**.
2. Tap **HTC Mini+**.
3. Follow the instruction and illustration on your phone to turn HTC Mini+ on.
4. Tap **NFC**, and then tap **Next**.
5. Hold HTC Mini+ back-to-back with your phone until the phone vibrates.
6. Tap **Yes** when you're prompted to pair with HTC Mini+.

Pairing via Bluetooth

1. Go to Settings, and then under Wireless & networks, tap **More**.
2. Tap **HTC Mini+**.
3. Follow the instruction and illustration on your phone to turn HTC Mini+ on.
4. Tap **Bluetooth**, and then tap **Next**.
5. Follow the instruction and illustration on your phone to make HTC Mini+ discoverable via Bluetooth.
6. Tap **Connect**.


Disconnecting HTC Mini+

Slide the Notifications panel open, and then tap **HTC Mini+** to disconnect.

Managing HTC Mini+

While HTC Mini+ is connected, you can manage it from your phone. You can create your own Quick text replies to add to HTC Mini+, find the device if you misplaced it, and more.

1. Turn HTC Mini+ on.
2. On your phone, turn Bluetooth on. HTC Mini+ then automatically connects to your phone.
3. Go to Settings, and then under Wireless & networks, tap **More**.
4. Tap **HTC Mini+**.

5. Under Paired devices, tap  next to the HTC Mini+ device name, and then choose what you want to do.

Settings and security

Turning location services on or off

In order to find your location on HTC One M9, you need to enable location sources.

1. From the Home screen, tap **⋮** > **Settings** > **Location**.
2. Tap the **On/Off** switch to turn location services on and off.
3. Under Location sources, select the location mode you want. For example, for a better estimate of your location, choose **High accuracy**. To save battery power, choose **Battery saving**.

Turning off a location source (for example GPS) means no applications on HTC One M9 will collect your location data through that location source. However, third party applications may collect — and HTC One M9 may continue to provide — location data through other sources, including through Wi-Fi and signal triangulation.

Airplane mode

When you enable Airplane (Flight) mode, all wireless radios on HTC One M9 are turned off, including the call function, data services, Bluetooth, and Wi-Fi.

When you disable Airplane mode, the call function is turned back on and the previous state of Bluetooth and Wi-Fi is restored.




- You can manually turn Bluetooth and Wi-Fi back on after enabling Airplane mode.
- If USB tethering is turned on, enabling Airplane mode turns it off. You need to manually turn USB tethering on after you disable Airplane mode.

With two fingers, swipe down from the status bar to open the Quick Settings panel. Tap the **Airplane mode** tile to turn airplane mode on or off.

When enabled, the Airplane mode icon  is displayed in the status bar.

Scheduling when to turn data connection off

To help conserve power and data usage, you can set a time period when the data connection will automatically turn off during low peak times. This takes effect after the screen has been off for 15 minutes and there's no network activity (no downloads, streaming, or data usage).

1. From the Home screen, tap  > **Settings** > **Power**.
2. Tap **Sleep mode**.
3. To manually change the settings, clear **Learn sleep time automatically** if it's selected.

4. Under Sleep time, choose the start and end time when data connection is disabled.
5. Tap the Sleep mode **On/Off** switch to turn it on.

The data connection resumes when you switch the screen back on.

Automatic screen rotation



Automatic rotation is not supported in all applications.

1. From the Home screen, tap **⋮** > **Settings** > **Display & gestures** or **Display, gestures & buttons**.
2. Select or clear the **Auto-rotate screen** option to turn it on or off.

Setting when to turn off the screen

After a period of inactivity, the screen turns off to conserve battery power. You can set the idle time before the screen turns off.

1. From the Home screen, tap **⋮** > **Settings** > **Display & gestures** or **Display, gestures & buttons**.
2. Tap **Screen timeout**, and then tap the time before the screen turns off.

Screen brightness

1. From the Home screen, tap **⋮** > **Settings** > **Display & gestures** or **Display, gestures & buttons**.


2. Tap **Brightness level**.
3. With the **Automatic brightness** option selected, drag the slider to set the maximum brightness level. This sets a limit on how bright the screen will be when **Automatic brightness** is selected.
4. To set the brightness manually, clear the **Automatic brightness** option, and then drag the brightness slider to the left to decrease or to the right to increase the screen brightness.

Touch sounds and vibration

Some people like the sound or vibration feedback they get when touching the screen, and some don't. You can turn on or off various types of touch sounds and vibration on HTC One M9.

- Touch tones when tapping the phone dial pad
- Touch sounds when tapping onscreen items
- Screen lock sounds
- Pull-to-refresh sounds
- Vibration when pressing hardware buttons
- Touch sound and vibration when tapping the HTC Sense keyboard

Turning touch sounds and vibration on and off

1. From the Home screen, tap  > **Settings** > **Sound & notification**.
2. Under System, select the option you want to turn on or off.

Turning off keyboard sounds and vibration

1. From the Home screen, tap **⋮** > **Settings** > **Language & keyboard**.
2. Tap **HTC Sense Input**.
3. Tap **Sound feedback** and then select **None** to turn off keyboard sounds.
4. Clear the **Vibration feedback** option to turn off keyboard vibration.

Changing the display language

Changing the language adjusts the keyboard layout, date and time formatting, and more.

1. From the Home screen, tap **⋮** > **Settings** > **Language & keyboard**.
2. Tap **Language**, and then choose the language you want to use.

Glove mode

Turn Glove mode on so that the touch screen responds more accurately when you're wearing gloves.

1. From the Home screen, tap **⋮** > **Settings** > **Display & gestures** or **Display, gestures & buttons**.
2. Select the **Glove mode** option.

When Glove mode is turned on, you'll be able to see where you've tapped the touch screen.

Installing a digital certificate

Use client and Certificate Authority (CA) digital certificates to enable HTC One M9 to access VPN or secured Wi-Fi networks, and also to provide authentication to online secure servers. You can get a certificate from your system administrator or download it from sites that require authentication.







- You must set a lock screen PIN or password before installing a digital certificate.
- Some apps such as your browser or email client let you install certificates directly in the app. See the app's help for details.

1. Save the certificate file in the root folder on HTC One M9.
2. From the Home screen, tap **⋮** > **Settings** > **Security**.
3. Tap **Install from storage**.
4. Browse to the certificate and select it.
5. Enter a name for the certificate and select how it will be used.
6. Tap **OK**.

Pinning the current screen


For added security when showing your phone to someone else, use the screen pinning option to lock the display on the current app.

1. From the Home screen, tap **⋮** > **Settings** > **Security**.

2. Under **Advanced**, tap **Screen pinning**, and then tap the **On/Off** switch to turn it on.
3. On the **Apps** screen, open the app that you want.
4. Press , and then tap  on the app thumbnail.
5. When prompted, tap **Start**.
If you're using a lock screen, select the **Ask for unlock pattern before unpinning** option for added security.
6. To unpin the screen, press and hold  and  at the same.


Disabling an app

Apps, even if not used often, may be running in the background and downloading data. If an app cannot be uninstalled, you can disable it.

1. From the Home screen, tap  > **Settings** > **Apps**.
2. Swipe to the **All** tab.
3. Tap the app, and then tap **Disable**.

Assigning a PIN to a nano SIM card

You can help to protect the nano SIM card by assigning a Personal Identification Number (PIN).

1. From the Home screen, tap  > **Settings** > **Security**.
2. Tap **Set up SIM card lock**.
3. Choose to lock the card, enter 1111 as the default PIN of the card, and then tap **OK**.

4. To change the card PIN, tap **Change SIM PIN**.

Restoring a nano SIM card that has been locked out

If you enter the wrong PIN more times than the maximum number of attempts allowed, the card will become “PUK-locked.”

You need a Pin Unlock Key (PUK) code to restore access to HTC One M9. Contact Verizon Wireless for this code.

1. On the Phone dialer screen, enter the PUK code, and then tap **Next**.
2. Enter the new PIN you want to use, and then tap **Next**.
3. Enter the new PIN again, and then tap **OK**.

Accessibility features

HTC One M9 comes with features and settings that allow easy access and use of apps and functions.

Improve screen readability

If you have low vision, take advantage of these features to help improve screen readability.

- Increase the font size, use color inversion, or enable high-contrast text using the Accessibility settings. See [Accessibility settings](#) on page 320.
- Turn magnification gestures on. See [Turning Magnification gestures on or off](#) on page 320.

- Turn on automatic screen rotation. See [Automatic screen rotation](#) on page 313.

Get audible feedback

Use TalkBack to hear audible feedback on what you do on your phone. See [Navigating HTC One M9 with TalkBack](#) on page 321.

Use your voice

You can use your voice to perform an action on HTC One M9.

- Call a contact using your voice. See [Making a call with your voice](#) on page 175.
- Search for information on the Web using Google Voice Search. See [Searching the Web with your voice](#) on page 262.
- Enter text with your voice. See [Entering text by speaking](#) on page 93.


Use Motion Launch

Motion Launch combines a motion and finger gesture to perform an action such as waking HTC One M9 from sleep mode, launching the camera, or making a quick call. See [What is Motion Launch?](#) on page 71.

- Open Camera with Motion Launch Snap. See [Auto launching the camera with Motion Launch Snap](#) on page 76.
- Make a quick call using HTC One M9. See [Making a call with Quick call](#) on page 77.


Accessibility settings

Use these settings to turn accessibility functions or services on or off. When you've downloaded and installed an accessibility tool, such as a screen reader that provides voice feedback, you can also control them using these settings.

1. From the Home screen, tap  > **Settings** > **Accessibility**.
2. Tap or select the settings you want.

Turning Magnification gestures on or off

If you have low vision or would like to get a closer view of what's on the screen, use finger gestures to magnify portions of your phone's screen.

1. From the Home screen, tap  > **Settings** > **Accessibility**.
2. Tap **Magnification gestures** and read the instructions on how to use it.
3. Tap the **On/Off** switch to turn Magnification gestures on or off.

Navigating HTC One M9 with TalkBack

Use TalkBack if you need to navigate HTC One M9 by spoken feedback. When you touch the screen, HTC One M9 vibrates and gives you an audible response so you know what you are touching.



Not all languages are supported.

Turning TalkBack on

1. From the Home screen, tap **⋮** > **Settings** > **Accessibility**.
2. Tap **TalkBack**, and then tap the **On/Off** switch.
3. Read the TalkBack disclaimer and then tap **OK**.

A short tutorial explaining how to use TalkBack will begin playing after you turn on TalkBack.



TalkBack works best if you turn off automatic screen rotation.

Turning Explore by touch on or off

Explore by touch allows HTC One M9 to respond to shortcut gestures and screen touches with audible feedback. While Explore by touch is enabled when you turn on TalkBack, you can turn it off.

1. From the Home screen, tap **⋮** > **Settings** > **Accessibility**.

2. Tap **TalkBack**, and then tap **⋮** > **Settings**.
3. Under Touch exploration, clear the **Explore by touch** option.

You will no longer hear audible feedback from HTC One M9.

Using TalkBack gestures

When TalkBack is turned on and the Explore by touch setting is selected, the regular touch gestures are replaced by the TalkBack gestures.



Media gestures such as 3-finger swiping may not be available when TalkBack gestures are enabled.

Do one of the following:

Open an item	<ol style="list-style-type: none">1. Drag your finger on the screen to find and select the item.2. Double-tap anywhere on the screen to open the item.
Move an item	<ol style="list-style-type: none">1. Drag your finger on the screen to find the item.2. Double-tap anywhere on the screen, but don't lift your finger on the second tap.3. Drag the item to a new spot and then lift your finger.
Scroll through a screen	Use two fingers to swipe up, down, left or right.
Unlock the lock screen	Use two fingers to swipe up from the bottom of the screen.

Open the Notifications panel Use two fingers to swipe down from the top of the screen.

Assigning TalkBack shortcuts

TalkBack has customizable gestures that can be used to open the Notifications panel, view recent apps, access TalkBack controls, and more.

F The steps below are described using the regular gestures. Use the corresponding TalkBack gestures if you already have TalkBack turned on.

1. From the Home screen, tap **⋮** > **Settings** > **Accessibility**.
2. Tap **TalkBack**, and then tap **⋮** > **Settings** > **Manage gestures**.
3. Tap any of the shortcut gestures, and then select an action.

Using TalkBack context menus

TalkBack has context menus for controlling continuous reading and global TalkBack controls. These menus can be accessed using TalkBack shortcut gestures.

1. Turn TalkBack on.
2. Do one of the following:
 - To open the continuous reading menu, use one finger to swipe up and right in one continuous movement.
 - To open the global context menu, use one finger to swipe down and right in one continuous movement.



If you already changed the TalkBack shortcut gestures, check your TalkBack settings for the appropriate gesture.

3. Press and hold anywhere on the screen.
4. Drag your finger around the screen to explore the options.




To cancel an action, drag your finger to your starting position.

Changing the TalkBack reading speed



The steps below are described using the regular gestures. Use the corresponding TalkBack gestures if you already have TalkBack turned on.

1. From the Home screen, tap  > **Settings** > **Accessibility**.
2. Tap **Text-to-speech output** > **Speech rate**.
3. Select a speech rate.



You can test the speech rate by tapping **Listen to an example**.

TalkBack language settings



1. From the Home screen, tap  > **Settings** > **Accessibility**.

2. Tap **Text-to-speech output** > **Google Text-to-speech Engine**, and do one of the following:

Select a different language

Tap **Language**.

Install a voice

Tap **Install voice data**, and then tap the language. Tap  next to the voice data you want to install. When installation is completed, press  twice and tap **Language**.

3. Select the language you want to use.



Not all languages are supported.

Trademarks and copyrights

©2015 HTC Corporation. All Rights Reserved.

Dolby Audio manufactured under license from Dolby Laboratories. Dolby and Dolby Audio are trademarks of Dolby Laboratories.

HTC, the HTC logo, HTC One, the HTC One logo, HTC BlinkFeed, HTC BoomSound, HTC Connect, HTC Dot View, HTC Sense, Motion Launch, VideoPic, UltraPixel, Zoe, and all other HTC product and feature names are trademarks or registered trademarks in the U.S. and/or other countries of HTC Corporation and its affiliates. Zoodles and Kid Mode are trademarks of Inquisitive Minds, Inc.

Google, Android, Android Beam, Google Chrome, Google Drive, Google Maps, Google Now, Google Play, Google Voice Search, Google Wallet, and YouTube are trademarks of Google Inc.

Microsoft, Windows, ActiveSync, PowerPoint, Outlook.com, and Windows Media are either registered trademarks or trademarks of Microsoft Corporation in the United States and/or other countries.

The Bluetooth® word mark and logos are registered trademarks owned by Bluetooth SIG, Inc.

Wi-Fi® and Miracast are registered trademarks of the Wireless Fidelity Alliance, Inc.

LTE is a trademark of European Telecommunications Standards Institute (ETSI).

DLNA is a trademark or registered trademark of Digital Living Network Alliance. All rights reserved. Unauthorized use is strictly prohibited.

Qualcomm is a trademark of Qualcomm Incorporated, registered in the United States, and other countries and used with permission. AllPlay is a trademark of Qualcomm Connected Experiences, Inc., and used with permission.

BLACKFIRE RESEARCH™ is a Registered Trademark (No. 3,898,359) of BLACKFIRE RESEARCH CORP.

Dropbox is a trademark of Dropbox, Inc.

iCloud, iPhone, iTunes, and Mac OS are trademarks of Apple Inc. registered in the U.S. and other countries.

microSD is a trademark of SD-3C LLC.

Foursquare is a trademark of Foursquare Labs, Inc.

Facebook is a trademark of Facebook, Inc.

FLICKR is a trademark of Yahoo! Inc.

All other trademarks and service marks mentioned herein, including company names, product names, service names and logos, are the property of their respective owners and their use herein does not indicate an affiliation with, association with, or endorsement of or by HTC Corporation. Not all marks listed necessarily appear in this User Guide.

The HTC Sync Manager software can be used with materials that you own or are lawfully authorized to use and/or duplicate. Unauthorized use and/or duplication of copyrighted material may be a violation of copyright law in the United States and/or other countries/regions. Violation of U.S. and international copyright laws may subject you to significant civil and/or criminal penalties. HTC Corporation shall not be held responsible for any damages or losses (direct or indirect) that you may incur as a result of using this software.

Screen images contained herein are simulated. HTC shall not be liable for technical or editorial errors or omissions contained herein, nor for incidental or consequential damages resulting from furnishing this material. The information is provided “as is” without warranty of any kind and is subject to change without notice. HTC also reserves the right to revise the content of this document at any time without prior notice.

No part of this document may be reproduced or transmitted in any form or by any means, electronic or mechanical, including photocopying, recording or storing in a retrieval system, or translated into any language in any form without prior written permission of HTC.

Index

A

Accounts

- syncing 217

Airplane mode 312

Alarms

- setting 288

Android Beam

- See NFC

Apps

- arranging 109
- grouping into a folder 109, 110
- hiding or unhiding 111
- icons on Home screen 105
- installing 47
- installing from Google Play 45
- installing from the web 47
- on Home screen 105
- restoring 46
- uninstalling 48
- updating 43

Auto Selfie 130

B

Backup

- about 219
- HTC Sync Manager 224
- options 219
- restoring backed up apps 46

Battery

- charging 29
- checking usage 206
- saving battery power 208

BlinkFeed

- See HTC BlinkFeed

Bluetooth

- connecting a Bluetooth headset 300
- receiving information 302

Bokeh 127

Browser

- bookmarks 263
- using 262

Burst mode 126

C

Calendar 242–247

- creating an event 244
- dual time zone 243
- meeting conflicts 245
- meeting invitations 246
- reminders 247
- sending quick response 247
- views 242

Call history 180

Camera

- basics 119, 121, 123
- Bokeh 127
- capture modes 120
- continuous shooting 126
- flash 121

- HDR 138
- manual settings 139
- Pan 360 136
- Photo Booth 132
- Portrait scene 128
- recording a video 123
- selfie 128, 130–132
- slow motion 139
- Split Capture 133
- standby 119
- sweep panorama 135
- taking a photo 121
- taking photo while recording 124
- using volume buttons as controls 124
- video resolution 124
- zooming 120

Capture modes

- modifying and saving 140
- switching to 120

Capture screen 66

Car

- about 280
- handling calls 283
- HTC Car Kit 280
- navigation 282
- playing music 283
- voice commands 281

Change phone language 315

Clock 288

- alarm 288
- setting date and time 288

Conference call 179

Contacts

- adding 232
- copying contacts 37, 235
- importing contacts 37, 235, 236
- transferring contacts 37, 235

Continuous shooting 126

Copy

- files 212

Copying

- text 87

D

Data connection 290

- turning on or off 290

Data transferiPhone

- from iCloud 36

Data transfer

- from Android phone 34
- from iPhone 35
- through Bluetooth 36
- transferring contacts 37

Display

- changing the time before the screen turns off 313
- screen brightness 313
- screen rotation 313
- Sleep mode 52

Double exposure 166

Driving

See Car

E

Email

See Mail

Exchange ActiveSync

- flagging an email 254
- meeting request 255
- Out of office 254
- sending a meeting request 255

expanded storage 211

F

- Face Fusion 170
 - Face Tracking 172
 - Face unlock 80
 - Factory reset 228
 - Files
 - copying 212
 - Finger gestures 57
 - Firmware
 - See Software update
 - Folder
 - grouping apps 109
 - grouping bookmarks 263
 - removing items 109, 111
 - FOTA
 - See Software update
-

G

- Gallery 142–144, 152, 153, 155, 157, 159–162, 164–166, 170
 - creating animated gif 160
 - creating sequence shots 161
 - custom effects 157
 - editing group shots 159
 - editing photos 155
 - Face Fusion 170
 - removing objects in photo 162
 - Video Highlights
 - See Zoe
 - video trimming 152
 - viewing photos and videos 143
 - viewing photos and videos by event 142
 - viewing photos by location 144
 - watching videos 152

- Geotag 143
 - Gestures
 - motion gestures 53
 - touch gestures 57
 - Google Drive
 - about 264
 - storage space 266
 - uploading photos and videos 267
 - Google Maps 267
 - Google Now 257, 258, 260
 - setting up 258
 - turning off 260
 - Google Play
 - installing apps 45
 - refund 48
 - Google Voice Search 262
 - GPS (Global Positioning System)
 - See Location settings
 - Group messaging 187
-

H

- Hands free 300
- Hard reset
 - See Factory reset
- HDR 138
- Headphones
 - See Bluetooth
- Home screen
 - adding or removing widget panel 106
 - apps 105
 - arranging widget panels 106
 - changing your main Home screen 108
 - feeds 112
 - folder 109
 - launch bar 103
 - rearranging widgets and icons 106

- removing widgets and icons 106
 - shortcuts 105
 - wallpaper 101
 - widget panel 49
 - widgets 104
- HTC BlinkFeed
- about 112
 - adding regional editions 116
 - deleting items 118
 - posting to social networks 118
 - saving articles for later 117
 - selecting feeds 115
 - setting up custom topics 116
 - showing social network and app feeds 116
 - turning on or off 113
- HTC Car
- See Car
- HTC Clock 288
- setting an alarm 288
- HTC Connect
- about 199
 - streaming music to speakers 202, 204
 - streaming music, videos, or photos to media devices 200
- HTC Mini+ 307–309
- adding Quick text 309
 - disconnecting 308
 - find feature 309
 - pairing and connecting 308
 - renaming 309
 - unpairing 309
- HTC Sense version 42
- HTC Sync Manager 224

I

Idle screen

- See Lock screen

Internet

- browser 262

Internet connection

- data connection 290
- VPN 296
- Wi-Fi 293

K

Keyboard

- dictionary 92
- entering text 89
- entering text by speaking 93
- HTC Sense keyboard 88
- layout 90
- multi-language keyboard 90
- predictive text 91
- shortcuts 92
- speech recognition 93

Kid mode

- choosing apps 279
- closing 280

L

Language

- system language 315

Live Makeup 130

Location settings 311

Lock screen

- answering a call 178

- dismissing an alarm 52
- opening an app 64
- rejecting a call 178
- unlocking 52

Low battery 208

Low storage 213

M

Mail

- attachments 249
- carbon copy, blind copy (cc, bcc) 249
- deleting 252
- draft 249
- replying 250
- searching 253
- sending 249
- sorting 252

Mail folders

- moving email messages 252

Making calls

- calling 174

Maps

- Google Maps 267

Master reset

- See Factory reset

Media streaming

- See HTC Connect

Meeting request 255

Messages

- deleting a conversation 190
- draft message 185, 186, 188
- forwarding 189
- group SMS 187
- locking 190
- replying 188
- sending 185, 186

microSD card 26

MMS

- See Multimedia message

Morph

- See Face Fusion

Multimedia message

- attachment 186
- group MMS 187
- sending 186

Music

- adding a song to a queue 195
- album covers 196
- artist photos 196
- listening 193
- lyrics 198
- playing music from the Lock screen 193
- playlist 194
- setting a song as ringtone 196
- transferring from iPhone 226

N

Navigation

- See Car

NFC (Near Field Communication) 304

Notifications

- panel 84

O

Online accounts

- adding accounts 217
- removing accounts 218
- syncing manually 218
- what can you sync with 217

Online storage

- Google Drive 264

P

Pair a Bluetooth headset 300

Pan 360 136

People

- adding a new contact 232
- contact groups 239
- contact link suggestions 237
- copying contacts 37, 235, 236
- editing contacts 234
- filtering your contacts 231
- groups 239
- importing contacts 37, 235
- merging contact information 237
- personal profile 232
- sending contact information 238
- transferring contacts 37, 235

Phone calls

- blocking a call 181
- call history 180
- calling 174
- conference call 179
- emergency call 177
- extension number 175
- Face Tracking 172
- missed calls 176
- Motion Launch 77
- muting the microphone 179
- receiving calls 178
- Screen Share 174
- Smart Dial 174
- speakerphone 179
- speed dial 176

Phone information 42

Phone settings

- See Settings

Phone updates 42

Photo Booth 132

Photo shapes 164

Photos

- custom effects 157
- location 144
- transferring from computer 38
- transferring from iPhone 226
- viewing photos and videos 143
- viewing photos and videos by event 142
- viewing photos by location 144

Power

- charging the battery 29
- checking battery usage 206
- saving power 208
- sleep mode 52

Print screen

- See Capture screen

Prismatic 165

PUK (PIN Unblock Key) 318

Q

Quick call 77

Quick settings 39

R

Recent apps 64

Reset 227, 228

Ringtone

- editing 197
- setting song as ringtone 196

S

- Screen 52, 66, 313
 - adjusting brightness 313
 - capture 66
 - changing the time before the screen turns off 313
 - idle screen 52
 - rotation 313
 - Sleep mode settings 313
- Screen lock 80
- Screen Share 174
- Screen shot
 - See Capture screen
- Scribble
 - about 284
 - composing a note 284
 - grouping notes 287
 - inserting images 285
 - photo blog template 286
 - templates 284
- SD card 26
- Search
 - searching phone and Web 260
 - voice search 262
- Security
 - protecting phone with screen lock 80
- self-timer 132
- selfie
 - Auto Selfie 130
 - Live Makeup 130
 - self-timer 132
 - Voice Selfie 131
- Sense Home
 - adding apps to widget 70
 - changing addresses 68
 - manually switching locations 69
 - pinning apps in widget 69
 - setting up widget 67
 - smart folders in widget 70
 - unpinning apps in widget 69
 - widget 67
- Settings
 - About 42
 - Accessibility 320
 - display language 315
 - Storage 211
- Setup
 - contacts from old phone 37
 - first-time setup 32
 - photos, music, videos from old phone 38
- Shapes 162
- Sharing
 - events 246
 - text 88
- sharing phone screen 174
- Shortcuts 64
- Sleep mode 52
- Slideshow
 - highlight video 153
- Slow motion video 139
- SMS
 - See Messages
- Soft reset 227
- Software update 42
- Sound
 - ringtone, notifications, and alarm 101
 - switching profiles 181
- Speakerphone 179
- Speed dial 176
- Split Capture 133
- Storage 211
- Sweep panorama 135
- Sync
 - HTC Sync Manager 224

T

- Text message 185
 - Themes 95–97, 99
 - bookmarking 96
 - creating 96
 - deleting 99
 - downloading 95
 - editing 97
 - finding 99
 - mix and match 97
 - sharing 99
-

U

- Upgrade
 - See Software update
 - Upload
 - Google Drive 267
-

V

- Video chat
 - Face Tracking 172
 - Screen Share 174
 - Video Highlights
 - See Zoe
 - VideoPic 124
 - Videos
 - editing 152
 - playback speed 151
 - recording 123
 - taking photo while recording 124
 - transferring from computer 38
 - watching 152
-

- Voice input 93
 - Voice search 262
 - Voice Selfie 131
 - VPN 296, 297
 - adding a connection 296
 - connecting 297
-

W

- Waking up phone
 - through power button 52
 - Wallpaper
 - changing 101
 - Wi-Fi 293, 294
 - connecting to another network 294
 - disconnecting from network 294
 - turning on 294
 - Widgets
 - adding 104
 - changing settings 104
 - rearranging 106
 - removing 106, 108
 - resizing 105
 - Wireless media sharing
 - See HTC Connect
 - Word prediction 91
 - bilingual prediction 91
-

Y

- YouTube 199, 271
 - finding videos of songs 199
 - watching 271

.....
Z
.....

Zoe 153