THREE YEAR LIMITED WARRANTY

R.L. DRAKE COMPANY warrants to the original purchaser this product shall be free from defects in material or workmanship for three (3) years from the date of original purchase.

During the warranty period the R.L. DRAKE COMPANY or an authorized Drake service facility will provide, free of charge, both parts and labor necessary to correct defects in material and workmanship. At its option, R.L. DRAKE COMPANY may replace a defective unit.

To obtain such warranty service, the original purchaser must:

(1) Retain invoice or original proof of purchase to establish the start of the warranty period.

(2) Notify the R.L. DRAKE COMPANY or the nearest authorized service facility, as soon as possible after discovery of a possible defect,

- (a) the model and serial number
- (b) the identity of the seller and the approximate date of purchase; and
- (c) A detailed description of the problem, including details on the electrical connection to associated equipment and the list of such equipment.
- (3) Deliver the product to the R.L. DRAKE COMPANY or the nearest authorized service facility, or ship the same in its original container or equivalent, fully insured and shipping charges prepaid.

Correct maintenance, repair, and use are necessary to obtain proper performance from this product. Therefore carefully read the Instruction Manual. This warranty does not apply to any defect that R.L. DRAKE COMPANY determines is due to:

- (1) Improper maintenance or repair, including the installation of parts or accessories that do not conform to the quality and specifications of the original parts.
- (2) Misuse, abuse, neglect or improper installation.
- (3) Accidental or intentional damage.

All implied warranties, if any, including warranties of merchantability and fitness for a particular purpose, terminate three (3) years from the date of the original purchase.

The foregoing constitutes R.L. DRAKE COMPANY'S entire obligation with respect to this product, and the original purchaser shall have no other remedy and no claim for incidental or consequential damages, losses or expenses. Some states do not allow limitations on how long an implied warranty lasts or do not allow the exclusions or limitation of incidental or consequential damages, so the above limitation and exclusion may not apply to you.

This warranty gives you specific legal rights and you may also have other rights which vary from state to state. This warranty shall be construed under the laws of Ohio.



R.L. DRAKE COMPANY
230 INDUSTRIAL DRIVE
FRANKLIN, OHIO 45005 U.S.A.
CUSTOMER SERVICE AND PARTS TELEPHONE:


+1 (937) 746-6990 TELEFAX:

+1 (937) 806-1576

WORLD WIDE WEB SITE: http://www.rldrake.com



© Copyright 2004 R.L. Drake Company P/N: 3852469A-10-2004

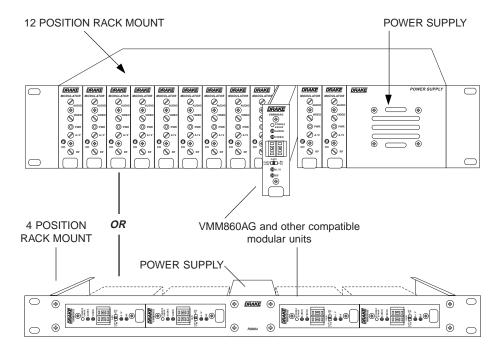

The VMM860AG modulator is a member of the R.L. Drake 19" Mini-Rack Series, a professional quality modular headend system designed to optimize rack space. An assortment of up to (12) modular units, such as the fixed channel series of modulators, or agile modulators, or compatible audio/video products can be racked alongside a single power supply in the Drake model RMM12, 12 position rack mount. The RMM4 rack mount accepts up to (4) modular units.

The R.L. Drake VMM860AG Audio-Video Modulator is a high quality, vestigial sideband unit with synthesized visual and aural carriers. The frequency agile VMM860AG allows front panel pushwheel switch selection of standard CATV channels 2 through 135, or VHF/UHF TV channels 2 through 69. Aeronautical channels are offset positive with a tolerance of ±5 kHz as required by FCC rules.

The heterodyne conversion system, in conjunction with the use of a SAW filter,

ensures optimum vestigial selectivity for adjacent channel headends. An optional FCC predistortion SAW response is also available for the VMM860AG.

The modulator is designed to accept any standard audio/video source such as NTSC video and audio baseband signals from a satellite receiver, TV camera, videotape recorder, TV demodulator, or similar signal source.

The modulator is designed to accept standard (negative sync) polarity video at nominal 1 V p-p level. All level controls are located on the front panel for ease of operation. Output level is +45 dBmV and is adjustable over a 10 dB range.

Field-defeatable audio pre-emphasis, by means of a rear panel switch, allows transmission of BTSC encoded baseband stereo audio signals when used with the Drake MMTS20 stereo encoder.

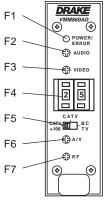


Figure 1

F1 - POWER/ERROR Indicator

Lights when the unit is connected to the required source of DC power via the rear panel DC INPUT connector. A flashing condition indicates an invalid channel setting or other conditions that would cause the unit to operate on an invalid channel. The RF output is switched off for flashing (ERROR) conditions.

F2 - AUDIO Level Control

The setting of this screwdriver adjustment determines the aural carrier deviation. Clockwise rotation increases the carrier deviation.

F3 - VIDEO Level Control

The setting of this screwdriver adjustment determines the video modulation level. Clockwise rotation increases the modulation depth.

F4 - Channel Number Switch

Sets the desired operating channel for standard CATV channels 02 through 135 or Broadcast TV channels 02 through 69. See also Item F5 which sets the type of channel (CATV or Broadcast TV) and sets the leading "1" for CATV channels 100 through 135.

CAUTION: USE AN INSULATED SCREWDRIVER BLADE WHEN ADJUSTING THE AUDIO, VIDEO, A/V, OR RF ADJUSTMENTS.
THIS WILL PREVENT THE POSSIBILITY OF SHORTING CIRCUITRY TO THE FRONT PANEL IN THE EVENT THAT THE SCREWDRIVER SLIPS OUT OF THE SLOT IN THE PLASTIC SHAFT OF THE POTENTIOMETER.

F5 - Mode Switch

Sets the type of channel, CATV or Broadcast TV ("BC TV"). The first position of the switch ("+100") sets a leading "1" for CATV channels 100 through 135. See also Item F4 for setting the channel number.

For example: Setting for CATV channel "125"-



For example:





F6 - A/V Ratio Control

This screwdriver adjustment varies the level of the aural carrier over a range from 12 to 22 dB below the visual carrier. The aural carrier should be adjusted to approximately 15 dB below the visual carrier (normal operation). Clockwise rotation increases the aural carrier level.

F7 - RF Output Level

This screwdriver adjustment permits decreasing the RF output level a minimum of 10 dB as the control is rotated counterclockwise. Set the control for a +45 dBmV output level .

RF

Frequency Range: 54 to 864 MHz;

Standard, HRC, or IRC CATV channels 2 to 135.

Broadcast TV channels 2 to 69.

FCC Frequency Offsets: Automatic (+12.5 kHz, +25 kHz, or none as required for each

channel).

Output level: +45 dBmV minimum (10 dB adjustment range).

Output Impedance: 75 Ohms, 8 dB return loss.

A/V Ratio: Audio carrier level, adjustable from -22 to -12 dB

referenced to video carrier level.

Frequency Stability: Within ±5 kHz

Intercarrier Frequency: 4.5 MHz

Spurious Outputs (5 MHz to 1 GHz): -60 dBc, measured at -15 dB A/V ratio and with modulator

output level of +45 dBmV.

In-channel C/N: 65 dB typical, 4 MHz bandwidth.

Broadband Noise: -78 dBc typicial, 4 MHz bandwidth @ +45 dBmV output.

VIDEO

Input Level for 87.5% Modulation: 0.65 Vp-p to 1.5 Vp-p. Manual gain adjust with

front panel control.

Input Impedance: 75 Ohms, return loss of 26 dB minimum.

Frequency Response: 20 Hz to 4.2 MHz, ±1 dB.

C/L Delay: Within 50 nSec. of 0 nSec. (standard), or

FCC predistortion, (option).

Differential Gain: 3% maximum (10 to 90% APL). Differential Phase: 3° maximum (10 to 90% APL).

AUDIO

Input Level for 25 kHz Peak Deviation: 125 mV rms to 2.5 V rms. Manual gain adjust with

front panel control.

Input Impedance: Greater than 10 K Ohms, unbalanced.

Pre-emphasis: 75 μSec. normal, defeatable (flat) by rear panel switch for

BTSC baseband stereo compatibility.

Frequency Response: 40 Hz to 15 kHz, ±1.0 dB referenced to 75 μSec.

pre-emphasis curve.

40 Hz to 100 kHz, ±0.5 dB if pre-emphasis is defeated.

S/N ratio: 65dB.

Total Harmonic Distortion: 1% maximum.

GENERAL

DC Power Input: +12 V ±5% at 200 mA

+5 V ±5% at 350 mA

Operating Temperature: 0°C to +50°C ambient.

Size: 1" W x 3.5" H x 7.5" D. (2.5 cm) W x (8.9 cm) H x (19.1 cm) D.

Weight: 10.7 oz. (0.3 Kg).

TABLE 2: BC TV CATV BC TV

VHF BROADCAST CHANNELS		
Channel Number	Visual Carrier Frequency (MHz)	
2	55.25	
3	61.25	
4	67.25	
5	77.25	
6	83.25	
7	175.25	
8	181.25	
9	187.25	
10	193.25	
11	199.25	
12	205.25	
13	211.25	



UHF BROADCAST CHANNELS			
	Visual Carrier		
Channel Number	Frequency (MHz)		
14	471.25		
15	477.25		
16	483.24		
17	489.25		
18	495.25		
19	501.25		
20	507.25		
21	513.25		
22	519.25		
23	525.25		
24	531.25		
25	537.25		
26	543.25		
27	549.25		
28	555.25 561.25		
29	561.25 567.25		
30 31	567.25 573.25		
32	573.25 579.25		
33	585.25		
34	591.25		
35	597.25		
36	603.25		
37	609.25		
38	615.25		
39	621.25		
40	627.25		
41	633.25		
42	639.25		
43	645.25		
44	651.25		
45	657.25		
46	663.25		
47	669.25		
48	675.25		
49	681.25		
50	687.25		
51	693.25		
52	699.25		
53	705.25		
54	711.25		
55	717.25		
56	723.25		
57	729.25 735.25		
58	735.25		
59 60	741.25 747.25		
60	747.25 753.25		
62	755.25 759.25		
63	765.25		
64	771.25		
65	777.25		
66	783.25		
	67 789.25		
68	795.25		
69	801.25		

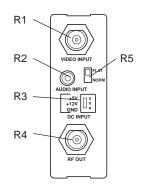


Figure 2

R1 - VIDEO INPUT Connector

This is the nominal 1 Vp-p baseband video input to the modulator.

R2 - AUDIO INPUT Connector

This is an unbalanced audio input to the modulator circuits. This "RCA" (phono) connector input accepts mono audio from 125 mVrms to 2.5 Vrms levels. If the MMTS20 stereo encoder is used, this input accepts the composite BTSC stereo output of the MMTS20.

R3 - DC INPUT Connector


This 3-pin connector (Male) accepts the appropriate mating DC power cable.

R4 - RF OUTPUT Connector

This is the modulator output.

R5 - AUDIO PRE-EMPHASIS SWITCH

This switch allows selection of either normal audio pre-emphasis or flat audio response. For normal mono audio, input to the modulator via R2, set switch to NORM position. If the MMTS20 BTSC stereo encoder is used, set this switch to FLAT and connect stereo audio to the MMTS20. The encoder will in turn connect to R2.

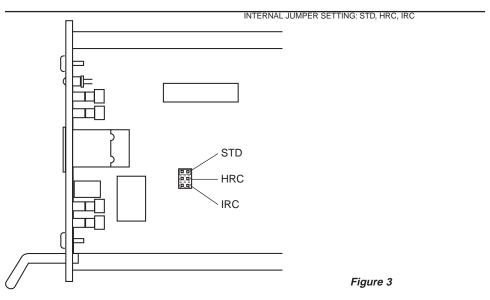

CATV CHANNEL OUTPUT FREQUENCIES

CATV_BC

CONNECTIONS AND CONTROLS

All connections to and from each modulator are made through the rear panel. Figure 4 illustrates an installation with (12) modulator units combined through a passive signal combiner. Additional channels can be added by using additional fixed channel or agile type modulators and either multi-port combiners or combinations of two-port combiners.

INSTALLATION NOTES

Level adjustment provides optimum performance in multi-channel installations. The modulator outputs should be checked periodically with a spectrum analyzer to

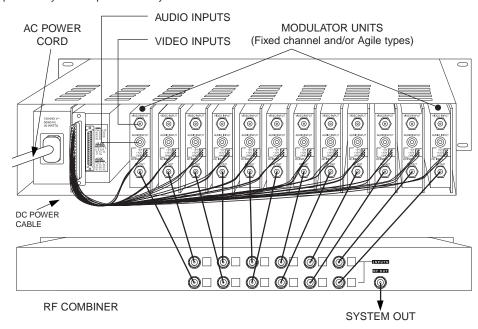


Figure 4

POWER SUPPLY REQUIREMENT

This VMM860AG agile modulator requires more current than the fixed channel units. Therefore, new 12 position rack installations with multiple VMM860AG modulators (up to 12) must use the Drake PSM121 (or equivalent) high capacity power supply module.

The power supply in the four position rack system can power up to four VMM860AG modulators or any mix of fixed and agile VMM models up to four total modulators.

FREQUENCY CHART

The chart on the following page shows the standard CATV channel coverage of the VMM860AG. Where an offset is indicated, this amount of positive frequency offset is added to the frequency indicated in the middle column. As shown, this occurs only on channels required to be offset by the FCC.

maintain a ±1 dB variation of adjacent channel

held to -15 dB or less. The output 'RF' and 'A/V

(Ratio)' controls are used respectively to make

carriers. Aural/Visual (A/V) ratios should be

Adequate ventilation is very important in

multi-channel installations. The RMM12 or RMM4 cages should be spaced apart vertically by at least one rack unit (1.75") height wherever

possible. Some air movement is mandatory in

enclosed rack cabinets. Excessive heat will

shorten component life and modulator perfor-

mance will be degraded without proper cooling.

these adjustments.

RACK MOUNTING

HRC or IRC frequencies can be set by means of an internal jumper. See Figure 3. No jumper will result in the STD channel plan selection.

CATV TABLE 1: CATV CATV BC

Output Channel Switch Setting	Visual Carrier Frequency (MHz)	Frequency Offset (kHz)
02	55.25	NONE
03	61.25	NONE
04	67.25	NONE
05	77.25	NONE NONE
06 07	83.25 175.25	NONE
08	181.25	NONE
09	187.25	NONE
10	193.25	NONE
11	199.25	NONE
12 13	205.25 211.25	NONE NONE
14	121.25	±12.5
15	127.25	±12.5
16	133.25	±12.5
17	139.25	NONE
18	145.25	NONE
19 20	151.25 157.25	NONE NONE
20	163.25	NONE
22	157.25 163.25 169.25	NONE NONE
23	217.25	NONE
24	217.25 223.25	+12.5
25	229.25	+12.5
<u>26</u>	235.25	+12.5
27 28	241.25 247.25	+12.5 +12.5
29	253.25	+12.5
30	259.25	+12.5
31	265.25	+12.5
32	271.25	+12.5
33	277.25	+12.5
34 35	283.25 289.25	+12.5 +12.5
36	295.25	+12.5
37	301.25	+12.5
38 39	307.25	+12.5
	313.25	+12.5
40	319.25	+12.5
41 42	325.25 331.25	+12.5 +25
43	337.25	+12.5
44	l 343.25	+12.5
45	349.25	+12.5 +12.5
46	355.25 361.25 367.25	+12.5 +12.5 +12.5
47	361.25	+12.5
48 49	367.25 373.25	+12.5
50	379.25	+12.5
51	385.25	+12.5
52	391.25	+12.5
53	397.25	+12.5
54	403.25	NONE
55 56	409.25	NONE NONE
<u>56</u> 57	415.25 421.25	NONE
58	427.25	NONE
59	433.25	NONE
60	439.25	NONE
61	445.25	NONE
62	451.25 457.25	NONE
63 64	457.25 463.25	NONE NONE
65	469.25	NONE
66	475.25	NONE
67	475.25 481.25	NONE
68	487.25	NONE
69	493.25	NONE

+100 - TV			
Output Channel Switch Setting	Visual Carrier Frequency (MHz)	Frequency Offset (kHz)	
70	499.25	NONE	
71	505.25	NONE	
72 73	511.25 517.25	NONE NONE	
73 74	523.25	NONE	
75	529.25	NONE	
<u>76</u>	535.25	NONE	
77 78	541.25 547.25	NONE NONE	
76 79	553.25	NONE	
80	559.25	NONE	
81	565.25	NONE	
82 83	571.25 577.25	NONE NONE	
84	583.25	NONE	
85	589.25	NONE	
86	595.25	NONE	
87	601.25	NONE	
88 89	607.25 613.25	NONE NONE	
90	619.25	NONE	
91	625.25	NONE	
92	631.25	NONE	
93 94	637.25 643.25	NONE NONE	
95	91.25	NONE	
96	97.25	NONE	
97	103.25	NONE	
98 99	109.25 115.25	+25 +25	
33	C.A	ATV	
CA	TV +100 CATV III	BC TV	
100	649.25	NONE	
101 102	655.25 661.25	NONE NONE	
103	667.25	NONE	
104	673.25	NONE	
105	679.25	NONE	
106	685.25	NONE	
107 108	691.25 697.25	NONE NONE	
109	703.25	NONE	
110	709.25	NONE	
111	715.25	NONE	
112 113	721.25 727.25	NONE NONE	
114	733.25	NONE	
115	739.25	NONE	
116	745.25	NONE	
117 118	751.25 757.25	NONE NONE	
119	767.25 763.25	NONE	
120	769.25	NONE	
121	775.25	NONE	
122	781.25	NONE	
123 124	787.25 793.25	NONE NONE	
124 125	793.25 799.25	NONE	
126	805.25	NONE	
127	211.25	NONE	

811.25 817.25

823.25

829.25 835.25

841.25

847.25

853.25

859.25

127 128

129

130 131

132

133 134

135

NONE

NONE

NONE

NONE

NONE

NONE

NONE

NONE

NONE