

HUAWEI

HUAWEI ETS Fixed Wireless
Terminal Data Service

User Manual

V200R002

HUAWEI ETS Fixed Wireless Terminal Data Service

User Manual

Manual Version T2-030123-20041125-C-2.23

Product Version V200R002

BOM 31014223

Huawei Technologies Co., Ltd. provides customers with comprehensive technical support and service. Please feel free to contact our local office or company headquarters.

Huawei Technologies Co., Ltd.

Address: Administration Building, Huawei Technologies Co., Ltd.,
Bantian, Longgang District, Shenzhen, P. R. China

Postal Code: 518129

Website: <http://www.huawei.com>

Email: mobile@huawei.com

Copyright © 2004 Huawei Technologies Co., Ltd.

All Rights Reserved

No part of this manual may be reproduced or transmitted in any form or by any means without prior written consent of Huawei Technologies Co., Ltd.

Trademarks

, HUAWEI, C&C08, EAST8000, HONET, , ViewPoint, INtess, ETS, DMC, TELLIN, InfoLink, Netkey, Quidway, SYNLOCK, Radium,  M900/M1800, TELESIGHT, Quidview, Musa, Airbridge, Tellwin, Inmedia, VRP, DOPRA, iTELLIN, HUAWEI OptiX, C&C08 iNET, NETENGINE, OptiX, iSite, U-SYS, iMUSE, OpenEye, Lansway, SmartAX, infoX, TopEng are trademarks of Huawei Technologies Co., Ltd.

All other trademarks mentioned in this manual are the property of their respective holders.

Notice

The information in this manual is subject to change without notice. Every effort has been made in the preparation of this manual to ensure accuracy of the contents, but all statements, information, and recommendations in this manual do not constitute the warranty of any kind, express or implied.

About This Manual

Release Notes

The product version that corresponds to the manual is HUAWEI ETS Fixed Wireless Terminal V200R002.

Related Manuals

The following manuals provide more information about the HUAWEI ETS Fixed Wireless Terminal V200R002.

Manual	Content
HUAWEI ETS Fixed Wireless Terminal User Manual	It provides information for the terminal installation, operation, usage and maintenance of HUAWEI ETS FWT.
HUAWEI ETS Fixed Wireless Terminal Data Service User Manual	It is used for assisting the users in performing data services of HUAWEI ETSFixed Wireless Terminal. (Delivered with a CD-ROM)

Organization

HUAWEI ETS Fixed Wireless Terminal Data Service User Manual introduces how to perform the data service of HUAWEI

ETS Fixed Wireless Terminal (hereinafter referred to as FWT).

Chapter 1 Modem describes the modem integrated with FWT.

Chapter 2 Configuration Requirements lists the minimum system requirements of the PC for conducting data service.

Chapter 3 Wireless Data Service elaborates the operation of data service in Windows 98, Windows 2000 and Windows XP respectively, including driver installation, dial-up and PC fax service, etc.

Chapter 4 Precautions describes the precautions of data service conduct.

Chapter 5 Troubleshooting introduces common faults and handling methods.

Intended Audience

The manual is intended for the user who owns the FWT Data Kit.

Conventions

The manual uses the following conventions:

I. General conventions

Convention	Description
Arial	Normal paragraphs are in Arial.
Arial Narrow	Warnings, Cautions, Notes and Tips are in Arial Narrow.

Convention	Description
Boldface	Headings are in Boldface .
Courier New	Terminal Display is in Courier New.

II. GUI conventions

Convention	Description
< >	Button names are inside angle brackets. For example, click the <OK> button.
[]	Window names, menu items, data table and field names are inside square brackets. For example, pop up the [New User] window.
/	Multi-level menus are separated by forward slashes. For example, [File/Create/Folder].

III. Keyboard operation

Format	Description
<Key>	Press the key with the key name inside angle brackets. For example, <Enter>, <Tab>, <Backspace>, or <A>.
<Key1+Key2>	Press the keys concurrently. For example, <Ctrl+Alt+A> means the three keys should be pressed concurrently.
<Key1, Key2>	Press the keys in turn. For example, <Alt, A> means the two keys should be pressed in turn.

IV. Mouse operation

Action	Description
Click	Press the left button or right button quickly (left button by default).
Double Click	Press the left button twice continuously and quickly.
Drag	Press and hold the left button and drag it to a certain position.

V. Symbols

Eye-catching symbols are also used in this manual to highlight the points worthy of special attention during the operation. They are defined as follows:



Caution, Warning, Danger: Means reader be extremely careful during the operation.



Note, Comment, Tip, Knowhow, Thought: Means a complementary description.

Environmental Protection

This product has been designed to comply with the requirements on environmental protection. For the proper storage, use and disposal of this product, national laws and regulations must be observed.

Table of Contents

Chapter 1 Modem.....	1-1
Chapter 2 Configuration Requirements	2-1
Chapter 3 Wireless Data Service.....	3-1
3.1 Install HUAWEI WIRELESS MODEM Driver	3-1
3.1.1 Install Windows 98 system Driver	3-1
3.1.2 Install Windows 2000 system Driver	3-7
3.1.3 Install Windows XP system Driver.....	3-15
3.2 Data Service Reference	3-26
3.2.1 High-speed Packet Data Access.....	3-27
3.2.2 Low-speed Data Service Access.....	3-48
3.2.3 PC Fax Service.....	3-48
Chapter 4 Precautions.....	4-1
Chapter 5 Troubleshooting.....	5-1

Chapter 1 Modem

Since a Modem has been built in ETS Fixed Wireless Terminal (FWT) before delivery, you can enjoy such data services as Web browse and data downloading by connecting the FWT to your computer via a USB serial data cable. The USB serial data cable has been supplied in the data kit, so you can purchase it from the local carrier as required. Like the standard Modem used in common computers, the Modem is easy to operate.

The procedure is as follows: 1) Connect the terminal to your computer (for specific operations, refer to *HUAWEI ETS2 Fixed Wireless Terminal User Manual*). 2) Install the driver for your operating system from the CD in the data kit.

Chapter 2 Configuration Requirements

Minimum system requirements:

- 1) CPU: Pentium 100 or above.
- 2) Operating system: Windows 98, Windows 2000 or Windows XP.
- 3) Support USB1.1 or higher interface standards.
- 4) Install IE browser and FTP client.



Caution:

Be sure not to install other USB-to-serial port devices on the same PC.

Chapter 3 Wireless Data Service

3.1 Install HUAWEI WIRELESS MODEM Driver

3.1.1 Install Windows 98 system Driver

- 1) Insert the CD in the data kit into the CD-ROM. The default driver directory is: E:\Setup. Double click the icon "Setup.exe" to run Wireless Modem driver.

 Note:

The CD-ROM drive E mentioned in the manual may be different from your actual computer setting. You should find the driver directory in your own computer.

- 2) Then the system pops up the interface [Choose Setup Language] shown in Figure 3-1, prompting you to select the language for this installation. Either Chinese or English can be selected depending on your operating system.

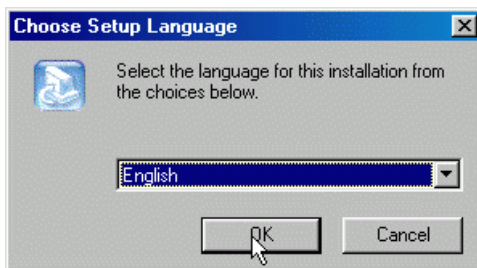


Figure 3-1 Choose Setup Language

- 3) Click <OK> to enter the interface [Setup Prepare] shown in Figure 3-2. It is strongly recommended that you exit all Windows programs before running this Setup program.

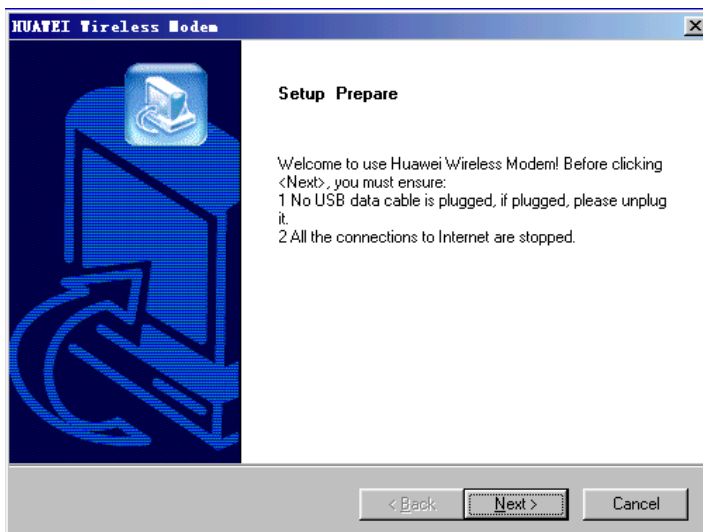


Figure 3-2 Setup Prepare

- 4) Click <Next> to enter the interface [Select Install Path] shown in Figure 3-3. The default driver installation directory is: C:\HUAWEI\MODEM. If required, you can click <Browse> and change the destination installation path.

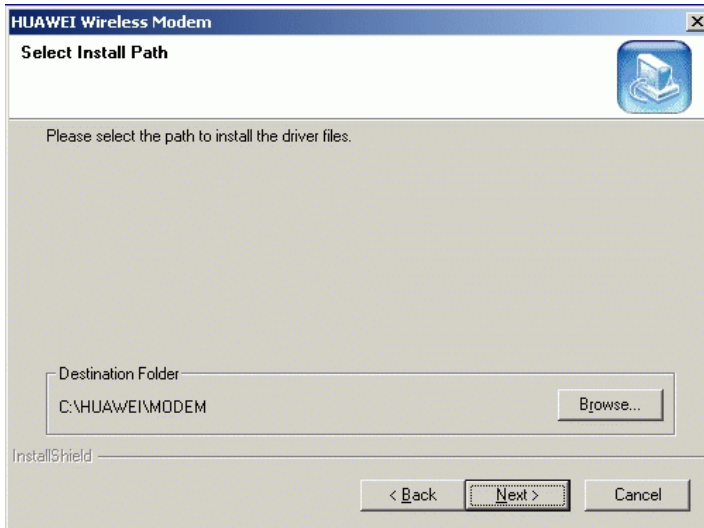


Figure 3-3 Select Installation Path

- 5) Click <Next>, and the system will detect whether USB driver has been installed. If you use the terminal for the first time, and previously have not installed UMP 3410 Unitary Driver and UMP3410 Serial Port drivers, the system will pop up the interface shown in Figure 3-4, and prompt you to install USB driver following the three steps below. Otherwise, the system will find the device via the corresponding COM port (e.g., COM3) and prepare to install HUAWEI WIRELESS MODEM.

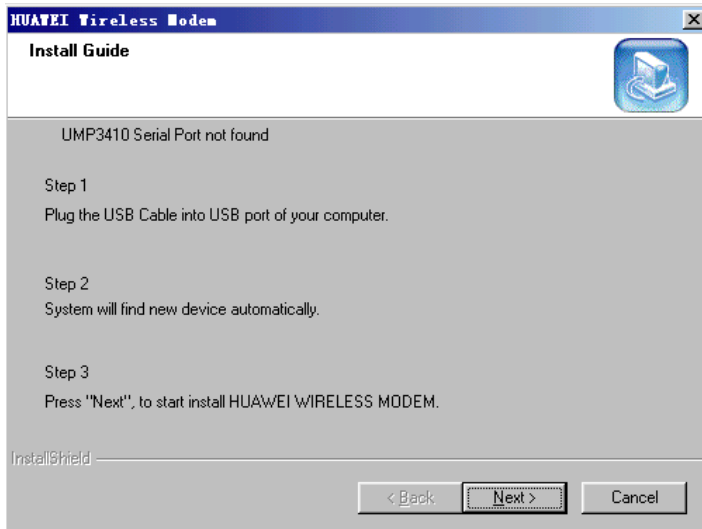


Figure 3-4 Install Guide

For the first case, specific procedure is described as follows:

Step 1: Connect one end (USB connector) of USB serial data cable to the USB port on your computer, and the other end (DB9) to the serial port on the terminal. The system will automatically find the new device “UMP 3410 Unitary Driver” and install its driver.

Step 2: After “UMP 3410 Unitary Driver” driver installation, the system will automatically find another new device “UMP3410 Serial Port” and install its driver.

Step 3: In Figure 3-4, click <Next> to start to install HUAWEI WIRELESS MODEM.

- 6) The system prompts that Setup Program has installed HUAWEI WIRELESS MODEM on your computer successfully. Click <Finish> to complete the installation.

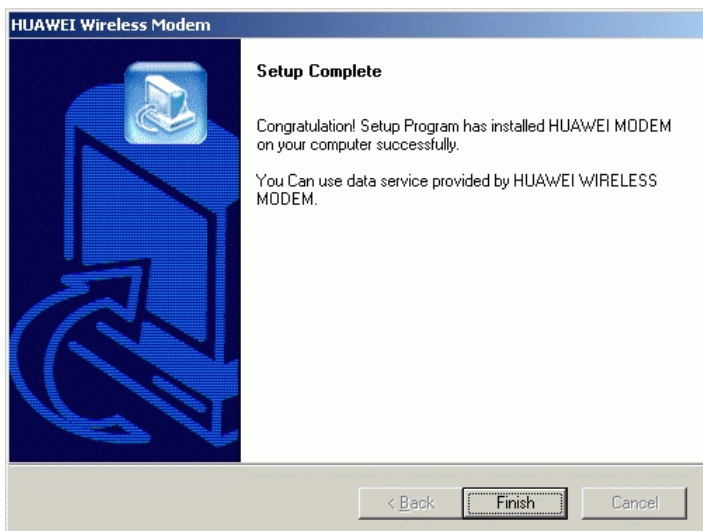


Figure 3-5 Setup Complete

- 7) After the driver installation, the system will add "HUAWEI WIRELESS MODEM" in [Control Panel/Modems], as shown in Figure 3-6.

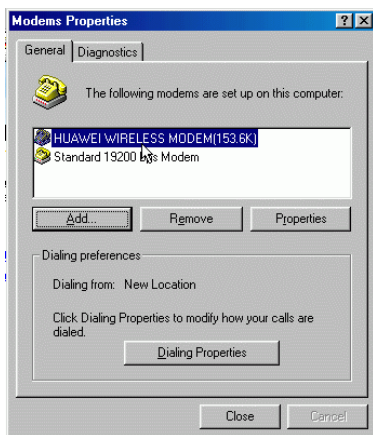


Figure 3-6 Modems Properties

- 8) The system will add “UMP 3410 Unitary Driver” in [Control Panel/System/Device Manager/UMP], and “UMP 3410 Serial Port” in [Control Panel/System/Device Manager/Ports (COM & LPT)], as shown in Figure 3-7.

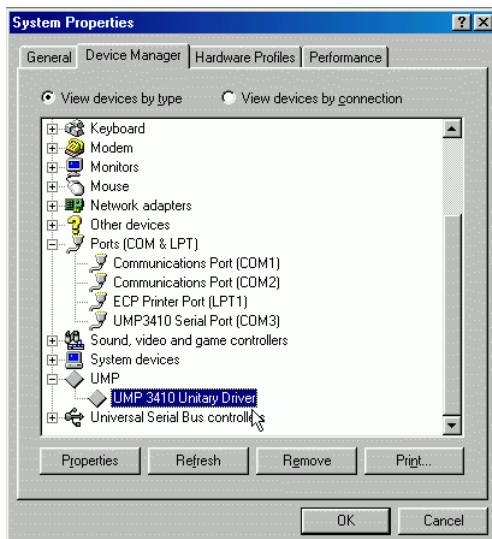


Figure 3-7 System Properties

3.1.2 Install Windows 2000 system Driver

- 1) Insert the CD in the data kit into the CD-ROM. The default driver directory is: E:\Setup. Double click the icon "Setup.exe" to run Wireless Modem driver

Note:

The CD-ROM drive E mentioned in the manual may be different from your actual computer setting. You should find the driver directory in your own computer.

- 2) Then the system pops up the interface [Choose Setup Language] shown in Figure 3-8, prompting you to select the language for this installation. Either Chinese or English can be selected depending on your operating system.

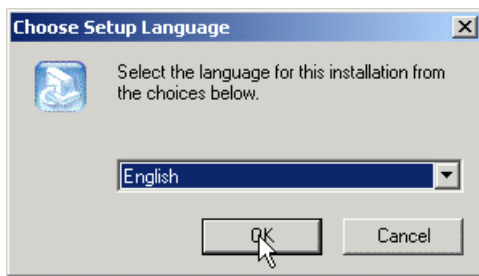


Figure 3-8 Choose Setup Language

- 3) Click <OK> to enter the interface [Setup Prepare] shown in Figure 3-9. It is strongly recommended that you exit all Windows programs before running this Setup program.

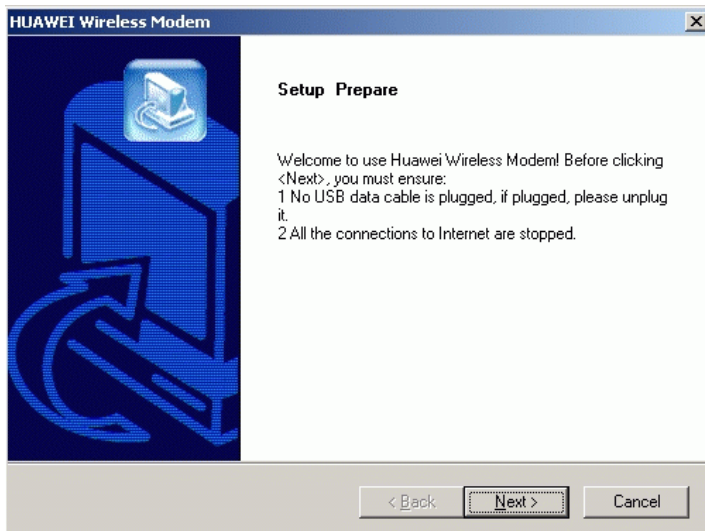


Figure 3-9 Setup Prepare

- 4) Click <Next> to enter the interface [Select Install Path] shown in Figure 3-10. The default driver installation directory is: C:\HUAWEI\MODEM. If required, you can click <Browse> and change the destination installation path.

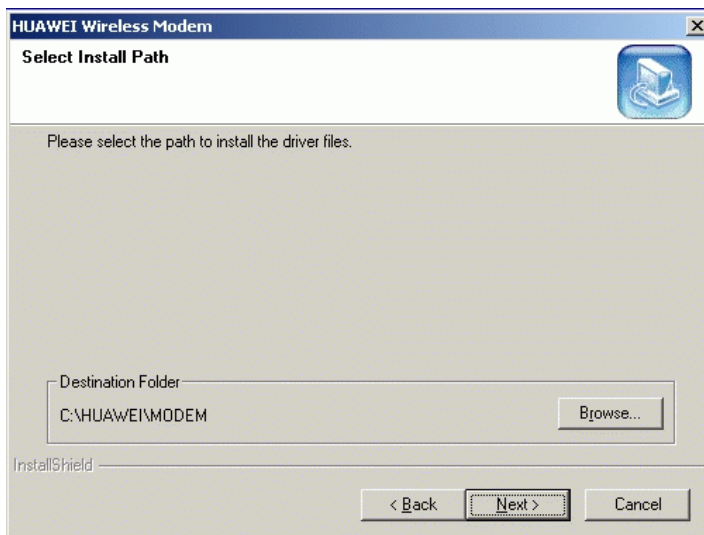


Figure 3-10 Select Install Path

- 5) Click <Next>, and the system will detect whether USB driver has been installed. If you use the FWT for the first time, and previously have not installed TIUSB3410 and TIUMP SERIAL PORT drivers, the system will pop up the interface shown in Figure 3-11, and prompt you to install USB driver following the three steps below. Otherwise, the system will find the device via the corresponding COM port (e.g., COM7) and prepare to install HUAWEI WIRELESS MODEM.

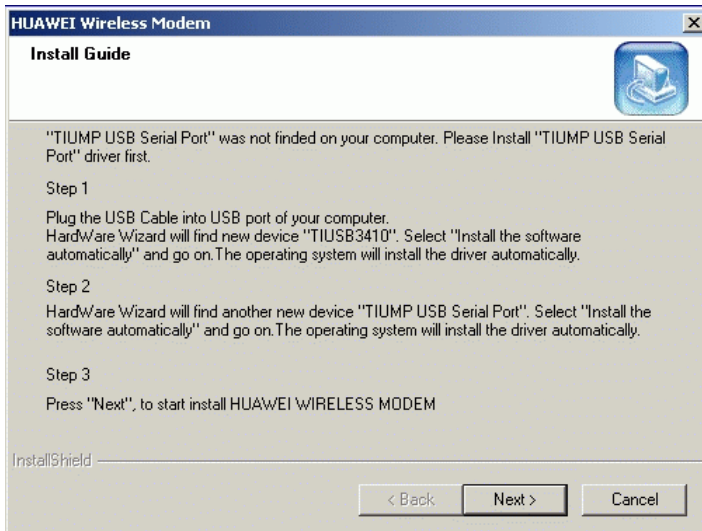


Figure 3-11 Install Guide

For the first case, specific procedure is described as follows:

Step 1: Connect one end (USB connector) of USB serial data cable to the USB port on your computer, and the other end (DB9) to the serial port on the FWT. The system will automatically find the new device "TIUSB3410" and install its driver.

Step 2: After "TIUSB3410" driver installation, the system will automatically find another new device "TIUMP USB Serial Port" and install its driver.

After the two drivers installation, the system will automatically add "TIUSB3410" in [Control Panel/System/Hardware/Device Manager/ TI UMP Devices], and "TIUMP USB Serial Port" in [Control

Panel/ System/Hardware/Device Manager/Ports (COM & LPT)], as shown in Figure 3-12.

Step 3: In Figure 3-11, click <Next> to start to install HUAWEI WIRELESS MODEM.

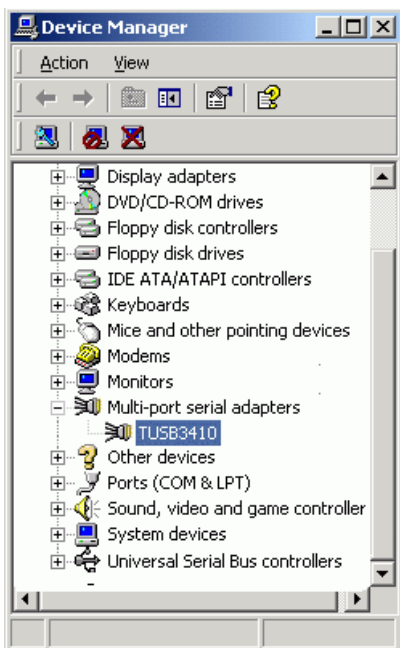


Figure 3-12 Device Manager

- 6) The system will find the device via the corresponding COM port (e.g., COM7) and install its driver, as shown in Figure 3-13.

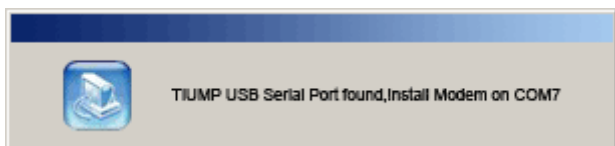


Figure 3-13 Found Port Device

- 7) As shown in Figure 3-14, click <Yes> to continue the installation.

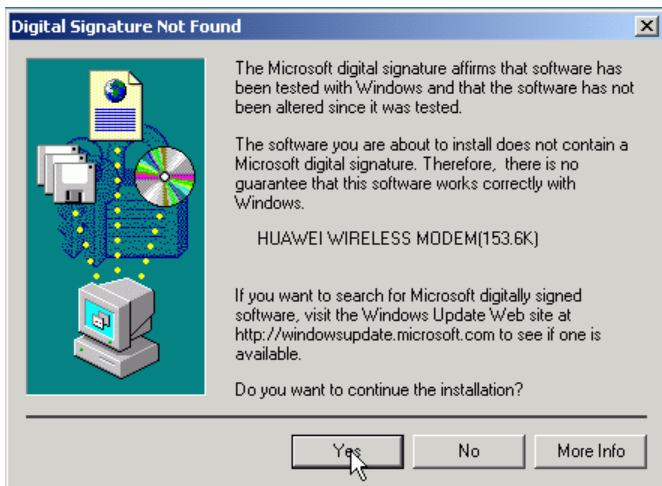


Figure 3-14 Digital Signature Not Found

- 8) As shown in Figure 3-15, HUAWEI MODEM has been installed successfully. Click <Finish> to complete the installation.

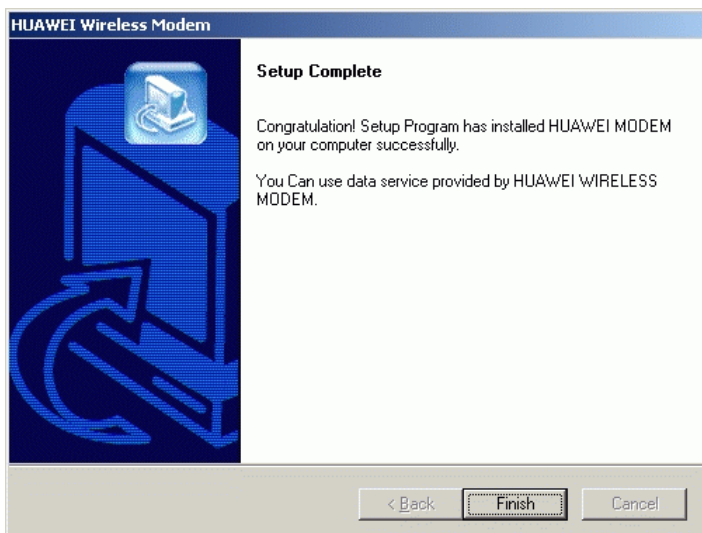


Figure 3-15 Setup Complete

- 9) After the Modem driver installation, the system will add "HUAWEI WIRELESS MODEM" in [Control Panel/System/Hardware/Device Manager/Modems], as shown in Figure 3-16.

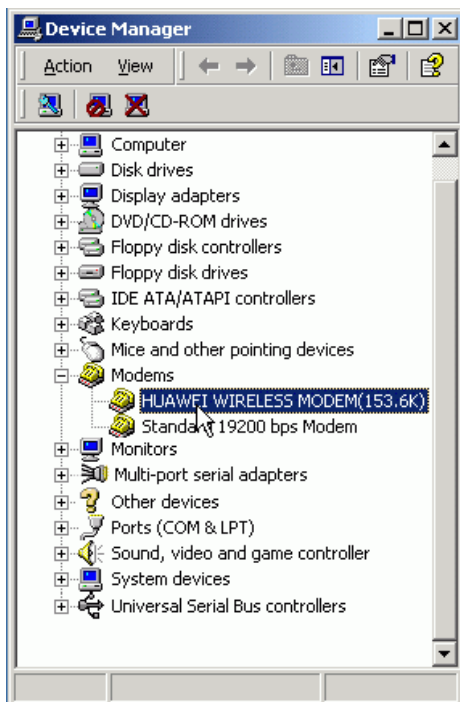


Figure 3-16 Device Manager

3.1.3 Install Windows XP system Driver

- 1) Insert the CD in the data kit into the CD-ROM. The default driver directory is: E:\Setup. Double click the icon "Setup.exe" to run Wireless Modem driver.

Note:

The CD-ROM drive E mentioned in the manual may be different from your actual computer setting. You should find the driver directory in your own computer.

- 2) Then the system pops up the interface [Choose Setup Language] shown in Figure 3-17, prompting you to select the language for this installation. Either Chinese or English can be selected depending on your operating system.

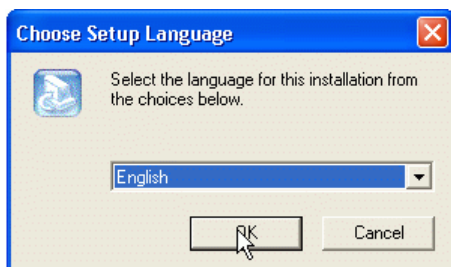


Figure 3-17 Choose Setup Language

- 3) Click <OK> to enter the interface [Setup Prepare] shown in Figure 3-18. It is strongly recommended that you exit all Windows programs before running this Setup program.

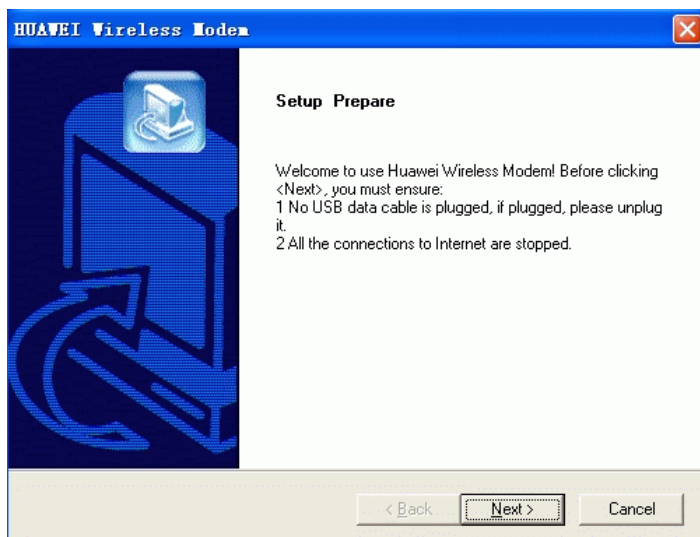


Figure 3-18 Setup Prepare

- 4) Click <Next> to enter the interface [Select Install Path] shown in Figure 3-19. The default driver installation directory is: C:\HUAWEI\MODEM. If required, you can click <Browse> and change the destination installation path.

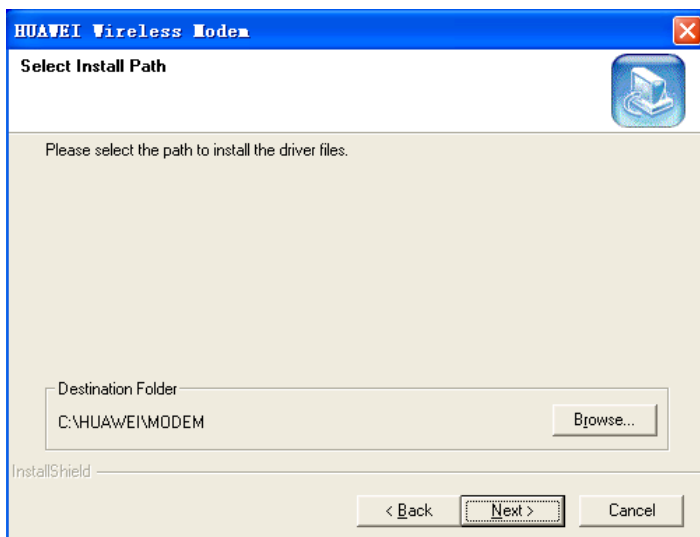


Figure 3-19 Select Install Path

- 5) Click <Next>, and the system will detect whether USB driver has been installed. If you use the FWT for the first time, and previously have not installed TIUSB3410 and TIUMP SERIAL PORT drivers, the system will pop up the interface shown in Figure 3-20, and prompt you to install USB driver following the three steps below. Otherwise, the system will find the device via the corresponding COM port (e.g., COM4) and prepare to install HUAWEI WIRELESS MODEM.

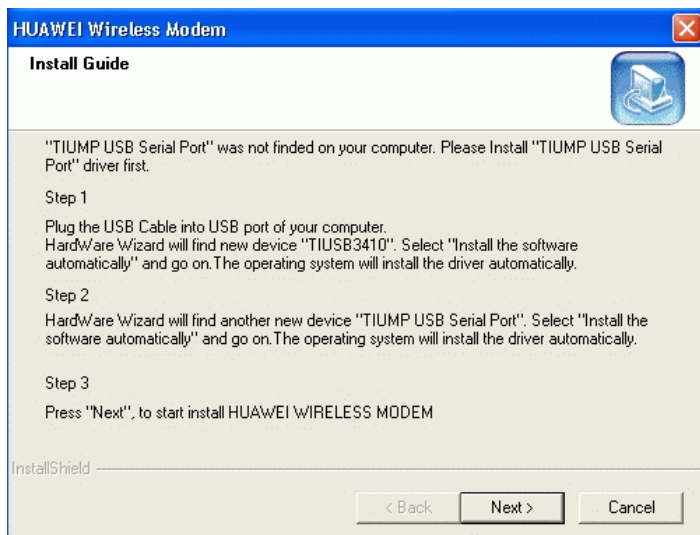


Figure 3-20 Install Guide

For the first case, specific procedure is described as follows:

Step 1: Connect one end (USB connector) of USB serial data cable to the USB port on your computer, and the other end (DB9) to the serial port on the FWT. The system will automatically find the new device "TIUSB3410", as shown in Figure 3-21. Select the radio button followed by [Install the software automatically (Recommended)], then click <Next>. The system will automatically install its driver, as shown in Figure 3-22. Click <Finish> to close the wizard.



Figure 3-21 Found TIUSB3410



Figure 3-22 Setup Complete

Step 2: After “TIUSB3410” driver installation, the system will automatically find another new device “TIUMP USB Serial Port” and install its driver, as shown in Figure 3-23. Select the radio button followed by [Install the software automatically (Recommended)], then click <Next>. The system will automatically finish “TIUMP USB Serial Port” driver installation and switch to Figure 3-24. Click <Continue Anyway> to install its driver, as shown in Figure 3-25. Click <Finish> to close the wizard.

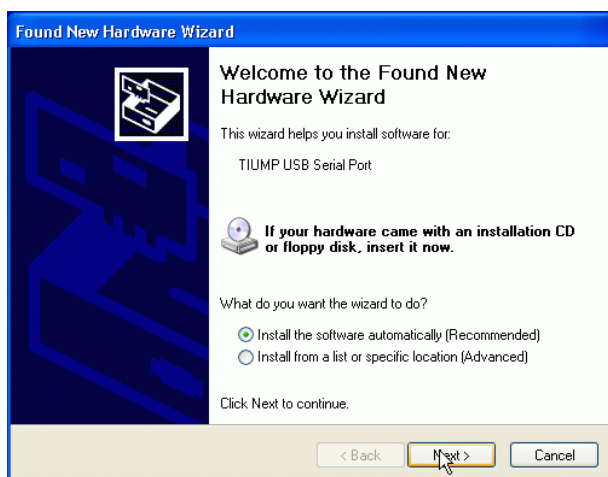


Figure 3-23 Found TIUMP USB Serial Port



Figure 3-24 Windows Logo Testing



Figure 3-25 Finish Installation

After the two drivers installation, the system will automatically add “TIUSB3410” in [Control Panel/System/Hardware/Device Manager/ TI UMP Devices], and “TIUMP USB Serial Port” in [Control Panel/ System/Hardware/Device Manager/Ports (COM & LPT)], as shown in Figure 3-26.

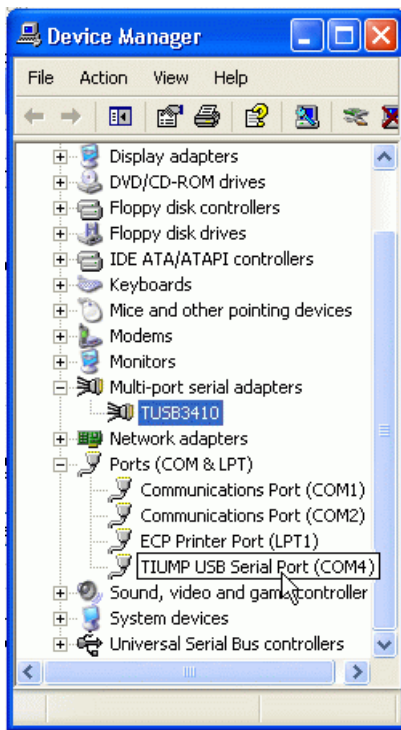


Figure 3-26 Device Manager

Step 3: In Figure 3-20, click <Next> to start to install HUAWEI WIRELESS MODEM.

- 6) The system will find the device via the corresponding COM port (e.g., COM4) and install its driver, as shown in Figure 3-27.

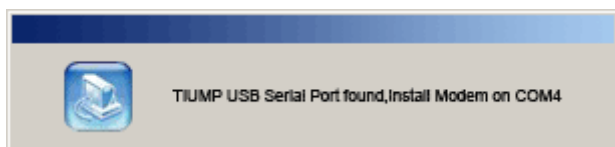


Figure 3-27 Found Port Device

- 7) As shown in Figure 3-28, click <Continue Anyway> to install Modem driver.



Figure 3-28 Windows Logo Testing

- 8) As shown in Figure 3-29, HUAWEI MODEM has been installed successfully. Click <Finish> to complete the installation.

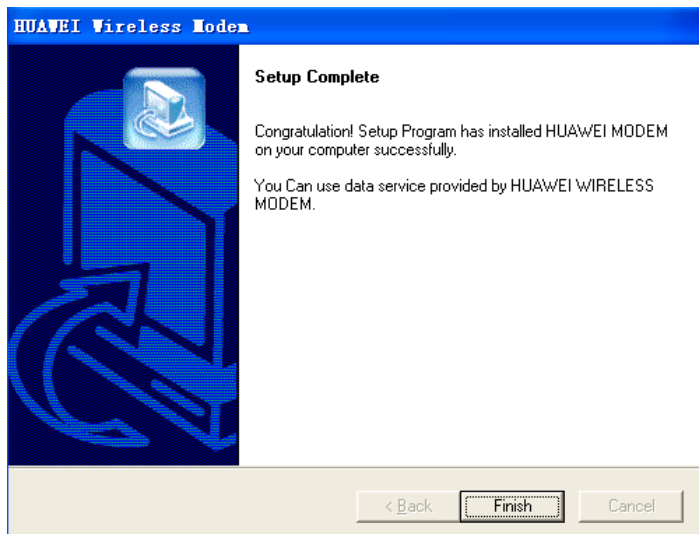


Figure 3-29 Setup Complete

- 9) After the Modem driver installation, the system will add "HUAWEI WIRELESS MODEM" in [Control Panel/System/Hardware/Device Manager/Modems], as shown in Figure 3-30.



Figure 3-30 Device Manager

3.2 Data Service Reference

You can perform data services such as high-speed packet data access, low-speed data service access, and PC fax. For specific operations of data services, consult your operator.

3.2.1 High-speed Packet Data Access

I. Dial Up to the Internet on Windows 98

1) Click

[Start/Programs/Accessories/Communications/Dial-Up Networking], and the Dial-Up Networking dialog box will pop up. Double click [Make New Connection] to enter the interface shown in Figure 3-31, and then type your custom name for the computer that you are dialing (such as "HUAWEI WIRELESS MODEM"). Select "HUAWEI WIRELESS MODEM (153.6K)" in the drop-down list box, and then click <Next>.

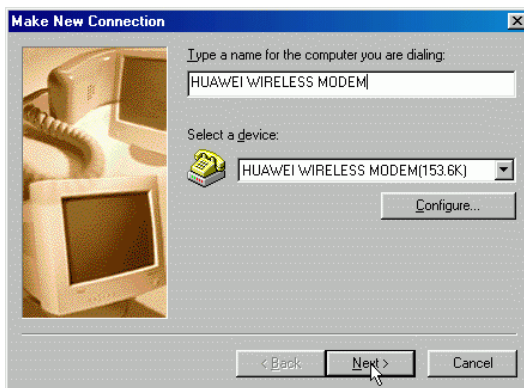


Figure 3-31 Select Modem

- 2) As shown in Figure 3-32, type the telephone number (such as "#777") as required in the text box and select the

country or region code {e.g., United States of America (1)}
in the drop-down list box.

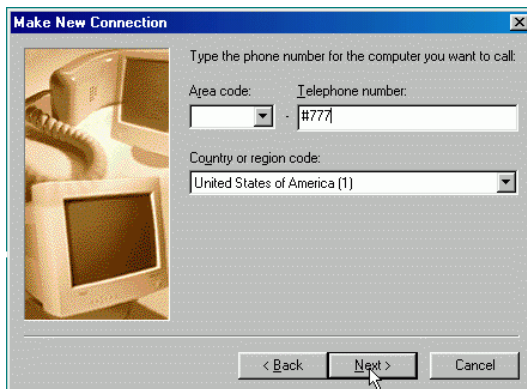


Figure 3-32 Type Dialing Number

- 3) Click <Next> to enter the interface shown in Figure 3-33, then click <Finish> to complete the establishment of Dial-Up Networking.

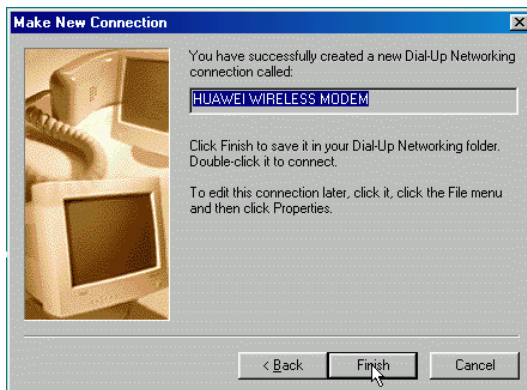


Figure 3-33 Finish Dial-Up Networking Establishment

- 4) In the [Dial-Up Networking] dialog box shown in Figure 3-34, right click the icon “HUAWEI WIRELESS MODEM” to pop up a shortcut menu, and then click [property] to activate properties dialog box, and uncheck the check box followed by [Use area code and Dialing Properties], as shown in Figure 3-35.

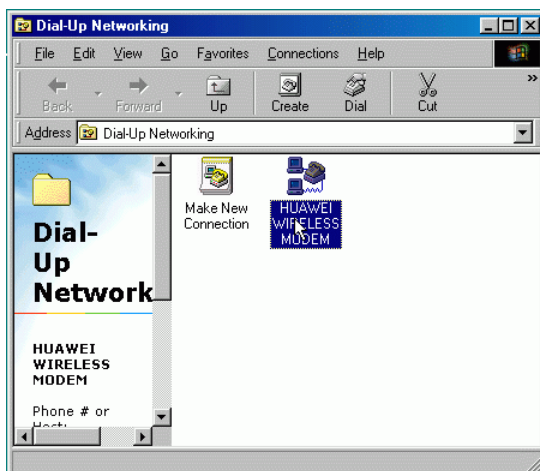


Figure 3-34 HUAWEI WIRELESS MODEM

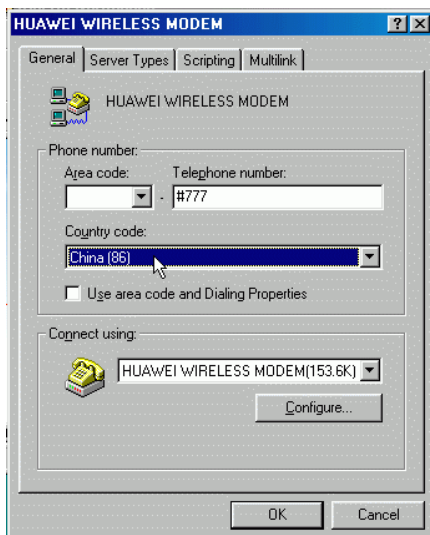


Figure 3-35 Dialing Properties

- 5) In the [Dial-Up Networking] dialog box shown in Figure 3-34, double click the icon "HUAWEI WIRELESS MODEM" to pop up the [Connect To] dialog box, as shown in Figure 3-36. Then enter User name, Password and Phone number in the corresponding text boxes. Click <Connect> to enter the dialing state. If the user name and password pass the authentication from the server, you can conduct the data services.

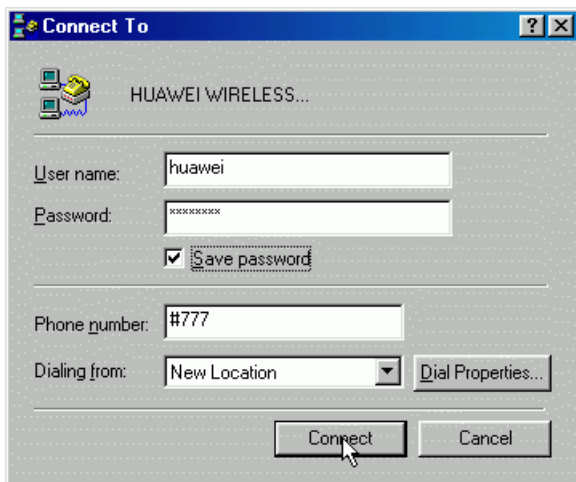


Figure 3-36 Dialing Setting



Caution:

You need to enter a high-speed packet access phone number in establishing a dialup connection. The login user name and password may be different in different networks. For more details, consult the local carrier while applying for the data services.

II. Dial Up to the Internet on Windows 2000

1) Click

[Start/Programs/Accessories/Communications/Network

and Dial-up Connections], and the [Network and Dial-up Connections] dialog box will pop up. Click [File/Make New Connection] to pop up the interface [Network Connection Wizard], as shown in Figure 3-37. Then click <Next> to continue.

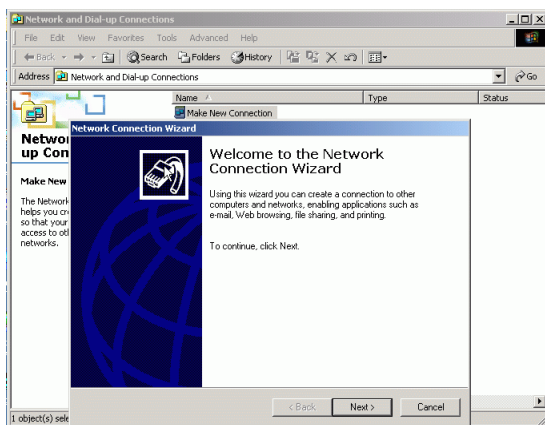


Figure 3-37 Network Connection Wizard

- 2) As shown in Figure 3-38, select the radio button followed by [Dial-up to private network], then click <Next>.

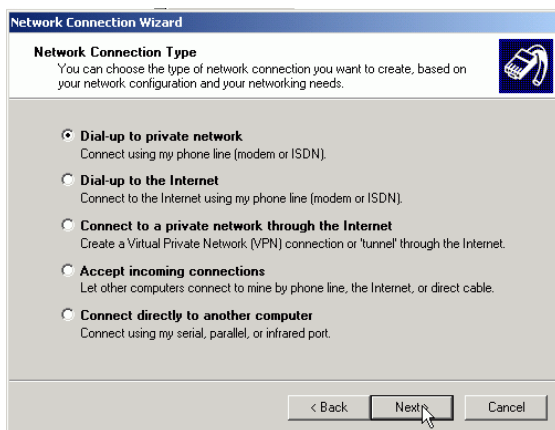


Figure 3-38 Select Network Connection Type

- 3) As shown in Figure 3-39, if only HUAWEI WIRELESS MODEM is installed in your operating system, you will not see the following window. Otherwise, select “HUAWEI WIRELESS MODEM”, and then click <Next>.


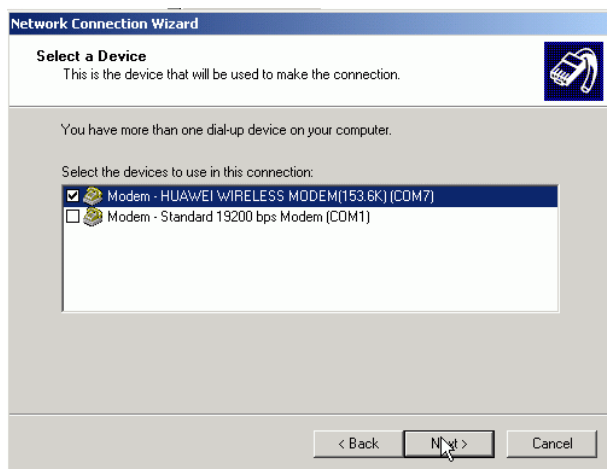


Figure 3-39 Select the Modem


- 4) As shown in Figure 3-40, enter the phone number (e.g., "#777") as required, and then click <Next>.

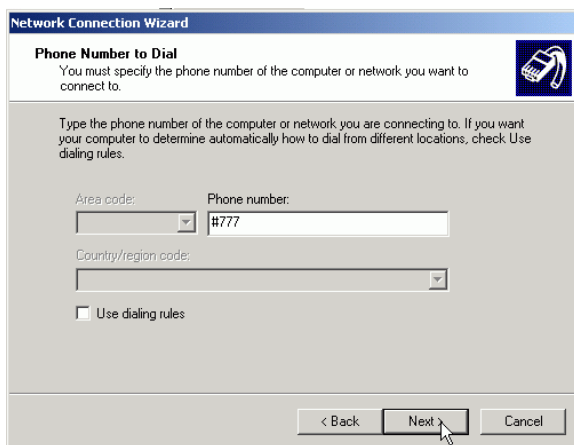

The screenshot shows the 'Phone Number to Dial' step of the Network Connection Wizard. The title bar reads 'Network Connection Wizard'. Below the title, the section is 'Phone Number to Dial' with a sub-instruction: 'You must specify the phone number of the computer or network you want to connect to.' To the right is a small icon of a mobile phone. The main text area says: 'Type the phone number of the computer or network you are connecting to. If you want your computer to determine automatically how to dial from different locations, check Use dialing rules.' There are three input fields: 'Area code:' (a dropdown menu), 'Phone number:' (a text box containing '#777'), and 'Country/region code:' (a dropdown menu). Below these is a checkbox labeled 'Use dialing rules' which is currently unchecked. At the bottom are three buttons: '< Back', 'Next >', and 'Cancel'. A mouse cursor is pointing at the 'Next >' button.

Figure 3-40 Enter Phone Number

- 5) As shown in Figure 3-41, select the radio button followed by [For all users], and then click <Next>.

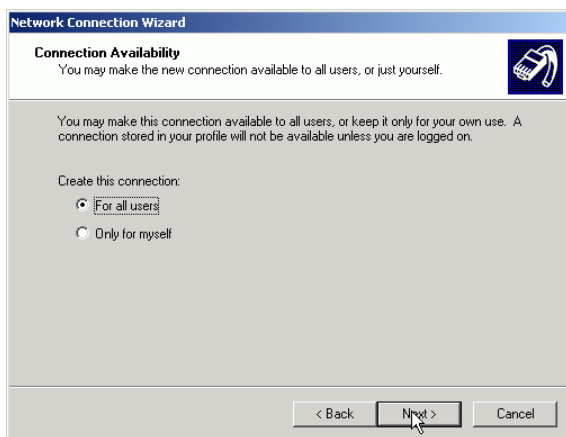

The screenshot shows the 'Connection Availability' step of the Network Connection Wizard. The title bar reads 'Network Connection Wizard'. Below the title, the section is 'Connection Availability' with a sub-instruction: 'You may make the new connection available to all users, or just yourself.' To the right is a small icon of a mobile phone. The main text area says: 'You may make this connection available to all users, or keep it only for your own use. A connection stored in your profile will not be available unless you are logged on.' Below this is the text 'Create this connection:' followed by two radio button options: 'For all users' (which is selected) and 'Only for myself'. At the bottom are three buttons: '< Back', 'Next >', and 'Cancel'. A mouse cursor is pointing at the 'Next >' button.

Figure 3-41 Connection Availability

- 6) As shown in Figure 3-42, type the name (e.g., "HUAWEI WIRELESS MODEM") you want to use for this connection, then click <Finish> to complete the establishment of dialing connection.



Figure 3-42 Finish Network Connection

- 7) In the [Network and Dial-up Connections] window, double click the new connection "HUAWEI WIRELESS MODEM" to enter the interface shown in Figure 3-43, then click <Dial> to enter the dialing state. If the user name and password pass the authentication from the server, you can conduct the data services.

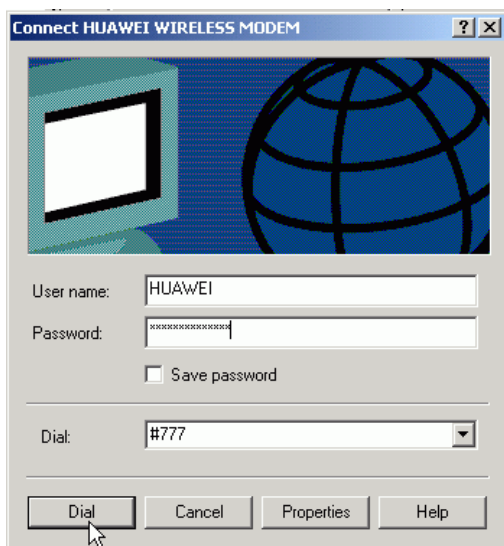


Figure 3-43 Dial-up to the Internet



Caution:

You need to enter a high-speed packet access phone number in establishing a dialup connection. The login user name and password may be different in different networks. For more details, consult the local carrier while applying for the data services.

III. Dial Up to the Internet on Windows XP

1) Click

[Start/Programs/Accessories/Communications/Network Connections], and the [Network Connections] dialog box will pop up. Click the menu item [Create a new connection] to pop up the interface [New Connection Wizard], as shown in Figure 3-44, and then click <Next>.

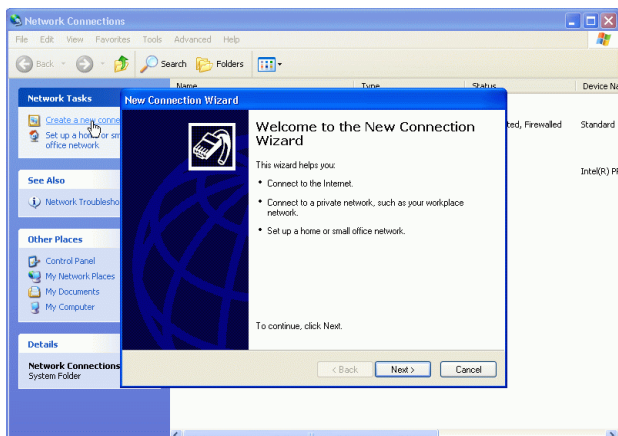


Figure 3-44 New Connection Wizard

2) As shown in Figure 3-45, select the radio button followed by [Connect to the Internet], then click <Next>.

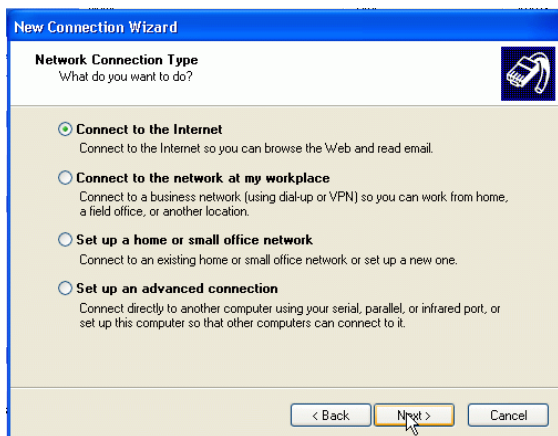


Figure 3-45 Select Network Connection Type

- 3) As shown in Figure 3-46, select the radio button followed by [Set up my connection manually] then click <Next>.

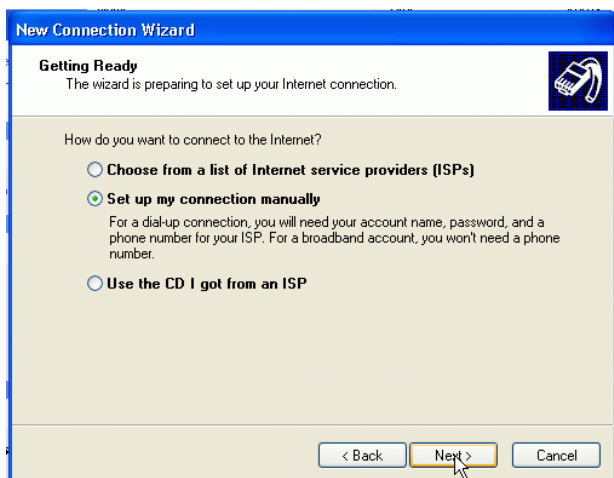


Figure 3-46 Select Connection Mode

- 4) As shown in Figure 3-47, select the radio button followed by [Connect using a dial-up modem], then click <Next>.

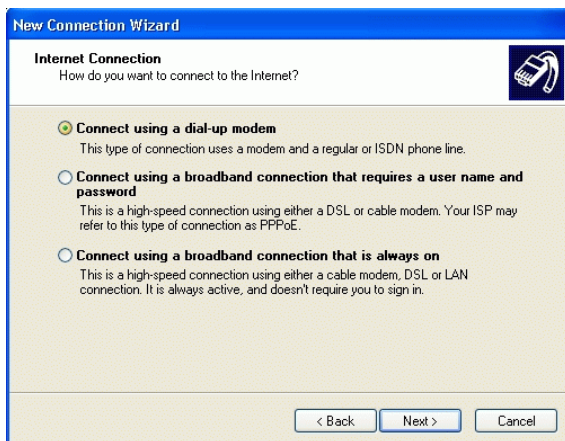


Figure 3-47 Select a dial-up Modem

- 5) As shown in Figure 3-48, if only HUAWEI WIRELESS MODEM is installed in your operating system, you will not see the following window. Otherwise, select “HUAWEI WIRELESS MODEM”, and then click <Next>.

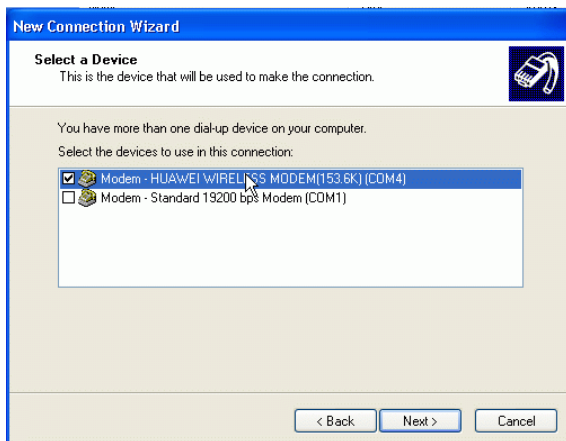


Figure 3-48 Select Modem

- 6) As shown in Figure 3-49, enter the ISP Name (e.g., “HUAWEI”) as required, and then click <Next>.



Figure 3-49 Enter ISP Name

- 7) As shown in Figure 3-50, enter the Phone number (e.g., “#777”) as required, and then click <Next>.

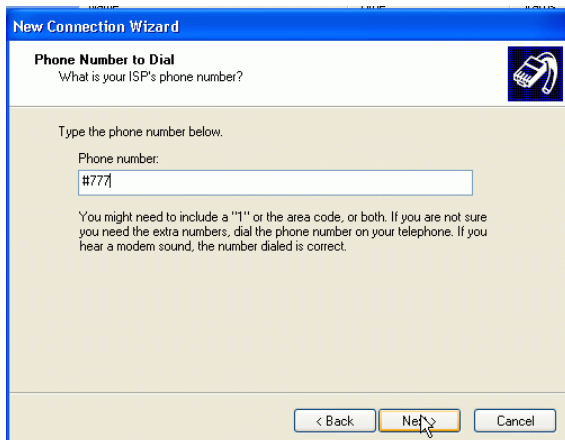


Figure 3-50 Enter Phone Number

- 8) As shown in Figure 3-51, enter the User name and Password as required, and then click <Next>.



The image shows a Windows-style dialog box titled "New Connection Wizard". The main heading is "Internet Account Information". Below the heading, it says "You will need an account name and password to sign in to your Internet account." and includes a small icon of a mobile phone. A paragraph of instructions follows: "Type an ISP account name and password, then write down this information and store it in a safe place. (If you have forgotten an existing account name or password, contact your ISP.)". There are three text input fields: "User name:" with the text "huawei", "Password:" with seven dots, and "Confirm password:" with seven dots. Below these are three checked checkboxes: "Use this account name and password when anyone connects to the Internet from this computer", "Make this the default Internet connection", and "Turn on Internet Connection Firewall for this connection". At the bottom are three buttons: "< Back", "Next >" (which is highlighted with a mouse cursor), and "Cancel".

Figure 3-51 Enter Internet Account Information

- 9) As shown in Figure 3-52, click <Finish> to create the connection and close this wizard.



Figure 3-52 Finish Creating a Connection

- 10) In the [Network Connections] window, double click the new connection "HUAWEI" to enter the interface shown in Figure 3-53, then click <Dial> to enter the dialing state. If the user name and password pass the authentication from the server, you can conduct the data services.



Figure 3-53 Dial up to the Internet



Caution:

You need to enter a high-speed packet access phone number in establishing a dialup connection. The login user name and password may be different in different networks. For more details, consult the local carrier while applying for the data services.

3.2.2 Low-speed Data Service Access

Compared with high-speed packet data service access, low-speed data service access provides a lower transfer rate. The differences between them are that you need to type a corresponding access telephone number, user name and password based on the access information provided by your ISP.



Caution:

It is likely that the connection rate displayed by the system is the one on a serial port. For a specific transfer rate, consult your operator.

3.2.3 PC Fax Service

You can use the PC fax service function to send/receive a fax. In addition, you can choose PC fax software as required.



Note:

For specific operations of PC fax software, refer to the instruction of the relevant software. This section only describes the relative operation of the FWT in implementing a PC fax service.

I. Preparations

- 1) Install HUAWEI WIRELESS MODEM driver on your PC.
- 2) Install the fax software on your PC.

II. Configuration Procedure

- 1) Connect one end of a USB cable to your PC, and the other end to the FWT.
- 2) Open the switch on the FWT, and set the baud rate between the FWT and your PC to 19200 bps through operation menus. The operation procedures are as follows:

Step	Operation
1	Press <MENU>, find [Settings], and then press <OK> to enter it.
2	Find [Common], and then press <OK> to enter it.
3	Find [Data Service], and then press <OK> to enter it.
4	Select [Data Rate], and press <OK> to enter it. The display screen shows the current serial baud rate. Press  or  to set the serial baud rate as 19200 bps.
5	Press <OK> to save the configuration.

Note:

If you unplug the data cable connecting the FWT and re-plug it, the baud rate of the serial port on the FWT will restore to the default value (230400bps). To change the rate, you need to reset the parameter.



Caution:

After configuring the serial baud rate on the FWT, you need configure the same rate for the PC fax software. For details, refer to the directions shipped with that software.

III. PC fax sending and receiving

Before receiving fax data through PC, first you need to set the FWT status as PC fax auto-receiving. The operation procedures are as follows:

Step	Operation
1	Press <MENU>, find [Settings], and then press <OK> to enter it.
2	Find [Common], and then press <OK> to enter it.
3	Find [Data Service], and then press <OK> to enter it.
4	Select [FAX Mode], and press <OK> to enter it. The display screen shows the current fax auto-receiving status. “ On ” indicates to enable the PC fax auto-receiving, while “ Off ” indicates to disable the PC fax auto-receiving. Press  or  to set the fax auto-receiving status as “ On ”.
5	Press <OK> to save the configuration.

 Note:

To disable the PC fax auto-receiving, just set the fax auto-receiving status as “**Off**”.
Alternatively, you can reset the FWT to change the status as voice answering mode.

 Caution:

To terminate PC fax data sending/receiving, you need to press <END>.

Chapter 4 Precautions

- 1) To enable the FWT to connect to the Internet, make sure that you have applied for the data services for the FWT after purchasing the data suite from the carrier.
- 2) The login user name and password may be different in different networks. For more details, consult the local carrier while applying for the data services.
- 3) If you are using the data services, such as dial-up to the Internet or the PC fax, the FWT will show "DATA SERVICE" indicating that the telephone is out of service. To use the telephone service, please end the data service applications on the PC first. If the FWT still shows "DATA SERVICE", please press <END>. Do not press this key while the data service is still in use.
- 4) During the installation of data service driver, please strictly follow the installation procedure described in this manual, and decide when to insert the USB cable.
- 5) After the installation of data service driver, please make sure the serial port of the Modem is consistent with the USB port.
- 6) After the installation of data service driver, please check if the Modem icon appears in the device explorer. If not, refresh the current display and find it.

Chapter 5 Troubleshooting

I. The system prompts that the Modem has no response at dial-up

- 1) Check whether you have switched on the FWT and connected the USB serial data cable properly.
- 2) Check whether the wireless Modem driver has been installed properly.
- 3) Check whether the baud rate on the serial interface of the Modem is 230400bps (by default). If it is not, you need to reset it to the default value and restart the FWT.

II. The system prompts that a dial-up networking connection can not be created or that the dial-up network is not connected to the server at dial-up

Check whether the user name and password typed are correct. If the fault still exists, contact the operator.

III. The system prompts that the remote server has no response at dial-up

- 1) Check whether the telephone number typed is correct. For example, the telephone number is “#777” when you dial up through the high-speed packet data service. For a specific number, consult the operator.
- 2) It is possibly that the remote server is busy. Retry later.

- 3) Make sure that you have applied for the data services.

IV. The serial port number of the Modem is not consistent with that of the USB in Win98/WinXP/Win2000 system

In Win98 system, you need to modify the serial port number of the Modem so that the serial port number of the Modem is the same as that of the USB. The process is shown as the follows:

- 1) Double click Modems at the control panel.
- 2) Select "HUAWEI WIRELESS MODEM (153.6K)".
- 3) Click <Properties>.
- 4) Select "Communications Port".
- 5) Click <Ok>.

In WinXP/Win2000 system, if the serial port number of the USB is changed which is not consist with that of the Modem, you can not modify the port number of the Modem. You must to reinstall the Modem follow the following steps.

- 1) Double click "Phone and Modem Options" at the control panel.
- 2) Select "Modems" tab.
- 3) Click <Add>.
- 4) Select "Don't detect my modem; I will select it from a list"
- 5) Click <Have Disk...>.
- 6) Put the CD of the data service which is came with the terminal to the CD-ROM and look for the following path: Driver Files\WinXP(Win2000).
- 7) Select the serial port number which is the same as that of the USB.