LOOXCIE

User Manual for Android

Model: LX1



Thank You for Purchasing Looxcie

Please read this user manual carefully before using Looxcie

Register Your Looxcie

To get important product updates, be sure to register your Looxcie at www.looxcie.com/support.

Customer Support

Visit www.looxcie.com/support or call 1-855-LOOXCIE if you need more help.

Contents

Looxcie Controls Overview	5	Creating Clips	21
Basic Looxcie Controls	6	Instantly Sharing Clips While Recording	24
Getting Started	7	Previewing Clips Sharing Clips	25 26
Charging Looxcie	7	Editing the Clip Title	27
Downloading the Looxcie App for Android	8	Deleting Clips	27
Pairing Looxcie to Your Smartphone	9	Transferring Clips to Computer	28
Adjusting the Fit	11	Deleting All Clips	28
Why Fit Matters	11	Viewing Video	29
Personalizing the Fit of Looxcie	12	Deleting Video	29
Pointing Looxcie Where You Look	13	Changing Settings and Configuring	23
Recording Level Video	13	Instant Share	30
	14		
Let's Start Recording with LooxcieCam		Updating Firmware with LooxcieDesktop	32
Recording Video with LooxcieCam	15	What Is LooxcieDesktop?	32
Previewing Your Clips	16	Upgrading Firmware with LooxcieDesktop	33
Saving Clips to Your Phone	17	Saving Clips and Video to Your Computer from Looxcie	33
Deleting Clips from Looxcie	17	Take or Make a Call	34
Let's Start Recording with LooxcieMoments	18		
Recording Video with LooxcieMoments	19	Looxcie Specifications	35

At a Glance

Learn about your Looxcie camcorder

Package Contents and Accessories









Looxcie Camcorder

Record and share life's unexpected moments.

USB Power Adapter

Plug into the wall to charge the camcorder.

Tip: Looxcie charges more quickly via the USB Power Adapter and when Looxcie is turned off.

USB Cable

Either plug into the power adapter or a computer to charge the camcorder.

Earbuds (small, medium, and large)

Try out the medium earbud that's already on Looxcie. If it doesn't feel snug or secure, choose another size.

Looxcie Controls Overview



Basic Looxcie Controls



Record button

Press to start recording.





Power/Call Control button

Press and **hold for five seconds** to turn on Looxcie.

Press and **hold for five seconds** to turn off Looxcie.

Press to answer an incoming call.

Press to end a call.



Instant Clip button

Instant Clip: press to save the last 30 seconds of video.

Instant Clip & Share: press and hold for two seconds to save and instantly send the last 30 seconds of video to a favorite.

Go to Settings in the LooxcieMoments App to set up your Instant Share favorites. See Sharing Shortcuts on page 30 for more information.



Volume button

Raise the volume with a single touch. Once the volume reaches its highest level, it starts again at the lowest level.

Getting Started

Charging Looxcie

It's best if you charge Looxcie for two hours before using it the first time. Please don't wear Looxcie while it's charging. You'll know Looxcie is fully charged when the Indicator light on the underside of the boom stops flashing and turns off.

Tip: For faster charging, keep Looxcie turned off while charging.

Using Power Adapter

Plug one end of the USB Cable into the Micro USB Connector on Looxcie and the other end into the USB Power Adapter. Then plug the USB Power Adapter into a power outlet. The fastest way to charge Looxcie is to turn it off and use the Power Adapter.

Using Your Computer

Plug one end of the USB Cable into the Micro USB Connector on Looxcie and the other into the USB Socket on your computer.







Using your new Looxcie



Indicator light (green)

Flashes green while charging.

Stays green when almost fully charged and turns off when fully charged and plugged in.

Pulses green when Looxcie is on.



Record light (red)

Glows red while recording.

Downloading the LooxcieCam and LooxcieMoments Apps for Android

To view, edit, and share Looxcie videos, you'll need to download the LooxcieCam or LooxcieMoments App to your Android phone. Turn on your smartphone, launch your smartphone web browser, and download the app from www.looxcie.com/m.



Download the LooxcieCam and/or LooxcieMoments App to your smartphone

Pairing Looxcie to Your Smartphone

Like all Bluetooth®-enabled devices, you must pair Looxcie to your phone so they can communicate. We recommend pairing Looxcie with your phone after you have fully charged Looxcie and downloaded the LooxcieCam or LooxcieMoments App.

Pairing Looxcie for the First Time

Enter pairing mode

Press the Power/Call Control button for 5 seconds to turn on Looxcie.

If it's the first time you've turned Looxcie on, it will enter pairing mode automatically (the green Indicator light and red Record light will flash).

If Looxcie doesn't go into pairing mode, hold and press the Volume and Power/Call Control buttons at the same time until the Indicator light (green) and Record light (red) start flashing.

Turn on Bluetooth (on your phone)

On most phones, you turn on Bluetooth in Settings. You'll likely find the Bluetooth feature in one of the following places, though it varies by phone:

Settings>General>Bluetooth Settings>Tools>Bluetooth

Settings>Wireless & Networks>Bluetooth Settings>Scan for Devices

If you need more help, try looking in your phone's user manual.



Indicator light (green)



Power/Call Control button



Volume button



Turn on Bluetooth (on your phone)

3 Choose Looxcie when your phone shows search results

Your phone should show which Bluetooth-enabled devices are already paired with it as well as any other close-by Bluetooth-enabled devices, including your Looxcie.

Select **Looxcie** to pair it with your phone. If you need a PIN or passkey, enter "0000".


When your Looxcie and phone are successfully paired, the Record light (red) will turn off and the Indicator light (green) on your Looxcie will pulse every three seconds. Your phone will also list Looxcie under Bluetooth devices and note that it's paired and connected.

Manually Pair Looxcie (if it has been previously paired)

Make sure Looxcie is turned on. Enter the pairing mode manually by pressing and holding the Volume and Power/Call Control buttons at the same time until the Indicator light (green) and Record light (red) start flashing.

Follow the same steps as above: turn on Bluetooth on your phone and then choose **Looxcie** from the phone's search results. If you need a PIN or passkey, enter "0000".

Tip: Check your phone's user manual for more information on pairing devices with your phone.

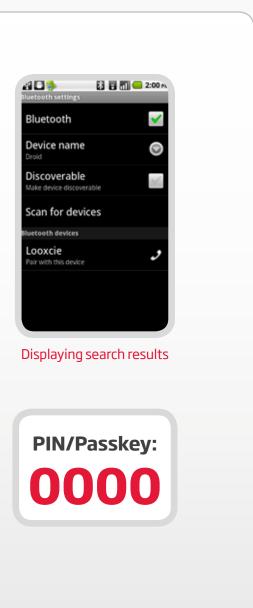

Adjusting the Fit

Personalize the fit of your Looxcie so that it's stable, comfortable, and records video that's level



Camcorder Boom

Gently rotate to make video level.



Rotating Earpiece

Looxcie can be worn on either ear by rotating the earpiece. Be sure to rotate the earpiece toward the front and be careful not to over rotate.



Bendable Earloop

Twist, turn, and shape to fit Looxcie securely and comfortably on your ear and to point it where you look.

Why Fit Matters

Every head and ear is different – so you'll need to personalize Looxcie's fit to make it just right for you. If you fit it correctly, it'll be snug in your ear and record video that's level.

Personalizing the Fit of Looxcie



You can move Looxcie around with different twists, bends, and turns to fit it comfortably and securely on your ear. When Looxcie fits correctly, it won't move when you shake your head. You may need to take Looxcie off your ear, adjust it, and then put it back on a few times before it fits perfectly.

Here are some tips to get you started.

Take the time to personalize Looxcie.

Fit is everything with Looxcie. It may take a few minutes to personalize your Looxcie.

When personalized, Looxcie will be stable, comfortable, and ready to record everything you see.

Decide whether you'll wear Looxcie on your left or right ear. Then turn the Rotating
Earpiece to fit the ear you want.

Choose the correct earbud. Make sure the earbud is snug and secure. If it isn't, try a smaller or larger earbud.

Slide Looxcie over your ear. Starting with the bottom of the earloop, slide Looxcie gently around your ear.

Bend the earloop. If you have a small ear, try bending the earloop down for a snug fit.

For more help, see our Adjust the Fit Video at: www.looxcie.com/how-looxcie-works.html.

Pointing Looxcie Where You Look

- If Looxcie is pointing up, hold the back of the earloop and push the Camcorder Boom down.
- If Looxcie is pointing down, hold the back of the earloop and push the Camcorder Boom up.
- If Looxcie is pointing to the side, hold the back of the earloop and push the Camcorder Boom until it lightly touches your cheek.

Recording Level Video

Start the LooxcieCam or LooxcieMoments App and record some video. Use the Viewfinder on your smartphone to make sure the video is level. If it's not level, you can simply turn the boom until the video is level.

When you're done personalizing your Looxcie fit, it may look something like this:






Roll adjustment on Camcorder Boom

To get more help on getting your Looxcie to fit just right, view the Adjust the Fit video.

Let's Start Recording with LooxcieCam

Take full-motion 480p video to preserve your memories

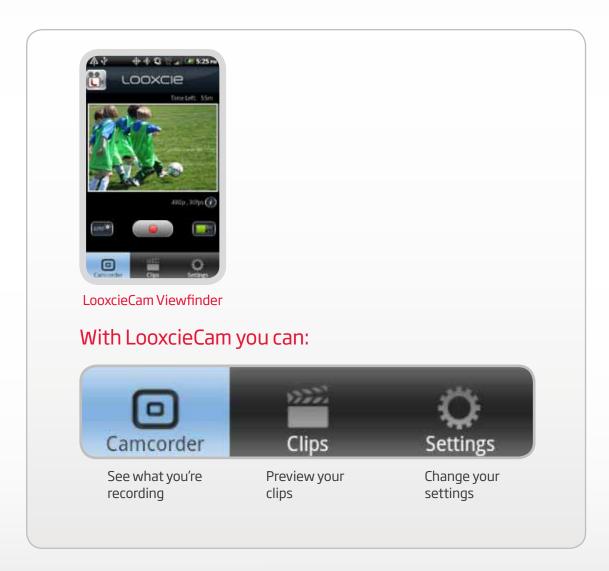



Use LooxcieCam with your Looxcie camcorder to:

- Record one hour of 30 fps video in full 480p
- Use your phone as a viewfinder
- Transfer and save recorded video to your phone or computer

Recording Video with LooxcieCam

It's easy to start recording with the LooxcieCam App.

- Launch LooxcieCam on your phone.
- Press and release the Record button on Looxcie or tap the button on the App's Viewfinder.

You'll know you're recording when you see:

- Solid red button.
- Flashing red "Rec" light on the upper left of the Viewfinder.

To stop recording, press and release the Record button on Looxcie or tap the on the App's Viewfinder. Looxcie automatically saves your recording as a clip. Preview recorded clips by tapping **Clips**.

You may want to check that your video is level and aimed correctly using the Viewfinder. If it's not, simply adjust Looxcie until the video is level and aimed correctly.

Tip: The timer in the upper right corner of your Viewfinder shows how many more minutes of video you may record.

Looxcie automatically adjusts for different light levels. It's easy to adjust the light mode manually. Just press the Light Mode indicator on the bottom left of the App Viewfinder.











Sun

Night

Backlight

Fluorescent

Incandescent


Previewing Your Clips

To preview a clip:

- Tap **Clips** in the LooxcieCam App.
- Tap the clip you want to preview, then tap the button.

When you preview clips on your phone, the playback will be choppy due to limited Bluetooth bandwidth between Looxcie and your phone. Save the clips to your phone or connect and save to your computer for high-quality playback.

Note: Clips created via LooxcieMoments will also appear on your Clips list. The LooxcieCam clips are easy to spot – you'll see "480p" on the thumbnails of LooxcieCam clips.

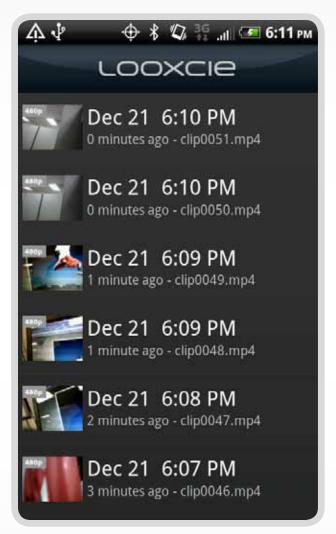

Clips list

Saving Clips to Your Phone


It's easy to transfer and save clips to your phone.

- Tap **Clips** in the LooxcieCam App.
- Tap the clip you want to save.
- Tap **Save**.

Note: Because LooxcieCam creates video clips in 480p that may be large, it may take awhile to transfer and save them to your phone.

Deleting Clips from Looxcie

- Go to Clips.
- Tap the clip you want to delete.
- Tap the trashcan.
- Tap **Delete** to confirm that you want to delete the clip.

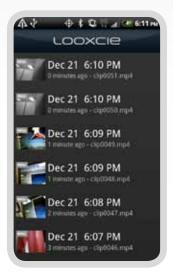

Clips list



Delete clip

Let's Start Recording with LooxcieMoments

favorites


Record and share unexpected moments with the LooxcieMoments App for Android



Looxcie Viewfinder

With LooxcieMoments you can:

created

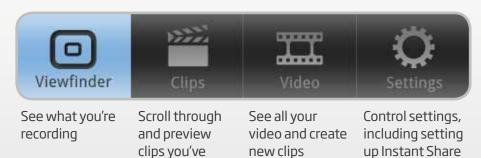



With LooxcieMoments you can:

- Record up to five hours of video
- Create 30-second instant clips
- Instantly share clips with your favorites when LooxcieMoments is running

Recording Video with LooxcieMoments

Loop Looxcie around your ear and turn it on with the Power/Call Control button. Launch LooxcieMoments on your Android phone to see the Viewfinder screen. Press the Record button on Looxcie or tap the button on the LooxcieMoments Viewfinder to start and stop recording.

Check that video is level

You can adjust Looxcie until the image is level in the Viewfinder. You can view video in landscape or portrait mode.

Check light mode

Looxcie automatically adjusts for light levels as your environment changes. If you want to manually change the light mode, press the Menu button on your Android phone and then choose a different light mode.

Tip: Use the Back button on your smartphone to return to a previous screen in LooxcieMoments.



Sun Night



nt



Backlight



Fluorescent



Incandescent



Record button



Power/Call Control button

Join the action!

Once you like what you see on the Viewfinder, you can put your smartphone to sleep to save your battery. LooxcieMoments will keep running in the background. Looxcie will record up to five hours of video before it loops back and records new video over your oldest video.

Tones you might hear while recording

Power On	4 rising tones
Power Off	4 falling tones
Low Battery	2 low tones
Out of Range	Slow error tone
Bluetooth Connected	3 rising tones
Bluetooth Disconnected	3 falling tones
Answer Call	2 rising tones
Answer Call End Call	2 rising tones 2 falling tones
End Call	2 falling tones
End Call Instant Clip	2 falling tones Multiple tones

Battery Indicator Battery full Battery 75% Battery 50% Battery 25% Battery <10% Battery empty Charging

Creating Clips


You can create clips in two ways:

- For instant clips of the last 30 seconds you recorded, use the Instant Clip button on Looxcie.
- For clips up to 30 minutes in length from all your recorded video, simply use LooxcieMoments on your phone.

Creating instant clips from Looxcie

To create an instant clip, press and release the Instant Clip button on the underside of the Camcorder Boom. When your clip is saved, you'll hear a rapid tone. LooxcieMoments will also show that you've made a clip.

Note: When you play clips in preview mode, they might be choppy. Don't worry. When you email or post the clips, they'll be much higher quality.

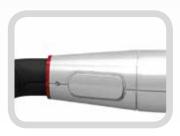

Instant Clip button

Press and release to create a clip from the last 30 seconds of video

Press and hold to create a clip and instantly share it with favorites

Creating clips from your Android phone

If you recorded video but didn't save it as an instant clip, you can still make new clips up to 30 minutes in length from all your recorded video. There are two ways to create clips from your phone: Quick Clips and Custom Clips.

Quick Clips: 30-second clips



Tap **Video** to see all the video you've recorded. Drag the pointer \P to the place on the video scrollbar where you want your clip.

Tap **Quick Clip** to create a 30-second clip around the place you've chosen. The clip will include 15 seconds before and 15 seconds after the location you've selected.

A text box will appear that says: "Make a 30-second clip around this point?" Tap **Yes** to create and save the clip. Tap **No** to return to the video scrollbar.

To preview the clip, click the Back button on your phone and then tap the Play button.

Custom Clips: Clips up to 30 minutes



Set beginning of your new clip

To create a clip longer than 30 seconds, tap **Custom Clip**.


Tap the place on the video scrollbar where you want to start the clip. You can also use the video controls (play, fast forward, and rewind) to find the place you want to start your clip.

Tap **Set Start.** The Start Clip icon <u>a</u> indicates the beginning of your new video clip.



Set end of your new clip

Drag the pointer with your finger or use the video controls to find the end point for your clip. Tap **Set End**. The End Clip icon marks the end of your new video clip.

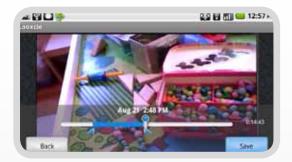

Save and title your clip

Tap **Save**.

The Edit Title screen will appear.

Type a new title and tap **Save** or just tap **Save** to create a default title (time and date video created). You can edit the title of a clip later by tapping on the Clip Details screen.

Tap **View Clip** to preview your new clip.

Tap **Back to Video** to return to the video screen.

Instantly Sharing Clips While Recording


Press and hold the Instant Clip button on Looxcie until you hear a series of tones. This signals that your 30-second clip is being created.

Next, the Share Clip screen will appear in LooxcieMoments, giving you options for sharing the clip.

Choose a contact from the Share Clip screen or do nothing to send the clip to your Instant Share favorite.

Go to page 30 to learn how to set up Instant Share and Sharing Shortcuts in Settings.

Tip: You must have LooxcieMoments running on your Android phone and connected to Looxcie to use the Instant Share feature. LooxcieMoments can be running in the background.

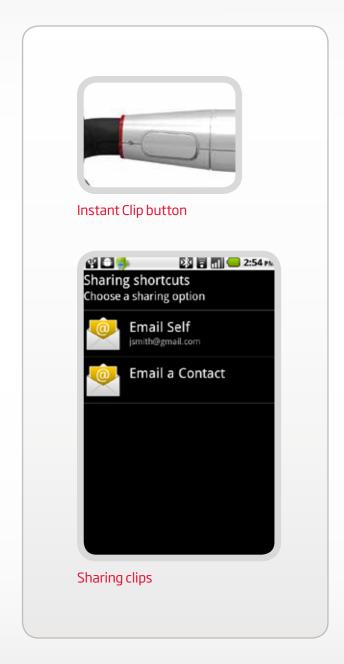


Previewing Clips

Tap **Clips** on LooxcieMoments. Clips are listed in chronological order, with the most recent clip first.


Scroll with your finger to find the clip you want to preview. Touch and hold its thumbnail or title to go to the Clip Details screen.

To play the clip, simply tap . You can drag the pointer along the scrollbar to play the clip from a new place. When the clip finishes playing, you'll return to the Clip Details screen.

When you preview clips, they might be choppy. When you email or post the clips, they'll be much higher quality.

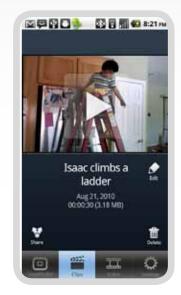

Clip details

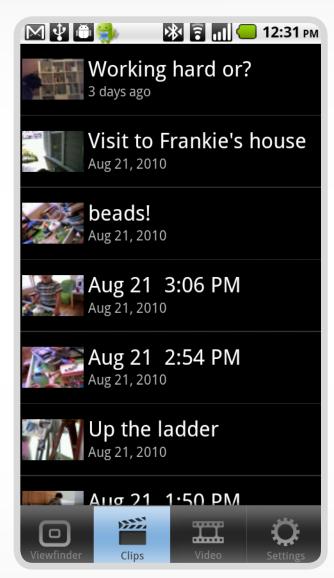

Clip list

Sharing Clips

Tap **Clips** on LooxcieMoments. Clips are listed in chronological order, with the most recent clip first. Scroll with your finger to find the clip you want to share. Touch its thumbnail or title to go to the Clip Details screen. Tap the **Share** icon on the Clip Details screen.

The Share Clip screen will show options for sharing your clip.

Select the sharing option you want to use to share your clip.


Depending on clip size, it may take 30 seconds to several minutes for your smartphone to download the clip from Looxcie. During this time, you will not see the live Viewfinder or be able to navigate LooxcieMoments. You can, however, continue to record.

Clips waiting to be shared

If your smartphone does not have a network connection, LooxcieMoments will queue the clip and send it later, when you do have a connection.

Clip too large

If your clip is too large to share, LooxcieMoments will let you know. To share a large clip, connect Looxcie to your computer, copy the clip to your computer via the provided USB Cable, and then share it from there. See page 28 for help transferring clips to your computer.

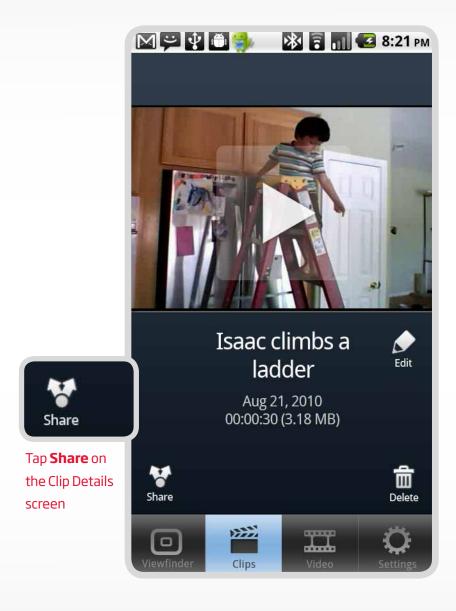


Editing the Clip Title

- Tap Clips on LooxcieMoments. Clips are listed in chronological order, with the most recent clip first.
- Scroll with your finger to find the clip you want to edit.
- Touch and hold its thumbnail or title to go to the Clip Details screen.
- Tap Edit on the Clip Details screen.

Deleting Clips

- Tap Clips on LooxcieMoments.
- Scroll with your finger to find the clip you want to delete.
- Touch its thumbnail or title to go to the Clip Details screen.
- Tap **Delete** on the Clip Details screen.

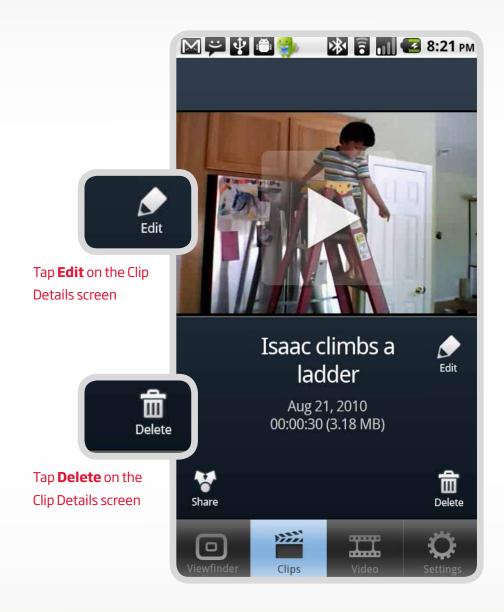


Transferring Clips to Computer

Plug one end of the USB Cable into the Micro USB Connector on Looxcie and the other into the USB Socket on your computer. Your computer will see Looxcie as a mass storage device (like a USB drive or a camera). Copy the clips to your computer.

Deleting All Clips

- Tap **Clips** on LooxcieMoments.
- Press the Menu button on your Android phone.
- Tap **Delete All Clips** from the menu that appears.
- Click the box that says "OK to delete all clips."
- Tap **Delete**.

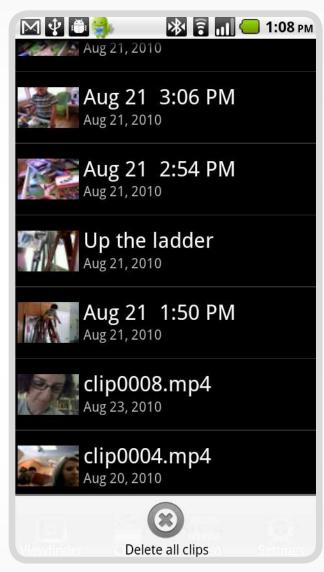

Delete all clips

Viewing Video

There are two ways to view video using LooxcieMoments: you can preview clips using the Clips tab or preview all your captured video using the Video menu tab.

To preview all video, tap **Video** on LooxcieMoments. The date and time stamp shows when video was taken. If the date and time stamp says "Now," you are viewing live video. The controls at the bottom of the screen let you rewind, fast forward, pause, or play the video. You can also drag along the video scrollbar to skip to any point in the video.

To show or hide video controls, simply tap the screen.

Tip: Because all video you record is stored on Looxcie, Looxcie must be connected to your phone to view video. Looxcie stores up to five hours of video before it begins recording over the oldest video.

Deleting Video

Tap **Video** on LooxcieMoments to view your video. Press the Menu button on your Android phone and tap **Delete All Video** to delete all video from Looxcie. Rest assured, it won't delete the clips you've made.

Changing Settings and Configuring Instant Share

Tap the **Settings** menu item on LooxcieMoments to change your settings.


Your email account

Enter the email address and password for the account you want to use to send Looxcie clips and tap **Save**.

Sharing Shortcuts

You can add shortcuts to share clips using Facebook, YouTube, or Twitter video services. To set up these shortcuts, tap **Sharing Shortcuts**, and then tap **Add a Sharing Shortcut**. When you're ready to share a clip, you can choose your option from the shortcuts you've set up.

Important note: You'll need to enter your personal upload email address for each social media service to set up Facebook, YouTube, and Twitter as Sharing Shortcuts.

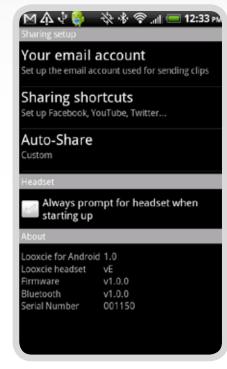

Sharing setup

Instant Share

Pick a contact to be your Instant Share favorite. If you want your Instant Share favorite to be a site like Twitter or Facebook, be sure to first set it up in Sharing Shortcuts.

How to find your personal upload email addresses using your computer

If you want to create shortcuts to Facebook, YouTube, or Twitter video services, you'll need a personal video upload email address for each site.

YouTube

Go to www.youtube.com/account#mobile and sign in. Choose **Mobile Setup** from the menu. Your personal video upload email address is in the blue box.

Facebook

Go to www.facebook.com/video/?upload and sign in. Choose **Mobile Video** from the menu. Your personal video upload email address is in the blue box.

Twitvid

Go to www.twitvid.com/index.php?area=upload and sign in. You can use your Twitter account username and password. Your personal video upload email address is in the blue box that says "Email or MMS your video to:".

Updating Firmware with LooxcieDesktop

Get the most out of your Looxcie

What Is LooxcieDesktop?

LooxcieDesktop is a utility application that installs on your Windows or Mac computer and extends your Looxcie experience. LooxcieDesktop upgrades your Looxcie with new features and capabilities as they are available, and it helps you manage and archive your video for easy editing and backup. LooxcieDesktop lets you:

- Upgrade the firmware on your Looxcie.
- Transfer and save all your clips to your computer.
- Easily transfer and archive video recorded with LooxcieMoments to your computer in 30-minute segments.

Upgrading Firmware with LooxcieDesktop

- Download and install the LooxcieDesktop application from www.looxcie.com to your computer.
- Connect your Looxcie to your computer using the USB cable.
- Launch LooxcieDesktop on your computer.
- Check for updates and follow the easy instructions.




Welcome

Saving Clips and Video to Your Computer from Looxcie

To save clips and video from your Looxcie to your computer, connect Looxcie to your computer and launch LooxcieDesktop. From the Save Options screen, you may choose from three options:

- Save clips to your computer. Choose this option to save all the clips created via LooxcieMoments and/or LooxcieCam to your computer.
- Archive video from LooxcieMoments in 30-minute segments.
 Choose this option to archive 30-minute segments of all the video you've recorded in LooxcieMoments. Once the video is on your computer, you can view and edit it with your favorite media player and film editor.
- Delete clips from Looxcie. Choose this option to delete all files in the Clips folders. Don't worry: this won't delete the video you've captured in LooxcieMoments.

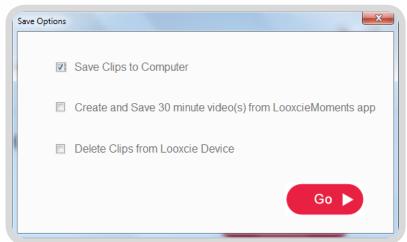

Save Options

Take or Make a Call

To use Looxcie as a Bluetooth headset, it needs to be paired with your Android phone and turned on



Power/Call Control Button

Answer a Call

Press the Power/Call Control button on Looxcie or answer using your phone. Looxcie will beep twice when the call begins.

End a Call

Press the Power/Call Control button on Looxcie or end the call using your phone. Looxcie will beep twice when the call ends.

Transfer Audio to Smartphone

Press the Power/Call Control button twice while you are on a call to transfer audio back to your phone.



Volume Button

Send a Call to Voicemail

Press and hold the Volume button on Looxcie or reject the call using your phone.

Redial

Press and hold the Volume button to redial the last number you called.

Change the Volume

Press the Volume button until it's at the volume you want. The volume will rise until it reaches its loudest level and then start over at the lowest level.



Smartphone

Make a Call

Enter a phone number on your Android phone and press **Send**; the call will transfer to Looxcie.

Answer Call Waiting

Accept a second call using your phone or ignore it to send the caller to voicemail. Looxcie will beep twice to notify you that there is a second incoming call.

Looxcie Specifications

Wearable	Weighs less than 28g (1 oz.)
Video	HVGA video resolution
	4 GB on-board storage
	5+ hours of LooxcieMoments video storage
	4+ hours of LooxcieMoments clip storage 1+ hours of LooxcieCam clip storage
	f 2.8 lens
	Auto high color and light correction
	MP4 video files
Battery	Fast-charging 365mAh lithium polymer battery
	UL/CSA-approved power supply
	4+ hours record time*
	10+ hours talk time*
Headset	Bluetooth® Class 2
	Bluetooth® V2.1 + EDR
	Hands Free Profile (HFP 1.5)
Audio	Range to 33 feet
	Dual silicon MEMS microphones
	DSP-based noise cancellation
USB	Micro USB Connector
	USB 2.0 mass storage compatibility
	* Varies based on how you use Looxcie.



Copyright © 2010 Looxcie, Inc.

All rights reserved. Looxcie is a registered trademark of Looxcie, Inc. All other trademarks are the property of their respective owners.

For more information, visit www.looxcie.com.