



Conquest *User Manual*

2014 Fiat Model



Just go

Cotton Springs Farm
Friendless Lane, Flamstead
Hertfordshire, England
AL3 8AF
Tel: **01582 842888**
Fax: 01582 843 610
Email: reservationsuk@justgo.uk.com

www.justgo.uk.com

MOTORHOME HIRE • UK • EUROPE • NEW ZEALAND • AUSTRALIA

Contents



- **A step by step quick guide to start your holiday**
 - Setting Off Page 3
 - Stock up with food Page 4
 - Finding a Campsite Page 5
 - A quick guide to setting up on your first night Page 6
- **Emergency & Useful Numbers**
 - Includes Just go contact numbers, Breakdown assistance & other useful numbers Page 7

Complete guide to operating your motorhome

- LPG gas Instructions Page 9-10
- Toilet Cassette & Fresh water tank Page 11
- Bike rack & Reversing Camera Page 12
- Grey water tank Page 13
- Habitation Door Page 13
- Towing eye location & Vehicle Dimensions Page 13
- Control Panel Page 14
- Hob & Grill Page 15
- Heating & hot water system Page 16 & 17
- Frost protection Switch Page 17
- Bathroom (toilet, shower, sink operations) Page 18
- TV Page 19
- Fridge Page 20
- Bed conversions Page 21

Cabin & Optional Extras operations

- Starting the vehicle / Trip Control Page 1
- Air Conditioning / Instrument panel Page 2
- Radio controls Page 3
- Cab Exterior Page 3
- Generators Pages 7-10
- Satellite Navigation Page 11
- Snow Chains Pages 12-13

General information

- **Basic Motorhome Driving Advice** Pages 15-16
 - Top tips – Obstacles to avoid Page 17
 - UK/European useful signs & driving information Pages 18-20
- **London Congestion Charge Information** Pages 21-22
- **Places to Stay & Visit**
 - Local campsites to Just go Page 23
 - UK campsite websites & Places to visit Page 24
 - Environment & Keeping safe Page 25
- **Refilling Information**
 - Local filling station for LPG gas & diesel upon your return to Just go Page 27
 - Includes list of filling stations which supply LPG gas. Pages 28-39
- **Returning the motorhome**
 - Information on how to return your motorhome Page 41
 - Map of how to find Just go depot Page 42
 - Just go handover checklist
- **Just go Terms & Conditions**
- **A5 Document Pocket**
 - Includes Rental Agreement / Additional driver declaration (if applicable)
 - EU Green Card / Ferry Crossing (if applicable)

Getting started on your holiday



Keen to get your motorhome adventure started?

To help get you on your way we have put together a 'Quick starter's' guide to get you settled on your first night in your motorhome.

Step 1 Setting off

Packing up your motorhome:

- Need a hand? Please feel free to ask for a helping hand with your suitcases.
- If you're tight on space we can also store your suitcases for you while you are away, please just ask.
- If you're stopping at relatives or friends on your holiday, you can make use of their electricity by hooking up the motorhome to their power supply. Please ask us and we can supply you with a UK plug adaptor.

Get the holiday feeling from the moment you arrive at Just go!

Plan of action:

- Make sure before you set off your satellite navigation is all charged and your next location is entered in so you're ready for the off
- Maps are supplied with the vehicle to use the old school method of navigation!

I don't have Satellite Navigation?

- Take the hassle out of navigation and the arguments it tends to cause. You're more than welcome to hire one of ours, come in the office and the staff will be happy to help arrange one for you.
- We can also help input your first location for you, and give you a quick guide if you're unsure of how to use one.

Ready to go?



- Need the loo?, make sure everyone is ready for the off, although you have a toilet onboard you don't want to be using this before you have even left us!
- As much as we love kids don't forget to do a final head count before leaving!!
- Switch your fridge onto the battery symbol before you leave so your fridge will be cooling while you are driving to the supermarket!
- Once you're all packed make sure your gas is off, the vehicle is unplugged from the mains, the windows are all shut, you have the keys and then you are ready for the open road.

We want you to have a fantastic holiday so please let us know if we can do anything further to help.

Step 2 Stock up with food

- **Hungry?** There are 2 supermarkets (north & south) just moments away from Just go where you will be able to stock up with all the necessities before you reach your 1st campsite.




North

Dunstable Tesco's Stores
Skimpot Road
Dunstable
Luton
LU5 4JU

Drive time : 15 mins
Distance: 9 miles

- Join the M1 motorway Northbound and continue till you reach Junction 11
- Come off at Junction 11 & take the A505 exit to Luton/Dunstable
- At the roundabout, take the 1st exit onto Dunstable Rd/A505 heading to Dunstable
- At the roundabout, take the 1st exit onto Skimpot Rd/A5065
- Turn right and you have reached Tesco's

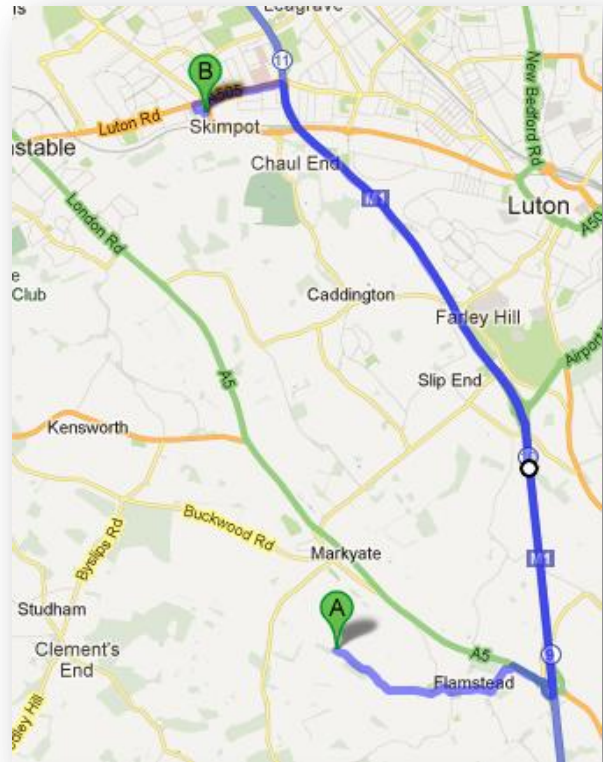


We will be more
than happy to
programme the
address into your
Sat Nav for you!

South

Hemel Hempstead Tesco's Stores
Jarman Way
Hemel Hempstead
Hertfordshire
HP2 4JS


Drive time : 15 mins
Distance: 9.1 miles

- Join the M1 motorway Southbound and continue till you reach Junction 8
- Come off at Junction 8 exit onto Breakspear Way/A414 toward Hemel Hempstead
- At the roundabout, take the 1st exit onto Bennetts End Rd
- Turn right at St Albans Hill and you have reached Tesco's

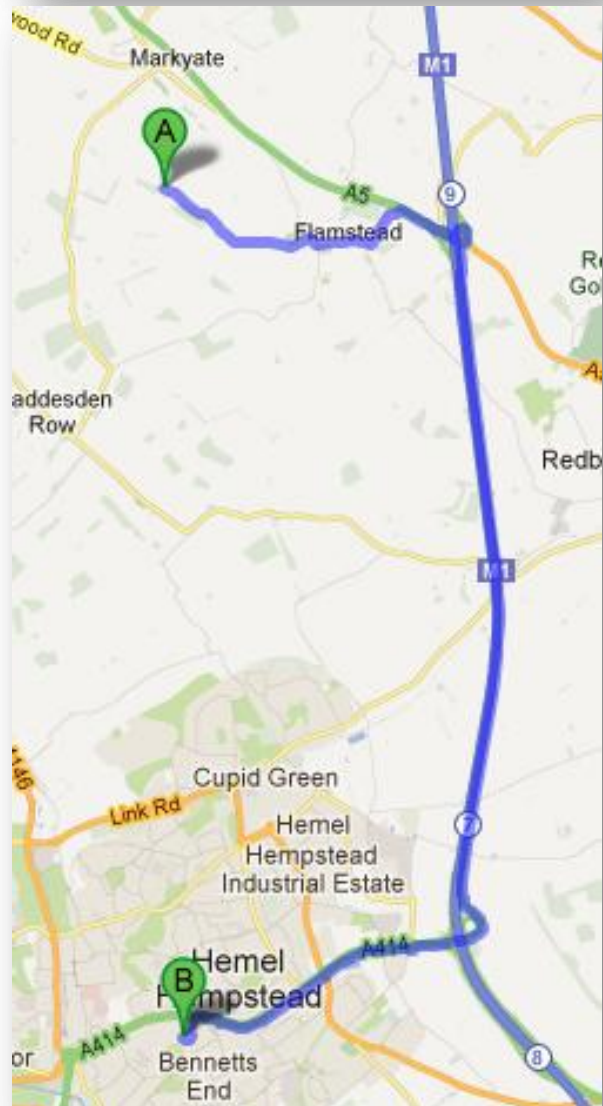

Step 3 Finding a campsite

- **Long day?** If you are looking to relax and unwind after a long day's travel then look no further than Town Farm Campsite. At only 25 minutes (approx) drive from Just go Town Farm is an ideal site for your first pit stop. (For more local campsites please see the Places to stay & visit section)

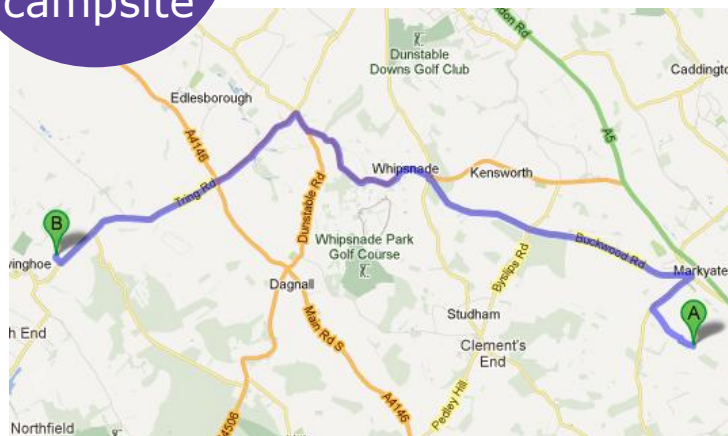

Drive Time from depot: 25 mins

Distance from depot: 9.5 miles

Location Description: Ideally situated in the Chiltern Hills this picturesque, friendly campsite is only 25 minutes from the Just go depot. Perfect as a base for your first or last night. The campsite is a working farm situated in the picturesque setting at the foot of the Chiltern Hills, home of the Ivinghoe Beacon.

Town farm

Town farm, Ivinghoe, Leighton Buzzard, LU7 9EL

Opening times: All year

Tel: 07906 265 435 **Contact:** Charles

Email: cwleach33@yahoo.co.uk

Website: <http://www.townfarmcamping.co.uk/home>



Why not let us
phone ahead
and reserve you
a pitch?

Campsite details:

No. of pitches (with hook up)	Shower & Toilet Facilities (disabled)	Hard standing	Laundry Facilities	Dish washing Facilities	Waste disposal	Water Points
18 (18, (extra £2.50)	✓ (inc disabled)	✓	✓	✓	✓	✓
Shop on site	Eating facilities on site	Nearby Pub	Kids play area	Pet friendly	Tariff (based on a motorhome with 2 people (no hook up)	Additional costs
✗	✗	✓	✓	✓	£20.00 per night	Additional adults, dogs and gazebo's all free

Things to do:

Activity	Description	Websites
Pick your own 	if you have time to stock up on freshly grown fruit and vegetables Town farm runs a pick your own during summer months	http://www.townfarmcamping.co.uk/info-events
Rose and Crown 	Traditional English pub a walkable distance of 0.6 miles from the campsite	http://www.roseandcrownivinghoe.com/index.html
Ivinghoe Beacon 	A high point of the Chiltern hill's which offers stunning views of the surrounding countryside	http://www.bucksgeology.org.uk/ivinghoe_beacon.html
Various Activities 	Various activities in and around the campsite	http://www.townfarmcamping.co.uk/info-events

Step 4 Setting up

Even after your guided tour of your motorhome it can become a bit of a blur, we thought you may need a quick reminder to get you set up for your first night's sleep in your motorhome. See the quick & easy steps below to getting comfy & settled in your new home.



- **Power!** Take the orange cable from your gas locker and connect to the motorhome and the campsite plug and hey presto instant power.

- **Gas on!** To enjoy the luxury of warm heating, hot water and to cook your favourite meal (if you decide not to go down the pub) you will need to turn your gas on. Turn the brass tap on top of the bottle clockwise and your all set.



- **Need a bit of warmth?** Keep cosy & warm by turning your heating dial to the flame symbol.

- **Freshen up!** Using the same dial turn to the flame and the 60 degrees symbol for heating and hot water.

- **Fridge!** Keep your newly brought chilled items cool (not forgetting a bottle of wine or two!!) by turning the fridge to the 240v setting and enjoy continuous power when hooked up at your campsite.



Step 5 Enjoy

- **Enjoy** a cosy, warm evening in your new home for the next few days (or weeks) and settle down with your favourite tipples, a good book or a movie with the family to recharge your batteries for the adventures to come.



For more detailed instructions on the operations of any items of your motorhome please see the 'comprehensive guide to operating your motorhome' section

Wherever your holiday takes you we hope you have fun and enjoy your time in a Just go motorhome!

We look forward to seeing you on your return.

Emergency and Useful numbers



Just go Contact Details:

The Just go office is open 9:00am – 5:30pm Monday – Friday, 9:00am – 4:00pm Saturday and is closed on Sunday

Tel: (UK) 0870 240 1918

Europe: 00 44 1582 842 888

Fax: 01582 843 610

Emergency text line: Tel: + 44 (0) 7918 704 814

For all out of hours assistance please contact the relevant chassis assistance number (Ford/Fiat/Renault) These numbers are contained in your manual and are also displayed on the front windscreen. Please note if the fault is due to keys locked in the vehicle, Flat tyres, to be towed, Flat chassis battery or incorrect fuel then the assistance service will charge for any callouts.

Should you have had an accident and need to notify Just go out of hours then please send a text to our out of hours text line.

For any other faults please contact Just go during office hours and our customer service team will be happy to assist.

NB the emergency text line is manned to 8pm each evening Monday to Saturday and to 12 midday on Sunday. Please don't request a return of a vehicle outside office hours as the staff member holding the emergency text phone will not be a key holder and does not have the ability to open the office.

<i>Emergency numbers</i>		
<i>Company</i>	<i>Telephone number</i>	<i>Other info</i>
Police, Ambulance, Fire, Coastguard	UK: 999 Northern Ireland: 999 Republic of Ireland: 112 or 999	
NHS Direct	0845 4647	
Ford Assistance	UK: 0800 111234 EU: 00800 88776611	
Renault assistance	UK:0800 0858005 EU:00800 33228877	
Fiat Assistance	UK:00800 34281111	
	EU:00800 34281111	
<i>Useful Numbers</i>		
<i>Company</i>	<i>Telephone number</i>	<i>Other info</i>
London congestion	0845 900 1234	
P&O Ferries	08716 646 464	
National Express	08717 818 178	www.nationalexpress.com
National Rail	UK: 08457 484 950 EU: +44 2072785240	www.nationalrail.co.uk
Euro Tunnel	UK: 08443 353 535 France: 0810 630 304 Belgium: 070 223 210 Spain:0034902307315 The NL: 09005400540	www.eurotunnel.com
Luton Airport General enquiries & Lost property	01582 405 100	www.london-luton.co.uk
Heathrow Airport General enquiries	08443 351 801	www.heathrowairport.com
Heathrow Airport Lost property	0208 745 7727	
Stansted Airport General enquiries	0844 335 1803	www.stanstedairport.com
Stansted Airport Lost property	01279 663 293	
Gatwick Airport General Enquiries	08448 920 322	www.gatwickairport.com
Gatwick airport Lost Property	01293 503 162	
Caravan Club General enquiries	01342 326 944	www.caravanclub.co.uk Open Mon – Fri 08:45 to 18:00 (Jan to June) / Mon – Fri 08:45 to 17:30 (July to Dec) / Saturday 09:00 to 13:00
Camping & Caravanning club UK club site bookings	0845 130 7633	www.campingandcaravanning.co.uk
Carefree EU site bookings	08451 307 701 or 02476 422 024	



Complete guide to operating your motorhome *Just go*

Motorhome Exterior:

Your vehicle comes with 4 keys (cab/ignition key / motorhome habitation key / motorhome locker key / steering wheel lock key & a Just go identity key ring which states the last 3 letters of the registration of your vehicle.

Cab Key

- The main cab/ignition key shown opposite opens the both doors of the vehicle's cab. If the main cab key has central locking this only applies to the vehicles cab not the habitation doors, locker or windows. This also unlocks your diesel cap.

Motorhome Habitation Key

- The purple coloured key is for the habitation door only. Please make sure you lock the motorhome door with the habitation door key.

Exterior Locker Key

- Please use the small black key for the exterior lockers.

Steering Wheel Lock

- Please make sure you apply the steering wheel lock when the vehicle is left unattended and at night when you are asleep.
- Make sure you place the lock through the wheel and click the yellow end through the wheel as well to secure.

Diesel Fuel Tank

- Open the fuel tank with the main cab key (shown above). Please note that the motorhome takes **diesel fuel only**. If you are travelling during the winter, at high altitudes or in snowy resorts please refer to *Diesel additives* in the winter section.

LPG Gas – Turning on

- To turn on your gas there is a tap fixing just above the gauge. To open turn this anti clockwise & to close the valve, turn it clockwise.
- Please make sure your gas bottle is turned off when the vehicle is moving, unattended or you are asleep.

LPG Gas bottle – Re-filling

- The gas bottle must be completely re-filled upon return to the Just go depot.**
- Always make sure the tap on the bottle is closed before refilling with LPG**
- Remove filler cap & place pump nozzle into the gasflow point. The pump nozzle will have a bayonet attachment so put the nozzle in filler and twist. You will feel that the nozzle is firmly attached. Now squeeze the nozzle handle and lock in the open position. Now go to the LPG pump and push & hold the flow button.
- Do not release the button until the pump stops. The pump will stop automatically when the bottle is full. Please be aware that when you release the filler nozzle it will make a loud whoosh noise, this is normal.
- When re-filling in Europe use the European adaptor which you will find zip tied to the gas bottle. The adaptor needs to be screwed firmly to the filler before inserting filler nozzle.
- Please be aware if travelling to northern Scotland, Ireland, Spain that you should ensure your LPG bottle is full before entering these countries as filling points are few and far between.

Your gas bottle has a capacity of 20 litres and costs approx £15.00 to fill from empty



LPG Gas Bottle – Refilling Instructions

IMPORTANT: FIRST FILLING ONLY. In some rare instances it is possible that on the FIRST FILL ONLY, the 80% shut-off may fail to activate. It is therefore **IMPORTANT** to pay attention when filling for the first time.

When using the 11kg cylinder - ensure your maximum fill is no more than 22.5litres. With a 6kg cylinder - the maximum should be 12litres. If you are using a system employing 2 cylinders which are filled together, add the maximum volumes for the cylinders together e.g. if you are using two 11kg cylinders - your maximum fill should be no more than 45litres. If you are using an 11Kg and a 6kg cylinder then your maximum would be no more than 34.9litres. Two 6kg cylinders would be 24litres.

Air may become trapped inside the cylinder on the first filling. This could cause difficulties in lighting your appliances as, being lighter, it sits on top of the gas. If this happens, open the cylinder valve to atmosphere for a few seconds and vent off some gas. This need only be done once.

After Your first fill, it is recommended that you should carry out a quick leak check by using a soapy water solution brushed over the stainless steel filling hose connections - checking to see if there are any bubbles.

FILLING AND REFILLING YOUR CYLINDERS

Journalist Andrew Ditton of Caravan Magazine discovers that topping up with LP Gas is no more difficult than filling a car with petrol!

Gaslow installer CMR filled my gaslow cylinder before fitting the system. It was a few weeks before I had used up some gas. I couldn't wait to see how easy or difficult it would be to fill up again. The gaslow refillable system is a safe, simple and well thought-out product. While it may take years to recoup the installation costs through money saved on refills, the simple fact that it puts an end to lifting heavy gas cylinders makes Gaslow an absolute winner. I cannot fault it.

A quick search on the internet soon revealed the locations of LPG stations en route. For those without wireless internet, CMR can sell you a map showing locations of LPG stations across Britain.

The directions on the web site were spot-on and I easily found this garage just off Junction 9 of the M5. It wasn't as easy to find the LPG pump. Believe it or not, it was concealed within this row of pumps. The attendant assured us the signage would be improved.

This is what to look for - a smaller-than-average pump with a larger-than-average nozzle. The normal safety precautions apply: no smoking, switch off your mobile, and turn off the gas supply to the caravan.

Most gas pumps carry comprehensive instructions like these, so don't worry if you do not have this article to hand.

Once I'd found the pump, it was no more difficult to park alongside than with a regular petrol pump. Remove the filler cap from the caravan, take the nozzle from the pump and check the display resets to zero (as you would a petrol pump).

Here is a close-up of the filler attachment on the caravan. Don't worry about the screw thread inside - it's the two lugs you need to deal with.



IMPORTANT:
You will need these adaptors when filling abroad!



Line up the filler nozzle to the two lugs and then give it a third of a turn clockwise to seal it securely.

Now I'm noticing the first major difference between the LPG pump and a petrol pump - you pull the trigger and nothing happens at first. There's nothing to worry about, just keep a grip on the trigger and locate the small clip. Use this clip to keep the trigger in place.

When the clip is holding the trigger, you can let go. If the clip is not engaged fully, the nozzle will release and a small spurt of gas will escape. This is nothing to worry about. Try again and use the clip to keep the nozzle pulled in.

Now everything is set up securely. Double check that the display reads zero and you are ready to start dispensing gas.

There is a big red plunger on the pump that you need to keep depressed to dispense LPG. If you let go, the gas stops. Press again and the pump resumes. Once your Gaslow system has received 80 per cent capacity, the pump will stop automatically. You cannot fill more than that for safety reasons.

After releasing the plunger, unclip the trigger and remove the nozzle by twisting it anti-clockwise one third of a turn. Be careful, as it may be very cold. You'll hear a small rush of gas as the nozzle depressurises. This is normal. All that remains is to replace the nozzle, pay the cashier and try to resist the urge to spend all your savings on chocolate!

IMPORTANT
Always turn OFF cylinder valves BEFORE filling

Fresh Water Tank (holds 100 litres of fresh water)

- To refill open cover & unscrew cap and place the hose pipe provided into the tank making sure that the hose is as far down as possible.
- It should take 10-15 mins to completely fill an empty tank.
- Make sure the pressure of the water supply is not on too strong as the water will be flowing too fast & the tank will not be filled up fully.
- Check levels of tank by using the *control panel* (see 'control panel' section).
- Please ensure all hose & adaptors supplied are returned to motorhome on completion of filling water tank as there is a charge for missing items.
- We do not recommend that the fresh water tank is used for drinking water, always boil water before consuming.



To empty the Toilet Cassette

- Ensure the lever that closes the vent from the loo to the toilet cassette is in the 'closed' position. (This is **inside** of bathroom, grey lever underneath the toilet bowl).
- Unlock toilet cassette door, push in both button at the same time to open.
- Lift up yellow lever and pull cassette out from the locker
- Rotate grey arm upwards and unscrew yellow cap
- Pour contents down designated waste disposal area or conventional toilet.
- Rinse with water and add loo chemical or sachet.



Step 1



Step 2



Step 3



Step 4



Step 5



Step 6

Luggage / Garage compartment Items



Make sure you only empty waste at approved dump points!

Luggage/Garage Compartment:

Snow Chains – Winter only
EU Mains Adaptor
Warning triangle
Dust pan & brush & Adaptors
Hose & Bucket
Aqua Kem Sachets (toilet cassette)
Electrical Hook up cable
Plunger

Supplied in your Emergency Box:

First Aid Kit (pls note this is a chargeable item if used)
Breathyser Kit (pls note this is a chargeable item if used)
2 x High Vis Jacket
Spare bulbs & fuses
Headlight Benders
Towing Eye

Snow Chains

Snow chains are supplied with the vehicle upon request and during winter months; please see fitting instructions to follow.

The snow chains are only to be used in emergency situation to get you off the road safely. They are not meant for long distance driving. We would recommend a maximum speed of 24km/h (10-15mph) and a maximum distance of 5 miles.



Reversing Camera

The motorhome is equipped with a reversing camera, however Just go always recommends that you have someone helping to direct you when reversing, as the camera may not always pick up small posts etc. There are no overhead cameras so it will not pick up any overhead obstructions.



The camera functions are located on the rear view mirror.

The camera view should display on the rear view mirror when the ignition is started & reverse is selected. There is also an On/Off button if this does not automatically display. If a 'no signal' message shows, press the A1/A2 button to change the channel.

Please use the reversing camera for small parking manoeuvres only.

If hiring a bike rack please be aware that this does extend past the length of the motorhome, the reversing sensors/camera will not take this into account and therefore cannot be relied upon.

Always have some standing behind you to guide you when reversing or pulling away from campsite, car parks etc.

Bike Rack

The motorhome can be equipped with a bike rack (upon request), which can hold up to 4 bikes.

- To open the bike rack loosen central arm by undoing the top central red screw and unclip the plastic strap around the middle tray. (pic 1)
- Pull the 3 trays down so they are in a horizontal position. (pic 2)
- Place the bikes on the trays and secure the wheels by clipping the plastic straps around the wheels. (pic 3 & 4)
- Now secure the central arm to the bike frame using the plastic strap. If more than 1 bike secure the bike furthest from the motorhome, this will hold all of them in one place. (pic 5)
- Once the bike rack is not in use fold the trays back to the vertical position and secure with the central arm and plastic strap.
- As the bike rack extends past the length of the motorhome, the reversing sensors will not take this into account and therefore cannot be relied upon. Always have some standing behind you when reversing.

Pic 1



Pic 2



Pic 3



Pic 4




Pic 5



Grey Water Tank

- Grey water is waste water from sinks, shower, bathroom sink water and kitchen sink water.
- The release lever is located underneath the motorhome near to the driver's side rear wheel, as pointed out during your tour. Pull lever towards you to release and empty, and push back to close.
- Make sure the leavers are closed, especially before travelling as they may catch/come off whilst travelling over road humps.

Turn the lever to open & close the valve

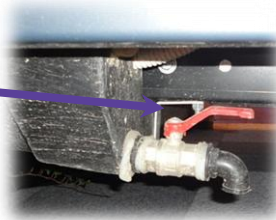

Make sure you only empty waste at approved dump points!

Hook up

- In order to hook up your motorhome to a power supply at a camp site, locate the hook up point on the side of the motorhome.
- Open the cover and connect the extension cable provided, then connect the cable to a power supply.
- Note: At some campsites, the end of the extension cable which connects to the campsite supply may need to be twisted to turn it on.



Habitation door (main door into the rear of the motorhome)

- **To close door:** Gently but firmly close the door. If you force it, the lock will break.
- **To lock:** turn the key a half turn to the right and back to the middle.
- **To unlock:** give the key a half turn to the left and back to the middle.
- Alternatively, to lock the door from the inside, move the switch down to the red position, and to unlock from inside flick the switch up to the green position



Green = open




Red = close

Are you experiencing problems shutting your door?
Make sure you firmly shut the door

Towing eye

- Your towing eye is located in the emergency kit box. The connection point is found on the driver's side front bumper. Just open the cap to expose the hole into the bulk head which is where you screw the towing eye into.

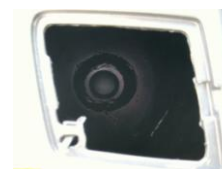

Conquest Dimensions:

Vehicle width is: 2.31m / 7.58ft

Vehicle length is: 7.43m / 24.38ft


Vehicle height is: 3.00m / 9.85ft

Motorhome Interior:



Control Panel (above main entrance door)

This little gizmo is the heart of your motorhome. From turning on your lights to checking you leisure battery level

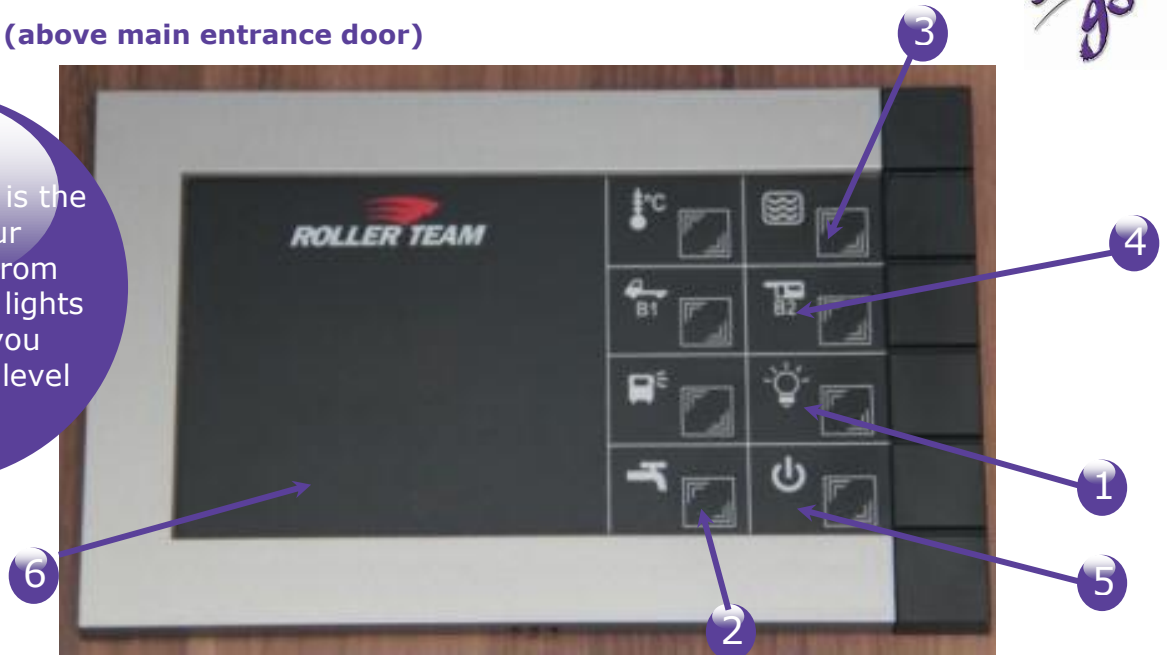

- 1 **Internal Lights:** Press the 'light bulb' switch to enable lights on.
 - 2 **Water pump:** Press the 'water tap' button to turn the water pump on. This ensures that you can use the shower/sinks/too flush etc. **Remember to turn it off when water is not required.**
 - 3 **Water Level Indications:** Press *this* button once which will then display the level of fresh water left in the tank. Press the button again to display grey water levels.
 - 4 **Leisure Battery:** Press the 'B2' button to check the leisure battery charge level. Lights by the side of the 'battery symbol' (box with +/- signs above it), indicate the level of battery power left with a gradual scale, the same as with the water. Note: When you are connected to an electrical hook up all the lights will illuminate, regardless of the leisure batteries level. B1 is for the chassis battery.
 - 5 **On/Off:** Press this button to turn your control panel on or off. Please make sure that you turn the control panel off before leaving the motorhome.
 - 6 **Display Screen:** The display screen is where your leisure battery levels, etc. will show once the control panel is turned on.
- **Mains electricity connection:** when connected to 240V electrical hook up, a plug symbol light will be displayed in the display screen area.

Lights

- **To switch on:** Turn the 'on/off' button on at the control panel, and press the light bulb button (see above). This works like a master light switch, and should be turned off as you leave the motorhome.
- All interior lights have their own power on/off switch.
- If none of the lights work, then either the master 'power' switch has not been turned on (see above), or the leisure battery has run out of power. Either turn the engine on to recharge the battery, or connect to a 240V electrical hook-up source to power them.

Floor Lights

Situated at floor level are multiple blue floor lights, which are controlled by a separate light switch. This is located on the bedroom wall to the right as you walk in the room and is the bottom switch. Please ensure that you turn this switch off as well as the master light switch otherwise it will drain your leisure battery.



Hob

- Make sure the gas bottle is turned on to start the flow of gas.
- Works like a normal gas hob. Turn, depress and hold the relevant knob for 3 seconds and then light with a match.
- Make sure you switch off when not in use.
- Never close the lid when a flame is alight as glass lid will shatter. Also, allow 10-15 minutes after cooking for the hobs to cool before closing the glass lid.



Grill

- Make sure the gas bottle is turned on.
- Press in the dial, turn anti-clockwise to start the gas flowing, and then press the ignition button to light the grill.



Push in to ignite

Make sure this dial is in the 'dot' for the off position and to turn on rotate the dial clockwise for the desired temperature



Light

Pull this cover out when using grill



- There is a heat cover to protect the wood panelling above the grill becoming heat damaged. Please use this at all times when using the grill.

RCD Unit (residual current device)

- This is located in a cupboard underneath the kitchen sink. This can be accidentally knocked as located behind pots, pans etc.
- If you experience no 240v power please check to make sure the switch is on. i.e switch is in the 'up' position.
- If this is tripped or knocked accidentally then the 240V supply will not work.




Main Motorhome Isolation Key

- There is also a mains isolation switch under the passenger side front cab seat.
- Pull the grey cover down and you will see a red switch.
- This switch isolates power to the whole vehicle. Just go un-isolates this before your hire and so you should never have to adjust this.
- If for any reason the switch has been accidentally knocked, to un-isolate the vehicle, turn the switch until it presses in and is tight. When isolated, you will feel the switch pop out.



Gas Isolation Switches (located in the cupboard underneath the sink)

- These red switches isolate various gas functions on board the motorhome.
- The switch which has a picture of a pan is for your gas hob and should *always* be in the horizontal position (A).
- The switch which has a picture of a tap/boiler is for your water boiler and should *always* be in the horizontal position (B).
- The switch which has a picture of a snow flake is for your gas supply to the fridge (C). Just go isolates this for safety reasons and should always be in the vertical position. If you find you are without power for the whole duration of your hire i.e Festivals, you can phone the office and we can guide you through running your fridge on gas (see fridge section below).
- The switch which has a picture of a oven is for your oven/grill and should *always* be in the horizontal position (D)
- The switch which has a picture of a heater/boiler is for your heating and should *always* be in the horizontal position (E).

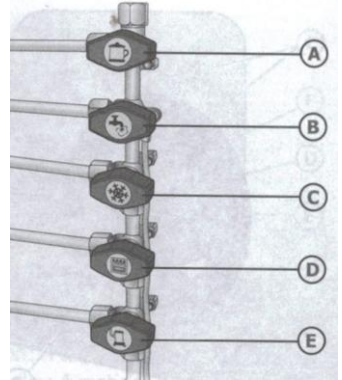

Plug Socket

- The plug sockets will only work if you are connected to a 240V electrical hook-up source or a Just go generator.
- These are located around the motorhome, to the right as you enter the rear bedroom, in the overhead cupboard in the bathroom and also on the bottom on the side dinette seat.
- Note: The plug socket will not work when you are travelling.



Combi Heater System

The motorhome has a combi system and both hot water and the heating are controlled via the same switch. The outer rotary switch is the main control, while the dial inside the rotary switch is the temperature thermostat control used when the heating is on.

- When the outer grey dial is at the 3 O'clock position & pointing to the 'O' symbol the system is off..
- **To switch on hot water:** Turn on gas and water pump. Move the outer rotary switch anti-clockwise to either the 40°C or 60°C symbols and the boiler will switch on and begin to heat the water. A green light will appear. It will take approximately 20 mins to heat it up. Switch both the boiler and water pump off when finished.
- **To switch on heating:** Turn on gas. Make sure the inner thermostat dial is turned down to the lowest setting. Then turn the outer rotary switch clockwise down one click, to the 4 O'clock position to the flame only symbol to ignite the heating system. Once ignited, you can turn the thermostat dial to the desired setting.
- **To switch on heating and hot water:** Turn on gas and water pump. Turn the outer rotary switch clockwise down one click to the flame symbol. Wait 10 seconds or so until the boiler ignites. Once ignited, you can then move the outer rotary switch clockwise down one more click to the bottom flame symbol with 60°C next to it. This will heat the hot water to 60°C only, the heating can be regulated with the thermostat dial. Hot water will take longer to heat on this setting.
- **Failure to work:** If after a few minutes a red light appears, then the combi system is not working! Please don't confuse this with an orange light as this means the boiler is heating up. Sometimes there can be an airlock in the gas pipe so re-set the dial to 'off' (3 o'clock position) & then turn it back on again. It can take up 3 or 4 attempts to start it. If this fails then either, the gas has not been switched on/needs refilling, or there is no water in the boiler, or the temperature dial is not set to it's lowest setting. Turn the water pump on by pushing the 'water tap' switch, on the control panel to get water into the boiler. Make sure there is water in the fresh water tank in order to do this. (see *control panel water tank sections*). If you are trying to get heating N.B. The combi system will not work if the leisure battery is flat. You will need to connect to an electrical hook-up or turn the engine on to charge the battery first.
- Turn off when not in use. **Never leave the combi boiler on (including heating) whilst the motorhome is moving, unattended, when you are re-fuelling with Diesel/LPG or when you are asleep!**



Boiler Safety Sensor

- There is a safety sensor (small black box) on the passenger side rear bedroom window, which disables the hot water system if the window is open.
- This is because the outlet for the hot water system is from a pipe below the window and so prevents fumes entering the motorhome through the window.
- If you are unable to get hot water, please check that the P/S rear bedroom window is closed first.



Frost Protection Switch

During the colder months when the temperature drops the frost protection switch will automatically drop down and empty the water from the boiler to stop it freezing. The location of the switch is next to the boiler in exterior locker through the hatch, as pointed out during your tour. In order to get water from the fresh water tank you need to reset this valve.

- There is a button on the side of the unit which needs to be pressed back in flush with the unit. If this pops back out then the temperature inside the motorhome is still too cold. Pop the heating on for 20 mins and re-try again. You are still able to use the heating system without water in the boiler.
- To reset the frost protection valve hold the blue button in.
- Note: If you have your water pump switched on and the frost protection valve drops down it will empty all of the water out of the fresh water tank and burn out the pump.
- To avoid this keep your water pump switched off when not in use.



Push button in to re-set

No Water? Check this device out first if you experience water running underneath your motorhome

Window Operations – open, close, fly screen & blind

- **To open:** Undo all latches; push window out until it clicks into the extended position desired.
- **To close:** Push window all the way out and let window fall back to closed position. This should never be forced.
- **Fly screen:** The bottom catch is for the fly screen pull gently down until it clicks into the bottom frame
- **Night blind:** The top catch is for the night blind pull the blind gently down and click into the bottom frame.
- **All windows must be closed when vehicle is in motion**



Fly Screen



Night Screen



open

Roof vent window operation

- Unlock the white lever on the roof vent and then rotate the plastic dial to open and close the roof vents
- To close, gently rotate the plastic dial in opposite direction to close the vent firmly.
- To open and close the blind located on the roof vent gently pull the blind across to clip into place on the opposite side. To release gently unclip the blind.
- In the shower area, pull the cover down to reveal 2 handles which you can open the vent upwards and then replace the cover back which will click back into place.
- **All Roof Vents and Shower vents must be closed when the vehicle is in motion.**

Habitation Roof Vent



Shower Vent



Bathroom - Toilet

- The seat swivels to give extra leg room. (See pic 1 below)
- Lever underneath bowl opens and closes the vent to the loo cassette below. We recommend this is closed when not in use, and especially whilst travelling. (see pic 2 below)
- **Flush:** make sure water pump is on (see 'control panel' section) press and hold blue button.
- To empty the toilet cassette, (see 'Toilet cassette' section)
- The orange light illuminates when the toilet cassette is full & needs emptying. We recommend you do not leave it till this happens as it can be very heavy and too full by this stage. Dependent on how often you use the toilet, always empty every other day if there is only two of you or every day if more people are onboard. (see pic 3 below)
- After emptying, add the toilet chemicals sachet to the cassette by dropping one down the toilet from the inside of the motorhome and releasing it to the cassette below. This will keep everything smelling fresh and will break down the contents.



Toilet Chemical

To flush press the blue button


This illuminates orange when full



Pic 3



Pic 1

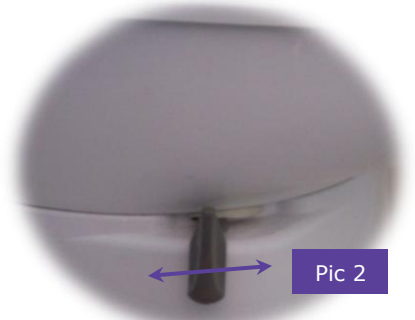

Pic 2

Shower Operation

- Make sure water pump is on (see 'control panel')
- Operates like a normal shower
- You will only get hot water, if the boiler has been turned on. This will take approximately 20 minutes to heat up, (see *hot water control*).

Sink Operation

- Make sure water pump is on (see 'control panel')
- Operates like a normal mixer tap.
- You will only get hot water, if the boiler has been turned on. This will take approximately 20 minutes to heat up, (see *hot water control*).
- When using the sink please make sure no food waste, oils etc are emptied down the plug hole as this may cause a blockage and will cause the grey water tanks to become clogged. A plunger is provided should this happen.

Remember you need to switch your water pump on to use your taps, shower & toilet flush

TV System

Please follow the guidelines below to use the TV system onboard.

- Also inside in one of the overhead cupboard there is the vision plus white box which should always have the blue light showing.




- Turn the TV on by using the TV remote & pressing the round on/off button
- Again using the TV remote Select the Tune button, press and hold to bring up a display box.
- The display box will appear, asking you to select the country that you are in, use the side arrows to select country and press ok.

- The TV will now tune into the channels available for that region.



- Please Note this can take up to 15 minutes.**

- Once channels have been found this box will display on the screen, asking you to select country, primary and tertiary regions. Please use the side arrows to select these areas and then press ok.

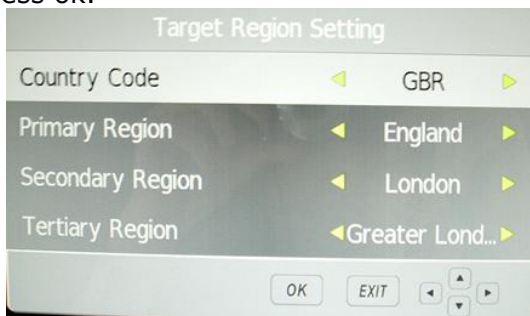

- Use remote arrow buttons to go up/down through the different channels
- Alternatively Click the Guide button on the remote which will bring up the channel program guide in greater detail
- To switch to DVD input, press the source button and use the down arrow to scroll through the sources. Press ok to select the DVD source.
- Please be careful when putting DVD's into the slot in the side of the TV. Place the DVD into the slot and the TV will then auto-feed the disc in.




Fridge

The fridge can run on 2 different power supplies;

- 240v hook-up socket – use when connected to the electric hook-up
- 12v leisure battery – only works when the engine is running!

- A On/off switch
- B OK button
- C Arrow buttons
- D Source symbols
- E Cooling level indicators

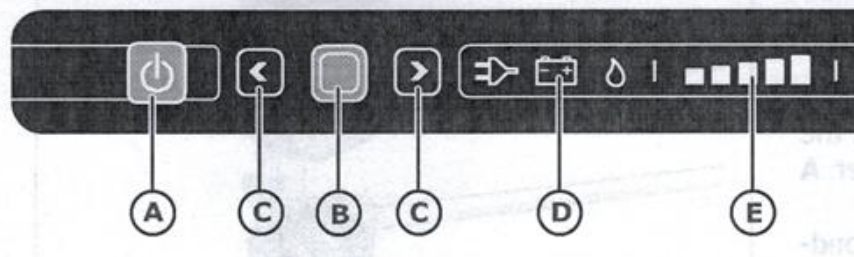

- The fridge can also work on gas, Just go isolates this for safety reasons. If you find you are without power for the whole duration of your hire i.e Festivals, you can phone the office and we can guide you through running your fridge on gas.
- Just go advises that you turn your gas off whilst the vehicle is moving, left unattended and whilst you are sleeping.
- To turn the fridge on, press and hold the on/off button until the lights show on the display.
- To change between power sources, press and hold the grey OK button, until just the source symbols show. You can then use the arrow buttons to scroll through the three power sources. Press the OK button again to select the desired source.
- The cooling level indicator lights will then flash up, again use the arrow buttons to scroll up and down with the temperature and press OK to select the temperature.
- Once the fridge has found the power source and is cooling, the display lights will go off and a small green light show on the on/off button.
- If the fridge is unable to run from the selected power source, the symbols will continue to flash and the on/off button will show a red light.
- Please make sure you park the vehicle on level ground, any kind of incline and the fridge will not work.
- If the weather is really hot in the late 20's to 30°C, the fridge will not be able to work.
- When loading the fridge try and put as much pre chilled items in as possible as this helps to bring the internal temp down quickly.

Door handles / Cupboards

- Please be careful when opening the cupboard doors especially overhead cupboards, make sure you use your other hand to stop items i.e. glass/cups falling out as items dislodge when the vehicle moves.
- Make sure all cupboards are closed whilst vehicle is moving.
- To open the cupboards there is a clip with you pull towards you and then you can raise the cupboard open.
- To access the bathroom you have a normal style handle.
- If you have any pop up style buttons then press the silver button to pop out the main button



Push towards you to release clip



Press in to pop open the button



Rear Bed:

Your rear bed is already made up at the back of the motorhome for you. To extend the bed to its full length you can pull the end of the bed down and guide the top angled end down to make a longer bed. To put this bed back to its shorter length you can pull the black fabric handle up to the desired angle and push the bed back into place. You have a small cupboard area underneath the bed on the left hand side corner.

Please Note
The onboard fire
extinguisher is
located in the
bedroom area



Electronic ceiling bed


- To lower your second bed from the ceiling you need to first make sure that all items are removed from the dinette table and seats
- You will have a specific key that will have been pointed out to you on your tour to enable the bed controls to work.
- Insert the key into the keyhole of the bed operations which can be located under your control panel and turn clockwise into the on position.
- You will also need to turn the main light switches on to be able to power the bed controls.
- Once the system is switched on with the key and the main light switches are on you will be able to lower or raise the bed with the up and down arrows.
- Please make sure that the key is turned counter clockwise in the off position when you are not moving the bed.

ZZZZZ...
No need to worry
about sleepless
nights with our bed
conversion
instructions



Press to raise the bed down

Vertical position = Off
Horizontal position = On

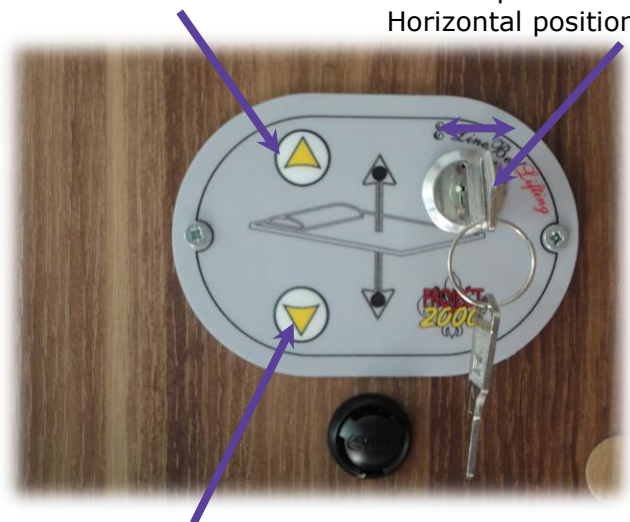

Press to lower the bed down



Remember to
remove all footwear
when climbing on
the beds & seating
around the dinette
table