

74.0

裁切线

正面

111.0

Owner's Manual



1800 Rechargeable Backup Battery for iPhone/iPod



Powered by U2OGLOBAL

Thank you for your purchase of one of the many state of the art and industry leading iWALK products, specifically designed for use with iPad, iPhone 4/4S, iPhone 3GS, iPod, smart phones, MP3/MP4 players, devices with micro & mini USB ports, and more. This manual provides detailed instruction and caution for easy operation of your new iWALK mobile power/charging device. Please read it in full before using.

Contents

iWALK 1800



USB-DC Cable




Travel Bag



Manual / Warranty



Adapters



Micro USB



Mini USB



Apple 30-pin



Nokia S20



Samsung S20



Sony



LG 18-pin



Powered by U2OGLOBAL

Overview of Features:

1. Rechargeable lithium ion battery
2. Ultra small and lightweight—Fits in your pocket, purse, or briefcase
3. Smart Technology enables automatic on/off charging to protect the battery from overcharging.
4. Powerful and safe battery cell
5. Three indicator LEDs, which show battery capacity in stages

Operating Time

iWALK1800 Rechargeable Battery Pack			
	Audio Hours	Video Hours	Talk Time
iPod Nano	Up to 94	Up to 18	N/A
iPod Touch	Up to 52	Up to 8.5	N/A
iPod Classic	Up to 74	Up to 12	N/A
iPhone	Up to 24	Up to 6	Up to 6
iPhone 3GS/3G	Up to 23	Up to 6	Up to 6

*Note: Battery capacity may vary, depending on device type and usage.

Specifications


• Model No.	: CMC402
• Model Name	: iWALK1800
• Capacity	: 1800mAh(3.7V)
• DC IN	: 5V
• DC OUT	: 5V
• Size	: 3.03" x 1.54" x 0.55" (77mm x 39mm x 14mm)
• Weight	: 0.12 lbs (54g)



Powered by U2OGLOBAL

Product Overview

1. DC IN port
Voltage: 5V
2. DC OUT port
Voltage: 5V
3. DC IN LED
The LED battery level indicator will be blue when charging, and green when fully charged.
4. DC OUT LED
Power on: LED will light for 0–15 seconds

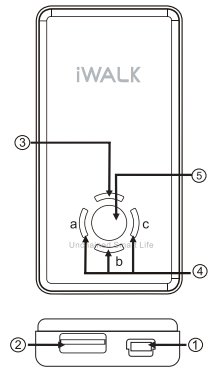


When charging, the iWALK indicator LEDs will signal the battery capacity as follows:

- Battery capacity less 0%–50%.....only LED a will illuminate
- Battery capacity less 50%–90%.....LEDs a and b will illuminate
- Battery capacity less 90%–100%....LEDs a, b, and c will illuminate

5. Power On/Off Button

After engaging the on/off power button, the unit will turn off, as long as no other buttons are pressed simultaneously for a period of 10 seconds.


背面

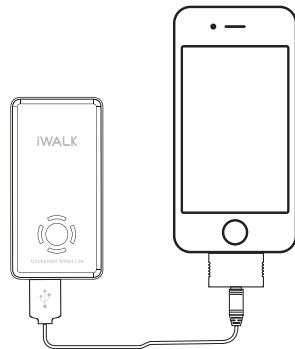

Charging mobile devices

1. Connect the product with USB/DC cable and proper connector.
2. Press power button to put the rechargeable battery pack in standby mode.
3. The DC OUT LED will be red when the mobile device is charging. After the mobile device is fully charged, the iWALK device will turn off automatically within 10 seconds.
4. Remove the cable after charging is complete.

Charging iWALK unit with your computer's USB port

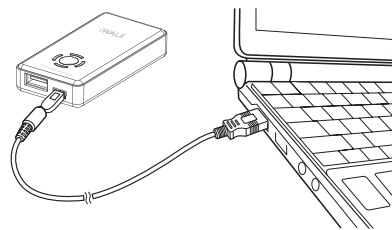

1. Connect the iWALK unit to your computer via the USB cable and mini USB connector
2. DC IN LED will turn blue when charging, and green when fully charged.

Troubleshooting

1. If the LED battery power indicator does not light up when the iWALK unit is charging, or being depleted, the iWALK unit has probably not been used for an extended amount of time. Please make sure you charge the iWALK unit for 2–3 minutes before checking the LED power indicator.
2. If the iWALK unit is hot from charging or being depleted, there is NOT a problem with the unit, as long as it continues to function normally. This is a normal occurrence due to power consumption.

Safety Precautions

Please read the following safety precautions and instructions carefully before using your iWALK product. Incorrect use or incompatibility with some devices may result in reduced battery performance and/ or damage to your iWALK unit, thereby negating the warranty below.

- Make certain that the DC IN/OUT is correctly connected with the charger cable.
- Do not expose the product for an extended period of time in a humid or high temperature environment. Store product between 14°F (-10°C) and 104°F (40°C).
- Keep the product out of direct sunlight.
- Do not charge the product in environment over 113°F (45°C).
- Do not attempt to disassemble the product under any conditions nor place it near or into fire or water. (To avoid fire or risk of explosion).
- Do not touch the product with damp or wet hands causing risk of an electric shock.
- Keep product out of the reach of children.
- Use the computer USB port with an appropriate connector by which to charge this product.

Disposal

Dispose of iWALK products properly. The iWALK products contain battery cells and must not be discarded with ordinary household waste. Contact your local recycling center for proper disposal.

Note:

If the product is left unused for an extended period of time, please charge every six months to ensure product life cycle and satisfactory functionality.

Your purchase is protected by iWALK's product warranty as shown below. Any damages which may result in non functionality of this product from direct abuse, incorrect operation or disassembly are not covered under this warranty.

Due to ongoing product development, in order to improve the functionality and quality of our products, specifications are subject to change without notice.

The following circumstances will NOT be covered for exchange or repair as outlined above:

- Malfunction caused by user unauthorized disassembly or use.
- Malfunction caused by user's incorrect connection of the device.
- Malfunction by user's storage in a hot or humid location, or by immersing the product into any liquid(s) (water, coffee or beverage)
- The attempted unauthorized repair by any unauthorized service center.
- Malfunction caused by user's failure to adhere to the specific instructions in the device user manual.

iWALK Limited One-Year Warranty (Valid 12 months from purchase)

Malsha LLC warrants to the original purchaser of this product that it is free of defects in material and workmanship—and that if used in accordance with any accompanying instructions, it will perform as specified. This limited warranty does not cover damages caused by accident, misuse, modification, clear and blatant customer abuse or excessive wear and tear. This warranty is Malsha LLC's only warranty. There are no other warranties, expressed or implied, and ONLY limited to repair or replacement of the item by Malsha LLC. Return this product to the original place of purchase, along with the original proof of purchase to process a warranty exchange as a repair or replacement ONLY, as stated above. Further warranty information for all Malsha LLC products can be obtained by going to www.malsha.com and www.iwalkusa.com.

材质: 128g铜版纸