

SONY®

DATA PROJECTOR

VPL-CX70
VPL-CX75

REMOTE COMMANDER

RM-PJP1
RM-PJM17

SERVICE MANUAL

1st Edition

警告

このマニュアルは、サービス専用です。

お客様が、このマニュアルに記載された設置や保守、点検、修理などを行うと感電や火災、人身事故につながる可能性があります。

危険をさけるため、サービストレーニングを受けた技術者のみご使用ください。

WARNING

This manual is intended for qualified service personnel only.

To reduce the risk of electric shock, fire or injury, do not perform any servicing other than that contained in the operating instructions unless you are qualified to do so. Refer all servicing to qualified service personnel.

WARNUNG

Die Anleitung ist nur für qualifiziertes Fachpersonal bestimmt.

Alle Wartungsarbeiten dürfen nur von qualifiziertem Fachpersonal ausgeführt werden. Um die Gefahr eines elektrischen Schlages, Feuergefahr und Verletzungen zu vermeiden, sind bei Wartungsarbeiten strikt die Angaben in der Anleitung zu befolgen. Andere als die angegeben Wartungsarbeiten dürfen nur von Personen ausgeführt werden, die eine spezielle Befähigung dazu besitzen.


AVERTISSEMENT

Ce manuel est destiné uniquement aux personnes compétentes en charge de l'entretien. Afin de réduire les risques de décharge électrique, d'incendie ou de blessure n'effectuer que les réparations indiquées dans le mode d'emploi à moins d'être qualifié pour en effectuer d'autres. Pour toute réparation faire appel à une personne compétente uniquement.

For the customers in the Netherlands
Voor de klanten in Nederland

Hoe u de batterijen moet verwijderen, leest u in de tekst van deze handleiding.

Gooi de batterij niet weg maar lever deze in als klein chemisch afval (KCA).



Für Kunden in Deutschland

Entsorgungshinweis: Bitte werfen Sie nur entladene Batterien in die Sammelboxen beim Handel oder den Kommunen. Entladen sind Batterien in der Regel dann, wenn das Gerät abschaltet und signalisiert "Batterie leer" oder nach längerer Gebrauchsdauer der Batterien "nicht mehr einwandfrei funktioniert". Um sicherzugehen, kleben Sie die Batteriepole z.B. mit einem Klebestreifen ab oder geben Sie die Batterien einzeln in einen Plastikbeutel.

Table of Contents

1. Service Overview

1-1.	Appearance Figure	1-1
1-2.	Board Locations	1-1
1-3.	Disassembly	1-2
1-3-1.	Top Panel	1-4
1-3-2.	QB Board (VPL-CX75) and NF Board	1-4
1-3-3.	Adjustor Unit	1-5
1-3-4.	Side Panel Assembly	1-5
1-3-5.	Lamp Power Supply	1-6
1-3-6.	C Board	1-7
1-3-7.	Optics Block Assembly	1-8
1-3-8.	Main Capacitor Lens Assembly	1-9
1-3-9.	M Board (VPL-CX75)	1-10
1-3-10.	U Board and D.C. Fan	1-10
1-3-11.	GB Board	1-11
1-3-12.	V Board and GA Board	1-11
1-3-13.	D.C. Fan (Sirocco)	1-12
1-3-14.	GC Board	1-12
1-3-15.	Extension Boards and Extension Connectors	1-13
1-3-16.	Extension Boards and Extension Connectors Connection	1-13
1-3-17.	3D GAMMA Quick Access Application Software	1-16
1-4.	Writing in the USB Storage Media	1-17
1-5.	Warning on Power Connection	1-18

2. Electrical Adjustments

2-1.	Preparation	2-1
2-1-1.	Required Equipment	2-1
2-1-2.	How to Enter the Factory Mode	2-1
2-2.	V COM Adjustment	2-1
2-3.	Initial Values of Adjustment Items	2-2
2-4.	Service Know-How	2-10
2-4-1.	When the Prism Block Is Replaced	2-10
2-4-2.	When the Lens is Replaced	2-10
2-4-3.	When the Board is Replaced	2-10
2-5.	White Balance Adjustment	2-11
2-5-1.	HIGH Mode of INPUT-A	2-11
2-5-2.	LOW Mode of INPUT-A	2-11
2-5-3.	HIGH Mode of VIDEO	2-11
2-5-4.	LOW Mode of VIDEO	2-11
2-6.	Automatic Focus (AF) Adjustment	2-12
2-7.	Memory Structure	2-13

3. Semiconductors 3-1

4. Spare Parts

4-1.	Notes on Repair Parts	4-1
4-2.	Exploded Views	4-2
4-3.	Electrical Parts List	4-8

5. Block Diagrams

Overall	5-1
C(1/4), QA (1/2)	5-2
C (2/4)	5-3
C (3/4), QA (2/2)	5-4
C (4/4), HA, HB, L, NF, NR, U, V	5-5
M, QB	5-6
GA, GB, GC	5-7

6. Diagrams


6-1.	Frame Schematic Diagrams	6-2
	Frame Wiring	6-2
6-2.	Schematic Diagrams and Board Layouts	6-3
	Schematic Diagrams	
	QA	6-3
	QB	6-4
	C (1/14)	6-8
	C (2/14)	6-9
	C (3/14)	6-10
	C (4/14)	6-11
	C (5/14)	6-12
	C (6/14)	6-13
	C (7/14)	6-14
	C (8/14)	6-15
	C (9/14)	6-16
	C (10/14)	6-17
	C (11/14)	6-18
	C (12/14)	6-19
	C (13/14)	6-20
	C (14/14)	6-21
	HA	6-24
	HB	6-26
	L	6-28

NF	6-28
NR	6-28
U	6-28
V	6-28
M (1/5)	6-31
M (2/5)	6-32
M (3/5)	6-33
M (4/5)	6-34
M (5/5)	6-35
GA	6-38
GB	6-40
GC	6-42
Board Layouts	
QA	6-3
QB	6-5
C	6-6
HA	6-25
HB	6-27
L	6-29
NF	6-29
NR	6-29
U	6-29
V	6-29
M	6-36
GA	6-39
GB	6-41
GC	6-43


Section 1

Service Overview


1-1. Appearance Figure

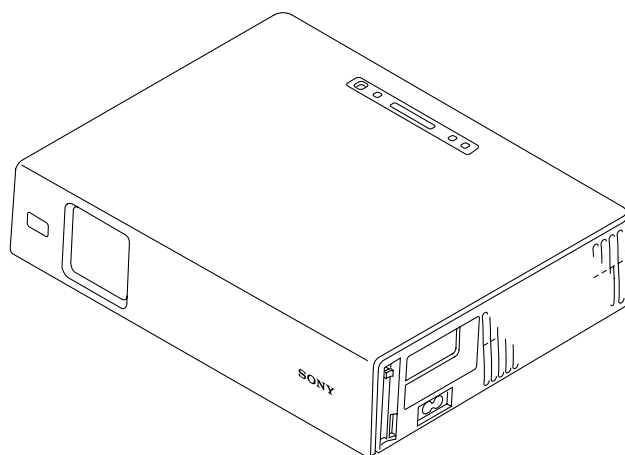


1-2. Board Locations

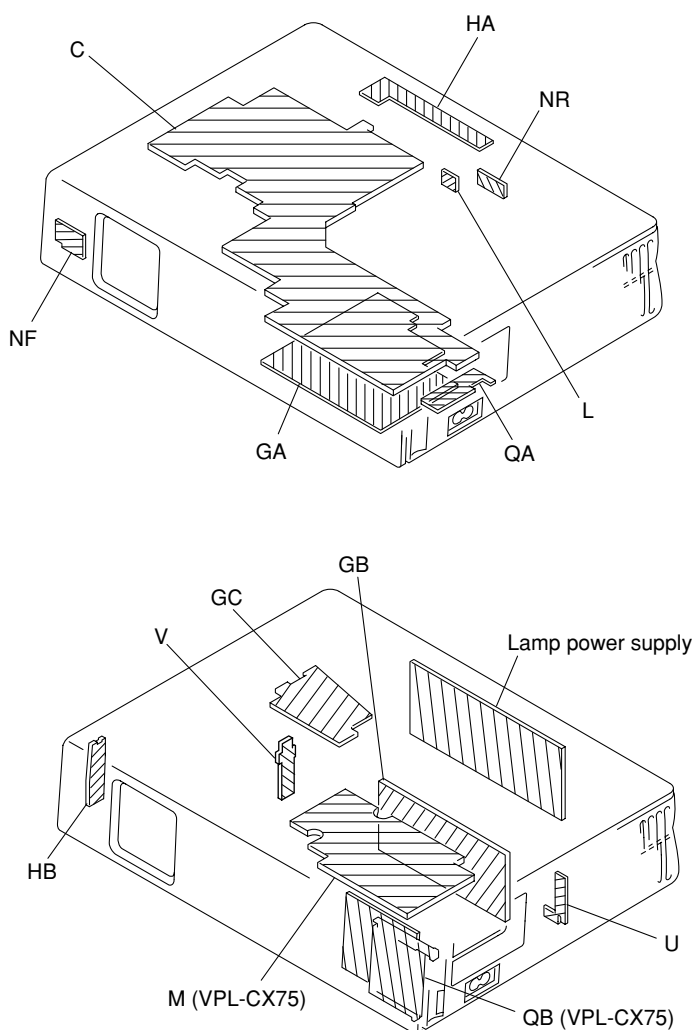


1-3. Disassembly

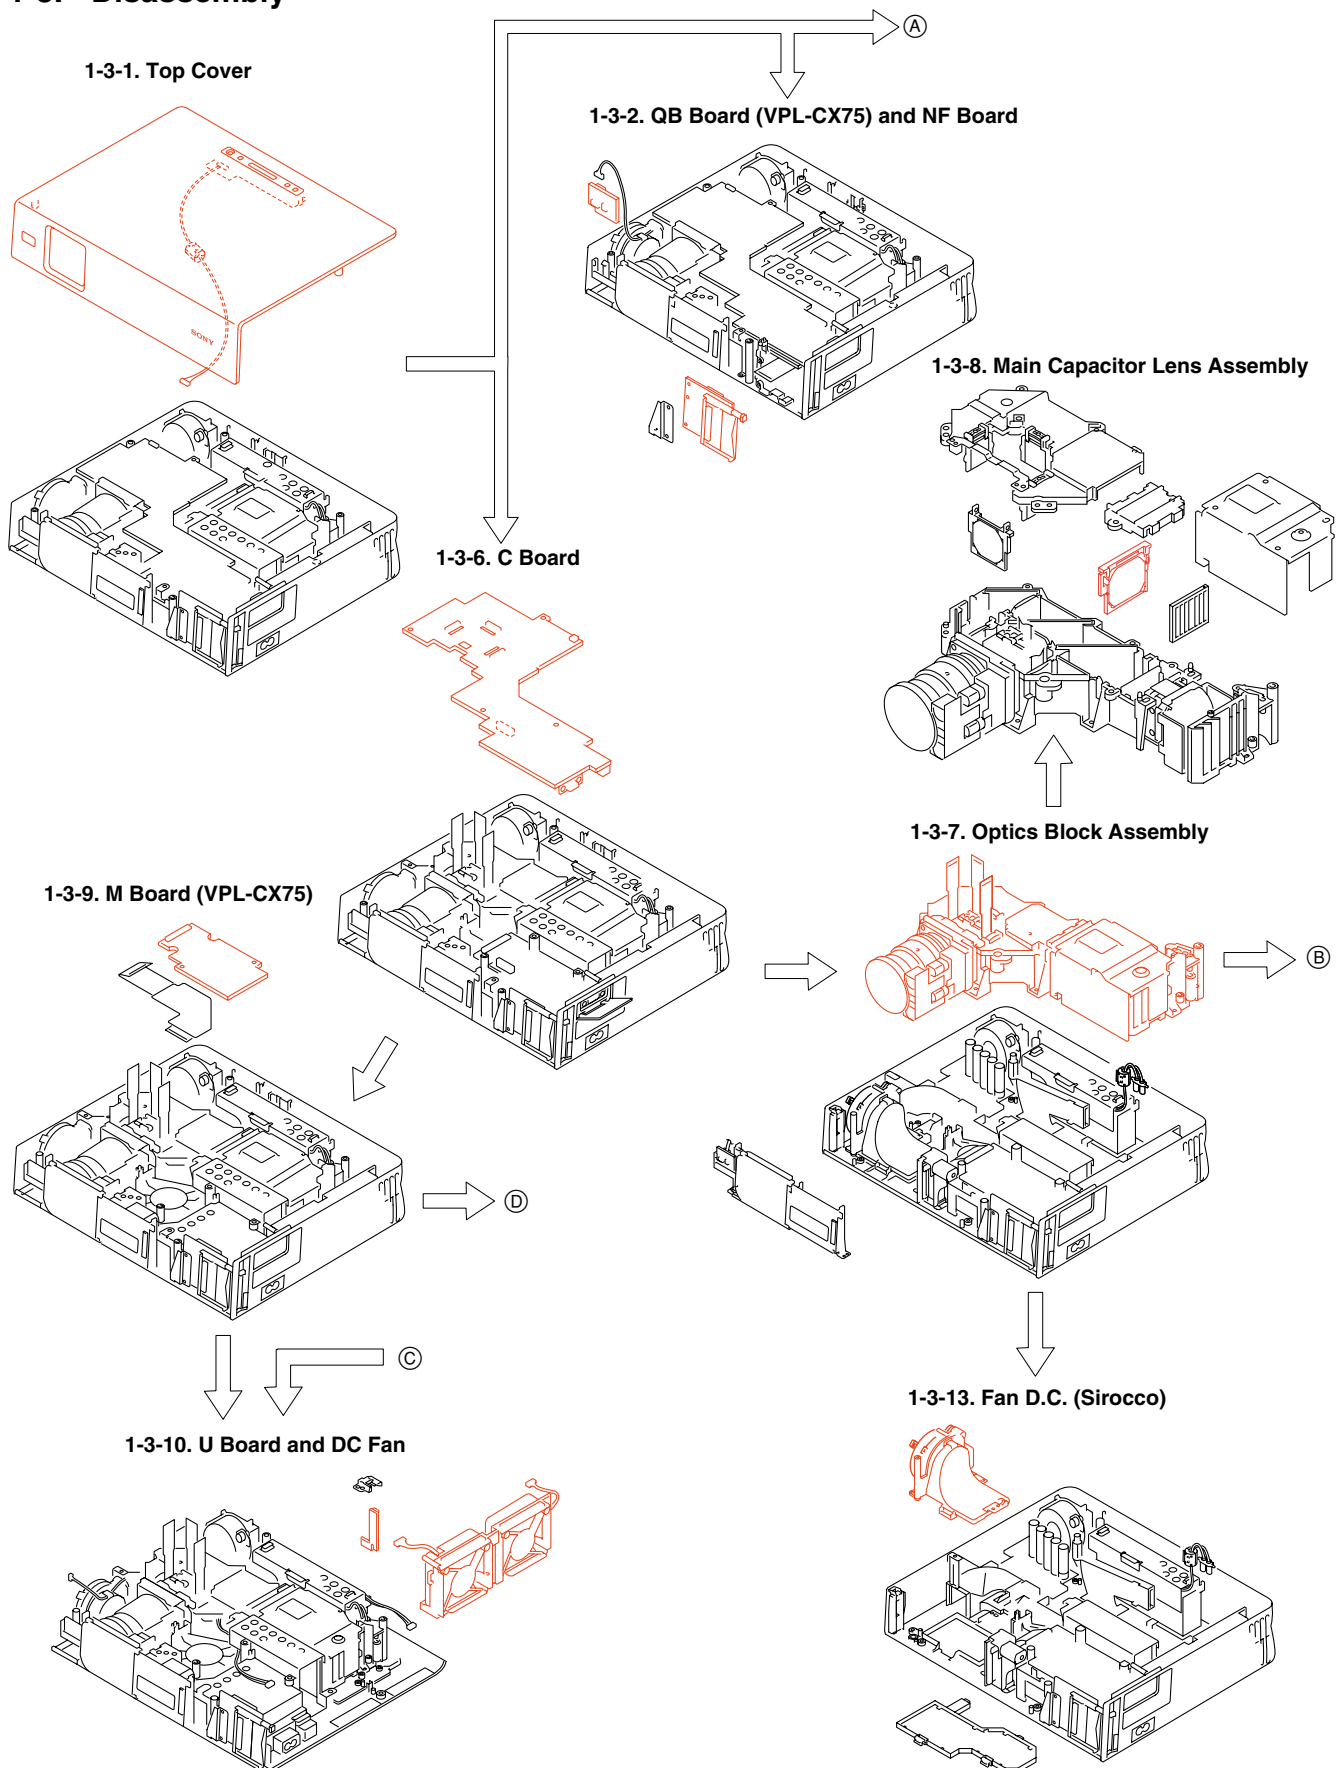


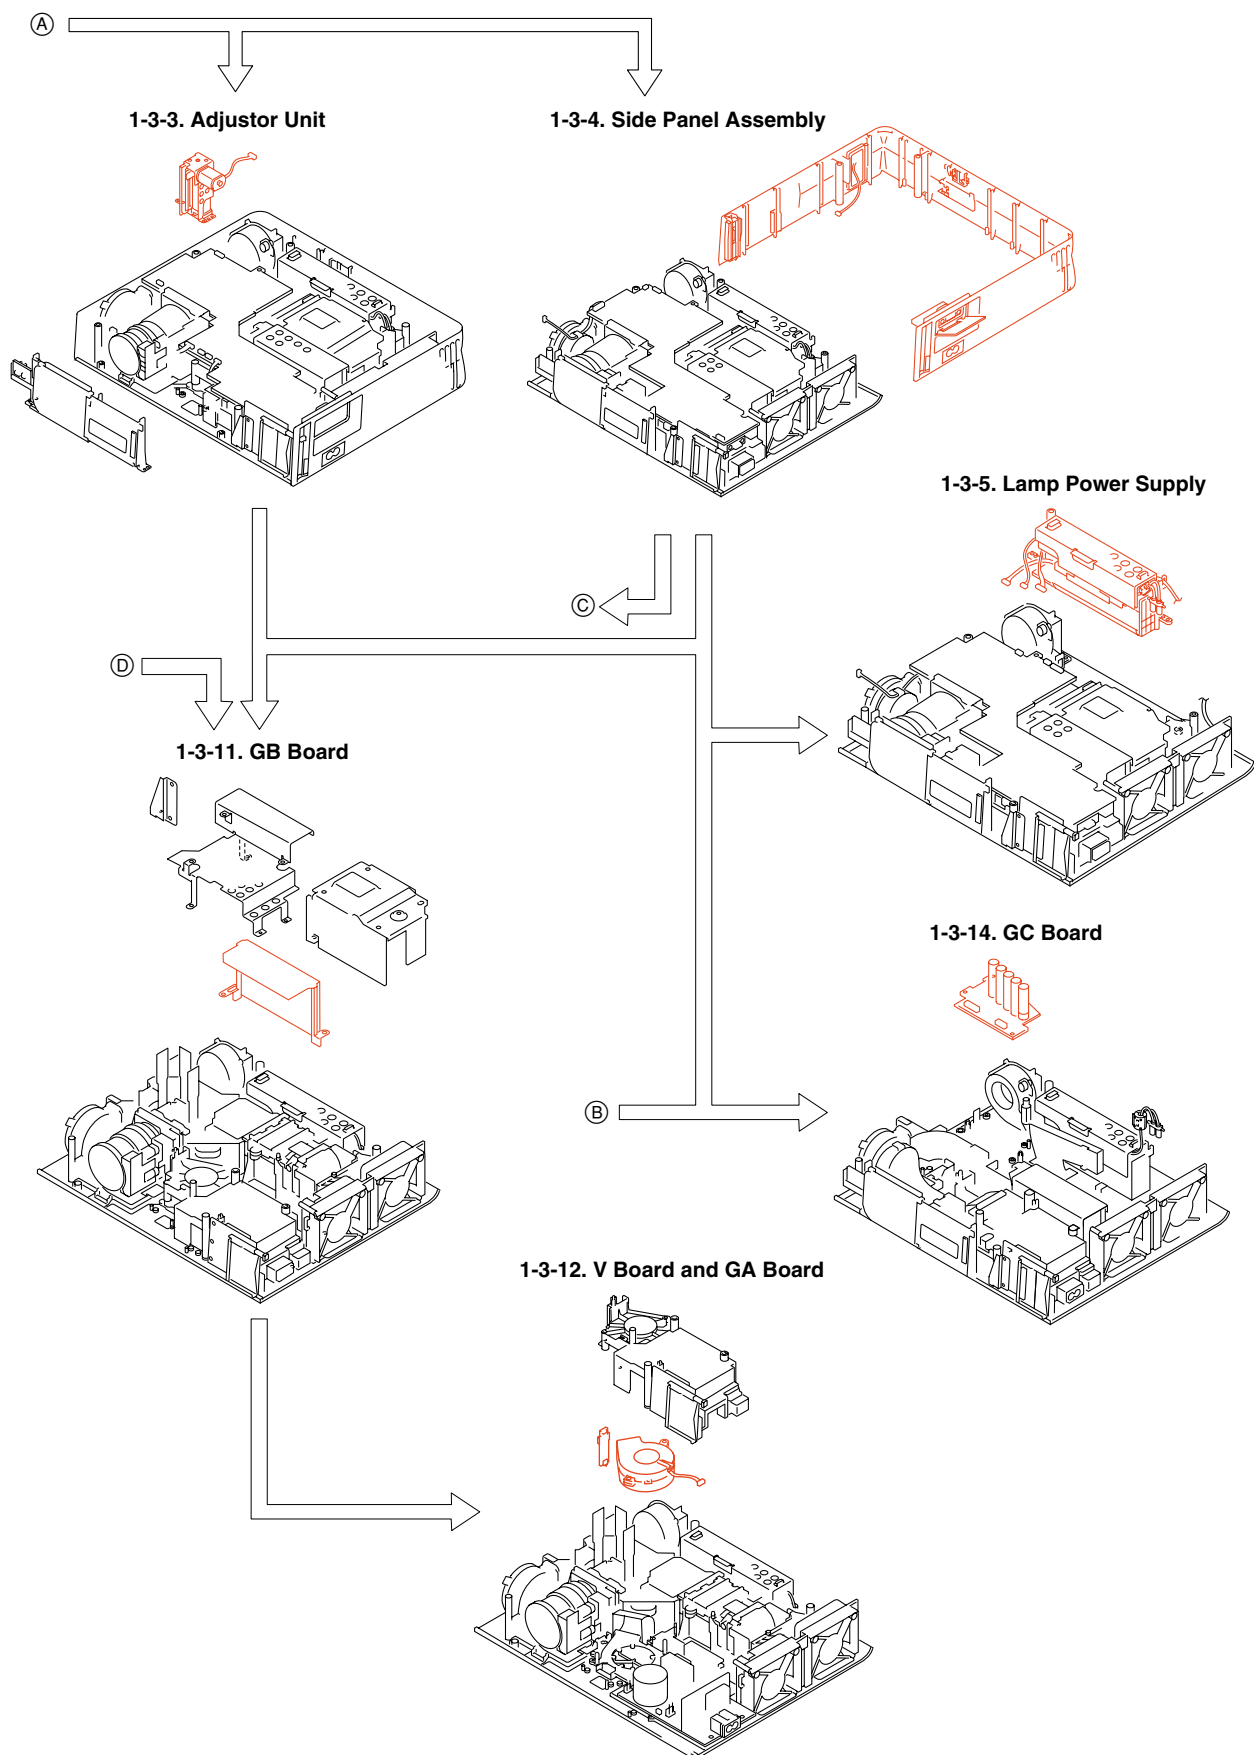


1-3-1. Top Panel

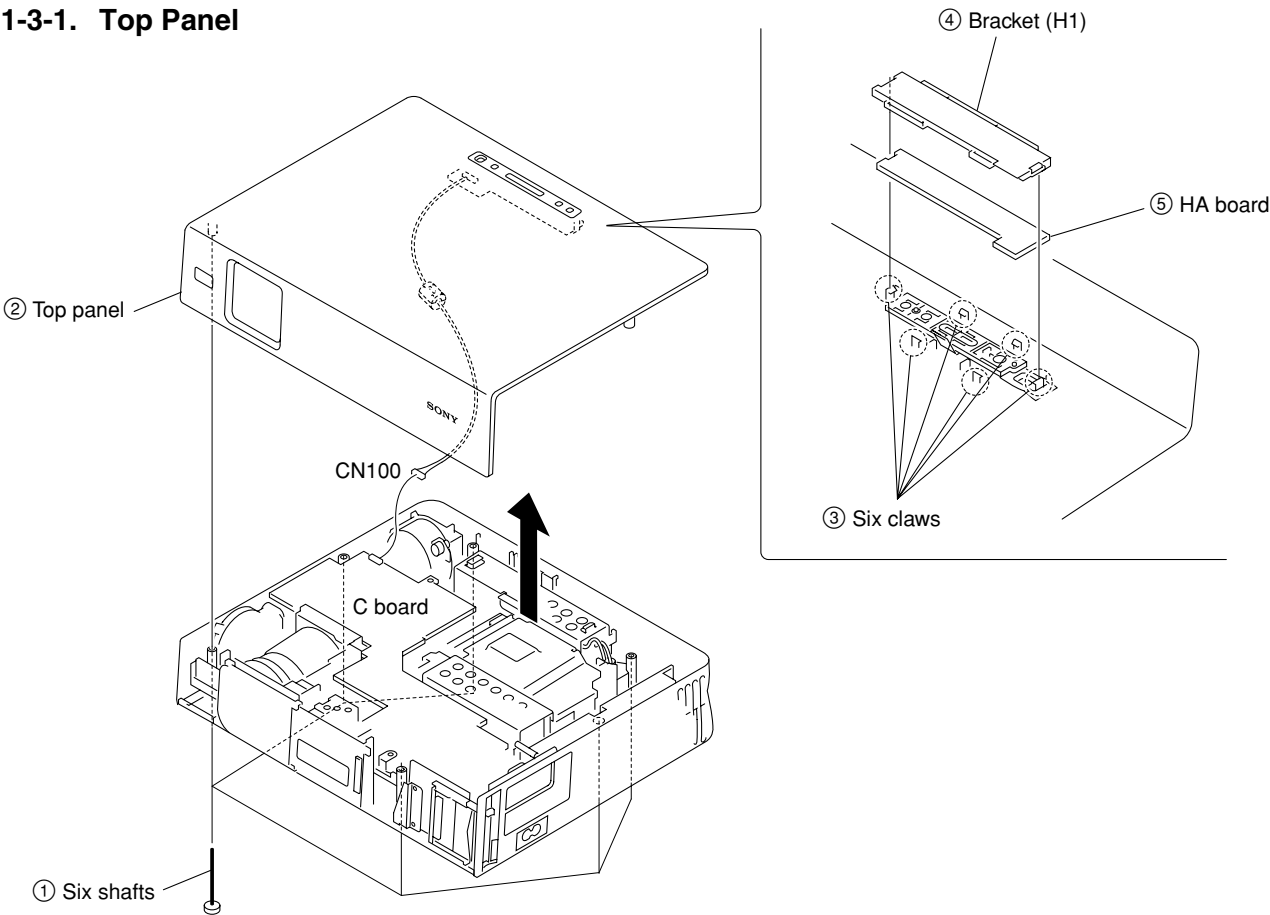


1-3-2. QB Board (VPL-CX75) and NF Board

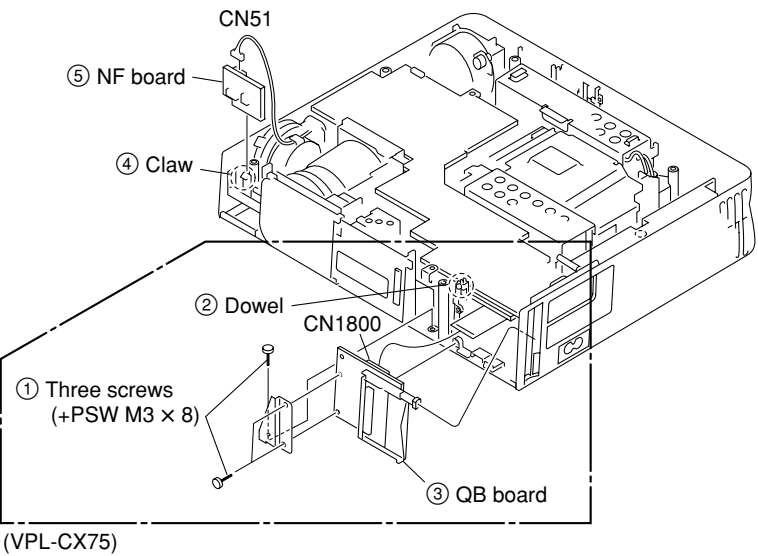


1-3-3. Adjustor Unit

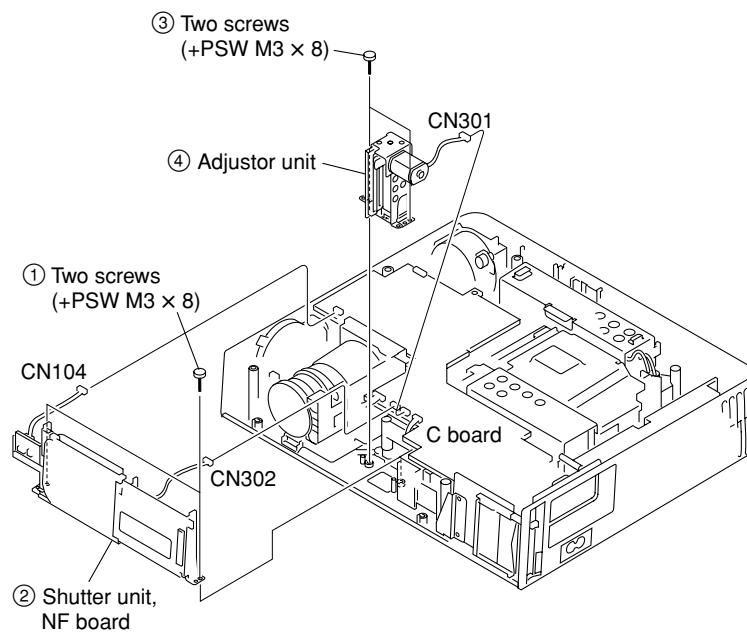



1-3-4. Side Panel Assembly

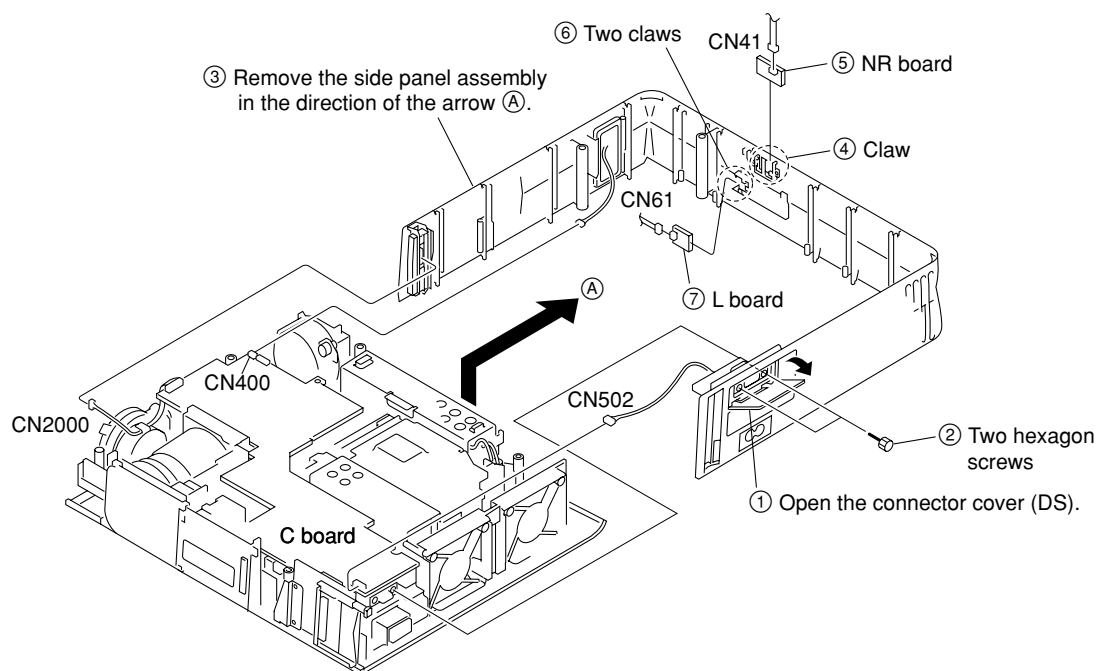


1-3-5. Lamp Power Supply

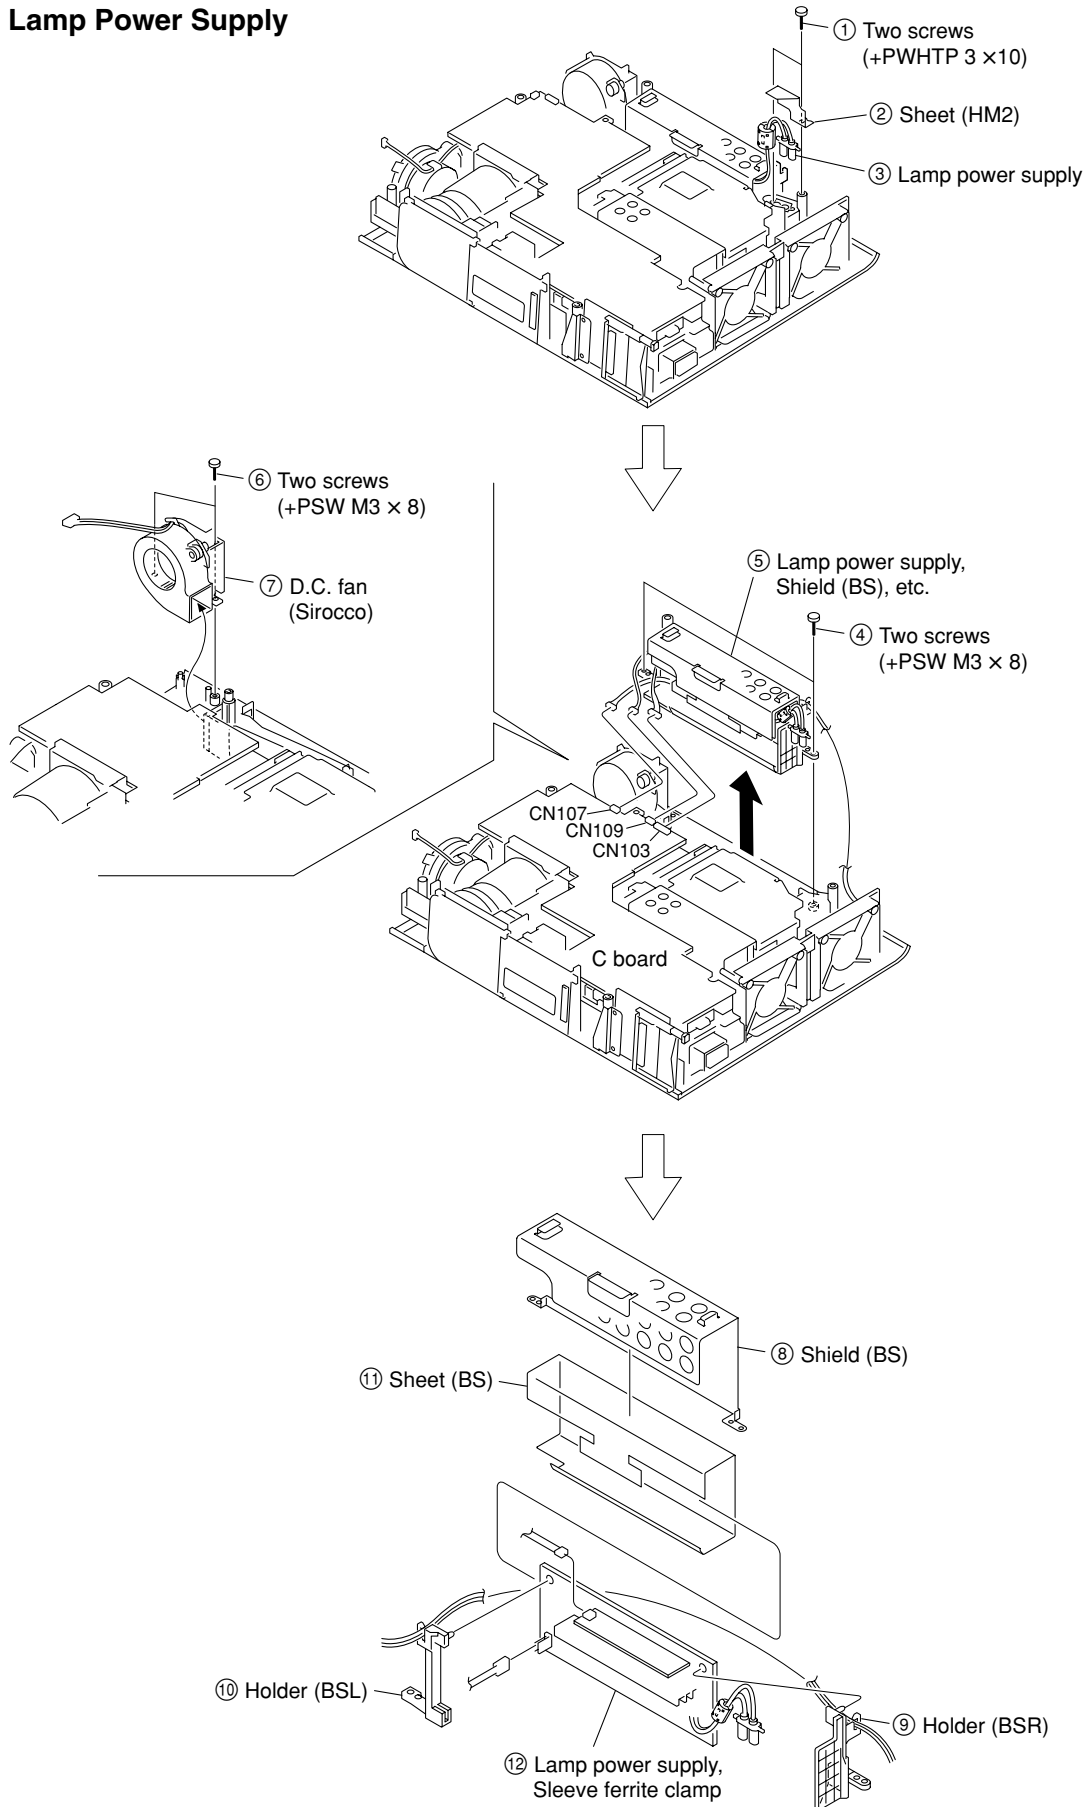



1-3-6. C Board

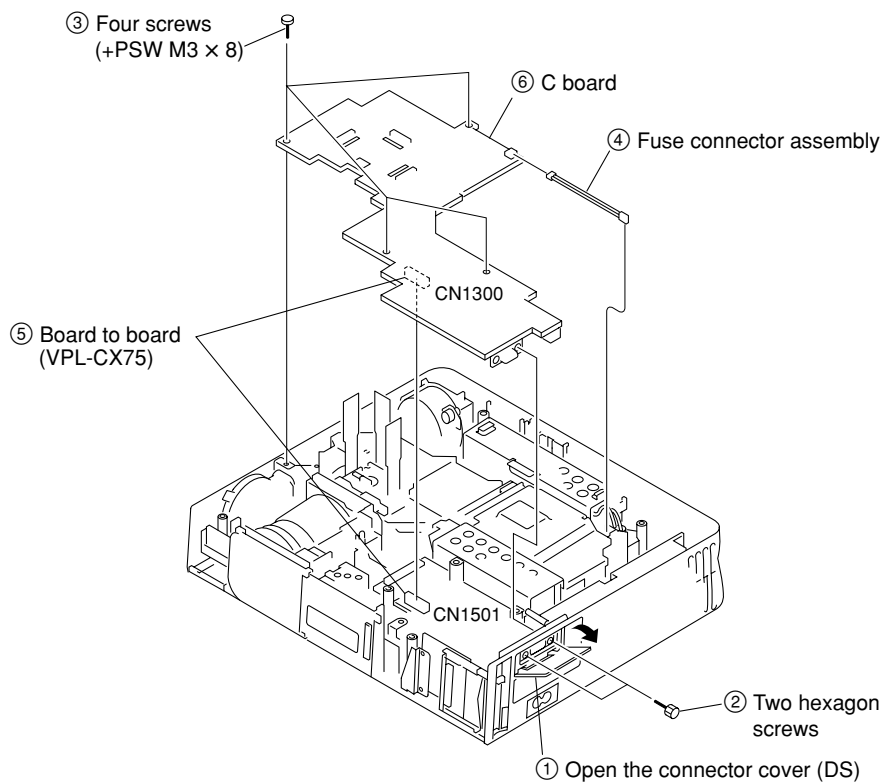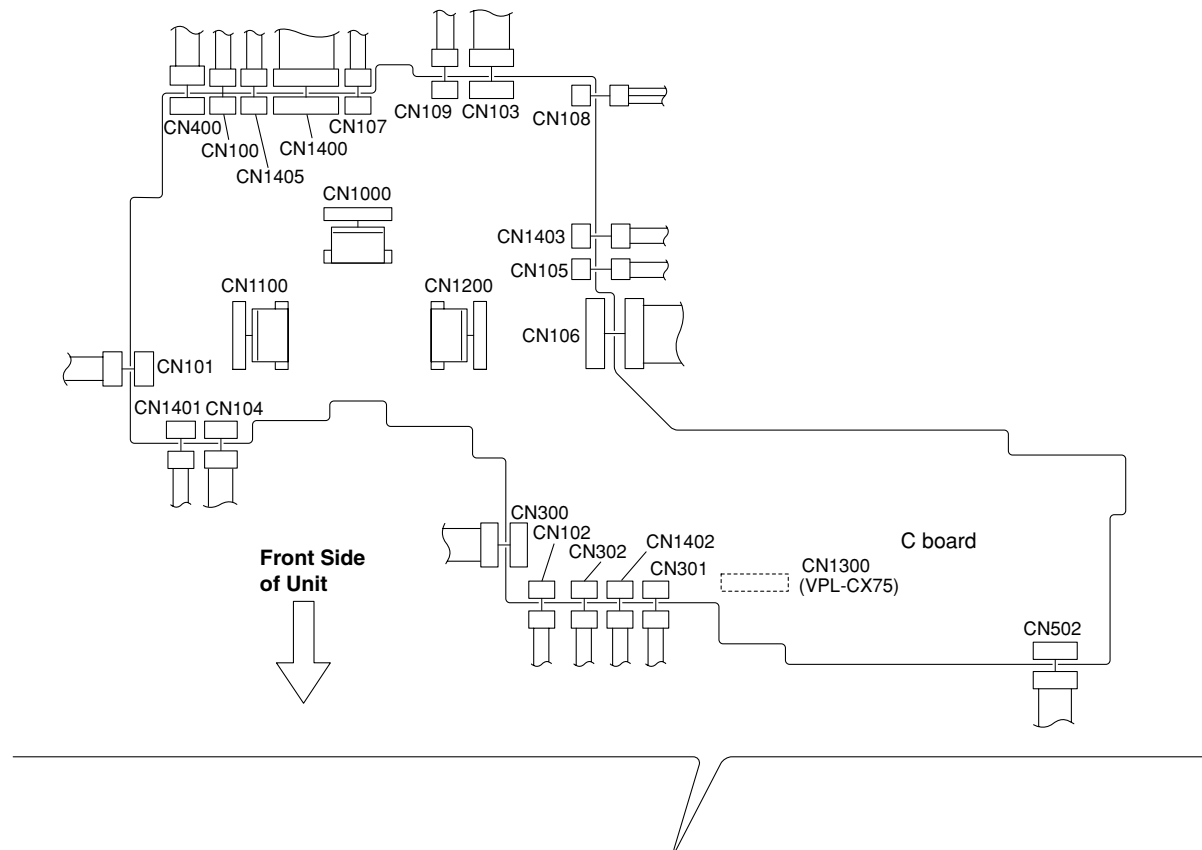



1-3-7. Optics Block Assembly

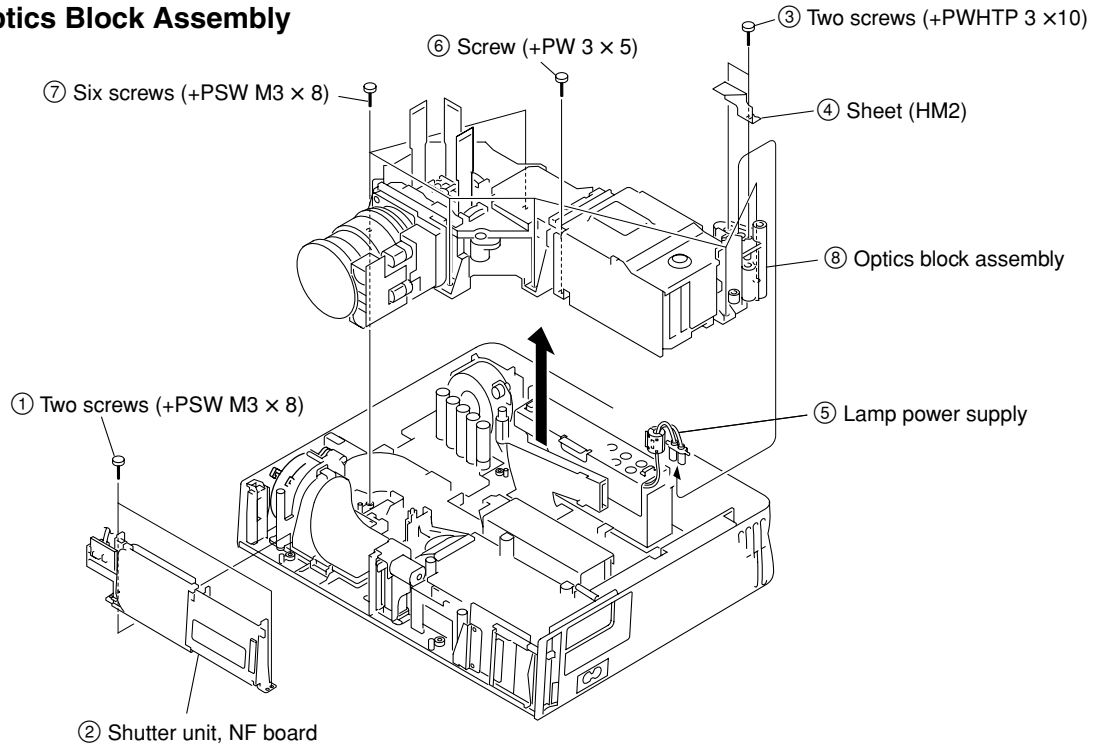


Position of the S out-pre-polarization assembly,
Polarization S panel assembly

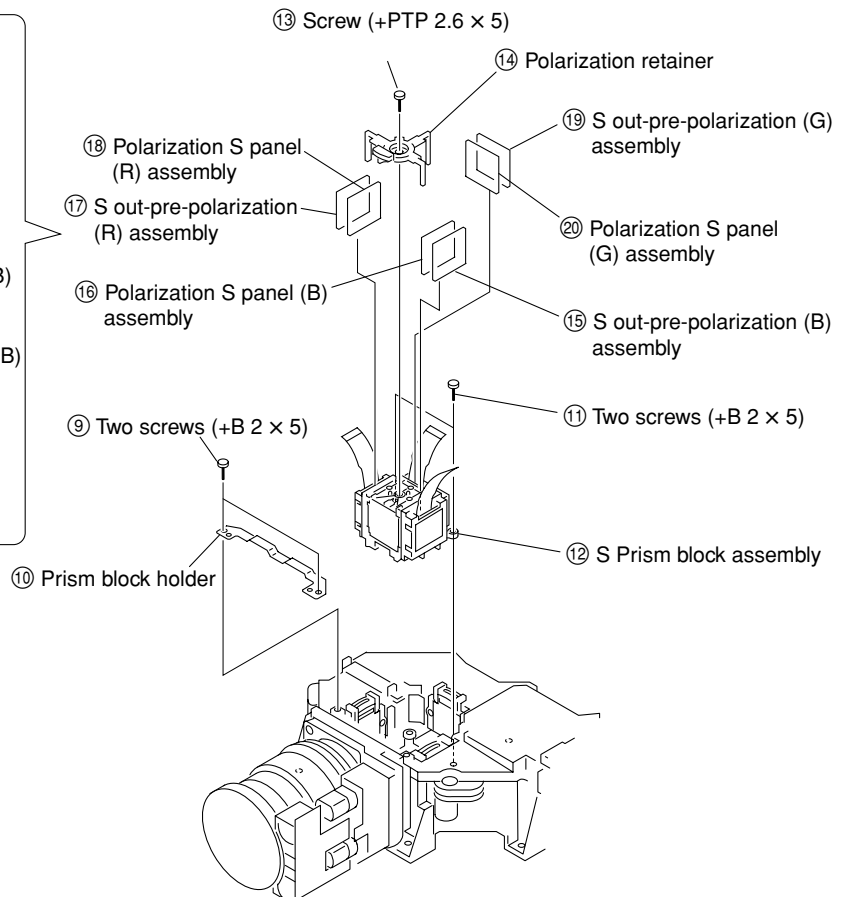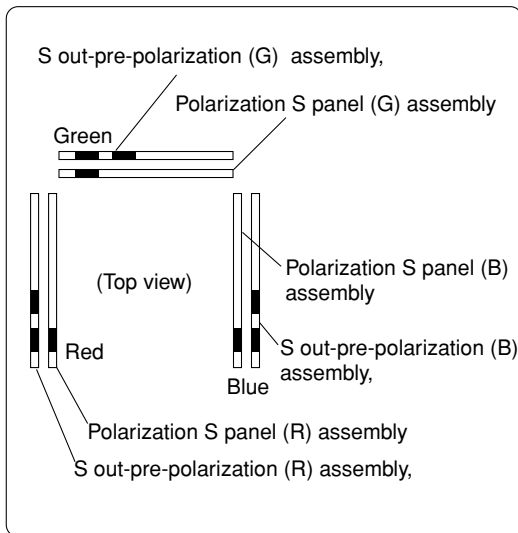


1-3-8. Main Capacitor Lens Assembly

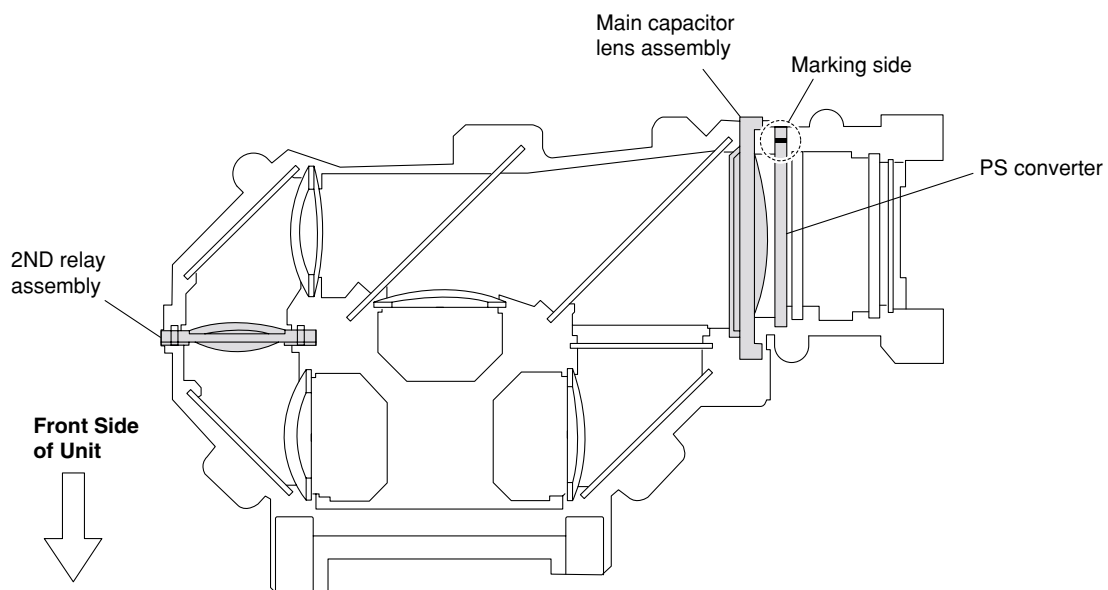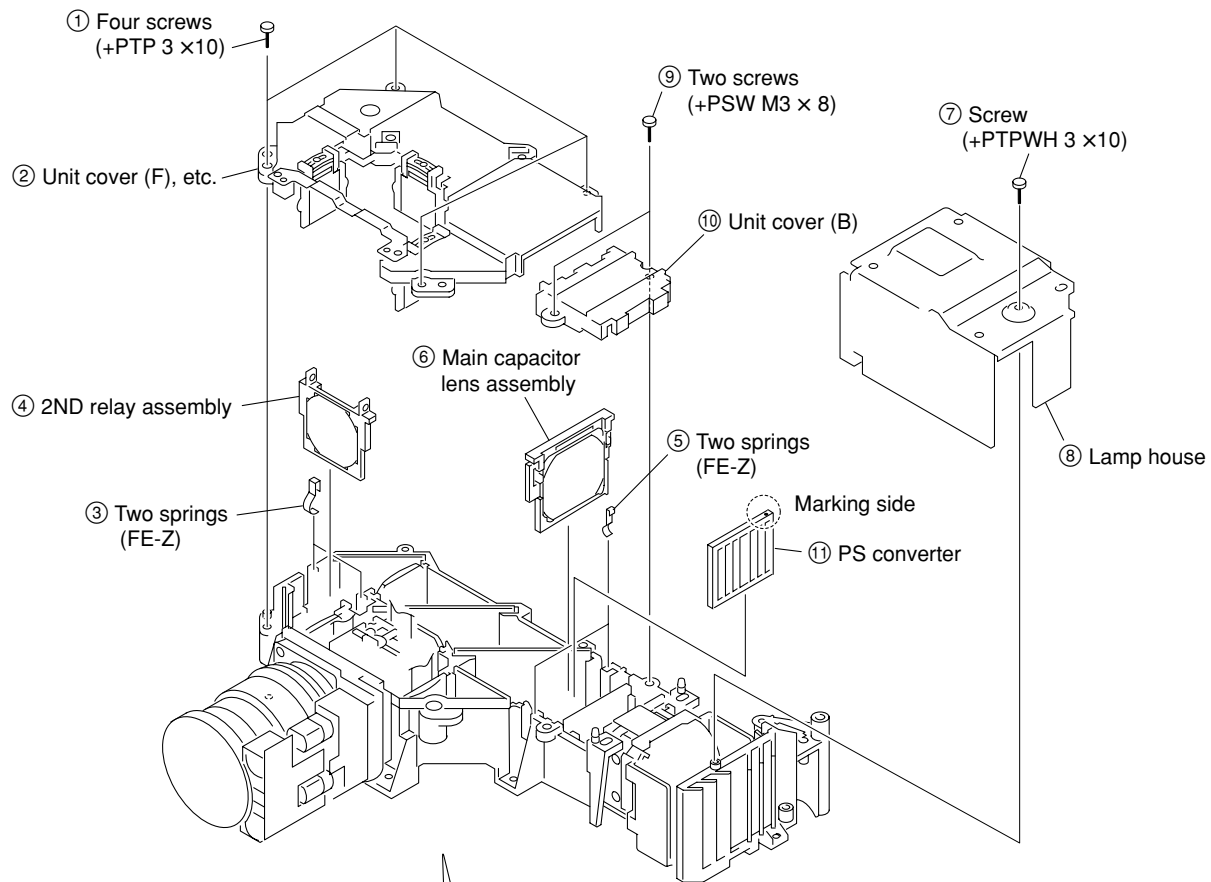


1-3-9. M Board (VPL-CX75)

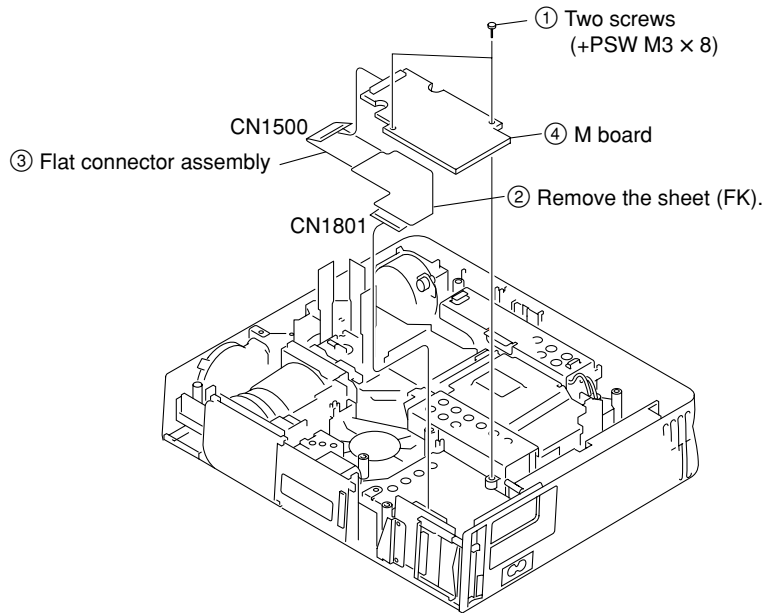


1-3-10. U Board and D.C. Fan

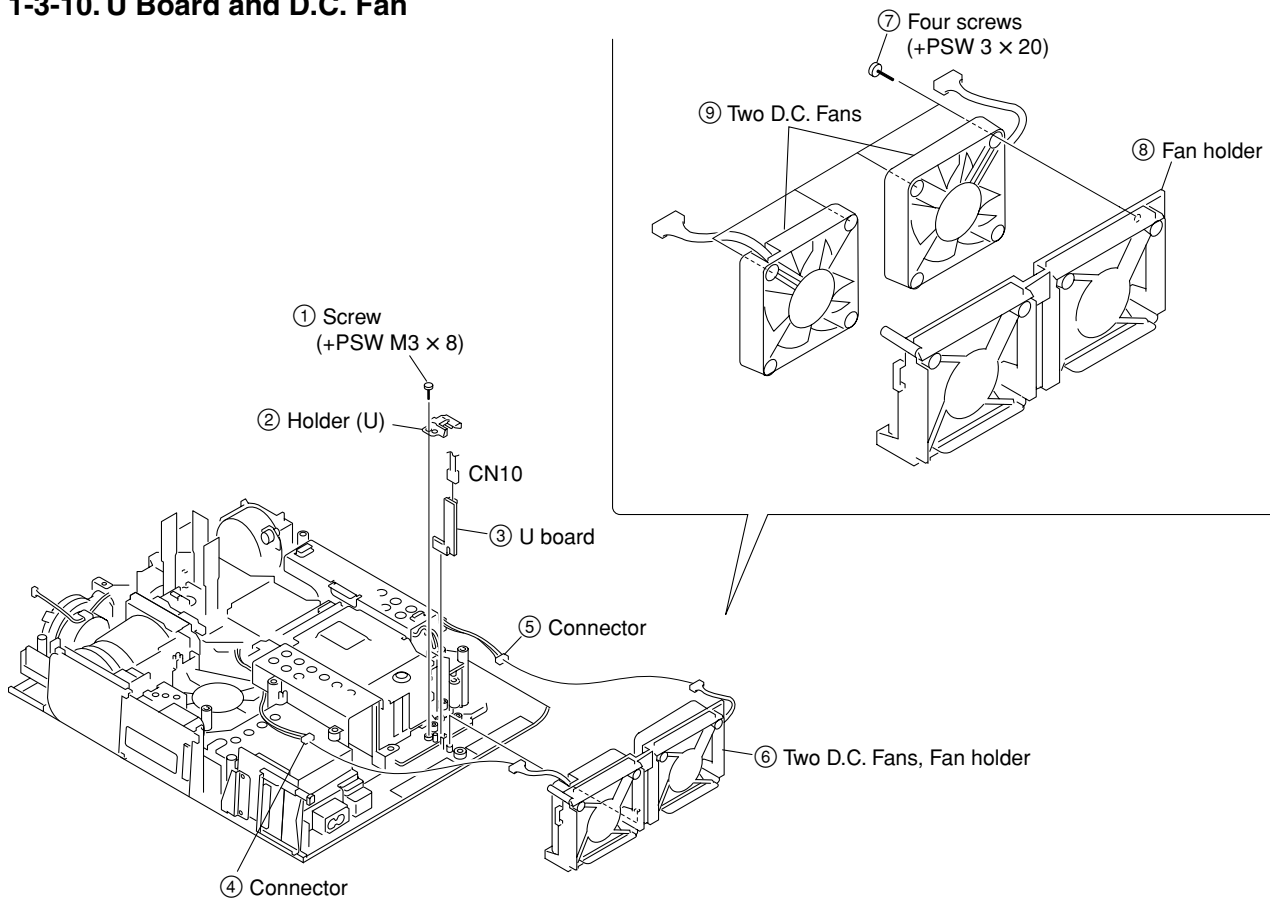


1-3-11. GB Board

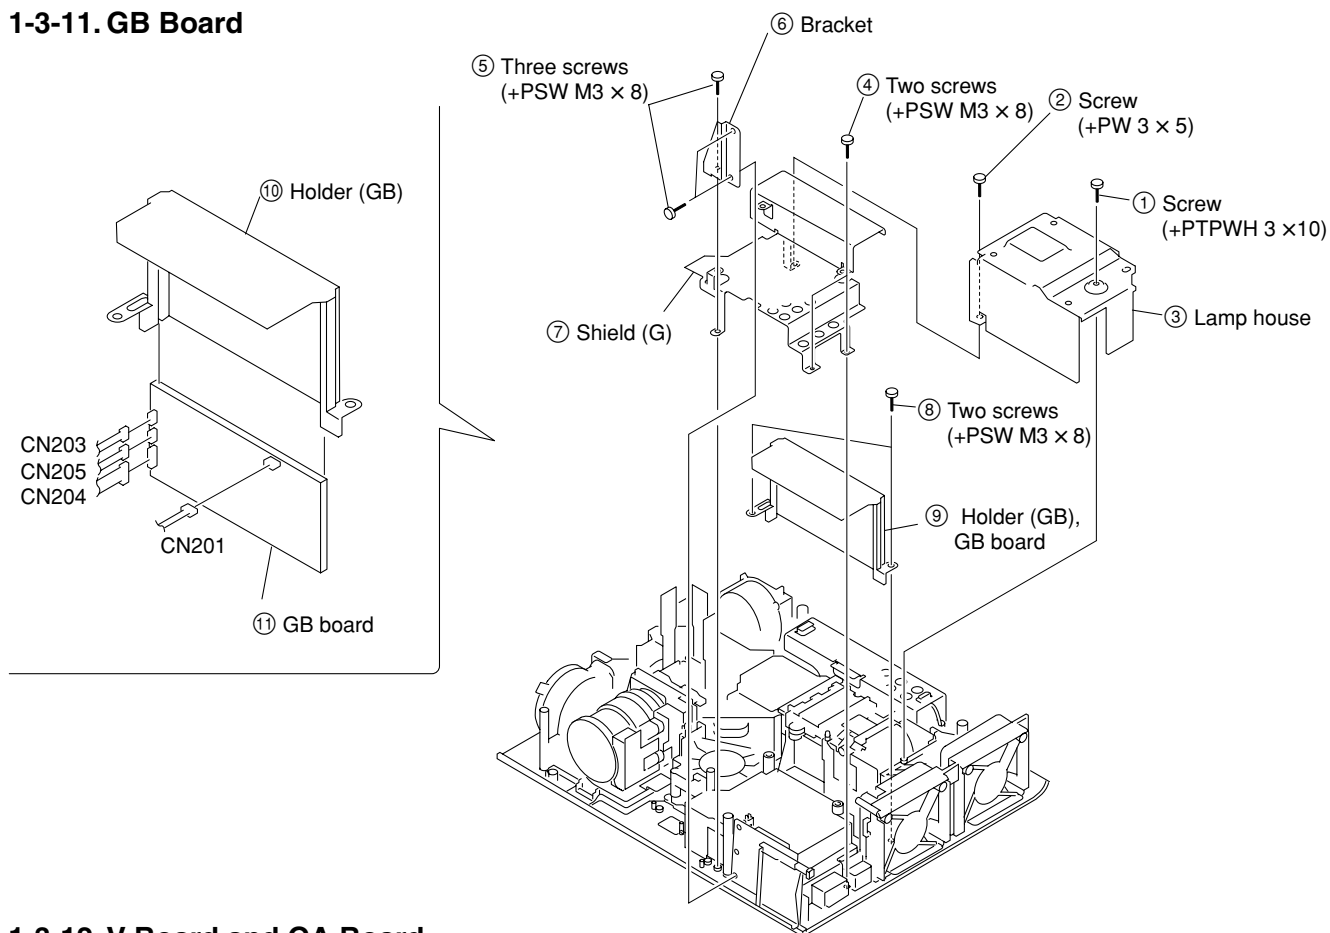


1-3-12. V Board and GA Board

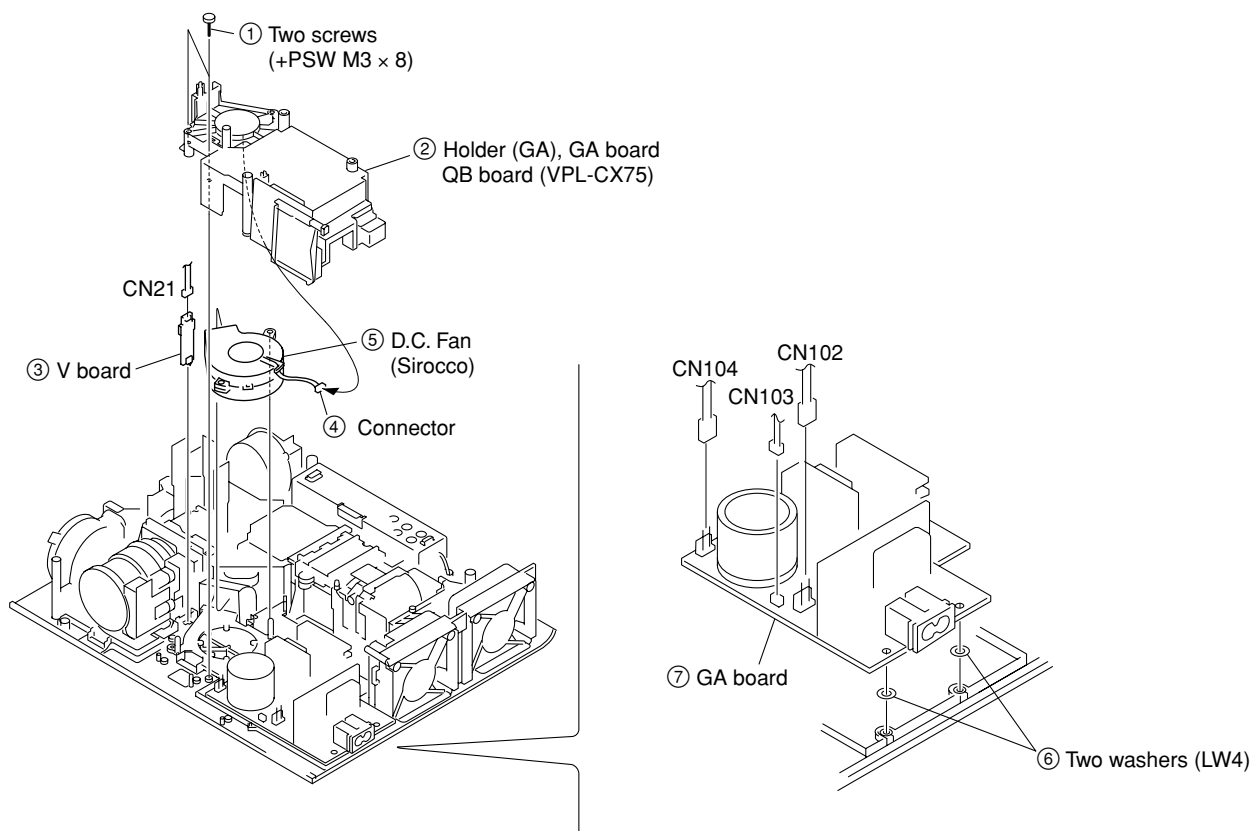

1-3-13. D.C. Fan (Sirocco)

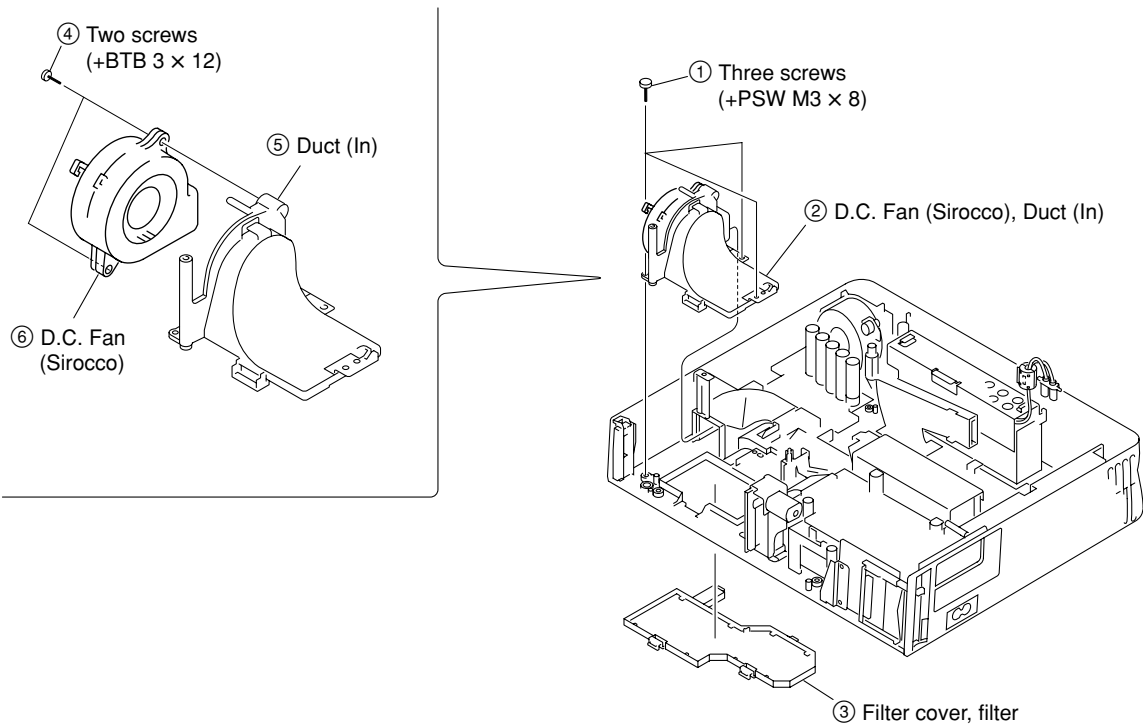

1-3-14. GC Board

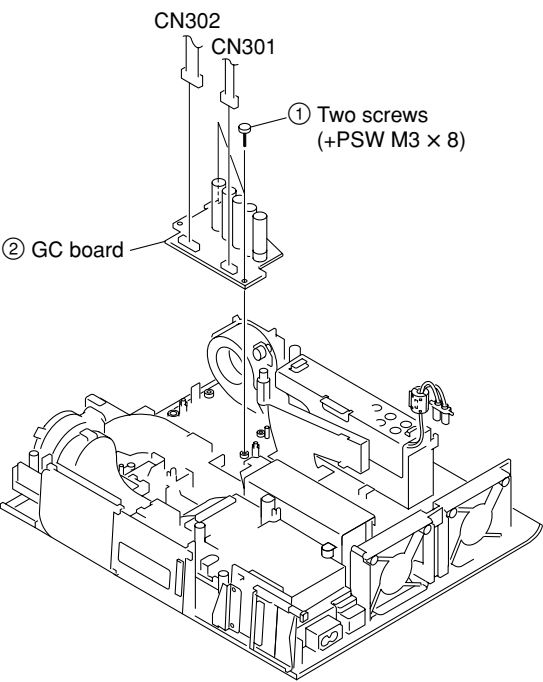

X kit assembly (Part No. A-1073-342-A)

1-3-16. Extension Boards and Extension Connectors Connection


This exploded view diagram illustrates the internal components of the VPL-CX75 chassis. The components are shown in their relative positions and assembly sequence, indicated by numbers 1 through 10. The components are:



- 1. HA board
- 2. C board
- 3. Fuse connector assembly
- 4. X70 board
- 5. M board
- 6. QB board
- 7. XC1 board
- 8. XC2 board
- 9. Three XF32 boards
- 10. VPL-CX75 chassis

The diagram shows the chassis (10) with various slots and connectors. The components are shown being inserted into these slots and connected to the chassis. The assembly sequence is as follows:

- HA board (1) is inserted into the top of the chassis.
- C board (2) is inserted into the top of the chassis.
- Fuse connector assembly (3) is inserted into the top of the chassis.
- X70 board (4) is inserted into the top of the chassis.
- M board (5) is inserted into the top of the chassis.
- QB board (6) is inserted into the top of the chassis.
- XC1 board (7) is inserted into the bottom of the chassis.
- XC2 board (8) is inserted into the bottom of the chassis.
- Three XF32 boards (9) are inserted into the bottom of the chassis.



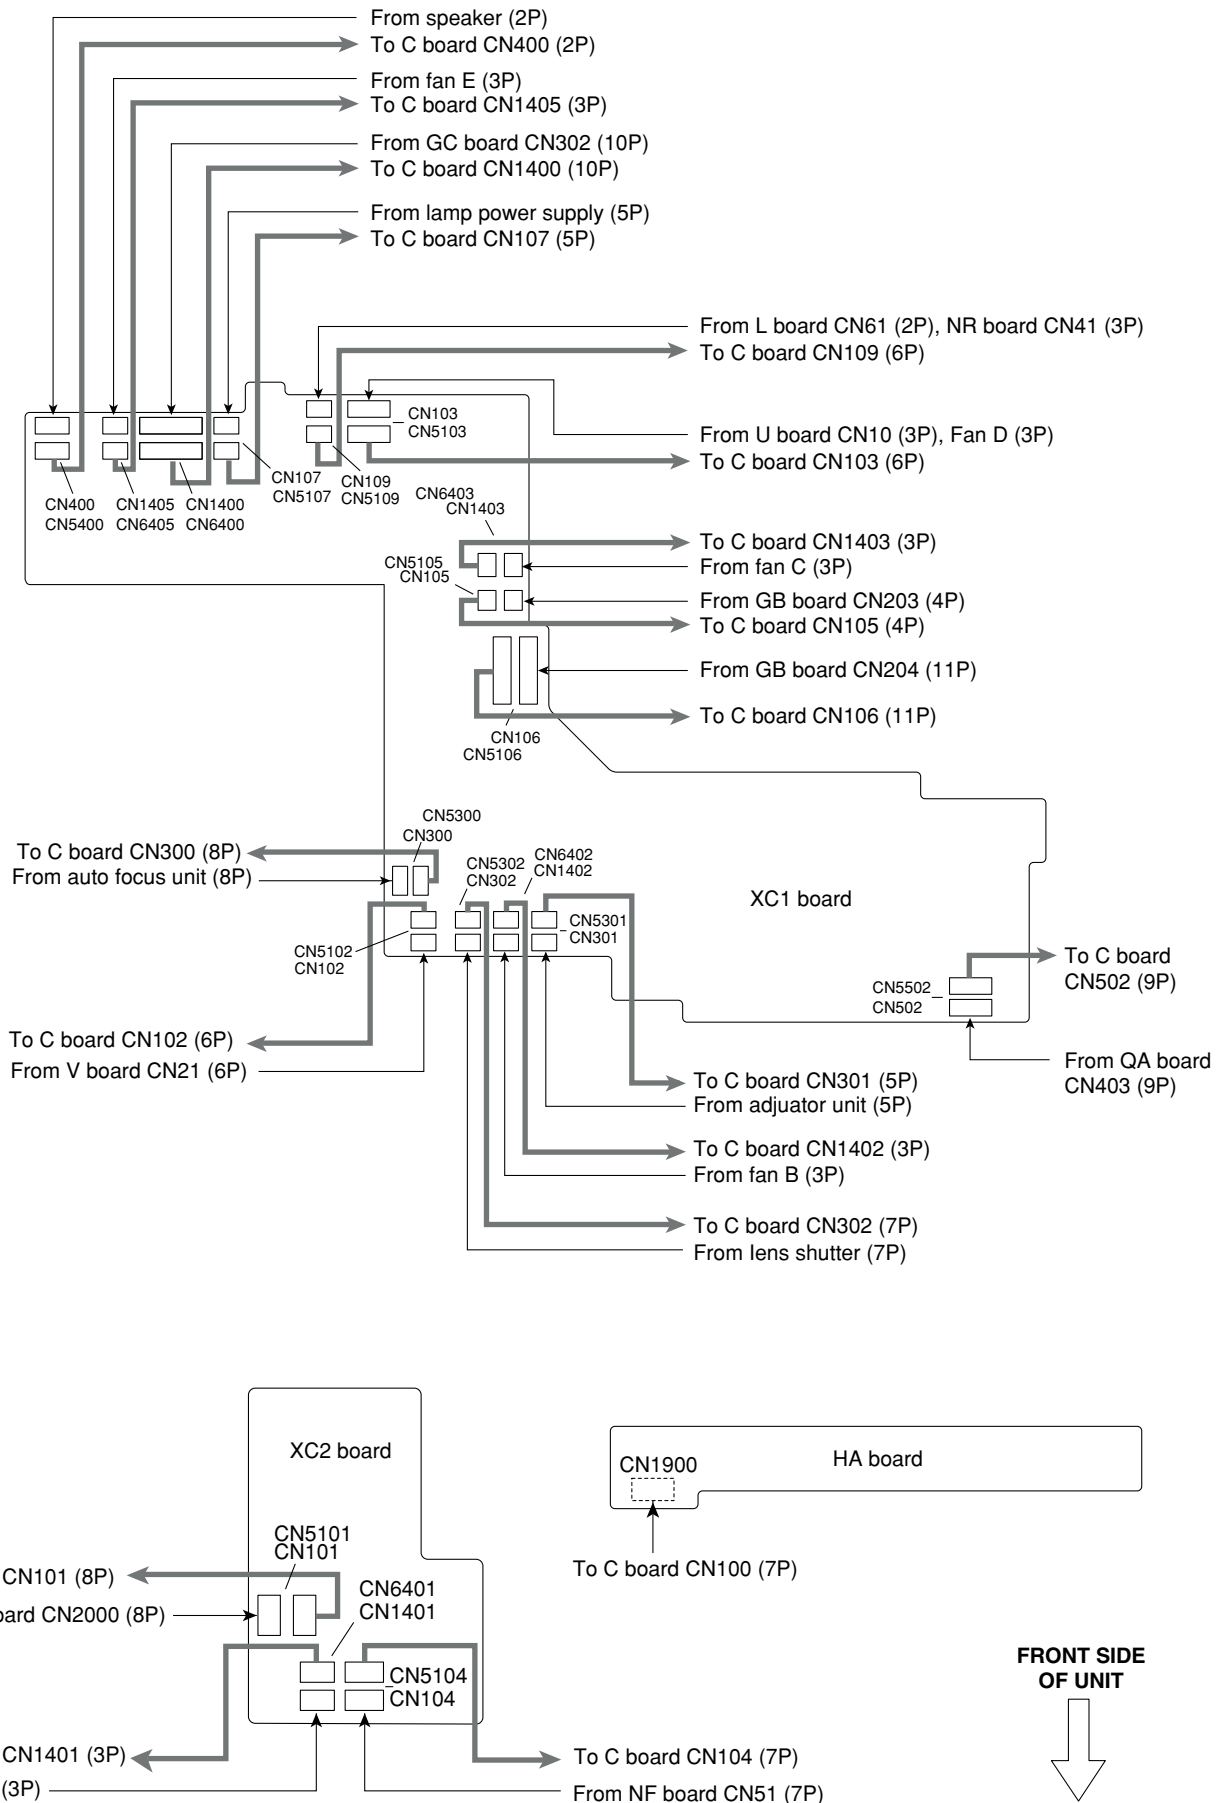

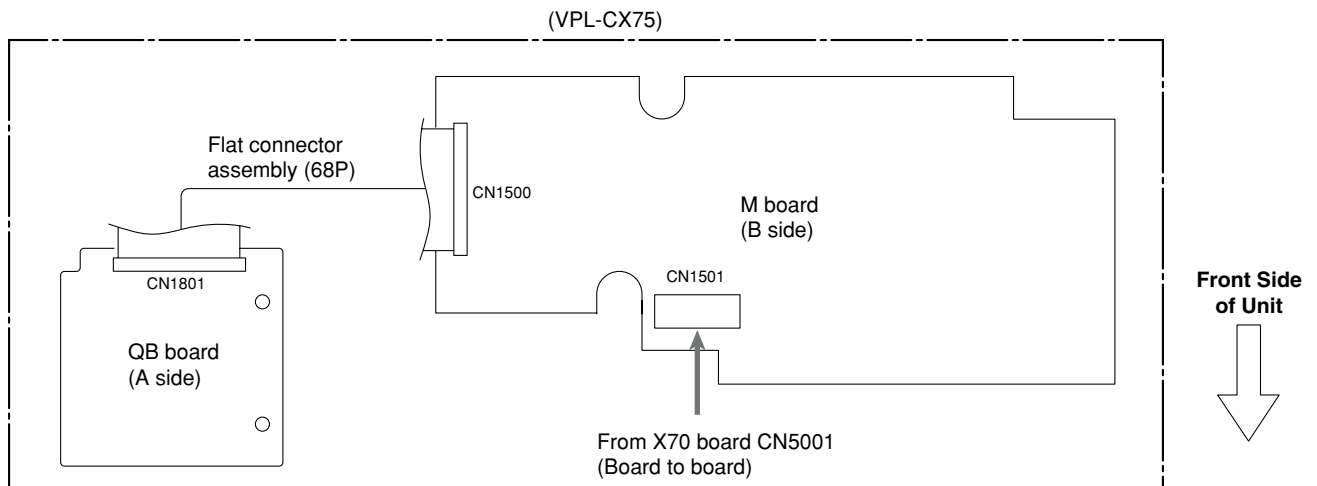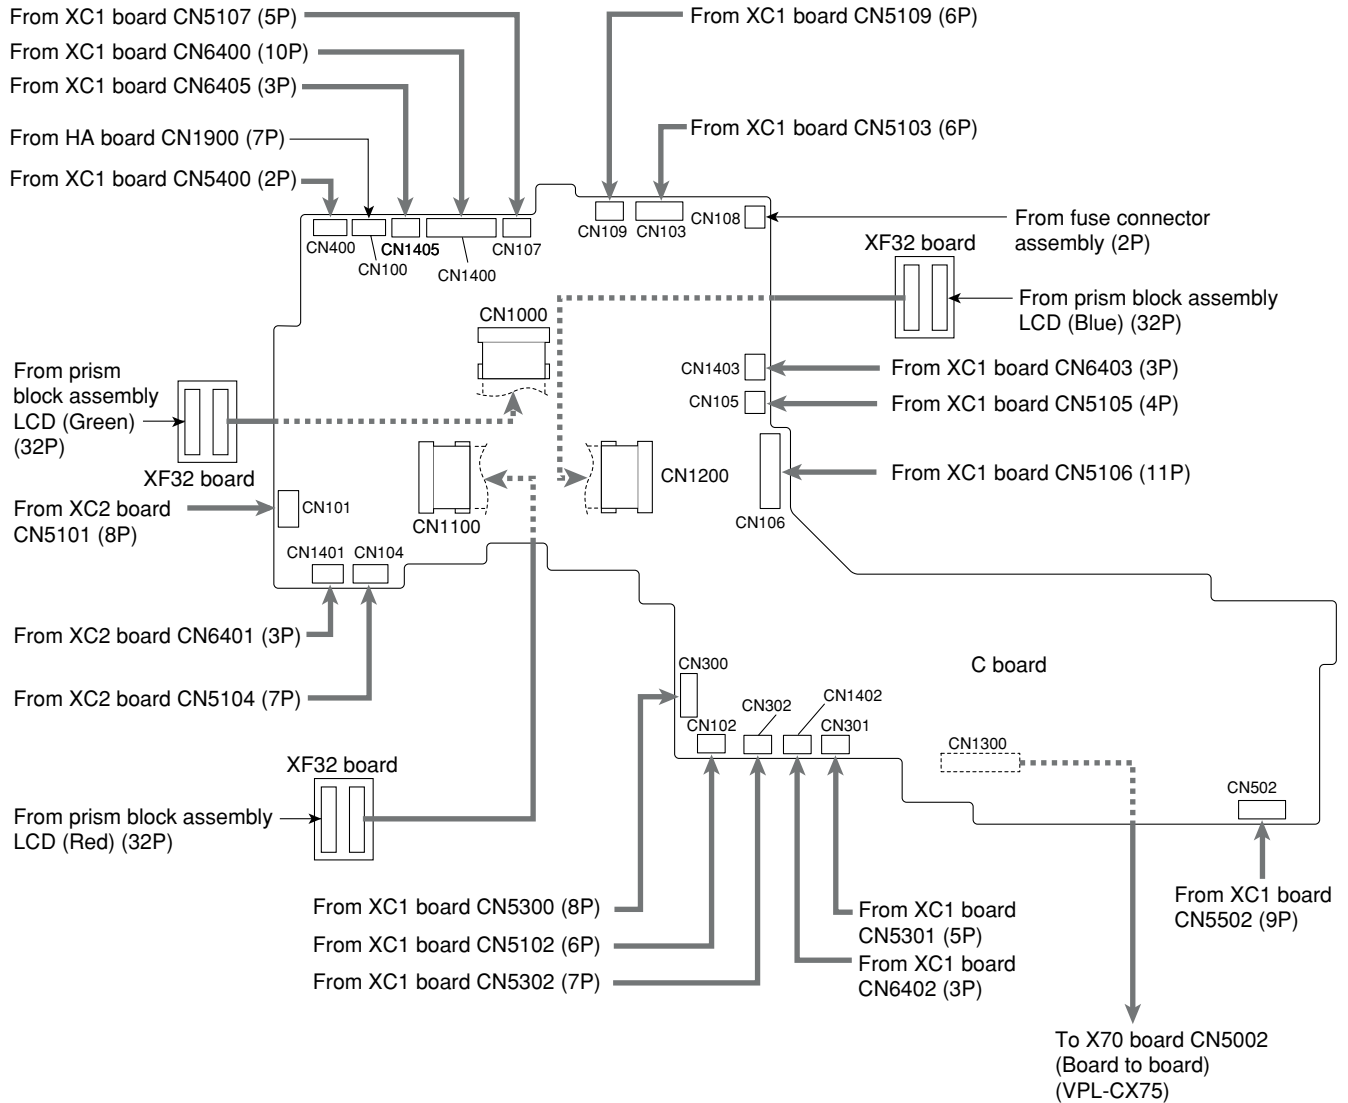

1-3-17. 3D GAMMA Quick Access Application Software

Feature of 3D Gamma Quick Access :

- It can read 3D gamma data from a set and save it in a file.
- It can write 3D gamma data in a PC into a set.

When the optical unit is replaced, load 3D gamma data recorded on the micro floppy disk, which is supplied together with the optical unit, into a set using the application software.

File configuration :


Executable : QuickAccess200.exe

Readme File : readme_j.txt (Japanese)
readme_e.txt (English)

Software Acquisition :

Download the application software from the GSP website.

- Since this set has not RS-232C terminal, use the quick access assembly (A-1501-849-A).

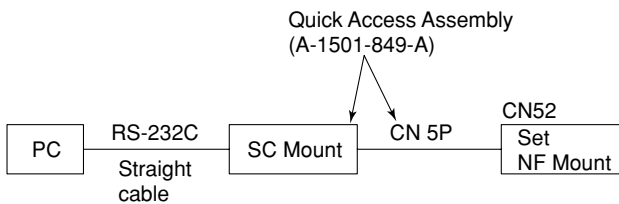

1-4. Writing in the USB Storage Media

When replacing the USB storage media, copy the following files into the USB storage media 8-869-027-82 from attached CD-ROM.

- \AS_Inst.exe
- \Help\PS for Air Shot\ENG\PSAirShot.chm
- \Help\PS for Air Shot\JPN\PSAirShot.chm
- \IN\as_inst.ini
- \ReadMe\PS for Air Shot\ENG\ReadMe.txt
- \ReadMe\PS for Air Shot\JPN\ReadMe.txt
- \Setup\PS for Air Shot\0x0409.ini
- \Setup\PS for Air Shot\0x0411.ini
- \Setup\PS for Air Shot\Data1.cab
- \Setup\PS for Air Shot\instmsia.exe
- \Setup\PS for Air Shot\instmsiw.exe
- \Setup\PS for Air Shot\isscript.msi
- \Setup\PS for Air Shot\Projector Station for Air Shot.msi
- \Setup\PS for Air Shot\setup.exe
- \Setup\PS for Air Shot\Setup.ini
- \Setup\PS for Air Shot\AirShot.ini (*Note)

Notes

- Be sure to copy the files of the newest version into the USB storage media.
- The AirShot.ini is different depending on the serial number of the projector. (Refer to Note : Method to create the AirShot.ini file.)


Method to create the AirShot.ini file

1. Check the serial number of the target projector.
2. Open a text editor application of a PC, and type the lower five digits of the serial number. If the serial number is six digits or more, type only the lower five digits of the serial number. If the serial number is less than five digits, fill the blank digits with 0.

Example : When serial number is 1 → 00001

When serial number is 1234567 → 34567

3. Save the created text file as “AirShot.ini”.

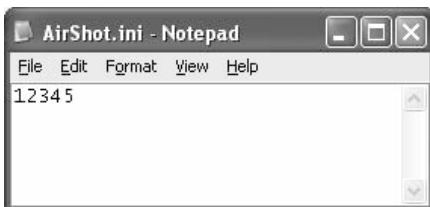

1-5. Warning on Power Connection

Use the supplied power cord when you use the projector in your country.

Otherwise, use a proper power cord meeting the following specification.

	The United States, Canada		Continental Europe		UK, Ireland, Australia, New Zealand	Japan
Plug type	VM0233	290B	YP-12A	COX-07	— ⁽¹⁾	YP332
Female end	VM0089	386A	YC-13B	COX-02	VM0310B	YC-13
Cord type	SJT	SJT	H05VV-F	H05VV-F	N13237/CO-228	VCTF
Rated Voltage & Current	10A/125V	10A/125V	10A/250V	10A/250V	10A/250V	7A/125V
Safety approval	UL/CSA	UL/CSA	VDE	VDE	VDE	DENAN
Cord length (max.)	4.5 m (177 1/4 inches)		—			

(1) Use the correct plug for your country.

Section 2

Electrical Adjustments

2-1. Preparation

2-1-1. Required Equipment

- NTSC, PAL, SECAM component signal generator
Sony Tektronix TG2000 + AVG1 (option module) +
AWVG1 (option module) or equivalent
- VG (programmable video signal generator)
VG854 or equivalent
- Illuminance meter
- Chromaticity meter

Note

Allow the warm-up time of 5 minutes after the power is on before starting the following adjustments.

2-1-2. How to Enter the Factory Mode

1. Confirm that the MENU can be displayed.
2. Close the MENU.
3. Press the keys in the following order : **ENTER** → **ENTER** → **←** → **ENTER**.
The message [Do you want to enter the Factory Mode?
Yes : ↑ No : ↓] appears.
Select [Yes : ↑].

[Supplementary information: How to Exit the Factory Mode]

Perform the step 3 KEY operation.

The message [Do you want to return to the User Mode?
Yes : ↑ No : ↓] appears.
Select [Yes : ↑].

2-2. V COM Adjustment

1. Connect the VG to the INPUT-A connector. Connect the FLAT FIELD 100 IRE signal to the input connector. Leave this unit with POWER ON for 10 minutes or longer for aging.
2. Enter the Factory Mode. Enter the Device Adjust MENU, and then enter the Panel Drive Adjustment MENU.
3. Connect the XGA, R-single color, 30 IRE, single-line ON/OFF signal to the input connector.
4. Enter the P. DRV Adjustment MENU, and then enter the VCOM R Adjustment screen.
5. Adjust the VCOM R value for minimum flicker.
6. Change the input signal to the XGA, G-single color, 30 IRE, single-line ON/OFF signal, and connect it to the input connector.
7. Enter the P. DRV Adjustment MENU, and then enter the VCOM G Adjustment screen.
8. Adjust the VCOM G value for minimum flicker.
9. Change the input signal to the XGA, B-single color, 50 IRE, single-line ON/OFF signal, and connect it to the input connector.
10. Enter the P. DRV Adjustment MENU, and then enter the VCOM B Adjustment screen.
11. Adjust the VCOM B value for minimum flicker.
12. Store the adjustment value in the memory.
13. Turn over the “Image flip” up side down and repeat the steps from 2 through 12.

2-3. Initial Values of Adjustment Items

(VPL-CX75)

MenuTitle	ItemName	MemoryName														Remarks
		Set Memory	Status Memory	Picture Memory								W/B Memory				
				Video		S Video		Input-A		Input-B		Video		Computer		
				Dynamic	Standard	Dynamic	Standard	Dynamic	Standard	Dynamic	Standard	High	Low	High	Low	
PICTURE SETTING	Picture Mode		Standard													
	Adjust Picture...															
	Contrast			95	80	95	80	95	80	95	80					
	Brightness			50	50	50	50	50	50	50	50					
	Color			50	50	50	50	50	50							
	Hue			50	50	50	50	50	50							
	Sharpness			High	High	High	High	High	High							
	Gamma Mode			-	-	-	-	Graphics	Graphics	Graphics	Graphics					
	Color Temp.			Low	Low	Low	Low	High	High	High	High					
	Volume	30														
INPUT SETTING	Adjust Signal...															
	Dot Phase		15 (※)													
	H Size		※													
	Shift		※													
	Wide Mode			Off	Off	Off	Off	Off	Off							
	Scan Conv							On	On							
SET SETTING	Smart APA	On														
	Auto Input Search	Off														
	Input-A Signal Sel.	Computer														
	Input-C Select	Air Shot														
	Color System	Auto														
	Power Saving	Off														
	IR Receiver	Front & Rear														
	Illumination	On														
Panel Key Lock	Off															
MENU SETTING	Status	On														
	Language	English														
	Menu Position	Center														
	Menu Color	White														

(VPL-CX75)

MenuTitle	ItemName	MemoryName														Remarks	
		Set Memory	Status Memory	Picture Memory								W/B Memory					
				Video		S Video		Input-A		Input-B		Video		Computer			
				Dynamic	Standard	Dynamic	Standard	Dynamic	Standard	Dynamic	Standard	High	Low	High	Low		
INSTALL SETTING	Tilt...																
	V Keystone	Auto															
	Side Shot	0															
	Auto Forcus	On															
	Image Flip	Off															
	Background	Blue															
	Test Pattern	Off															
	Lamp Mode	Standard															
	Lens Control	On															
	High Altitude	Off															
Security Lock	Off																
	Default Password	Enter x 4															
INFORMA-TION	fH	Display only															
	fV	Display only															
	(Memory No.)	Display only															
	(Resolution)	Display only															
	Lamp Timer	Display only															
	ROM Version	Display only															
	SC ROM Version	Display only															
	Operation Timer	Display only															
	Prev. Lamp Timer	Display only															
W/B SETTING	Gain R												152	152	152	152	
	G												152	140	152	140	
	B												152	140	152	140	
	Bias R												127	127	127	127	
	G												127	127	127	127	
	B												127	127	127	127	

* : The “Dot Phase E, H Size, Shift H/V and Picture Mode” items in the “INPUT SETTING” menu have their respective initial values for each input signal (PRESET MEMORY No.).

Note

There are some adjustment items that cannot be adjusted, depending on the input signal.

(VPL-CX75)

Device Name	Item Name		MemoryName															Remarks
			Set Memory	Status Memory	Chroma Memory							Channel Memory				Image Flip Memory		
					NT358/ NT443/ BW60	Pal/Pal-M/N/ Secam/ BW50	15 kRGB	Component (15k)	Double speed Component	HDTV (YPbPr)	HDTV(G BR)inc. Double speed	Video	S Video	Input- A	Input- B	Up/Down inversion possible	Up/Down inversion not possible	
A/D Converter	ADC/	Clamp Position		*1														
		Clamp Width		*1														
		R Gain(Other)										15	-	88	88			
		R Gain(Component)										-	-	80	-			
		R Gain(VideoGBR)										-	-	88	-			
		G Gain(Other)										-	15	88	88			
		G Gain(Component)										-	-	120	-			
		G Gain(VideoGBR)										-	-	88	-			
		B Gain(Other)										-	15	88	88			
		B Gain(Component)										-	-	80	-			
		B Gain(VideoGBR)										-	-	88	-			
		R Offset(Other)										126	-	128	128			
		R Offset(Component)										-	-	128	-			
		R Offset(VideoGBR)										-	-	128	-			
		G Offset(Other)										-	128	128	128			
		G Offset(Component)										-	-	128	-			
		G Offset(VideoGBR)										-	-	128	-			
		B Offset(Other)										-	128	128	128			
		B Offset(Component)										-	-	128	-			
		B Offset(VideoGBR)										-	-	128	-			
Chroma/ D.Comb	Chroma/	Bandwidth		3														
		Dither										2	2	2	2			
		Vd 10BitEn										1	1	1	1			
		Secam Nbw										1	1	1	1			
		Line2 A Sync										15	15	15	15			
		Line2 H Sync										7	7	7	7			
		Line2 Los										31	31	31	31			
		End Clamp	64															
		Status 1	Display only															
		Status 2	Display only															
Panel Driver	P.Drv	Offset R														122	122	
		Offset G														122	122	
		Offset B														122	122	
		V Common R														92	92	
		V Common G														92	92	
		V Common B														92	92	
		Psig 1 R	12															
		Psig 1 G	12															
		Psig 1 B	12															
		Psig 2 R	83															
		Psig 2 G	83															
		Psig 2 B	83															
		Signal Center R	30															
		Signal Center G	30															
		Signal Center B	30															
	Gain R	160																
	Gain G	160																
	Gain B	160																
	SH/	SH1	31															

(VPL-CX75)

Device Name	Item Name		MemoryName															Remarks
			Set Memory	Status Memory	Chroma Memory							Channel Memory				Image Flip Memory		
					NT358/ NT443/ BW60	Pal/Pal-M/N/ Secam/ BW50	15 kRGB	Component (15k)	Double speed Component	HDTV (YPbPr)	HDTV(G BR)inc. Double speed	Video	S Video	Input- A	Input- B	Up/Down inversion possible	Up/Down inversion not possible	
Panel Driver	Other/	V Com Ptn Enb	Non Adjustable															
		Installation	Non Adjustable															
Other	3D Gamma	Through	0															
		SW	1															
	Other/	HST Position	1425															
		HST Phase	52															
		HST Width	0															
	Temp/	Thresh Lamp															Non Adjustable	Non Adjustable
		Thresh Panel															Non Adjustable	Non Adjustable
		Thresh Atmos															Non Adjustable	Non Adjustable
	Fan/	Hi Alt Const															Non Adjustable	Non Adjustable
		High Alt Cofe															Non Adjustable	Non Adjustable
	Fan1/	Cont Max															Non Adjustable	Non Adjustable
		Speed Max															Non Adjustable	Non Adjustable
		Speed Min															Non Adjustable	Non Adjustable
		Cont Slope															Non Adjustable	Non Adjustable
	Fan2/	Cont Max															Non Adjustable	Non Adjustable
		Speed Max															Non Adjustable	Non Adjustable
		Speed Min															Non Adjustable	Non Adjustable
		Cont Slope															Non Adjustable	Non Adjustable
	Fan3/	Cont Max															Non Adjustable	Non Adjustable
		Speed Max															Non Adjustable	Non Adjustable
		Speed Min															Non Adjustable	Non Adjustable
		Cont Slope															Non Adjustable	Non Adjustable
	Other/	Synchronous	1															
		Tilt C0	Factory adj. Value															
		Tilt C1	Factory adj. Value															
		Tilt C2	Factory adj. Value															
		X Tilt	Display only															
		Y Tilt	Display only															
		TL	Display only															
		TP	Display only															
		TA	Display only															
Gamma			Factory adj. Value															

Notes

There are some adjustment items that cannot be adjusted, depending on the input signal.

*1 : It changes with signals inputted.

(VPL-CX70)

MenuTitle	ItemName	MemoryName												Remarks
		Set Memory	Status Memory	Picture Memory						W/B Memory				
				Video		S Video		Input-A		Video		Computer		
				Dynamic	Standard	Dynamic	Standard	Dynamic	Standard	High	Low	High	Low	
PICTURE SETTING	Picture Mode		Standard											
	Adjust Picture...													
	Contrast			95	80	95	80	95	80					
	Brightness			50	50	50	50	50	50					
	Color			50	50	50	50	50	50					
	Hue			50	50	50	50	50	50					
	Sharpness			High	High	High	High	High	High					
	Gamma Mode			-	-	-	-	Graphics	Graphics					
	Color Temp.			Low	Low	Low	Low	High	High					
	Volume	30												
INPUT SETTING	Adjust Signal...													
	Dot Phase		15 (※)											
	H Size		*											
	Shift		*											
	Wide Mode			Off	Off	Off	Off	Off	Off					
	Scan Conv							On	On					
SET SETTING	Smart APA	On												
	Auto Input Search	Off												
	Input-A Signal Sel.	Computer												
	Input-C Select	Air Shot												
	Color System	Auto												
	Power Saving	Off												
	IR Receiver	Front & Rear												
	Illumination	On												
	Panel Key Lock	Off												
MENU SETTING	Status	On												
	Language	English												
	Menu Position	Center												
	Menu Color	White												

(VPL-CX70)

MenuTitle	ItemName	MemoryName												
		Set Memory	Status Memory	Picture Memory						W/B Memory				
				Video		S Video		Input-A		Video		Computer		
				Dynamic	Standard	Dynamic	Standard	Dynamic	Standard	High	Low	High	Low	
INSTALL SETTING	Tilt...													
	V Keystone	Auto												
	Manual...	0												
	Side Shot	0												
	Auto Focus	On												
	Image Flip	Off												
	Background	Blue												
	Test Pattern	Off												
	Lamp Mode	Standard												
	Lens Control	On												
	High Altitude	Off												
Security Lock	Off													
Default Password	Enter x 4													
INFORMA- TION	fH	Display only												
	fV	Display only												
	(Memory No.)	Display only												
	(Resolution)	Display only												
	Lamp Timer	Display only												
	ROM Version	Display only												
	SC ROM Version	Display only												
	Operation Timer	Display only												
	Prev. Lamp Timer	Display only												
W/B SETTING	Gain R									152	152	152	152	
	G									152	140	152	140	
	B									152	140	152	140	
	Bias R									127	127	127	127	
	G									127	127	127	127	
	B									127	127	127	127	

* : The “Dot Phase E, H Size, Shift H/V and Picture Mode” items in the “INPUT SETTING” menu have their respective initial values for each input signal (PRESET MEMORY No.).

Note

There are some adjustment items that cannot be adjusted, depending on the input signal.

(VPL-CX70)

Device Name	Item Name		MemoryName														Remarks	
			Set Memory	Status Memory	Chroma Memory						Channel Memory				Image Flip Memory			
					NT358/ NT443/ BW60	Pal/Pal-M/N/ Secam/ BW50	15 kRGB	Component (15k)	Double speed Component	HDTV (YPbPr)	HDTV(G BR)inc. Double speed	Video	S Video	Input- A	Input- B	Up/Down inversion possible		Up/Down inversion not possible
A/D Converter	ADC/	Clamp Position		*1														
		Clamp Width		*1														
		R Gain(Other)										15	-	88	88			
		R Gain(Component)										-	-	80	-			
		R Gain(VideoGBR)										-	-	88	-			
		G Gain(Other)										-	15	88	88			
		G Gain(Component)										-	-	120	-			
		G Gain(VideoGBR)										-	-	88	-			
		B Gain(Other)										-	15	88	88			
		B Gain(Component)										-	-	80	-			
		B Gain(VideoGBR)										-	-	88	-			
		R Offset(Other)										126	-	128	128			
		R Offset(Component)										-	-	128	-			
		R Offset(VideoGBR)										-	-	128	-			
		G Offset(Other)										-	128	128	128			
		G Offset(Component)										-	-	128	-			
		G Offset(VideoGBR)										-	-	128	-			
		B Offset(Other)										-	128	128	128			
		B Offset(Component)										-	-	128	-			
		B Offset(VideoGBR)										-	-	128	-			
Chroma/ D.Comb	Chroma/	Bandwidth		3														
		Dither										2	2	2	2			
		Vd 10BitEn										1	1	1	1			
		Secam Nbw										1	1	1	1			
		Line2 A Sync										15	15	15	15			
		Line2 H Sync										7	7	7	7			
		Line2 Los										31	31	31	31			
		End Clamp	64															
		Status 1	Display only															
		Status 2	Display only															
Panel Driver	P.Drv	Offset R														122	122	
		Offset G														122	122	
		Offset B														122	122	
		V Common R														92	92	
		V Common G														92	92	
		V Common B														92	92	
		Psig 1 R	12															
		Psig 1 G	12															
		Psig 1 B	12															
		Psig 2 R	83															
		Psig 2 G	83															
		Psig 2 B	83															
		Signal Center R	30															
		Signal Center G	30															
		Signal Center B	30															
		Gain R	160															
		Gain G	160															
		Gain B	160															
	SH/	SH1	31															

(VPL-CX70)

Device Name	Item Name		MemoryName													Remarks	
			Set Memory	Status Memory	Chroma Memory							Channel Memory			Image Flip Memory		
					NT358/ NT443/ BW60	Pal/Pal-M/N/ Secam/ BW50	15 kRGB	Component (15k)	Double speed Component	HDTV (YPbPr)	HDTV(G BR)inc. Double speed	Video	S Video	Input- A	Up/Down inversion possible		Up/Down inversion not possible
Panel Driver	Other/	V Com Ptn Enb	Non Adjustable														
Other	3D Gamma	Installation	Non Adjustable														
		Through	0														
	Other/	SW	1														
		HST Position	1425														
		HST Phase	52														
		HST Width	0														
	Temp/	Thresh Lamp														Non Adjustable	Non Adjustable
		Thresh Panel														Non Adjustable	Non Adjustable
		Thresh Atmos														Non Adjustable	Non Adjustable
	Fan/	Hi Alt Const														Non Adjustable	Non Adjustable
		High Alt Cofe														Non Adjustable	Non Adjustable
	Fan1/	Cont Max														Non Adjustable	Non Adjustable
		Speed Max														Non Adjustable	Non Adjustable
		Speed Min														Non Adjustable	Non Adjustable
		Cont Slope														Non Adjustable	Non Adjustable
	Fan2/	Cont Max														Non Adjustable	Non Adjustable
		Speed Max														Non Adjustable	Non Adjustable
		Speed Min														Non Adjustable	Non Adjustable
		Cont Slope														Non Adjustable	Non Adjustable
	Fan3/	Cont Max														Non Adjustable	Non Adjustable
		Speed Max														Non Adjustable	Non Adjustable
Speed Min															Non Adjustable	Non Adjustable	
Cont Slope															Non Adjustable	Non Adjustable	
Other/	Synchronous	1													Non Adjustable	Non Adjustable	
	Tilt C0	Factory adj. Value															
	Tilt C1	Factory adj. Value															
	Tilt C2	Factory adj. Value															
	X Tilt	Display only															
	Y Tilt	Display only															
	TL	Display only															
	TP	Display only															
	TA	Display only															
Gamma		Factory adj. Value															

Notes

There are some adjustment items that cannot be adjusted, depending on the input signal.

*1 : It changes with signals inputted.

2-4. Service Know-How

2-4-1. When the Prism Block Is Replaced

1. Perform the V COM adjustment. (Refer to Section “2-2. VCOM Adjustment”.)
2. Write LUT and 3D GAMMA data that are supplied with the prism block.
3. Perform the white balance adjustment. (Refer to Section “2-5. White Balance Adjustment”.)
4. Perform the AF adjustment. (Refer to Section “2-6. AF Adjustment”.)

2-4-2. When the Lens is Replaced

1. Perform the AF adjustment. (Refer to Section “2-6. AF Adjustment”.)

2-4-3. When the Board is Replaced

Note

No item needs to be adjusted when boards other than the C board are replaced.

When the C board is replaced

1. Install the IC204 and IC903 that are removed from the old C board, into the new C board.
2. Enter the Factory Mode, and select Other in DEVICE ADJUST.
3. Shorten the TILT adjuster to its shortest limit on the flat workbench.
4. At this time, the value of 38 Other/X Tilt is read and inputted in the 35 Other/Tilt C0.
5. Secure the unit so that it faces upward in the vertical position.
6. At this time, the value of 38 Other/X Tilt is read and inputted in the 36 Other/Tilt C1.
7. Secure the unit so that it faces downward in the vertical position.
8. At this time, the value of 38 Other/X Tilt is read and inputted in the 37 Other/Tilt C2.
9. Press the MEMORY key and save the adjustment value.

Note

Perform adjustment under the environment of $25 \pm 5^{\circ}\text{C}$.

2-5. White Balance Adjustment

Preparation before adjustment

1. Input the 100 IRE XGA flat field signal to the INPUT-A connector and allow the warm-up of 10 minutes aging at a minimum.
2. Enter the Service Mode.

Press the keys in the following order.

ENTER → **ENTER** → **↑** → **↓** → **ENTER**.

The message [Do you want to enter the Service Mode? Yes : **↑** No : **↓**] appears.

Select [Yes : **↑**].

[Supplementary information: How to Exit the Service Mode]

Perform the step 2 KEY operation.

The message [Do you want to return to the User Mode?] appears.

Select [Yes : **↑**].

2-5-1. HIGH Mode of INPUT-A

Input the XGA 10 STEP signal to the INPUT-A connector, and see the chromaticity of each tone.

If the chromaticity of each mode deviates, perform the following adjustment.

Before adjusting each mode, confirm that CONTRAST is 80, BRIGHT is 50, GAIN of R.G.B is 152, and BIAS is 127.

Select Computer for the Input-A signal type.

1. Input the 100 IRE XGA flat field signal to the INPUT-A connector.
2. Measure the chromaticity (x, y). Set CONTRAST and BRIGHT to MAX only during this measurement. After the adjustment is completed, set CONTRAST to 80, and BRIGHT to 50.
3. Input the 80 IRE XGA flat field signal to the INPUT-A connector.
4. Adjust the chromaticity (x, y) to the one set in step 2 by GAIN R and GAIN B of the HIGH mode of W/B.
5. Input the 30 IRE XGA flat field signal to the INPUT-A connector.
6. Adjust the chromaticity (x, y) to the one set in step 2 by GAIN R and GAIN B of the HIGH mode of W/B.
7. Repeat steps 3 to 6 above until the chromaticity (x ± 0.002 , y ± 0.003) with reference to the chromaticity that is measured at step 2 is obtained.
8. Press the MEMORY key and save the adjustment value.

2-5-2. LOW Mode of INPUT-A

1. The target chromaticity of the adjustment is (0.327, 0.362).
2. Input the 80 IRE XGA flat field signal to the INPUT-A connector.
3. Adjust the GAIN R and GAIN B in the LOW mode of W/B until the chromaticity (x, y) that is measured at step 1 is obtained.
4. Input the 30 IRE XGA flat field signal to the INPUT-A connector.
5. Adjust the GAIN R and GAIN B in the LOW mode of W/B until the chromaticity (x, y) that is measured at step 1 is obtained.
6. Repeat steps 2 to 5 above until the chromaticity (x ± 0.002 , y ± 0.003) with reference to the chromaticity that is measured at step 1 is obtained.
7. Press the MEMORY key and save the adjustment value.

2-5-3. HIGH Mode of VIDEO

Set Component for the input A signal type.

1. The target chromaticity of the adjustment is (0.293, 0.295).
2. Input the 80 IRE Component flat field signal to the INPUT-A connector.
3. Adjust the GAIN R and GAIN B in the LOW mode of W/B until the chromaticity (x, y) that is measured at step 1 is obtained.
4. Input the 30 IRE Component flat field signal to the INPUT-A connector.
5. Adjust the GAIN R and GAIN B in the HIGH mode of W/B until the chromaticity (x, y) that is measured at step 1 is obtained.
6. Repeat steps 2 to 5 above until the chromaticity (x ± 0.002 , y ± 0.003) with reference to the chromaticity that is measured at step 1 is obtained.
7. Press the MEMORY key and save the adjustment value.

2-5-4. LOW Mode of VIDEO

1. The target chromaticity of the adjustment is (0.300, 0.310).
2. Input the 80 IRE Component flat field signal to the INPUT-A connector.
3. Adjust the GAIN R and GAIN B in the LOW mode of W/B until the chromaticity (x, y) that is measured at step 1 is obtained.
4. Input the 30 IRE Component flat field signal to the INPUT-A connector.
5. Adjust the GAIN R and GAIN B in the HIGH mode of W/B until the chromaticity (x, y) that is measured at step 1 is obtained.
6. Repeat steps 2 to 5 above until the chromaticity (x ± 0.002 , y ± 0.003) with reference to the chromaticity that is measured at step 1 is obtained.
7. Press the MEMORY key and save the adjustment value.

2-6. Automatic Focus (AF) Adjustment

Turn on the cooling fan and the lamp.

Set Tilt to 0, Side shot 0, and Keystone correction MANUAL.


1) Wide end adjustment

Set the zoom position to the wide end, and then set the screen size to 60". (Bring the unit to the front projection.)

1. On "MENU", select "INSTALL SETTING", and set "Test Pattern" to "ON".
2. Adjust the focus to the optimum position while observing the test pattern at the center of the projected image. (If "Test Pattern" is set to "ON" in step 1, a cross-shaped test pattern appears when the Focus key is pressed.)
3. Press the AF adjustment switch (①) in the following figure and hold it for about two seconds. (When the holding action is recognized, the focus starts functioning automatically.)

Note

While holding down the key, ensure that no object that may interrupt the projected image exists in front of the AF module (②), or between the VPL-CX75 and the screen.

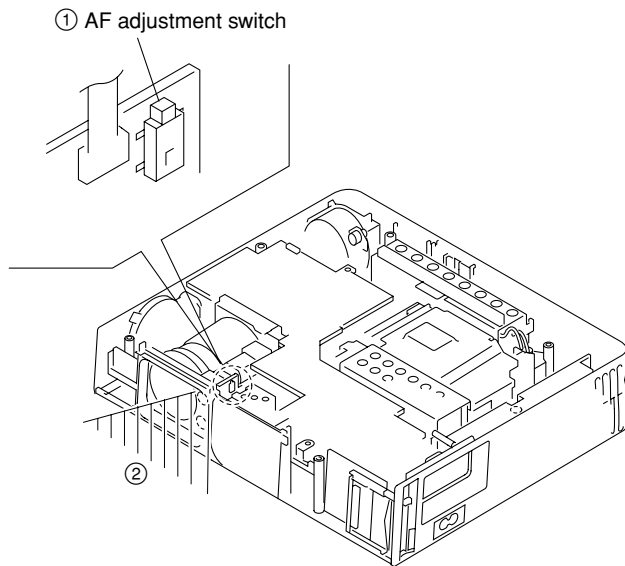

2) Tele end adjustment

After completing the above adjustment, set the zoom position to the tele end at the same position.

Then, repeat the adjustment steps 1 through 3 described above.

3) Check

At both the wide end and the tele end, blur the focus by using the Focus key. Then activate AF, and check that the focus is correctly adjusted.


2-7. Memory Structure

Memory Structure

CPU internal ROM : 512 K byte Flash Memory

CPU internal RAM : 32 K byte

External NVM memory : 8 K byte EEPROM

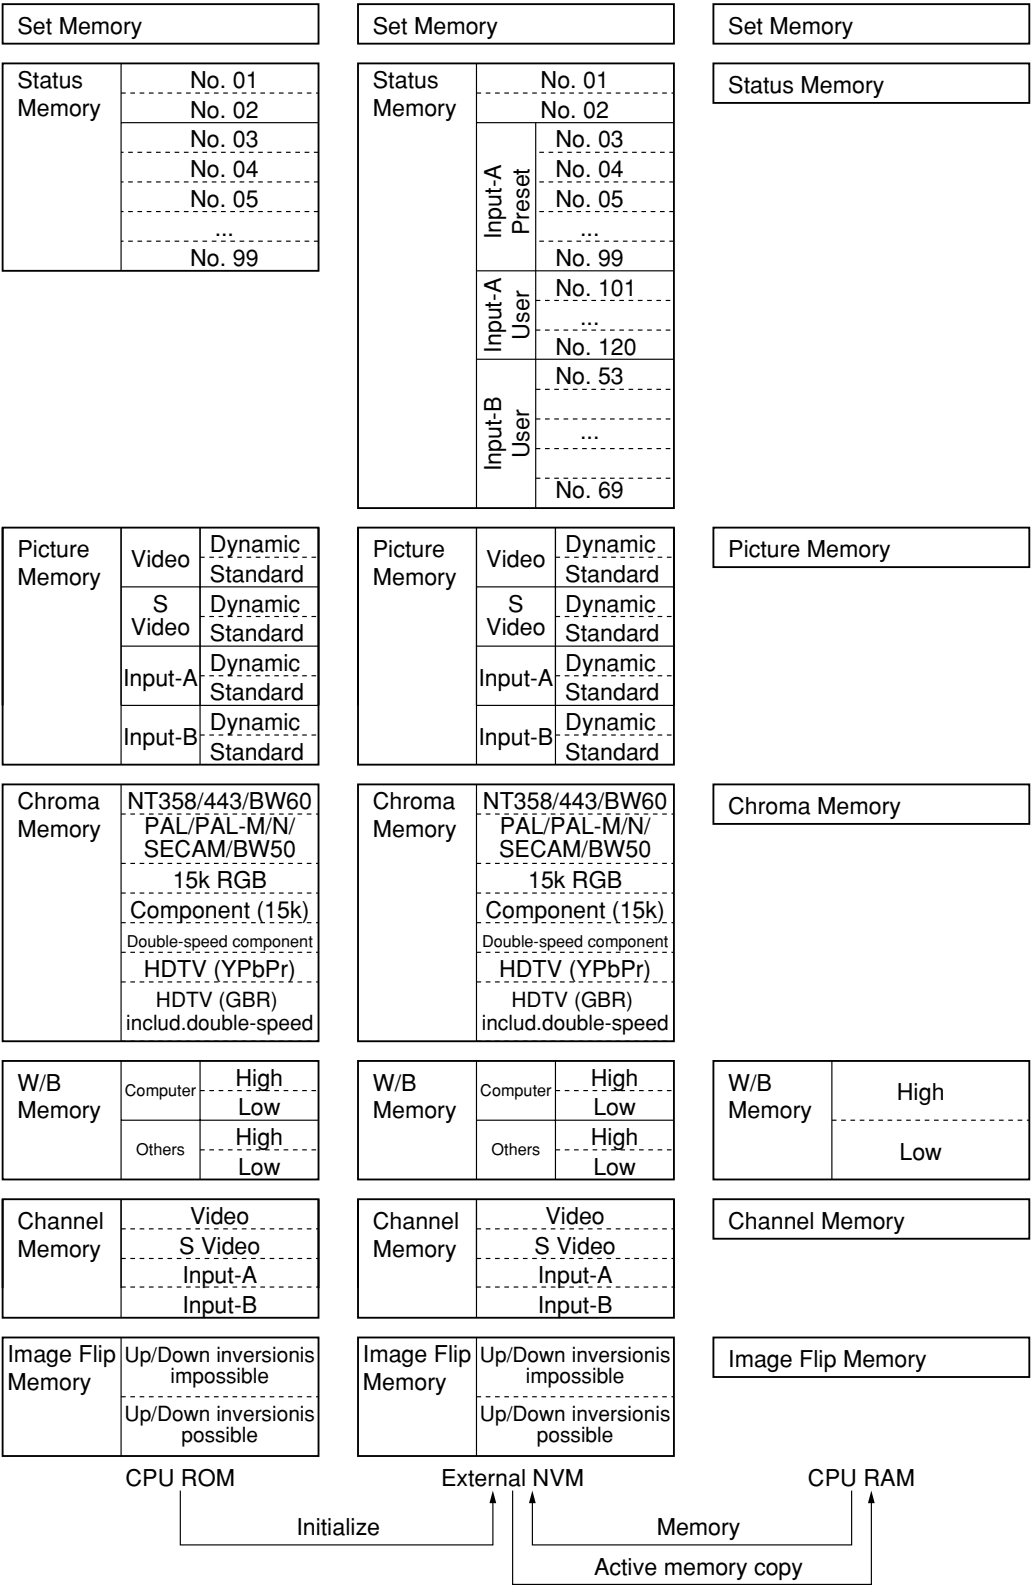

Memory structure consists of the followings.

- 1 Set memory
- 2 Status memory
- 3 Picture memory
- 4 Chroma memory
- 5 W/B memory
- 6 Channel memory
- 7 Image Flip memory

※ The gamma memory is realized by giving offset to Contrast and Brightness output values to the devices in the gamma mode function.

Flow of data is described briefly. When the power plug is connected to the wall outlet for the first time (Standby state), all data that are stored in the internal ROM are written in the NVM(non-volatile memory). When the POWER is turned ON, all the status memory data and other memory data that are required for the present picture are selected from each memory block and expanded in the internal RAM.


When any adjustment is performed at this moment, the adjustment data (user mode items) are written in the NVM (Service/Special Service item) automatically triggered by the memory operation.

The adjustment items (W/B, Device Adjust) that can be adjusted in the Service Mode or in the Special Service Mode, are memorized in the NVM at the time when the user performs adjustment and performs the memory operation. Note that the factory adjustment data will be lost at this moment.


Section 3

Semiconductors


AIC1117A-18PYJTR
AIC1117A-33PYJTR
AIC1117A-50PYJTR

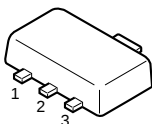


PQ20WZ1UJ00H

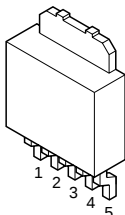


BA09FP-E2




MBM29LV800TA-70PFTN-768PW
MX29LV320ABTC-90G-769MS100

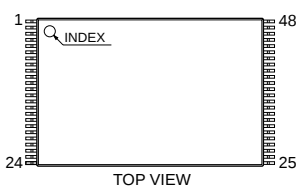


LMC7101BIM5X
S-80942CNMC-G9C-T2
S-80942CNMC-G9CT2G
SN74AHCT1G08DCKR
TK11125CSCL-G

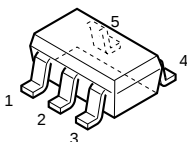


BA00ASFP-E2

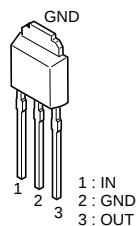


AIC1084-PEJTR




S-80928CNMC-G8YT2G

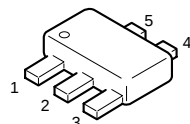


KRM-TR303E-TP

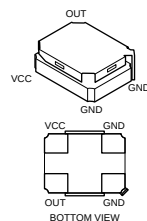


MXS3125GL



BD9781HFP

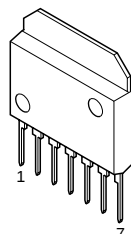


TK11900MTL

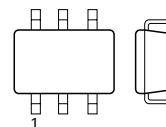


6pin CHIP

TL431CPK-E2




8pin DIP

MB93403-26PB-GE1
MB93493PB-GE1

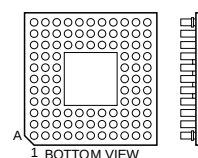


256pin PGA

HD64F2378VFQ34V

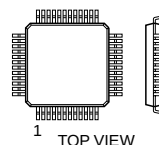


144pin QFP

CXD3536R

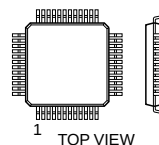


176pin QFP

CXA2171AQ
CXA2171AQ-T6
CXA7005R-T4

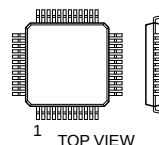


48pin QFP

74VHC02MTCX
MIC2562A-OBMTR
SN74LV00APWR
SN75240PWR
TC74LCX125FT(EL)

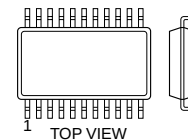


14pin SOP

AK4352VT-E2
BA6288FS-E2
CXA1875AM
CXA1875AM-T4
CY27027ZCT
CY27027ZZCT
MC74HC4052ADTR2
SN74LV4052APWR
TC74HC4052AFT(EL)
TC74VHCT138AFT(EL)
TPA2001D1PWR

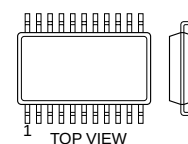


16pin SOP

M52347FP-TE
SN-USBRCV1
SN74AHCT541PWR
SN74LV244APWR
TC74VHCT540AFT(EL)
TDA7309D013TR

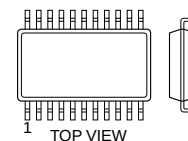


20pin SOP

MCZ3001UB

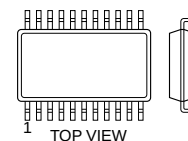


24pin SOP

HY57V281620HCT-H-TR

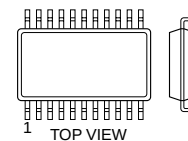


54pin SOP

PW2200B-20L

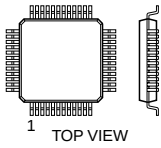


208pin QFP

TC7SA04FU(TE85R)

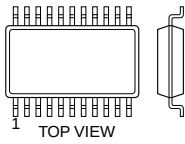


5pin SOP

LTC1772CS6
SN74LVC2G04DCKR

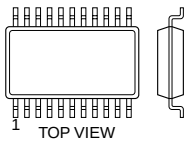


6pin SOP

24LC21AT/SN
BA10358FV-E2
BA6287F-E2
CY25033SZC-1T
HN58X24256FPIZ
M24C64-WMN6T(B)
MC33262DR2
MM1096AFF
SI4403DY-T1
ST24FC21M6TR
TC7WH04FK(TE85R)
TC7WH125FK(TE85R)
TC7WH34FU(TE12R)
UPC393G2
UPC393G2-E2
IRMF-A0T-QTP

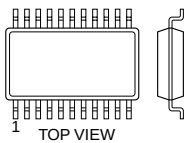


8pin SOP


2SA1213Y-TE12L

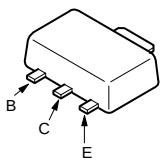


2SA1162-G
2SA1162-YG-TE85L
2SA1576A-T106-QR
2SC2712-YG
2SC2712-YG-TE85L
2SC4081-R
2SC4081T106R
DTA114EUA-T106
DTC144EUA-T106




DTC114EU
DTC114EUA-T106

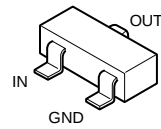


2SJ463A-T1




SPW20N60S5




XP4501-TXE

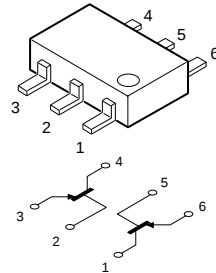


HN1B01FU-TE85R
HN1C01FU-TE85R

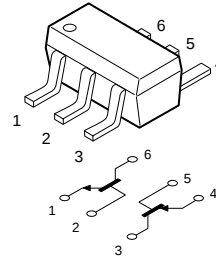


2SK2876-01MR-F122




SI4425DY-T1

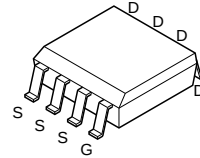


SSM6N15FU(TE85R)

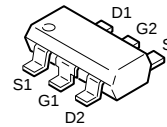


DAN202U
DAN202UT106




RM11A
RM11C(RECTI)

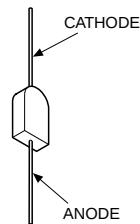


D10XB80

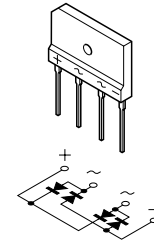


RD3.9SB
RD3.9SB-T1
UF4005PKG23

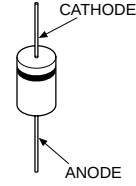


MA3J14700LSO

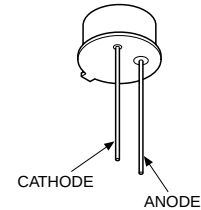


SF10L60U




RD18M-B1
RD18M-T1B1

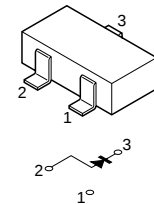


DAP202U
DAP202UT106

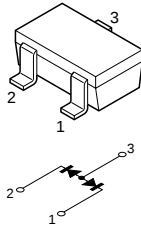


D1FS4A-TA
RB501V-40TE-17
RB501V-40TE17

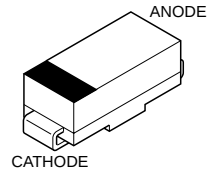


D10SC4M
D10SC6M
D10SC6M(RECTI)




RD3.9UM-T1B

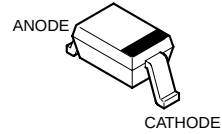


SEC1801C
SEC1901C
SEC2422C

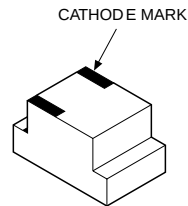


1SS355TE-17
EC31QS03L-TE12L
MA111-(K8).S0
MA111-TX
RD3.3SB
RD3.3SB-T1
RD30SB-T1
RD39SB-T1
RD5.6SB-T1
RD9.1SB2
RD9.1SB2-T1

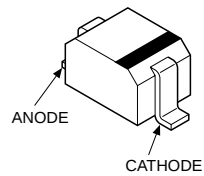


NSCW215T



SECU4901C-S



HN1D03FU-TE85L
HN1D03FU-TE85R

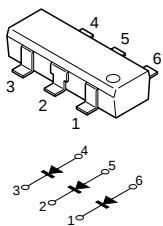

Section 4

Spare Parts

4-1. Notes on Repair Parts

1. Safety Related Components Warning

WARNING

Components marked $\triangle$ are critical to safe operation.
Therefore, specified parts should be used in the case of replacement.

WARNHINWEIS

Les composants identifiés par la marque $\triangle$ sont critiques pour la sécurité.
Ne les remplacer que par une pièce portant le numéro spécifié.

2. Standardization of Parts

Some repair parts supplied by Sony differ from those used for the unit. These are because of parts commonality and improvement.
Parts List has the present standardized repair parts.

3. Stock of Parts

Parts marked with “o” at SP (Supply Code) column of the Spare Parts list may not be stocked. Therefore, the delivery date will be delayed.
Items with no part number and no description are not stocked because they are seldom required for routine service.

4. Units for Capacitors, Inductors and Resistors


The following units are assumed in Schematic Diagrams, Electrical Parts List and Exploded Views unless otherwise specified.

Capacitors : μF


Inductors : μH

Resistors : Ω

4-2. Exploded Views

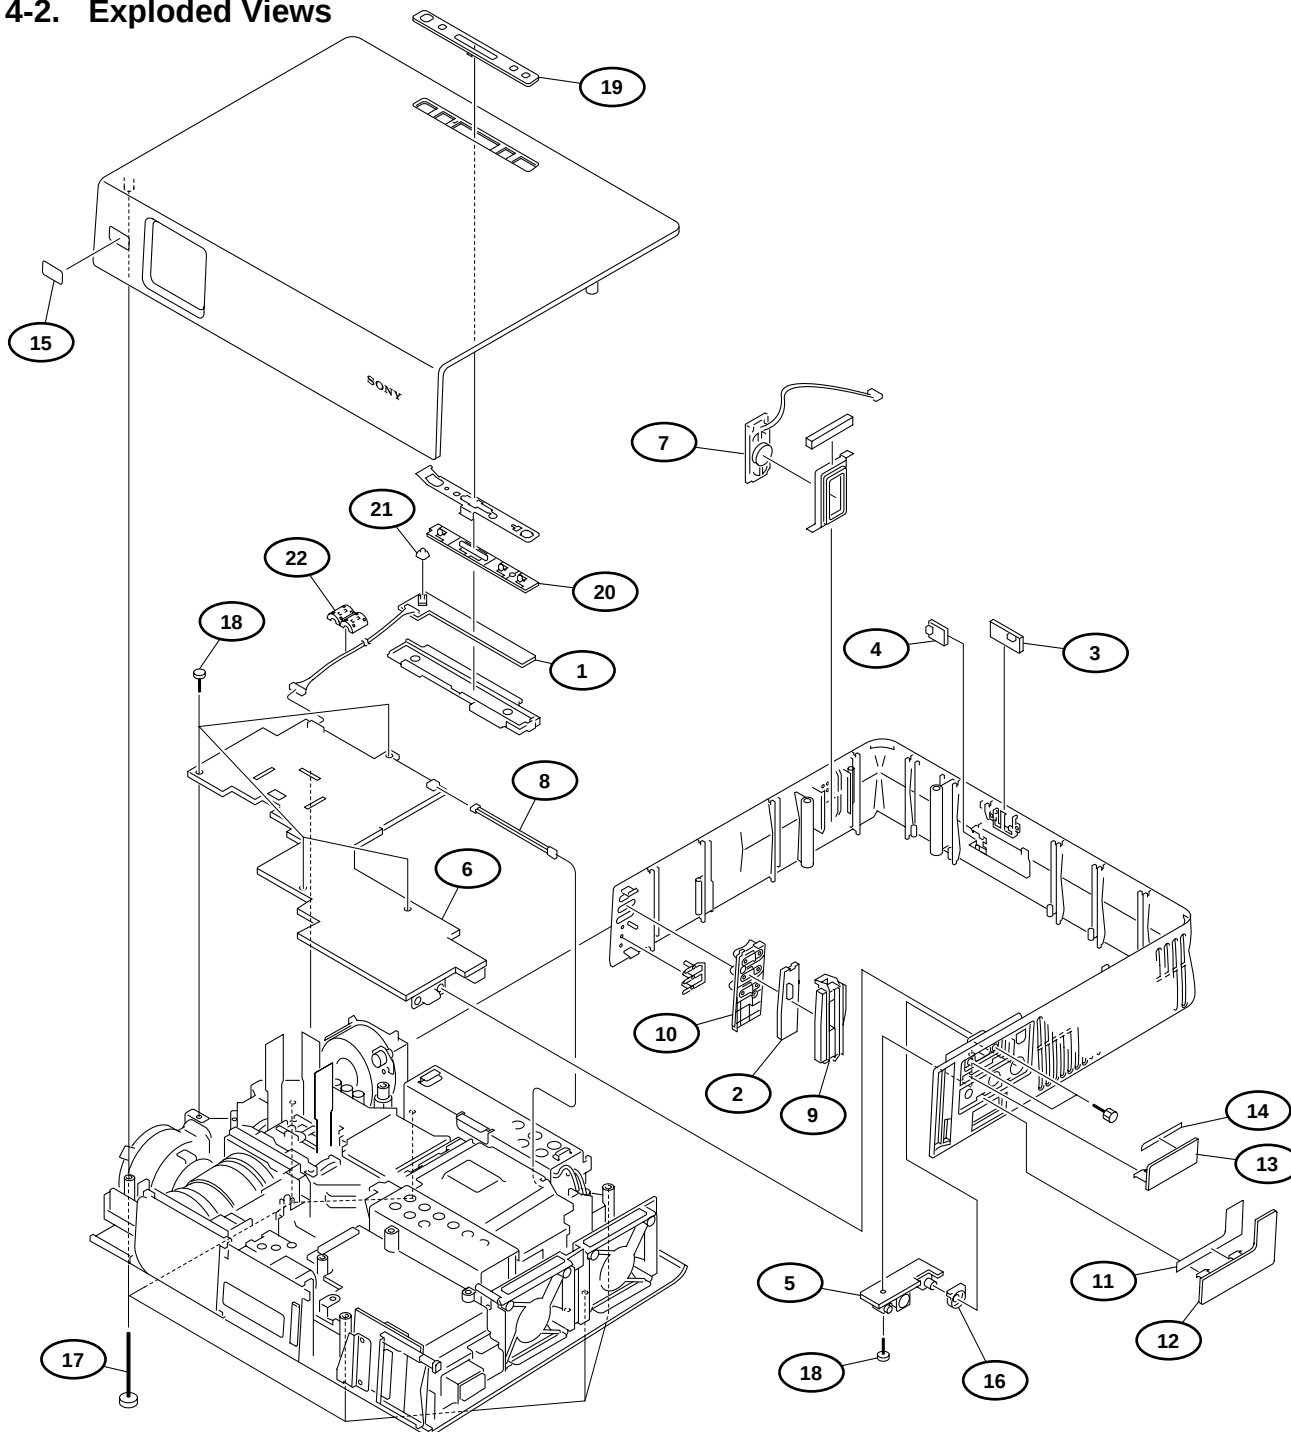


No.	Part No.	SP	Description	No.	Part No.	SP	Description
1	A-1054-257-A	s	MOUNTED CIRCUIT BOARD, HA	10	2-149-306-01	s	BUTTON (HB)
2	A-1054-258-A	s	MOUNTED CIRCUIT BOARD, HB	11	2-149-538-01	s	MAGNET (V)
3	A-1054-261-A	s	MOUNTED CIRCUIT BOARD, NR	12	2-149-539-01	s	COVER (V), CONNECTOR
4	A-1054-262-A	s	MOUNTED CIRCUIT BOARD, L	13	2-149-541-01	s	COVER (DS), CONNECTOR
5	A-1054-267-A	s	MOUNTED CIRCUIT BOARD, QA	14	2-149-542-01	s	PLATE (DS)
6	A-1072-146-A	s	MOUNTED CIRCUIT BOARD, C (VPL-CX70)	15	2-177-129-01	s	EMBLEM (VPL-CX70)
	A-1054-271-A	s	MOUNTED CIRCUIT BOARD, C (VPL-CX75)		2-149-543-01	s	EMBLEM (VPL-CX75)
7	A-1603-156-B	s	SPEAKER ASSY	16	4-074-246-02	o	SLEEVE, VIDEO
8	1-910-002-99	s	CONNECTOR ASSY, FUSE	17	4-090-087-02	s	SHAFT
9	2-149-305-01	s	HOLDER (HB)	18	4-382-854-01	s	SCREW +PSW M3X8 (EP-FE/ZN/CM2)
				19	4-103-402-01	s	BRACKET (H1)
				20	4-103-394-02	s	KEY (H1A)
				21	4-103-395-01	s	KEY (H1B)
				22	1-500-082-11	s	CLAMP, SLEEVE FERRITE

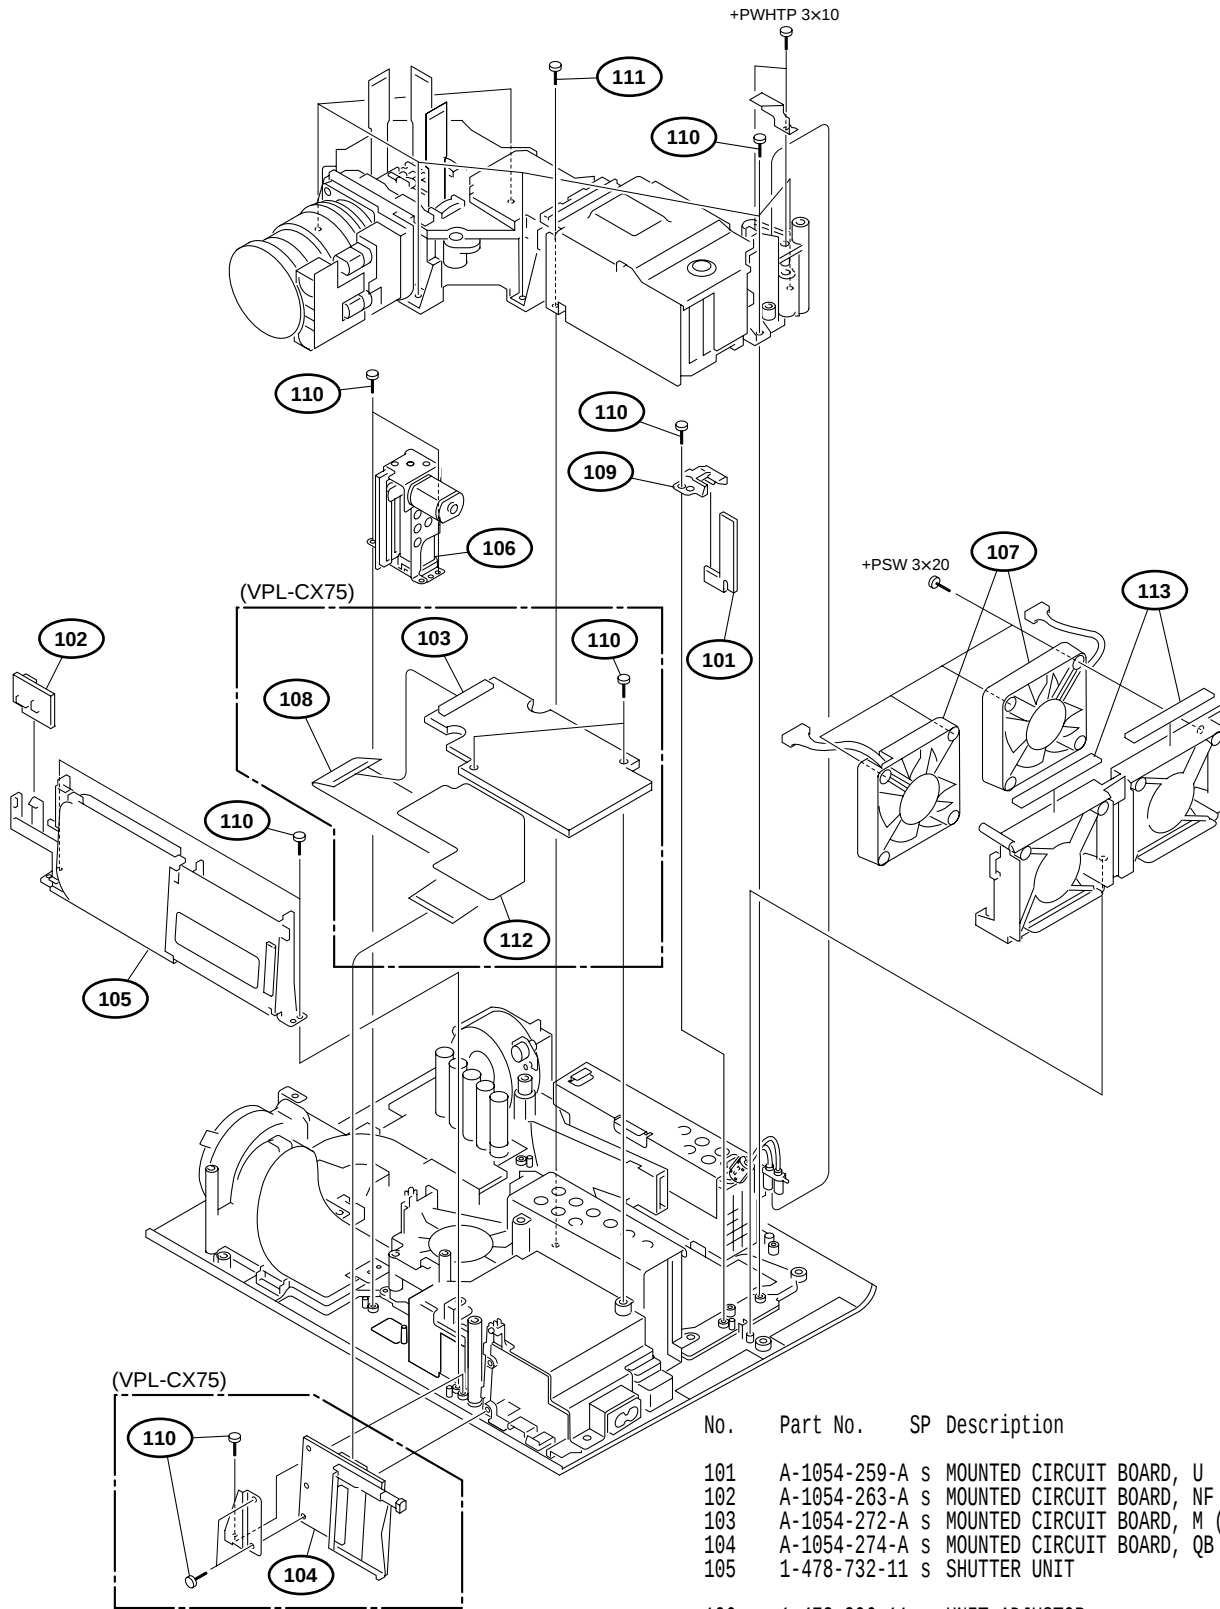

No.	Part No.	SP	Description
101	A-1054-259-A	s	MOUNTED CIRCUIT BOARD, U
102	A-1054-263-A	s	MOUNTED CIRCUIT BOARD, NF
103	A-1054-272-A	s	MOUNTED CIRCUIT BOARD, M (VPL-CX75)
104	A-1054-274-A	s	MOUNTED CIRCUIT BOARD, QB (VPL-CX75)
105	1-478-732-11	s	SHUTTER UNIT
106	1-478-806-11	s	UNIT ADJUSTOR
107	△ 1-787-093-12	s	DC FAN
108	1-910-002-95	s	CONNECTOR ASSY, FLAT 68P (VPL-CX75)
109	2-149-299-01	s	HOLDER (U)
110	4-382-854-01	s	SCREW +PSW M3X8 (EP-FE/ZN/CM2)
111	3-669-145-01	s	SCREW +PW 3X5
112	2-178-249-01	s	SHEET (FK)
113	2-149-558-01	s	CUSHION (FAN)

Screws/Washers


7-682-953-09	s	SCREW +PSW 3X20
7-685-903-31	s	SCREW +PWHTP 3X10 (EP-FE/ZNBK/C)

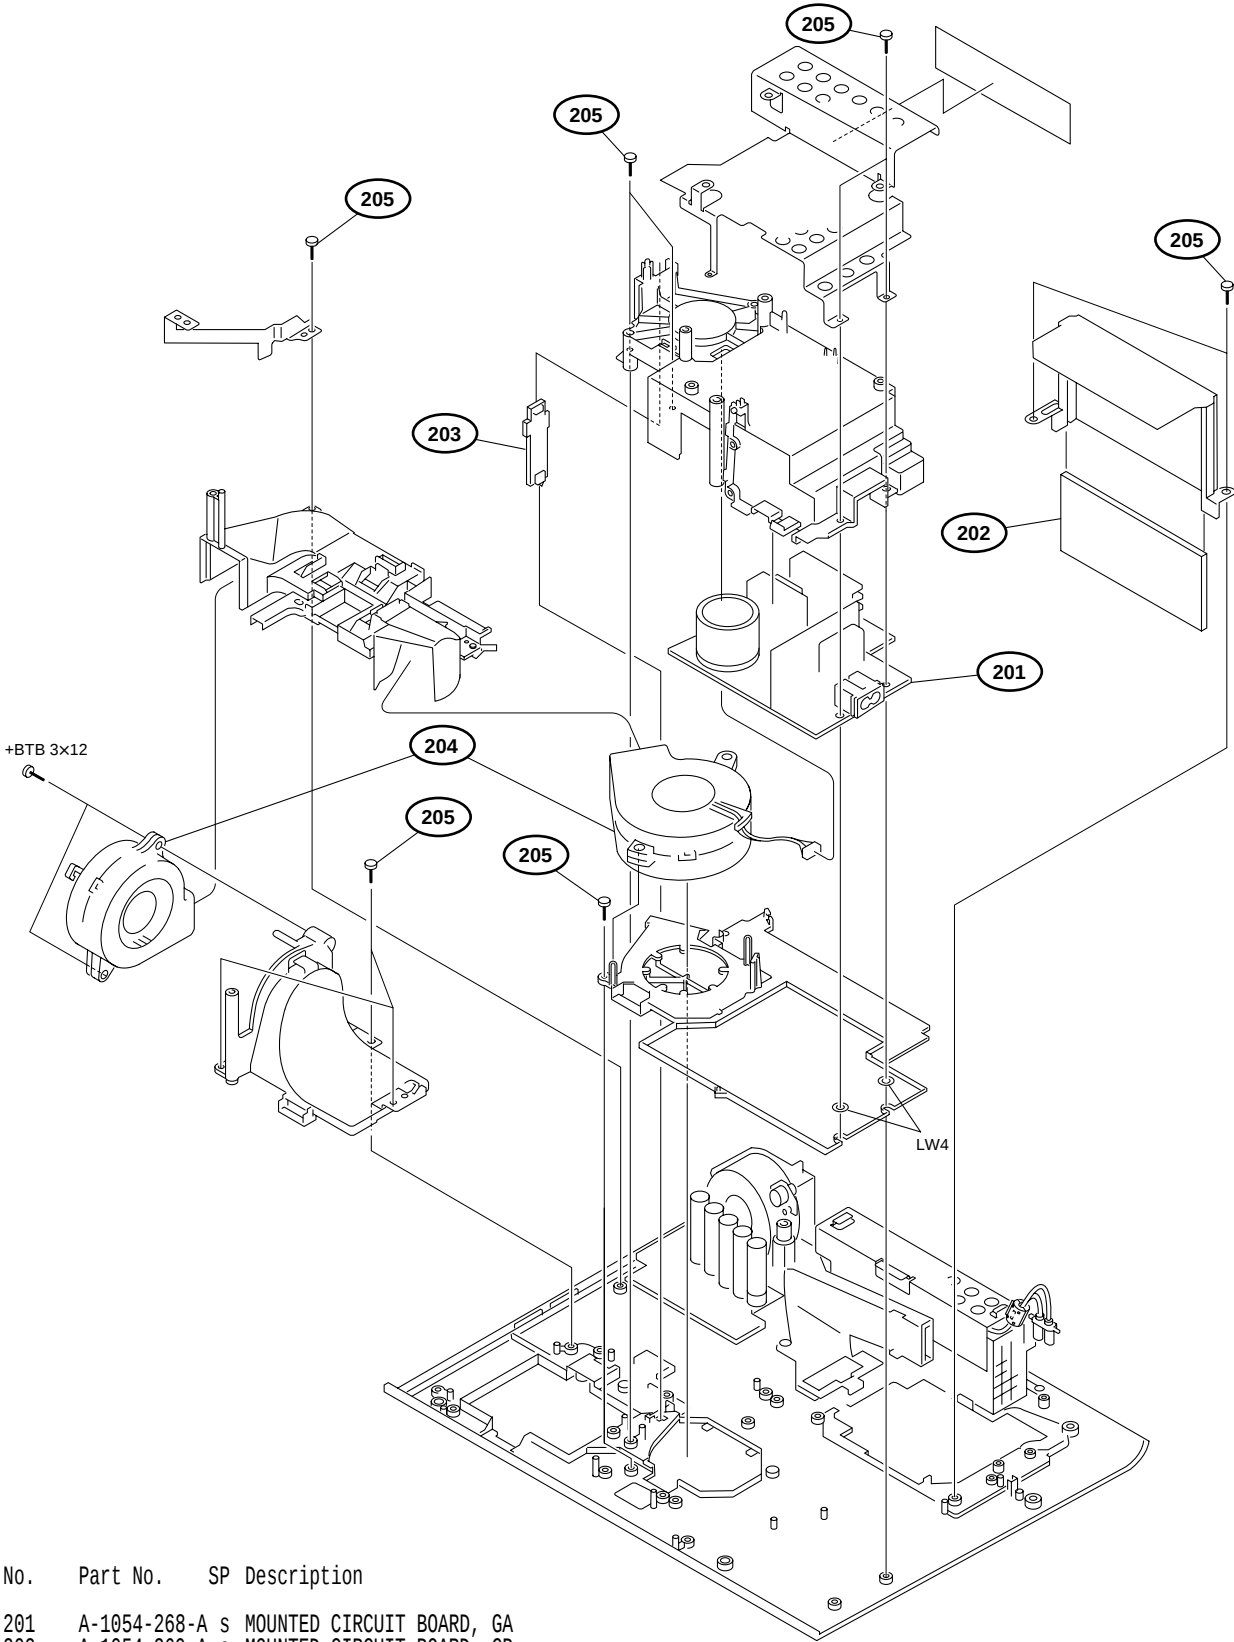

No.	Part No.	SP	Description
201	A-1054-268-A	s	MOUNTED CIRCUIT BOARD, GA
202	A-1054-269-A	s	MOUNTED CIRCUIT BOARD, GB
203	A-1054-357-A	s	MOUNTED CIRCUIT BOARD, V
204	△ 1-787-149-11	s	D.C. FAN (SIROCCO)
205	4-382-854-01	s	SCREW +PSW M3X8 (EP-FE/ZN/CM2)

Screws/Washers

- 7-685-548-19 s SCREW +BTB 3X12 (EP-FE/ZNBK/CM)
- 7-623-310-07 o LW4, TYPE A

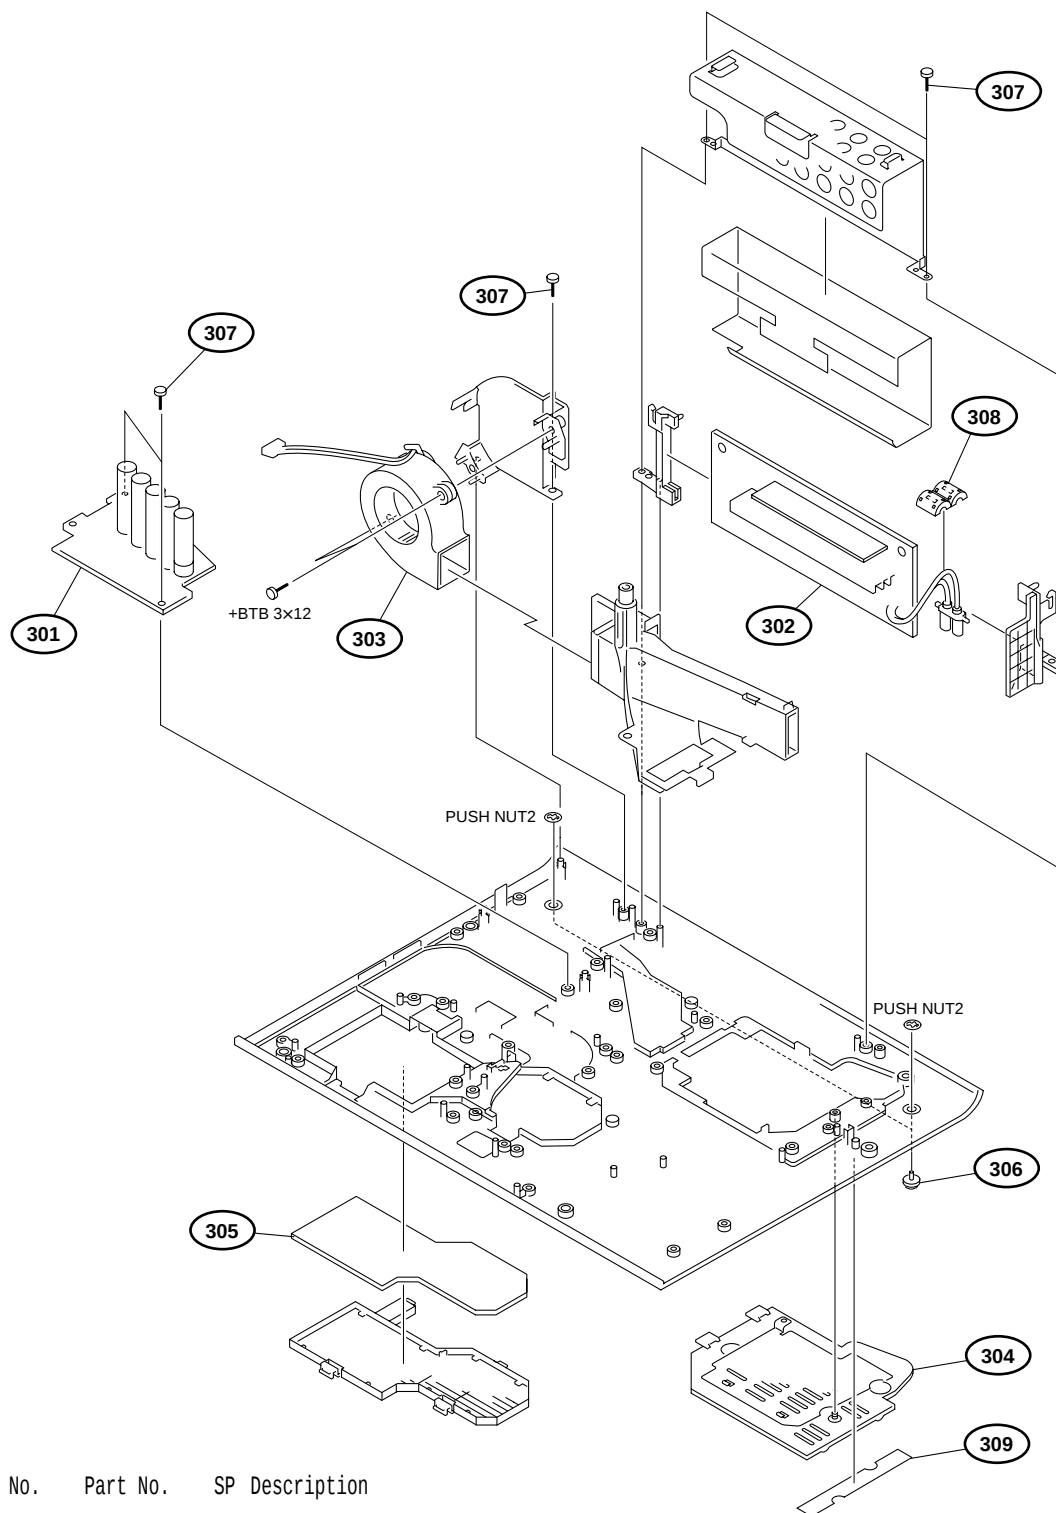


No.	Part No.	SP	Description
301	A-1054-270-A	s	MOUNTED CIRCUIT BOARD, GC
302	△ 1-478-738-11	s	POWER SUPPLY BLOCK
303	△ 1-787-149-11	s	D.C. FAN (SIROCCO)
304	△ 2-149-303-01	s	DOOR, LAMP
305	2-149-553-01	s	FILTER (CH)
306	4-096-057-01	s	FOOT REAR, ADJ
307	4-382-854-01	s	SCREW, +PSW M3X8 (EP-FE/ZN/CM2)
308	1-500-082-11	s	CLAMP, SLEEVE FERRITE
309	2-149-557-02	s	SHEET (FAN)

Screws/Washers

7-624-200-11	s	NUT, PUSH 2
7-685-548-19	s	SCREW +BTB 3X12 (EP-FE/ZNBK/CM)


Optics-1

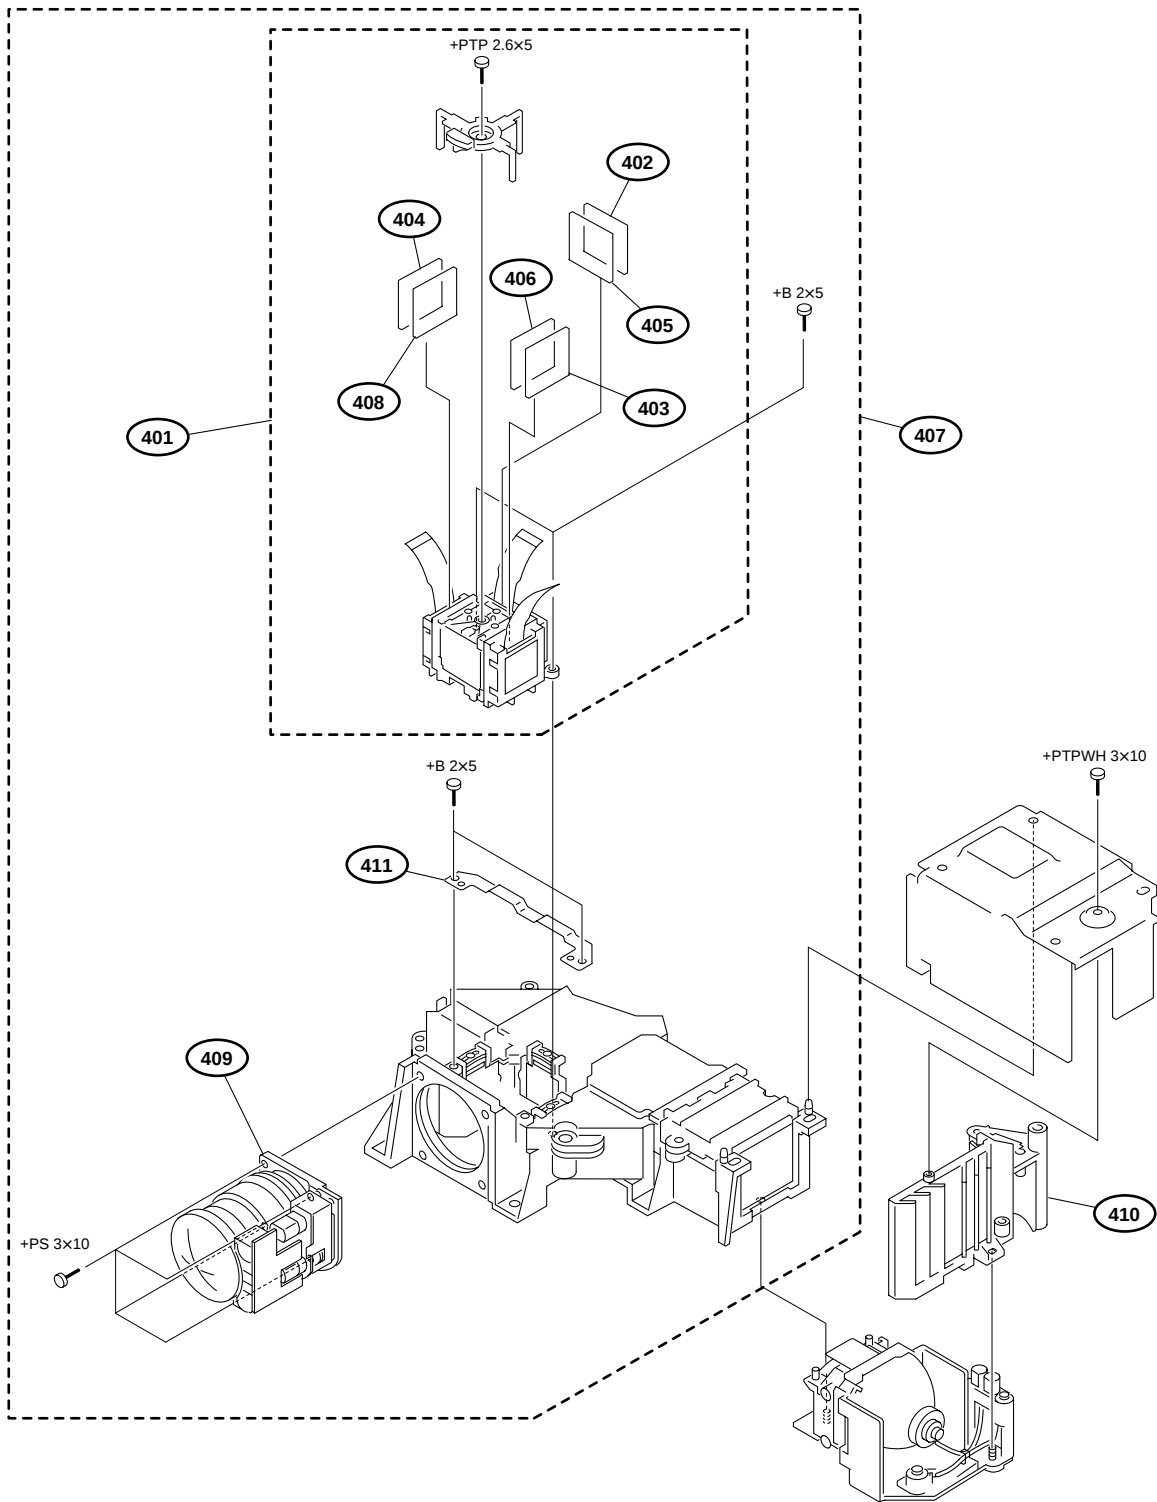

No.	Part No.	SP Description	No.	Part No.	SP Description
401	A-1076-809-A	S PRISM BLOCK ASSY (VPL-CX70)	406	A-1076-813-A	S OUT-PRE-POLARIZER (B) ASSY (VPL-CX70)
	A-1054-755-A	S PRISM BLOCK ASSY (VPL-CX75)		A-1054-766-A	S S PANEL (B) ASSY, POLARIZATION (VPL-CX75)
402	A-1076-810-A	S OUT-PRE-POLARIZER (G) ASSY (VPL-CX70)	407	A-1076-808-A	S OPT UNIT ASSY (VPL-CX70)
	A-1054-762-A	S S PANEL (G) ASSY, POLARIZATION (VPL-CX75)		A-1076-805-A	S OPT UNIT ASSY (VPL-CX75)
403	A-1076-812-A	S OUT-PRE-POLARIZER(B) ASSY (VPL-CX70)	408	A-1054-764-A	S S PANEL (R) ASSY, POLARIZATION
	A-1054-763-A	S S PANEL (B) ASSY, POLARIZATION (VPL-CX75)	409	A-1076-806-A	S LENS ASSY
404	A-1054-761-A	S S PANEL (R) ASSY, POLARIZATION	410	2-149-574-03	S SHIELD, LAMP
405	A-1076-811-A	S OUT-PRE-POLARIZER (G) ASSY (VPL-CX70)	411	4-103-519-01	S HOLDER, PRISM BLOCK
	A-1054-765-A	S S PANEL (G) ASSY, POLARIZATION (VPL-CX75)			

Screws/Washers

7-621-771-06	S	SCREW +B 2X5
7-682-649-09	S	SCREW +PS 3X10 (EP-FE/ZNBK/CM2)
7-685-132-19	S	SCREW +PTP 2.6X5
7-685-903-31	S	SCREW +PTPWH 3X10 (EP-FE/ZNBK/C)

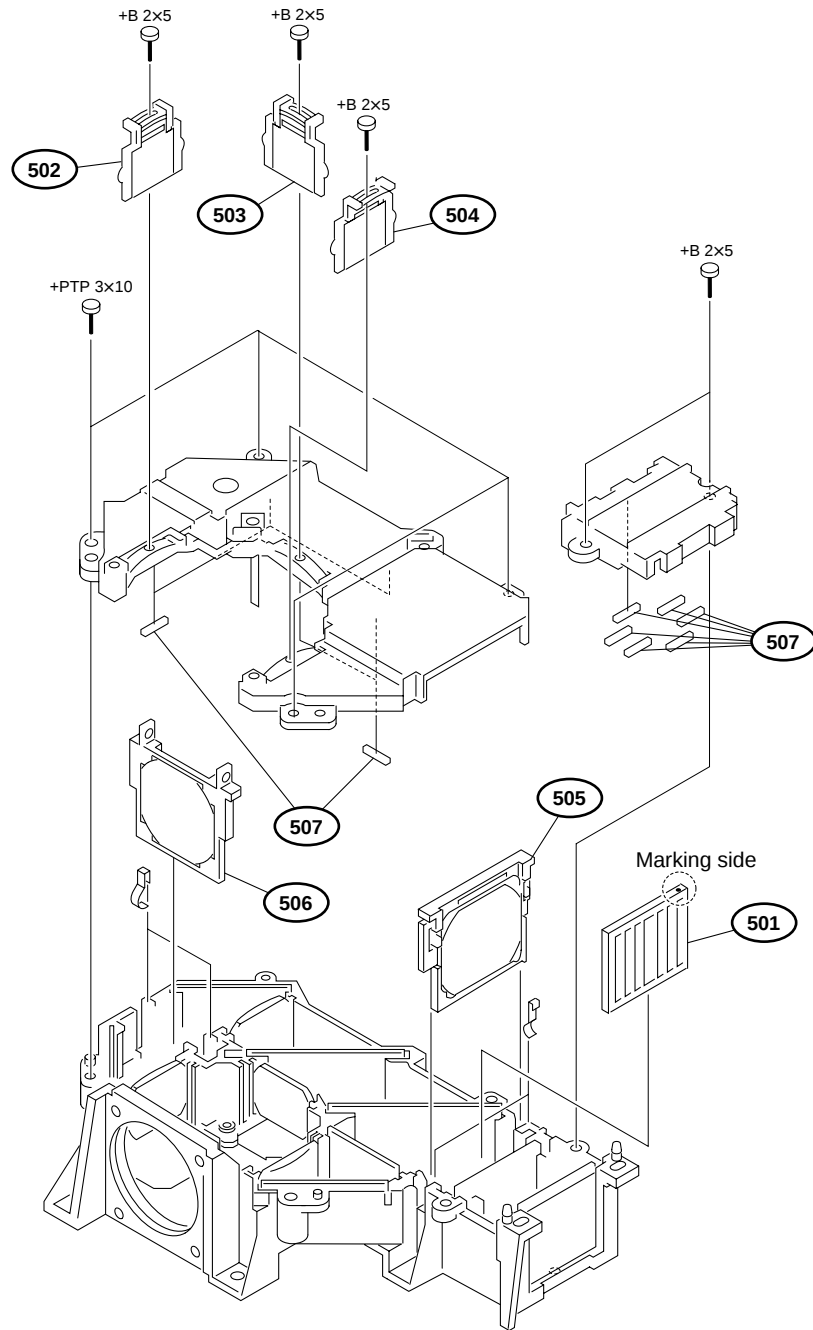

No.	Part No.	SP	Description
501	A-1054-757-A	s	PS ASSY
502	A-1054-758-A	s	S PANEL (R) ASSY, POLARIZATION
503	A-1054-759-A	s	S PANEL (G) ASSY, POLARIZATION
504	A-1054-760-A	s	S PANEL (B) ASSY, POLARIZATION
505	A-1076-121-A	s	MAIN CON ASSY (SVC)
506	A-1076-122-A	s	2ND RELAY ASSY (SVC)
507	4-099-077-01	s	CUSHION (S)

Screws/Washers

7-621-771-06	s	SCREW +B 2X5
7-685-147-21	s	SCREW +PTP 3X10 (EP-FE/ZNBK/CM2)

4-3. Electrical Parts List

C BOARD (FOR VPL-CX70)

Ref. No. or Q'ty	Part No.	SP Description
1pc	A-1072-146-A	s MOUNTED CIRCUIT BOARD, C
1pc	2-187-695-01	s GASKET (USB)
C100	1-115-339-11	s CAPACITOR, CERAMIC 0.1MF/50V
C101	1-128-992-11	s CAPACITOR ELECT 47MF 25V
C102	1-115-339-11	s CAPACITOR, CERAMIC 0.1MF/50V
C103	1-128-992-11	s CAPACITOR ELECT 47MF 25V
C104	1-125-777-11	s CAPACITOR CERAMIC 0.1MF/10V
C105	1-126-205-11	s CAPACITOR, ELECT 47M/6.3
C108	1-125-777-11	s CAPACITOR CERAMIC 0.1MF/10V
C109	1-126-205-11	s CAPACITOR, ELECT 47M/6.3
C110	1-164-874-11	s CAPACITOR, CHIP CERAMIC 100PF
C111	1-125-777-11	s CAPACITOR CERAMIC 0.1MF/10V
C112	1-164-874-11	s CAPACITOR, CHIP CERAMIC 100PF
C113	1-125-777-11	s CAPACITOR CERAMIC 0.1MF/10V
C114	1-126-205-11	s CAPACITOR, ELECT 47M/6.3
C116	1-128-992-11	s CAPACITOR ELECT 47MF 25V
C117	1-125-777-11	s CAPACITOR CERAMIC 0.1MF/10V
C118	1-125-777-11	s CAPACITOR CERAMIC 0.1MF/10V
C119	1-165-989-11	s CAPACITOR, CERAMIC 10MF (2012)
C120	1-131-998-11	s CAP, SOLID ELECT 82MF 6.3 V
C122	1-125-777-11	s CAPACITOR CERAMIC 0.1MF/10V
C123	1-125-777-11	s CAPACITOR CERAMIC 0.1MF/10V
C200	1-125-777-11	s CAPACITOR CERAMIC 0.1MF/10V
C201	1-125-777-11	s CAPACITOR CERAMIC 0.1MF/10V
C202	1-125-777-11	s CAPACITOR CERAMIC 0.1MF/10V
C203	1-125-777-11	s CAPACITOR CERAMIC 0.1MF/10V
C204	1-125-777-11	s CAPACITOR CERAMIC 0.1MF/10V
C205	1-125-777-11	s CAPACITOR CERAMIC 0.1MF/10V
C206	1-125-777-11	s CAPACITOR CERAMIC 0.1MF/10V
C207	1-125-777-11	s CAPACITOR CERAMIC 0.1MF/10V
C208	1-125-777-11	s CAPACITOR CERAMIC 0.1MF/10V
C209	1-125-777-11	s CAPACITOR CERAMIC 0.1MF/10V
C210	1-164-943-11	s CAPACITOR, CHIP CERAMIC 0.01MF
C213	1-125-777-11	s CAPACITOR CERAMIC 0.1MF/10V
C214	1-165-989-11	s CAPACITOR, CERAMIC 10MF (2012)
C215	1-125-777-11	s CAPACITOR CERAMIC 0.1MF/10V
C216	1-125-777-11	s CAPACITOR CERAMIC 0.1MF/10V
C217	1-125-777-11	s CAPACITOR CERAMIC 0.1MF/10V
C218	1-125-777-11	s CAPACITOR CERAMIC 0.1MF/10V
C221	1-125-777-11	s CAPACITOR CERAMIC 0.1MF/10V
C222	1-125-777-11	s CAPACITOR CERAMIC 0.1MF/10V
C225	1-125-777-11	s CAPACITOR CERAMIC 0.1MF/10V
C226	1-125-777-11	s CAPACITOR CERAMIC 0.1MF/10V
C227	1-125-777-11	s CAPACITOR CERAMIC 0.1MF/10V
C228	1-125-777-11	s CAPACITOR CERAMIC 0.1MF/10V
C229	1-164-850-11	s CAPACITOR, CHIP CERAMIC 10PF/50
C230	1-125-777-11	s CAPACITOR CERAMIC 0.1MF/10V
C231	1-164-850-11	s CAPACITOR, CHIP CERAMIC 10PF/50
C232	1-164-943-11	s CAPACITOR, CHIP CERAMIC 0.01MF
C233	1-125-777-11	s CAPACITOR CERAMIC 0.1MF/10V
C236	1-125-777-11	s CAPACITOR CERAMIC 0.1MF/10V
C239	1-125-777-11	s CAPACITOR CERAMIC 0.1MF/10V
C246	1-125-777-11	s CAPACITOR CERAMIC 0.1MF/10V
C256	1-125-777-11	s CAPACITOR CERAMIC 0.1MF/10V
C258	1-125-777-11	s CAPACITOR CERAMIC 0.1MF/10V
C301	1-125-777-11	s CAPACITOR CERAMIC 0.1MF/10V
C302	1-115-339-11	s CAPACITOR, CERAMIC 0.1MF/50V
C303	1-125-777-11	s CAPACITOR CERAMIC 0.1MF/10V

(C BOARD (FOR VPL-CX70))

Ref. No. or Q'ty	Part No.	SP Description
C304	1-128-992-11	s CAPACITOR ELECT 47MF 25V
C305	1-115-339-11	s CAPACITOR, CERAMIC 0.1MF/50V
C306	1-115-339-11	s CAPACITOR, CERAMIC 0.1MF/50V
C307	1-128-992-11	s CAPACITOR ELECT 47MF 25V
C308	1-115-339-11	s CAPACITOR, CERAMIC 0.1MF/50V
C309	1-125-777-11	s CAPACITOR CERAMIC 0.1MF/10V
C310	1-125-777-11	s CAPACITOR CERAMIC 0.1MF/10V
C311	1-125-777-11	s CAPACITOR CERAMIC 0.1MF/10V
C312	1-125-777-11	s CAPACITOR CERAMIC 0.1MF/10V
C313	1-125-777-11	s CAPACITOR CERAMIC 0.1MF/10V
C314	1-115-339-11	s CAPACITOR, CERAMIC 0.1MF/50V
C315	1-125-777-11	s CAPACITOR CERAMIC 0.1MF/10V
C316	1-115-339-11	s CAPACITOR, CERAMIC 0.1MF/50V
C317	1-115-339-11	s CAPACITOR, CERAMIC 0.1MF/50V
C318	1-125-777-11	s CAPACITOR CERAMIC 0.1MF/10V
C319	1-125-777-11	s CAPACITOR CERAMIC 0.1MF/10V
C320	1-125-777-11	s CAPACITOR CERAMIC 0.1MF/10V
C321	1-125-777-11	s CAPACITOR CERAMIC 0.1MF/10V
C322	1-125-777-11	s CAPACITOR CERAMIC 0.1MF/10V
C400	1-115-339-11	s CAPACITOR, CERAMIC 0.1MF/50V
C401	1-125-777-11	s CAPACITOR CERAMIC 0.1MF/10V
C402	1-125-777-11	s CAPACITOR CERAMIC 0.1MF/10V
C403	1-128-992-11	s CAPACITOR ELECT 47MF 25V
C404	1-125-777-11	s CAPACITOR CERAMIC 0.1MF/10V
C405	1-125-777-11	s CAPACITOR CERAMIC 0.1MF/10V
C406	1-125-777-11	s CAPACITOR CERAMIC 0.1MF/10V
C407	1-125-777-11	s CAPACITOR CERAMIC 0.1MF/10V
C408	1-125-777-11	s CAPACITOR CERAMIC 0.1MF/10V
C409	1-165-989-11	s CAPACITOR, CERAMIC 10MF (2012)
C410	1-125-777-11	s CAPACITOR CERAMIC 0.1MF/10V
C411	1-165-989-11	s CAPACITOR, CERAMIC 10MF (2012)
C412	1-164-882-11	s CAPACITOR, CERAMIC 220PF/16V CH
C413	1-165-908-11	s CAP, CERAMIC 1000000PF B 1608
C500	1-164-943-11	s CAPACITOR, CHIP CERAMIC 0.01MF
C501	1-164-943-11	s CAPACITOR, CHIP CERAMIC 0.01MF
C502	1-164-943-11	s CAPACITOR, CHIP CERAMIC 0.01MF
C503	1-117-720-11	s CAPACITOR, CERAMIC 4.7MF/10V F
C504	1-119-667-11	s CAPACITOR CERAMIC 22MF/10V(F)
C505	1-126-205-11	s CAPACITOR, ELECT 47M/6.3
C506	1-126-205-11	s CAPACITOR, ELECT 47M/6.3
C507	1-126-205-11	s CAPACITOR, ELECT 47M/6.3
C508	1-125-777-11	s CAPACITOR CERAMIC 0.1MF/10V
C509	1-125-777-11	s CAPACITOR CERAMIC 0.1MF/10V
C600	1-125-777-11	s CAPACITOR CERAMIC 0.1MF/10V
C601	1-126-205-11	s CAPACITOR, ELECT 47M/6.3
C602	1-117-720-11	s CAPACITOR, CERAMIC 4.7MF/10V F
C603	1-117-720-11	s CAPACITOR, CERAMIC 4.7MF/10V F
C604	1-125-777-11	s CAPACITOR CERAMIC 0.1MF/10V
C605	1-125-777-11	s CAPACITOR CERAMIC 0.1MF/10V
C606	1-125-777-11	s CAPACITOR CERAMIC 0.1MF/10V
C607	1-125-777-11	s CAPACITOR CERAMIC 0.1MF/10V
C608	1-125-777-11	s CAPACITOR CERAMIC 0.1MF/10V
C609	1-117-720-11	s CAPACITOR, CERAMIC 4.7MF/10V F
C610	1-164-937-11	s CAPACITOR, CHIP CERAMIC 1000PF
C611	1-126-205-11	s CAPACITOR, ELECT 47M/6.3
C612	1-125-891-11	s CAPACITOR CERAMIC 0.47MF/10V
C613	1-125-777-11	s CAPACITOR CERAMIC 0.1MF/10V
C614	1-137-987-81	s CAPACITOR, C. CERAMIC 0.068MF
C615	1-117-720-11	s CAPACITOR, CERAMIC 4.7MF/10V F

(C BOARD (FOR VPL-CX70))

Ref. No. or Q'ty	Part No.	SP	Description
C616	1-117-720-11	s	CAPACITOR, CERAMIC 4.7MF/10V F
C617	1-165-989-11	s	CAPACITOR, CERAMIC 10MF (2012)
C618	1-125-777-11	s	CAPACITOR CERAMIC 0.1MF/10V
C619	1-115-467-11	s	CAPACITOR CERAMIC 0.22MF/10V B
C620	1-165-989-11	s	CAPACITOR, CERAMIC 10MF (2012)
C621	1-165-989-11	s	CAPACITOR, CERAMIC 10MF (2012)
C622	1-164-943-11	s	CAPACITOR,CHIP CERAMIC 0.01MF
C623	1-125-777-11	s	CAPACITOR CERAMIC 0.1MF/10V
C624	1-164-874-11	s	CAPACITOR,CHIP CERAMIC 100PF
C625	1-164-882-11	s	CAPACITOR,CERAMIC 220PF/16V CH
C626	1-165-908-11	s	CAP, CERAMIC 1000000PF B 1608
C627	1-125-777-11	s	CAPACITOR CERAMIC 0.1MF/10V
C628	1-165-908-11	s	CAP, CERAMIC 1000000PF B 1608
C629	1-164-943-11	s	CAPACITOR,CHIP CERAMIC 0.01MF
C630	1-125-777-11	s	CAPACITOR CERAMIC 0.1MF/10V
C631	1-164-943-11	s	CAPACITOR,CHIP CERAMIC 0.01MF
C635	1-125-777-11	s	CAPACITOR CERAMIC 0.1MF/10V
C636	1-125-777-11	s	CAPACITOR CERAMIC 0.1MF/10V
C700	1-125-777-11	s	CAPACITOR CERAMIC 0.1MF/10V
C701	1-115-467-11	s	CAPACITOR CERAMIC 0.22MF/10V B
C702	1-115-467-11	s	CAPACITOR CERAMIC 0.22MF/10V B
C704	1-115-467-11	s	CAPACITOR CERAMIC 0.22MF/10V B
C705	1-126-205-11	s	CAPACITOR,ELECT 47M/6.3
C706	1-165-989-11	s	CAPACITOR, CERAMIC 10MF (2012)
C709	1-126-205-11	s	CAPACITOR,ELECT 47M/6.3
C711	1-119-923-11	s	CAPACITOR,CHIP CERAMIC 0.047MF
C712	1-164-937-11	s	CAPACITOR,CHIP CERAMIC 1000PF
C714	1-135-995-91	s	CAP,CHIP CERAMIC39000PF B 1608
C715	1-165-989-11	s	CAPACITOR, CERAMIC 10MF (2012)
C716	1-117-446-11	s	CAPACITOR CERAMIC 3900PF 16V
C717	1-119-923-11	s	CAPACITOR,CHIP CERAMIC 0.047MF
C719	1-119-923-11	s	CAPACITOR,CHIP CERAMIC 0.047MF
C720	1-126-205-11	s	CAPACITOR,ELECT 47M/6.3
C724	1-125-777-11	s	CAPACITOR CERAMIC 0.1MF/10V
C727	1-125-777-11	s	CAPACITOR CERAMIC 0.1MF/10V
C728	1-125-777-11	s	CAPACITOR CERAMIC 0.1MF/10V
C729	1-125-777-11	s	CAPACITOR CERAMIC 0.1MF/10V
C730	1-125-777-11	s	CAPACITOR CERAMIC 0.1MF/10V
C731	1-125-777-11	s	CAPACITOR CERAMIC 0.1MF/10V
C732	1-125-777-11	s	CAPACITOR CERAMIC 0.1MF/10V
C735	1-125-777-11	s	CAPACITOR CERAMIC 0.1MF/10V
C736	1-125-777-11	s	CAPACITOR CERAMIC 0.1MF/10V
C737	1-125-777-11	s	CAPACITOR CERAMIC 0.1MF/10V
C738	1-125-777-11	s	CAPACITOR CERAMIC 0.1MF/10V
C739	1-125-777-11	s	CAPACITOR CERAMIC 0.1MF/10V
C740	1-125-777-11	s	CAPACITOR CERAMIC 0.1MF/10V
C741	1-125-777-11	s	CAPACITOR CERAMIC 0.1MF/10V
C744	1-125-777-11	s	CAPACITOR CERAMIC 0.1MF/10V
C746	1-126-205-11	s	CAPACITOR,ELECT 47M/6.3
C748	1-165-989-11	s	CAPACITOR, CERAMIC 10MF (2012)
C750	1-125-777-11	s	CAPACITOR CERAMIC 0.1MF/10V
C751	1-165-989-11	s	CAPACITOR, CERAMIC 10MF (2012)
C753	1-125-777-11	s	CAPACITOR CERAMIC 0.1MF/10V
C754	1-125-777-11	s	CAPACITOR CERAMIC 0.1MF/10V
C759	1-125-777-11	s	CAPACITOR CERAMIC 0.1MF/10V
C760	1-125-777-11	s	CAPACITOR CERAMIC 0.1MF/10V
C761	1-164-854-11	s	CAPACITOR,CHIP CERAMIC 15PF/50
C762	1-164-854-11	s	CAPACITOR,CHIP CERAMIC 15PF/50
C763	1-125-777-11	s	CAPACITOR CERAMIC 0.1MF/10V

(C BOARD (FOR VPL-CX70))

Ref. No. or Q'ty	Part No.	SP	Description
C764	1-125-777-11	s	CAPACITOR CERAMIC 0.1MF/10V
C765	1-125-777-11	s	CAPACITOR CERAMIC 0.1MF/10V
C766	1-125-777-11	s	CAPACITOR CERAMIC 0.1MF/10V
C767	1-125-777-11	s	CAPACITOR CERAMIC 0.1MF/10V
C768	1-125-777-11	s	CAPACITOR CERAMIC 0.1MF/10V
C769	1-125-777-11	s	CAPACITOR CERAMIC 0.1MF/10V
C770	1-125-777-11	s	CAPACITOR CERAMIC 0.1MF/10V
C771	1-125-777-11	s	CAPACITOR CERAMIC 0.1MF/10V
C772	1-125-777-11	s	CAPACITOR CERAMIC 0.1MF/10V
C775	1-125-777-11	s	CAPACITOR CERAMIC 0.1MF/10V
C776	1-125-777-11	s	CAPACITOR CERAMIC 0.1MF/10V
C779	1-126-205-11	s	CAPACITOR,ELECT 47M/6.3
C781	1-126-205-11	s	CAPACITOR,ELECT 47M/6.3
C783	1-125-777-11	s	CAPACITOR CERAMIC 0.1MF/10V
C784	1-126-205-11	s	CAPACITOR,ELECT 47M/6.3
C787	1-125-777-11	s	CAPACITOR CERAMIC 0.1MF/10V
C800	1-165-989-11	s	CAPACITOR, CERAMIC 10MF (2012)
C801	1-125-777-11	s	CAPACITOR CERAMIC 0.1MF/10V
C802	1-125-777-11	s	CAPACITOR CERAMIC 0.1MF/10V
C803	1-125-777-11	s	CAPACITOR CERAMIC 0.1MF/10V
C804	1-125-777-11	s	CAPACITOR CERAMIC 0.1MF/10V
C805	1-125-777-11	s	CAPACITOR CERAMIC 0.1MF/10V
C806	1-125-777-11	s	CAPACITOR CERAMIC 0.1MF/10V
C807	1-125-777-11	s	CAPACITOR CERAMIC 0.1MF/10V
C808	1-125-777-11	s	CAPACITOR CERAMIC 0.1MF/10V
C809	1-125-777-11	s	CAPACITOR CERAMIC 0.1MF/10V
C810	1-125-777-11	s	CAPACITOR CERAMIC 0.1MF/10V
C811	1-125-777-11	s	CAPACITOR CERAMIC 0.1MF/10V
C812	1-125-777-11	s	CAPACITOR CERAMIC 0.1MF/10V
C813	1-125-777-11	s	CAPACITOR CERAMIC 0.1MF/10V
C814	1-125-777-11	s	CAPACITOR CERAMIC 0.1MF/10V
C815	1-125-777-11	s	CAPACITOR CERAMIC 0.1MF/10V
C816	1-125-777-11	s	CAPACITOR CERAMIC 0.1MF/10V
C817	1-125-777-11	s	CAPACITOR CERAMIC 0.1MF/10V
C818	1-125-777-11	s	CAPACITOR CERAMIC 0.1MF/10V
C819	1-126-205-11	s	CAPACITOR,ELECT 47M/6.3
C820	1-125-777-11	s	CAPACITOR CERAMIC 0.1MF/10V
C821	1-125-777-11	s	CAPACITOR CERAMIC 0.1MF/10V
C822	1-126-205-11	s	CAPACITOR,ELECT 47M/6.3
C823	1-125-777-11	s	CAPACITOR CERAMIC 0.1MF/10V
C824	1-165-989-11	s	CAPACITOR, CERAMIC 10MF (2012)
C825	1-125-777-11	s	CAPACITOR CERAMIC 0.1MF/10V
C826	1-164-852-11	s	CAPACITOR,CHIP CERAMIC 12PF/50
C827	1-125-777-11	s	CAPACITOR CERAMIC 0.1MF/10V
C829	1-164-852-11	s	CAPACITOR,CHIP CERAMIC 12PF/50
C830	1-125-777-11	s	CAPACITOR CERAMIC 0.1MF/10V
C831	1-165-989-11	s	CAPACITOR, CERAMIC 10MF (2012)
C832	1-125-777-11	s	CAPACITOR CERAMIC 0.1MF/10V
C833	1-125-777-11	s	CAPACITOR CERAMIC 0.1MF/10V
C834	1-125-777-11	s	CAPACITOR CERAMIC 0.1MF/10V
C835	1-125-777-11	s	CAPACITOR CERAMIC 0.1MF/10V
C836	1-125-777-11	s	CAPACITOR CERAMIC 0.1MF/10V
C837	1-125-777-11	s	CAPACITOR CERAMIC 0.1MF/10V
C838	1-125-777-11	s	CAPACITOR CERAMIC 0.1MF/10V
C839	1-125-777-11	s	CAPACITOR CERAMIC 0.1MF/10V
C840	1-125-777-11	s	CAPACITOR CERAMIC 0.1MF/10V
C841	1-125-777-11	s	CAPACITOR CERAMIC 0.1MF/10V
C842	1-125-777-11	s	CAPACITOR CERAMIC 0.1MF/10V
C843	1-125-777-11	s	CAPACITOR CERAMIC 0.1MF/10V

(C BOARD (FOR VPL-CX70))

Ref. No. or Q'ty	Part No.	SP	Description
C1005	1-115-339-11	s	CAPACITOR,CERAMIC 0.1MF/50V
C1006	1-128-992-11	s	CAPACITOR ELECT 47MF 25V
C1007	1-115-339-11	s	CAPACITOR,CERAMIC 0.1MF/50V
C1008	1-115-339-11	s	CAPACITOR,CERAMIC 0.1MF/50V
C1009	1-128-992-11	s	CAPACITOR ELECT 47MF 25V
C1010	1-115-339-11	s	CAPACITOR,CERAMIC 0.1MF/50V
C1011	1-115-339-11	s	CAPACITOR,CERAMIC 0.1MF/50V
C1012	1-128-992-11	s	CAPACITOR ELECT 47MF 25V
C1013	1-115-339-11	s	CAPACITOR,CERAMIC 0.1MF/50V
C1014	1-128-992-11	s	CAPACITOR ELECT 47MF 25V
C1015	1-115-339-11	s	CAPACITOR,CERAMIC 0.1MF/50V
C1016	1-115-339-11	s	CAPACITOR,CERAMIC 0.1MF/50V
C1017	1-128-992-11	s	CAPACITOR ELECT 47MF 25V
C1018	1-115-339-11	s	CAPACITOR,CERAMIC 0.1MF/50V
C1019	1-115-339-11	s	CAPACITOR,CERAMIC 0.1MF/50V
C1100	1-126-205-11	s	CAPACITOR,ELECT 47M/6.3
C1101	1-125-777-11	s	CAPACITOR CERAMIC 0.1MF/10V
C1102	1-115-339-11	s	CAPACITOR,CERAMIC 0.1MF/50V
C1103	1-128-992-11	s	CAPACITOR ELECT 47MF 25V
C1104	1-115-339-11	s	CAPACITOR,CERAMIC 0.1MF/50V
C1105	1-128-992-11	s	CAPACITOR ELECT 47MF 25V
C1106	1-115-339-11	s	CAPACITOR,CERAMIC 0.1MF/50V
C1107	1-115-339-11	s	CAPACITOR,CERAMIC 0.1MF/50V
C1108	1-128-992-11	s	CAPACITOR ELECT 47MF 25V
C1109	1-115-339-11	s	CAPACITOR,CERAMIC 0.1MF/50V
C1110	1-115-339-11	s	CAPACITOR,CERAMIC 0.1MF/50V
C1111	1-115-339-11	s	CAPACITOR,CERAMIC 0.1MF/50V
C1112	1-128-992-11	s	CAPACITOR ELECT 47MF 25V
C1113	1-115-339-11	s	CAPACITOR,CERAMIC 0.1MF/50V
C1200	1-126-205-11	s	CAPACITOR,ELECT 47M/6.3
C1201	1-125-777-11	s	CAPACITOR CERAMIC 0.1MF/10V
C1202	1-115-339-11	s	CAPACITOR,CERAMIC 0.1MF/50V
C1203	1-128-992-11	s	CAPACITOR ELECT 47MF 25V
C1204	1-115-339-11	s	CAPACITOR,CERAMIC 0.1MF/50V
C1205	1-128-992-11	s	CAPACITOR ELECT 47MF 25V
C1206	1-115-339-11	s	CAPACITOR,CERAMIC 0.1MF/50V
C1207	1-115-339-11	s	CAPACITOR,CERAMIC 0.1MF/50V
C1208	1-128-992-11	s	CAPACITOR ELECT 47MF 25V
C1209	1-115-339-11	s	CAPACITOR,CERAMIC 0.1MF/50V
C1210	1-115-339-11	s	CAPACITOR,CERAMIC 0.1MF/50V
C1211	1-128-992-11	s	CAPACITOR ELECT 47MF 25V
C1212	1-115-339-11	s	CAPACITOR,CERAMIC 0.1MF/50V
C1213	1-115-339-11	s	CAPACITOR,CERAMIC 0.1MF/50V
C1214	1-164-842-11	s	CAPACITOR CERAMIC 2PF/16V 1005
C1215	1-164-842-11	s	CAPACITOR CERAMIC 2PF/16V 1005
C1300	1-125-777-11	s	CAPACITOR CERAMIC 0.1MF/10V
C1304	1-125-777-11	s	CAPACITOR CERAMIC 0.1MF/10V
C1306	1-125-777-11	s	CAPACITOR CERAMIC 0.1MF/10V
C1307	1-125-777-11	s	CAPACITOR CERAMIC 0.1MF/10V
C1308	1-128-992-11	s	CAPACITOR ELECT 47MF 25V
C1309	1-125-777-11	s	CAPACITOR CERAMIC 0.1MF/10V
C1310	1-125-777-11	s	CAPACITOR CERAMIC 0.1MF/10V
C1311	1-165-989-11	s	CAPACITOR, CERAMIC 10MF (2012)
C1313	1-125-777-11	s	CAPACITOR CERAMIC 0.1MF/10V
C1314	1-164-934-11	s	CAPACITOR,CERAMIC 330PF/50V B
C1315	1-164-934-11	s	CAPACITOR,CERAMIC 330PF/50V B
C1400	1-125-777-11	s	CAPACITOR CERAMIC 0.1MF/10V
C1401	1-126-205-11	s	CAPACITOR,ELECT 47M/6.3
C1402	1-125-777-11	s	CAPACITOR CERAMIC 0.1MF/10V

(C BOARD (FOR VPL-CX70))

Ref. No. or Q'ty	Part No.	SP	Description
C1403	1-126-205-11	s	CAPACITOR,ELECT 47M/6.3
C1404	1-115-339-11	s	CAPACITOR,CERAMIC 0.1MF/50V
C1405	1-115-339-11	s	CAPACITOR,CERAMIC 0.1MF/50V
C1406	1-115-339-11	s	CAPACITOR,CERAMIC 0.1MF/50V
C1407	1-115-339-11	s	CAPACITOR,CERAMIC 0.1MF/50V
C1408	1-128-992-11	s	CAPACITOR ELECT 47MF 25V
C1409	1-128-992-11	s	CAPACITOR ELECT 47MF 25V
C1410	1-128-992-11	s	CAPACITOR ELECT 47MF 25V
C1411	1-128-992-11	s	CAPACITOR ELECT 47MF 25V
C1412	1-115-339-11	s	CAPACITOR,CERAMIC 0.1MF/50V
CN100	1-770-624-21	s	PIN, CONNECTOR 7P
CN101	1-770-625-21	s	PIN, CONNECTOR 8P
CN102	1-770-623-21	s	PIN, CONNECTOR 6P
CN103	1-580-789-22	o	PIN, CONNECTOR (SMD) 6P
CN104	1-770-624-21	s	PIN, CONNECTOR 7P
CN105	1-770-621-21	s	PIN, CONNECTOR 4P
CN106	1-764-643-21	o	PIN, CONNECTOR (SMD) 11P
CN107	1-770-622-21	s	PIN, CONNECTOR 5P
CN108	1-580-055-21	o	PIN, CONNECTOR 2P
CN109	1-770-623-21	s	PIN, CONNECTOR 6P
CN200	1-778-965-21	s	PIN, CONNECTOR (PC BOARD) 12P
CN300	1-770-625-21	s	PIN, CONNECTOR 8P
CN301	1-770-622-21	s	PIN, CONNECTOR 5P
CN302	1-770-624-21	s	PIN, CONNECTOR 7P
CN400	1-580-055-21	o	PIN, CONNECTOR 2P
CN500	1-784-828-11	s	CONNECTOR, D SUB
CN502	1-770-626-21	s	PIN, CONNECTOR (L TYPE) 9P
CN900	1-779-884-11	s	PLUG, CONNECTOR 4P
CN1000	1-794-823-11	s	CONNECTOR (ZIF), FPC/FFC 32P
CN1100	1-794-823-11	s	CONNECTOR (ZIF), FPC/FFC 32P
CN1200	1-794-823-11	s	CONNECTOR (ZIF), FPC/FFC 32P
CN1302	1-784-010-11	o	CONNECTOR, USB (B)
CN1400	1-695-223-21	o	PIN,CONNECTOR (SMD) 10P
CN1401	1-580-056-21	s	PIN,CONNECTOR 3P
CN1402	1-580-056-21	s	PIN,CONNECTOR 3P
CN1403	1-580-056-21	s	PIN,CONNECTOR 3P
CN1405	1-580-056-21	s	PIN,CONNECTOR 3P
D100	8-719-157-94	s	DIODE RD3.3SB
D101	8-719-036-94	s	DIODE RD5.6SB-T1
D102	8-719-036-94	s	DIODE RD5.6SB-T1
D103	8-719-036-94	s	DIODE RD5.6SB-T1
D200	8-719-157-94	s	DIODE RD3.3SB
D201	8-719-059-53	s	DIODE MA3J14700LS0
D202	8-719-157-94	s	DIODE RD3.3SB
D203	8-719-055-30	s	DIODE D1FS4A-TA
D204	8-719-055-30	s	DIODE D1FS4A-TA
D205	8-719-024-77	s	DIODE HN1D03FU-TE85L
D206	8-719-059-53	s	DIODE MA3J14700LS0
D300	8-719-036-94	s	DIODE RD5.6SB-T1
D301	8-719-036-94	s	DIODE RD5.6SB-T1
D302	8-719-036-94	s	DIODE RD5.6SB-T1
D303	8-719-036-94	s	DIODE RD5.6SB-T1
D304	8-719-036-94	s	DIODE RD5.6SB-T1
D305	8-719-036-94	s	DIODE RD5.6SB-T1
D306	8-719-157-94	s	DIODE RD3.3SB
D501	8-719-059-53	s	DIODE MA3J14700LS0
D502	8-719-059-53	s	DIODE MA3J14700LS0
D503	8-719-059-53	s	DIODE MA3J14700LS0

(C BOARD (FOR VPL-CX70))

Ref. No. or Q'ty	Part No.	SP	Description
D504	8-719-024-77	s	DIODE HN1D03FU-TE85L
D505	8-719-941-86	s	DIODE DAN202U
D506	8-719-036-94	s	DIODE RD5.6SB-T1
D507	8-719-036-94	s	DIODE RD5.6SB-T1
D514	6-500-331-01	s	DIODE RD3.9UM-T1B
D600	8-719-988-61	s	DIODE 1SS355TE-17
D601	8-719-988-61	s	DIODE 1SS355TE-17
D1303	8-719-036-94	s	DIODE RD5.6SB-T1
D1304	8-719-988-61	s	DIODE 1SS355TE-17
D1305	8-719-058-24	s	DIODE RB501V-40TE17
D1400	8-719-988-61	s	DIODE 1SS355TE-17
D1401	8-719-988-61	s	DIODE 1SS355TE-17
D1402	8-719-988-61	s	DIODE 1SS355TE-17
D1403	8-719-988-61	s	DIODE 1SS355TE-17
D1404	8-719-055-30	s	DIODE D1FS4A-TA
D1405	8-719-055-30	s	DIODE D1FS4A-TA
D1406	8-719-055-30	s	DIODE D1FS4A-TA
D1407	8-719-055-30	s	DIODE D1FS4A-TA
D1408	8-719-941-86	s	DIODE DAN202U
D1409	8-719-941-86	s	DIODE DAN202U
D1410	8-719-941-86	s	DIODE DAN202U
D1411	8-719-055-30	s	DIODE D1FS4A-TA
D1412	8-719-055-30	s	DIODE D1FS4A-TA
FB100	1-414-921-11	s	INDUCTOR, FERRITE BEAD
FB101	1-414-921-11	s	INDUCTOR, FERRITE BEAD
FB102	1-414-921-11	s	INDUCTOR, FERRITE BEAD
FB103	1-414-921-11	s	INDUCTOR, FERRITE BEAD
FB104	1-414-921-11	s	INDUCTOR, FERRITE BEAD
FB105	1-414-921-11	s	INDUCTOR, FERRITE BEAD
FB106	1-414-921-11	s	INDUCTOR, FERRITE BEAD
FB107	1-414-921-11	s	INDUCTOR, FERRITE BEAD
FB108	1-414-921-11	s	INDUCTOR, FERRITE BEAD
FB109	1-414-921-11	s	INDUCTOR, FERRITE BEAD
FB110	1-414-921-11	s	INDUCTOR, FERRITE BEAD
FB111	1-500-451-11	s	MICRO INDUCTOR (CHIP) 41P750S
FB112	1-500-451-11	s	MICRO INDUCTOR (CHIP) 41P750S
FB113	1-500-451-11	s	MICRO INDUCTOR (CHIP) 41P750S
FB114	1-414-921-11	s	INDUCTOR, FERRITE BEAD
FB116	1-414-921-11	s	INDUCTOR, FERRITE BEAD
FB117	1-414-921-11	s	INDUCTOR, FERRITE BEAD
FB118	1-414-921-11	s	INDUCTOR, FERRITE BEAD
FB119	1-414-921-11	s	INDUCTOR, FERRITE BEAD
FB120	1-414-921-11	s	INDUCTOR, FERRITE BEAD
FB121	1-414-921-11	s	INDUCTOR, FERRITE BEAD
FB122	1-414-921-11	s	INDUCTOR, FERRITE BEAD
FB123	1-414-921-11	s	INDUCTOR, FERRITE BEAD
FB124	1-414-921-11	s	INDUCTOR, FERRITE BEAD
FB125	1-414-921-11	s	INDUCTOR, FERRITE BEAD
FB126	1-414-921-11	s	INDUCTOR, FERRITE BEAD
FB400	1-414-921-11	s	INDUCTOR, FERRITE BEAD
FB401	1-414-921-11	s	INDUCTOR, FERRITE BEAD
FB402	1-414-921-11	s	INDUCTOR, FERRITE BEAD
FB700	1-414-921-11	s	INDUCTOR, FERRITE BEAD
FB701	1-414-921-11	s	INDUCTOR, FERRITE BEAD
FB702	1-414-921-11	s	INDUCTOR, FERRITE BEAD
FB703	1-414-921-11	s	INDUCTOR, FERRITE BEAD
FB800	1-500-451-11	s	MICRO INDUCTOR (CHIP) 41P750S
FB801	1-414-921-11	s	INDUCTOR, FERRITE BEAD

(C BOARD (FOR VPL-CX70))

Ref. No. or Q'ty	Part No.	SP Description
FB802	1-414-921-11	s INDUCTOR, FERRITE BEAD
FB803	1-414-921-11	s INDUCTOR, FERRITE BEAD
FB804	1-414-921-11	s INDUCTOR, FERRITE BEAD
FB900	1-500-451-11	s MICRO INDUCTOR (CHIP) 41P750S
FB901	1-414-921-11	s INDUCTOR, FERRITE BEAD
FB1300	1-469-185-11	s INDUCTOR, FERRITE BEAD
FB1301	1-469-185-11	s INDUCTOR, FERRITE BEAD
FB1306	1-414-921-11	s INDUCTOR, FERRITE BEAD
FB1307	1-414-921-11	s INDUCTOR, FERRITE BEAD
FB1308	1-414-921-11	s INDUCTOR, FERRITE BEAD
FB1400	1-500-451-11	s MICRO INDUCTOR (CHIP) 41P750S
FB1401	1-500-451-11	s MICRO INDUCTOR (CHIP) 41P750S
FL900	1-234-494-21	s FILTER, EMI REMOVAL (SMD)
FL901	1-234-494-21	s FILTER, EMI REMOVAL (SMD)
FL902	1-234-494-21	s FILTER, EMI REMOVAL (SMD)
IC101	6-704-953-01	s IC AIC1117A-33PYJTR
IC102	6-704-954-01	s IC AIC1117A-50PYJTR
IC103	8-759-681-47	s IC IRMF-A0T-QTP
IC104	6-704-954-01	s IC AIC1117A-50PYJTR
IC200	8-759-471-89	s IC 74VHC02MTCX
IC201	8-759-475-43	s IC TC74LCX125FT(EL)
IC202	6-703-225-01	s IC S-80928CNMC-G8YT2G
IC203	6-706-022-01	s IC HD64F2378VFQ34V
IC300	8-759-491-48	s IC TC74VHCT138AFT(EL)
IC301	8-759-460-79	s IC BA09FP-E2
IC302	8-759-598-43	s IC TC7WH04FK(Te85R)
IC303	8-759-460-79	s IC BA09FP-E2
IC304	8-752-072-81	s IC CXA1875AM
IC305	8-759-580-33	s IC BA6288FS-E2
IC306	8-759-831-52	s IC TC7WH125FK(Te85R)
IC307	8-759-575-16	s IC LMC7101BIM5X
IC308	8-759-537-09	s IC BA6287F-E2
IC400	8-759-352-94	s IC TDA7309D013TR
IC401	6-702-697-01	s IC TPA2001D1PWR
IC500	8-759-661-55	s IC ST24FC21M6TR
IC501	8-759-833-99	s IC MC74HC4052ADTR2
IC600	6-704-954-01	s IC AIC1117A-50PYJTR
IC601	8-759-646-02	s IC M52347FP-TE
IC602	8-752-108-35	s IC CXA2171AQ
IC604	8-759-548-95	s IC SN74LV00APWR
IC605	8-759-549-14	s IC SN74LV244APWR
IC700	6-704-958-01	s IC AIC1117A-18PYJTR
IC701	6-706-008-01	s IC PW2200B-20L
IC702	6-703-225-01	s IC S-80928CNMC-G8YT2G
IC703	6-704-953-01	s IC AIC1117A-33PYJTR
IC801	6-703-225-01	s IC S-80928CNMC-G8YT2G
IC802	6-705-986-01	s IC CY25033SZC-1T
IC803	6-804-145-01	s IC MBM29LV800TA-70PFTN-768PW
IC805	6-704-030-01	s IC TC7SA04FU(Te85R)
IC806	6-702-301-01	s IC TK11125CSCL-G
IC807	6-704-952-01	s IC AIC1084-PEJTR
IC900	8-752-424-18	s IC CXD3536R
IC901	6-703-225-01	s IC S-80928CNMC-G8YT2G
IC902	6-703-225-01	s IC S-80928CNMC-G8YT2G
IC903	8-759-693-83	s IC HN58X24256FPIZ
IC904	8-759-679-58	s IC SN74AHCT541PWR
IC905	8-759-679-58	s IC SN74AHCT541PWR
IC906	8-759-679-58	s IC SN74AHCT541PWR

(C BOARD (FOR VPL-CX70))

Ref. No. or Q'ty	Part No.	SP Description
IC907	8-759-490-43	s IC TC74VHCT540AFT(EL)
IC908	8-759-831-52	s IC TC7WH125FK(Te85R)
IC1000	6-705-025-01	s IC PQ20WZ1UJ00H
IC1001	8-759-679-05	s IC TC7WH34FU(Te12R)
IC1002	8-752-110-22	s IC CXA7005R-T4
IC1003	8-759-252-41	s IC TK11900MTL
IC1100	8-752-110-22	s IC CXA7005R-T4
IC1200	8-752-110-22	s IC CXA7005R-T4
IC1300	8-759-596-39	s IC SN74LV4052APWR
IC1301	6-700-658-01	s IC SN75240PWR
IC1302	8-759-649-33	s IC SN74AHCT1G08DCKR
IC1303	6-804-220-01	s IC SN-USBRCV1
IC1305	6-702-912-01	s IC S-80942CNMC-G9C-T2
IC1400	6-704-958-01	s IC AIC1117A-18PYJTR
IC1401	8-759-643-48	s IC BA00ASFP-E2
IC1402	8-759-643-48	s IC BA00ASFP-E2
IC1403	8-759-643-48	s IC BA00ASFP-E2
IC1404	8-759-643-48	s IC BA00ASFP-E2
IC1405	6-702-593-01	s IC BA10358FV-E2
IC1406	6-702-593-01	s IC BA10358FV-E2
L101	1-409-527-41	s COIL, CHOKE 4.7UH
L400	1-469-522-11	s INDUCTOR 1.0UH (NLFV25)
L401	1-469-522-11	s INDUCTOR 1.0UH (NLFV25)
L600	1-469-522-11	s INDUCTOR 1.0UH (NLFV25)
L601	1-469-522-11	s INDUCTOR 1.0UH (NLFV25)
L700	1-469-522-11	s INDUCTOR 1.0UH (NLFV25)
L701	1-469-522-11	s INDUCTOR 1.0UH (NLFV25)
L702	1-469-522-11	s INDUCTOR 1.0UH (NLFV25)
L703	1-469-522-11	s INDUCTOR 1.0UH (NLFV25)
L704	1-469-522-11	s INDUCTOR 1.0UH (NLFV25)
L800	1-469-522-11	s INDUCTOR 1.0UH (NLFV25)
L900	1-469-522-11	s INDUCTOR 1.0UH (NLFV25)
L1000	1-469-522-11	s INDUCTOR 1.0UH (NLFV25)
L1001	1-469-522-11	s INDUCTOR 1.0UH (NLFV25)
L1002	1-469-522-11	s INDUCTOR 1.0UH (NLFV25)
L1100	1-469-522-11	s INDUCTOR 1.0UH (NLFV25)
L1101	1-469-522-11	s INDUCTOR 1.0UH (NLFV25)
L1102	1-469-522-11	s INDUCTOR 1.0UH (NLFV25)
L1200	1-469-522-11	s INDUCTOR 1.0UH (NLFV25)
L1201	1-469-522-11	s INDUCTOR 1.0UH (NLFV25)
L1202	1-469-522-11	s INDUCTOR 1.0UH (NLFV25)
Q100	8-729-905-35	s TRANSISTOR 2SC4081-R
Q101	8-729-427-72	s TRANSISTOR XP4501-TXE
Q102	8-729-026-53	s TRANSISTOR 2SA1576A-T106-QR
Q200	6-550-014-01	s TRANSISTOR SSM6N15FU(Te85R)
Q201	6-550-014-01	s TRANSISTOR SSM6N15FU(Te85R)
Q202	8-729-013-28	s TRANSISTOR HN1B01FU-Te85R
Q203	6-550-014-01	s TRANSISTOR SSM6N15FU(Te85R)
Q300	8-729-907-00	s TRANSISTOR DTC114EU
Q400	8-729-907-00	s TRANSISTOR DTC114EU
Q500	8-729-907-00	s TRANSISTOR DTC114EU
Q501	8-729-907-00	s TRANSISTOR DTC114EU
Q600	8-729-026-53	s TRANSISTOR 2SA1576A-T106-QR
Q601	8-729-905-35	s TRANSISTOR 2SC4081-R
Q602	8-729-905-35	s TRANSISTOR 2SC4081-R
Q603	8-729-026-53	s TRANSISTOR 2SA1576A-T106-QR
Q604	8-729-013-28	s TRANSISTOR HN1B01FU-Te85R
Q605	8-729-013-28	s TRANSISTOR HN1B01FU-Te85R

(C BOARD (FOR VPL-CX70))

Ref. No. or Q'ty	Part No.	SP	Description
Q606	8-729-026-53	s	TRANSISTOR 2SA1576A-T106-QR
Q607	8-729-026-53	s	TRANSISTOR 2SA1576A-T106-QR
Q608	8-729-907-00	s	TRANSISTOR DTC114EU
Q900	8-729-905-35	s	TRANSISTOR 2SC4081-R
Q901	8-729-013-28	s	TRANSISTOR HN1B01FU-TE85R
Q1000	8-729-013-28	s	TRANSISTOR HN1B01FU-TE85R
Q1001	8-729-013-28	s	TRANSISTOR HN1B01FU-TE85R
Q1100	8-729-013-28	s	TRANSISTOR HN1B01FU-TE85R
Q1101	8-729-013-28	s	TRANSISTOR HN1B01FU-TE85R
Q1200	8-729-013-28	s	TRANSISTOR HN1B01FU-TE85R
Q1201	8-729-013-28	s	TRANSISTOR HN1B01FU-TE85R
Q1300	8-729-013-28	s	TRANSISTOR HN1B01FU-TE85R
Q1400	8-729-907-00	s	TRANSISTOR DTC114EU
Q1401	8-729-907-00	s	TRANSISTOR DTC114EU
Q1402	8-729-028-73	s	TRANSISTOR DTA114EUA-T106
Q1403	8-729-907-00	s	TRANSISTOR DTC114EU
Q1404	8-729-907-00	s	TRANSISTOR DTC114EU
Q1405	8-729-907-00	s	TRANSISTOR DTC114EU
R100	1-218-990-11	s	RESISTOR,CHIP 0 1/16W (1005)
R101	1-218-990-11	s	RESISTOR,CHIP 0 1/16W (1005)
R102	1-218-941-81	s	RESISTOR,CHIP 100,1/16W (1005)
R103	1-218-965-11	s	RESISTOR,CHIP 10K 1/16W
R104	1-218-965-11	s	RESISTOR,CHIP 10K 1/16W
R105	1-218-941-81	s	RESISTOR,CHIP 100,1/16W (1005)
R106	1-218-973-11	s	RESISTOR,CHIP 47K 1/16W (1005)
R107	1-218-973-11	s	RESISTOR,CHIP 47K 1/16W (1005)
R108	1-218-962-11	s	RESISTOR,CHIP 5.6K 1/16W (1005)
R109	1-208-671-11	s	RESISTOR CHIP 330 1/16W (1005)
R110	1-208-671-11	s	RESISTOR CHIP 330 1/16W (1005)
R111	1-218-941-81	s	RESISTOR,CHIP 100,1/16W (1005)
R112	1-218-941-81	s	RESISTOR,CHIP 100,1/16W (1005)
R115	1-218-941-81	s	RESISTOR,CHIP 100,1/16W (1005)
R117	1-218-965-11	s	RESISTOR,CHIP 10K 1/16W
R118	1-218-965-11	s	RESISTOR,CHIP 10K 1/16W
R119	1-218-941-81	s	RESISTOR,CHIP 100,1/16W (1005)
R120	1-218-965-11	s	RESISTOR,CHIP 10K 1/16W
R121	1-218-965-11	s	RESISTOR,CHIP 10K 1/16W
R122	1-218-937-11	s	RESISTOR,CHIP 47
R123	1-218-937-11	s	RESISTOR,CHIP 47
R200	1-218-965-11	s	RESISTOR,CHIP 10K 1/16W
R201	1-218-941-81	s	RESISTOR,CHIP 100,1/16W (1005)
R202	1-218-965-11	s	RESISTOR,CHIP 10K 1/16W
R203	1-218-965-11	s	RESISTOR,CHIP 10K 1/16W
R204	1-208-699-11	s	RESISTOR,CHIP 4.7K 1/16W(1005)
R205	1-208-699-11	s	RESISTOR,CHIP 4.7K 1/16W(1005)
R206	1-208-699-11	s	RESISTOR,CHIP 4.7K 1/16W(1005)
R207	1-218-953-11	s	RESISTOR,CHIP 1K 1/16W
R208	1-218-969-11	s	RESISTOR,CHIP 22K 1/16W (1608)
R209	1-218-965-11	s	RESISTOR,CHIP 10K 1/16W
R211	1-218-965-11	s	RESISTOR,CHIP 10K 1/16W
R212	1-218-965-11	s	RESISTOR,CHIP 10K 1/16W
R213	1-218-965-11	s	RESISTOR,CHIP 10K 1/16W
R214	1-218-965-11	s	RESISTOR,CHIP 10K 1/16W
R215	1-218-965-11	s	RESISTOR,CHIP 10K 1/16W
R216	1-218-961-11	s	RESISTOR,CHIP 4.7K 1/16W
R217	1-218-961-11	s	RESISTOR,CHIP 4.7K 1/16W
R218	1-218-965-11	s	RESISTOR,CHIP 10K 1/16W
R219	1-218-965-11	s	RESISTOR,CHIP 10K 1/16W

(C BOARD (FOR VPL-CX70))

Ref. No. or Q'ty	Part No.	SP	Description
R220	1-218-965-11	s	RESISTOR,CHIP 10K 1/16W
R221	1-218-965-11	s	RESISTOR,CHIP 10K 1/16W
R222	1-218-965-11	s	RESISTOR,CHIP 10K 1/16W
R223	1-218-941-81	s	RESISTOR,CHIP 100,1/16W (1005)
R224	1-218-941-81	s	RESISTOR,CHIP 100,1/16W (1005)
R225	1-218-941-81	s	RESISTOR,CHIP 100,1/16W (1005)
R226	1-218-973-11	s	RESISTOR,CHIP 47K 1/16W (1005)
R229	1-218-941-81	s	RESISTOR,CHIP 100,1/16W (1005)
R230	1-218-941-81	s	RESISTOR,CHIP 100,1/16W (1005)
R231	1-218-965-11	s	RESISTOR,CHIP 10K 1/16W
R232	1-218-965-11	s	RESISTOR,CHIP 10K 1/16W
R234	1-218-965-11	s	RESISTOR,CHIP 10K 1/16W
R235	1-218-973-11	s	RESISTOR,CHIP 47K 1/16W (1005)
R236	1-218-953-11	s	RESISTOR,CHIP 1K 1/16W
R237	1-218-953-11	s	RESISTOR,CHIP 1K 1/16W
R238	1-218-973-11	s	RESISTOR,CHIP 47K 1/16W (1005)
R239	1-218-957-11	s	RESISTOR,CHIP 2.2K 1/16W(1608)
R240	1-218-957-11	s	RESISTOR,CHIP 2.2K 1/16W(1608)
R241	1-218-941-81	s	RESISTOR,CHIP 100,1/16W (1005)
R243	1-218-965-11	s	RESISTOR,CHIP 10K 1/16W
R244	1-218-965-11	s	RESISTOR,CHIP 10K 1/16W
R245	1-208-635-11	s	RESISTOR CHIP 10 1/16W (1005)
R246	1-218-945-11	s	RESISTOR,CHIP 220 1/16W(1005)
R247	1-218-965-11	s	RESISTOR,CHIP 10K 1/16W
R248	1-218-973-11	s	RESISTOR,CHIP 47K 1/16W (1005)
R249	1-218-965-11	s	RESISTOR,CHIP 10K 1/16W
R251	1-218-953-11	s	RESISTOR,CHIP 1K 1/16W
R252	1-218-973-11	s	RESISTOR,CHIP 47K 1/16W (1005)
R254	1-218-941-81	s	RESISTOR,CHIP 100,1/16W (1005)
R256	1-218-941-81	s	RESISTOR,CHIP 100,1/16W (1005)
R258	1-218-965-11	s	RESISTOR,CHIP 10K 1/16W
R259	1-218-965-11	s	RESISTOR,CHIP 10K 1/16W
R260	1-218-965-11	s	RESISTOR,CHIP 10K 1/16W
R261	1-218-953-11	s	RESISTOR,CHIP 1K 1/16W
R262	1-218-941-81	s	RESISTOR,CHIP 100,1/16W (1005)
R264	1-218-941-81	s	RESISTOR,CHIP 100,1/16W (1005)
R266	1-218-965-11	s	RESISTOR,CHIP 10K 1/16W
R270	1-218-965-11	s	RESISTOR,CHIP 10K 1/16W
R271	1-218-941-81	s	RESISTOR,CHIP 100,1/16W (1005)
R280	1-208-719-11	s	RESISTOR CHIP 33K 1/16W (1005)
R281	1-208-719-11	s	RESISTOR CHIP 33K 1/16W (1005)
R283	1-218-965-11	s	RESISTOR,CHIP 10K 1/16W
R284	1-218-965-11	s	RESISTOR,CHIP 10K 1/16W
R285	1-218-965-11	s	RESISTOR,CHIP 10K 1/16W
R286	1-218-965-11	s	RESISTOR,CHIP 10K 1/16W
R288	1-218-941-81	s	RESISTOR,CHIP 100,1/16W (1005)
R289	1-218-941-81	s	RESISTOR,CHIP 100,1/16W (1005)
R290	1-218-990-11	s	RESISTOR,CHIP 0 1/16W (1005)
R291	1-218-990-11	s	RESISTOR,CHIP 0 1/16W (1005)
R293	1-218-965-11	s	RESISTOR,CHIP 10K 1/16W
R295	1-218-941-81	s	RESISTOR,CHIP 100,1/16W (1005)
R300	1-218-965-11	s	RESISTOR,CHIP 10K 1/16W
R302	1-218-965-11	s	RESISTOR,CHIP 10K 1/16W
R303	1-218-965-11	s	RESISTOR,CHIP 10K 1/16W
R304	1-218-965-11	s	RESISTOR,CHIP 10K 1/16W
R305	1-218-965-11	s	RESISTOR,CHIP 10K 1/16W
R306	1-218-965-11	s	RESISTOR,CHIP 10K 1/16W
R307	1-218-977-11	s	RESISTOR,CHIP 100K 1/16W(1005)
R308	1-218-965-11	s	RESISTOR,CHIP 10K 1/16W

(C BOARD (FOR VPL-CX70))

Ref. No. or Q'ty	Part No.	SP Description
R309	1-218-965-11	s RESISTOR, CHIP 10K 1/16W
R310	1-218-965-11	s RESISTOR, CHIP 10K 1/16W
R311	1-218-990-11	s RESISTOR,CHIP 0 1/16W (1005)
R313	1-218-965-11	s RESISTOR, CHIP 10K 1/16W
R314	1-218-990-11	s RESISTOR,CHIP 0 1/16W (1005)
R316	1-218-990-11	s RESISTOR,CHIP 0 1/16W (1005)
R318	1-216-864-11	s CONDUCTOR, CHIP (1608)
R400	1-218-941-81	s RESISTOR,CHIP 100,1/16W (1005)
R401	1-218-941-81	s RESISTOR,CHIP 100,1/16W (1005)
R402	1-218-941-81	s RESISTOR,CHIP 100,1/16W (1005)
R403	1-218-941-81	s RESISTOR,CHIP 100,1/16W (1005)
R404	1-218-941-81	s RESISTOR,CHIP 100,1/16W (1005)
R405	1-218-941-81	s RESISTOR,CHIP 100,1/16W (1005)
R406	1-218-973-11	s RESISTOR,CHIP 47K 1/16W (1005)
R407	1-218-973-11	s RESISTOR,CHIP 47K 1/16W (1005)
R409	1-218-977-11	s RESISTOR,CHIP 100K 1/16W(1005)
R410	1-218-965-11	s RESISTOR, CHIP 10K 1/16W
R412	1-218-990-11	s RESISTOR,CHIP 0 1/16W (1005)
R413	1-218-978-11	s RESISTOR,CHIP 120K 1/16W(1005)
R500	1-218-990-11	s RESISTOR,CHIP 0 1/16W (1005)
R503	1-218-990-11	s RESISTOR,CHIP 0 1/16W (1005)
R504	1-218-990-11	s RESISTOR,CHIP 0 1/16W (1005)
R505	1-218-990-11	s RESISTOR,CHIP 0 1/16W (1005)
R506	1-218-823-11	s RESISTOR,CHIP 100 1/10W (1608)
R507	1-218-827-11	s RESISTOR,CHIP 150 1/10W (1608)
R508	1-218-827-11	s RESISTOR,CHIP 150 1/10W (1608)
R509	1-218-827-11	s RESISTOR,CHIP 150 1/10W (1608)
R510	1-218-953-11	s RESISTOR, CHIP 1K 1/16W
R511	1-216-811-11	s RESISTOR, CHIP 150 1/16W(1608)
R512	1-218-827-11	s RESISTOR,CHIP 150 1/10W (1608)
R513	1-218-827-11	s RESISTOR,CHIP 150 1/10W (1608)
R514	1-218-827-11	s RESISTOR,CHIP 150 1/10W (1608)
R515	1-218-953-11	s RESISTOR, CHIP 1K 1/16W
R516	1-218-937-11	s RESISTOR, CHIP 47
R517	1-218-823-11	s RESISTOR,CHIP 100 1/10W (1608)
R518	1-216-811-11	s RESISTOR, CHIP 150 1/16W(1608)
R519	1-218-937-11	s RESISTOR, CHIP 47
R520	1-218-945-11	s RESISTOR,CHIP 220 1/16W(1005)
R521	1-218-823-11	s RESISTOR,CHIP 100 1/10W (1608)
R522	1-216-811-11	s RESISTOR, CHIP 150 1/16W(1608)
R523	1-218-977-11	s RESISTOR,CHIP 100K 1/16W(1005)
R524	1-218-965-11	s RESISTOR, CHIP 10K 1/16W
R525	1-218-969-11	s RESISTOR,CHIP 22K 1/16W (1608)
R526	1-218-971-11	s RESISTOR,CHIP 33K 1/16W (1005)
R527	1-218-969-11	s RESISTOR,CHIP 22K 1/16W (1608)
R528	1-218-971-11	s RESISTOR,CHIP 33K 1/16W (1005)
R529	1-218-969-11	s RESISTOR,CHIP 22K 1/16W (1608)
R530	1-218-971-11	s RESISTOR,CHIP 33K 1/16W (1005)
R531	1-218-965-11	s RESISTOR, CHIP 10K 1/16W
R532	1-218-937-11	s RESISTOR, CHIP 47
R533	1-218-965-11	s RESISTOR, CHIP 10K 1/16W
R534	1-218-937-11	s RESISTOR, CHIP 47
R535	1-218-937-11	s RESISTOR, CHIP 47
R536	1-218-937-11	s RESISTOR, CHIP 47
R538	1-218-990-11	s RESISTOR,CHIP 0 1/16W (1005)
R540	1-218-990-11	s RESISTOR,CHIP 0 1/16W (1005)
R541	1-218-969-11	s RESISTOR,CHIP 22K 1/16W (1608)
R542	1-211-973-11	s RESISTOR,CHIP 15 1/10W (1608)
R543	1-211-973-11	s RESISTOR,CHIP 15 1/10W (1608)

(C BOARD (FOR VPL-CX70))

Ref. No. or Q'ty	Part No.	SP Description
R544	1-211-973-11	s RESISTOR,CHIP 15 1/10W (1608)
R600	1-218-990-11	s RESISTOR,CHIP 0 1/16W (1005)
R602	1-218-973-11	s RESISTOR,CHIP 47K 1/16W (1005)
R603	1-218-973-11	s RESISTOR,CHIP 47K 1/16W (1005)
R604	1-208-635-11	s RESISTOR CHIP 10 1/16W (1005)
R605	1-218-953-11	s RESISTOR, CHIP 1K 1/16W
R606	1-218-990-11	s RESISTOR,CHIP 0 1/16W (1005)
R607	1-218-990-11	s RESISTOR,CHIP 0 1/16W (1005)
R609	1-218-953-11	s RESISTOR, CHIP 1K 1/16W
R610	1-218-973-11	s RESISTOR,CHIP 47K 1/16W (1005)
R611	1-218-973-11	s RESISTOR,CHIP 47K 1/16W (1005)
R612	1-218-941-81	s RESISTOR,CHIP 100,1/16W (1005)
R613	1-218-990-11	s RESISTOR,CHIP 0 1/16W (1005)
R614	1-208-635-11	s RESISTOR CHIP 10 1/16W (1005)
R615	1-218-953-11	s RESISTOR, CHIP 1K 1/16W
R616	1-208-635-11	s RESISTOR CHIP 10 1/16W (1005)
R617	1-218-949-11	s RESISTOR,CHIP 470 1/16W
R618	1-218-953-11	s RESISTOR, CHIP 1K 1/16W
R619	1-218-953-11	s RESISTOR, CHIP 1K 1/16W
R620	1-218-953-11	s RESISTOR, CHIP 1K 1/16W
R621	1-218-953-11	s RESISTOR, CHIP 1K 1/16W
R622	1-218-961-11	s RESISTOR, CHIP 4.7K 1/16W
R623	1-218-990-11	s RESISTOR,CHIP 0 1/16W (1005)
R624	1-218-937-11	s RESISTOR, CHIP 47
R625	1-218-973-11	s RESISTOR,CHIP 47K 1/16W (1005)
R626	1-218-973-11	s RESISTOR,CHIP 47K 1/16W (1005)
R627	1-218-990-11	s RESISTOR,CHIP 0 1/16W (1005)
R628	1-218-990-11	s RESISTOR,CHIP 0 1/16W (1005)
R631	1-219-601-11	s RES, METAL FILM CHIP 62K(1005)
R632	1-218-990-11	s RESISTOR,CHIP 0 1/16W (1005)
R633	1-218-990-11	s RESISTOR,CHIP 0 1/16W (1005)
R634	1-218-990-11	s RESISTOR,CHIP 0 1/16W (1005)
R635	1-218-990-11	s RESISTOR,CHIP 0 1/16W (1005)
R636	1-218-965-11	s RESISTOR, CHIP 10K 1/16W
R639	1-218-941-81	s RESISTOR,CHIP 100,1/16W (1005)
R640	1-218-941-81	s RESISTOR,CHIP 100,1/16W (1005)
R641	1-208-947-11	s RESISTOR CHIP 330K 1/16W(1005)
R642	1-218-961-11	s RESISTOR, CHIP 4.7K 1/16W
R645	1-218-973-11	s RESISTOR,CHIP 47K 1/16W (1005)
R646	1-208-695-11	s RESISTOR CHIP 3.3K 1/16W(1005)
R647	1-218-957-11	s RESISTOR,CHIP 2.2K 1/16W(1608)
R648	1-218-945-11	s RESISTOR,CHIP 220 1/16W(1005)
R649	1-218-937-11	s RESISTOR, CHIP 47
R650	1-218-937-11	s RESISTOR, CHIP 47
R651	1-218-937-11	s RESISTOR, CHIP 47
R652	1-208-707-11	s RESISTOR,CHIP 10K 1/16W (1005)
R653	1-218-990-11	s RESISTOR,CHIP 0 1/16W (1005)
R654	1-218-990-11	s RESISTOR,CHIP 0 1/16W (1005)
R655	1-218-990-11	s RESISTOR,CHIP 0 1/16W (1005)
R656	1-218-937-11	s RESISTOR, CHIP 47
R657	1-218-937-11	s RESISTOR, CHIP 47
R658	1-208-683-11	s RESISTOR CHIP 1K 1/16W (1005)
R660	1-218-990-11	s RESISTOR,CHIP 0 1/16W (1005)
R663	1-218-990-11	s RESISTOR,CHIP 0 1/16W (1005)
R665	1-218-990-11	s RESISTOR,CHIP 0 1/16W (1005)
R669	1-218-937-11	s RESISTOR, CHIP 47
R671	1-218-937-11	s RESISTOR, CHIP 47
R672	1-218-990-11	s RESISTOR,CHIP 0 1/16W (1005)
R673	1-218-965-11	s RESISTOR, CHIP 10K 1/16W

(C BOARD (FOR VPL-CX70))

Ref. No. or Q'ty	Part No.	SP	Description
R705	1-218-945-11	s	RESISTOR,CHIP 220 1/16W(1005)
R706	1-218-945-11	s	RESISTOR,CHIP 220 1/16W(1005)
R707	1-218-945-11	s	RESISTOR,CHIP 220 1/16W(1005)
R708	1-218-945-11	s	RESISTOR,CHIP 220 1/16W(1005)
R709	1-218-945-11	s	RESISTOR,CHIP 220 1/16W(1005)
R710	1-218-945-11	s	RESISTOR,CHIP 220 1/16W(1005)
R712	1-208-695-11	s	RESISTOR CHIP 3.3K 1/16W(1005)
R715	1-218-965-11	s	RESISTOR, CHIP 10K 1/16W
R716	1-218-965-11	s	RESISTOR, CHIP 10K 1/16W
R717	1-218-965-11	s	RESISTOR, CHIP 10K 1/16W
R718	1-218-965-11	s	RESISTOR, CHIP 10K 1/16W
R719	1-218-965-11	s	RESISTOR, CHIP 10K 1/16W
R720	1-218-965-11	s	RESISTOR, CHIP 10K 1/16W
R721	1-218-965-11	s	RESISTOR, CHIP 10K 1/16W
R722	1-218-965-11	s	RESISTOR, CHIP 10K 1/16W
R723	1-218-965-11	s	RESISTOR, CHIP 10K 1/16W
R731	1-218-990-11	s	RESISTOR,CHIP 0 1/16W (1005)
R734	1-218-990-11	s	RESISTOR,CHIP 0 1/16W (1005)
R736	1-218-965-11	s	RESISTOR, CHIP 10K 1/16W
R737	1-218-965-11	s	RESISTOR, CHIP 10K 1/16W
R738	1-218-939-11	s	RESISTOR, CHIP 68 1/16W (1005)
R739	1-218-989-11	s	RESISTOR,CHIP 1M 1/16W (1005)
R741	1-218-965-11	s	RESISTOR, CHIP 10K 1/16W
R743	1-218-953-11	s	RESISTOR, CHIP 1K 1/16W
R744	1-218-965-11	s	RESISTOR, CHIP 10K 1/16W
R748	1-218-965-11	s	RESISTOR, CHIP 10K 1/16W
R749	1-218-965-11	s	RESISTOR, CHIP 10K 1/16W
R750	1-218-990-11	s	RESISTOR,CHIP 0 1/16W (1005)
R752	1-218-990-11	s	RESISTOR,CHIP 0 1/16W (1005)
R753	1-218-990-11	s	RESISTOR,CHIP 0 1/16W (1005)
R754	1-218-990-11	s	RESISTOR,CHIP 0 1/16W (1005)
R755	1-218-990-11	s	RESISTOR,CHIP 0 1/16W (1005)
R756	1-218-937-11	s	RESISTOR, CHIP 47
R757	1-218-990-11	s	RESISTOR,CHIP 0 1/16W (1005)
R758	1-218-937-11	s	RESISTOR, CHIP 47
R759	1-218-937-11	s	RESISTOR, CHIP 47
R760	1-218-965-11	s	RESISTOR, CHIP 10K 1/16W
R761	1-218-965-11	s	RESISTOR, CHIP 10K 1/16W
R762	1-208-643-11	s	RESISTOR CHIP 22 1/16W (1005)
R763	1-208-643-11	s	RESISTOR CHIP 22 1/16W (1005)
R764	1-208-643-11	s	RESISTOR CHIP 22 1/16W (1005)
R801	1-208-707-11	s	RESISTOR,CHIP 10K 1/16W (1005)
R802	1-218-945-11	s	RESISTOR,CHIP 220 1/16W(1005)
R803	1-218-949-11	s	RESISTOR,CHIP 470 1/16W
R804	1-218-945-11	s	RESISTOR,CHIP 220 1/16W(1005)
R805	1-218-977-11	s	RESISTOR,CHIP 100K 1/16W(1005)
R806	1-218-965-11	s	RESISTOR, CHIP 10K 1/16W
R807	1-218-941-81	s	RESISTOR,CHIP 100,1/16W (1005)
R808	1-218-941-81	s	RESISTOR,CHIP 100,1/16W (1005)
R809	1-218-961-11	s	RESISTOR, CHIP 4.7K 1/16W
R810	1-218-941-81	s	RESISTOR,CHIP 100,1/16W (1005)
R811	1-218-941-81	s	RESISTOR,CHIP 100,1/16W (1005)
R812	1-218-961-11	s	RESISTOR, CHIP 4.7K 1/16W
R813	1-218-953-11	s	RESISTOR, CHIP 1K 1/16W
R815	1-208-643-11	s	RESISTOR CHIP 22 1/16W (1005)
R817	1-218-965-11	s	RESISTOR, CHIP 10K 1/16W
R818	1-218-941-81	s	RESISTOR,CHIP 100,1/16W (1005)
R821	1-218-965-11	s	RESISTOR, CHIP 10K 1/16W
R823	1-218-965-11	s	RESISTOR, CHIP 10K 1/16W

(C BOARD (FOR VPL-CX70))

Ref. No. or Q'ty	Part No.	SP	Description
R825	1-218-990-11	s	RESISTOR,CHIP 0 1/16W (1005)
R826	1-219-570-11	s	RESISTOR,CHIP 10M 1/16W
R827	1-218-965-11	s	RESISTOR, CHIP 10K 1/16W
R828	1-218-990-11	s	RESISTOR,CHIP 0 1/16W (1005)
R830	1-218-990-11	s	RESISTOR,CHIP 0 1/16W (1005)
R832	1-218-990-11	s	RESISTOR,CHIP 0 1/16W (1005)
R833	1-218-965-11	s	RESISTOR, CHIP 10K 1/16W
R837	1-218-945-11	s	RESISTOR,CHIP 220 1/16W(1005)
R838	1-218-957-11	s	RESISTOR,CHIP 2.2K 1/16W(1608)
R841	1-218-937-11	s	RESISTOR, CHIP 47
R842	1-218-937-11	s	RESISTOR, CHIP 47
R843	1-218-937-11	s	RESISTOR, CHIP 47
R845	1-218-990-11	s	RESISTOR,CHIP 0 1/16W (1005)
R900	1-218-965-11	s	RESISTOR, CHIP 10K 1/16W
R901	1-218-965-11	s	RESISTOR, CHIP 10K 1/16W
R902	1-218-937-11	s	RESISTOR, CHIP 47
R903	1-218-937-11	s	RESISTOR, CHIP 47
R904	1-218-937-11	s	RESISTOR, CHIP 47
R905	1-218-937-11	s	RESISTOR, CHIP 47
R906	1-218-937-11	s	RESISTOR, CHIP 47
R907	1-218-937-11	s	RESISTOR, CHIP 47
R909	1-218-990-11	s	RESISTOR,CHIP 0 1/16W (1005)
R911	1-218-990-11	s	RESISTOR,CHIP 0 1/16W (1005)
R912	1-218-937-11	s	RESISTOR, CHIP 47
R913	1-218-937-11	s	RESISTOR, CHIP 47
R914	1-218-937-11	s	RESISTOR, CHIP 47
R916	1-218-990-11	s	RESISTOR,CHIP 0 1/16W (1005)
R917	1-218-941-81	s	RESISTOR,CHIP 100,1/16W (1005)
R918	1-218-957-11	s	RESISTOR,CHIP 2.2K 1/16W(1608)
R919	1-218-965-11	s	RESISTOR, CHIP 10K 1/16W
R920	1-218-990-11	s	RESISTOR,CHIP 0 1/16W (1005)
R921	1-218-961-11	s	RESISTOR, CHIP 4.7K 1/16W
R922	1-218-953-11	s	RESISTOR, CHIP 1K 1/16W
R923	1-218-973-11	s	RESISTOR,CHIP 47K 1/16W (1005)
R924	1-218-961-11	s	RESISTOR, CHIP 4.7K 1/16W
R925	1-218-961-11	s	RESISTOR, CHIP 4.7K 1/16W
R926	1-218-953-11	s	RESISTOR, CHIP 1K 1/16W
R927	1-218-990-11	s	RESISTOR,CHIP 0 1/16W (1005)
R928	1-218-961-11	s	RESISTOR, CHIP 4.7K 1/16W
R929	1-218-961-11	s	RESISTOR, CHIP 4.7K 1/16W
R931	1-218-937-11	s	RESISTOR, CHIP 47
R932	1-218-937-11	s	RESISTOR, CHIP 47
R934	1-218-990-11	s	RESISTOR,CHIP 0 1/16W (1005)
R935	1-218-937-11	s	RESISTOR, CHIP 47
R936	1-218-937-11	s	RESISTOR, CHIP 47
R937	1-218-937-11	s	RESISTOR, CHIP 47
R938	1-218-937-11	s	RESISTOR, CHIP 47
R939	1-218-937-11	s	RESISTOR, CHIP 47
R940	1-218-937-11	s	RESISTOR, CHIP 47
R941	1-218-937-11	s	RESISTOR, CHIP 47
R942	1-218-937-11	s	RESISTOR, CHIP 47
R943	1-218-937-11	s	RESISTOR, CHIP 47
R944	1-218-937-11	s	RESISTOR, CHIP 47
R945	1-208-643-11	s	RESISTOR CHIP 22 1/16W (1005)
R946	1-208-643-11	s	RESISTOR CHIP 22 1/16W (1005)
R947	1-218-990-11	s	RESISTOR,CHIP 0 1/16W (1005)
R948	1-218-990-11	s	RESISTOR,CHIP 0 1/16W (1005)
R1000	1-208-695-11	s	RESISTOR CHIP 3.3K 1/16W(1005)
R1001	1-208-683-11	s	RESISTOR CHIP 1K 1/16W (1005)

(C BOARD (FOR VPL-CX70))

Ref. No. or Q'ty	Part No.	SP Description
R1002	1-208-711-11	s RESISTOR CHIP 15K 1/16W (1005)
R1003	1-208-711-11	s RESISTOR CHIP 15K 1/16W (1005)
R1004	1-218-979-11	s RESISTOR, CHIP 150K
R1006	1-218-965-11	s RESISTOR, CHIP 10K 1/16W
R1007	1-218-965-11	s RESISTOR, CHIP 10K 1/16W
R1008	1-218-965-11	s RESISTOR, CHIP 10K 1/16W
R1009	1-218-965-11	s RESISTOR, CHIP 10K 1/16W
R1010	1-218-941-81	s RESISTOR,CHIP 100,1/16W (1005)
R1011	1-218-957-11	s RESISTOR,CHIP 2.2K 1/16W(1608)
R1012	1-218-957-11	s RESISTOR,CHIP 2.2K 1/16W(1608)
R1013	1-208-635-11	s RESISTOR CHIP 10 1/16W (1005)
R1014	1-208-635-11	s RESISTOR CHIP 10 1/16W (1005)
R1017	1-218-937-11	s RESISTOR, CHIP 47
R1018	1-218-990-11	s RESISTOR,CHIP 0 1/16W (1005)
R1019	1-218-990-11	s RESISTOR,CHIP 0 1/16W (1005)
R1100	1-218-965-11	s RESISTOR, CHIP 10K 1/16W
R1101	1-218-965-11	s RESISTOR, CHIP 10K 1/16W
R1103	1-218-965-11	s RESISTOR, CHIP 10K 1/16W
R1104	1-218-965-11	s RESISTOR, CHIP 10K 1/16W
R1105	1-218-941-81	s RESISTOR,CHIP 100,1/16W (1005)
R1106	1-218-957-11	s RESISTOR,CHIP 2.2K 1/16W(1608)
R1107	1-218-957-11	s RESISTOR,CHIP 2.2K 1/16W(1608)
R1108	1-208-635-11	s RESISTOR CHIP 10 1/16W (1005)
R1109	1-208-635-11	s RESISTOR CHIP 10 1/16W (1005)
R1110	1-218-990-11	s RESISTOR,CHIP 0 1/16W (1005)
R1111	1-218-990-11	s RESISTOR,CHIP 0 1/16W (1005)
R1112	1-218-937-11	s RESISTOR, CHIP 47
R1201	1-218-965-11	s RESISTOR, CHIP 10K 1/16W
R1202	1-218-965-11	s RESISTOR, CHIP 10K 1/16W
R1204	1-218-965-11	s RESISTOR, CHIP 10K 1/16W
R1205	1-218-941-81	s RESISTOR,CHIP 100,1/16W (1005)
R1206	1-218-957-11	s RESISTOR,CHIP 2.2K 1/16W(1608)
R1207	1-218-957-11	s RESISTOR,CHIP 2.2K 1/16W(1608)
R1208	1-208-635-11	s RESISTOR CHIP 10 1/16W (1005)
R1209	1-208-635-11	s RESISTOR CHIP 10 1/16W (1005)
R1210	1-218-990-11	s RESISTOR,CHIP 0 1/16W (1005)
R1211	1-218-990-11	s RESISTOR,CHIP 0 1/16W (1005)
R1212	1-218-937-11	s RESISTOR, CHIP 47
R1301	1-218-937-11	s RESISTOR, CHIP 47
R1302	1-218-937-11	s RESISTOR, CHIP 47
R1303	1-218-937-11	s RESISTOR, CHIP 47
R1305	1-218-937-11	s RESISTOR, CHIP 47
R1306	1-218-937-11	s RESISTOR, CHIP 47
R1307	1-218-965-11	s RESISTOR, CHIP 10K 1/16W
R1308	1-218-937-11	s RESISTOR, CHIP 47
R1309	1-218-937-11	s RESISTOR, CHIP 47
R1310	1-218-941-81	s RESISTOR,CHIP 100,1/16W (1005)
R1311	1-218-941-81	s RESISTOR,CHIP 100,1/16W (1005)
R1312	1-218-941-81	s RESISTOR,CHIP 100,1/16W (1005)
R1313	1-218-955-11	s RESISTOR, CHIP 1.5K
R1314	1-218-965-11	s RESISTOR, CHIP 10K 1/16W
R1315	1-218-973-11	s RESISTOR,CHIP 47K 1/16W (1005)
R1316	1-218-965-11	s RESISTOR, CHIP 10K 1/16W
R1317	1-218-973-11	s RESISTOR,CHIP 47K 1/16W (1005)
R1318	1-218-973-11	s RESISTOR,CHIP 47K 1/16W (1005)
R1319	1-218-973-11	s RESISTOR,CHIP 47K 1/16W (1005)
R1320	1-218-953-11	s RESISTOR, CHIP 1K 1/16W
R1321	1-218-973-11	s RESISTOR,CHIP 47K 1/16W (1005)
R1322	1-218-973-11	s RESISTOR,CHIP 47K 1/16W (1005)

(C BOARD (FOR VPL-CX70))

Ref. No. or Q'ty	Part No.	SP Description
R1324	1-218-973-11	s RESISTOR,CHIP 47K 1/16W (1005)
R1325	1-218-973-11	s RESISTOR,CHIP 47K 1/16W (1005)
R1326	1-218-973-11	s RESISTOR,CHIP 47K 1/16W (1005)
R1327	1-218-973-11	s RESISTOR,CHIP 47K 1/16W (1005)
R1328	1-218-957-11	s RESISTOR,CHIP 2.2K 1/16W(1608)
R1329	1-218-973-11	s RESISTOR,CHIP 47K 1/16W (1005)
R1330	1-218-965-11	s RESISTOR, CHIP 10K 1/16W
R1331	1-218-989-11	s RESISTOR,CHIP 1M 1/16W (1005)
R1400	1-218-965-11	s RESISTOR, CHIP 10K 1/16W
R1401	1-218-965-11	s RESISTOR, CHIP 10K 1/16W
R1402	1-218-965-11	s RESISTOR, CHIP 10K 1/16W
R1403	1-218-965-11	s RESISTOR, CHIP 10K 1/16W
R1404	1-208-719-11	s RESISTOR CHIP 33K 1/16W (1005)
R1405	1-208-719-11	s RESISTOR CHIP 33K 1/16W (1005)
R1406	1-208-719-11	s RESISTOR CHIP 33K 1/16W (1005)
R1407	1-208-719-11	s RESISTOR CHIP 33K 1/16W (1005)
R1408	1-208-719-11	s RESISTOR CHIP 33K 1/16W (1005)
R1409	1-208-683-11	s RESISTOR CHIP 1K 1/16W (1005)
R1410	1-208-699-11	s RESISTOR,CHIP 4.7K 1/16W(1005)
R1411	1-208-707-11	s RESISTOR,CHIP 10K 1/16W (1005)
R1412	1-208-719-11	s RESISTOR CHIP 33K 1/16W (1005)
R1413	1-208-683-11	s RESISTOR CHIP 1K 1/16W (1005)
R1414	1-208-699-11	s RESISTOR,CHIP 4.7K 1/16W(1005)
R1415	1-208-719-11	s RESISTOR CHIP 33K 1/16W (1005)
R1416	1-208-687-11	s RESISTOR CHIP 1.5K 1/16W (1005)
R1417	1-208-699-11	s RESISTOR,CHIP 4.7K 1/16W(1005)
R1418	1-208-719-11	s RESISTOR CHIP 33K 1/16W (1005)
R1419	1-208-683-11	s RESISTOR CHIP 1K 1/16W (1005)
R1420	1-208-699-11	s RESISTOR,CHIP 4.7K 1/16W(1005)
R1421	1-208-707-11	s RESISTOR,CHIP 10K 1/16W (1005)
R1422	1-208-707-11	s RESISTOR,CHIP 10K 1/16W (1005)
R1423	1-208-707-11	s RESISTOR,CHIP 10K 1/16W (1005)
R1424	1-218-990-11	s RESISTOR,CHIP 0 1/16W (1005)
R1425	1-208-947-11	s RESISTOR CHIP 330K 1/16W(1005)
R1426	1-218-965-11	s RESISTOR, CHIP 10K 1/16W
R1427	1-208-947-11	s RESISTOR CHIP 330K 1/16W(1005)
R1428	1-208-947-11	s RESISTOR CHIP 330K 1/16W(1005)
R1429	1-218-941-81	s RESISTOR,CHIP 100,1/16W (1005)
R1430	1-218-969-11	s RESISTOR,CHIP 22K 1/16W (1608)
R1432	1-218-969-11	s RESISTOR,CHIP 22K 1/16W (1608)
R1433	1-218-969-11	s RESISTOR,CHIP 22K 1/16W (1608)
R1434	1-218-969-11	s RESISTOR,CHIP 22K 1/16W (1608)
R1435	1-218-969-11	s RESISTOR,CHIP 22K 1/16W (1608)
R1436	1-218-965-11	s RESISTOR, CHIP 10K 1/16W
RB200	1-234-372-11	s RES, NETWORK 100X4 (1005)
RB201	1-234-372-11	s RES, NETWORK 100X4 (1005)
RB202	1-234-372-11	s RES, NETWORK 100X4 (1005)
RB203	1-234-372-11	s RES, NETWORK 100X4 (1005)
RB700	1-234-372-11	s RES, NETWORK 100X4 (1005)
RB701	1-234-372-11	s RES, NETWORK 100X4 (1005)
RB702	1-234-372-11	s RES, NETWORK 100X4 (1005)
RB703	1-234-372-11	s RES, NETWORK 100X4 (1005)
RB704	1-234-372-11	s RES, NETWORK 100X4 (1005)
RB705	1-234-371-11	s RES, NETWORK 47X4 (1005)
RB706	1-234-372-11	s RES, NETWORK 100X4 (1005)
RB707	1-234-372-11	s RES, NETWORK 100X4 (1005)
RB708	1-234-372-11	s RES, NETWORK 100X4 (1005)
RB709	1-234-372-11	s RES, NETWORK 100X4 (1005)
RB710	1-234-372-11	s RES, NETWORK 100X4 (1005)

(C BOARD (FOR VPL-CX70))

Ref. No. or Q'ty	Part No.	SP	Description	
RB711	1-234-371-11	s	RES, NETWORK 47X4	(1005)
RB712	1-234-371-11	s	RES, NETWORK 47X4	(1005)
RB713	1-234-371-11	s	RES, NETWORK 47X4	(1005)
RB714	1-234-371-11	s	RES, NETWORK 47X4	(1005)
RB715	1-234-371-11	s	RES, NETWORK 47X4	(1005)
RB900	1-234-371-11	s	RES, NETWORK 47X4	(1005)
RB901	1-234-371-11	s	RES, NETWORK 47X4	(1005)
RB902	1-234-371-11	s	RES, NETWORK 47X4	(1005)
RB903	1-234-371-11	s	RES, NETWORK 47X4	(1005)
RB904	1-234-371-11	s	RES, NETWORK 47X4	(1005)
RB905	1-234-371-11	s	RES, NETWORK 47X4	(1005)
RB906	1-234-371-11	s	RES, NETWORK 47X4	(1005)
RB907	1-234-371-11	s	RES, NETWORK 47X4	(1005)
RB908	1-234-371-11	s	RES, NETWORK 47X4	(1005)
RB909	1-234-371-11	s	RES, NETWORK 47X4	(1005)
RB910	1-234-371-11	s	RES, NETWORK 47X4	(1005)
RB912	1-234-371-11	s	RES, NETWORK 47X4	(1005)
RB913	1-234-371-11	s	RES, NETWORK 47X4	(1005)
RB914	1-234-371-11	s	RES, NETWORK 47X4	(1005)
RB915	1-234-371-11	s	RES, NETWORK 47X4	(1005)
RB1000	1-234-370-11	s	RES, NETWORK 22X4	(1005)
RB1001	1-234-370-11	s	RES, NETWORK 22X4	(1005)
RB1002	1-234-370-11	s	RES, NETWORK 22X4	(1005)
RB1100	1-234-370-11	s	RES, NETWORK 22X4	(1005)
RB1101	1-234-370-11	s	RES, NETWORK 22X4	(1005)
RB1102	1-234-370-11	s	RES, NETWORK 22X4	(1005)
RB1200	1-234-370-11	s	RES, NETWORK 22X4	(1005)
RB1201	1-234-370-11	s	RES, NETWORK 22X4	(1005)
RB1202	1-234-370-11	s	RES, NETWORK 22X4	(1005)
RB1301	1-234-371-11	s	RES, NETWORK 47X4	(1005)
RB1302	1-234-371-11	s	RES, NETWORK 47X4	(1005)
RB1303	1-234-371-11	s	RES, NETWORK 47X4	(1005)
RB1304	1-234-371-11	s	RES, NETWORK 47X4	(1005)
RB1305	1-234-371-11	s	RES, NETWORK 47X4	(1005)
RB1306	1-234-371-11	s	RES, NETWORK 47X4	(1005)
RB1307	1-234-371-11	s	RES, NETWORK 47X4	(1005)
RB1308	1-234-371-11	s	RES, NETWORK 47X4	(1005)
S900	1-771-337-21	s	SWITCH, SLIDE	
TH300	1-803-353-21	s	THERMISTOR, POSITIVE	
TH301	1-771-845-11	s	THERMISTOR, POSITIVE	
TH1000	1-803-382-11	s	THERMISTOR (10K)	
TP100	1-535-757-11	s	CHIP, CHECKER (CONNECTOR)	
TP200	1-535-757-11	s	CHIP, CHECKER (CONNECTOR)	
TP700	1-535-757-11	s	CHIP, CHECKER (CONNECTOR)	
TP1202	1-535-757-11	s	CHIP, CHECKER (CONNECTOR)	
X200	1-813-326-21	s	VIBRATOR, CRYSTAL	
X600	1-813-124-21	s	VIBRATOR, CERAMIC	
X700	1-795-756-11	s	VIBRATOR, CRYSTAL	
X800	1-813-326-21	s	VIBRATOR, CRYSTAL	
X801	1-813-326-21	s	VIBRATOR, CRYSTAL	
X1300	1-795-495-21	s	VIBRATOR, CERAMIC	

C BOARD (FOR VPL-CX75)

Ref. No. or Q'ty	Part No.	SP	Description
1pc	A-1054-271-A	s	MOUNTED CIRCUIT BOARD, C
1pc	2-187-695-01	s	GASKET (USB)
C100	1-115-339-11	s	CAPACITOR, CERAMIC 0.1MF/50V
C101	1-128-992-11	s	CAPACITOR ELECT 47MF 25V
C102	1-115-339-11	s	CAPACITOR, CERAMIC 0.1MF/50V
C103	1-128-992-11	s	CAPACITOR ELECT 47MF 25V
C104	1-125-777-11	s	CAPACITOR CERAMIC 0.1MF/10V
C105	1-126-205-11	s	CAPACITOR, ELECT 47M/6.3
C108	1-125-777-11	s	CAPACITOR CERAMIC 0.1MF/10V
C109	1-126-205-11	s	CAPACITOR, ELECT 47M/6.3
C110	1-164-874-11	s	CAPACITOR, CHIP CERAMIC 100PF
C111	1-125-777-11	s	CAPACITOR CERAMIC 0.1MF/10V
C112	1-164-874-11	s	CAPACITOR, CHIP CERAMIC 100PF
C113	1-125-777-11	s	CAPACITOR CERAMIC 0.1MF/10V
C114	1-126-205-11	s	CAPACITOR, ELECT 47M/6.3
C116	1-128-992-11	s	CAPACITOR ELECT 47MF 25V
C117	1-125-777-11	s	CAPACITOR CERAMIC 0.1MF/10V
C118	1-125-777-11	s	CAPACITOR CERAMIC 0.1MF/10V
C119	1-165-989-11	s	CAPACITOR, CERAMIC 10MF (2012)
C120	1-131-998-11	s	CAP, SOLID ELECT 82MF 6.3 V
C122	1-125-777-11	s	CAPACITOR CERAMIC 0.1MF/10V
C123	1-125-777-11	s	CAPACITOR CERAMIC 0.1MF/10V
C200	1-125-777-11	s	CAPACITOR CERAMIC 0.1MF/10V
C201	1-125-777-11	s	CAPACITOR CERAMIC 0.1MF/10V
C202	1-125-777-11	s	CAPACITOR CERAMIC 0.1MF/10V
C203	1-125-777-11	s	CAPACITOR CERAMIC 0.1MF/10V
C204	1-125-777-11	s	CAPACITOR CERAMIC 0.1MF/10V
C205	1-125-777-11	s	CAPACITOR CERAMIC 0.1MF/10V
C206	1-125-777-11	s	CAPACITOR CERAMIC 0.1MF/10V
C207	1-125-777-11	s	CAPACITOR CERAMIC 0.1MF/10V
C208	1-125-777-11	s	CAPACITOR CERAMIC 0.1MF/10V
C209	1-125-777-11	s	CAPACITOR CERAMIC 0.1MF/10V
C210	1-164-943-11	s	CAPACITOR, CHIP CERAMIC 0.01MF
C213	1-125-777-11	s	CAPACITOR CERAMIC 0.1MF/10V
C214	1-165-989-11	s	CAPACITOR, CERAMIC 10MF (2012)
C215	1-125-777-11	s	CAPACITOR CERAMIC 0.1MF/10V
C216	1-125-777-11	s	CAPACITOR CERAMIC 0.1MF/10V
C217	1-125-777-11	s	CAPACITOR CERAMIC 0.1MF/10V
C218	1-125-777-11	s	CAPACITOR CERAMIC 0.1MF/10V
C221	1-125-777-11	s	CAPACITOR CERAMIC 0.1MF/10V
C222	1-125-777-11	s	CAPACITOR CERAMIC 0.1MF/10V
C225	1-125-777-11	s	CAPACITOR CERAMIC 0.1MF/10V
C226	1-125-777-11	s	CAPACITOR CERAMIC 0.1MF/10V
C227	1-125-777-11	s	CAPACITOR CERAMIC 0.1MF/10V
C228	1-125-777-11	s	CAPACITOR CERAMIC 0.1MF/10V
C229	1-164-850-11	s	CAPACITOR, CHIP CERAMIC 10PF/50
C230	1-125-777-11	s	CAPACITOR CERAMIC 0.1MF/10V
C231	1-164-850-11	s	CAPACITOR, CHIP CERAMIC 10PF/50
C232	1-164-943-11	s	CAPACITOR, CHIP CERAMIC 0.01MF
C233	1-125-777-11	s	CAPACITOR CERAMIC 0.1MF/10V
C236	1-125-777-11	s	CAPACITOR CERAMIC 0.1MF/10V
C239	1-125-777-11	s	CAPACITOR CERAMIC 0.1MF/10V
C246	1-125-777-11	s	CAPACITOR CERAMIC 0.1MF/10V
C256	1-125-777-11	s	CAPACITOR CERAMIC 0.1MF/10V
C258	1-125-777-11	s	CAPACITOR CERAMIC 0.1MF/10V
C301	1-125-777-11	s	CAPACITOR CERAMIC 0.1MF/10V
C302	1-115-339-11	s	CAPACITOR, CERAMIC 0.1MF/50V
C303	1-125-777-11	s	CAPACITOR CERAMIC 0.1MF/10V

(C BOARD (FOR VPL-CX75))

Ref. No. or Q'ty	Part No.	SP Description
C304	1-128-992-11	s CAPACITOR ELECT 47MF 25V
C305	1-115-339-11	s CAPACITOR, CERAMIC 0.1MF/50V
C306	1-115-339-11	s CAPACITOR, CERAMIC 0.1MF/50V
C307	1-128-992-11	s CAPACITOR ELECT 47MF 25V
C308	1-115-339-11	s CAPACITOR, CERAMIC 0.1MF/50V
C309	1-125-777-11	s CAPACITOR CERAMIC 0.1MF/10V
C310	1-125-777-11	s CAPACITOR CERAMIC 0.1MF/10V
C311	1-125-777-11	s CAPACITOR CERAMIC 0.1MF/10V
C312	1-125-777-11	s CAPACITOR CERAMIC 0.1MF/10V
C313	1-125-777-11	s CAPACITOR CERAMIC 0.1MF/10V
C314	1-115-339-11	s CAPACITOR, CERAMIC 0.1MF/50V
C315	1-125-777-11	s CAPACITOR CERAMIC 0.1MF/10V
C316	1-115-339-11	s CAPACITOR, CERAMIC 0.1MF/50V
C317	1-115-339-11	s CAPACITOR, CERAMIC 0.1MF/50V
C318	1-125-777-11	s CAPACITOR CERAMIC 0.1MF/10V
C319	1-125-777-11	s CAPACITOR CERAMIC 0.1MF/10V
C320	1-125-777-11	s CAPACITOR CERAMIC 0.1MF/10V
C321	1-125-777-11	s CAPACITOR CERAMIC 0.1MF/10V
C322	1-125-777-11	s CAPACITOR CERAMIC 0.1MF/10V
C400	1-115-339-11	s CAPACITOR, CERAMIC 0.1MF/50V
C401	1-125-777-11	s CAPACITOR CERAMIC 0.1MF/10V
C402	1-125-777-11	s CAPACITOR CERAMIC 0.1MF/10V
C403	1-128-992-11	s CAPACITOR ELECT 47MF 25V
C404	1-125-777-11	s CAPACITOR CERAMIC 0.1MF/10V
C405	1-125-777-11	s CAPACITOR CERAMIC 0.1MF/10V
C406	1-125-777-11	s CAPACITOR CERAMIC 0.1MF/10V
C407	1-125-777-11	s CAPACITOR CERAMIC 0.1MF/10V
C408	1-125-777-11	s CAPACITOR CERAMIC 0.1MF/10V
C409	1-165-989-11	s CAPACITOR, CERAMIC 10MF (2012)
C410	1-125-777-11	s CAPACITOR CERAMIC 0.1MF/10V
C411	1-165-989-11	s CAPACITOR, CERAMIC 10MF (2012)
C412	1-164-882-11	s CAPACITOR, CERAMIC 220PF/16V CH
C413	1-165-908-11	s CAP, CERAMIC 1000000PF B 1608
C500	1-164-943-11	s CAPACITOR, CHIP CERAMIC 0.01MF
C501	1-164-943-11	s CAPACITOR, CHIP CERAMIC 0.01MF
C502	1-164-943-11	s CAPACITOR, CHIP CERAMIC 0.01MF
C503	1-117-720-11	s CAPACITOR, CERAMIC 4.7MF/10V F
C504	1-119-667-11	s CAPACITOR CERAMIC 22MF/10V(F)
C505	1-126-205-11	s CAPACITOR, ELECT 47M/6.3
C506	1-126-205-11	s CAPACITOR, ELECT 47M/6.3
C507	1-126-205-11	s CAPACITOR, ELECT 47M/6.3
C508	1-125-777-11	s CAPACITOR CERAMIC 0.1MF/10V
C509	1-125-777-11	s CAPACITOR CERAMIC 0.1MF/10V
C600	1-125-777-11	s CAPACITOR CERAMIC 0.1MF/10V
C601	1-126-205-11	s CAPACITOR, ELECT 47M/6.3
C602	1-117-720-11	s CAPACITOR, CERAMIC 4.7MF/10V F
C603	1-117-720-11	s CAPACITOR, CERAMIC 4.7MF/10V F
C604	1-125-777-11	s CAPACITOR CERAMIC 0.1MF/10V
C605	1-125-777-11	s CAPACITOR CERAMIC 0.1MF/10V
C606	1-125-777-11	s CAPACITOR CERAMIC 0.1MF/10V
C607	1-125-777-11	s CAPACITOR CERAMIC 0.1MF/10V
C608	1-125-777-11	s CAPACITOR CERAMIC 0.1MF/10V
C609	1-117-720-11	s CAPACITOR, CERAMIC 4.7MF/10V F
C610	1-164-937-11	s CAPACITOR, CHIP CERAMIC 1000PF
C611	1-126-205-11	s CAPACITOR, ELECT 47M/6.3
C612	1-125-891-11	s CAPACITOR CERAMIC 0.47MF/10V
C613	1-125-777-11	s CAPACITOR CERAMIC 0.1MF/10V
C614	1-137-987-81	s CAPACITOR, C. CERAMIC 0.068MF
C615	1-117-720-11	s CAPACITOR, CERAMIC 4.7MF/10V F

(C BOARD (FOR VPL-CX75))

Ref. No. or Q'ty	Part No.	SP Description
C616	1-117-720-11	s CAPACITOR, CERAMIC 4.7MF/10V F
C617	1-165-989-11	s CAPACITOR, CERAMIC 10MF (2012)
C618	1-125-777-11	s CAPACITOR CERAMIC 0.1MF/10V
C619	1-115-467-11	s CAPACITOR CERAMIC 0.22MF/10V B
C620	1-165-989-11	s CAPACITOR, CERAMIC 10MF (2012)
C621	1-165-989-11	s CAPACITOR, CERAMIC 10MF (2012)
C622	1-164-943-11	s CAPACITOR, CHIP CERAMIC 0.01MF
C623	1-125-777-11	s CAPACITOR CERAMIC 0.1MF/10V
C624	1-164-874-11	s CAPACITOR, CHIP CERAMIC 100PF
C625	1-164-882-11	s CAPACITOR, CERAMIC 220PF/16V CH
C626	1-165-908-11	s CAP, CERAMIC 1000000PF B 1608
C627	1-125-777-11	s CAPACITOR CERAMIC 0.1MF/10V
C628	1-165-908-11	s CAP, CERAMIC 1000000PF B 1608
C629	1-164-943-11	s CAPACITOR, CHIP CERAMIC 0.01MF
C630	1-125-777-11	s CAPACITOR CERAMIC 0.1MF/10V
C631	1-164-943-11	s CAPACITOR, CHIP CERAMIC 0.01MF
C635	1-125-777-11	s CAPACITOR CERAMIC 0.1MF/10V
C636	1-125-777-11	s CAPACITOR CERAMIC 0.1MF/10V
C700	1-125-777-11	s CAPACITOR CERAMIC 0.1MF/10V
C701	1-115-467-11	s CAPACITOR CERAMIC 0.22MF/10V B
C702	1-115-467-11	s CAPACITOR CERAMIC 0.22MF/10V B
C704	1-115-467-11	s CAPACITOR CERAMIC 0.22MF/10V B
C705	1-126-205-11	s CAPACITOR, ELECT 47M/6.3
C706	1-165-989-11	s CAPACITOR, CERAMIC 10MF (2012)
C709	1-126-205-11	s CAPACITOR, ELECT 47M/6.3
C711	1-119-923-11	s CAPACITOR, CHIP CERAMIC 0.047MF
C712	1-164-937-11	s CAPACITOR, CHIP CERAMIC 1000PF
C714	1-135-995-91	s CAP, CHIP CERAMIC 390000PF B 1608
C715	1-165-989-11	s CAPACITOR, CERAMIC 10MF (2012)
C716	1-117-446-11	s CAPACITOR, CERAMIC 3900PF 16V
C717	1-119-923-11	s CAPACITOR, CHIP CERAMIC 0.047MF
C719	1-119-923-11	s CAPACITOR, CHIP CERAMIC 0.047MF
C720	1-126-205-11	s CAPACITOR, ELECT 47M/6.3
C724	1-125-777-11	s CAPACITOR CERAMIC 0.1MF/10V
C727	1-125-777-11	s CAPACITOR CERAMIC 0.1MF/10V
C728	1-125-777-11	s CAPACITOR CERAMIC 0.1MF/10V
C729	1-125-777-11	s CAPACITOR CERAMIC 0.1MF/10V
C730	1-125-777-11	s CAPACITOR CERAMIC 0.1MF/10V
C731	1-125-777-11	s CAPACITOR CERAMIC 0.1MF/10V
C732	1-125-777-11	s CAPACITOR CERAMIC 0.1MF/10V
C735	1-125-777-11	s CAPACITOR CERAMIC 0.1MF/10V
C736	1-125-777-11	s CAPACITOR CERAMIC 0.1MF/10V
C737	1-125-777-11	s CAPACITOR CERAMIC 0.1MF/10V
C738	1-125-777-11	s CAPACITOR CERAMIC 0.1MF/10V
C739	1-125-777-11	s CAPACITOR CERAMIC 0.1MF/10V
C740	1-125-777-11	s CAPACITOR CERAMIC 0.1MF/10V
C741	1-125-777-11	s CAPACITOR CERAMIC 0.1MF/10V
C744	1-125-777-11	s CAPACITOR CERAMIC 0.1MF/10V
C746	1-126-205-11	s CAPACITOR, ELECT 47M/6.3
C748	1-165-989-11	s CAPACITOR, CERAMIC 10MF (2012)
C750	1-125-777-11	s CAPACITOR CERAMIC 0.1MF/10V
C751	1-165-989-11	s CAPACITOR, CERAMIC 10MF (2012)
C753	1-125-777-11	s CAPACITOR CERAMIC 0.1MF/10V
C754	1-125-777-11	s CAPACITOR CERAMIC 0.1MF/10V
C759	1-125-777-11	s CAPACITOR CERAMIC 0.1MF/10V
C760	1-125-777-11	s CAPACITOR CERAMIC 0.1MF/10V
C761	1-164-854-11	s CAPACITOR, CHIP CERAMIC 15PF/50
C762	1-164-854-11	s CAPACITOR, CHIP CERAMIC 15PF/50
C763	1-125-777-11	s CAPACITOR CERAMIC 0.1MF/10V

(C BOARD (FOR VPL-CX75))

Ref. No. or Q'ty	Part No.	SP	Description
C844	1-165-989-11	s	CAPACITOR, CERAMIC 10MF (2012)
C845	1-165-989-11	s	CAPACITOR, CERAMIC 10MF (2012)
C846	1-125-777-11	s	CAPACITOR CERAMIC 0.1MF/10V
C847	1-125-777-11	s	CAPACITOR CERAMIC 0.1MF/10V
C848	1-125-777-11	s	CAPACITOR CERAMIC 0.1MF/10V
C849	1-125-777-11	s	CAPACITOR CERAMIC 0.1MF/10V
C850	1-125-777-11	s	CAPACITOR CERAMIC 0.1MF/10V
C851	1-125-777-11	s	CAPACITOR CERAMIC 0.1MF/10V
C852	1-125-777-11	s	CAPACITOR CERAMIC 0.1MF/10V
C853	1-125-777-11	s	CAPACITOR CERAMIC 0.1MF/10V
C854	1-125-777-11	s	CAPACITOR CERAMIC 0.1MF/10V
C855	1-125-777-11	s	CAPACITOR CERAMIC 0.1MF/10V
C856	1-125-777-11	s	CAPACITOR CERAMIC 0.1MF/10V
C900	1-125-777-11	s	CAPACITOR CERAMIC 0.1MF/10V
C901	1-164-943-11	s	CAPACITOR, CHIP CERAMIC 0.01MF
C902	1-125-777-11	s	CAPACITOR CERAMIC 0.1MF/10V
C903	1-125-777-11	s	CAPACITOR CERAMIC 0.1MF/10V
C904	1-125-777-11	s	CAPACITOR CERAMIC 0.1MF/10V
C905	1-125-777-11	s	CAPACITOR CERAMIC 0.1MF/10V
C906	1-125-777-11	s	CAPACITOR CERAMIC 0.1MF/10V
C907	1-125-777-11	s	CAPACITOR CERAMIC 0.1MF/10V
C909	1-125-777-11	s	CAPACITOR CERAMIC 0.1MF/10V
C910	1-125-777-11	s	CAPACITOR CERAMIC 0.1MF/10V
C911	1-125-777-11	s	CAPACITOR CERAMIC 0.1MF/10V
C912	1-125-777-11	s	CAPACITOR CERAMIC 0.1MF/10V
C913	1-125-777-11	s	CAPACITOR CERAMIC 0.1MF/10V
C914	1-125-777-11	s	CAPACITOR CERAMIC 0.1MF/10V
C915	1-125-777-11	s	CAPACITOR CERAMIC 0.1MF/10V
C916	1-125-777-11	s	CAPACITOR CERAMIC 0.1MF/10V
C917	1-125-777-11	s	CAPACITOR CERAMIC 0.1MF/10V
C918	1-125-777-11	s	CAPACITOR CERAMIC 0.1MF/10V
C919	1-125-777-11	s	CAPACITOR CERAMIC 0.1MF/10V
C920	1-126-205-11	s	CAPACITOR, ELECT 47M/6.3
C921	1-125-777-11	s	CAPACITOR CERAMIC 0.1MF/10V
C922	1-125-777-11	s	CAPACITOR CERAMIC 0.1MF/10V
C923	1-125-777-11	s	CAPACITOR CERAMIC 0.1MF/10V
C924	1-125-777-11	s	CAPACITOR CERAMIC 0.1MF/10V
C925	1-125-777-11	s	CAPACITOR CERAMIC 0.1MF/10V
C926	1-125-777-11	s	CAPACITOR CERAMIC 0.1MF/10V
C927	1-125-777-11	s	CAPACITOR CERAMIC 0.1MF/10V
C928	1-125-777-11	s	CAPACITOR CERAMIC 0.1MF/10V
C929	1-126-205-11	s	CAPACITOR, ELECT 47M/6.3
C930	1-125-777-11	s	CAPACITOR CERAMIC 0.1MF/10V
C931	1-126-205-11	s	CAPACITOR, ELECT 47M/6.3
C932	1-125-777-11	s	CAPACITOR CERAMIC 0.1MF/10V
C933	1-125-777-11	s	CAPACITOR CERAMIC 0.1MF/10V
C934	1-125-777-11	s	CAPACITOR CERAMIC 0.1MF/10V
C935	1-125-777-11	s	CAPACITOR CERAMIC 0.1MF/10V
C936	1-125-777-11	s	CAPACITOR CERAMIC 0.1MF/10V
C937	1-125-777-11	s	CAPACITOR CERAMIC 0.1MF/10V
C938	1-125-777-11	s	CAPACITOR CERAMIC 0.1MF/10V
C939	1-125-777-11	s	CAPACITOR CERAMIC 0.1MF/10V
C940	1-125-777-11	s	CAPACITOR CERAMIC 0.1MF/10V
C941	1-125-777-11	s	CAPACITOR CERAMIC 0.1MF/10V
C1000	1-125-777-11	s	CAPACITOR CERAMIC 0.1MF/10V
C1001	1-128-992-11	s	CAPACITOR ELECT 47MF 25V
C1002	1-126-205-11	s	CAPACITOR, ELECT 47M/6.3
C1003	1-125-777-11	s	CAPACITOR CERAMIC 0.1MF/10V
C1004	1-115-339-11	s	CAPACITOR CERAMIC 0.1MF/50V

(C BOARD (FOR VPL-CX75))

Ref. No. or Q'ty	Part No.	SP Description
C1005	1-115-339-11	s CAPACITOR, CERAMIC 0.1MF/50V
C1006	1-128-992-11	s CAPACITOR ELECT 47MF 25V
C1007	1-115-339-11	s CAPACITOR, CERAMIC 0.1MF/50V
C1008	1-115-339-11	s CAPACITOR, CERAMIC 0.1MF/50V
C1009	1-128-992-11	s CAPACITOR ELECT 47MF 25V
C1010	1-115-339-11	s CAPACITOR, CERAMIC 0.1MF/50V
C1011	1-115-339-11	s CAPACITOR, CERAMIC 0.1MF/50V
C1012	1-128-992-11	s CAPACITOR ELECT 47MF 25V
C1013	1-115-339-11	s CAPACITOR, CERAMIC 0.1MF/50V
C1014	1-128-992-11	s CAPACITOR ELECT 47MF 25V
C1015	1-115-339-11	s CAPACITOR, CERAMIC 0.1MF/50V
C1016	1-115-339-11	s CAPACITOR, CERAMIC 0.1MF/50V
C1017	1-128-992-11	s CAPACITOR ELECT 47MF 25V
C1018	1-115-339-11	s CAPACITOR, CERAMIC 0.1MF/50V
C1019	1-115-339-11	s CAPACITOR, CERAMIC 0.1MF/50V
C1100	1-126-205-11	s CAPACITOR, ELECT 47M/6.3
C1101	1-125-777-11	s CAPACITOR CERAMIC 0.1MF/10V
C1102	1-115-339-11	s CAPACITOR, CERAMIC 0.1MF/50V
C1103	1-128-992-11	s CAPACITOR ELECT 47MF 25V
C1104	1-115-339-11	s CAPACITOR, CERAMIC 0.1MF/50V
C1105	1-128-992-11	s CAPACITOR ELECT 47MF 25V
C1106	1-115-339-11	s CAPACITOR, CERAMIC 0.1MF/50V
C1107	1-115-339-11	s CAPACITOR, CERAMIC 0.1MF/50V
C1108	1-128-992-11	s CAPACITOR ELECT 47MF 25V
C1109	1-115-339-11	s CAPACITOR, CERAMIC 0.1MF/50V
C1110	1-115-339-11	s CAPACITOR, CERAMIC 0.1MF/50V
C1111	1-115-339-11	s CAPACITOR, CERAMIC 0.1MF/50V
C1112	1-128-992-11	s CAPACITOR ELECT 47MF 25V
C1113	1-115-339-11	s CAPACITOR, CERAMIC 0.1MF/50V
C1200	1-126-205-11	s CAPACITOR, ELECT 47M/6.3
C1201	1-125-777-11	s CAPACITOR CERAMIC 0.1MF/10V
C1202	1-115-339-11	s CAPACITOR, CERAMIC 0.1MF/50V
C1203	1-128-992-11	s CAPACITOR ELECT 47MF 25V
C1204	1-115-339-11	s CAPACITOR, CERAMIC 0.1MF/50V
C1205	1-128-992-11	s CAPACITOR ELECT 47MF 25V
C1206	1-115-339-11	s CAPACITOR, CERAMIC 0.1MF/50V
C1207	1-115-339-11	s CAPACITOR, CERAMIC 0.1MF/50V
C1208	1-128-992-11	s CAPACITOR ELECT 47MF 25V
C1209	1-115-339-11	s CAPACITOR, CERAMIC 0.1MF/50V
C1210	1-115-339-11	s CAPACITOR, CERAMIC 0.1MF/50V
C1211	1-128-992-11	s CAPACITOR ELECT 47MF 25V
C1212	1-115-339-11	s CAPACITOR, CERAMIC 0.1MF/50V
C1213	1-115-339-11	s CAPACITOR, CERAMIC 0.1MF/50V
C1214	1-164-842-11	s CAPACITOR CERAMIC 2PF/16V 1005
C1215	1-164-842-11	s CAPACITOR CERAMIC 2PF/16V 1005
C1300	1-125-777-11	s CAPACITOR CERAMIC 0.1MF/10V
C1304	1-125-777-11	s CAPACITOR CERAMIC 0.1MF/10V
C1306	1-125-777-11	s CAPACITOR CERAMIC 0.1MF/10V
C1307	1-125-777-11	s CAPACITOR CERAMIC 0.1MF/10V
C1308	1-128-992-11	s CAPACITOR ELECT 47MF 25V
C1309	1-125-777-11	s CAPACITOR CERAMIC 0.1MF/10V
C1310	1-125-777-11	s CAPACITOR CERAMIC 0.1MF/10V
C1311	1-165-989-11	s CAPACITOR, CERAMIC 10MF (2012)
C1313	1-125-777-11	s CAPACITOR CERAMIC 0.1MF/10V
C1314	1-164-934-11	s CAPACITOR, CERAMIC 330PF/50V B
C1315	1-164-934-11	s CAPACITOR, CERAMIC 330PF/50V B
C1400	1-125-777-11	s CAPACITOR CERAMIC 0.1MF/10V
C1401	1-126-205-11	s CAPACITOR, ELECT 47M/6.3
C1402	1-125-777-11	s CAPACITOR CERAMIC 0.1MF/10V

(C BOARD (FOR VPL-CX75))

Ref. No. or Q'ty	Part No.	SP Description
C1403	1-126-205-11	s CAPACITOR, ELECT 47M/6.3
C1404	1-115-339-11	s CAPACITOR, CERAMIC 0.1MF/50V
C1405	1-115-339-11	s CAPACITOR, CERAMIC 0.1MF/50V
C1406	1-115-339-11	s CAPACITOR, CERAMIC 0.1MF/50V
C1407	1-115-339-11	s CAPACITOR, CERAMIC 0.1MF/50V
C1408	1-128-992-11	s CAPACITOR ELECT 47MF 25V
C1409	1-128-992-11	s CAPACITOR ELECT 47MF 25V
C1410	1-128-992-11	s CAPACITOR ELECT 47MF 25V
C1411	1-128-992-11	s CAPACITOR ELECT 47MF 25V
C1412	1-115-339-11	s CAPACITOR, CERAMIC 0.1MF/50V
CN100	1-770-624-21	s PIN, CONNECTOR 7P
CN101	1-770-625-21	s PIN, CONNECTOR 8P
CN102	1-770-623-21	s PIN, CONNECTOR 6P
CN103	1-580-789-22	o PIN, CONNECTOR (SMD) 6P
CN104	1-770-624-21	s PIN, CONNECTOR 7P
CN105	1-770-621-21	s PIN, CONNECTOR 4P
CN106	1-764-643-21	o PIN, CONNECTOR (SMD) 11P
CN107	1-770-622-21	s PIN, CONNECTOR 5P
CN108	1-580-055-21	o PIN, CONNECTOR 2P
CN109	1-770-623-21	s PIN, CONNECTOR 6P
CN200	1-778-965-21	s PIN, CONNECTOR (PC BOARD) 12P
CN300	1-770-625-21	s PIN, CONNECTOR 8P
CN301	1-770-622-21	s PIN, CONNECTOR 5P
CN302	1-770-624-21	s PIN, CONNECTOR 7P
CN400	1-580-055-21	o PIN, CONNECTOR 2P
CN500	1-784-828-11	s CONNECTOR, D SUB
CN502	1-770-626-21	s PIN, CONNECTOR (L TYPE) 9P
CN900	1-779-884-11	s PLUG, CONNECTOR 4P
CN1000	1-794-823-11	s CONNECTOR (ZIF), FPC/FFC 32P
CN1100	1-794-823-11	s CONNECTOR (ZIF), FPC/FFC 32P
CN1200	1-794-823-11	s CONNECTOR (ZIF), FPC/FFC 32P
CN1300	1-785-306-21	o CONNECTOR, BOARD TO BOARD
CN1302	1-784-010-11	o CONNECTOR, USB (B)
CN1400	1-695-223-21	o PIN, CONNECTOR (SMD) 10P
CN1401	1-580-056-21	s PIN, CONNECTOR 3P
CN1402	1-580-056-21	s PIN, CONNECTOR 3P
CN1403	1-580-056-21	s PIN, CONNECTOR 3P
CN1405	1-580-056-21	s PIN, CONNECTOR 3P
D100	8-719-157-94	s DIODE RD3.3SB
D101	8-719-036-94	s DIODE RD5.6SB-T1
D102	8-719-036-94	s DIODE RD5.6SB-T1
D103	8-719-036-94	s DIODE RD5.6SB-T1
D200	8-719-157-94	s DIODE RD3.3SB
D201	8-719-059-53	s DIODE MA3J14700LSO
D202	8-719-157-94	s DIODE RD3.3SB
D203	8-719-055-30	s DIODE D1FS4A-TA
D204	8-719-055-30	s DIODE D1FS4A-TA
D205	8-719-024-77	s DIODE HN1D03FU-TE85L
D206	8-719-059-53	s DIODE MA3J14700LSO
D300	8-719-036-94	s DIODE RD5.6SB-T1
D301	8-719-036-94	s DIODE RD5.6SB-T1
D302	8-719-036-94	s DIODE RD5.6SB-T1
D303	8-719-036-94	s DIODE RD5.6SB-T1
D304	8-719-036-94	s DIODE RD5.6SB-T1
D305	8-719-036-94	s DIODE RD5.6SB-T1
D306	8-719-157-94	s DIODE RD3.3SB
D501	8-719-059-53	s DIODE MA3J14700LSO
D502	8-719-059-53	s DIODE MA3J14700LSO

(C BOARD (FOR VPL-CX75))

Ref. No. or Q'ty	Part No.	SP	Description
D503	8-719-059-53	s	DIODE MA3J14700LS0
D504	8-719-024-77	s	DIODE HN1D03FU-TE85L
D505	8-719-941-86	s	DIODE DAN202U
D506	8-719-036-94	s	DIODE RD5.6SB-T1
D507	8-719-036-94	s	DIODE RD5.6SB-T1
D514	6-500-331-01	s	DIODE RD3.9UM-T1B
D600	8-719-988-61	s	DIODE 1SS355TE-17
D601	8-719-988-61	s	DIODE 1SS355TE-17
D1303	8-719-036-94	s	DIODE RD5.6SB-T1
D1304	8-719-988-61	s	DIODE 1SS355TE-17
D1305	8-719-058-24	s	DIODE RB501V-40TE17
D1400	8-719-988-61	s	DIODE 1SS355TE-17
D1401	8-719-988-61	s	DIODE 1SS355TE-17
D1402	8-719-988-61	s	DIODE 1SS355TE-17
D1403	8-719-988-61	s	DIODE 1SS355TE-17
D1404	8-719-055-30	s	DIODE D1FS4A-TA
D1405	8-719-055-30	s	DIODE D1FS4A-TA
D1406	8-719-055-30	s	DIODE D1FS4A-TA
D1407	8-719-055-30	s	DIODE D1FS4A-TA
D1408	8-719-941-86	s	DIODE DAN202U
D1409	8-719-941-86	s	DIODE DAN202U
D1410	8-719-941-86	s	DIODE DAN202U
D1411	8-719-055-30	s	DIODE D1FS4A-TA
D1412	8-719-055-30	s	DIODE D1FS4A-TA
FB100	1-414-921-11	s	INDUCTOR, FERRITE BEAD
FB101	1-414-921-11	s	INDUCTOR, FERRITE BEAD
FB102	1-414-921-11	s	INDUCTOR, FERRITE BEAD
FB103	1-414-921-11	s	INDUCTOR, FERRITE BEAD
FB104	1-414-921-11	s	INDUCTOR, FERRITE BEAD
FB105	1-414-921-11	s	INDUCTOR, FERRITE BEAD
FB106	1-414-921-11	s	INDUCTOR, FERRITE BEAD
FB107	1-414-921-11	s	INDUCTOR, FERRITE BEAD
FB108	1-414-921-11	s	INDUCTOR, FERRITE BEAD
FB109	1-414-921-11	s	INDUCTOR, FERRITE BEAD
FB110	1-414-921-11	s	INDUCTOR, FERRITE BEAD
FB111	1-500-451-11	s	MICRO INDUCTOR (CHIP) 41P750S
FB112	1-500-451-11	s	MICRO INDUCTOR (CHIP) 41P750S
FB113	1-500-451-11	s	MICRO INDUCTOR (CHIP) 41P750S
FB114	1-414-921-11	s	INDUCTOR, FERRITE BEAD
FB116	1-414-921-11	s	INDUCTOR, FERRITE BEAD
FB117	1-414-921-11	s	INDUCTOR, FERRITE BEAD
FB118	1-414-921-11	s	INDUCTOR, FERRITE BEAD
FB119	1-414-921-11	s	INDUCTOR, FERRITE BEAD
FB120	1-414-921-11	s	INDUCTOR, FERRITE BEAD
FB121	1-414-921-11	s	INDUCTOR, FERRITE BEAD
FB122	1-414-921-11	s	INDUCTOR, FERRITE BEAD
FB123	1-414-921-11	s	INDUCTOR, FERRITE BEAD
FB124	1-414-921-11	s	INDUCTOR, FERRITE BEAD
FB125	1-414-921-11	s	INDUCTOR, FERRITE BEAD
FB126	1-414-921-11	s	INDUCTOR, FERRITE BEAD
FB400	1-414-921-11	s	INDUCTOR, FERRITE BEAD
FB401	1-414-921-11	s	INDUCTOR, FERRITE BEAD
FB402	1-414-921-11	s	INDUCTOR, FERRITE BEAD
FB700	1-414-921-11	s	INDUCTOR, FERRITE BEAD
FB701	1-414-921-11	s	INDUCTOR, FERRITE BEAD
FB702	1-414-921-11	s	INDUCTOR, FERRITE BEAD
FB703	1-414-921-11	s	INDUCTOR, FERRITE BEAD
FB800	1-500-451-11	s	MICRO INDUCTOR (CHIP) 41P750S
FB801	1-414-921-11	s	INDUCTOR, FERRITE BEAD

(C BOARD (FOR VPL-CX75))

Ref. No. or Q'ty	Part No.	SP	Description
FB802	1-414-921-11	s	INDUCTOR, FERRITE BEAD
FB803	1-414-921-11	s	INDUCTOR, FERRITE BEAD
FB804	1-414-921-11	s	INDUCTOR, FERRITE BEAD
FB900	1-500-451-11	s	MICRO INDUCTOR (CHIP) 41P750S
FB901	1-414-921-11	s	INDUCTOR, FERRITE BEAD
FB1300	1-469-185-11	s	INDUCTOR, FERRITE BEAD
FB1301	1-469-185-11	s	INDUCTOR, FERRITE BEAD
FB1306	1-414-921-11	s	INDUCTOR, FERRITE BEAD
FB1307	1-414-921-11	s	INDUCTOR, FERRITE BEAD
FB1308	1-414-921-11	s	INDUCTOR, FERRITE BEAD
FB1400	1-500-451-11	s	MICRO INDUCTOR (CHIP) 41P750S
FB1401	1-500-451-11	s	MICRO INDUCTOR (CHIP) 41P750S
FL900	1-234-494-21	s	FILTER, EMI REMOVAL (SMD)
FL901	1-234-494-21	s	FILTER, EMI REMOVAL (SMD)
FL902	1-234-494-21	s	FILTER, EMI REMOVAL (SMD)
IC101	6-704-953-01	s	IC AIC1117A-33PYJTR
IC102	6-704-954-01	s	IC AIC1117A-50PYJTR
IC103	8-759-681-47	s	IC IRMF-A0T-QTP
IC104	6-704-954-01	s	IC AIC1117A-50PYJTR
IC200	8-759-471-89	s	IC 74VHC02MTCX
IC201	8-759-475-43	s	IC TC74LCX125FT(EL)
IC202	6-703-225-01	s	IC S-80928CNMC-G8YT2G
IC203	6-706-022-01	s	IC HD64F2378VFQ34V
IC300	8-759-491-48	s	IC TC74VHCT138AFT(EL)
IC301	8-759-460-79	s	IC BA09FP-E2
IC302	8-759-598-43	s	IC TC7WH04FK(TE85R)
IC303	8-759-460-79	s	IC BA09FP-E2
IC304	8-752-072-81	s	IC CXA1875AM
IC305	8-759-580-33	s	IC BA6288FS-E2
IC306	8-759-831-52	s	IC TC7WH125FK(TE85R)
IC307	8-759-575-16	s	IC LMC7101BIM5X
IC308	8-759-537-09	s	IC BA6287F-E2
IC400	8-759-352-94	s	IC TDA7309D013TR
IC401	6-702-697-01	s	IC TPA2001D1PWR
IC500	8-759-661-55	s	IC ST24FC21M6TR
IC501	8-759-833-99	s	IC MC74HC4052ADTR2
IC600	6-704-954-01	s	IC AIC1117A-50PYJTR
IC601	8-759-646-02	s	IC M52347FP-TE
IC602	8-752-108-35	s	IC CXA2171AQ
IC604	8-759-548-95	s	IC SN74LV00APWR
IC605	8-759-549-14	s	IC SN74LV244APWR
IC700	6-704-958-01	s	IC AIC1117A-18PYJTR
IC701	6-706-008-01	s	IC PW2200B-20L
IC702	6-703-225-01	s	IC S-80928CNMC-G8YT2G
IC703	6-704-953-01	s	IC AIC1117A-33PYJTR
IC801	6-703-225-01	s	IC S-80928CNMC-G8YT2G
IC802	6-705-986-01	s	IC CY25033SZC-1T
IC803	6-804-145-01	s	IC MBM29LV800TA-70PFTN-768PW
IC805	6-704-030-01	s	IC TC7SA04FU(TE85R)
IC806	6-702-301-01	s	IC TK11125CSCL-G
IC807	6-704-952-01	s	IC AIC1084-PEJTR
IC900	8-752-424-18	s	IC CXD3536R
IC901	6-703-225-01	s	IC S-80928CNMC-G8YT2G
IC902	6-703-225-01	s	IC S-80928CNMC-G8YT2G
IC903	8-759-693-83	s	IC HN58X24256FP1Z
IC904	8-759-679-58	s	IC SN74AHCT541PWR
IC905	8-759-679-58	s	IC SN74AHCT541PWR
IC906	8-759-679-58	s	IC SN74AHCT541PWR

(C BOARD (FOR VPL-CX75))

Ref. No. or Q'ty	Part No.	SP Description
IC907	8-759-490-43	s IC TC74VHCT540AFT(EL)
IC908	8-759-831-52	s IC TC7WH125FK(Te85R)
IC1000	6-705-025-01	s IC PQ20WZ1UJ00H
IC1001	8-759-679-05	s IC TC7WH34FU(Te12R)
IC1002	8-752-110-22	s IC CXA7005R-T4
IC1003	8-759-252-41	s IC TK11900MTL
IC1100	8-752-110-22	s IC CXA7005R-T4
IC1200	8-752-110-22	s IC CXA7005R-T4
IC1300	8-759-596-39	s IC SN74LV4052APWR
IC1301	6-700-658-01	s IC SN75240PWR
IC1302	8-759-649-33	s IC SN74AHCT1G08DCKR
IC1303	6-804-220-01	s IC SN-USBRCV1
IC1305	6-702-912-01	s IC S-80942CNMC-G9C-T2
IC1400	6-704-958-01	s IC AIC1117A-18PYJTR
IC1401	8-759-643-48	s IC BA00ASFP-E2
IC1402	8-759-643-48	s IC BA00ASFP-E2
IC1403	8-759-643-48	s IC BA00ASFP-E2
IC1404	8-759-643-48	s IC BA00ASFP-E2
IC1405	6-702-593-01	s IC BA10358FV-E2
IC1406	6-702-593-01	s IC BA10358FV-E2
L101	1-409-527-41	s COIL, CHOKe 4.7UH
L400	1-469-522-11	s INDUCTOR 1.0UH (NLFV25)
L401	1-469-522-11	s INDUCTOR 1.0UH (NLFV25)
L600	1-469-522-11	s INDUCTOR 1.0UH (NLFV25)
L601	1-469-522-11	s INDUCTOR 1.0UH (NLFV25)
L700	1-469-522-11	s INDUCTOR 1.0UH (NLFV25)
L701	1-469-522-11	s INDUCTOR 1.0UH (NLFV25)
L702	1-469-522-11	s INDUCTOR 1.0UH (NLFV25)
L703	1-469-522-11	s INDUCTOR 1.0UH (NLFV25)
L704	1-469-522-11	s INDUCTOR 1.0UH (NLFV25)
L800	1-469-522-11	s INDUCTOR 1.0UH (NLFV25)
L900	1-469-522-11	s INDUCTOR 1.0UH (NLFV25)
L1000	1-469-522-11	s INDUCTOR 1.0UH (NLFV25)
L1001	1-469-522-11	s INDUCTOR 1.0UH (NLFV25)
L1002	1-469-522-11	s INDUCTOR 1.0UH (NLFV25)
L1100	1-469-522-11	s INDUCTOR 1.0UH (NLFV25)
L1101	1-469-522-11	s INDUCTOR 1.0UH (NLFV25)
L1102	1-469-522-11	s INDUCTOR 1.0UH (NLFV25)
L1200	1-469-522-11	s INDUCTOR 1.0UH (NLFV25)
L1201	1-469-522-11	s INDUCTOR 1.0UH (NLFV25)
L1202	1-469-522-11	s INDUCTOR 1.0UH (NLFV25)
Q100	8-729-905-35	s TRANSISTOR 2SC4081-R
Q101	8-729-427-72	s TRANSISTOR XP4501-TXE
Q102	8-729-026-53	s TRANSISTOR 2SA1576A-T106-QR
Q200	6-550-014-01	s TRANSISTOR SSM6N15FU(Te85R)
Q201	6-550-014-01	s TRANSISTOR SSM6N15FU(Te85R)
Q202	8-729-013-28	s TRANSISTOR HN1B01FU-TE85R
Q203	6-550-014-01	s TRANSISTOR SSM6N15FU(Te85R)
Q300	8-729-907-00	s TRANSISTOR DTC114EU
Q400	8-729-907-00	s TRANSISTOR DTC114EU
Q500	8-729-907-00	s TRANSISTOR DTC114EU
Q501	8-729-907-00	s TRANSISTOR DTC114EU
Q600	8-729-026-53	s TRANSISTOR 2SA1576A-T106-QR
Q601	8-729-905-35	s TRANSISTOR 2SC4081-R
Q602	8-729-905-35	s TRANSISTOR 2SC4081-R
Q603	8-729-026-53	s TRANSISTOR 2SA1576A-T106-QR
Q604	8-729-013-28	s TRANSISTOR HN1B01FU-TE85R
Q605	8-729-013-28	s TRANSISTOR HN1B01FU-TE85R

(C BOARD (FOR VPL-CX75))

Ref. No. or Q'ty	Part No.	SP Description
Q606	8-729-026-53	s TRANSISTOR 2SA1576A-T106-QR
Q607	8-729-026-53	s TRANSISTOR 2SA1576A-T106-QR
Q608	8-729-907-00	s TRANSISTOR DTC114EU
Q900	8-729-905-35	s TRANSISTOR 2SC4081-R
Q901	8-729-013-28	s TRANSISTOR HN1B01FU-TE85R
Q1000	8-729-013-28	s TRANSISTOR HN1B01FU-TE85R
Q1001	8-729-013-28	s TRANSISTOR HN1B01FU-TE85R
Q1100	8-729-013-28	s TRANSISTOR HN1B01FU-TE85R
Q1101	8-729-013-28	s TRANSISTOR HN1B01FU-TE85R
Q1200	8-729-013-28	s TRANSISTOR HN1B01FU-TE85R
Q1201	8-729-013-28	s TRANSISTOR HN1B01FU-TE85R
Q1300	8-729-013-28	s TRANSISTOR HN1B01FU-TE85R
Q1400	8-729-907-00	s TRANSISTOR DTC114EU
Q1401	8-729-907-00	s TRANSISTOR DTC114EU
Q1402	8-729-028-73	s TRANSISTOR DTA114EUA-T106
Q1403	8-729-907-00	s TRANSISTOR DTC114EU
Q1404	8-729-907-00	s TRANSISTOR DTC114EU
Q1405	8-729-907-00	s TRANSISTOR DTC114EU
R100	1-218-990-11	s RESISTOR,CHIP 0 1/16W (1005)
R101	1-218-990-11	s RESISTOR,CHIP 0 1/16W (1005)
R102	1-218-941-81	s RESISTOR,CHIP 100,1/16W (1005)
R103	1-218-965-11	s RESISTOR, CHIP 10K 1/16W
R104	1-218-965-11	s RESISTOR, CHIP 10K 1/16W
R105	1-218-941-81	s RESISTOR,CHIP 100,1/16W (1005)
R106	1-218-973-11	s RESISTOR,CHIP 47K 1/16W (1005)
R107	1-218-973-11	s RESISTOR,CHIP 47K 1/16W (1005)
R108	1-218-962-11	s RESISTOR,CHIP 5.6K 1/16W(1005)
R109	1-208-671-11	s RESISTOR CHIP 330 1/16W (1005)
R110	1-208-671-11	s RESISTOR CHIP 330 1/16W (1005)
R111	1-218-941-81	s RESISTOR,CHIP 100,1/16W (1005)
R112	1-218-941-81	s RESISTOR,CHIP 100,1/16W (1005)
R115	1-218-941-81	s RESISTOR,CHIP 100,1/16W (1005)
R117	1-218-965-11	s RESISTOR, CHIP 10K 1/16W
R118	1-218-965-11	s RESISTOR, CHIP 10K 1/16W
R119	1-218-941-81	s RESISTOR,CHIP 100,1/16W (1005)
R120	1-218-965-11	s RESISTOR, CHIP 10K 1/16W
R121	1-218-965-11	s RESISTOR, CHIP 10K 1/16W
R122	1-218-937-11	s RESISTOR, CHIP 47
R123	1-218-937-11	s RESISTOR, CHIP 47
R200	1-218-965-11	s RESISTOR, CHIP 10K 1/16W
R201	1-218-941-81	s RESISTOR,CHIP 100,1/16W (1005)
R202	1-218-965-11	s RESISTOR, CHIP 10K 1/16W
R203	1-218-965-11	s RESISTOR, CHIP 10K 1/16W
R204	1-208-699-11	s RESISTOR,CHIP 4.7K 1/16W(1005)
R205	1-208-699-11	s RESISTOR,CHIP 4.7K 1/16W(1005)
R206	1-208-699-11	s RESISTOR,CHIP 4.7K 1/16W(1005)
R207	1-218-953-11	s RESISTOR, CHIP 1K 1/16W
R208	1-218-969-11	s RESISTOR,CHIP 22K 1/16W (1608)
R209	1-218-965-11	s RESISTOR, CHIP 10K 1/16W
R211	1-218-965-11	s RESISTOR, CHIP 10K 1/16W
R212	1-218-965-11	s RESISTOR, CHIP 10K 1/16W
R213	1-218-965-11	s RESISTOR, CHIP 10K 1/16W
R214	1-218-965-11	s RESISTOR, CHIP 10K 1/16W
R215	1-218-965-11	s RESISTOR, CHIP 10K 1/16W
R216	1-218-961-11	s RESISTOR, CHIP 4.7K 1/16W
R217	1-218-961-11	s RESISTOR, CHIP 4.7K 1/16W
R218	1-218-965-11	s RESISTOR, CHIP 10K 1/16W
R219	1-218-965-11	s RESISTOR, CHIP 10K 1/16W

(C BOARD (FOR VPL-CX75))

Ref. No. or Q'ty	Part No.	SP	Description
R220	1-218-965-11	s	RESISTOR, CHIP 10K 1/16W
R222	1-218-965-11	s	RESISTOR, CHIP 10K 1/16W
R223	1-218-941-81	s	RESISTOR,CHIP 100,1/16W (1005)
R224	1-218-941-81	s	RESISTOR,CHIP 100,1/16W (1005)
R225	1-218-941-81	s	RESISTOR,CHIP 100,1/16W (1005)
R226	1-218-973-11	s	RESISTOR,CHIP 47K 1/16W (1005)
R229	1-218-941-81	s	RESISTOR,CHIP 100,1/16W (1005)
R230	1-218-941-81	s	RESISTOR,CHIP 100,1/16W (1005)
R231	1-218-965-11	s	RESISTOR, CHIP 10K 1/16W
R232	1-218-965-11	s	RESISTOR, CHIP 10K 1/16W
R234	1-218-965-11	s	RESISTOR, CHIP 10K 1/16W
R235	1-218-973-11	s	RESISTOR,CHIP 47K 1/16W (1005)
R236	1-218-953-11	s	RESISTOR, CHIP 1K 1/16W
R237	1-218-953-11	s	RESISTOR, CHIP 1K 1/16W
R238	1-218-973-11	s	RESISTOR,CHIP 47K 1/16W (1005)
R239	1-218-957-11	s	RESISTOR,CHIP 2.2K 1/16W(1608)
R240	1-218-957-11	s	RESISTOR,CHIP 2.2K 1/16W(1608)
R241	1-218-941-81	s	RESISTOR,CHIP 100,1/16W (1005)
R243	1-218-965-11	s	RESISTOR, CHIP 10K 1/16W
R245	1-208-635-11	s	RESISTOR CHIP 10 1/16W (1005)
R246	1-218-945-11	s	RESISTOR,CHIP 220 1/16W(1005)
R247	1-218-965-11	s	RESISTOR, CHIP 10K 1/16W
R248	1-218-973-11	s	RESISTOR,CHIP 47K 1/16W (1005)
R249	1-218-965-11	s	RESISTOR, CHIP 10K 1/16W
R251	1-218-953-11	s	RESISTOR, CHIP 1K 1/16W
R252	1-218-973-11	s	RESISTOR,CHIP 47K 1/16W (1005)
R254	1-218-941-81	s	RESISTOR,CHIP 100,1/16W (1005)
R256	1-218-941-81	s	RESISTOR,CHIP 100,1/16W (1005)
R258	1-218-965-11	s	RESISTOR, CHIP 10K 1/16W
R259	1-218-965-11	s	RESISTOR, CHIP 10K 1/16W
R260	1-218-965-11	s	RESISTOR, CHIP 10K 1/16W
R261	1-218-953-11	s	RESISTOR, CHIP 1K 1/16W
R262	1-218-941-81	s	RESISTOR,CHIP 100,1/16W (1005)
R264	1-218-941-81	s	RESISTOR,CHIP 100,1/16W (1005)
R266	1-218-965-11	s	RESISTOR, CHIP 10K 1/16W
R270	1-218-965-11	s	RESISTOR, CHIP 10K 1/16W
R271	1-218-941-81	s	RESISTOR,CHIP 100,1/16W (1005)
R280	1-208-719-11	s	RESISTOR CHIP 33K 1/16W (1005)
R281	1-208-719-11	s	RESISTOR CHIP 33K 1/16W (1005)
R283	1-218-965-11	s	RESISTOR, CHIP 10K 1/16W
R284	1-218-965-11	s	RESISTOR, CHIP 10K 1/16W
R285	1-218-965-11	s	RESISTOR, CHIP 10K 1/16W
R286	1-218-965-11	s	RESISTOR, CHIP 10K 1/16W
R287	1-218-965-11	s	RESISTOR, CHIP 10K 1/16W
R288	1-218-941-81	s	RESISTOR,CHIP 100,1/16W (1005)
R289	1-218-941-81	s	RESISTOR,CHIP 100,1/16W (1005)
R290	1-218-990-11	s	RESISTOR,CHIP 0 1/16W (1005)
R291	1-218-990-11	s	RESISTOR,CHIP 0 1/16W (1005)
R293	1-218-965-11	s	RESISTOR, CHIP 10K 1/16W
R295	1-218-941-81	s	RESISTOR,CHIP 100,1/16W (1005)
R300	1-218-965-11	s	RESISTOR, CHIP 10K 1/16W
R302	1-218-965-11	s	RESISTOR, CHIP 10K 1/16W
R303	1-218-965-11	s	RESISTOR, CHIP 10K 1/16W
R304	1-218-965-11	s	RESISTOR, CHIP 10K 1/16W
R305	1-218-965-11	s	RESISTOR, CHIP 10K 1/16W
R306	1-218-965-11	s	RESISTOR, CHIP 10K 1/16W
R307	1-218-977-11	s	RESISTOR,CHIP 100K 1/16W(1005)
R308	1-218-965-11	s	RESISTOR, CHIP 10K 1/16W
R309	1-218-965-11	s	RESISTOR, CHIP 10K 1/16W

(C BOARD (FOR VPL-CX75))

Ref. No. or Q'ty	Part No.	SP	Description
R310	1-218-965-11	s	RESISTOR, CHIP 10K 1/16W
R311	1-218-990-11	s	RESISTOR,CHIP 0 1/16W (1005)
R313	1-218-965-11	s	RESISTOR, CHIP 10K 1/16W
R314	1-218-990-11	s	RESISTOR,CHIP 0 1/16W (1005)
R316	1-218-990-11	s	RESISTOR,CHIP 0 1/16W (1005)
R318	1-216-864-11	s	CONDUCTOR, CHIP (1608)
R400	1-218-941-81	s	RESISTOR,CHIP 100,1/16W (1005)
R401	1-218-941-81	s	RESISTOR,CHIP 100,1/16W (1005)
R402	1-218-941-81	s	RESISTOR,CHIP 100,1/16W (1005)
R403	1-218-941-81	s	RESISTOR,CHIP 100,1/16W (1005)
R404	1-218-941-81	s	RESISTOR,CHIP 100,1/16W (1005)
R405	1-218-941-81	s	RESISTOR,CHIP 100,1/16W (1005)
R406	1-218-973-11	s	RESISTOR,CHIP 47K 1/16W (1005)
R407	1-218-973-11	s	RESISTOR,CHIP 47K 1/16W (1005)
R409	1-218-977-11	s	RESISTOR,CHIP 100K 1/16W(1005)
R410	1-218-965-11	s	RESISTOR, CHIP 10K 1/16W
R412	1-218-990-11	s	RESISTOR,CHIP 0 1/16W (1005)
R413	1-218-978-11	s	RESISTOR,CHIP 120K 1/16W(1005)
R500	1-218-990-11	s	RESISTOR,CHIP 0 1/16W (1005)
R503	1-218-990-11	s	RESISTOR,CHIP 0 1/16W (1005)
R504	1-218-990-11	s	RESISTOR,CHIP 0 1/16W (1005)
R505	1-218-990-11	s	RESISTOR,CHIP 0 1/16W (1005)
R506	1-218-823-11	s	RESISTOR,CHIP 100 1/10W (1608)
R507	1-218-827-11	s	RESISTOR,CHIP 150 1/10W (1608)
R508	1-218-827-11	s	RESISTOR,CHIP 150 1/10W (1608)
R509	1-218-827-11	s	RESISTOR,CHIP 150 1/10W (1608)
R510	1-218-953-11	s	RESISTOR, CHIP 1K 1/16W
R511	1-216-811-11	s	RESISTOR, CHIP 150 1/16W(1608)
R512	1-218-827-11	s	RESISTOR,CHIP 150 1/10W (1608)
R513	1-218-827-11	s	RESISTOR,CHIP 150 1/10W (1608)
R514	1-218-827-11	s	RESISTOR,CHIP 150 1/10W (1608)
R515	1-218-953-11	s	RESISTOR, CHIP 1K 1/16W
R516	1-218-937-11	s	RESISTOR, CHIP 47
R517	1-218-823-11	s	RESISTOR,CHIP 100 1/10W (1608)
R518	1-216-811-11	s	RESISTOR, CHIP 150 1/16W(1608)
R519	1-218-937-11	s	RESISTOR, CHIP 47
R520	1-218-945-11	s	RESISTOR,CHIP 220 1/16W(1005)
R521	1-218-823-11	s	RESISTOR,CHIP 100 1/10W (1608)
R522	1-216-811-11	s	RESISTOR, CHIP 150 1/16W(1608)
R523	1-218-977-11	s	RESISTOR,CHIP 100K 1/16W(1005)
R524	1-218-965-11	s	RESISTOR, CHIP 10K 1/16W
R525	1-218-969-11	s	RESISTOR,CHIP 22K 1/16W (1608)
R526	1-218-971-11	s	RESISTOR,CHIP 33K 1/16W (1005)
R527	1-218-969-11	s	RESISTOR,CHIP 22K 1/16W (1608)
R528	1-218-971-11	s	RESISTOR,CHIP 33K 1/16W (1005)
R529	1-218-969-11	s	RESISTOR,CHIP 22K 1/16W (1608)
R530	1-218-971-11	s	RESISTOR,CHIP 33K 1/16W (1005)
R531	1-218-965-11	s	RESISTOR, CHIP 10K 1/16W
R532	1-218-937-11	s	RESISTOR, CHIP 47
R533	1-218-965-11	s	RESISTOR, CHIP 10K 1/16W
R534	1-218-937-11	s	RESISTOR, CHIP 47
R535	1-218-937-11	s	RESISTOR, CHIP 47
R536	1-218-937-11	s	RESISTOR, CHIP 47
R538	1-218-990-11	s	RESISTOR,CHIP 0 1/16W (1005)
R540	1-218-990-11	s	RESISTOR,CHIP 0 1/16W (1005)
R541	1-218-969-11	s	RESISTOR,CHIP 22K 1/16W (1608)
R542	1-211-973-11	s	RESISTOR,CHIP 15 1/10W (1608)
R543	1-211-973-11	s	RESISTOR,CHIP 15 1/10W (1608)
R544	1-211-973-11	s	RESISTOR,CHIP 15 1/10W (1608)

(C BOARD (FOR VPL-CX75))

Ref. No. or Q'ty	Part No.	SP Description
R600	1-218-990-11	s RESISTOR,CHIP 0 1/16W (1005)
R602	1-218-973-11	s RESISTOR,CHIP 47K 1/16W (1005)
R603	1-218-973-11	s RESISTOR,CHIP 47K 1/16W (1005)
R604	1-208-635-11	s RESISTOR CHIP 10 1/16W (1005)
R605	1-218-953-11	s RESISTOR, CHIP 1K 1/16W
R606	1-218-990-11	s RESISTOR,CHIP 0 1/16W (1005)
R607	1-218-990-11	s RESISTOR,CHIP 0 1/16W (1005)
R609	1-218-953-11	s RESISTOR, CHIP 1K 1/16W
R610	1-218-973-11	s RESISTOR,CHIP 47K 1/16W (1005)
R611	1-218-973-11	s RESISTOR,CHIP 47K 1/16W (1005)
R612	1-218-941-81	s RESISTOR,CHIP 100,1/16W (1005)
R613	1-218-990-11	s RESISTOR,CHIP 0 1/16W (1005)
R614	1-208-635-11	s RESISTOR CHIP 10 1/16W (1005)
R615	1-218-953-11	s RESISTOR, CHIP 1K 1/16W
R616	1-208-635-11	s RESISTOR CHIP 10 1/16W (1005)
R617	1-218-949-11	s RESISTOR,CHIP 470 1/16W
R618	1-218-953-11	s RESISTOR, CHIP 1K 1/16W
R619	1-218-953-11	s RESISTOR, CHIP 1K 1/16W
R620	1-218-953-11	s RESISTOR, CHIP 1K 1/16W
R621	1-218-953-11	s RESISTOR, CHIP 1K 1/16W
R622	1-218-961-11	s RESISTOR, CHIP 4.7K 1/16W
R623	1-218-990-11	s RESISTOR,CHIP 0 1/16W (1005)
R624	1-218-937-11	s RESISTOR, CHIP 47
R625	1-218-973-11	s RESISTOR,CHIP 47K 1/16W (1005)
R626	1-218-973-11	s RESISTOR,CHIP 47K 1/16W (1005)
R627	1-218-990-11	s RESISTOR,CHIP 0 1/16W (1005)
R628	1-218-990-11	s RESISTOR,CHIP 0 1/16W (1005)
R631	1-219-601-11	s RES, METAL FILM CHIP 62K(1005)
R632	1-218-990-11	s RESISTOR,CHIP 0 1/16W (1005)
R633	1-218-990-11	s RESISTOR,CHIP 0 1/16W (1005)
R634	1-218-990-11	s RESISTOR,CHIP 0 1/16W (1005)
R635	1-218-990-11	s RESISTOR,CHIP 0 1/16W (1005)
R636	1-218-965-11	s RESISTOR, CHIP 10K 1/16W
R639	1-218-941-81	s RESISTOR,CHIP 100,1/16W (1005)
R640	1-218-941-81	s RESISTOR,CHIP 100,1/16W (1005)
R641	1-208-947-11	s RESISTOR CHIP 330K 1/16W(1005)
R642	1-218-961-11	s RESISTOR, CHIP 4.7K 1/16W
R645	1-218-973-11	s RESISTOR,CHIP 47K 1/16W (1005)
R646	1-208-695-11	s RESISTOR CHIP 3.3K 1/16W(1005)
R647	1-218-957-11	s RESISTOR,CHIP 2.2K 1/16W(1608)
R648	1-218-945-11	s RESISTOR,CHIP 220 1/16W(1005)
R649	1-218-937-11	s RESISTOR, CHIP 47
R650	1-218-937-11	s RESISTOR, CHIP 47
R651	1-218-937-11	s RESISTOR, CHIP 47
R652	1-208-707-11	s RESISTOR,CHIP 10K 1/16W (1005)
R653	1-218-990-11	s RESISTOR,CHIP 0 1/16W (1005)
R654	1-218-990-11	s RESISTOR,CHIP 0 1/16W (1005)
R655	1-218-990-11	s RESISTOR,CHIP 0 1/16W (1005)
R656	1-218-937-11	s RESISTOR, CHIP 47
R657	1-218-937-11	s RESISTOR, CHIP 47
R658	1-208-683-11	s RESISTOR CHIP 1K 1/16W (1005)
R660	1-218-990-11	s RESISTOR,CHIP 0 1/16W (1005)
R663	1-218-990-11	s RESISTOR,CHIP 0 1/16W (1005)
R665	1-218-990-11	s RESISTOR,CHIP 0 1/16W (1005)
R669	1-218-937-11	s RESISTOR, CHIP 47
R671	1-218-937-11	s RESISTOR, CHIP 47
R672	1-218-990-11	s RESISTOR,CHIP 0 1/16W (1005)
R673	1-218-965-11	s RESISTOR, CHIP 10K 1/16W
R705	1-218-945-11	s RESISTOR,CHIP 220 1/16W(1005)

(C BOARD (FOR VPL-CX75))

Ref. No. or Q'ty	Part No.	SP Description
R706	1-218-945-11	s RESISTOR,CHIP 220 1/16W(1005)
R707	1-218-945-11	s RESISTOR,CHIP 220 1/16W(1005)
R708	1-218-945-11	s RESISTOR,CHIP 220 1/16W(1005)
R709	1-218-945-11	s RESISTOR,CHIP 220 1/16W(1005)
R710	1-218-945-11	s RESISTOR,CHIP 220 1/16W(1005)
R712	1-208-695-11	s RESISTOR CHIP 3.3K 1/16W(1005)
R715	1-218-965-11	s RESISTOR, CHIP 10K 1/16W
R716	1-218-965-11	s RESISTOR, CHIP 10K 1/16W
R717	1-218-965-11	s RESISTOR, CHIP 10K 1/16W
R718	1-218-965-11	s RESISTOR, CHIP 10K 1/16W
R719	1-218-965-11	s RESISTOR, CHIP 10K 1/16W
R720	1-218-965-11	s RESISTOR, CHIP 10K 1/16W
R721	1-218-965-11	s RESISTOR, CHIP 10K 1/16W
R722	1-218-965-11	s RESISTOR, CHIP 10K 1/16W
R723	1-218-965-11	s RESISTOR, CHIP 10K 1/16W
R731	1-218-990-11	s RESISTOR,CHIP 0 1/16W (1005)
R734	1-218-990-11	s RESISTOR,CHIP 0 1/16W (1005)
R736	1-218-965-11	s RESISTOR, CHIP 10K 1/16W
R737	1-218-965-11	s RESISTOR, CHIP 10K 1/16W
R738	1-218-939-11	s RESISTOR, CHIP 68 1/16W (1005)
R739	1-218-989-11	s RESISTOR,CHIP 1M 1/16W (1005)
R741	1-218-965-11	s RESISTOR, CHIP 10K 1/16W
R743	1-218-953-11	s RESISTOR, CHIP 1K 1/16W
R744	1-218-965-11	s RESISTOR, CHIP 10K 1/16W
R748	1-218-965-11	s RESISTOR, CHIP 10K 1/16W
R749	1-218-965-11	s RESISTOR, CHIP 10K 1/16W
R750	1-218-990-11	s RESISTOR,CHIP 0 1/16W (1005)
R752	1-218-990-11	s RESISTOR,CHIP 0 1/16W (1005)
R753	1-218-990-11	s RESISTOR,CHIP 0 1/16W (1005)
R754	1-218-990-11	s RESISTOR,CHIP 0 1/16W (1005)
R755	1-218-990-11	s RESISTOR,CHIP 0 1/16W (1005)
R756	1-218-937-11	s RESISTOR, CHIP 47
R757	1-218-990-11	s RESISTOR,CHIP 0 1/16W (1005)
R758	1-218-937-11	s RESISTOR, CHIP 47
R759	1-218-937-11	s RESISTOR, CHIP 47
R760	1-218-965-11	s RESISTOR, CHIP 10K 1/16W
R761	1-218-965-11	s RESISTOR, CHIP 10K 1/16W
R762	1-208-643-11	s RESISTOR CHIP 22 1/16W (1005)
R763	1-208-643-11	s RESISTOR CHIP 22 1/16W (1005)
R764	1-208-643-11	s RESISTOR CHIP 22 1/16W (1005)
R801	1-208-707-11	s RESISTOR,CHIP 10K 1/16W (1005)
R802	1-218-945-11	s RESISTOR,CHIP 220 1/16W(1005)
R803	1-218-949-11	s RESISTOR,CHIP 470 1/16W
R804	1-218-945-11	s RESISTOR,CHIP 220 1/16W(1005)
R805	1-218-977-11	s RESISTOR,CHIP 100K 1/16W(1005)
R806	1-218-965-11	s RESISTOR, CHIP 10K 1/16W
R807	1-218-941-81	s RESISTOR,CHIP 100,1/16W (1005)
R808	1-218-941-81	s RESISTOR,CHIP 100,1/16W (1005)
R809	1-218-961-11	s RESISTOR, CHIP 4.7K 1/16W
R810	1-218-941-81	s RESISTOR,CHIP 100,1/16W (1005)
R811	1-218-941-81	s RESISTOR,CHIP 100,1/16W (1005)
R812	1-218-961-11	s RESISTOR, CHIP 4.7K 1/16W
R813	1-218-953-11	s RESISTOR, CHIP 1K 1/16W
R815	1-208-643-11	s RESISTOR CHIP 22 1/16W (1005)
R817	1-218-965-11	s RESISTOR, CHIP 10K 1/16W
R818	1-218-941-81	s RESISTOR,CHIP 100,1/16W (1005)
R821	1-218-965-11	s RESISTOR, CHIP 10K 1/16W
R823	1-218-965-11	s RESISTOR, CHIP 10K 1/16W
R825	1-218-990-11	s RESISTOR,CHIP 0 1/16W (1005)

(C BOARD (FOR VPL-CX75))

Ref. No. or Q'ty	Part No.	SP	Description
R826	1-219-570-11	s	RESISTOR,CHIP 10M 1/16W
R827	1-218-965-11	s	RESISTOR, CHIP 10K 1/16W
R828	1-218-990-11	s	RESISTOR,CHIP 0 1/16W (1005)
R830	1-218-990-11	s	RESISTOR,CHIP 0 1/16W (1005)
R832	1-218-990-11	s	RESISTOR,CHIP 0 1/16W (1005)
R833	1-218-965-11	s	RESISTOR, CHIP 10K 1/16W
R837	1-218-945-11	s	RESISTOR,CHIP 220 1/16W(1005)
R838	1-218-957-11	s	RESISTOR,CHIP 2.2K 1/16W(1608)
R841	1-218-937-11	s	RESISTOR, CHIP 47
R842	1-218-937-11	s	RESISTOR, CHIP 47
R843	1-218-937-11	s	RESISTOR, CHIP 47
R845	1-218-990-11	s	RESISTOR,CHIP 0 1/16W (1005)
R900	1-218-965-11	s	RESISTOR, CHIP 10K 1/16W
R901	1-218-965-11	s	RESISTOR, CHIP 10K 1/16W
R902	1-218-937-11	s	RESISTOR, CHIP 47
R903	1-218-937-11	s	RESISTOR, CHIP 47
R904	1-218-937-11	s	RESISTOR, CHIP 47
R905	1-218-937-11	s	RESISTOR, CHIP 47
R906	1-218-937-11	s	RESISTOR, CHIP 47
R907	1-218-937-11	s	RESISTOR, CHIP 47
R909	1-218-990-11	s	RESISTOR,CHIP 0 1/16W (1005)
R911	1-218-990-11	s	RESISTOR,CHIP 0 1/16W (1005)
R912	1-218-937-11	s	RESISTOR, CHIP 47
R913	1-218-937-11	s	RESISTOR, CHIP 47
R914	1-218-937-11	s	RESISTOR, CHIP 47
R916	1-218-990-11	s	RESISTOR,CHIP 0 1/16W (1005)
R917	1-218-941-81	s	RESISTOR,CHIP 100,1/16W (1005)
R918	1-218-957-11	s	RESISTOR,CHIP 2.2K 1/16W(1608)
R919	1-218-965-11	s	RESISTOR, CHIP 10K 1/16W
R920	1-218-990-11	s	RESISTOR,CHIP 0 1/16W (1005)
R921	1-218-961-11	s	RESISTOR, CHIP 4.7K 1/16W
R922	1-218-953-11	s	RESISTOR, CHIP 1K 1/16W
R923	1-218-973-11	s	RESISTOR,CHIP 47K 1/16W (1005)
R924	1-218-961-11	s	RESISTOR, CHIP 4.7K 1/16W
R925	1-218-961-11	s	RESISTOR, CHIP 4.7K 1/16W
R926	1-218-953-11	s	RESISTOR, CHIP 1K 1/16W
R927	1-218-990-11	s	RESISTOR,CHIP 0 1/16W (1005)
R928	1-218-961-11	s	RESISTOR, CHIP 4.7K 1/16W
R929	1-218-961-11	s	RESISTOR, CHIP 4.7K 1/16W
R931	1-218-937-11	s	RESISTOR, CHIP 47
R932	1-218-937-11	s	RESISTOR, CHIP 47
R934	1-218-990-11	s	RESISTOR,CHIP 0 1/16W (1005)
R935	1-218-937-11	s	RESISTOR, CHIP 47
R936	1-218-937-11	s	RESISTOR, CHIP 47
R937	1-218-937-11	s	RESISTOR, CHIP 47
R938	1-218-937-11	s	RESISTOR, CHIP 47
R939	1-218-937-11	s	RESISTOR, CHIP 47
R940	1-218-937-11	s	RESISTOR, CHIP 47
R941	1-218-937-11	s	RESISTOR, CHIP 47
R942	1-218-937-11	s	RESISTOR, CHIP 47
R943	1-218-937-11	s	RESISTOR, CHIP 47
R944	1-218-937-11	s	RESISTOR, CHIP 47
R945	1-208-643-11	s	RESISTOR CHIP 22 1/16W (1005)
R946	1-208-643-11	s	RESISTOR CHIP 22 1/16W (1005)
R947	1-218-990-11	s	RESISTOR,CHIP 0 1/16W (1005)
R948	1-218-990-11	s	RESISTOR,CHIP 0 1/16W (1005)
R1000	1-208-695-11	s	RESISTOR CHIP 3.3K 1/16W(1005)
R1001	1-208-683-11	s	RESISTOR CHIP 1K 1/16W (1005)
R1002	1-208-711-11	s	RESISTOR CHIP 15K 1/16W (1005)

(C BOARD (FOR VPL-CX75))

Ref. No. or Q'ty	Part No.	SP	Description
R1003	1-208-711-11	s	RESISTOR CHIP 15K 1/16W (1005)
R1004	1-218-979-11	s	RESISTOR, CHIP 150K
R1006	1-218-965-11	s	RESISTOR, CHIP 10K 1/16W
R1007	1-218-965-11	s	RESISTOR, CHIP 10K 1/16W
R1008	1-218-965-11	s	RESISTOR, CHIP 10K 1/16W
R1009	1-218-965-11	s	RESISTOR, CHIP 10K 1/16W
R1010	1-218-941-81	s	RESISTOR,CHIP 100,1/16W (1005)
R1011	1-218-957-11	s	RESISTOR,CHIP 2.2K 1/16W(1608)
R1012	1-218-957-11	s	RESISTOR,CHIP 2.2K 1/16W(1608)
R1013	1-208-635-11	s	RESISTOR CHIP 10 1/16W (1005)
R1014	1-208-635-11	s	RESISTOR CHIP 10 1/16W (1005)
R1017	1-218-937-11	s	RESISTOR, CHIP 47
R1018	1-218-990-11	s	RESISTOR,CHIP 0 1/16W (1005)
R1019	1-218-990-11	s	RESISTOR,CHIP 0 1/16W (1005)
R1100	1-218-965-11	s	RESISTOR, CHIP 10K 1/16W
R1101	1-218-965-11	s	RESISTOR, CHIP 10K 1/16W
R1103	1-218-965-11	s	RESISTOR, CHIP 10K 1/16W
R1104	1-218-965-11	s	RESISTOR, CHIP 10K 1/16W
R1105	1-218-941-81	s	RESISTOR,CHIP 100,1/16W (1005)
R1106	1-218-957-11	s	RESISTOR,CHIP 2.2K 1/16W(1608)
R1107	1-218-957-11	s	RESISTOR,CHIP 2.2K 1/16W(1608)
R1108	1-208-635-11	s	RESISTOR CHIP 10 1/16W (1005)
R1109	1-208-635-11	s	RESISTOR CHIP 10 1/16W (1005)
R1110	1-218-990-11	s	RESISTOR,CHIP 0 1/16W (1005)
R1111	1-218-990-11	s	RESISTOR,CHIP 0 1/16W (1005)
R1112	1-218-937-11	s	RESISTOR, CHIP 47
R1201	1-218-965-11	s	RESISTOR, CHIP 10K 1/16W
R1202	1-218-965-11	s	RESISTOR, CHIP 10K 1/16W
R1204	1-218-965-11	s	RESISTOR, CHIP 10K 1/16W
R1205	1-218-941-81	s	RESISTOR,CHIP 100,1/16W (1005)
R1206	1-218-957-11	s	RESISTOR,CHIP 2.2K 1/16W(1608)
R1207	1-218-957-11	s	RESISTOR,CHIP 2.2K 1/16W(1608)
R1208	1-208-635-11	s	RESISTOR CHIP 10 1/16W (1005)
R1209	1-208-635-11	s	RESISTOR CHIP 10 1/16W (1005)
R1210	1-218-990-11	s	RESISTOR,CHIP 0 1/16W (1005)
R1211	1-218-990-11	s	RESISTOR,CHIP 0 1/16W (1005)
R1212	1-218-937-11	s	RESISTOR, CHIP 47
R1301	1-218-937-11	s	RESISTOR, CHIP 47
R1302	1-218-937-11	s	RESISTOR, CHIP 47
R1303	1-218-937-11	s	RESISTOR, CHIP 47
R1305	1-218-937-11	s	RESISTOR, CHIP 47
R1306	1-218-937-11	s	RESISTOR, CHIP 47
R1307	1-218-965-11	s	RESISTOR, CHIP 10K 1/16W
R1308	1-218-937-11	s	RESISTOR, CHIP 47
R1309	1-218-937-11	s	RESISTOR, CHIP 47
R1310	1-218-941-81	s	RESISTOR,CHIP 100,1/16W (1005)
R1311	1-218-941-81	s	RESISTOR,CHIP 100,1/16W (1005)
R1312	1-218-941-81	s	RESISTOR,CHIP 100,1/16W (1005)
R1313	1-218-955-11	s	RESISTOR, CHIP 1.5K
R1314	1-218-965-11	s	RESISTOR, CHIP 10K 1/16W
R1315	1-218-973-11	s	RESISTOR,CHIP 47K 1/16W (1005)
R1316	1-218-965-11	s	RESISTOR, CHIP 10K 1/16W
R1317	1-218-973-11	s	RESISTOR,CHIP 47K 1/16W (1005)
R1318	1-218-973-11	s	RESISTOR,CHIP 47K 1/16W (1005)
R1319	1-218-973-11	s	RESISTOR,CHIP 47K 1/16W (1005)
R1320	1-218-953-11	s	RESISTOR, CHIP 1K 1/16W
R1321	1-218-973-11	s	RESISTOR,CHIP 47K 1/16W (1005)
R1322	1-218-973-11	s	RESISTOR,CHIP 47K 1/16W (1005)
R1324	1-218-973-11	s	RESISTOR,CHIP 47K 1/16W (1005)

(C BOARD (FOR VPL-CX75))

Ref. No. or Q'ty	Part No.	SP Description
R1325	1-218-973-11	s RESISTOR,CHIP 47K 1/16W (1005)
R1326	1-218-973-11	s RESISTOR,CHIP 47K 1/16W (1005)
R1327	1-218-973-11	s RESISTOR,CHIP 47K 1/16W (1005)
R1328	1-218-957-11	s RESISTOR,CHIP 2.2K 1/16W (1608)
R1329	1-218-973-11	s RESISTOR,CHIP 47K 1/16W (1005)
R1330	1-218-965-11	s RESISTOR, CHIP 10K 1/16W
R1331	1-218-989-11	s RESISTOR,CHIP 1M 1/16W (1005)
R1400	1-218-965-11	s RESISTOR, CHIP 10K 1/16W
R1401	1-218-965-11	s RESISTOR, CHIP 10K 1/16W
R1402	1-218-965-11	s RESISTOR, CHIP 10K 1/16W
R1403	1-218-965-11	s RESISTOR, CHIP 10K 1/16W
R1404	1-208-719-11	s RESISTOR CHIP 33K 1/16W (1005)
R1405	1-208-719-11	s RESISTOR CHIP 33K 1/16W (1005)
R1406	1-208-719-11	s RESISTOR CHIP 33K 1/16W (1005)
R1407	1-208-719-11	s RESISTOR CHIP 33K 1/16W (1005)
R1408	1-208-719-11	s RESISTOR CHIP 33K 1/16W (1005)
R1409	1-208-683-11	s RESISTOR CHIP 1K 1/16W (1005)
R1410	1-208-699-11	s RESISTOR,CHIP 4.7K 1/16W(1005)
R1411	1-208-707-11	s RESISTOR,CHIP 10K 1/16W (1005)
R1412	1-208-719-11	s RESISTOR CHIP 33K 1/16W (1005)
R1413	1-208-683-11	s RESISTOR CHIP 1K 1/16W (1005)
R1414	1-208-699-11	s RESISTOR,CHIP 4.7K 1/16W(1005)
R1415	1-208-719-11	s RESISTOR CHIP 33K 1/16W (1005)
R1416	1-208-687-11	s RESISTOR CHIP 1.5K 1/16W (1005)
R1417	1-208-699-11	s RESISTOR,CHIP 4.7K 1/16W(1005)
R1418	1-208-719-11	s RESISTOR CHIP 33K 1/16W (1005)
R1419	1-208-683-11	s RESISTOR CHIP 1K 1/16W (1005)
R1420	1-208-699-11	s RESISTOR,CHIP 4.7K 1/16W(1005)
R1421	1-208-707-11	s RESISTOR,CHIP 10K 1/16W (1005)
R1422	1-208-707-11	s RESISTOR,CHIP 10K 1/16W (1005)
R1423	1-208-707-11	s RESISTOR,CHIP 10K 1/16W (1005)
R1424	1-218-990-11	s RESISTOR,CHIP 0 1/16W (1005)
R1425	1-208-947-11	s RESISTOR CHIP 330K 1/16W(1005)
R1426	1-218-965-11	s RESISTOR, CHIP 10K 1/16W
R1427	1-208-947-11	s RESISTOR CHIP 330K 1/16W(1005)
R1428	1-208-947-11	s RESISTOR CHIP 330K 1/16W(1005)
R1429	1-218-941-81	s RESISTOR,CHIP 100,1/16W (1005)
R1430	1-218-969-11	s RESISTOR,CHIP 22K 1/16W (1608)
R1432	1-218-969-11	s RESISTOR,CHIP 22K 1/16W (1608)
R1433	1-218-969-11	s RESISTOR,CHIP 22K 1/16W (1608)
R1434	1-218-969-11	s RESISTOR,CHIP 22K 1/16W (1608)
R1435	1-218-969-11	s RESISTOR,CHIP 22K 1/16W (1608)
R1436	1-218-965-11	s RESISTOR, CHIP 10K 1/16W
RB200	1-234-372-11	s RES, NETWORK 100X4 (1005)
RB201	1-234-372-11	s RES, NETWORK 100X4 (1005)
RB202	1-234-372-11	s RES, NETWORK 100X4 (1005)
RB203	1-234-372-11	s RES, NETWORK 100X4 (1005)
RB700	1-234-372-11	s RES, NETWORK 100X4 (1005)
RB701	1-234-372-11	s RES, NETWORK 100X4 (1005)
RB702	1-234-372-11	s RES, NETWORK 100X4 (1005)
RB703	1-234-372-11	s RES, NETWORK 100X4 (1005)
RB704	1-234-372-11	s RES, NETWORK 100X4 (1005)
RB705	1-234-371-11	s RES, NETWORK 47X4 (1005)
RB706	1-234-372-11	s RES, NETWORK 100X4 (1005)
RB707	1-234-372-11	s RES, NETWORK 100X4 (1005)
RB708	1-234-372-11	s RES, NETWORK 100X4 (1005)
RB709	1-234-372-11	s RES, NETWORK 100X4 (1005)
RB710	1-234-372-11	s RES, NETWORK 100X4 (1005)

(C BOARD (FOR VPL-CX75))

Ref. No. or Q'ty	Part No.	SP Description
RB711	1-234-371-11	s RES, NETWORK 47X4 (1005)
RB712	1-234-371-11	s RES, NETWORK 47X4 (1005)
RB713	1-234-371-11	s RES, NETWORK 47X4 (1005)
RB714	1-234-371-11	s RES, NETWORK 47X4 (1005)
RB715	1-234-371-11	s RES, NETWORK 47X4 (1005)
RB900	1-234-371-11	s RES, NETWORK 47X4 (1005)
RB901	1-234-371-11	s RES, NETWORK 47X4 (1005)
RB902	1-234-371-11	s RES, NETWORK 47X4 (1005)
RB903	1-234-371-11	s RES, NETWORK 47X4 (1005)
RB904	1-234-371-11	s RES, NETWORK 47X4 (1005)
RB905	1-234-371-11	s RES, NETWORK 47X4 (1005)
RB906	1-234-371-11	s RES, NETWORK 47X4 (1005)
RB907	1-234-371-11	s RES, NETWORK 47X4 (1005)
RB908	1-234-371-11	s RES, NETWORK 47X4 (1005)
RB909	1-234-371-11	s RES, NETWORK 47X4 (1005)
RB910	1-234-371-11	s RES, NETWORK 47X4 (1005)
RB912	1-234-371-11	s RES, NETWORK 47X4 (1005)
RB913	1-234-371-11	s RES, NETWORK 47X4 (1005)
RB914	1-234-371-11	s RES, NETWORK 47X4 (1005)
RB915	1-234-371-11	s RES, NETWORK 47X4 (1005)
RB1000	1-234-370-11	s RES, NETWORK 22X4 (1005)
RB1001	1-234-370-11	s RES, NETWORK 22X4 (1005)
RB1002	1-234-370-11	s RES, NETWORK 22X4 (1005)
RB1100	1-234-370-11	s RES, NETWORK 22X4 (1005)
RB1101	1-234-370-11	s RES, NETWORK 22X4 (1005)
RB1102	1-234-370-11	s RES, NETWORK 22X4 (1005)
RB1200	1-234-370-11	s RES, NETWORK 22X4 (1005)
RB1201	1-234-370-11	s RES, NETWORK 22X4 (1005)
RB1202	1-234-370-11	s RES, NETWORK 22X4 (1005)
RB1301	1-234-371-11	s RES, NETWORK 47X4 (1005)
RB1302	1-234-371-11	s RES, NETWORK 47X4 (1005)
RB1303	1-234-371-11	s RES, NETWORK 47X4 (1005)
RB1304	1-234-371-11	s RES, NETWORK 47X4 (1005)
RB1305	1-234-371-11	s RES, NETWORK 47X4 (1005)
RB1306	1-234-371-11	s RES, NETWORK 47X4 (1005)
RB1307	1-234-371-11	s RES, NETWORK 47X4 (1005)
RB1308	1-234-371-11	s RES, NETWORK 47X4 (1005)
S900	1-771-337-21	s SWITCH, SLIDE
TH300	1-803-353-21	s THERMISTOR, POSITIVE
TH301	1-771-845-11	s THERMISTOR, POSITIVE
TH1000	1-803-382-11	s THERMISTOR (10K)
TP100	1-535-757-11	s CHIP, CHECKER (CONNECTOR)
TP200	1-535-757-11	s CHIP, CHECKER (CONNECTOR)
TP700	1-535-757-11	s CHIP, CHECKER (CONNECTOR)
TP1202	1-535-757-11	s CHIP, CHECKER (CONNECTOR)
X200	1-813-326-21	s VIBRATOR, CRYSTAL
X600	1-813-124-21	s VIBRATOR, CERAMIC
X700	1-795-756-11	s VIBRATOR, CRYSTAL
X800	1-813-326-21	s VIBRATOR, CRYSTAL
X801	1-813-326-21	s VIBRATOR, CRYSTAL
X1300	1-795-495-21	s VIBRATOR, CERAMIC

GA BOARD

Ref. No. or Q'ty	Part No.	SP	Description
1pc	A-1054-268-A	s	MOUNTED CIRCUIT BOARD, GA
1pc	△ 4-034-094-01	s	SHEET, INSULATE (PLA)
3pcs	7-682-649-09	s	SCREW +PS 3X10(EP-FE/ZNBK/CM2)
C101	△ 1-165-529-31	s	CAP,AC M/P 0.22U 275 M (B8113)
C102	△ 1-113-903-11	s	CAPACITOR,CERAMIC 0.001MF/250V
C103	△ 1-113-903-11	s	CAPACITOR,CERAMIC 0.001MF/250V
C104	△ 1-165-530-11	s	CAPACITOR,FILM(ACROSS)0.47MF
C105	1-100-915-11	s	CAPACITOR, PE FILM 0.47MF
C106	1-100-914-11	s	CAPACITOR, PE FILM 2.2MF
C107	1-162-970-11	s	CAPACITOR CERAMIC 0.01MF/25V B
C108	1-162-964-11	s	CAPACITOR,CERAMIC 1000PF/50V B
C109	1-127-715-11	s	CAPACITOR,CERAMIC 0.22MF B1608
C110	1-126-400-11	s	CAPACITOR ELECT 22MF/35V(CHIP)
C111	1-115-339-11	s	CAPACITOR,CERAMIC 0.1MF/50V
C112	△ 1-125-991-11	s	CAPACITOR,ELECT 180MF/450V
CN101	△ 1-818-742-11	s	INLET,AC
CN102	△ 1-691-960-21	o	PIN, CONNECTOR (PC BOARD) 3P
CN103	△ 1-785-946-11	s	CONNECTOR 3P
CN104	△ 1-691-960-11	o	PIN,CONNECTOR (PC BOARD) 3P
D101	△ 6-500-406-01	s	DIODE D10XB80
D102	8-719-304-63	s	DIODE RM11C (RECTI)
D103	8-719-078-04	s	DIODE EC31QS03L-TE12L
D104	8-719-076-72	s	DIODE SF10L60U
D105	8-719-037-54	s	DIODE RD30SB-T1
F101	△ 1-576-659-11	s	FUSE (5A 250V)
FB101	1-414-581-21	s	INDUCTOR, CHIP
IC101	8-759-641-00	s	IC MC33262DR2
L101	△ 1-456-768-11	s	LINE FILTER COIL
L102	△ 1-456-768-11	s	LINE FILTER COIL
L103	△ 1-456-767-11	s	CHOKE COIL
L104	△ 1-456-133-31	s	COIL, CHOKE 200UH
Q101	8-729-055-36	s	TRANSISTOR SPW20N60S5
Q102	8-729-230-27	s	TRANSISTOR 2SA1213Y-TE12L
Q103	8-729-052-29	s	TRANSISTOR 2SK2876-01MR-F122
R101	△ 1-219-759-11	s	RESISTOR (SURGE RESISTANT) 1M
R102	1-218-907-11	s	RESISTOR,CHIP 330K 1/10W(1608)
R103	1-218-907-11	s	RESISTOR,CHIP 330K 1/10W(1608)
R104	1-218-907-11	s	RESISTOR,CHIP 330K 1/10W(1608)
R105	1-218-871-11	s	RESISTOR,CHIP 10K 1/10W (1608)
R106	1-218-871-11	s	RESISTOR,CHIP 10K 1/10W (1608)
R107	1-216-817-11	s	RESISTOR,CHIP 470 1/10W 1608
R108	1-249-393-11	s	RES,CARBON 10 1/4W
R109	1-216-837-11	s	RESISTOR,CHIP 22K 1/16W 1608
R110	1-214-789-00	s	RESISTOR,METAL 0.1/5W
R111	1-218-899-11	s	RESISTOR,CHIP 150K 1/10W(1608)
R112	1-218-907-11	s	RESISTOR,CHIP 330K 1/10W(1608)
R113	1-218-907-11	s	RESISTOR,CHIP 330K 1/10W(1608)
R114	1-218-907-11	s	RESISTOR,CHIP 330K 1/10W(1608)
R115	1-218-907-11	s	RESISTOR,CHIP 330K 1/10W(1608)
R116	1-218-871-11	s	RESISTOR,CHIP 10K 1/10W (1608)
R117	1-216-829-11	s	RESISTOR,CHIP 4.7K 1/10W(1608)
R118	1-216-833-11	s	RESISTOR,CHIP 10K 1/10W (1608)
R119	1-216-841-11	s	RESISTOR, CHIP 47K 1/10W 1608
R120	1-216-841-11	s	RESISTOR, CHIP 47K 1/10W 1608
TH101	1-810-509-11	s	THERMISTOR,POWER

(GA BOARD)

Ref. No. or Q'ty	Part No.	SP	Description
VDR101	△ 1-801-268-11	s	VARISTOR (TNR14V471K660)

GB BOARD

Ref. No. or Q'ty	Part No.	SP Description
1pc	A-1054-269-A	s MOUNTED CIRCUIT BOARD, GB
C201	1-162-970-11	s CAPACITOR CERAMIC 0.01MF/25V B
C202	1-125-889-11	s CAPACITOR, C.CERAMIC 2.2MF
C203	1-128-403-11	s CAPACITOR,ELECT 47MF/35V(CHIP)
C204	1-162-964-11	s CAPACITOR,CERAMIC 1000PF/50V B
C205	1-128-004-11	s CAPACITOR ELECT 10MF/16V(CHIP)
C206	1-162-970-11	s CAPACITOR CERAMIC 0.01MF/25V B
C207	1-115-566-11	s CAPACITOR,CERAMIC 4.7MF B/6.3V
C208	1-128-403-11	s CAPACITOR,ELECT 47MF/35V(CHIP)
C209	1-115-339-11	s CAPACITOR,CERAMIC 0.1MF/50V
C210	1-162-970-11	s CAPACITOR CERAMIC 0.01MF/25V B
C211	1-137-753-11	s CAPACITOR METALIZED 4700PF
C212	1-107-911-11	s CAPACITOR,ELECT 220MF/50V
C214	1-107-826-11	s CAPACITOR,CHIP CERAMIC 0.1MF
C215	1-128-946-31	s CAP, ELECT 2200MF
C216	1-131-976-11	s CAP, ELECT 820MF
C217	1-135-960-91	s CAP, CHIP CERAMIC 10MF B(3225)
C218	1-135-960-91	s CAP, CHIP CERAMIC 10MF B(3225)
C219	1-107-826-11	s CAPACITOR,CHIP CERAMIC 0.1MF
C220	1-135-960-91	s CAP, CHIP CERAMIC 10MF B(3225)
C222	1-107-826-11	s CAPACITOR,CHIP CERAMIC 0.1MF
C224	1-135-960-91	s CAP, CHIP CERAMIC 10MF B(3225)
C225	1-135-343-11	s CAPACITOR,SOLID ELECT 120MF
C226	1-164-230-11	s CAPACITOR,CERAMIC 220PF/50V
C227	1-162-927-11	s CAPACITOR,CERAMIC 100PF/50V CH
C228	1-107-826-11	s CAPACITOR,CHIP CERAMIC 0.1MF
C229	1-165-870-21	s CAPACITOR, ELECT 100MF(6.3X6)
C230	1-107-826-11	s CAPACITOR,CHIP CERAMIC 0.1MF
C231	1-126-206-11	s CAPACITOR, ELECT 100MF/6.3V
CN201	△ 1-785-946-11	s CONNECTOR 3P
CN203	1-779-884-11	s PLUG, CONNECTOR 4P
CN204	1-779-268-21	o PIN, CONNECTOR (11P)(SMD)(1.5M
CN205	1-784-254-11	s CONNECTOR 10P
D201	8-719-107-13	s DIODE RD18M-B1
D202	8-719-037-54	s DIODE RD30SB-T1
D203	8-719-073-01	s DIODE MA111-(K8).S0
D204	8-719-979-64	s DIODE UF4005PKG23
D205	8-719-055-30	s DIODE D1FS4A-TA
D206	8-719-037-57	s DIODE RD39SB-T1
D207	8-719-510-12	s DIODE D10SC4M
D208	8-719-510-09	s DIODE D10SC6M (RECTI)
D210	8-719-073-01	s DIODE MA111-(K8).S0
D211	8-719-073-01	s DIODE MA111-(K8).S0
D212	8-719-073-01	s DIODE MA111-(K8).S0
D215	8-719-073-01	s DIODE MA111-(K8).S0
D216	8-719-073-01	s DIODE MA111-(K8).S0
D217	8-719-073-01	s DIODE MA111-(K8).S0
D219	8-719-078-04	s DIODE EC31QS03L-TE12L
D220	8-719-073-01	s DIODE MA111-(K8).S0
FB201	1-414-581-21	s INDUCTOR, CHIP
FB202	1-414-581-21	s INDUCTOR, CHIP
IC201	6-705-768-01	s IC MCZ3001UB
IC202	8-759-183-53	s IC TL431CPK-E2
IC203	8-759-100-93	s IC UPC393G2
IC204	8-759-713-98	s IC LTC1772CS6
L201	1-409-527-41	s COIL, CHOKE 4.7UH

(GB BOARD)

Ref. No. or Q'ty	Part No.	SP Description
L202	1-409-527-41	s COIL, CHOKE 4.7UH
L204	1-409-527-41	s COIL, CHOKE 4.7UH
L205	1-409-529-41	s COIL, CHOKE 10UH
L206	1-409-527-41	s COIL, CHOKE 4.7UH
PH201	△ 8-749-016-82	s PHOTO COUPLER PC123GY2
PH202	△ 8-749-016-82	s PHOTO COUPLER PC123GY2
Q201	8-729-216-22	s TRANSISTOR 2SA1162-G
Q202	8-729-230-49	s TRANSISTOR 2SC2712-YG
Q203	△ 8-729-052-29	s TRANSISTOR 2SK2876-01MR-F122
Q204	△ 8-729-052-29	s TRANSISTOR 2SK2876-01MR-F122
Q206	8-729-029-14	s TRANSISTOR DTC144EUA-T106
Q207	8-729-029-14	s TRANSISTOR DTC144EUA-T106
Q208	8-729-047-32	s TRANSISTOR SI4425DY-T1
Q209	8-729-047-32	s TRANSISTOR SI4425DY-T1
Q210	8-729-029-14	s TRANSISTOR DTC144EUA-T106
Q211	8-729-029-14	s TRANSISTOR DTC144EUA-T106
Q214	6-550-126-01	s TRANSISTOR SI4403DY-T1
Q215	8-729-029-14	s TRANSISTOR DTC144EUA-T106
Q216	8-729-029-14	s TRANSISTOR DTC144EUA-T106
Q217	8-729-029-14	s TRANSISTOR DTC144EUA-T106
R201	1-249-389-11	s RES,CARBON 4.7 1/4W
R202	1-218-859-11	s RESISTOR,CHIP 3.3K 1/10W(1608)
R203	1-216-832-11	s RESISTOR,CHIP 8.2K 1/16W 1608
R204	1-216-819-11	s RESISTOR,CHIP 680 1/10W 1608
R205	1-216-841-11	s RESISTOR, CHIP 47K 1/10W 1608
R206	1-218-875-11	s RESISTOR,CHIP 15K 1/10W (1608)
R207	1-216-864-11	s CONDUCTOR, CHIP (1608)
R208	1-218-875-11	s RESISTOR,CHIP 15K 1/10W (1608)
R209	1-218-859-11	s RESISTOR,CHIP 3.3K 1/10W(1608)
R210	1-216-833-11	s RESISTOR,CHIP 10K 1/10W (1608)
R211	1-218-907-11	s RESISTOR,CHIP 330K 1/10W(1608)
R212	1-218-907-11	s RESISTOR,CHIP 330K 1/10W(1608)
R213	1-216-809-11	s RESISTOR,CHIP 100 1/10W 1608
R214	1-218-907-11	s RESISTOR,CHIP 330K 1/10W(1608)
R215	1-216-797-11	s RESISTOR,CHIP 10 1/10W 1608
R216	1-216-797-11	s RESISTOR,CHIP 10 1/10W 1608
R217	1-216-821-11	s RESISTOR,CHIP 1.0K 1/10W(1608)
R218	1-249-417-11	s RESISTOR,CARBON 1K 1/4W(SMALL)
R219	1-216-833-11	s RESISTOR,CHIP 10K 1/10W (1608)
R220	1-216-815-11	s RESISTOR,CHIP 330 1/10W 1608
R221	1-216-833-11	s RESISTOR,CHIP 10K 1/10W (1608)
R222	1-202-933-61	s RESISTOR, FUSE 0.1 1/2W
R223	1-243-803-71	s RES, OXIDE METAL FILM 0.33
R224	1-216-833-11	s RESISTOR,CHIP 10K 1/10W (1608)
R225	1-216-841-11	s RESISTOR, CHIP 47K 1/10W 1608
R228	1-216-821-11	s RESISTOR,CHIP 1.0K 1/10W(1608)
R229	1-216-827-11	s RESISTOR, CHIP 3.3K 1/10W 1608
R230	1-216-817-11	s RESISTOR,CHIP 470 1/10W 1608
R232	1-216-821-11	s RESISTOR,CHIP 1.0K 1/10W(1608)
R233	1-218-873-11	s RESISTOR,CHIP 12K 1/10W (1608)
R234	1-218-863-11	s RESISTOR,CHIP 4.7K 1/10W(1608)
R235	1-218-871-11	s RESISTOR,CHIP 10K 1/10W (1608)
R236	1-216-825-11	s RESISTOR,CHIP 2.2K 1/10W 1608
R237	1-216-835-11	s RESISTOR,CHIP 15K 1/10W
R238	1-216-829-11	s RESISTOR,CHIP 4.7K 1/10W(1608)
R239	1-216-841-11	s RESISTOR, CHIP 47K 1/10W 1608
R240	1-216-833-11	s RESISTOR,CHIP 10K 1/10W (1608)
R241	1-216-827-11	s RESISTOR, CHIP 3.3K 1/10W 1608

(GB BOARD)

Ref. No. or Q'ty	Part No.	SP	Description
R242	1-216-845-11	s	RESISTOR,CHIP 100K 1/10W(1608)
R243	1-216-833-11	s	RESISTOR,CHIP 10K 1/10W (1608)
R244	1-216-841-11	s	RESISTOR, CHIP 47K 1/10W 1608
R245	1-216-841-11	s	RESISTOR, CHIP 47K 1/10W 1608
R246	1-216-825-11	s	RESISTOR,CHIP 2.2K 1/10W 1608
R247	1-216-837-11	s	RESISTOR,CHIP 22K 1/16W 1608
R248	1-216-833-11	s	RESISTOR,CHIP 10K 1/10W (1608)
R249	1-216-833-11	s	RESISTOR,CHIP 10K 1/10W (1608)
R250	1-216-833-11	s	RESISTOR,CHIP 10K 1/10W (1608)
R251	1-216-845-11	s	RESISTOR,CHIP 100K 1/10W(1608)
R252	1-216-829-11	s	RESISTOR,CHIP 4.7K 1/10W(1608)
R253	1-216-835-11	s	RESISTOR,CHIP 15K 1/10W
R255	1-216-833-11	s	RESISTOR,CHIP 10K 1/10W (1608)
R257	1-219-611-21	s	RESISTOR, CHIP 0.047 1W
R258	1-216-797-11	s	RESISTOR,CHIP 10 1/10W 1608
R259	1-216-835-11	s	RESISTOR,CHIP 15K 1/10W
R260	1-216-829-11	s	RESISTOR,CHIP 4.7K 1/10W(1608)
R261	1-216-833-11	s	RESISTOR,CHIP 10K 1/10W (1608)
R262	1-218-907-11	s	RESISTOR,CHIP 330K 1/10W(1608)
R263	1-218-885-11	s	RESISTOR,CHIP 39K 1/10W (1608)
R264	1-218-891-11	s	RESISTOR,CHIP 68K 1/10W (1608)
R265	1-216-833-11	s	RESISTOR,CHIP 10K 1/10W (1608)
T201	△ 1-437-380-31	s	TRANSFORMER, CONVERTER

GC BOARD

Ref. No. or Q'ty	Part No.	SP	Description
1pc	A-1054-270-A	s	MOUNTED CIRCUIT BOARD, GC
C301	1-137-980-91	s	CAPACITOR,CHIP CERAMIC 0.47MF
C302	1-135-960-91	s	CAP, CHIP CERAMIC 10MF B(3225)
C303	1-107-826-11	s	CAPACITOR,CHIP CERAMIC 0.1MF
C304	1-135-960-91	s	CAP, CHIP CERAMIC 10MF B(3225)
C305	1-100-165-21	s	CAP, ELECT 47MF (8X7)
C306	1-126-396-11	s	CAPACITOR,ELECT 47MF/16V(CHIP)
C307	1-135-343-11	s	CAPACITOR,SOLID ELECT 120MF
C309	1-164-230-11	s	CAPACITOR,CERAMIC 220PF/50V
C310	1-104-760-11	s	CAPACITOR CERAMIC 0.047MF/50V
C311	1-162-927-11	s	CAPACITOR,CERAMIC 100PF/50V CH
C312	1-107-826-11	s	CAPACITOR,CHIP CERAMIC 0.1MF
C313	1-107-826-11	s	CAPACITOR,CHIP CERAMIC 0.1MF
C314	1-100-876-11	s	CAPACITOR, DOUBLE LAYERS 10F
C315	1-100-876-11	s	CAPACITOR, DOUBLE LAYERS 10F
C316	1-100-876-11	s	CAPACITOR, DOUBLE LAYERS 10F
C317	1-100-876-11	s	CAPACITOR, DOUBLE LAYERS 10F
C318	1-100-876-11	s	CAPACITOR, DOUBLE LAYERS 10F
C319	1-165-870-21	s	CAPACITOR, ELECT 100MF(6.3X6)
C320	1-107-826-11	s	CAPACITOR,CHIP CERAMIC 0.1MF
C321	1-100-165-21	s	CAP, ELECT 47MF (8X7)
C322	1-126-206-11	s	CAPACITOR, ELECT 100MF/6.3V
C323	1-135-960-91	s	CAP, CHIP CERAMIC 10MF B(3225)
C324	1-107-826-11	s	CAPACITOR,CHIP CERAMIC 0.1MF
C325	1-125-827-11	s	CAPACITOR,CERAMIC 1MF/25V
CN301	1-784-254-11	s	CONNECTOR 10P
CN302	1-766-382-11	s	PIN, CONNECTOR (10P)(SMD)(1.5M
D301	8-719-078-04	s	DIODE EC31QS03L-TE12L
D302	8-719-078-04	s	DIODE EC31QS03L-TE12L
D303	8-719-073-01	s	DIODE MA111-(K8).S0
D304	8-719-078-04	s	DIODE EC31QS03L-TE12L
IC301	8-759-643-48	s	IC BA00ASFP-E2
IC302	8-759-713-98	s	IC LTC1772CS6
IC303	6-600-395-01	s	IC BD9781HFP
L301	1-409-529-41	s	COIL, CHOKO 10UH
L302	1-409-527-41	s	COIL, CHOKO 4.7UH
L303	1-409-529-41	s	COIL, CHOKO 10UH
L304	1-416-606-11	s	COIL, CHOKO (SMD)
L305	1-409-527-41	s	COIL, CHOKO 4.7UH
L306	1-409-529-41	s	COIL, CHOKO 10UH
Q301	6-550-126-01	s	TRANSISTOR SI4403DY-T1
Q303	8-729-047-32	s	TRANSISTOR SI4425DY-T1
R301	1-216-833-11	s	RESISTOR,CHIP 10K 1/10W (1608)
R302	1-216-829-11	s	RESISTOR,CHIP 4.7K 1/10W(1608)
R303	1-216-833-11	s	RESISTOR,CHIP 10K 1/10W (1608)
R304	1-216-821-11	s	RESISTOR,CHIP 1.0K 1/10W(1608)
R305	1-218-863-11	s	RESISTOR,CHIP 4.7K 1/10W(1608)
R306	1-218-883-11	s	RESISTOR,CHIP 33K 1/10W (1608)
R307	1-218-863-11	s	RESISTOR,CHIP 4.7K 1/10W(1608)
R308	1-215-864-00	s	RESISTOR,METAL FILM 150 1W
R309	1-215-864-00	s	RESISTOR,METAL FILM 150 1W
R310	1-219-611-21	s	RESISTOR, CHIP 0.047 1W
R311	1-216-797-11	s	RESISTOR,CHIP 10 1/10W 1608
R312	1-216-852-11	s	RESISTOR,CHIP 390K 1/16W 1608
R314	1-218-847-11	s	RESISTOR, CHIP 1K 1/10W (1608)
R317	1-218-847-11	s	RESISTOR, CHIP 1K 1/10W (1608)

(GC BOARD)

Ref. No. or Q'ty	Part No.	SP Description
R318	1-218-847-11	s RESISTOR, CHIP 1K 1/10W (1608)
R319	1-218-847-11	s RESISTOR, CHIP 1K 1/10W (1608)
R320	1-218-847-11	s RESISTOR, CHIP 1K 1/10W (1608)
R321	1-218-901-11	s RESISTOR,CHIP 180K 1/10W(1608)
R322	1-218-885-11	s RESISTOR,CHIP 39K 1/10W (1608)
R323	1-218-891-11	s RESISTOR,CHIP 68K 1/10W (1608)
R324	1-216-833-11	s RESISTOR,CHIP 10K 1/10W (1608)
R325	1-216-829-11	s RESISTOR,CHIP 4.7K 1/10W(1608)
R326	1-218-899-11	s RESISTOR,CHIP 150K 1/10W(1608)
R327	1-218-879-11	s RESISTOR,CHIP 22K 1/10W (1608)
R328	1-218-873-11	s RESISTOR,CHIP 12K 1/10W (1608)
R329	1-216-813-11	s RESISTOR, CHIP 220 1/10W 1608
R330	1-216-813-11	s RESISTOR, CHIP 220 1/10W 1608

HA BOARD

Ref. No. or Q'ty	Part No.	SP Description
1pc	A-1054-257-A	s MOUNTED CIRCUIT BOARD, HA
C1900	1-164-937-11	s CAPACITOR,CHIP CERAMIC 1000PF
C1901	1-125-777-11	s CAPACITOR CERAMIC 0.1MF/10V
CN1900	1-770-624-21	s PIN, CONNECTOR 7P
D1900	8-719-045-51	s DIODE SEC2422C
D1901	8-719-045-51	s DIODE SEC2422C
D1902	8-719-941-09	s DIODE DAP202U
D1903	8-719-941-86	s DIODE DAN202U
D1904	8-719-941-09	s DIODE DAP202U
D1905	8-719-941-86	s DIODE DAN202U
Q1900	8-729-040-87	s TRANSISTOR 2SJ463A-T1
Q1901	8-729-028-73	s TRANSISTOR DTA114EUA-T106
R1900	1-218-970-11	s RESISTOR CHIP 27K 1/16W (1005)
R1901	1-218-966-11	s RESISTOR, CHIP 12K
R1902	1-218-963-11	s RESISTOR,CHIP 6.8K 1/16W
R1903	1-218-960-11	s RESISTOR, CHIP 3.9K 1/16W
R1904	1-218-958-11	s RESISTOR,CHIP 2.7K 1/16W(1005)
R1905	1-218-941-81	s RESISTOR,CHIP 100,1/16W (1005)
R1906	1-218-941-81	s RESISTOR,CHIP 100,1/16W (1005)
R1907	1-218-957-11	s RESISTOR,CHIP 2.2K 1/16W(1608)
R1908	1-218-941-81	s RESISTOR,CHIP 100,1/16W (1005)
R1909	1-218-955-11	s RESISTOR, CHIP 1.5K
R1910	1-218-941-81	s RESISTOR,CHIP 100,1/16W (1005)
R1911	1-218-956-11	s RESISTOR, CHIP 1.8K
R1912	1-218-955-11	s RESISTOR, CHIP 1.5K
R1913	1-218-956-11	s RESISTOR, CHIP 1.8K
S1900	1-786-651-11	s TACTILE SWITCH
S1901	1-771-105-11	s SWITCH, TACTILE
S1902	1-771-105-11	s SWITCH, TACTILE
S1903	1-771-105-11	s SWITCH, TACTILE
S1904	1-771-105-11	s SWITCH, TACTILE
S1905	1-771-105-11	s SWITCH, TACTILE

HB BOARD

Ref. No. or Q'ty	Part No.	SP Description
1pc	A-1054-258-A	s MOUNTED CIRCUIT BOARD, HB
C2000	1-164-937-11	s CAPACITOR,CHIP CERAMIC 1000PF
C2001	1-125-777-11	s CAPACITOR CERAMIC 0.1MF/10V
CN2000	1-779-806-21	s CONNECTOR, 1.0MM PITCH 8P
D2000	8-719-045-61	s DIODE SEC1901C
D2001	8-719-045-61	s DIODE SEC1901C
D2002	8-719-045-53	s DIODE SEC1801C
D2003	8-719-941-09	s DIODE DAP202U
D2004	8-719-941-86	s DIODE DAN202U
D2005	8-719-941-09	s DIODE DAP202U
D2006	8-719-941-86	s DIODE DAN202U
D2007	8-719-941-09	s DIODE DAP202U
D2008	8-719-941-86	s DIODE DAN202U
Q2000	8-729-028-73	s TRANSISTOR DTA114EUA-T106
Q2001	8-729-028-73	s TRANSISTOR DTA114EUA-T106
Q2002	8-729-028-73	s TRANSISTOR DTA114EUA-T106
R2000	1-218-941-81	s RESISTOR,CHIP 100,1/16W (1005)
R2001	1-218-941-81	s RESISTOR,CHIP 100,1/16W (1005)
R2002	1-218-941-81	s RESISTOR,CHIP 100,1/16W (1005)
R2003	1-218-963-11	s RESISTOR,CHIP 6.8K 1/16W
R2004	1-218-960-11	s RESISTOR, CHIP 3.9K 1/16W
R2005	1-218-958-11	s RESISTOR,CHIP 2.7K 1/16W(1005)
R2006	1-218-957-11	s RESISTOR,CHIP 2.2K 1/16W(1608)
R2007	1-218-966-11	s RESISTOR, CHIP 12K
R2008	1-218-960-11	s RESISTOR, CHIP 3.9K 1/16W
R2009	1-218-967-11	s RESISTOR,CHIP 15K 1/16W (1608)
S2000	1-771-105-11	s SWITCH, TACTILE
S2001	1-771-105-11	s SWITCH, TACTILE
S2002	1-771-105-11	s SWITCH, TACTILE
S2003	1-771-105-11	s SWITCH, TACTILE
S2004	1-771-105-11	s SWITCH, TACTILE
S2005	1-771-105-11	s SWITCH, TACTILE

L BOARD

Ref. No. or Q'ty	Part No.	SP Description
1pc	A-1054-262-A	s MOUNTED CIRCUIT BOARD, L
CN61	1-770-619-11	s PIN, CONNECTOR 2P
D61	8-719-084-01	s DIODE (LED) NSCW215T

M BOARD (FOR VPL-CX75)

Ref. No. or Q'ty	Part No.	SP	Description
1pc	A-1054-272-A	s	MOUNTED CIRCUIT BOARD, M
C1500	1-125-777-11	s	CAPACITOR CERAMIC 0.1MF/10V
C1501	1-125-777-11	s	CAPACITOR CERAMIC 0.1MF/10V
C1502	1-119-667-11	s	CAPACITOR CERAMIC 22MF/10V(F)
C1503	1-125-777-11	s	CAPACITOR CERAMIC 0.1MF/10V
C1504	1-125-777-11	s	CAPACITOR CERAMIC 0.1MF/10V
C1505	1-128-992-11	s	CAPACITOR ELECT 47MF 25V
C1506	1-125-777-11	s	CAPACITOR CERAMIC 0.1MF/10V
C1507	1-125-777-11	s	CAPACITOR CERAMIC 0.1MF/10V
C1508	1-125-777-11	s	CAPACITOR CERAMIC 0.1MF/10V
C1509	1-125-777-11	s	CAPACITOR CERAMIC 0.1MF/10V
C1512	1-125-777-11	s	CAPACITOR CERAMIC 0.1MF/10V
C1513	1-119-667-11	s	CAPACITOR CERAMIC 22MF/10V(F)
C1514	1-125-777-11	s	CAPACITOR CERAMIC 0.1MF/10V
C1515	1-126-205-11	s	CAPACITOR,ELECT 47M/6.3
C1516	1-125-777-11	s	CAPACITOR CERAMIC 0.1MF/10V
C1517	1-126-205-11	s	CAPACITOR,ELECT 47M/6.3
C1518	1-126-205-11	s	CAPACITOR,ELECT 47M/6.3
C1521	1-164-935-11	s	CAPACITOR,CHIP CERAMIC 470PF
C1524	1-115-467-11	s	CAPACITOR CERAMIC 0.22MF/10V B
C1525	1-126-205-11	s	CAPACITOR,ELECT 47M/6.3
C1526	1-125-777-11	s	CAPACITOR CERAMIC 0.1MF/10V
C1527	1-165-989-11	s	CAPACITOR, CERAMIC 10MF (2012)
C1528	1-125-777-11	s	CAPACITOR CERAMIC 0.1MF/10V
C1529	1-125-777-11	s	CAPACITOR CERAMIC 0.1MF/10V
C1530	1-165-989-11	s	CAPACITOR, CERAMIC 10MF (2012)
C1531	1-165-989-11	s	CAPACITOR, CERAMIC 10MF (2012)
C1532	1-117-720-11	s	CAPACITOR, CERAMIC 4.7MF/10V F
C1533	1-117-720-11	s	CAPACITOR, CERAMIC 4.7MF/10V F
C1540	1-125-777-11	s	CAPACITOR CERAMIC 0.1MF/10V
C1600	1-125-777-11	s	CAPACITOR CERAMIC 0.1MF/10V
C1601	1-125-777-11	s	CAPACITOR CERAMIC 0.1MF/10V
C1602	1-137-710-91	s	CAPACITOR,CERAMIC 10MF B(2012)
C1603	1-125-777-11	s	CAPACITOR CERAMIC 0.1MF/10V
C1604	1-125-777-11	s	CAPACITOR CERAMIC 0.1MF/10V
C1605	1-125-777-11	s	CAPACITOR CERAMIC 0.1MF/10V
C1606	1-125-777-11	s	CAPACITOR CERAMIC 0.1MF/10V
C1607	1-125-777-11	s	CAPACITOR CERAMIC 0.1MF/10V
C1608	1-125-777-11	s	CAPACITOR CERAMIC 0.1MF/10V
C1609	1-125-777-11	s	CAPACITOR CERAMIC 0.1MF/10V
C1610	1-125-777-11	s	CAPACITOR CERAMIC 0.1MF/10V
C1611	1-125-777-11	s	CAPACITOR CERAMIC 0.1MF/10V
C1612	1-125-777-11	s	CAPACITOR CERAMIC 0.1MF/10V
C1613	1-125-777-11	s	CAPACITOR CERAMIC 0.1MF/10V
C1614	1-125-777-11	s	CAPACITOR CERAMIC 0.1MF/10V
C1615	1-125-777-11	s	CAPACITOR CERAMIC 0.1MF/10V
C1616	1-137-710-91	s	CAPACITOR,CERAMIC 10MF B(2012)
C1617	1-125-777-11	s	CAPACITOR CERAMIC 0.1MF/10V
C1700	1-164-943-11	s	CAPACITOR,CHIP CERAMIC 0.01MF
C1701	1-164-943-11	s	CAPACITOR,CHIP CERAMIC 0.01MF
C1702	1-164-943-11	s	CAPACITOR,CHIP CERAMIC 0.01MF
C1703	1-137-710-91	s	CAPACITOR,CERAMIC 10MF B(2012)
C1704	1-164-943-11	s	CAPACITOR,CHIP CERAMIC 0.01MF
C1705	1-164-943-11	s	CAPACITOR,CHIP CERAMIC 0.01MF
C1706	1-164-943-11	s	CAPACITOR,CHIP CERAMIC 0.01MF
C1707	1-164-943-11	s	CAPACITOR,CHIP CERAMIC 0.01MF
C1708	1-164-943-11	s	CAPACITOR,CHIP CERAMIC 0.01MF
C1709	1-164-943-11	s	CAPACITOR,CHIP CERAMIC 0.01MF

(M BOARD (FOR VPL-CX75))

Ref. No. or Q'ty	Part No.	SP	Description
C1710	1-164-943-11	s	CAPACITOR,CHIP CERAMIC 0.01MF
C1711	1-164-943-11	s	CAPACITOR,CHIP CERAMIC 0.01MF
C1712	1-164-943-11	s	CAPACITOR,CHIP CERAMIC 0.01MF
C1713	1-164-943-11	s	CAPACITOR,CHIP CERAMIC 0.01MF
C1714	1-164-943-11	s	CAPACITOR,CHIP CERAMIC 0.01MF
C1715	1-164-943-11	s	CAPACITOR,CHIP CERAMIC 0.01MF
C1716	1-125-777-11	s	CAPACITOR CERAMIC 0.1MF/10V
C1717	1-125-777-11	s	CAPACITOR CERAMIC 0.1MF/10V
C1718	1-125-777-11	s	CAPACITOR CERAMIC 0.1MF/10V
C1719	1-125-777-11	s	CAPACITOR CERAMIC 0.1MF/10V
C1720	1-125-777-11	s	CAPACITOR CERAMIC 0.1MF/10V
C1721	1-125-777-11	s	CAPACITOR CERAMIC 0.1MF/10V
C1722	1-125-777-11	s	CAPACITOR CERAMIC 0.1MF/10V
C1723	1-125-777-11	s	CAPACITOR CERAMIC 0.1MF/10V
C1724	1-125-777-11	s	CAPACITOR CERAMIC 0.1MF/10V
C1725	1-125-777-11	s	CAPACITOR CERAMIC 0.1MF/10V
C1726	1-125-777-11	s	CAPACITOR CERAMIC 0.1MF/10V
C1727	1-125-777-11	s	CAPACITOR CERAMIC 0.1MF/10V
C1728	1-125-777-11	s	CAPACITOR CERAMIC 0.1MF/10V
C1729	1-125-777-11	s	CAPACITOR CERAMIC 0.1MF/10V
C1730	1-125-777-11	s	CAPACITOR CERAMIC 0.1MF/10V
C1731	1-125-777-11	s	CAPACITOR CERAMIC 0.1MF/10V
C1732	1-137-710-91	s	CAPACITOR,CERAMIC 10MF B(2012)
C1733	1-125-777-11	s	CAPACITOR CERAMIC 0.1MF/10V
C1734	1-125-777-11	s	CAPACITOR CERAMIC 0.1MF/10V
C1735	1-125-777-11	s	CAPACITOR CERAMIC 0.1MF/10V
C1736	1-125-777-11	s	CAPACITOR CERAMIC 0.1MF/10V
C1737	1-125-777-11	s	CAPACITOR CERAMIC 0.1MF/10V
C1738	1-125-777-11	s	CAPACITOR CERAMIC 0.1MF/10V
C1739	1-125-777-11	s	CAPACITOR CERAMIC 0.1MF/10V
C1740	1-125-777-11	s	CAPACITOR CERAMIC 0.1MF/10V
C1741	1-125-777-11	s	CAPACITOR CERAMIC 0.1MF/10V
C1742	1-125-777-11	s	CAPACITOR CERAMIC 0.1MF/10V
C1743	1-125-777-11	s	CAPACITOR CERAMIC 0.1MF/10V
C1744	1-137-710-91	s	CAPACITOR,CERAMIC 10MF B(2012)
C1746	1-137-710-91	s	CAPACITOR,CERAMIC 10MF B(2012)
CN1500	1-818-313-11	s	FFC/FPC CONNECTOR (ZIF)
CN1501	1-779-202-21	s	CONNECTOR, BOARD TO BOARD 70P
CN1700	1-770-627-21	s	PIN, CONNECTOR 10P
D1504	8-719-045-61	s	DIODE SEC1901C
D1505	8-719-059-53	s	DIODE MA3J14700LSO
D1600	8-719-941-86	s	DIODE DAN202U
FB1500	1-414-921-11	s	INDUCTOR, FERRITE BEAD
FB1501	1-500-451-11	s	MICRO INDUCTOR (CHIP) 41P750S
FB1502	1-414-921-11	s	INDUCTOR, FERRITE BEAD
FB1504	1-414-921-11	s	INDUCTOR, FERRITE BEAD
FB1505	1-414-921-11	s	INDUCTOR, FERRITE BEAD
FB1506	1-414-921-11	s	INDUCTOR, FERRITE BEAD
FB1507	1-414-921-11	s	INDUCTOR, FERRITE BEAD
FB1508	1-414-921-11	s	INDUCTOR, FERRITE BEAD
FB1509	1-414-921-11	s	INDUCTOR, FERRITE BEAD
FB1600	1-414-921-11	s	INDUCTOR, FERRITE BEAD
FB1601	1-469-670-11	o	FERRITE, EMI (SMD)
FB1700	1-469-670-11	o	FERRITE, EMI (SMD)
FB1701	1-469-670-11	o	FERRITE, EMI (SMD)
FB1702	1-469-670-11	o	FERRITE, EMI (SMD)
FB1703	1-469-670-11	o	FERRITE, EMI (SMD)

(M BOARD (FOR VPL-CX75))

Ref. No. or Q'ty	Part No.	SP Description
FB1704	1-469-670-11	o FERRITE, EMI (SMD)
IC1500	6-702-812-11	s IC CY27027ZZCT
IC1501	6-700-551-01	s IC MIC2562A-OBMTR
IC1502	6-704-952-01	s IC AIC1084-PEJTR
IC1503	6-703-108-01	o IC SN74LVC2G04DCKR
IC1504	6-704-958-01	s IC AIC1117A-18PYJTR
IC1505	8-759-665-50	s IC AK4352VT-E2
IC1506	8-759-331-27	s IC MM1096AFF
IC1600	6-704-521-01	s IC MB93493PB-GE1
IC1601	6-702-688-01	s IC M24C64-WMN6T(B)
IC1700	6-700-628-01	s IC HY57V281620HCT-H-TR
IC1701	6-700-628-01	s IC HY57V281620HCT-H-TR
IC1702	6-804-396-01	s IC MX29LV320ABTC-90G-769MS100
IC1703	6-704-509-01	s IC MB93403-26PB-GE1
L1500	1-469-522-11	s INDUCTOR 1.0UH (NLFV25)
L1501	1-414-770-91	s INDUCTOR 4.7UH
Q1500	8-729-026-53	s TRANSISTOR 2SA1576A-T106-QR
Q1501	8-729-026-53	s TRANSISTOR 2SA1576A-T106-QR
Q1502	8-729-013-28	s TRANSISTOR HN1B01FU-TE85R
Q1503	8-729-026-53	s TRANSISTOR 2SA1576A-T106-QR
Q1600	8-729-026-53	s TRANSISTOR 2SA1576A-T106-QR
Q1700	8-729-013-28	s TRANSISTOR HN1B01FU-TE85R
R1500	1-218-990-11	s RESISTOR,CHIP 0 1/16W (1005)
R1502	1-218-965-11	s RESISTOR, CHIP 10K 1/16W
R1503	1-218-941-81	s RESISTOR,CHIP 100,1/16W (1005)
R1504	1-208-643-11	s RESISTOR CHIP 22 1/16W (1005)
R1505	1-218-937-11	s RESISTOR, CHIP 47
R1506	1-218-957-11	s RESISTOR,CHIP 2.2K 1/16W(1608)
R1507	1-208-643-11	s RESISTOR CHIP 22 1/16W (1005)
R1508	1-218-953-11	s RESISTOR, CHIP 1K 1/16W
R1509	1-218-977-11	s RESISTOR,CHIP 100K 1/16W(1005)
R1510	1-218-990-11	s RESISTOR,CHIP 0 1/16W (1005)
R1511	1-218-990-11	s RESISTOR,CHIP 0 1/16W (1005)
R1512	1-208-643-11	s RESISTOR CHIP 22 1/16W (1005)
R1513	1-208-643-11	s RESISTOR CHIP 22 1/16W (1005)
R1514	1-208-643-11	s RESISTOR CHIP 22 1/16W (1005)
R1515	1-208-643-11	s RESISTOR CHIP 22 1/16W (1005)
R1516	1-218-965-11	s RESISTOR, CHIP 10K 1/16W
R1517	1-218-965-11	s RESISTOR, CHIP 10K 1/16W
R1518	1-208-643-11	s RESISTOR CHIP 22 1/16W (1005)
R1519	1-208-643-11	s RESISTOR CHIP 22 1/16W (1005)
R1523	1-208-671-11	s RESISTOR CHIP 330 1/16W (1005)
R1524	1-208-659-11	s RESISTOR CHIP 100 1/16W (1005)
R1525	1-208-671-11	s RESISTOR CHIP 330 1/16W (1005)
R1526	1-218-990-11	s RESISTOR,CHIP 0 1/16W (1005)
R1527	1-208-643-11	s RESISTOR CHIP 22 1/16W (1005)
R1528	1-208-643-11	s RESISTOR CHIP 22 1/16W (1005)
R1529	1-208-643-11	s RESISTOR CHIP 22 1/16W (1005)
R1530	1-208-643-11	s RESISTOR CHIP 22 1/16W (1005)
R1531	1-218-965-11	s RESISTOR, CHIP 10K 1/16W
R1532	1-218-941-81	s RESISTOR,CHIP 100,1/16W (1005)
R1534	1-218-965-11	s RESISTOR, CHIP 10K 1/16W
R1535	1-218-945-11	s RESISTOR,CHIP 220 1/16W(1005)
R1536	1-218-965-11	s RESISTOR, CHIP 10K 1/16W
R1537	1-218-965-11	s RESISTOR, CHIP 10K 1/16W
R1538	1-218-965-11	s RESISTOR, CHIP 10K 1/16W
R1539	1-208-643-11	s RESISTOR CHIP 22 1/16W (1005)

(M BOARD (FOR VPL-CX75))

Ref. No. or Q'ty	Part No.	SP Description
R1540	1-218-989-11	s RESISTOR,CHIP 1M 1/16W (1005)
R1541	1-218-965-11	s RESISTOR, CHIP 10K 1/16W
R1542	1-208-643-11	s RESISTOR CHIP 22 1/16W (1005)
R1545	1-218-961-11	s RESISTOR, CHIP 4.7K 1/16W
R1548	1-218-961-11	s RESISTOR, CHIP 4.7K 1/16W
R1549	1-218-941-81	s RESISTOR,CHIP 100,1/16W (1005)
R1550	1-218-953-11	s RESISTOR, CHIP 1K 1/16W
R1551	1-218-965-11	s RESISTOR, CHIP 10K 1/16W
R1553	1-208-643-11	s RESISTOR CHIP 22 1/16W (1005)
R1554	1-208-643-11	s RESISTOR CHIP 22 1/16W (1005)
R1555	1-218-990-11	s RESISTOR,CHIP 0 1/16W (1005)
R1556	1-218-990-11	s RESISTOR,CHIP 0 1/16W (1005)
R1558	1-218-977-11	s RESISTOR,CHIP 100K 1/16W(1005)
R1560	1-218-977-11	s RESISTOR,CHIP 100K 1/16W(1005)
R1570	1-218-990-11	s RESISTOR,CHIP 0 1/16W (1005)
R1571	1-218-990-11	s RESISTOR,CHIP 0 1/16W (1005)
R1572	1-218-990-11	s RESISTOR,CHIP 0 1/16W (1005)
R1573	1-218-990-11	s RESISTOR,CHIP 0 1/16W (1005)
R1574	1-218-969-11	s RESISTOR,CHIP 22K 1/16W (1608)
R1575	1-218-965-11	s RESISTOR, CHIP 10K 1/16W
R1600	1-208-643-11	s RESISTOR CHIP 22 1/16W (1005)
R1601	1-208-643-11	s RESISTOR CHIP 22 1/16W (1005)
R1602	1-208-643-11	s RESISTOR CHIP 22 1/16W (1005)
R1603	1-218-965-11	s RESISTOR, CHIP 10K 1/16W
R1604	1-218-969-11	s RESISTOR,CHIP 22K 1/16W (1608)
R1605	1-218-965-11	s RESISTOR, CHIP 10K 1/16W
R1606	1-218-955-11	s RESISTOR, CHIP 1.5K
R1609	1-218-990-11	s RESISTOR,CHIP 0 1/16W (1005)
R1610	1-208-645-11	s RESISTOR CHIP 27 1/16W (1005)
R1612	1-208-635-11	s RESISTOR CHIP 10 1/16W (1005)
R1613	1-218-990-11	s RESISTOR,CHIP 0 1/16W (1005)
R1615	1-208-643-11	s RESISTOR CHIP 22 1/16W (1005)
R1616	1-208-643-11	s RESISTOR CHIP 22 1/16W (1005)
R1617	1-218-990-11	s RESISTOR,CHIP 0 1/16W (1005)
R1619	1-218-961-11	s RESISTOR, CHIP 4.7K 1/16W
R1620	1-208-643-11	s RESISTOR CHIP 22 1/16W (1005)
R1621	1-208-643-11	s RESISTOR CHIP 22 1/16W (1005)
R1622	1-218-965-11	s RESISTOR, CHIP 10K 1/16W
R1623	1-208-643-11	s RESISTOR CHIP 22 1/16W (1005)
R1624	1-208-643-11	s RESISTOR CHIP 22 1/16W (1005)
R1625	1-208-643-11	s RESISTOR CHIP 22 1/16W (1005)
R1626	1-208-643-11	s RESISTOR CHIP 22 1/16W (1005)
R1627	1-208-643-11	s RESISTOR CHIP 22 1/16W (1005)
R1628	1-208-635-11	s RESISTOR CHIP 10 1/16W (1005)
R1629	1-218-961-11	s RESISTOR, CHIP 4.7K 1/16W
R1631	1-208-643-11	s RESISTOR CHIP 22 1/16W (1005)
R1632	1-218-965-11	s RESISTOR, CHIP 10K 1/16W
R1633	1-208-643-11	s RESISTOR CHIP 22 1/16W (1005)
R1700	1-218-939-11	s RESISTOR, CHIP 68 1/16W (1005)
R1701	1-218-939-11	s RESISTOR, CHIP 68 1/16W (1005)
R1702	1-218-965-11	s RESISTOR, CHIP 10K 1/16W
R1703	1-218-965-11	s RESISTOR, CHIP 10K 1/16W
R1704	1-218-941-81	s RESISTOR,CHIP 100,1/16W (1005)
R1705	1-218-961-11	s RESISTOR, CHIP 4.7K 1/16W
R1706	1-218-941-81	s RESISTOR,CHIP 100,1/16W (1005)
R1707	1-218-965-11	s RESISTOR, CHIP 10K 1/16W
R1708	1-218-965-11	s RESISTOR, CHIP 10K 1/16W
R1709	1-218-965-11	s RESISTOR, CHIP 10K 1/16W
R1710	1-218-990-11	s RESISTOR,CHIP 0 1/16W (1005)

(M BOARD (FOR VPL-CX75))

Ref. No. or Q'ty	Part No.	SP	Description
R1711	1-218-965-11	s	RESISTOR, CHIP 10K 1/16W
R1712	1-218-965-11	s	RESISTOR, CHIP 10K 1/16W
R1713	1-218-965-11	s	RESISTOR, CHIP 10K 1/16W
R1714	1-218-965-11	s	RESISTOR, CHIP 10K 1/16W
R1715	1-218-965-11	s	RESISTOR, CHIP 10K 1/16W
R1716	1-208-643-11	s	RESISTOR CHIP 22 1/16W (1005)
R1717	1-218-965-11	s	RESISTOR, CHIP 10K 1/16W
R1718	1-218-965-11	s	RESISTOR, CHIP 10K 1/16W
R1719	1-218-965-11	s	RESISTOR, CHIP 10K 1/16W
R1720	1-218-965-11	s	RESISTOR, CHIP 10K 1/16W
R1721	1-218-965-11	s	RESISTOR, CHIP 10K 1/16W
R1722	1-218-965-11	s	RESISTOR, CHIP 10K 1/16W
R1723	1-218-937-11	s	RESISTOR, CHIP 47
R1724	1-218-965-11	s	RESISTOR, CHIP 10K 1/16W
R1725	1-218-965-11	s	RESISTOR, CHIP 10K 1/16W
R1726	1-208-643-11	s	RESISTOR CHIP 22 1/16W (1005)
R1727	1-218-965-11	s	RESISTOR, CHIP 10K 1/16W
R1728	1-218-965-11	s	RESISTOR, CHIP 10K 1/16W
R1729	1-218-965-11	s	RESISTOR, CHIP 10K 1/16W
R1730	1-218-965-11	s	RESISTOR, CHIP 10K 1/16W
R1731	1-218-965-11	s	RESISTOR, CHIP 10K 1/16W
R1732	1-218-965-11	s	RESISTOR, CHIP 10K 1/16W
R1733	1-218-965-11	s	RESISTOR, CHIP 10K 1/16W
R1734	1-218-965-11	s	RESISTOR, CHIP 10K 1/16W
R1735	1-218-965-11	s	RESISTOR, CHIP 10K 1/16W
R1736	1-218-941-81	s	RESISTOR,CHIP 100,1/16W (1005)
RB1500	1-234-378-11	s	RES, NETWORK 10KX4 (1005)
RB1501	1-234-370-11	s	RES, NETWORK 22X4 (1005)
RB1600	1-234-370-11	s	RES, NETWORK 22X4 (1005)
RB1601	1-234-370-11	s	RES, NETWORK 22X4 (1005)
RB1602	1-234-370-11	s	RES, NETWORK 22X4 (1005)
RB1603	1-234-370-11	s	RES, NETWORK 22X4 (1005)
RB1604	1-234-378-11	s	RES, NETWORK 10KX4 (1005)
RB1605	1-234-378-11	s	RES, NETWORK 10KX4 (1005)
RB1606	1-234-378-11	s	RES, NETWORK 10KX4 (1005)
RB1607	1-234-378-11	s	RES, NETWORK 10KX4 (1005)
RB1608	1-234-370-11	s	RES, NETWORK 22X4 (1005)
RB1609	1-234-370-11	s	RES, NETWORK 22X4 (1005)
RB1610	1-234-378-11	s	RES, NETWORK 10KX4 (1005)
RB1611	1-234-378-11	s	RES, NETWORK 10KX4 (1005)
RB1612	1-234-370-11	s	RES, NETWORK 22X4 (1005)
RB1613	1-234-370-11	s	RES, NETWORK 22X4 (1005)
RB1614	1-234-370-11	s	RES, NETWORK 22X4 (1005)
RB1615	1-234-370-11	s	RES, NETWORK 22X4 (1005)
RB1616	1-234-370-11	s	RES, NETWORK 22X4 (1005)
RB1621	1-234-370-11	s	RES, NETWORK 22X4 (1005)
RB1622	1-234-370-11	s	RES, NETWORK 22X4 (1005)
RB1623	1-234-378-11	s	RES, NETWORK 10KX4 (1005)
RB1624	1-234-379-11	s	RESISTOR,NETWORK 22KX4 (1005)
RB1625	1-234-378-11	s	RES, NETWORK 10KX4 (1005)
RB1626	1-234-379-11	s	RESISTOR,NETWORK 22KX4 (1005)
RB1627	1-234-370-11	s	RES, NETWORK 22X4 (1005)
RB1628	1-234-370-11	s	RES, NETWORK 22X4 (1005)
RB1629	1-234-370-11	s	RES, NETWORK 22X4 (1005)
RB1630	1-242-963-21	s	RES, NETWORK 33X4 (1005)
RB1631	1-242-963-21	s	RES, NETWORK 33X4 (1005)
RB1632	1-242-963-21	s	RES, NETWORK 33X4 (1005)
RB1633	1-234-370-11	s	RES, NETWORK 22X4 (1005)

(M BOARD (FOR VPL-CX75))

Ref. No. or Q'ty	Part No.	SP	Description
RB1634	1-234-370-11	s	RES, NETWORK 22X4 (1005)
RB1635	1-234-370-11	s	RES, NETWORK 22X4 (1005)
RB1636	1-234-370-11	s	RES, NETWORK 22X4 (1005)
RB1637	1-234-370-11	s	RES, NETWORK 22X4 (1005)
RB1638	1-242-963-21	s	RES, NETWORK 33X4 (1005)
RB1639	1-242-963-21	s	RES, NETWORK 33X4 (1005)
RB1640	1-234-370-11	s	RES, NETWORK 22X4 (1005)
RB1641	1-234-370-11	s	RES, NETWORK 22X4 (1005)
RB1642	1-234-370-11	s	RES, NETWORK 22X4 (1005)
RB1643	1-242-963-21	s	RES, NETWORK 33X4 (1005)
RB1644	1-242-963-21	s	RES, NETWORK 33X4 (1005)
RB1645	1-234-370-11	s	RES, NETWORK 22X4 (1005)
RB1646	1-242-963-21	s	RES, NETWORK 33X4 (1005)
RB1647	1-234-370-11	s	RES, NETWORK 22X4 (1005)
RB1700	1-234-371-11	s	RES, NETWORK 47X4 (1005)
RB1701	1-234-371-11	s	RES, NETWORK 47X4 (1005)
RB1702	1-234-371-11	s	RES, NETWORK 47X4 (1005)
RB1703	1-234-371-11	s	RES, NETWORK 47X4 (1005)
RB1704	1-234-371-11	s	RES, NETWORK 47X4 (1005)
RB1705	1-234-371-11	s	RES, NETWORK 47X4 (1005)
RB1706	1-234-371-11	s	RES, NETWORK 47X4 (1005)
RB1707	1-234-371-11	s	RES, NETWORK 47X4 (1005)
RB1708	1-234-371-11	s	RES, NETWORK 47X4 (1005)
RB1709	1-234-371-11	s	RES, NETWORK 47X4 (1005)
RB1710	1-234-371-11	s	RES, NETWORK 47X4 (1005)
RB1711	1-234-371-11	s	RES, NETWORK 47X4 (1005)
RB1712	1-234-371-11	s	RES, NETWORK 47X4 (1005)
RB1713	1-234-371-11	s	RES, NETWORK 47X4 (1005)
RB1714	1-234-370-11	s	RES, NETWORK 22X4 (1005)
RB1715	1-234-370-11	s	RES, NETWORK 22X4 (1005)
RB1716	1-234-371-11	s	RES, NETWORK 47X4 (1005)
RB1717	1-234-371-11	s	RES, NETWORK 47X4 (1005)
RB1718	1-234-371-11	s	RES, NETWORK 47X4 (1005)
RB1719	1-234-370-11	s	RES, NETWORK 22X4 (1005)
RB1720	1-234-370-11	s	RES, NETWORK 22X4 (1005)
RB1721	1-234-371-11	s	RES, NETWORK 47X4 (1005)
RB1722	1-234-371-11	s	RES, NETWORK 47X4 (1005)
RB1723	1-234-371-11	s	RES, NETWORK 47X4 (1005)
RB1724	1-234-370-11	s	RES, NETWORK 22X4 (1005)
RB1725	1-234-370-11	s	RES, NETWORK 22X4 (1005)
RB1726	1-234-371-11	s	RES, NETWORK 47X4 (1005)
RB1727	1-234-371-11	s	RES, NETWORK 47X4 (1005)
RB1728	1-234-370-11	s	RES, NETWORK 22X4 (1005)
TP1500	1-535-757-11	s	CHIP, CHECKER (CONNECTOR)
TP1501	1-535-757-11	s	CHIP, CHECKER (CONNECTOR)
TP1502	1-535-757-11	s	CHIP, CHECKER (CONNECTOR)
TP1503	1-535-757-11	s	CHIP, CHECKER (CONNECTOR)
TP1504	1-535-757-11	s	CHIP, CHECKER (CONNECTOR)
TP1505	1-535-757-11	s	CHIP, CHECKER (CONNECTOR)
TP1506	1-535-757-11	s	CHIP, CHECKER (CONNECTOR)
TP1507	1-535-757-11	s	CHIP, CHECKER (CONNECTOR)
TP1508	1-535-757-11	s	CHIP, CHECKER (CONNECTOR)
X1500	1-795-690-22	s	OSCILLATOR, CRYSTAL (SMD)

NF BOARD

Ref. No. or Q'ty	Part No.	SP Description
1pc	A-1054-263-A	s MOUNTED CIRCUIT BOARD, NF
C51	1-165-989-11	s CAPACITOR, CERAMIC 10MF (2012)
CN51	1-784-210-21	s PIN, CONNECTOR 7P
CN52	1-785-900-11	s CONNECTOR
D51	8-719-036-80	s DIODE RD3.9SB
D52	8-719-059-53	s DIODE MA3J14700LSO
IC51	6-704-826-01	s IC KRM-TR303E-TP
R51	1-218-937-11	s RESISTOR, CHIP 47
R52	1-218-941-81	s RESISTOR,CHIP 100,1/16W (1005)
R53	1-216-805-11	s RESISTOR,CHIP 47 1/10W 1608

NR BOARD

Ref. No. or Q'ty	Part No.	SP Description
1pc	A-1054-261-A	s MOUNTED CIRCUIT BOARD, NR
C41	1-165-989-11	s CAPACITOR, CERAMIC 10MF (2012)
CN41	1-770-620-21	s PIN, CONNECTOR 3P
IC41	6-704-826-01	s IC KRM-TR303E-TP
R41	1-218-937-11	s RESISTOR, CHIP 47
R42	1-218-941-81	s RESISTOR,CHIP 100,1/16W (1005)

QA BOARD

Ref. No. or Q'ty	Part No.	SP Description
1pc	A-1054-267-A	s MOUNTED CIRCUIT BOARD, QA
C400	1-165-875-11	s CAPACITOR, CHIP CERAMIC 10MF B
C401	1-165-875-11	s CAPACITOR, CHIP CERAMIC 10MF B
CN401	1-770-860-11	s CONNECTOR, S TERMINAL
D402	6-500-331-01	s DIODE RD3.9UM-T1B
D403	6-500-331-01	s DIODE RD3.9UM-T1B
D404	6-500-331-01	s DIODE RD3.9UM-T1B
D405	6-500-331-01	s DIODE RD3.9UM-T1B
D407	8-719-158-37	s DIODE RD9.1SB2
D408	8-719-158-37	s DIODE RD9.1SB2
FB400	1-500-282-11	o INDUCTOR, FERRITE BEAD
FB401	1-500-282-11	o INDUCTOR, FERRITE BEAD
FB402	1-500-282-11	o INDUCTOR, FERRITE BEAD
FL401	1-239-996-11	s FILTER, EMI
FL402	1-409-755-11	s FILTER, CHIP EMI (COMON MODE)
FL403	1-239-996-11	s FILTER, EMI
J400	1-566-822-21	s JACK
J401	1-785-549-41	o JACK, PIN YELLOW
R404	1-216-853-11	s RESISTOR,CHIP 470K 1/16W(1608)
R405	1-216-853-11	s RESISTOR,CHIP 470K 1/16W(1608)
R412	1-216-864-11	s CONDUCTOR, CHIP (1608)
R413	1-216-864-11	s CONDUCTOR, CHIP (1608)
R414	1-216-864-11	s CONDUCTOR, CHIP (1608)

QB BOARD (FOR VPL-CX75)

Ref. No. or Q'ty	Part No.	SP Description
1pc	A-1054-274-A	s MOUNTED CIRCUIT BOARD, QB
1pc	2-149-624-01	s FRAME (CF)
C1800	1-125-777-11	s CAPACITOR CERAMIC 0.1MF/10V
CN1800	1-817-653-21	s MEMORY STICK CONNECTOR
CN1801	1-818-313-11	s FFC/FPC CONNECTOR (ZIF)
CN1802	1-816-408-11	s PIN, HEADER (CF CARD)
D1800	6-500-633-01	s DIODE SECU4901C-S
D1802	8-719-059-53	s DIODE MA3J14700LSO
D1803	8-719-059-53	s DIODE MA3J14700LSO
D1804	8-719-059-53	s DIODE MA3J14700LSO
D1805	8-719-059-53	s DIODE MA3J14700LSO
Q1800	8-729-907-00	s TRANSISTOR DTC114EU
Q1801	8-729-026-53	s TRANSISTOR 2SA1576A-T106-QR
R1800	1-218-965-11	s RESISTOR, CHIP 10K 1/16W
R1801	1-218-937-11	s RESISTOR, CHIP 47
R1802	1-218-941-81	s RESISTOR,CHIP 100,1/16W (1005)
R1803	1-218-937-11	s RESISTOR, CHIP 47
R1804	1-218-937-11	s RESISTOR, CHIP 47
R1805	1-218-937-11	s RESISTOR, CHIP 47
R1806	1-218-937-11	s RESISTOR, CHIP 47
R1807	1-218-937-11	s RESISTOR, CHIP 47
R1808	1-218-937-11	s RESISTOR, CHIP 47
R1809	1-218-937-11	s RESISTOR, CHIP 47
R1810	1-218-937-11	s RESISTOR, CHIP 47
R1811	1-218-937-11	s RESISTOR, CHIP 47
R1812	1-218-937-11	s RESISTOR, CHIP 47
R1813	1-218-937-11	s RESISTOR, CHIP 47
R1814	1-218-937-11	s RESISTOR, CHIP 47
R1815	1-218-937-11	s RESISTOR, CHIP 47
R1816	1-218-937-11	s RESISTOR, CHIP 47
R1817	1-218-937-11	s RESISTOR, CHIP 47
R1818	1-218-937-11	s RESISTOR, CHIP 47
R1819	1-218-937-11	s RESISTOR, CHIP 47
R1820	1-218-937-11	s RESISTOR, CHIP 47
R1821	1-218-937-11	s RESISTOR, CHIP 47
R1822	1-218-937-11	s RESISTOR, CHIP 47
R1823	1-218-937-11	s RESISTOR, CHIP 47
R1824	1-218-937-11	s RESISTOR, CHIP 47
R1825	1-218-937-11	s RESISTOR, CHIP 47
R1826	1-218-937-11	s RESISTOR, CHIP 47
R1827	1-218-937-11	s RESISTOR, CHIP 47
R1828	1-218-937-11	s RESISTOR, CHIP 47
R1829	1-218-937-11	s RESISTOR, CHIP 47
R1830	1-218-937-11	s RESISTOR, CHIP 47
R1831	1-218-937-11	s RESISTOR, CHIP 47
R1832	1-218-937-11	s RESISTOR, CHIP 47
R1833	1-218-937-11	s RESISTOR, CHIP 47
R1834	1-218-937-11	s RESISTOR, CHIP 47
R1835	1-218-937-11	s RESISTOR, CHIP 47
R1836	1-218-937-11	s RESISTOR, CHIP 47
R1837	1-218-937-11	s RESISTOR, CHIP 47
R1838	1-218-937-11	s RESISTOR, CHIP 47
R1839	1-218-937-11	s RESISTOR, CHIP 47
R1840	1-218-937-11	s RESISTOR, CHIP 47
R1841	1-218-937-11	s RESISTOR, CHIP 47
R1842	1-218-937-11	s RESISTOR, CHIP 47
R1843	1-218-937-11	s RESISTOR, CHIP 47

(QB BOARD (FOR VPL-CX75))

Ref. No. or Q'ty	Part No.	SP Description
R1844	1-218-937-11	s RESISTOR, CHIP 47
R1845	1-218-937-11	s RESISTOR, CHIP 47
R1846	1-218-937-11	s RESISTOR, CHIP 47
R1847	1-218-937-11	s RESISTOR, CHIP 47
R1848	1-218-937-11	s RESISTOR, CHIP 47
R1849	1-218-937-11	s RESISTOR, CHIP 47
R1850	1-218-937-11	s RESISTOR, CHIP 47
R1851	1-218-937-11	s RESISTOR, CHIP 47
R1852	1-218-937-11	s RESISTOR, CHIP 47

U BOARD		

Ref. No. or Q'ty	Part No.	SP Description
1pc	A-1054-259-A	s MOUNTED CIRCUIT BOARD, U
CN10	1-580-056-21	s PIN, CONNECTOR 3P
S10	1-762-984-11	s SWITCH, PUSH
TH10	1-803-382-11	s THERMISTOR (10K)

V BOARD		

Ref. No. or Q'ty	Part No.	SP Description
1pc	A-1054-357-A	s MOUNTED CIRCUIT BOARD, V
C21	1-165-989-11	s CAPACITOR, CERAMIC 10MF (2012)
C22	1-125-777-11	s CAPACITOR CERAMIC 0.1MF/10V
C23	1-125-777-11	s CAPACITOR CERAMIC 0.1MF/10V
CN21	1-770-623-21	s PIN, CONNECTOR 6P
IC21	6-705-943-01	s IC MXS3125GL
R23	1-208-643-11	s RESISTOR CHIP 22 1/16W (1005)
R24	1-218-990-11	s RESISTOR, CHIP 0 1/16W (1005)
R26	1-208-635-11	s RESISTOR CHIP 10 1/16W (1005)
R27	1-216-864-11	s CONDUCTOR, CHIP (1608)
R28	1-208-643-11	s RESISTOR CHIP 22 1/16W (1005)
S21	1-786-644-21	s SWITCH, PUSH (1 KEY)
TH21	1-803-382-11	s THERMISTOR (10K)

SUPPLIED ACCESSORIES (FOR VPL-CX70)


Ref. No. or Q'ty	Part No.	SP Description
1pc	1-478-734-21	s REMOTE COMMANDER (RM-PJM17)
1pc	9-885-010-98	s COVER, BATTERY (FOR RM-PJM17)
1pc	2-149-553-01	s FILTER (CH)
1pc	Δ -----	s CORD, POWER (See Warning on Power Connection)
1pc	1-790-081-31	s CABLE, USB
1pc	1-791-992-31	s CABLE ASSY (15PDSUBCONNECTORX2)
1pc	2-149-997-01	s OPERATING INSTRUCTIONS (JAPANESE, SIMPLIFIED CHINESE)
1pc	2-149-997-11	s OPERATING INSTRUCTIONS (ENGLISH, FRENCH, SPANISH)
1pc	2-149-997-21	s OPERATING INSTRUCTIONS (GERMAN, ITALIAN)
1pc	4-096-087-02	s CASE, CARRYING


SUPPLIED ACCESSORIES (FOR VPL-CX75)


Ref. No. or Q'ty	Part No.	SP Description
1pc	A-1059-524-A	s WIRELESS LAN CARD (CF) ASSY
1pc	* A-1059-525-A	s WIRELESS LAN CARD (USB) ASSY
1pc	8-869-027-82	s USM32DP
1pc	1-478-734-21	s REMOTE COMMANDER (RM-PJM17)
1pc	9-885-010-98	s COVER, BATTERY (FOR RM-PJM17)
1pc	Δ 1-478-737-11	s REMOTE COMMANDER (RM-PJP1)
1pc	2-024-232-01	s COVER, BATTERY (FOR RM-PJP1)
1pc	2-149-553-01	s FILTER (CH)
1pc	2-176-397-01	s MANUAL, INSTRUCTION
1pc	Δ -----	s CORD, POWER (See Warning on Power Connection)
1pc	1-790-081-31	s CABLE, USB
1pc	1-791-992-31	s CABLE ASSY (15PDSUBCONNECTORX2)
1pc	2-023-819-02	s OPERATING INSTRUCTIONS (JAPANESE, ENGLISH, FRENCH, GERMAN, SPANISH, ITALIAN, PORTUGUESE, SIMPLIFIED CHINESE, TRADITIONAL CHINESE, KOREAN)
1pc	2-149-997-01	s OPERATING INSTRUCTIONS (JAPANESE, SIMPLIFIED CHINESE)
1pc	2-149-997-11	s OPERATING INSTRUCTIONS (ENGLISH, FRENCH, SPANISH)
1pc	2-149-997-21	s OPERATING INSTRUCTIONS (GERMAN, ITALIAN)
1pc	4-096-087-02	s CASE, CARRYING
1pc	4-103-423-03	s PACK, CD-ROM


* : When you can purchase a product, please purchase USB WIRELESS LAN MODULE (IFU-WLM1).


Overall	Overall
----------------	----------------




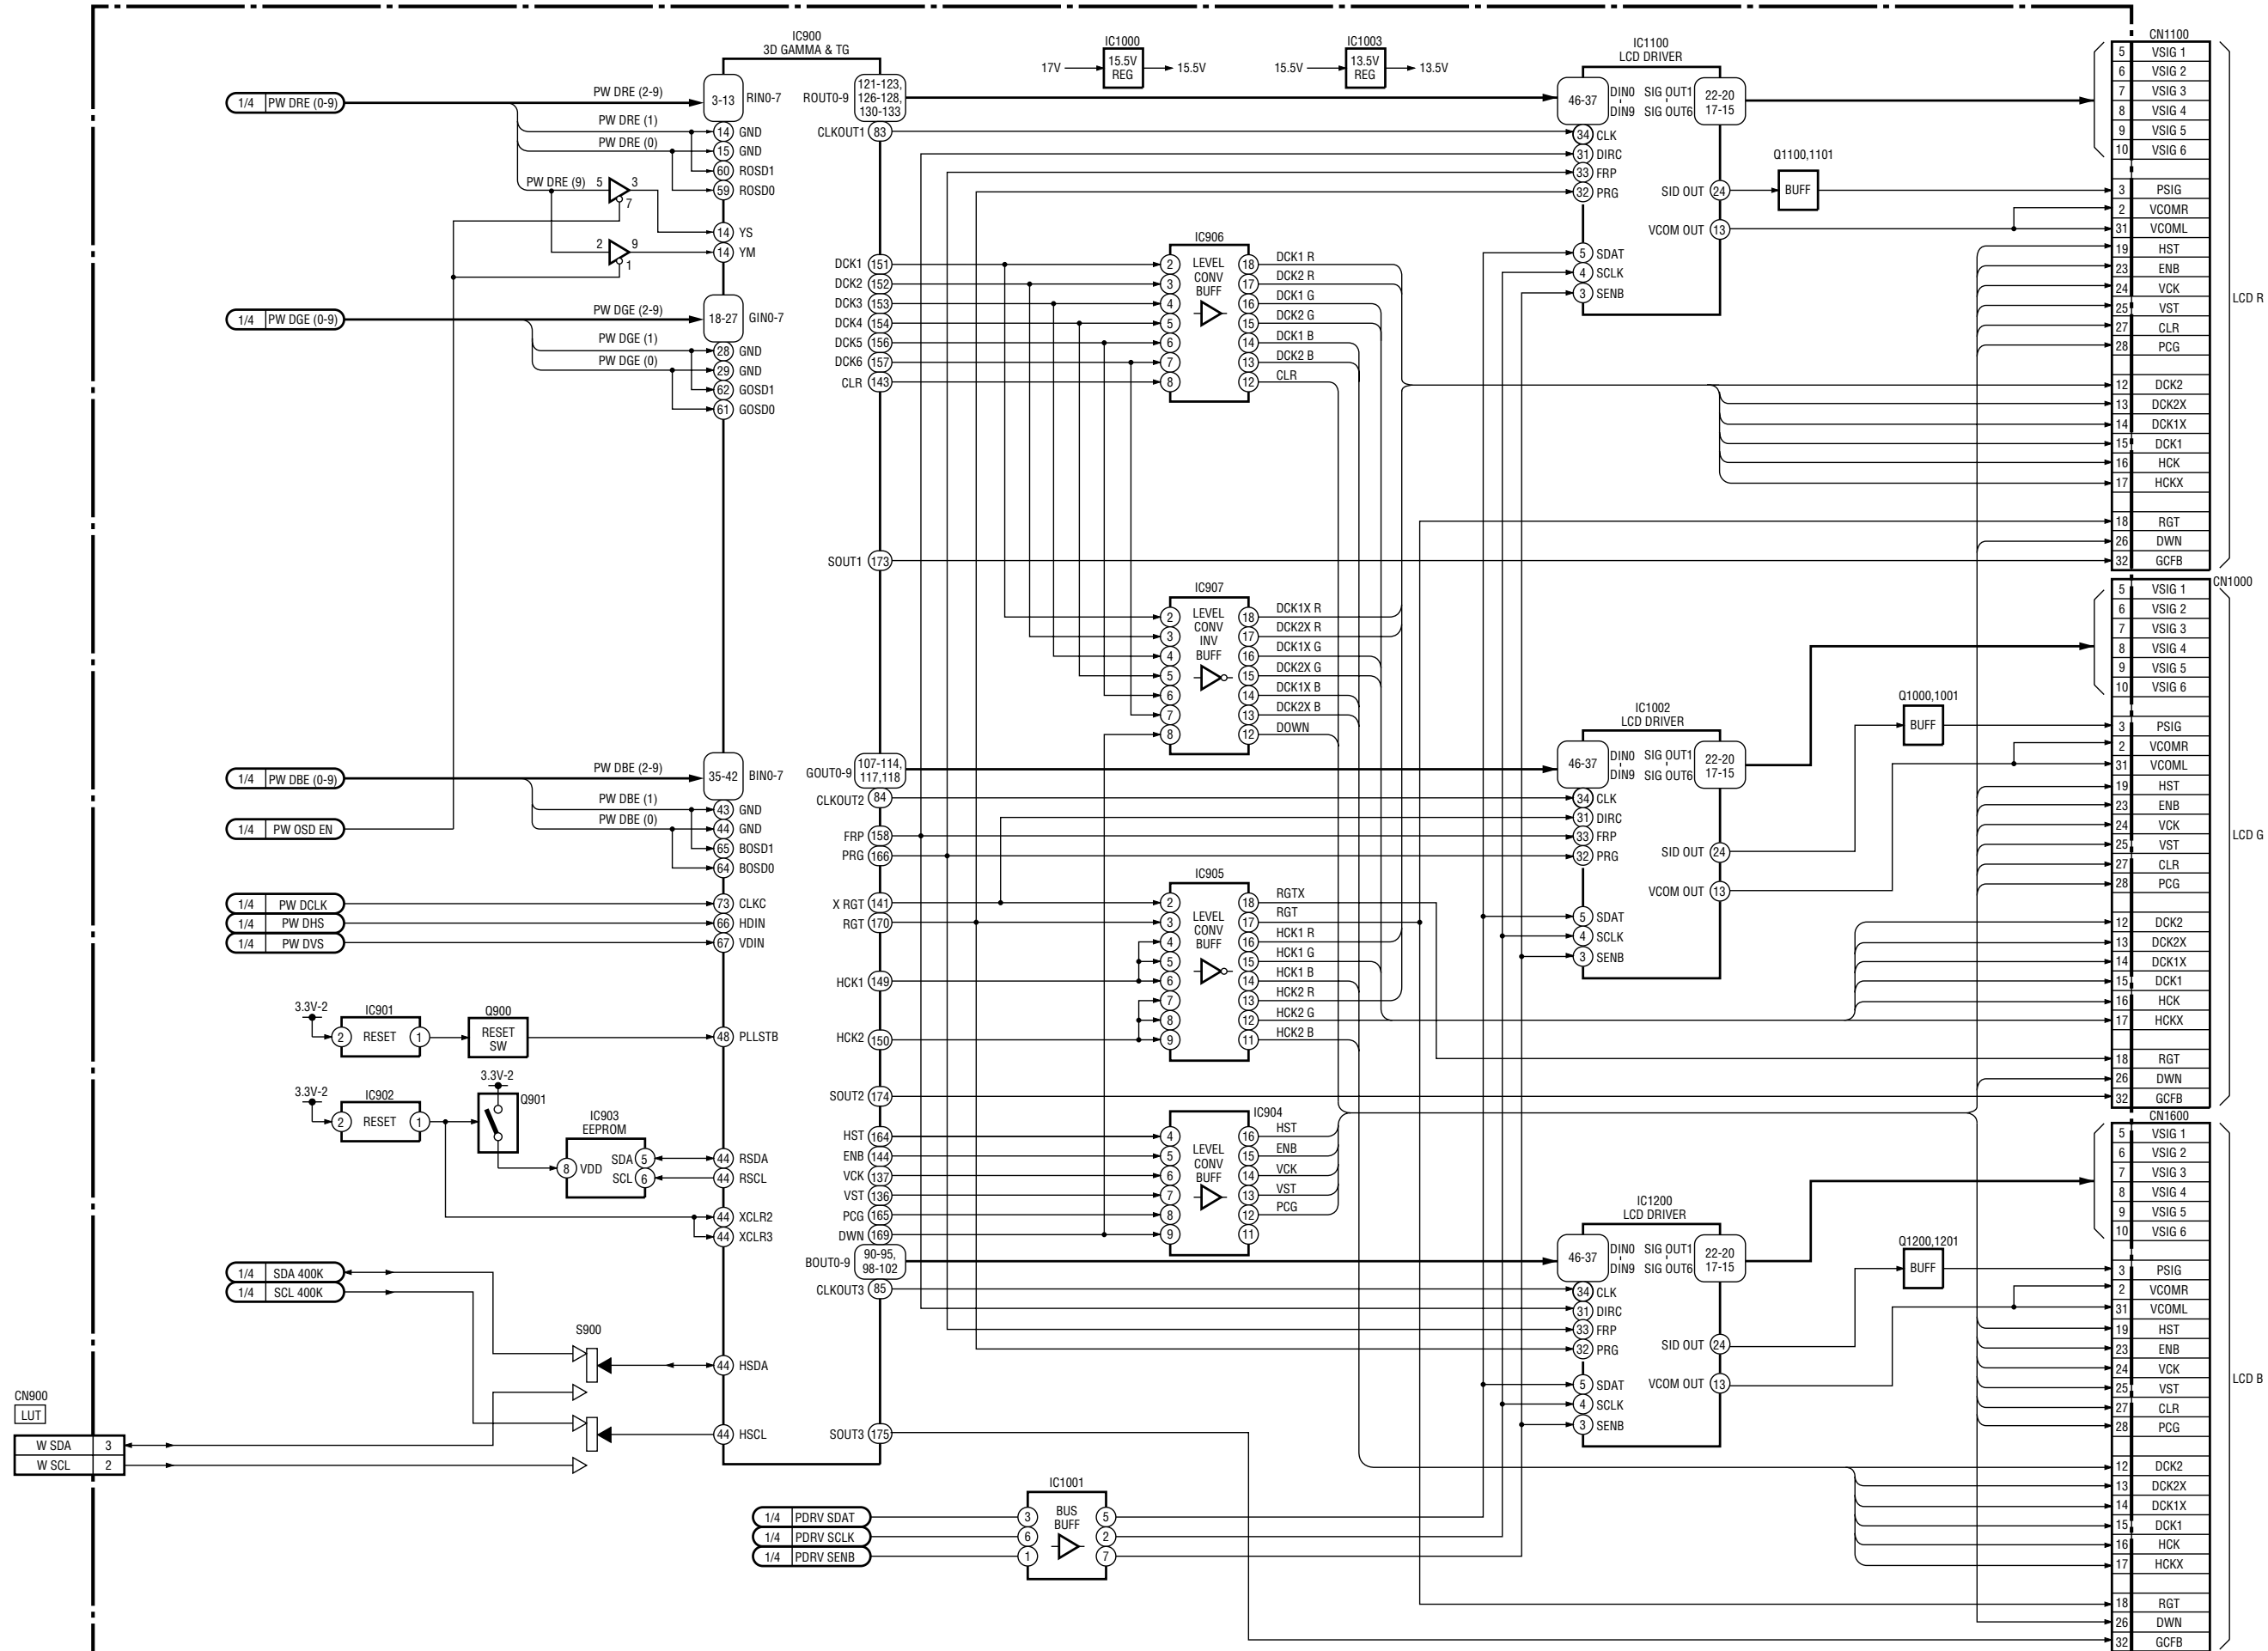

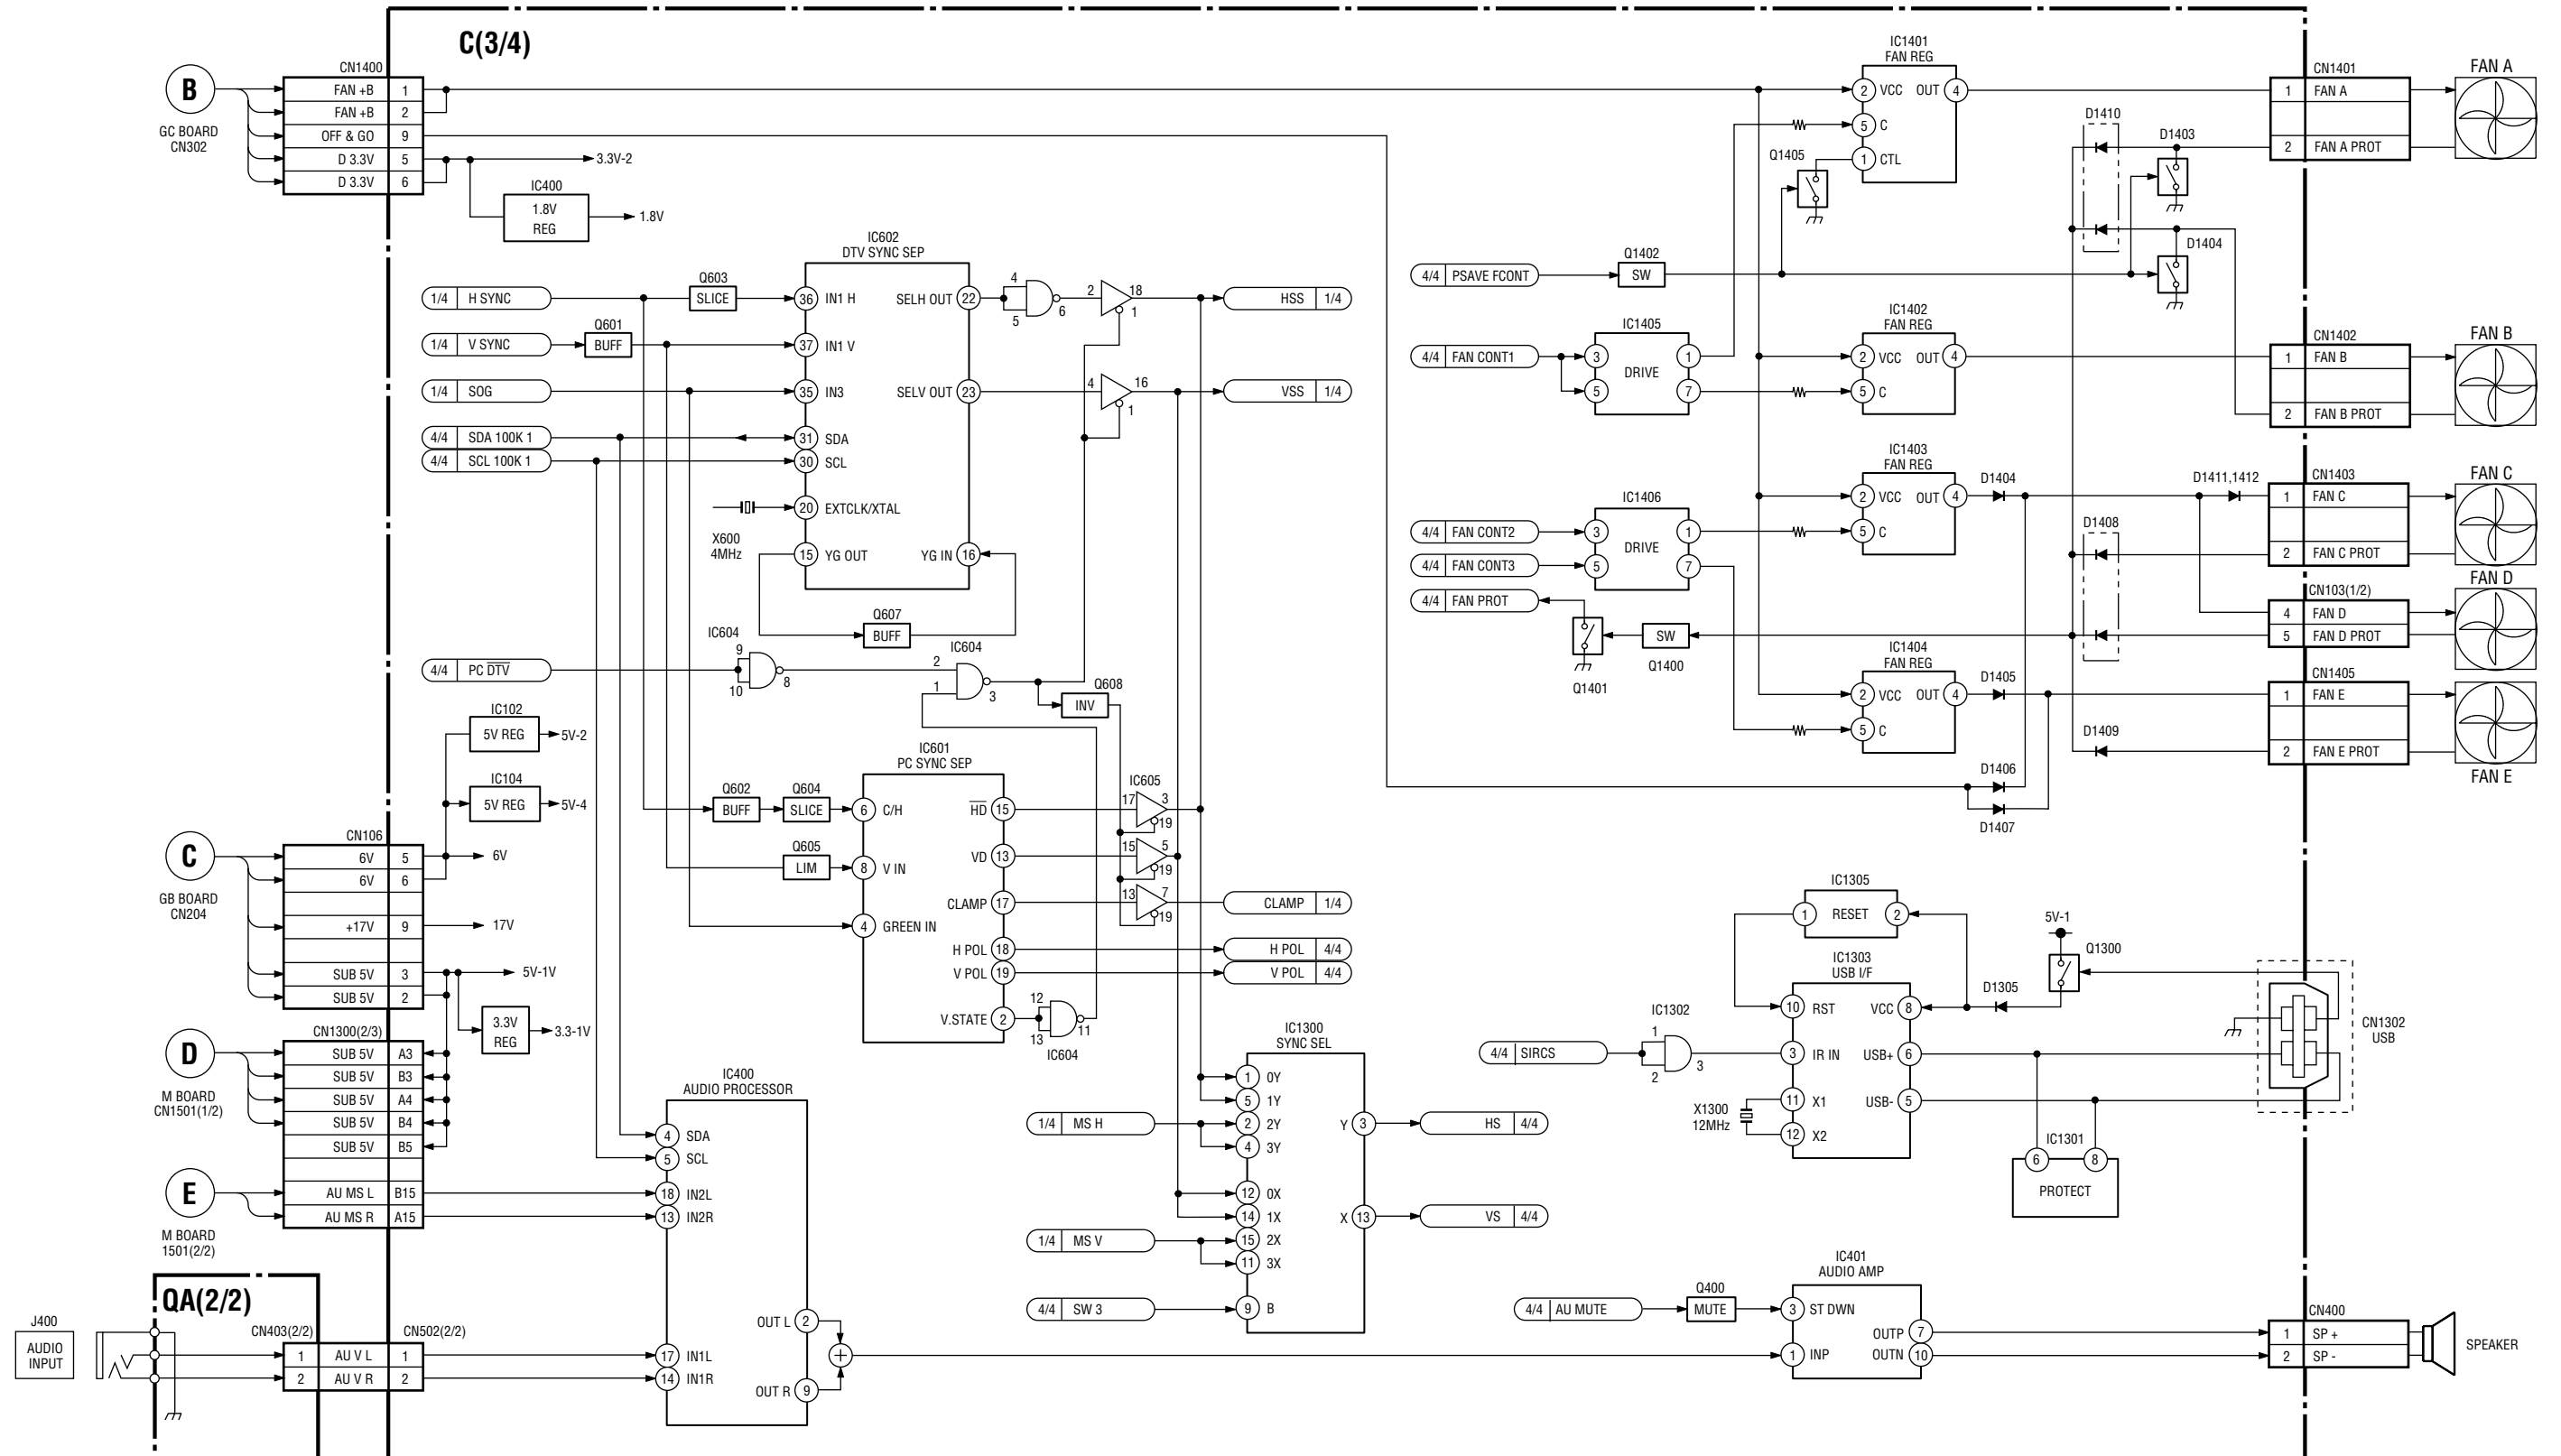

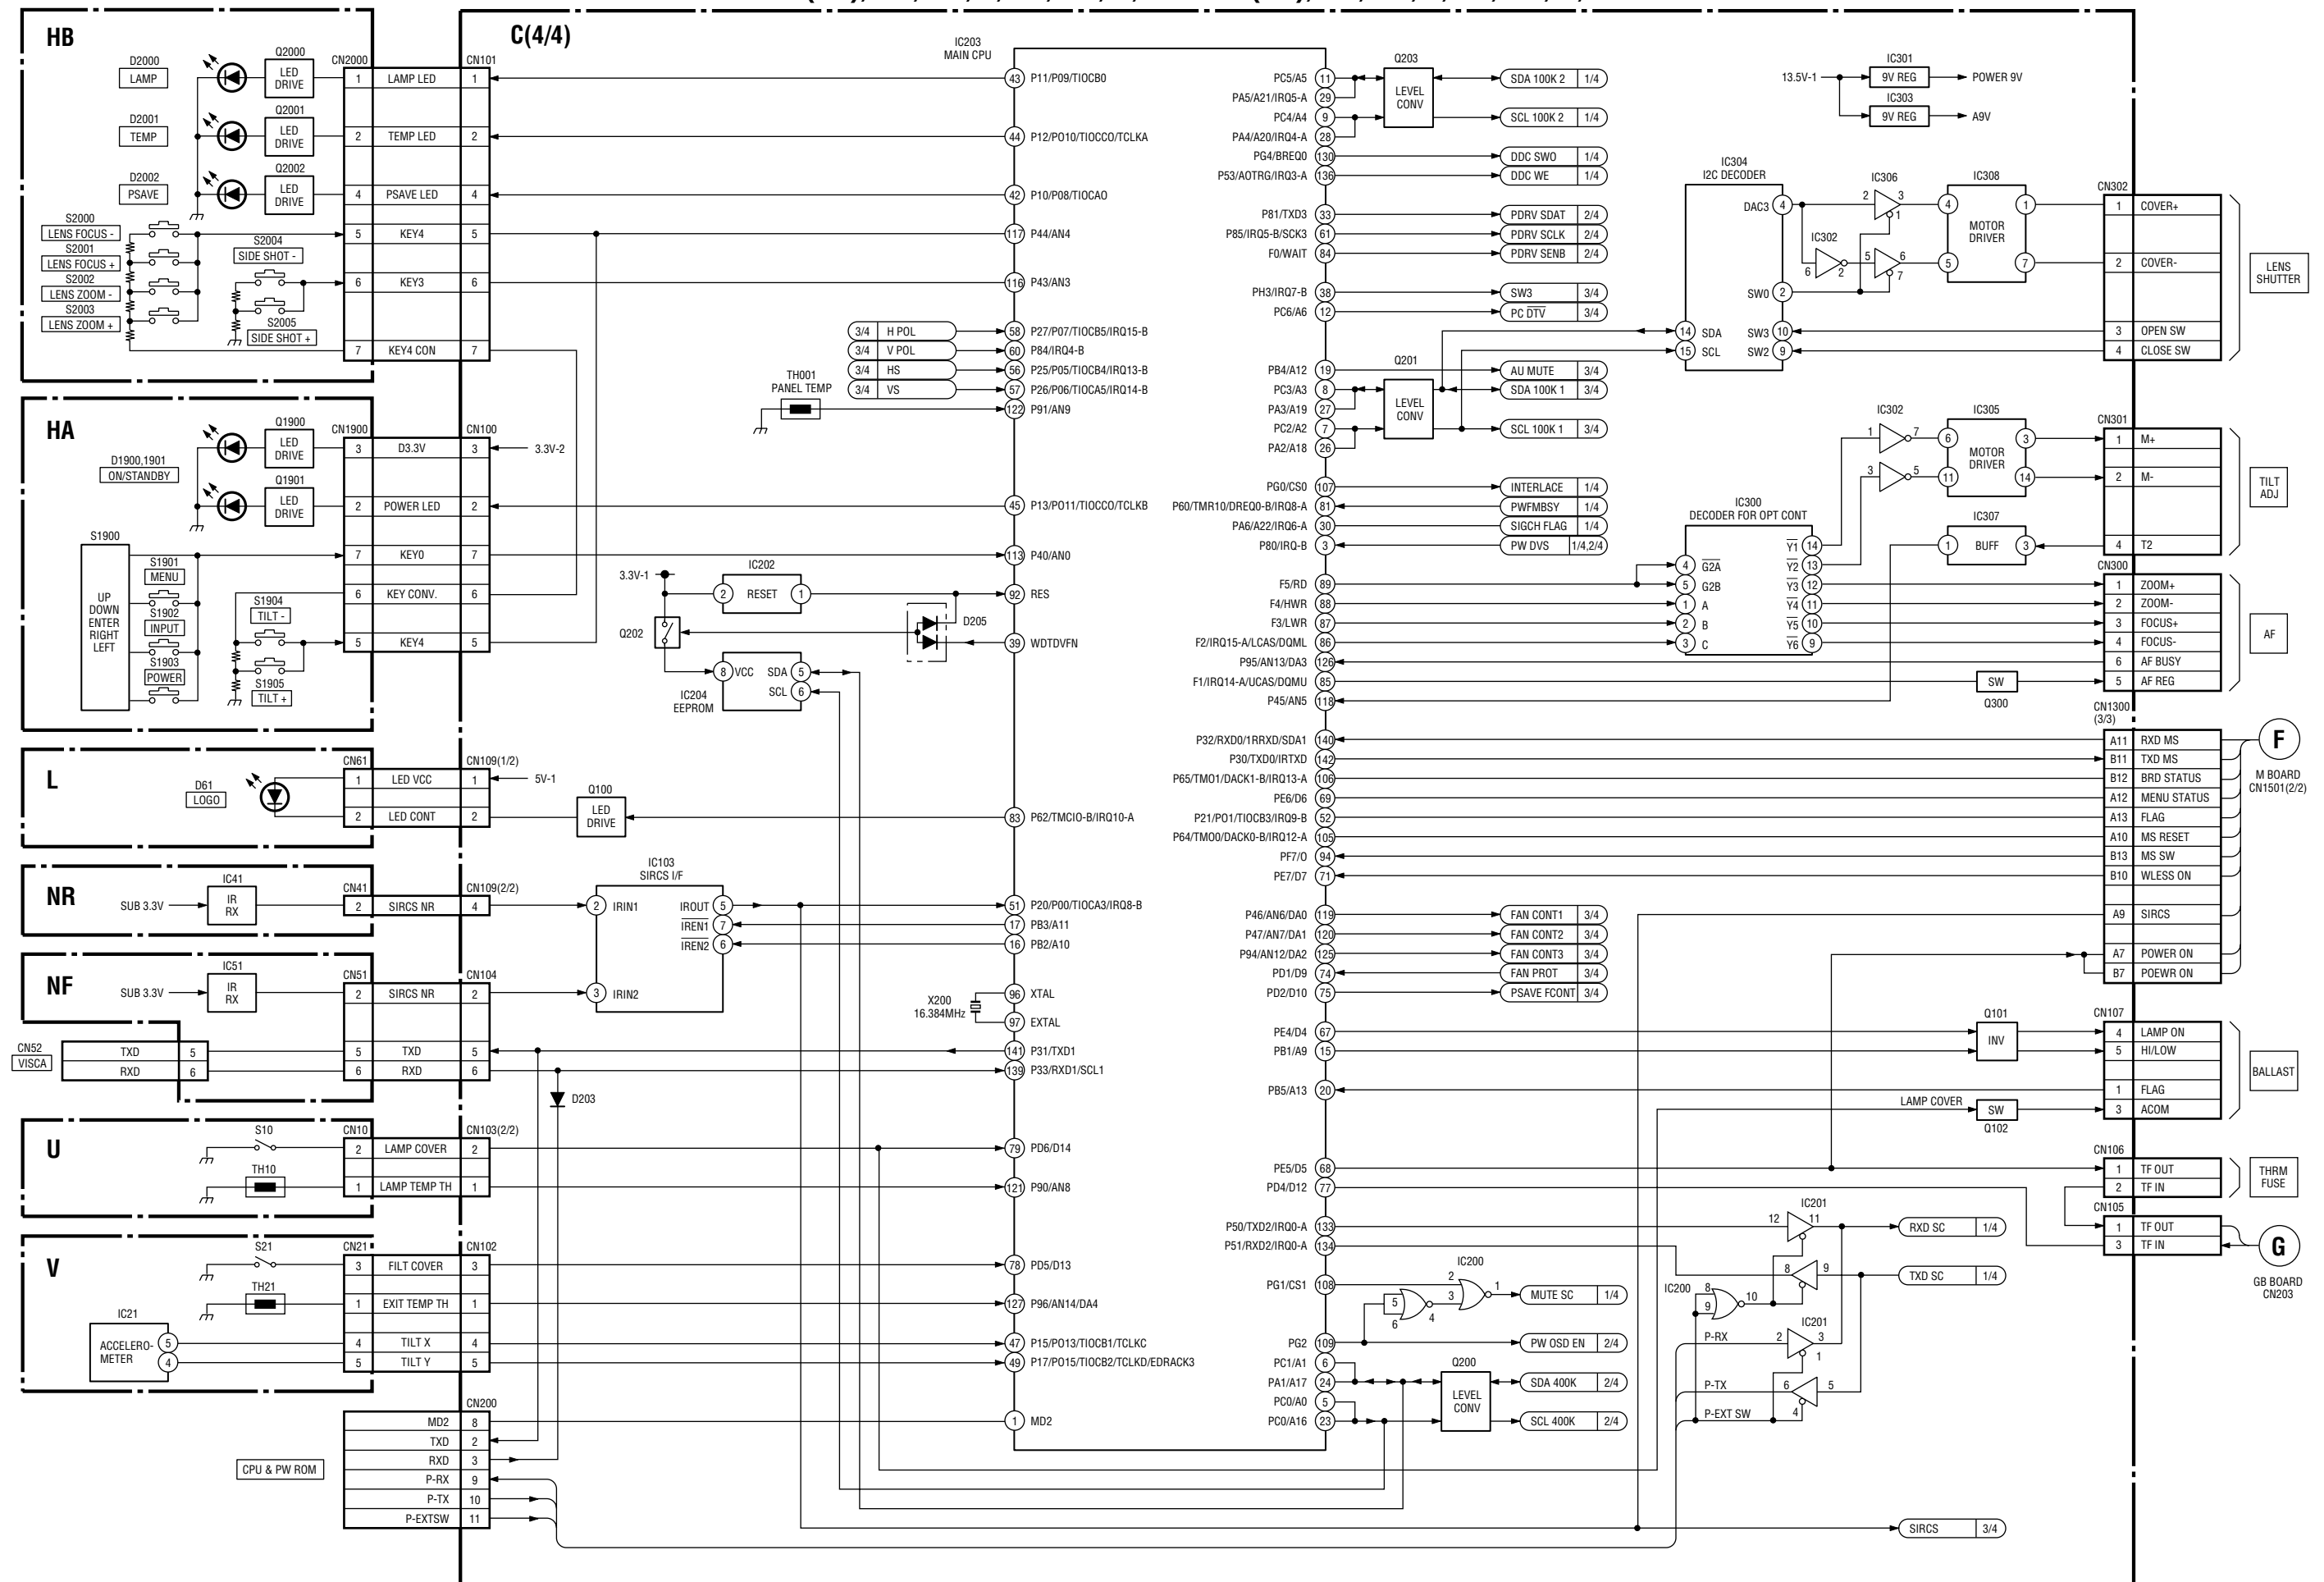

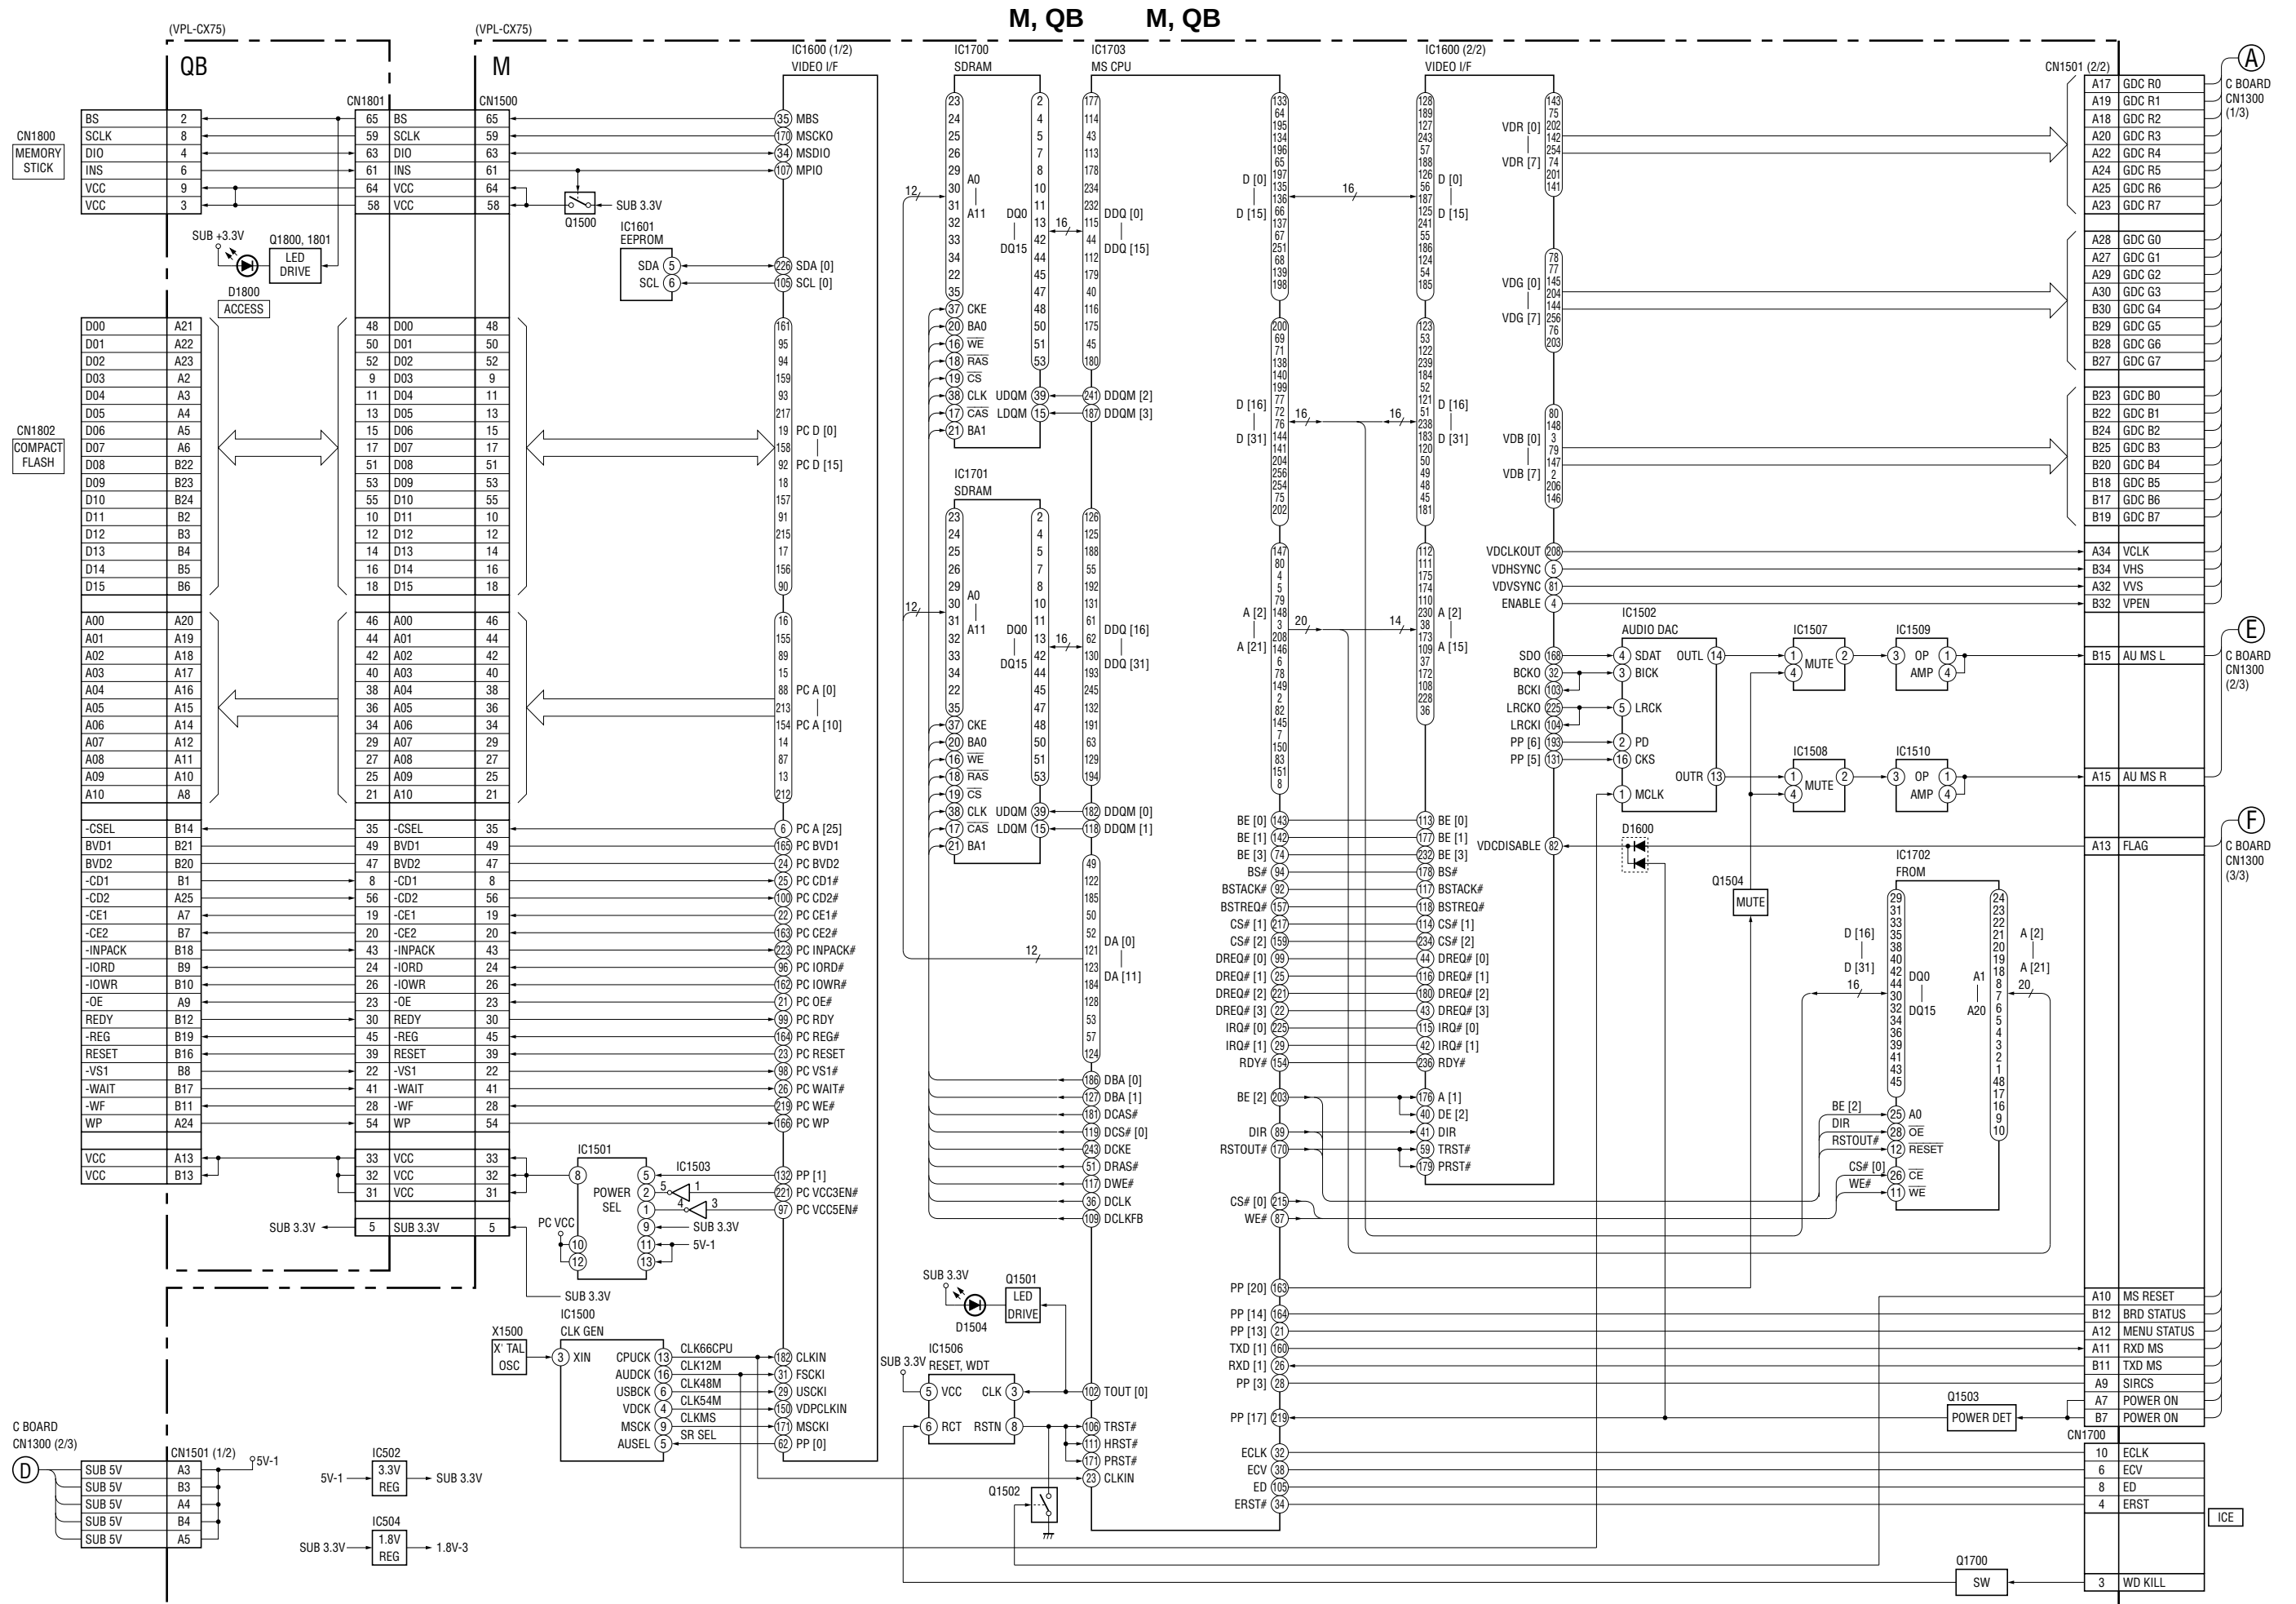

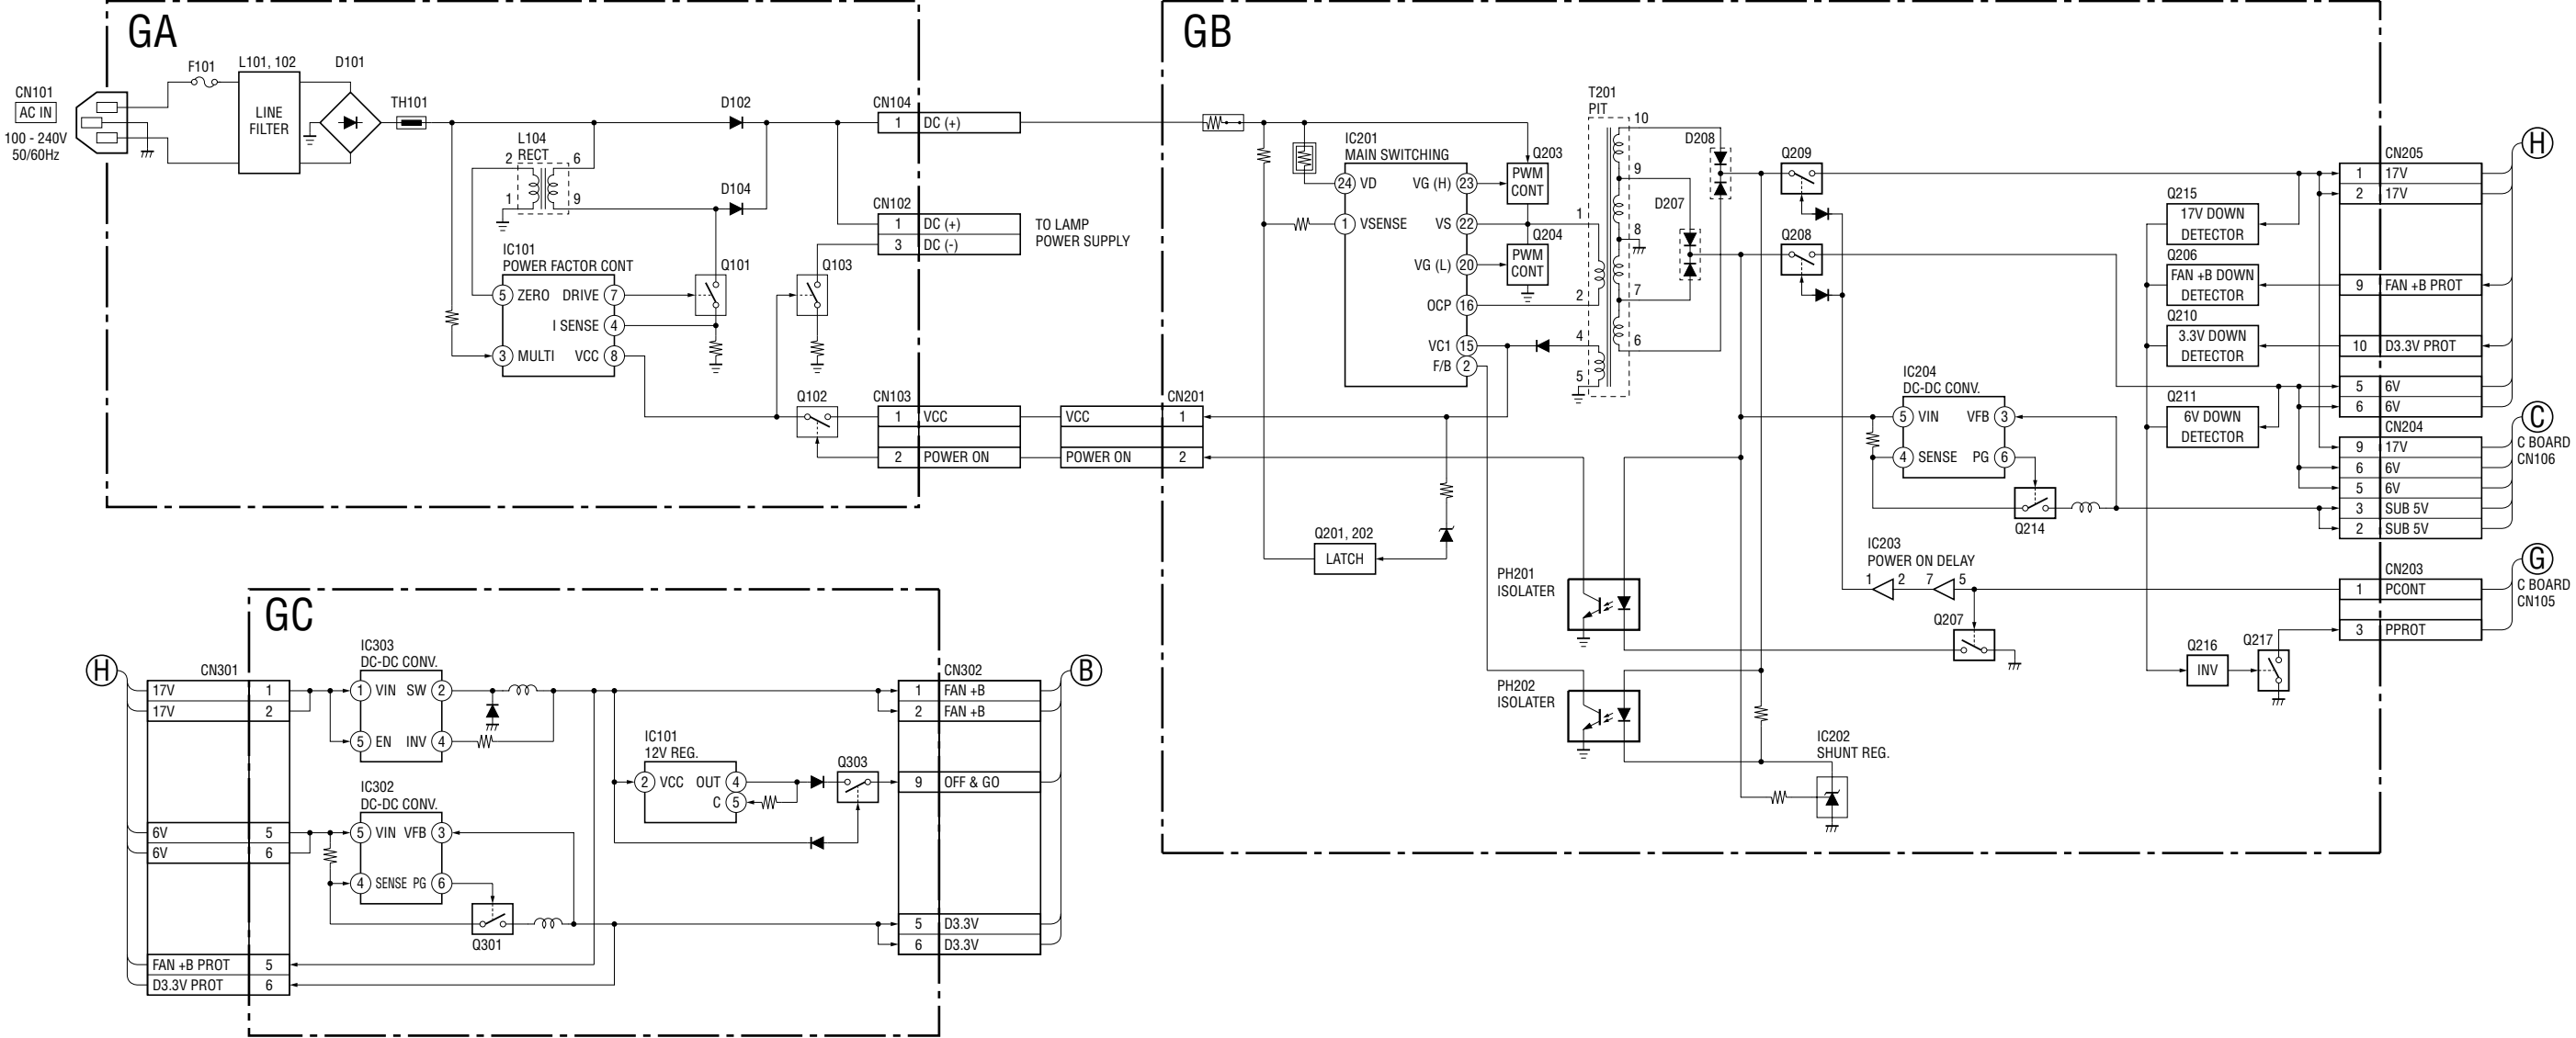

Section 6
Diagrams

Note:

- Parts marked “ * ” differ according to the model/destination. Refer to the mount table for each function.
- The parts marked “ # ” or XX on schematic diagrams are not mounted.
- All capacitors are in μF unless otherwise noted. pF: $\mu\mu\text{F}$ 50WV or less are not indicated except for electrolytics.
- All electrolytics are in 50 V unless otherwise specified.
-  : fusible resistor
-  : nonflammable resistor
-  : internal component
-  : panel designation and adjustment for repair
- Caution when replacing chip parts
New parts must be attached after removal of the chip.
Be careful not to heat the minus side of a tantalum capacitor, because it is easily damaged by the heat.

Reference information

RESISTOR	RN	: METAL FILM
	RC	: SOLID
	FPRD	: NONFLAMMABLE CARBON
	FUSE	: NONFLAMMABLE FUSIBLE
	RS	: NONFLAMMABLE METAL OXIDE
	RB	: NONFLAMMABLE CEMENT
	RW	: NONFLAMMABLE WIREWOUND
	※	: ADJUSTMENT RESISTOR
COIL	LF-8L	: MICRO INDUCTOR
CAPACITOR	TA	: TANTALUM
	PS	: STYROL
	PP	: POLYPROPYLENE
	PT	: MYLAR
	MPS	: METALIZED POLYESTER
	MPP	: METALIZED POLYPROPYLENE
	ALB	: BIPOLAR
	ALT	: HIGH TEMPERATURE
	ALR	: HIGH RIPPLE

[Measuring conditions, voltage and waveform]

-  : Signal path.

The components identified marked  are critical for safety.
Replace only with the part number specified.

Les composants identifiés par la marque  sont critiques pour la sécurité.
Ne les remplacer que par une pièce portant le numéro spécifié.

6-1. Frame Schematic Diagrams

Frame Wiring

Frame Wiring

1

2

3

4

5

HA

HB

V

U

L

NR

NF

GB

C

QA

M

QB

FRAME

6-2

6-2

VPL-CX70/CX75

A

B

C

D


E

F


G

H


6-2. Schematic Diagrams and Board Layouts

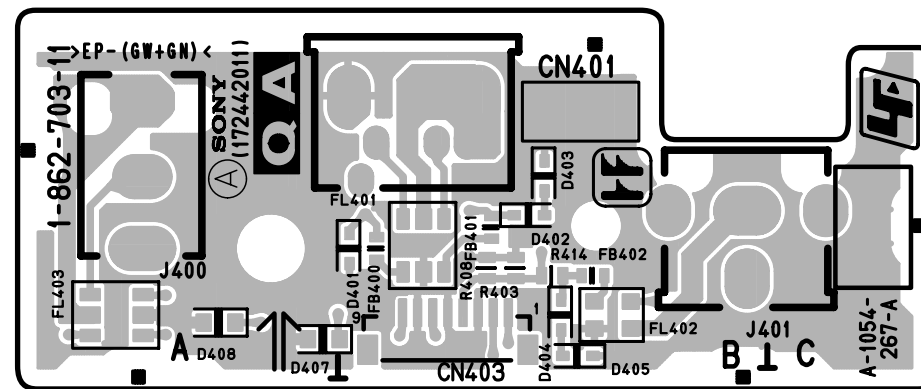

QA -A SIDE-
SUFFIX: -11

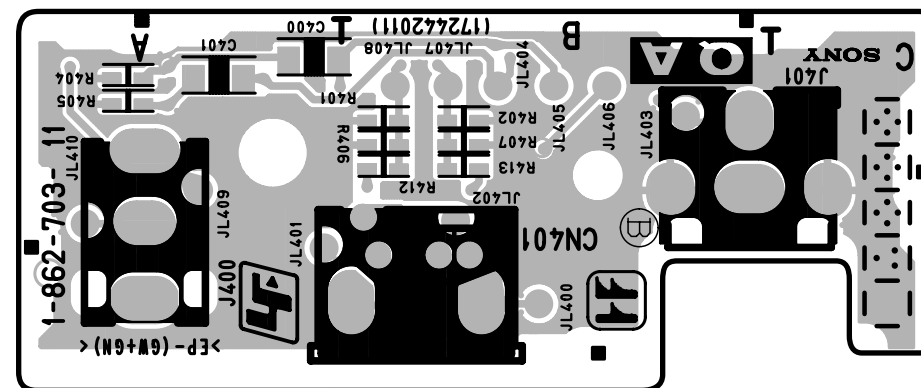

QA -B SIDE-
SUFFIX: -11

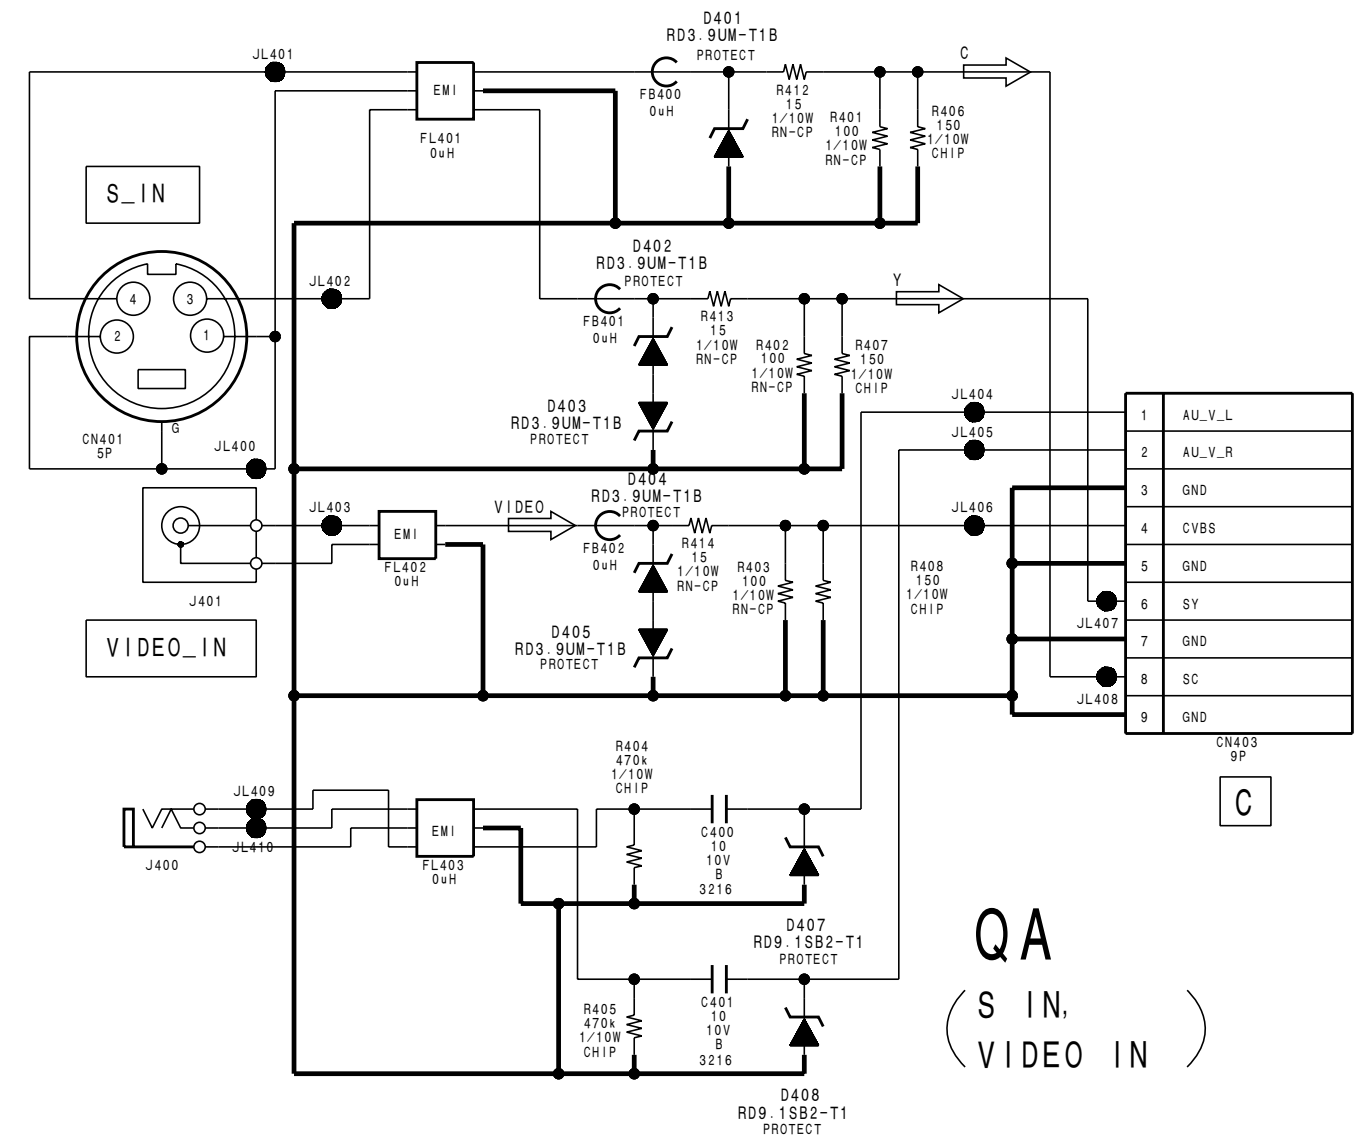


1

2


3

4


5

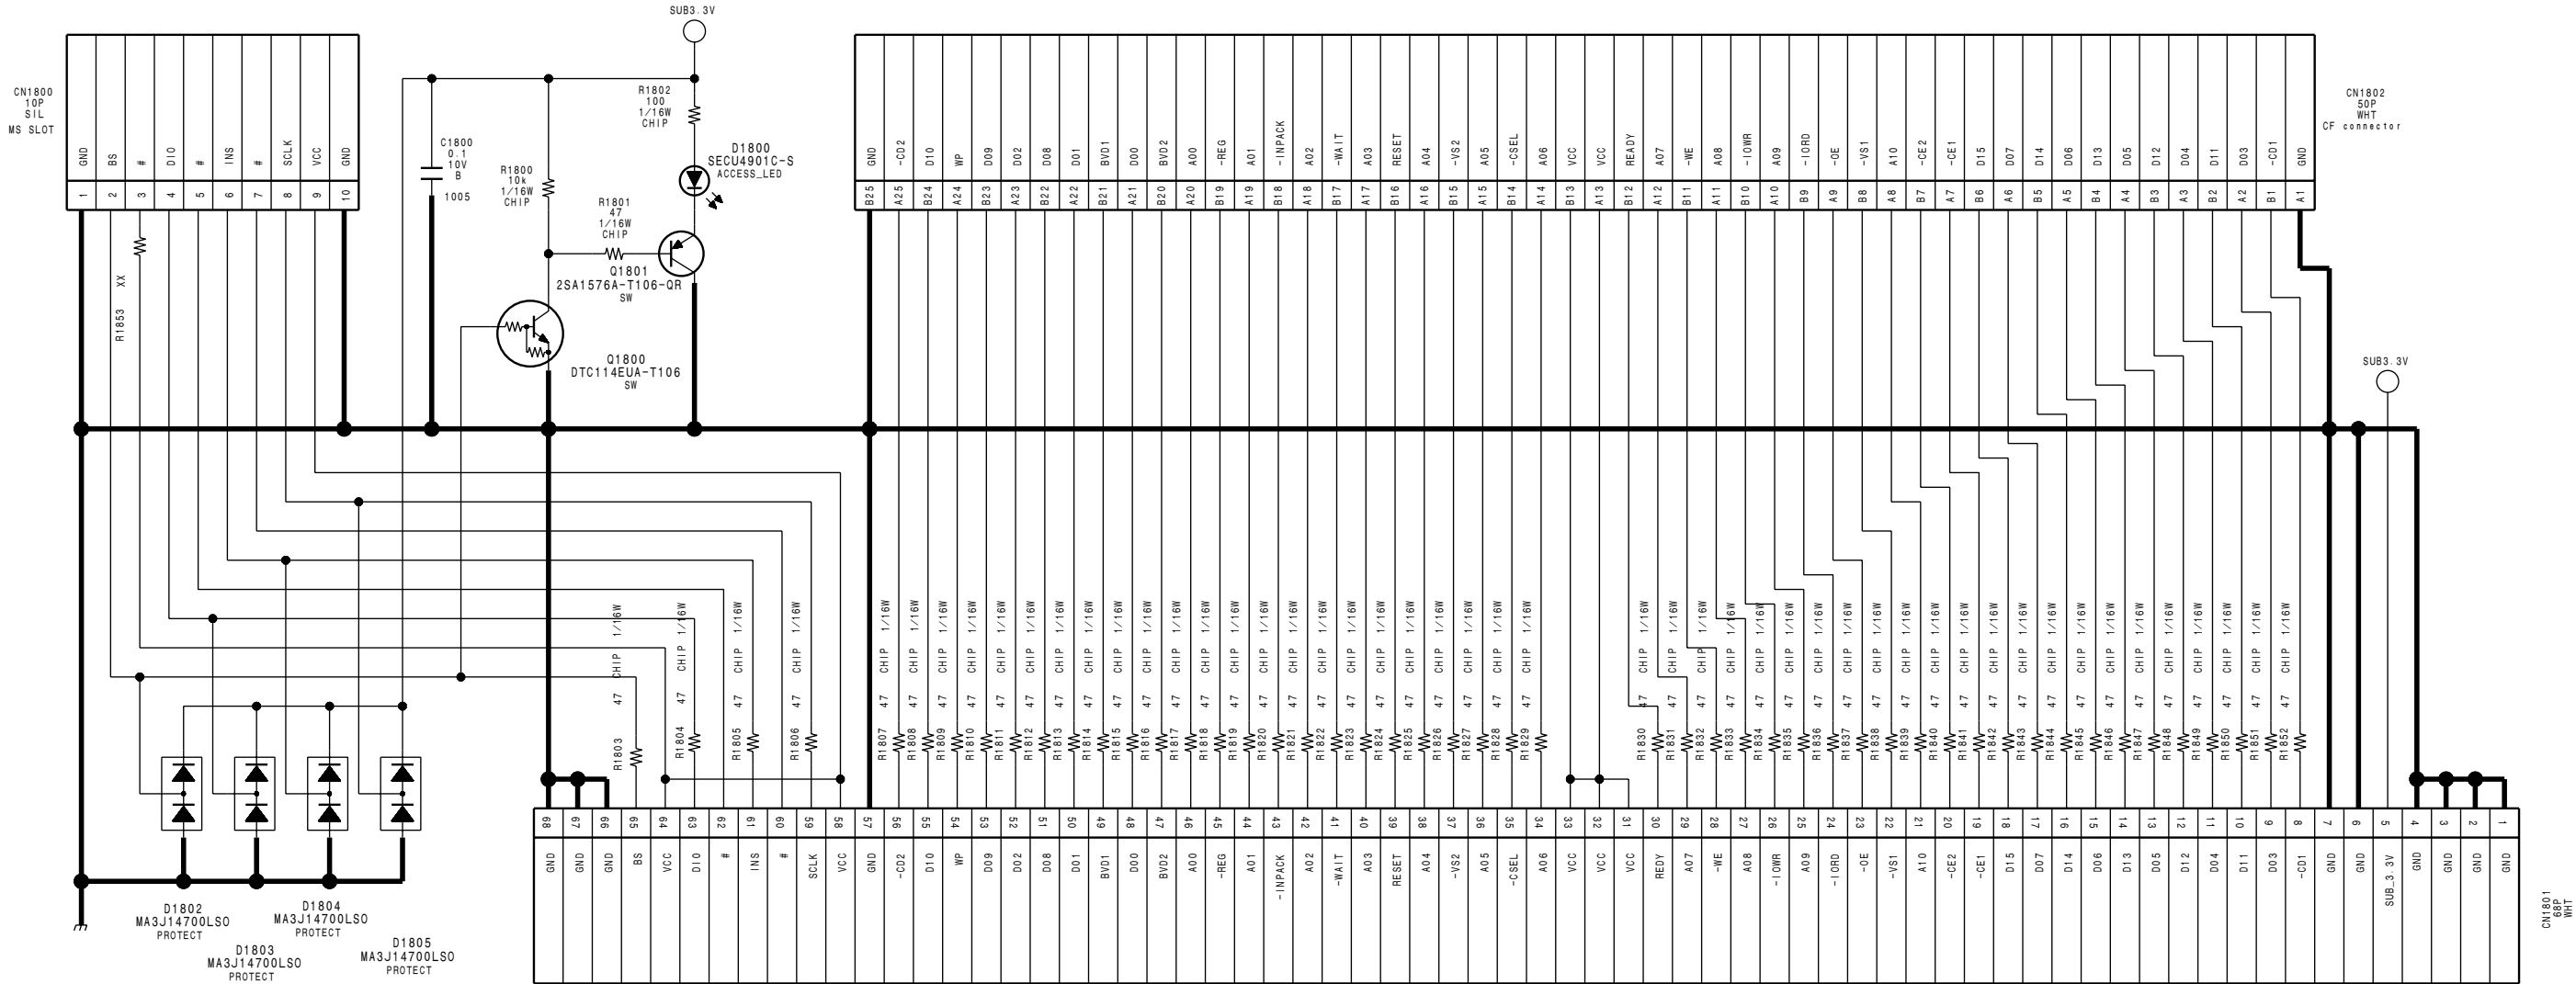


QB

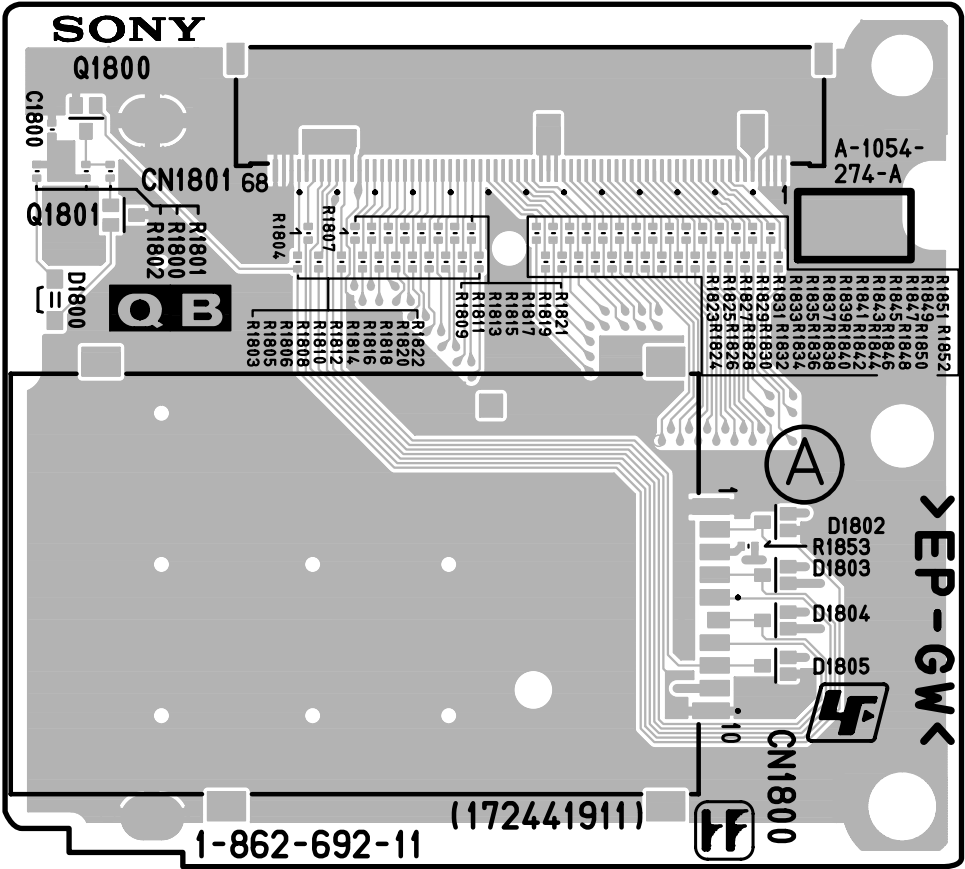

QB -A SIDE-
SUFFIX: -11

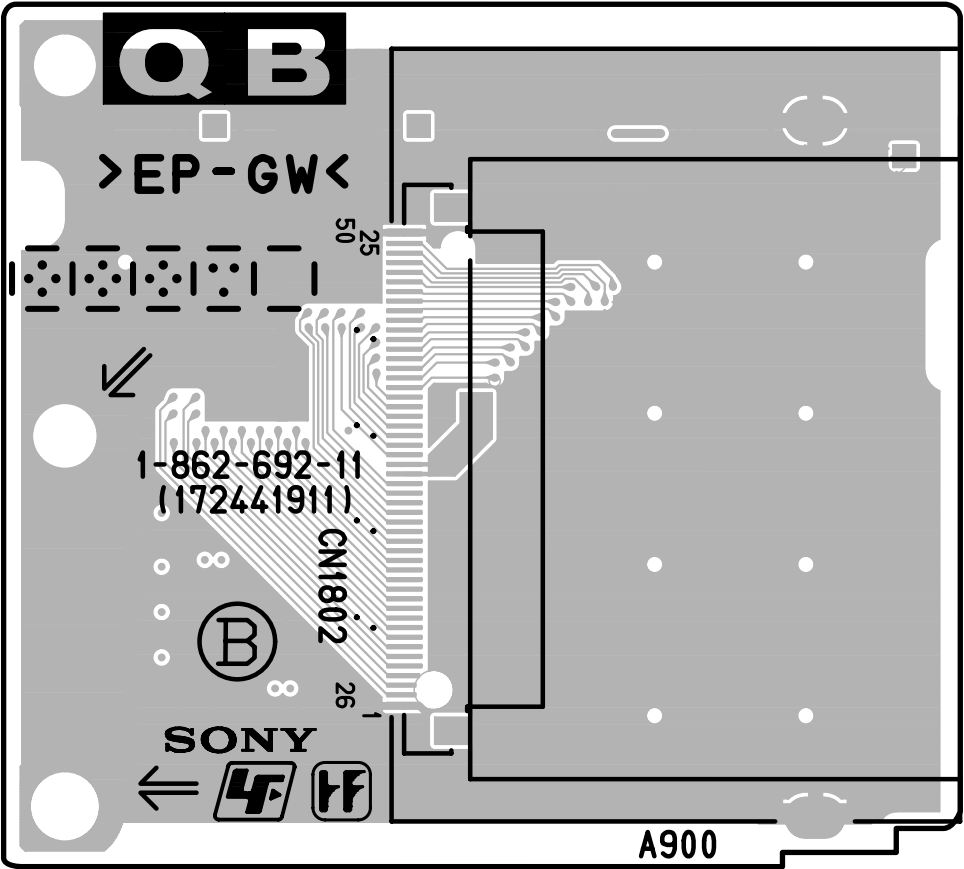


QB -B SIDE-
SUFFIX: -11

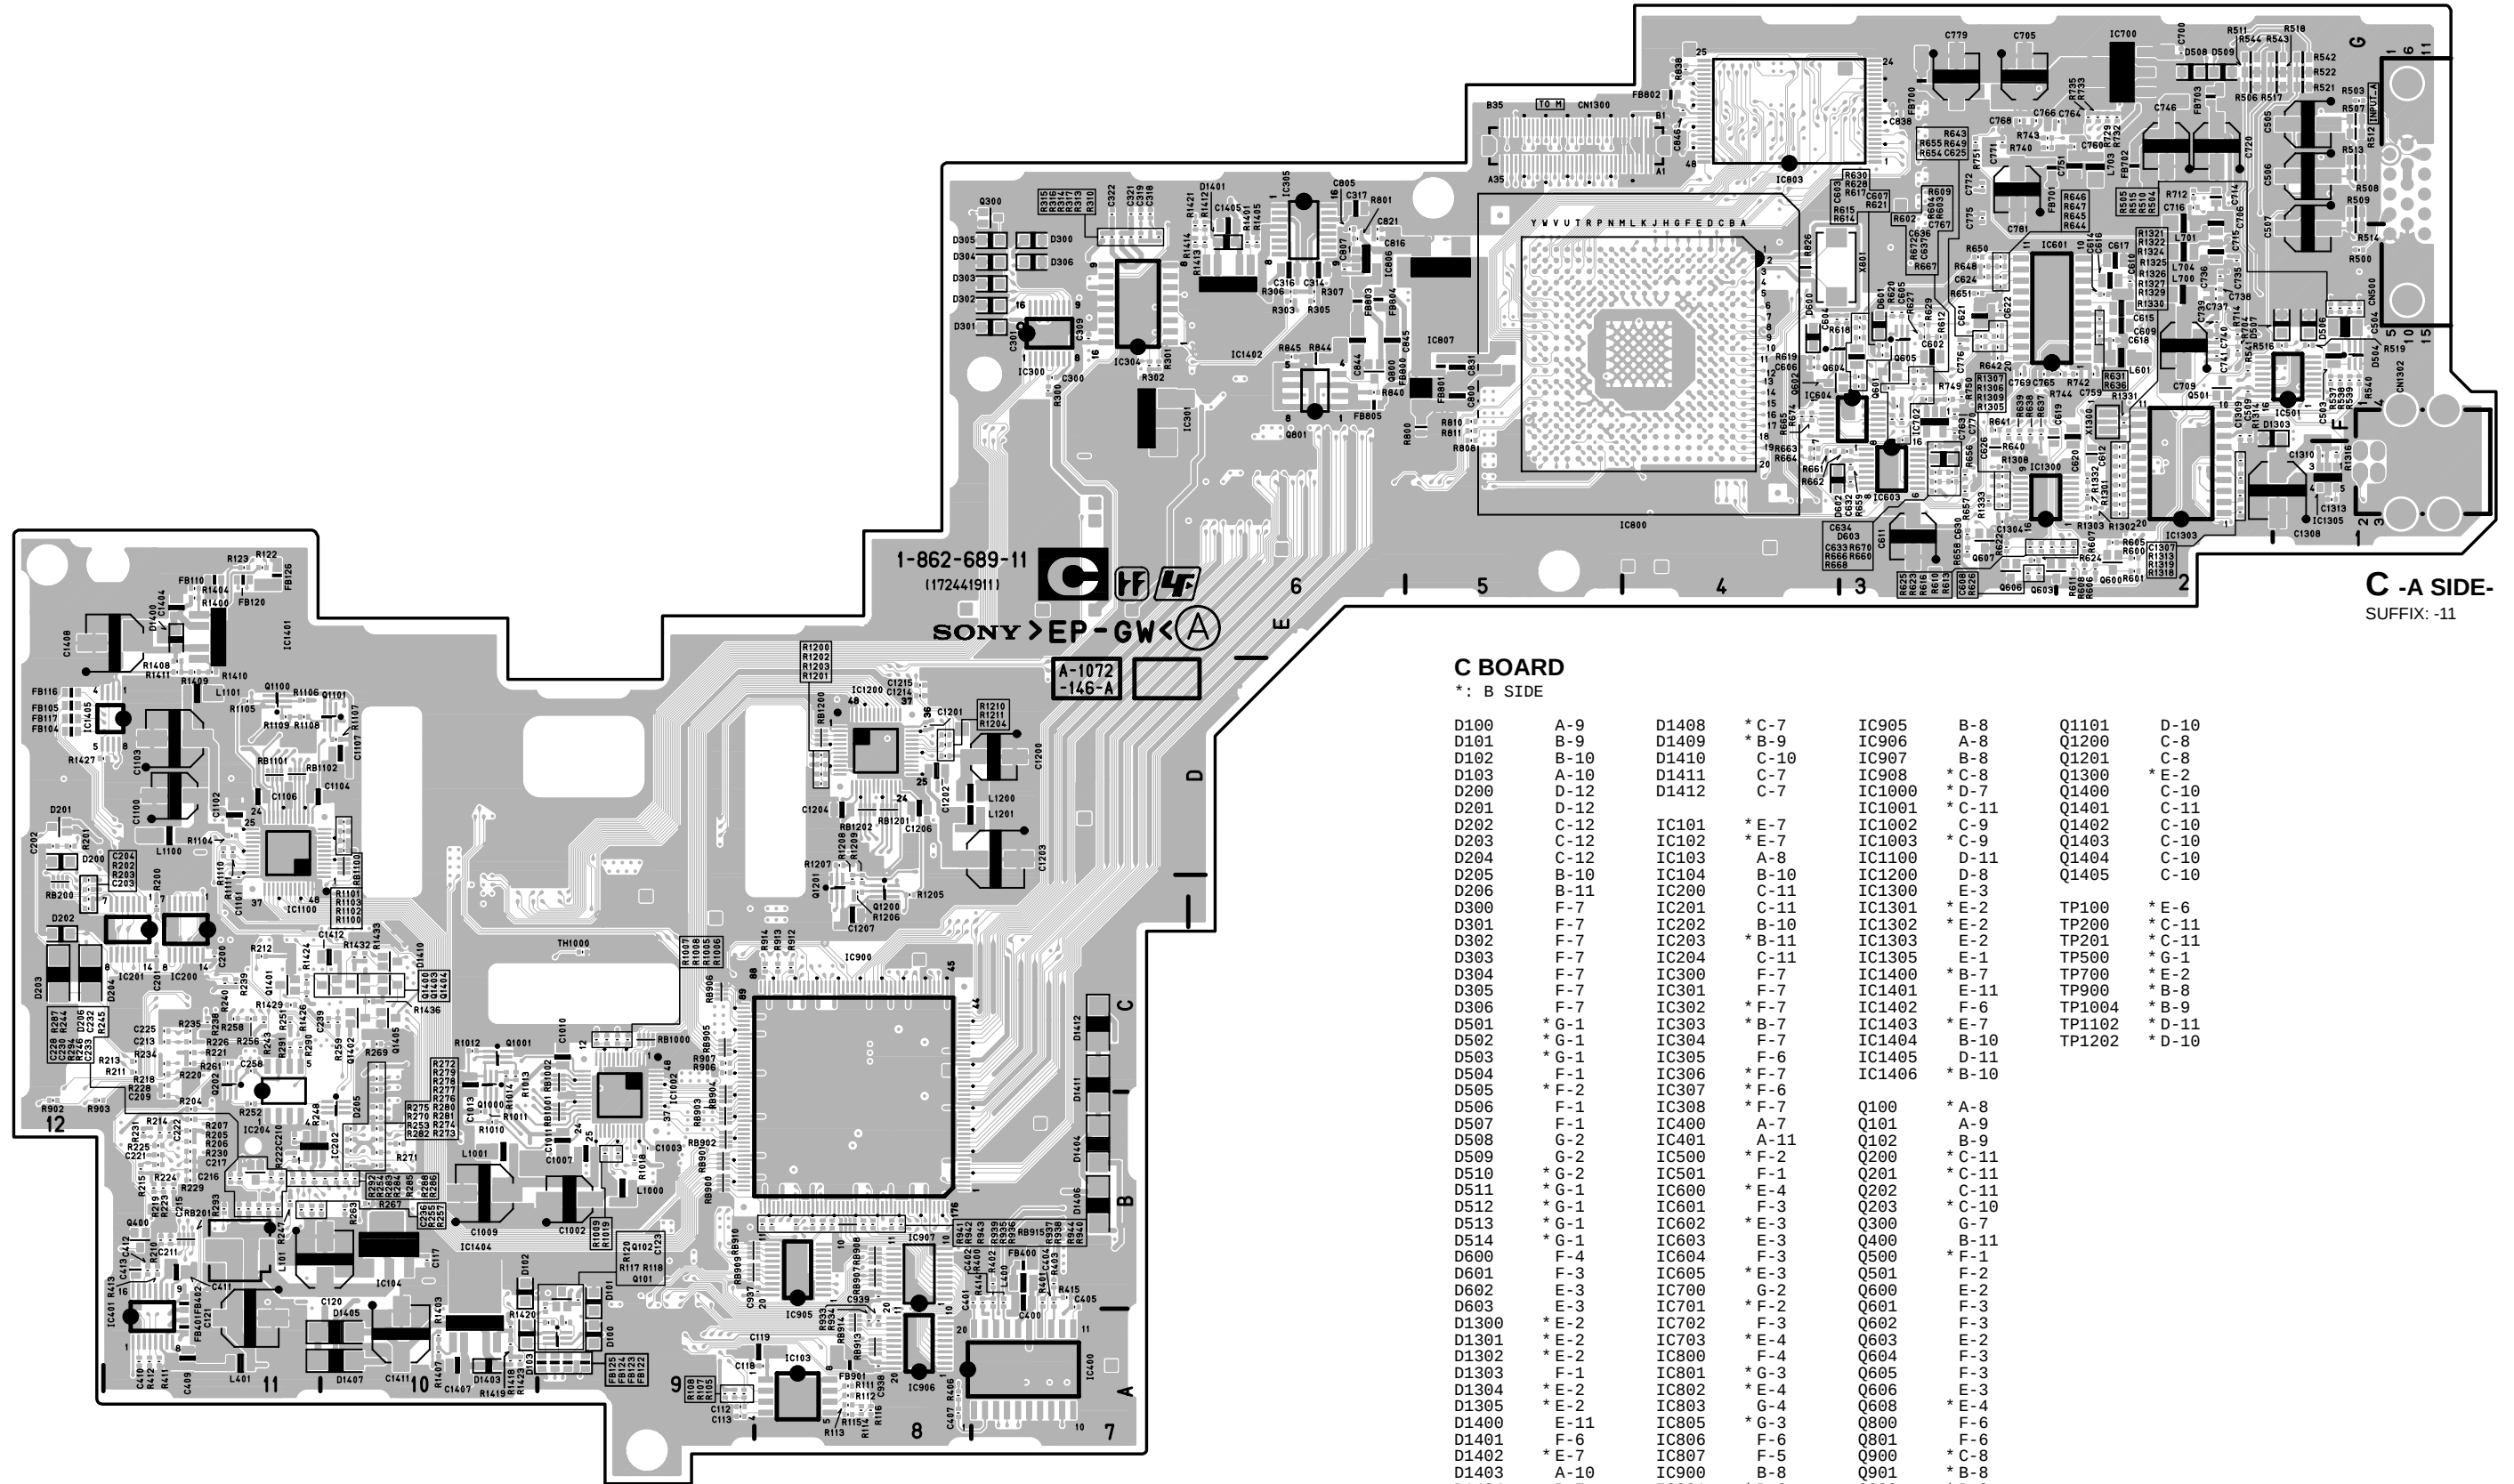


C BOARD


*: B SIDE

D100	A-9	D1408	* C-7	IC905	B-8	Q1101	D-10
D101	B-9	D1409	* B-9	IC906	A-8	Q1200	C-8
D102	B-10	D1410	C-10	IC907	B-8	Q1201	C-8
D103	A-10	D1411	C-7	IC908	* C-8	Q1300	* E-2
D200	D-12	D1412	C-7	IC1000	* D-7	Q1400	C-10
D201	D-12			IC1001	* C-11	Q1401	C-11
D202	C-12	IC101	* E-7	IC1002	C-9	Q1402	C-10
D203	C-12	IC102	* E-7	IC1003	* C-9	Q1403	C-10
D204	C-12	IC103	A-8	IC1100	D-11	Q1404	C-10
D205	B-10	IC104	B-10	IC1200	D-8	Q1405	C-10
D206	B-11	IC200	C-11	IC1300	E-3		
D300	F-7	IC201	C-11	IC1301	* E-2	TP100	* E-6
D301	F-7	IC202	B-10	IC1302	* E-2	TP200	* C-11
D302	F-7	IC203	* B-11	IC1303	E-2	TP201	* C-11
D303	F-7	IC204	C-11	IC1305	E-1	TP500	* G-1
D304	F-7	IC300	F-7	IC1400	* B-7	TP700	* E-2
D305	F-7	IC301	F-7	IC1401	E-11	TP900	* B-8
D306	F-7	IC302	* F-7	IC1402	F-6	TP1004	* B-9
D501	* G-1	IC303	* B-7	IC1403	* E-7	TP1102	* D-11
D502	* G-1	IC304	F-7	IC1404	B-10	TP1202	* D-10
D503	* G-1	IC305	F-6	IC1405	D-11		
D504	F-1	IC306	* F-7	IC1406	* B-10		
D505	* F-2	IC307	* F-6				
D506	F-1	IC308	* F-7	Q100	* A-8		
D507	F-1	IC400	A-7	Q101	A-9		
D508	G-2	IC401	A-11	Q102	B-9		
D509	G-2	IC500	* F-2	Q200	* C-11		
D510	* G-2	IC501	F-1	Q201	* C-11		
D511	* G-1	IC600	* E-4	Q202	C-11		
D512	* G-1	IC601	F-3	Q203	* C-10		
D513	* G-1	IC602	* E-3	Q300	G-7		
D514	* G-1	IC603	E-3	Q400	B-11		
D600	F-4	IC604	F-3	Q500	* F-1		
D601	F-3	IC605	* E-3	Q501	F-2		
D602	E-3	IC700	G-2	Q600	E-2		
D603	E-3	IC701	* F-2	Q601	F-3		
D1300	* E-2	IC702	F-3	Q602	F-3		
D1301	* E-2	IC703	* E-4	Q603	E-2		
D1302	* E-2	IC800	F-4	Q604	F-3		
D1303	F-1	IC801	* G-3	Q605	F-3		
D1304	* E-2	IC802	* E-4	Q606	E-3		
D1305	* E-2	IC803	G-4	Q608	* E-4		
D1400	E-11	IC805	* G-3	Q800	F-6		
D1401	F-6	IC806	F-6	Q801	F-6		
D1402	* E-7	IC807	F-5	Q900	* C-8		
D1403	A-10	IC900	B-8	Q901	* B-8		
D1404	B-7	IC901	* B-8	Q902	* B-8		
D1405	A-10	IC902	* B-8	Q1000	C-10		
D1406	B-7	IC903	* B-8	Q1001	C-10		
D1407	A-10	IC904	* B-8	Q1100	D-11		

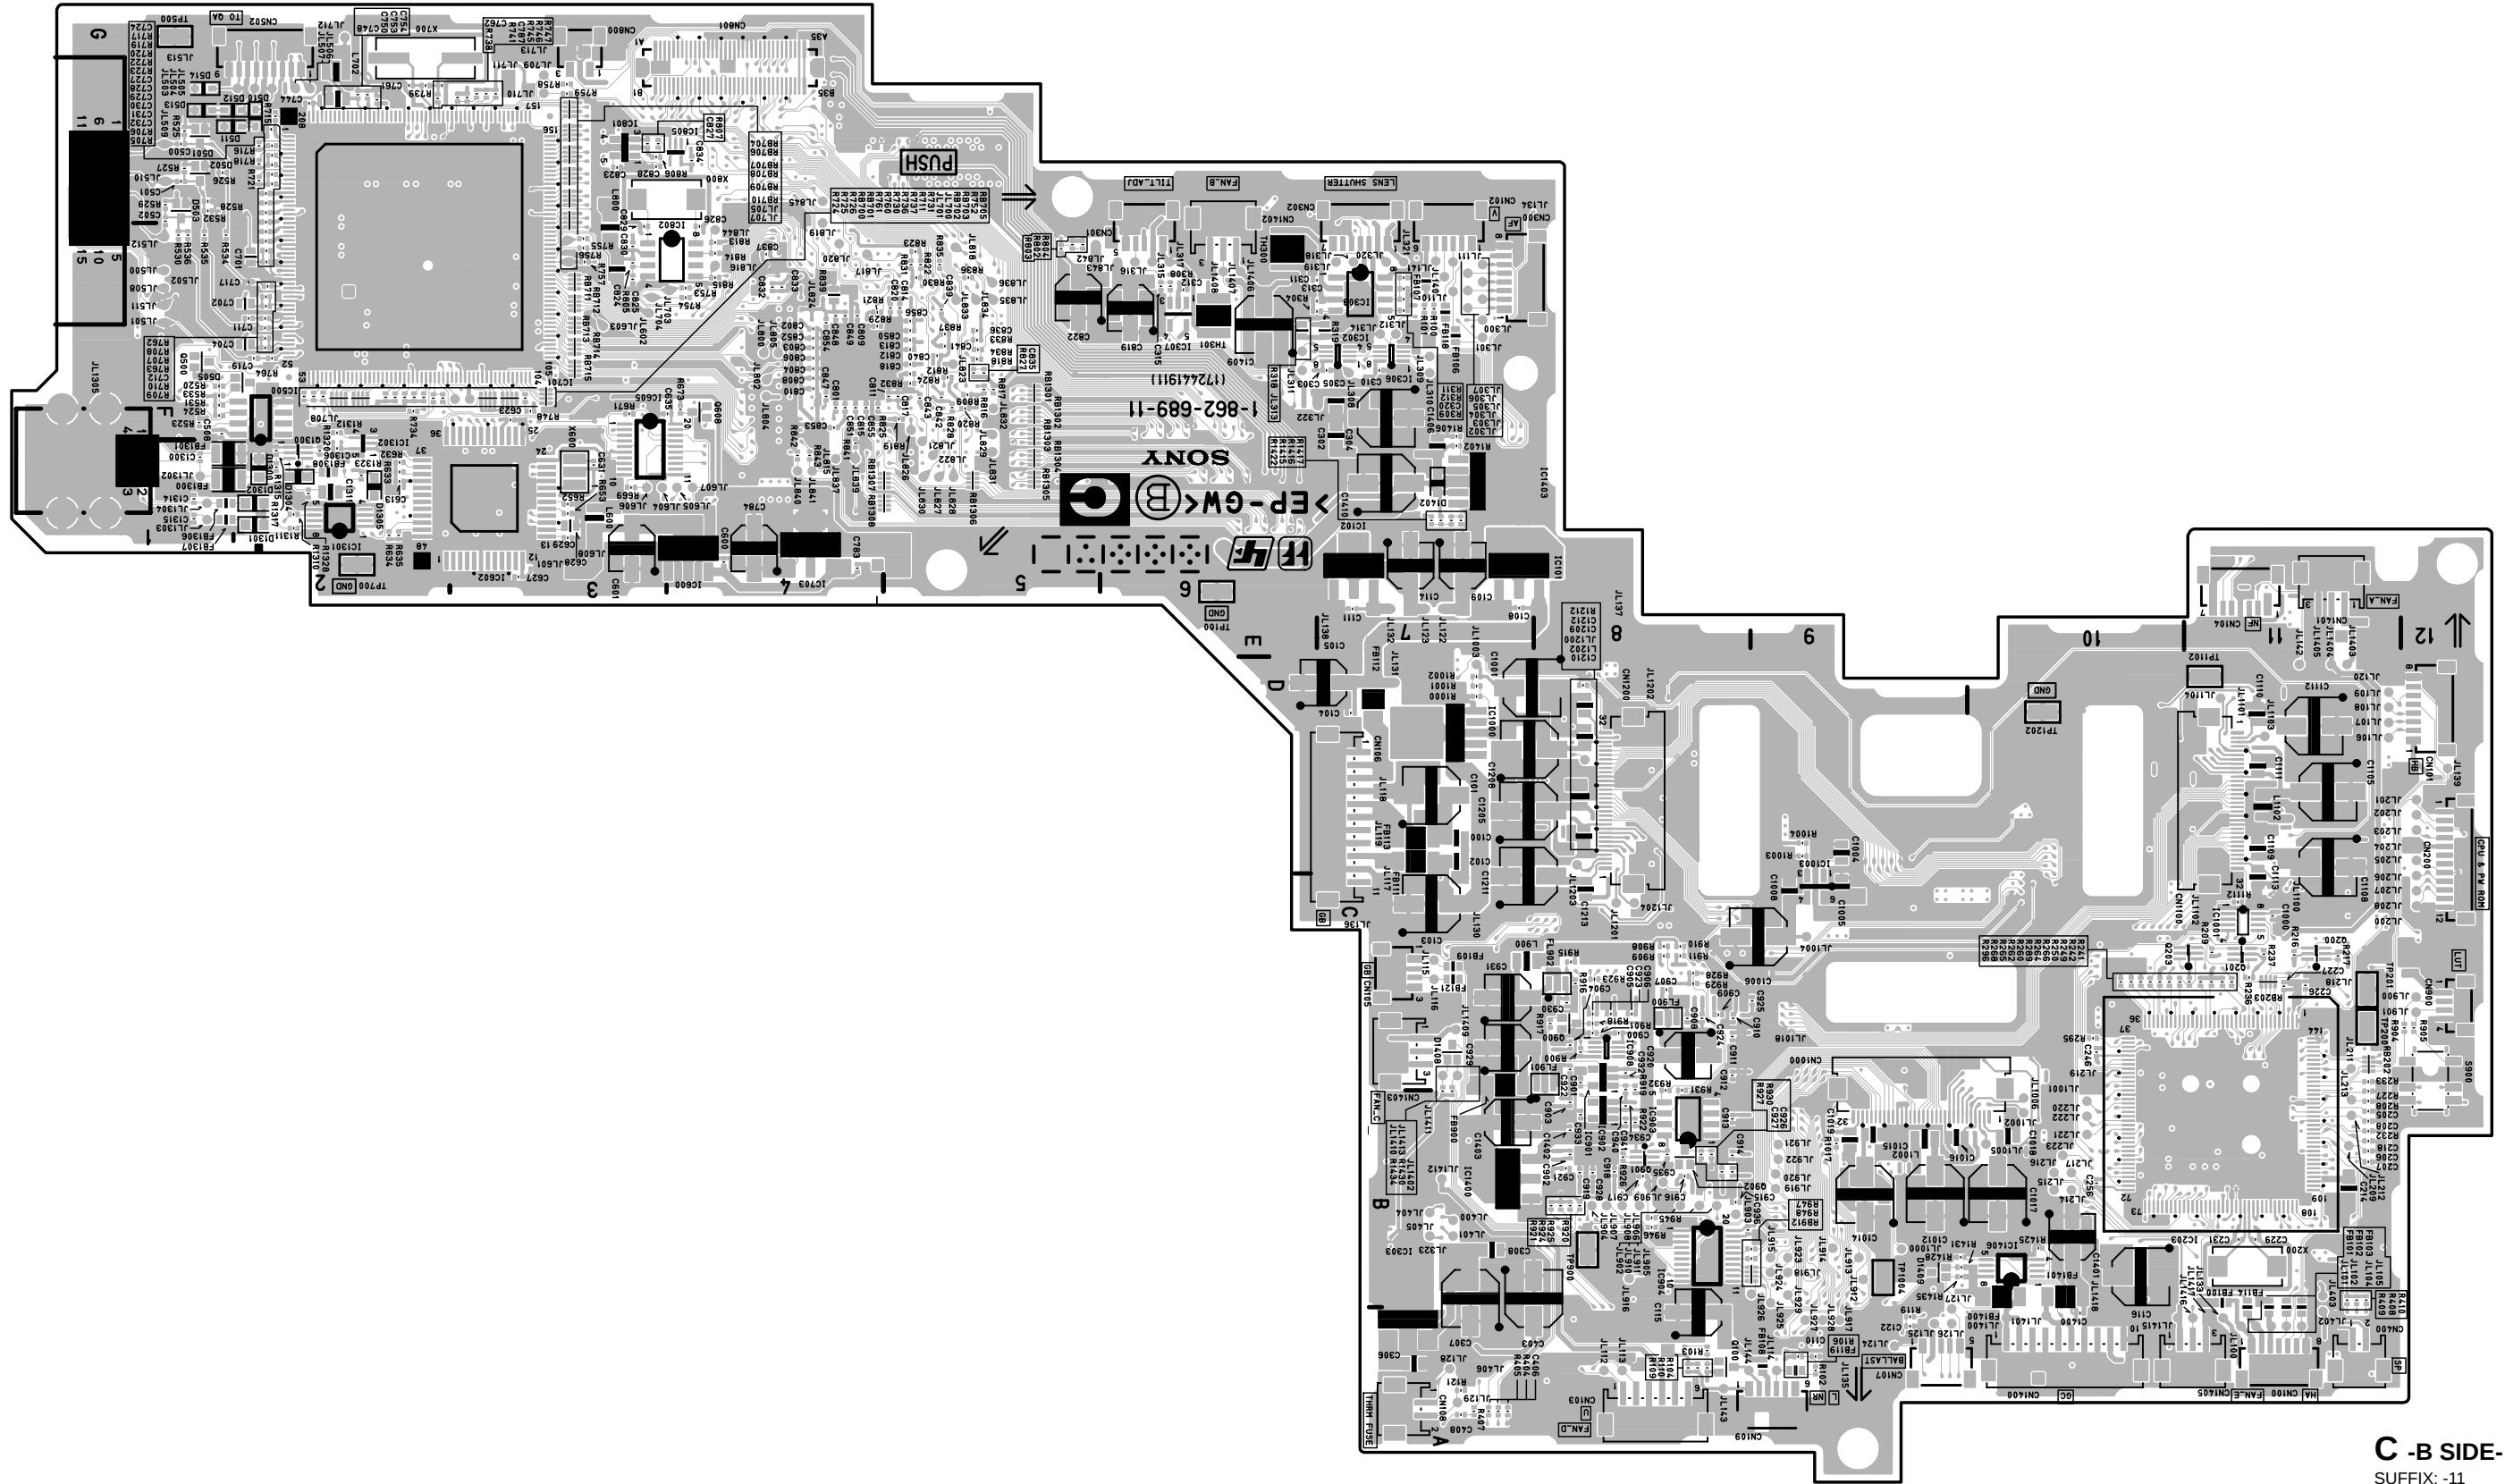

C-B SIDE-
SUFFIX: -11

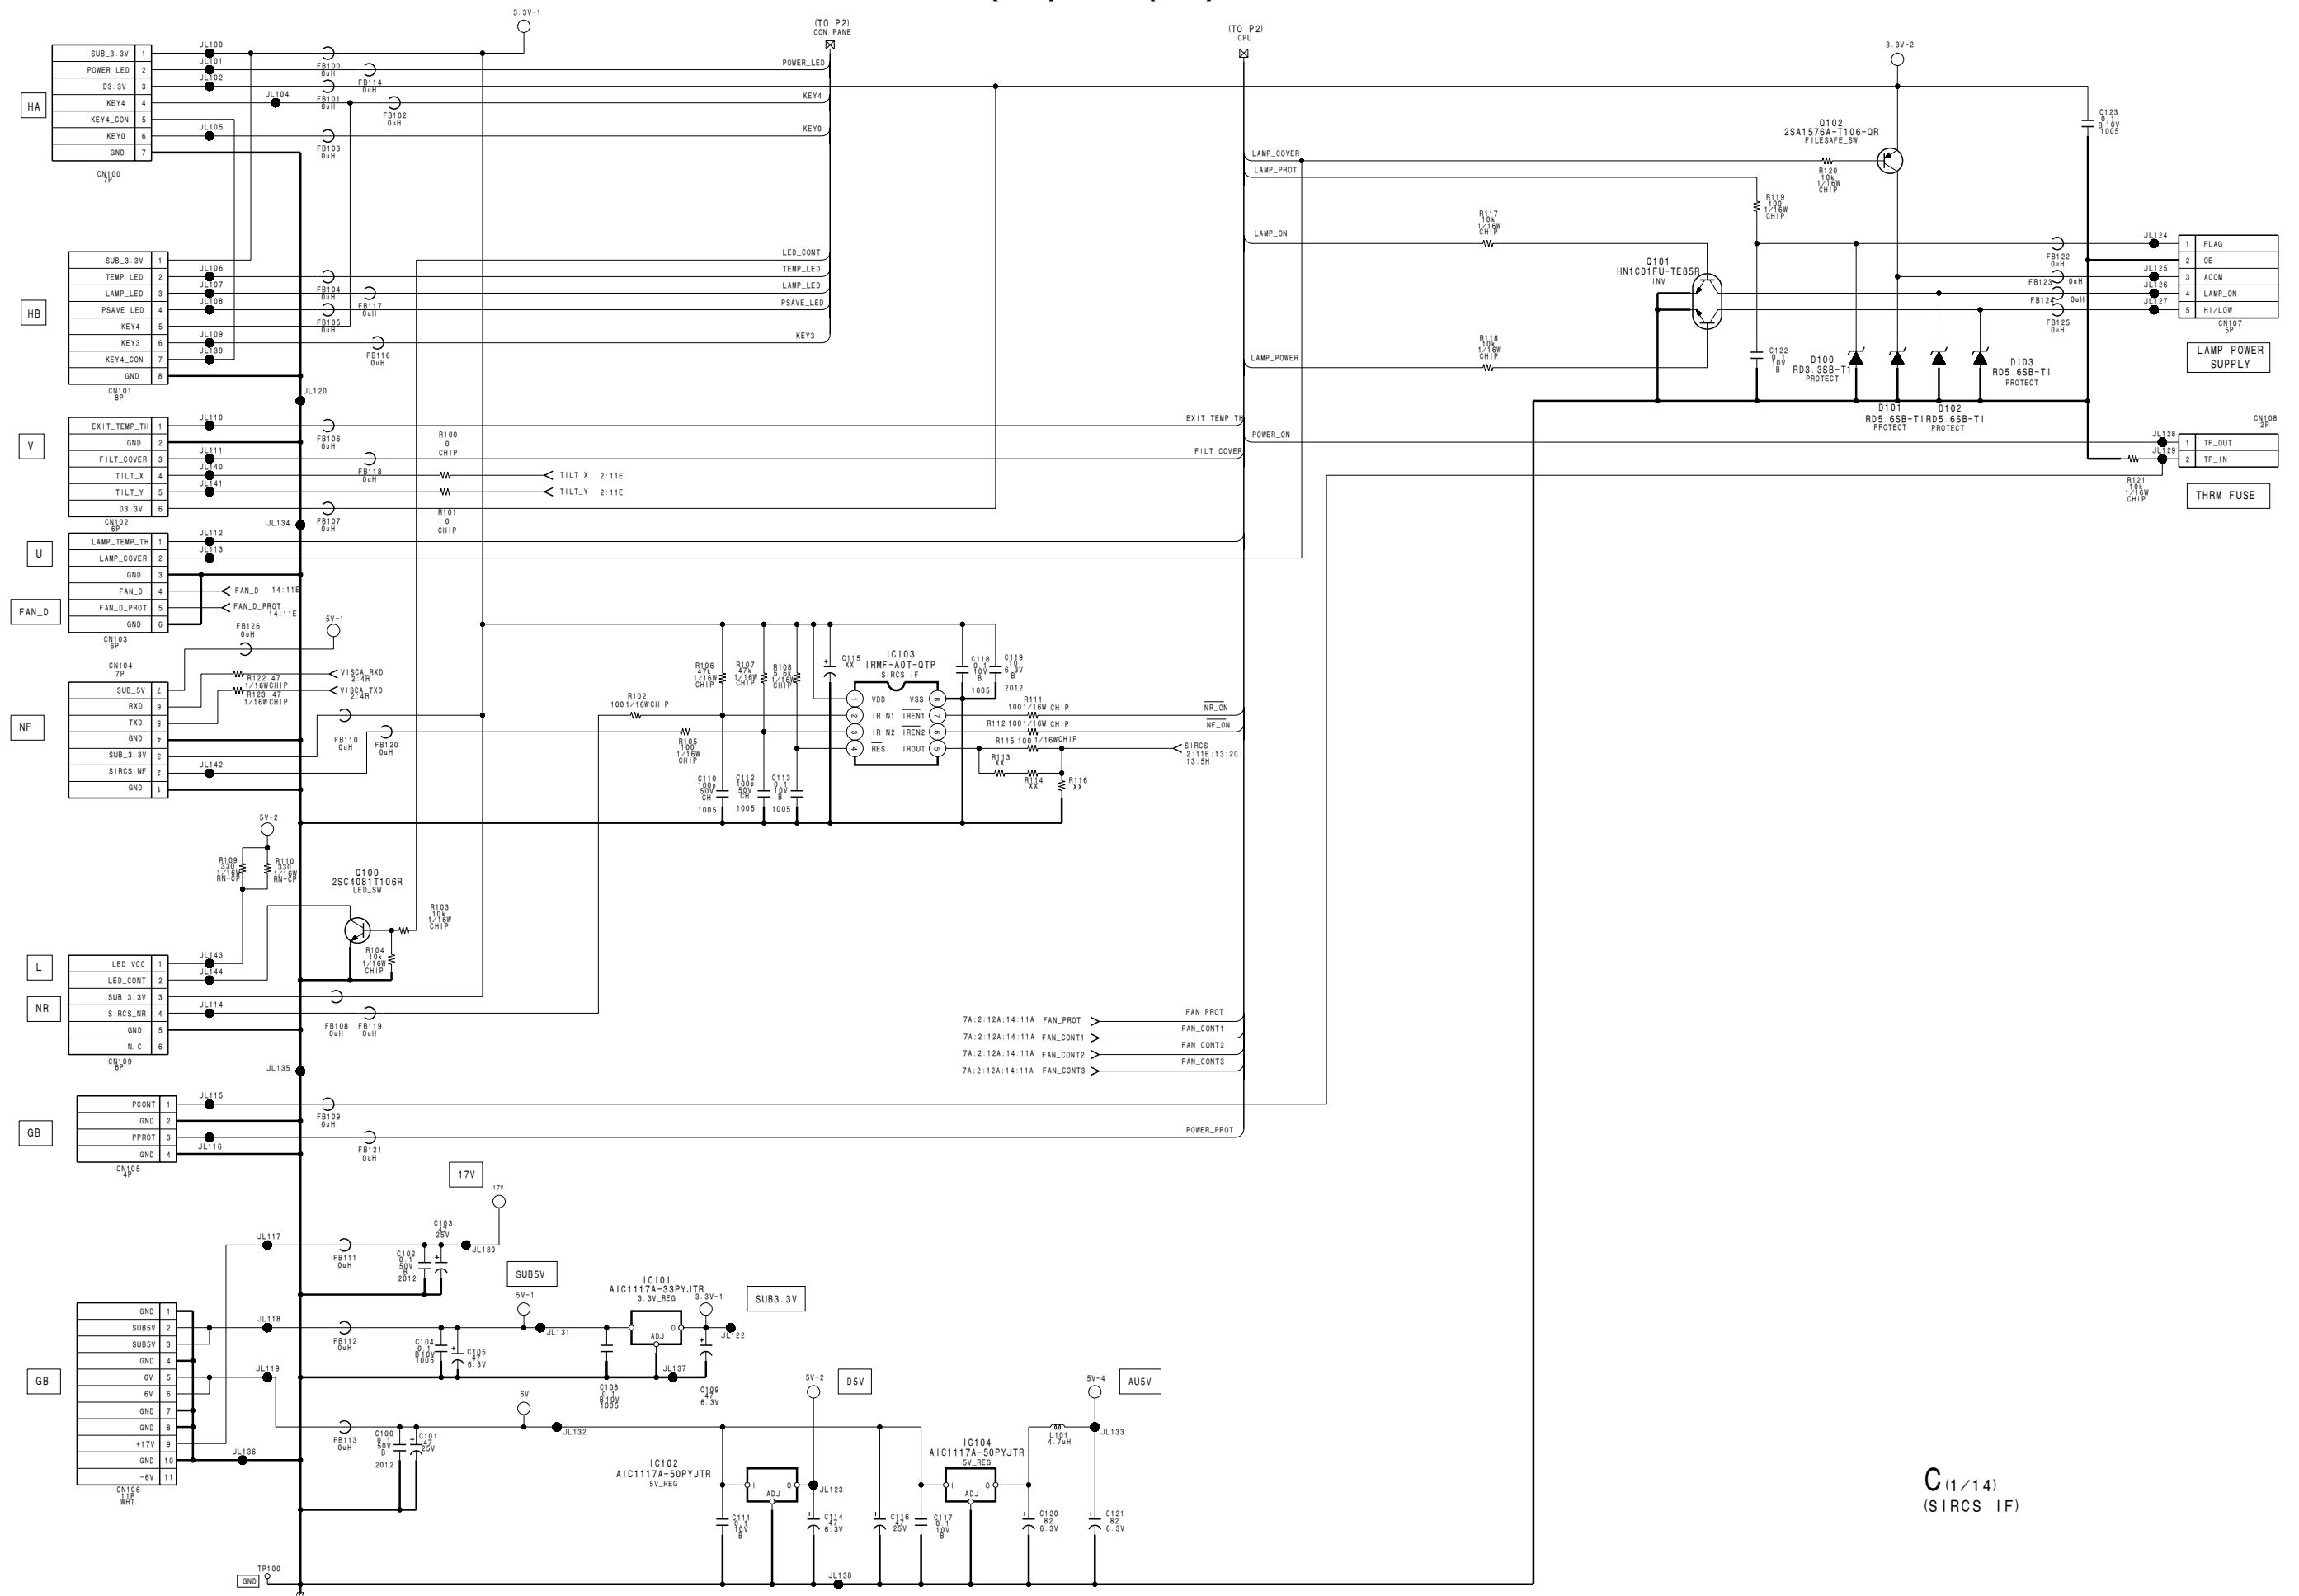

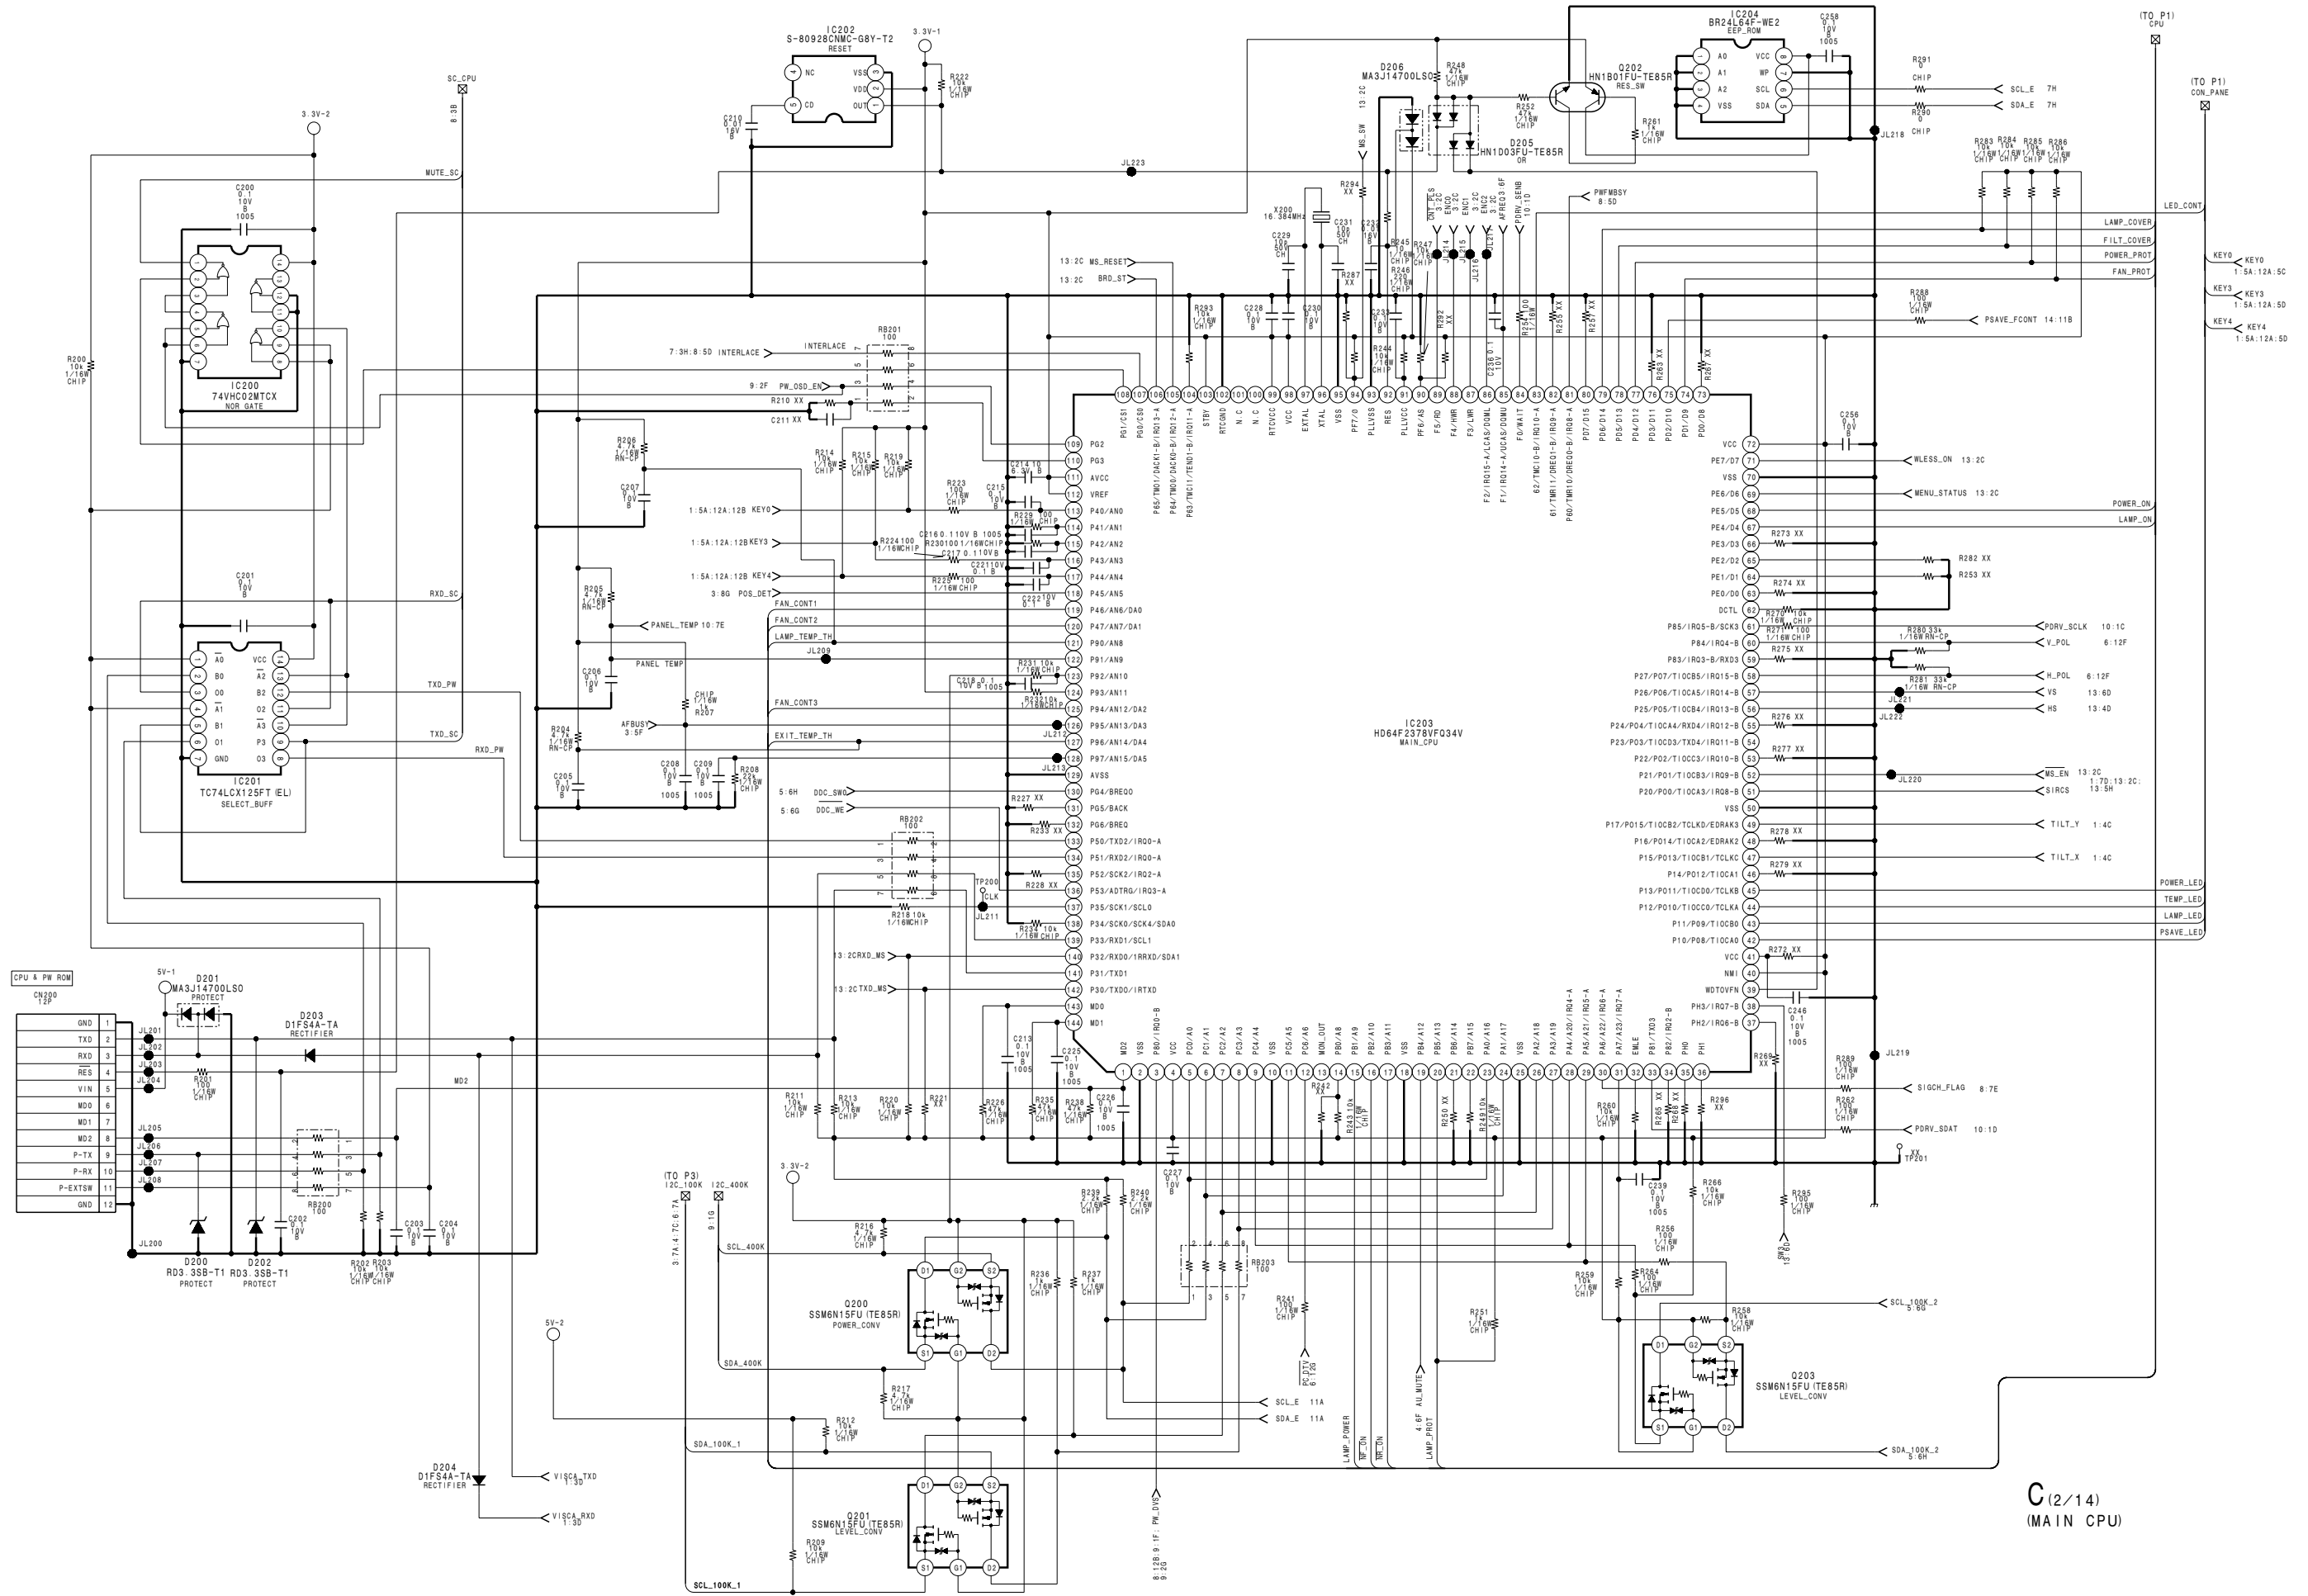


1

2


3

4


5

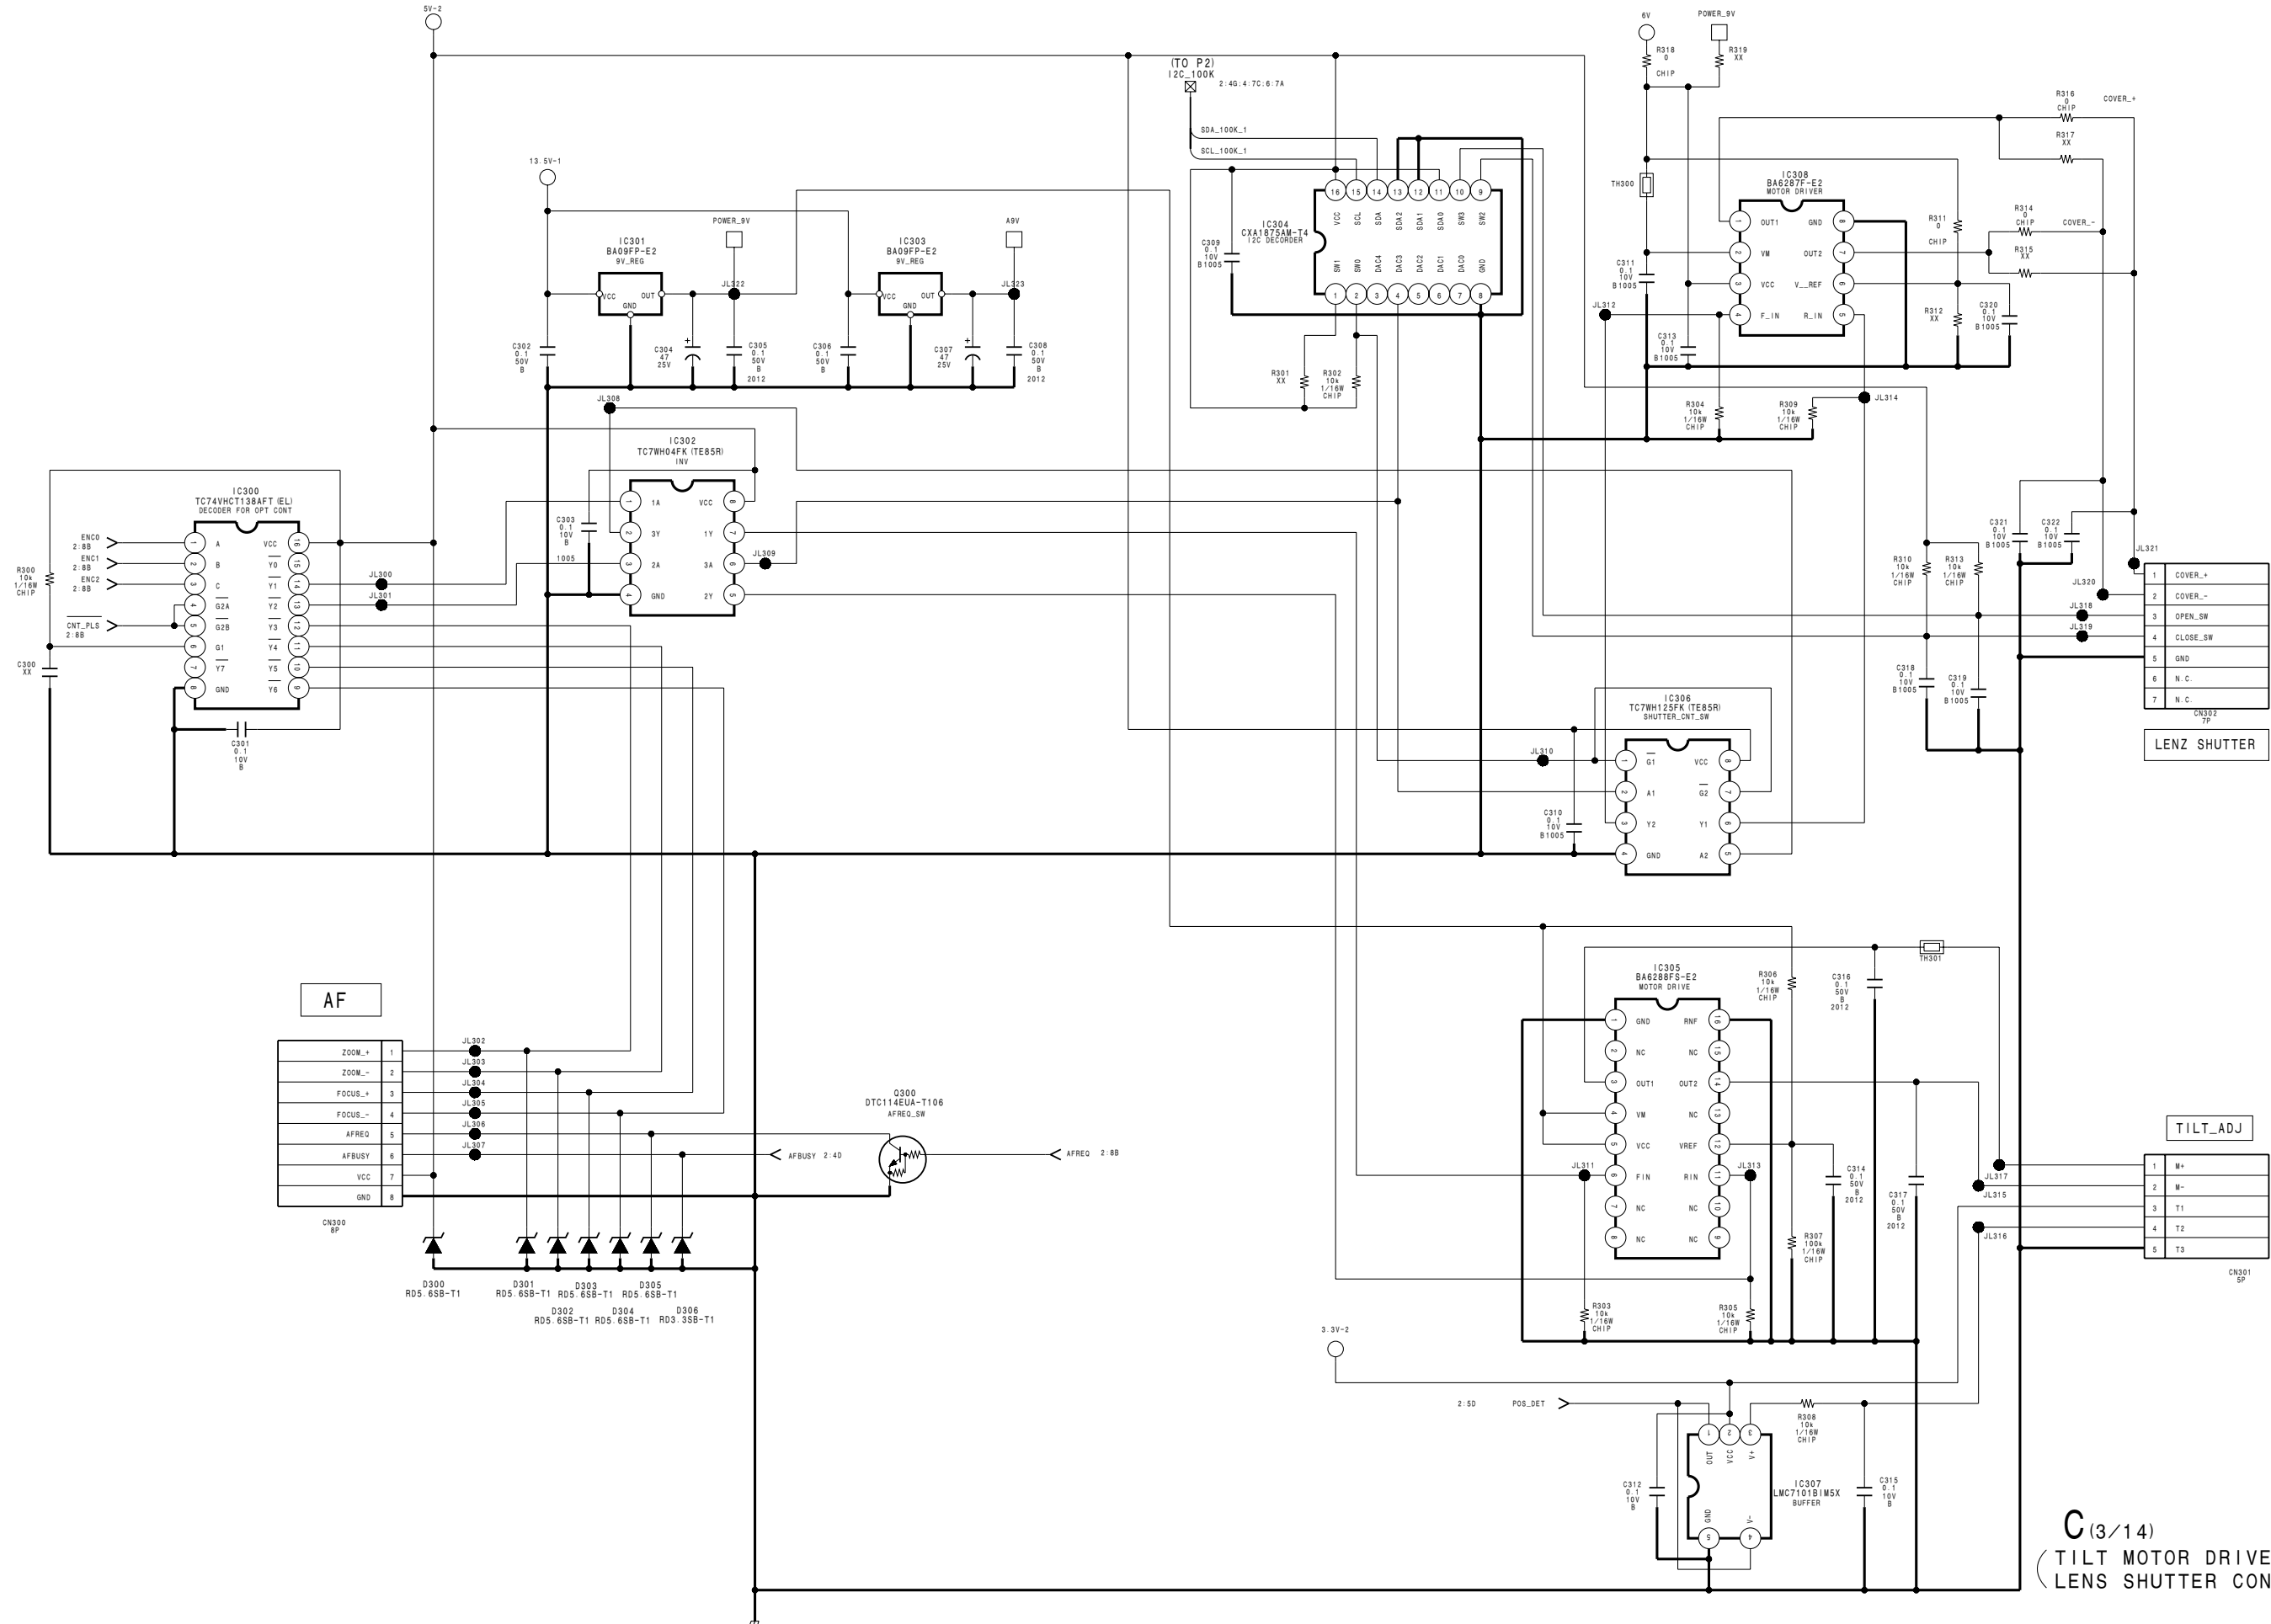


C (3/14)
(TILT MOTOR DRIVE)
(LENS SHUTTER CONT)

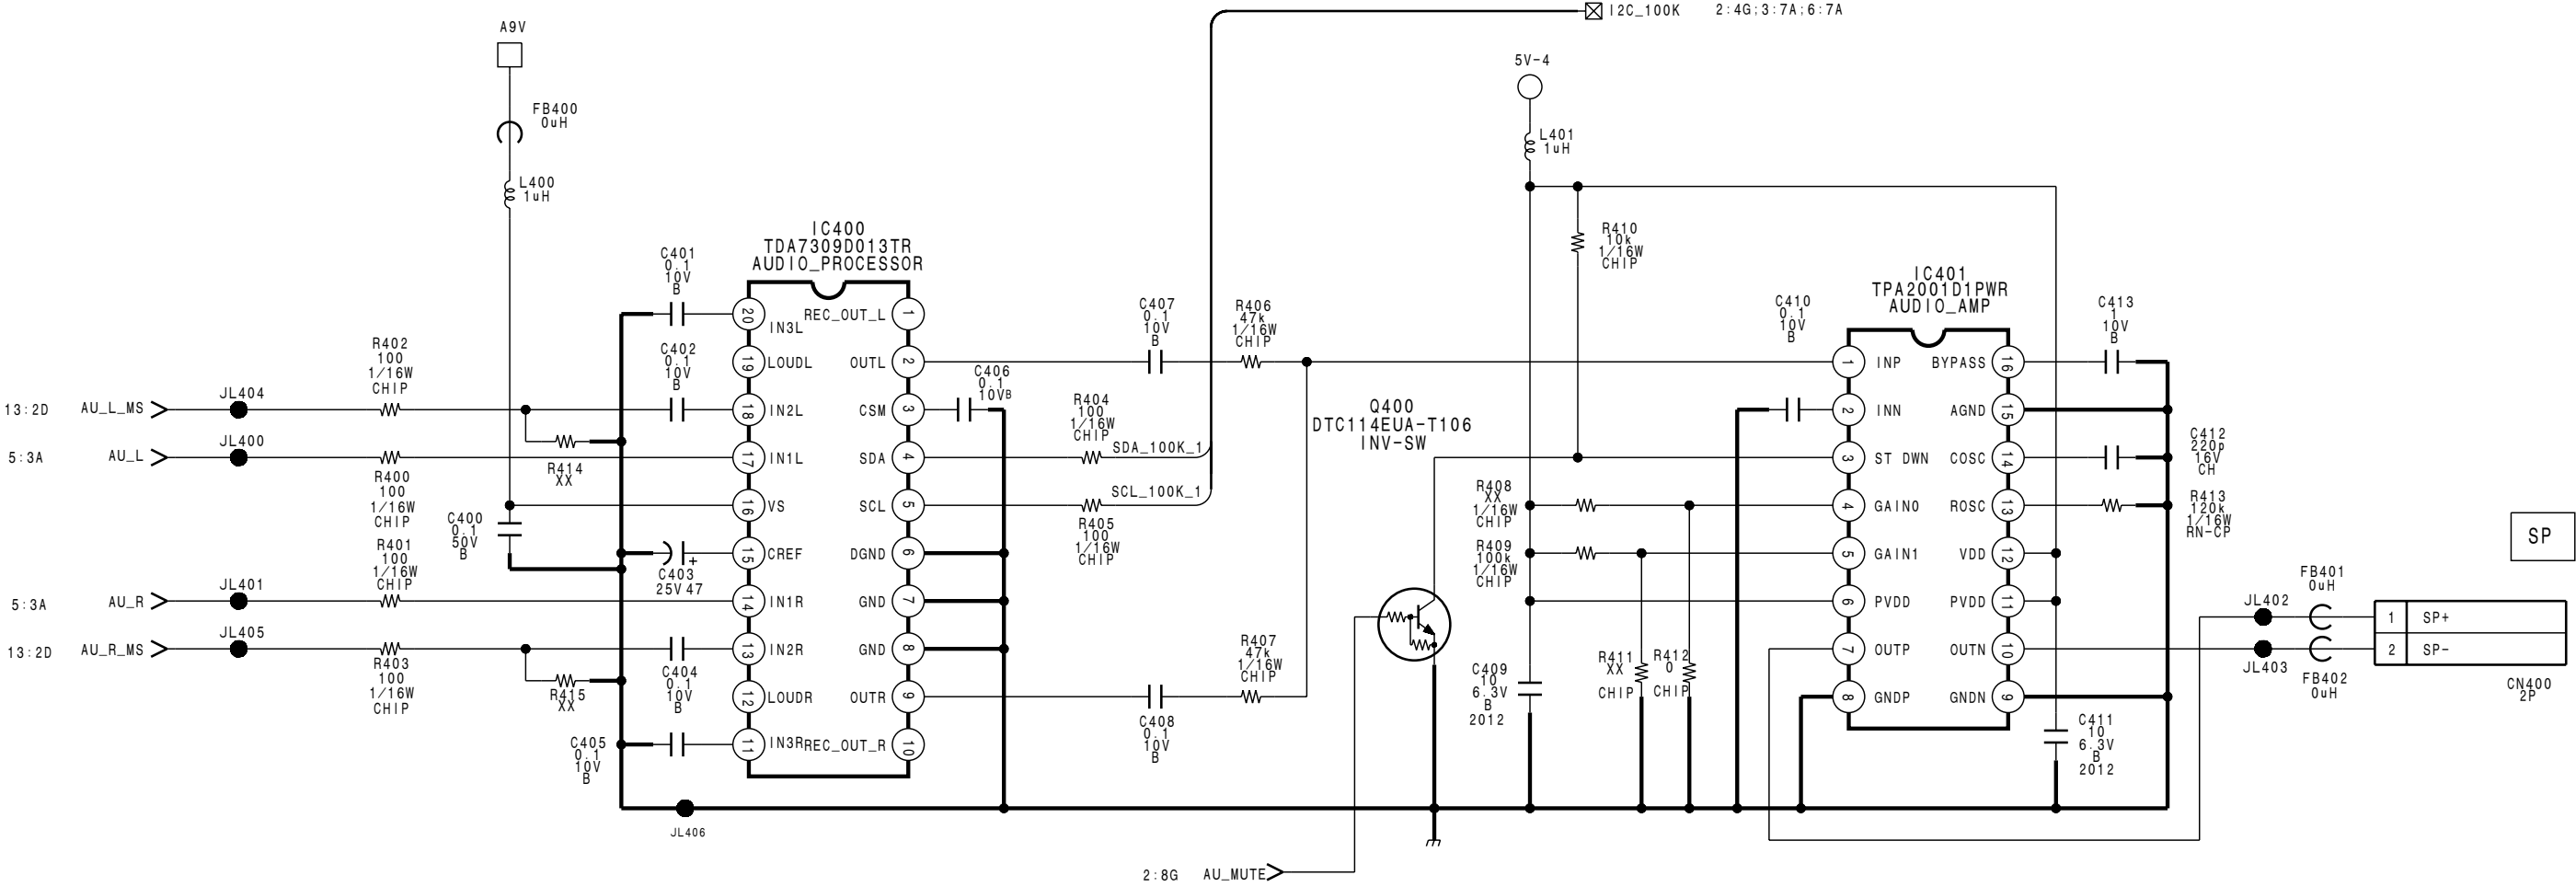

C (4/14)
(AUDIO_PROCESSOR,
AUDIO AMP)

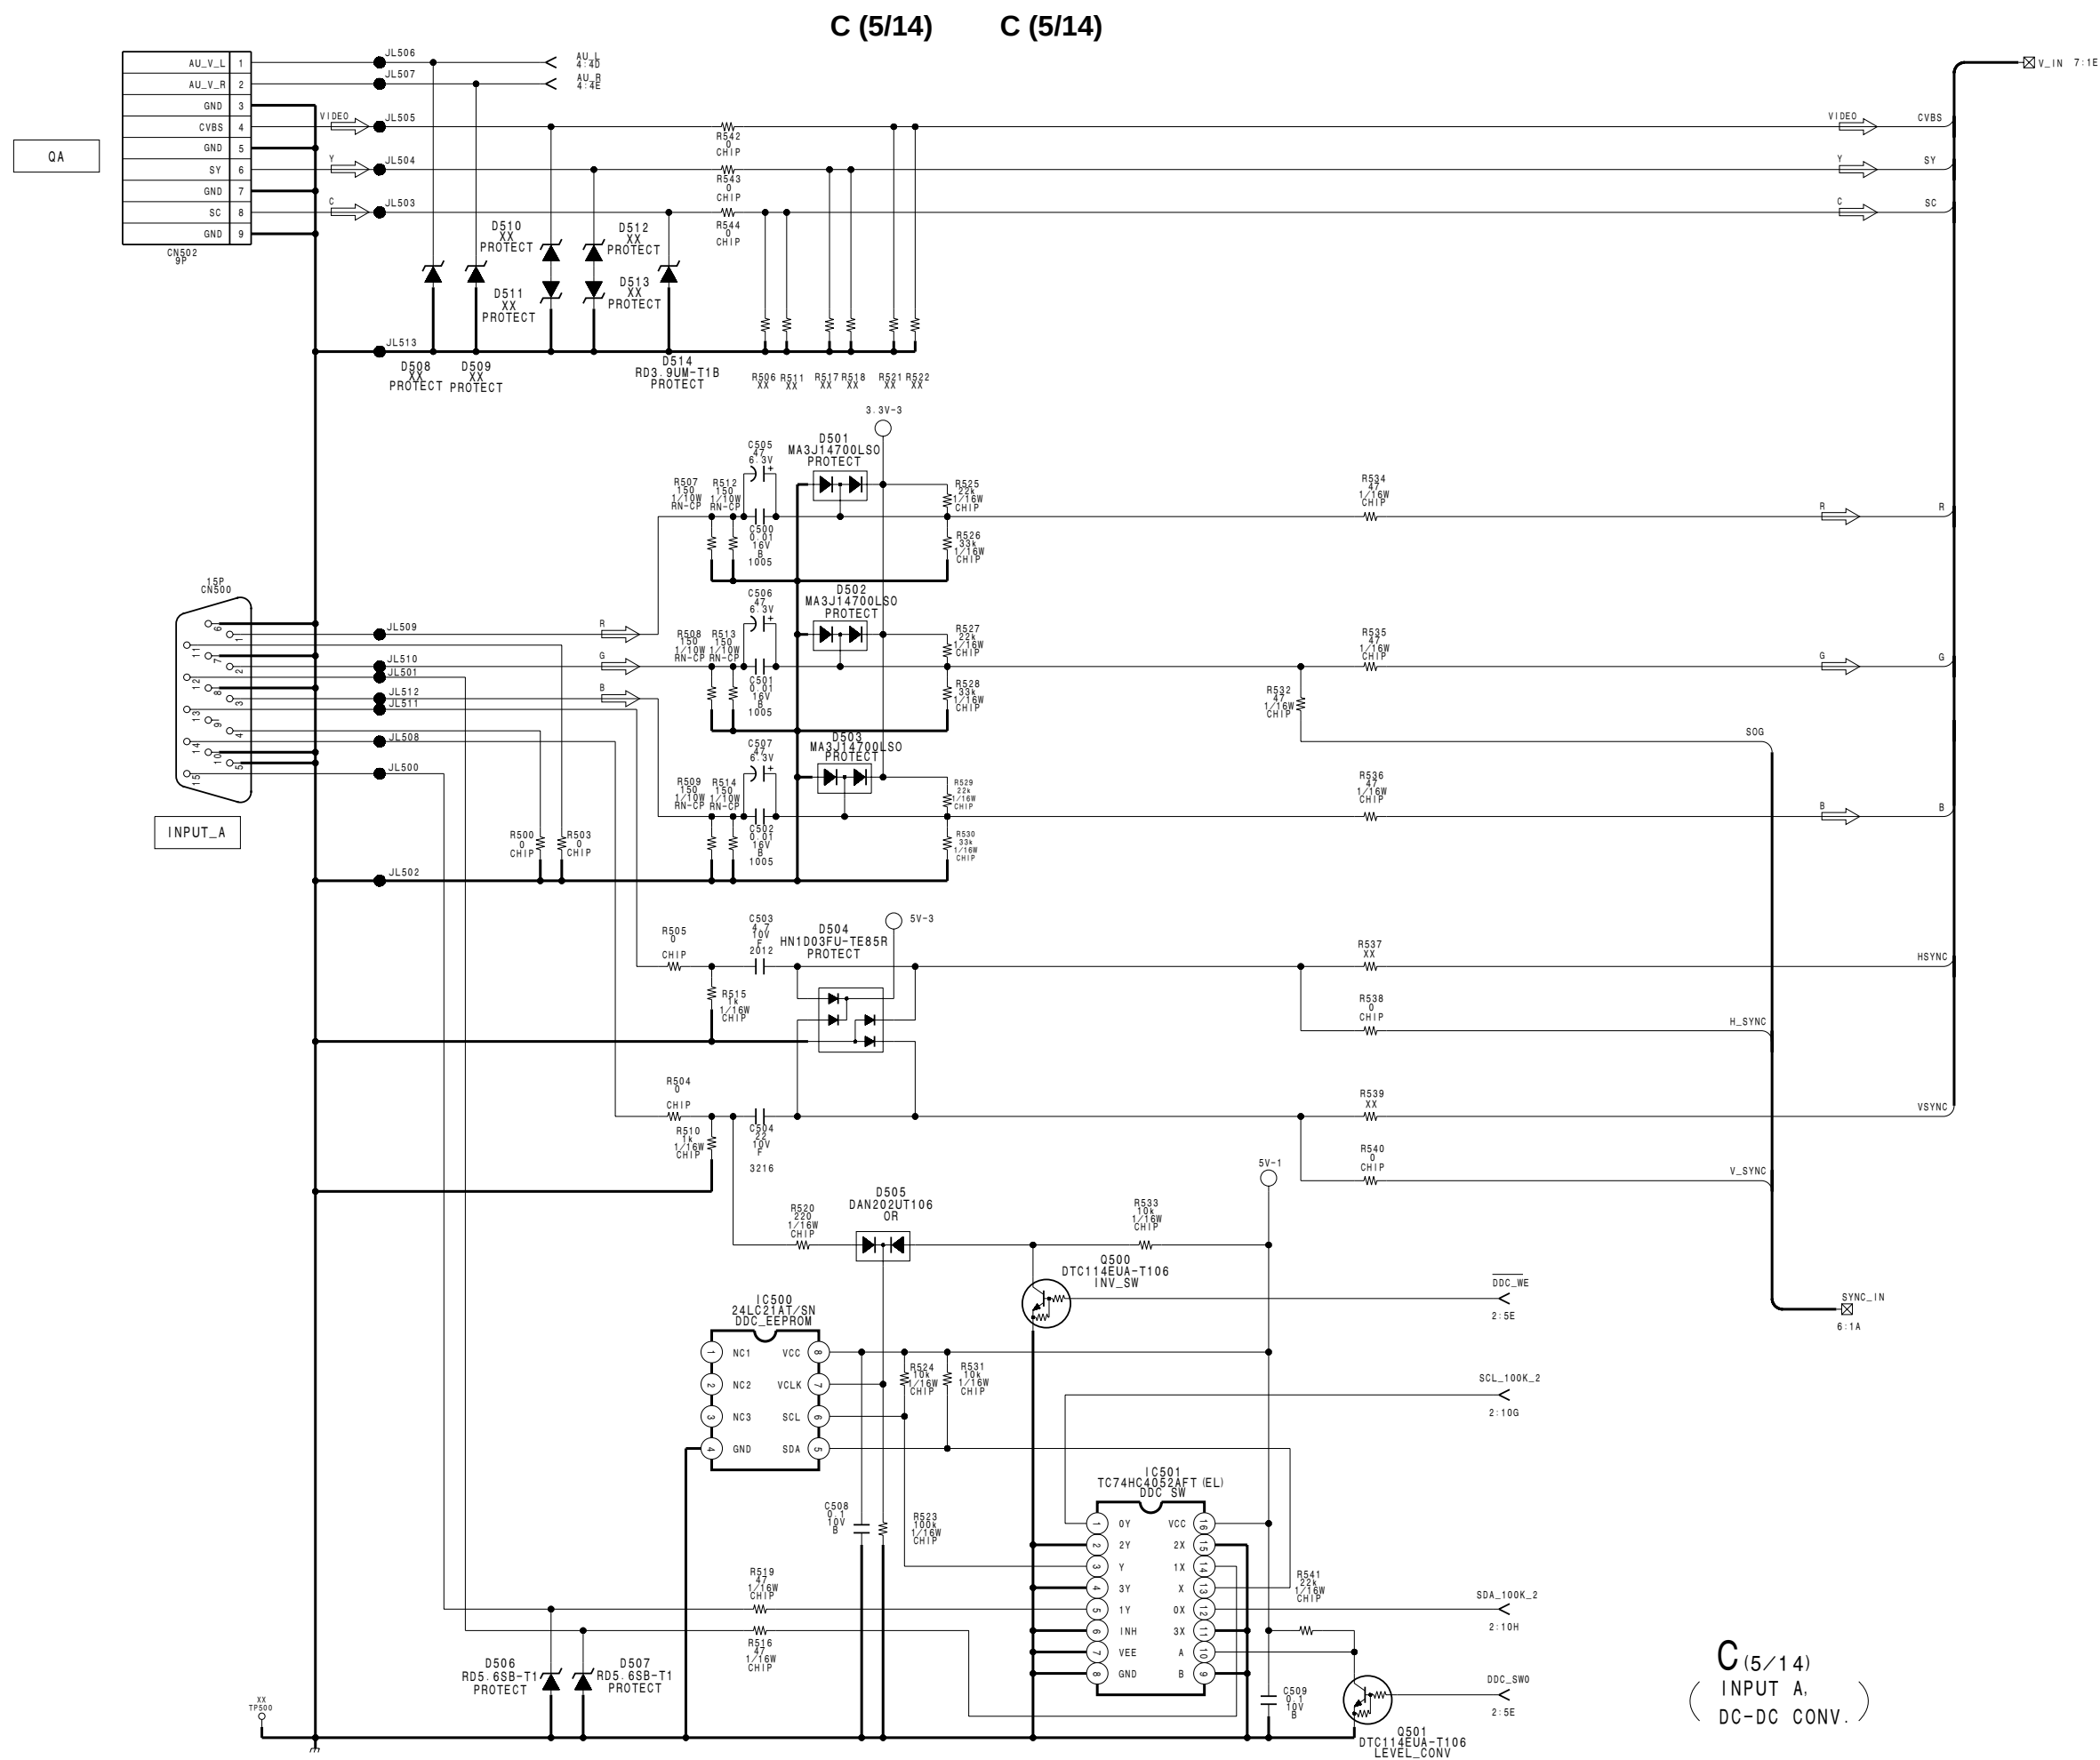

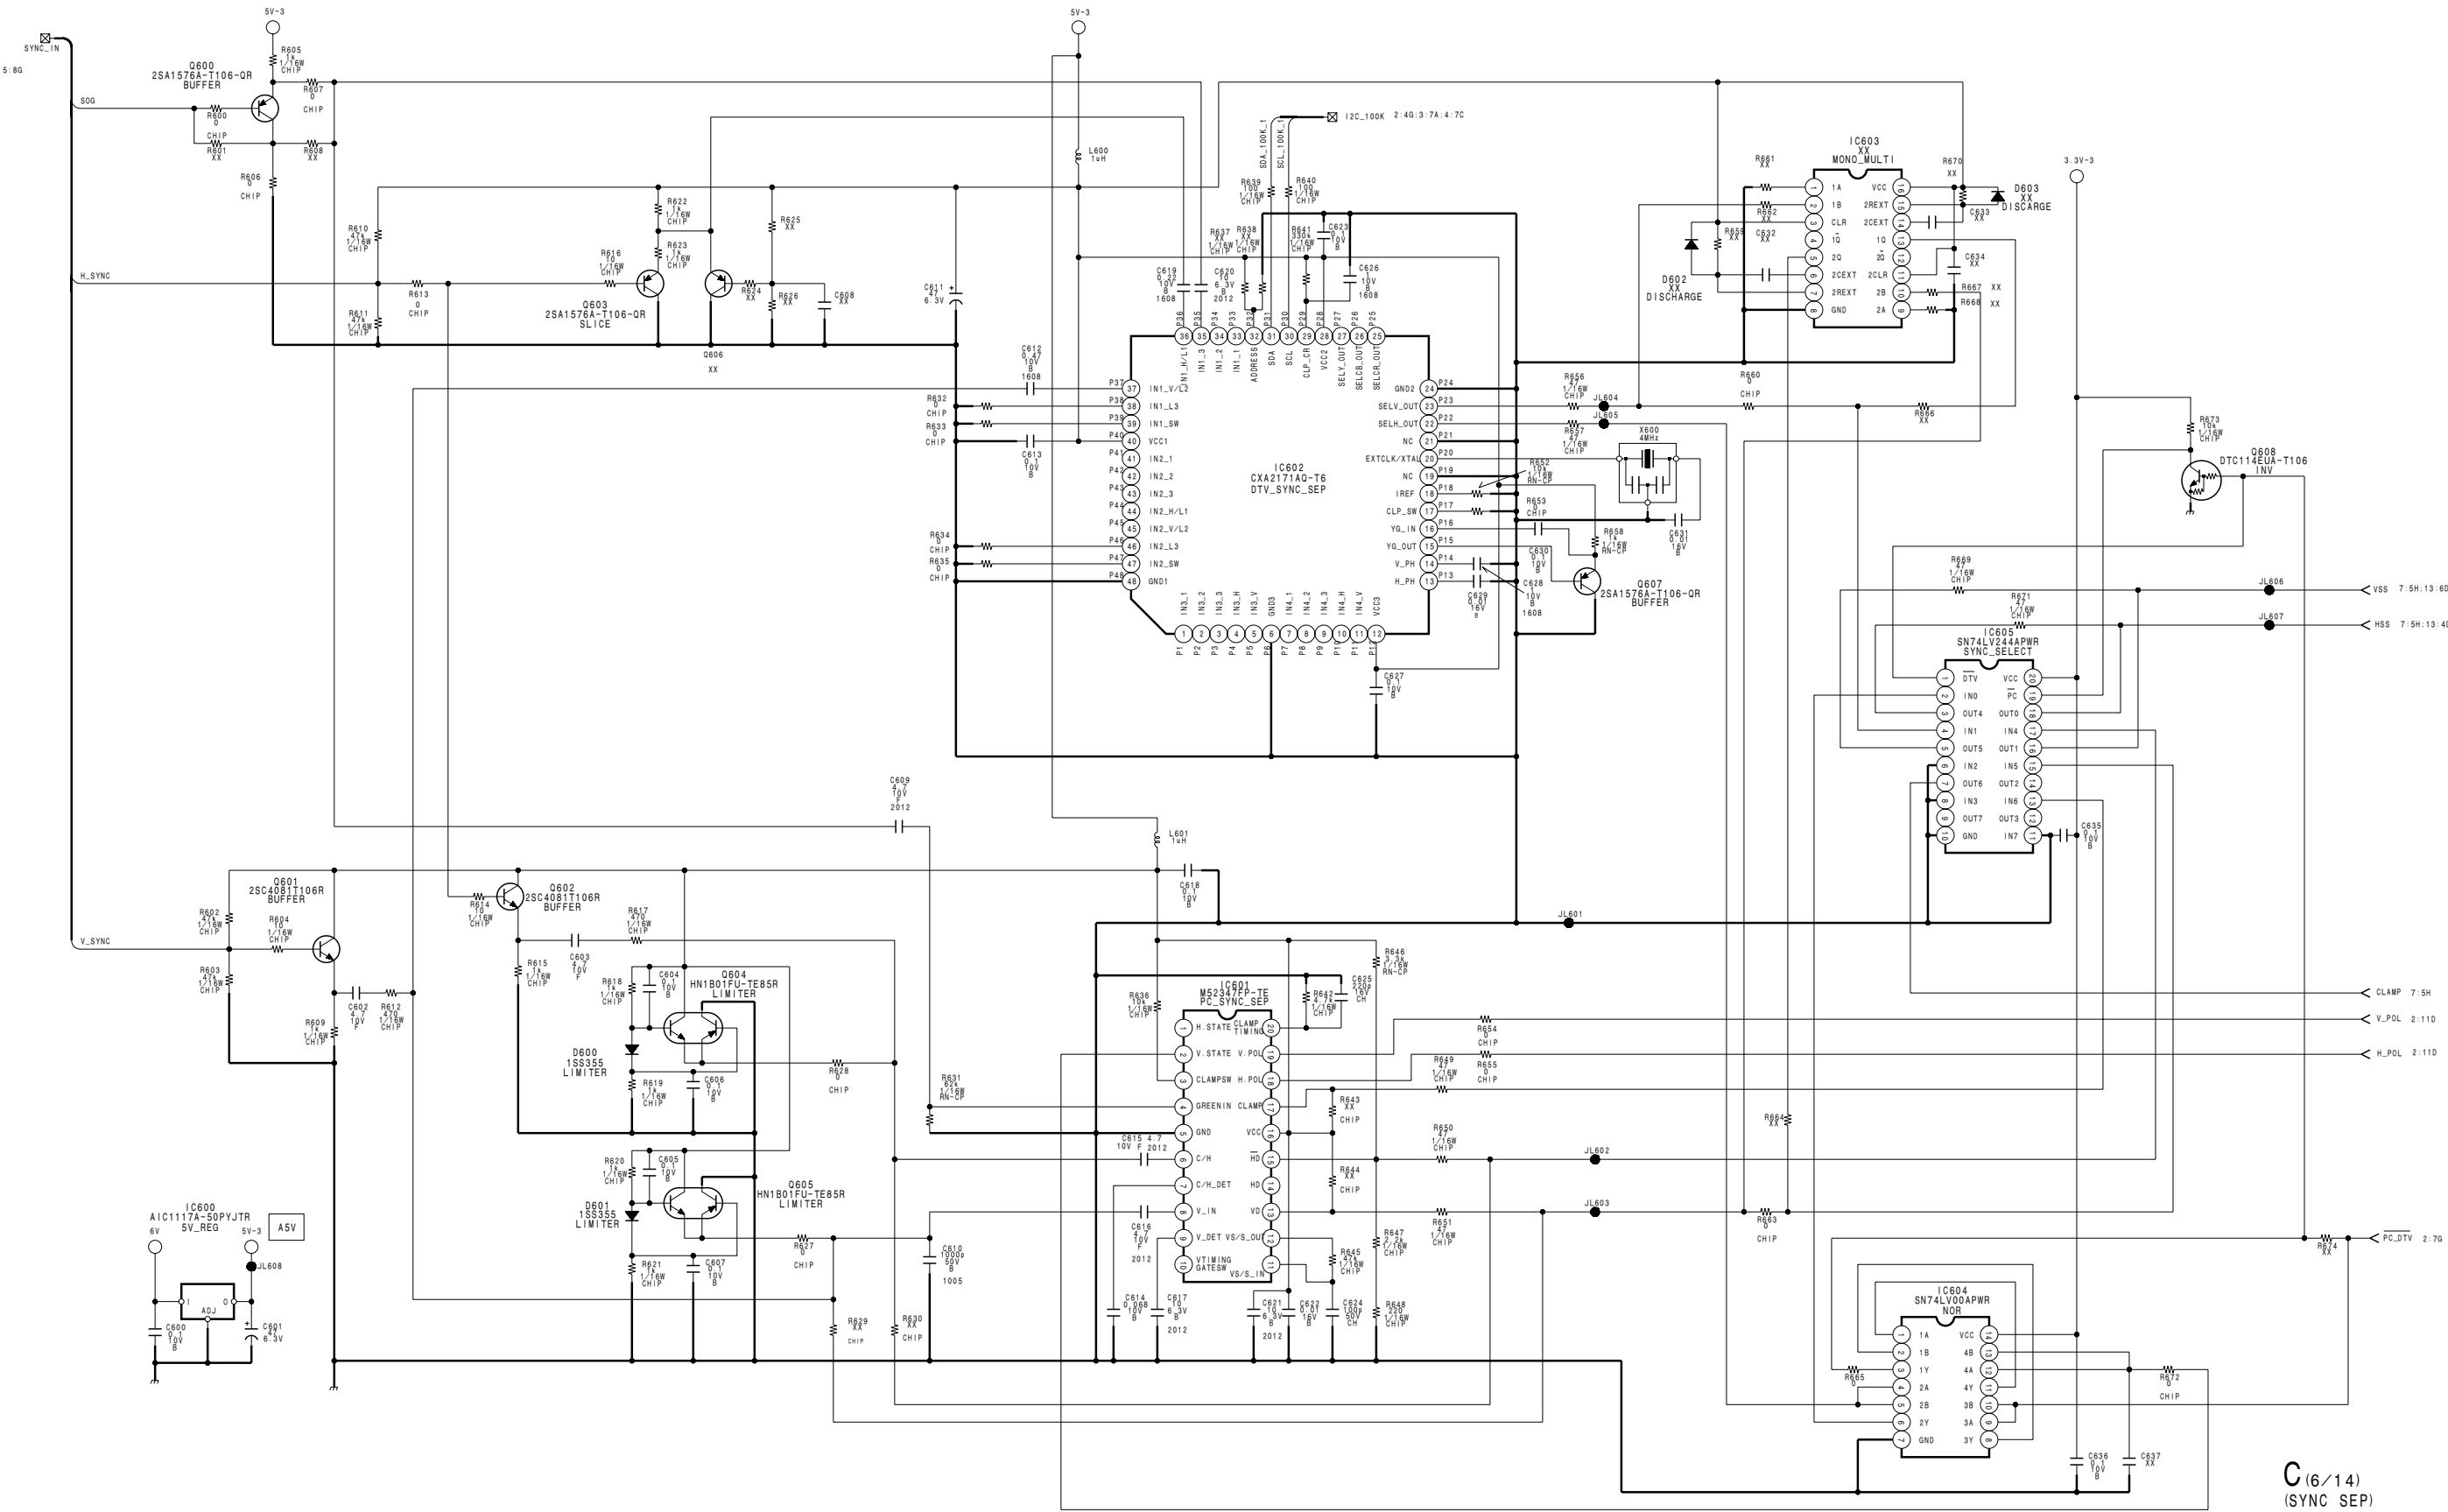


1

2

3


4


5

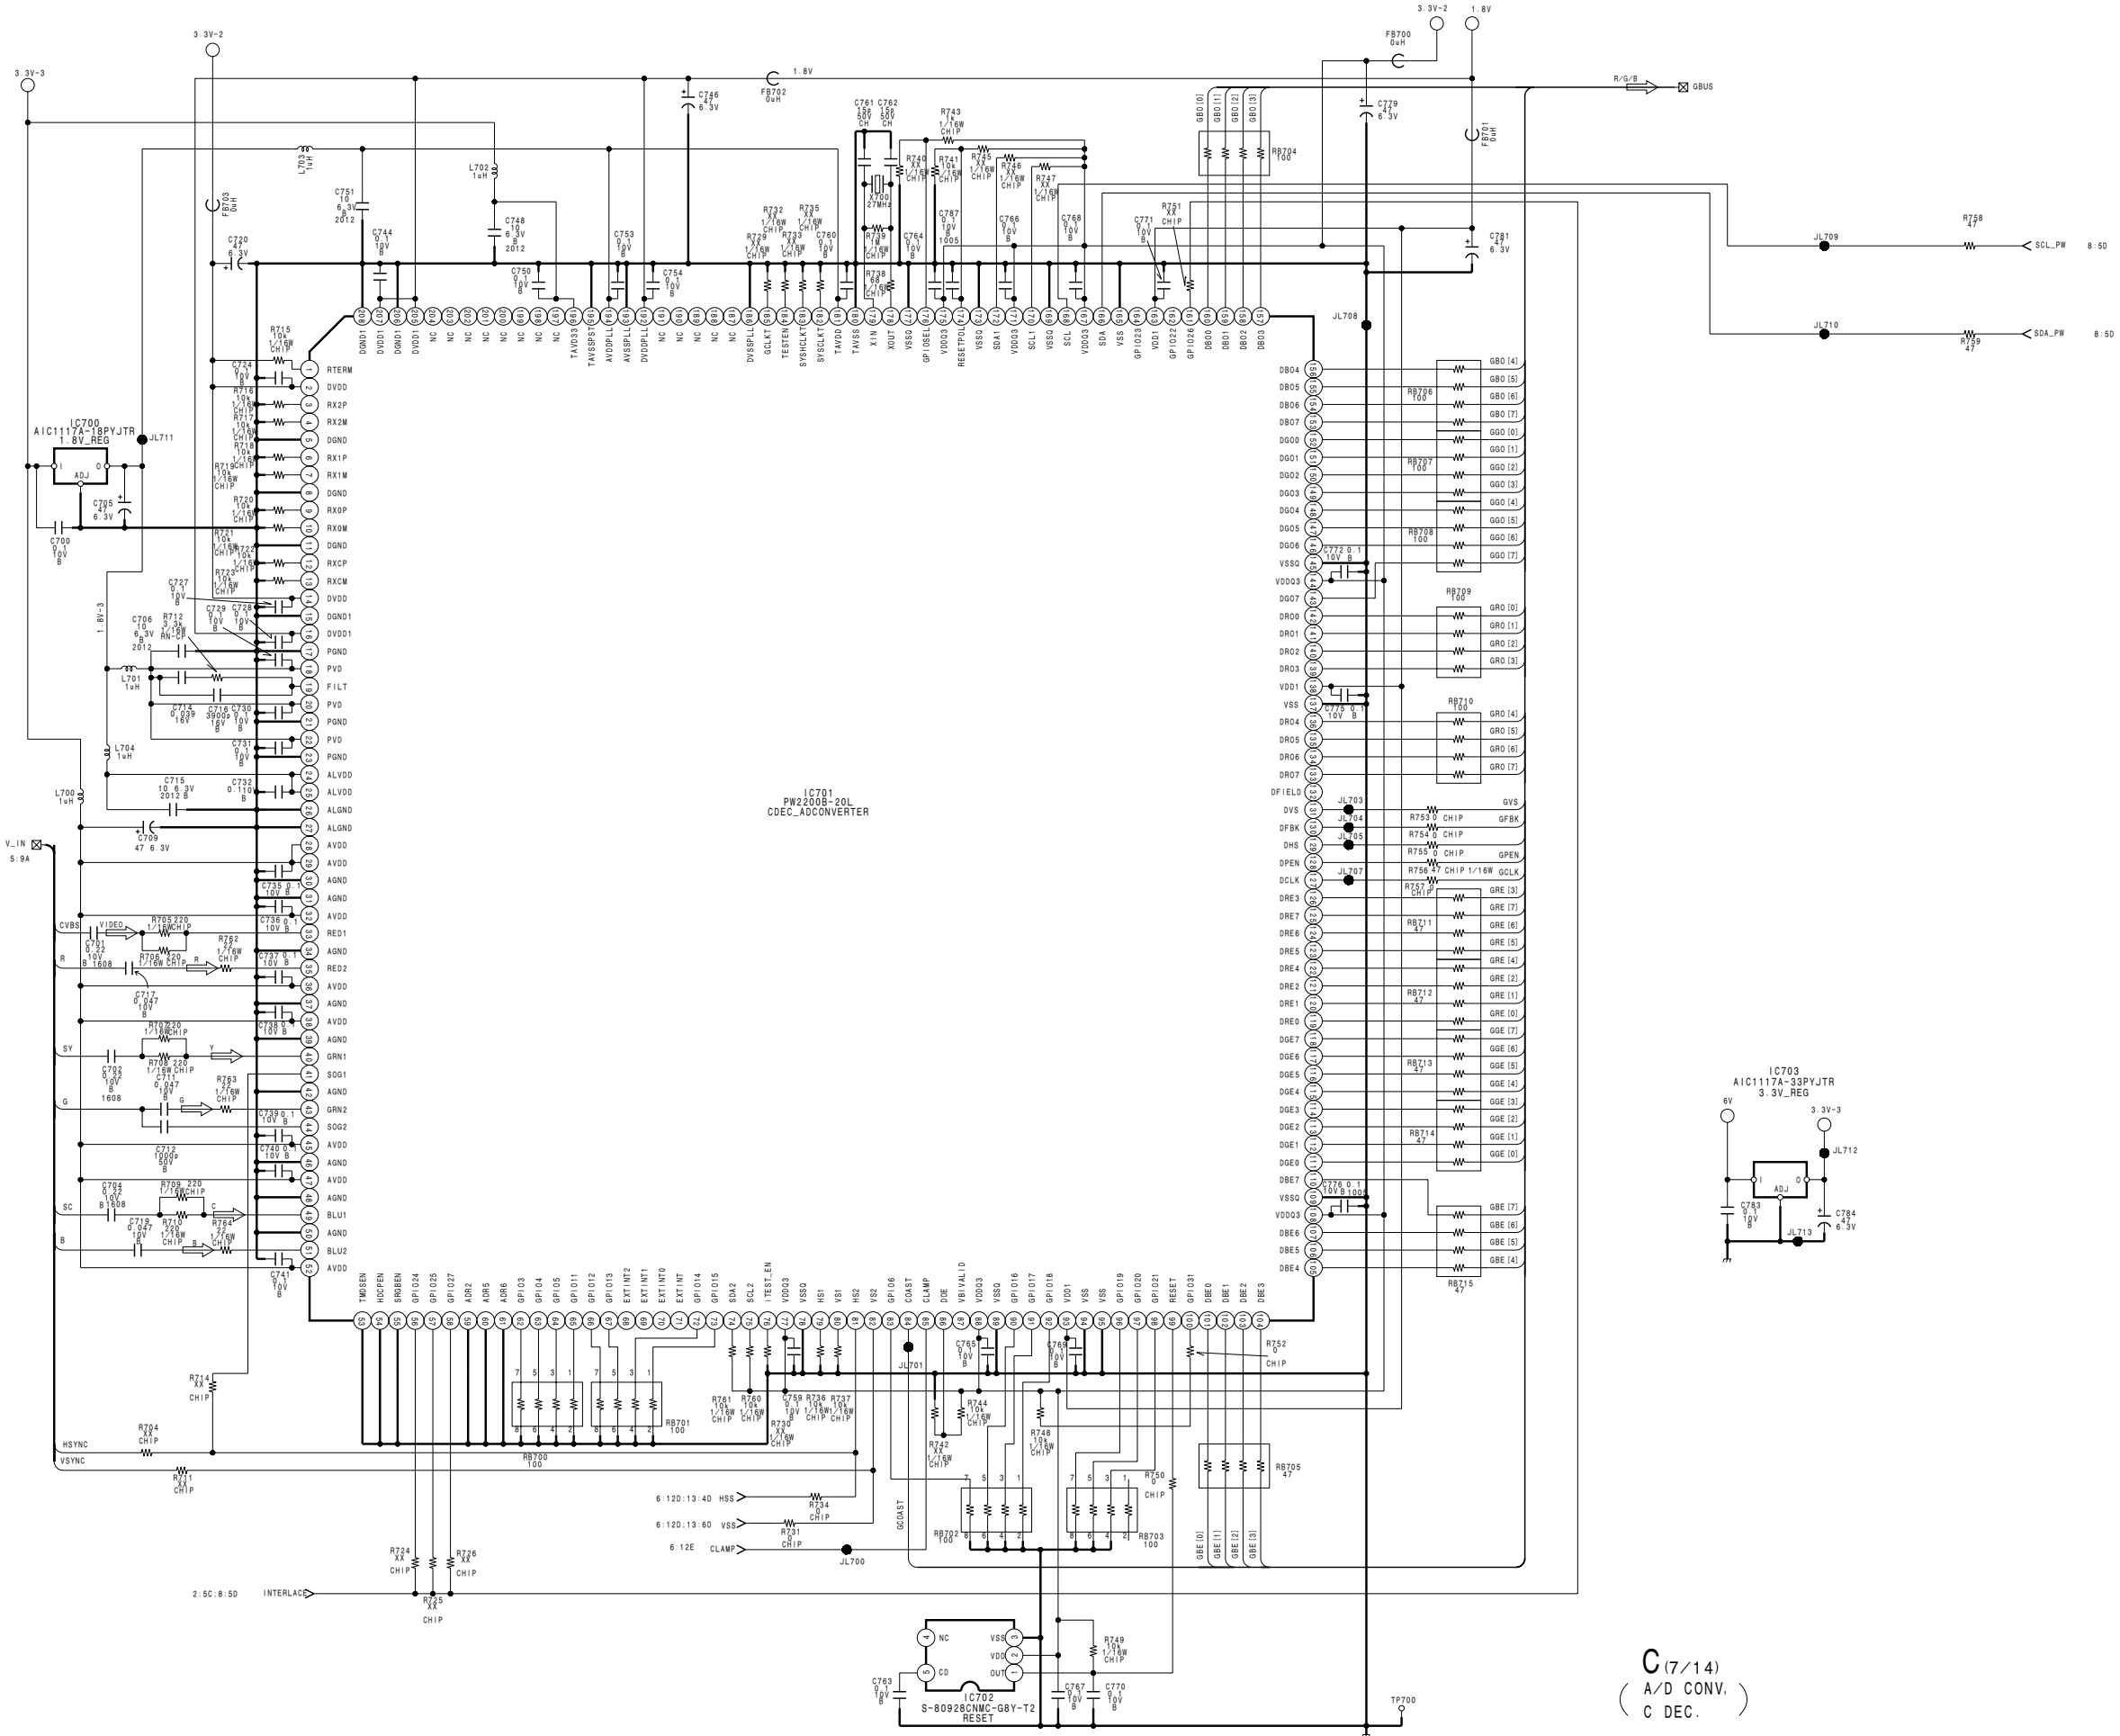



C (7/14)
(A/D CONV.)
C DEC.




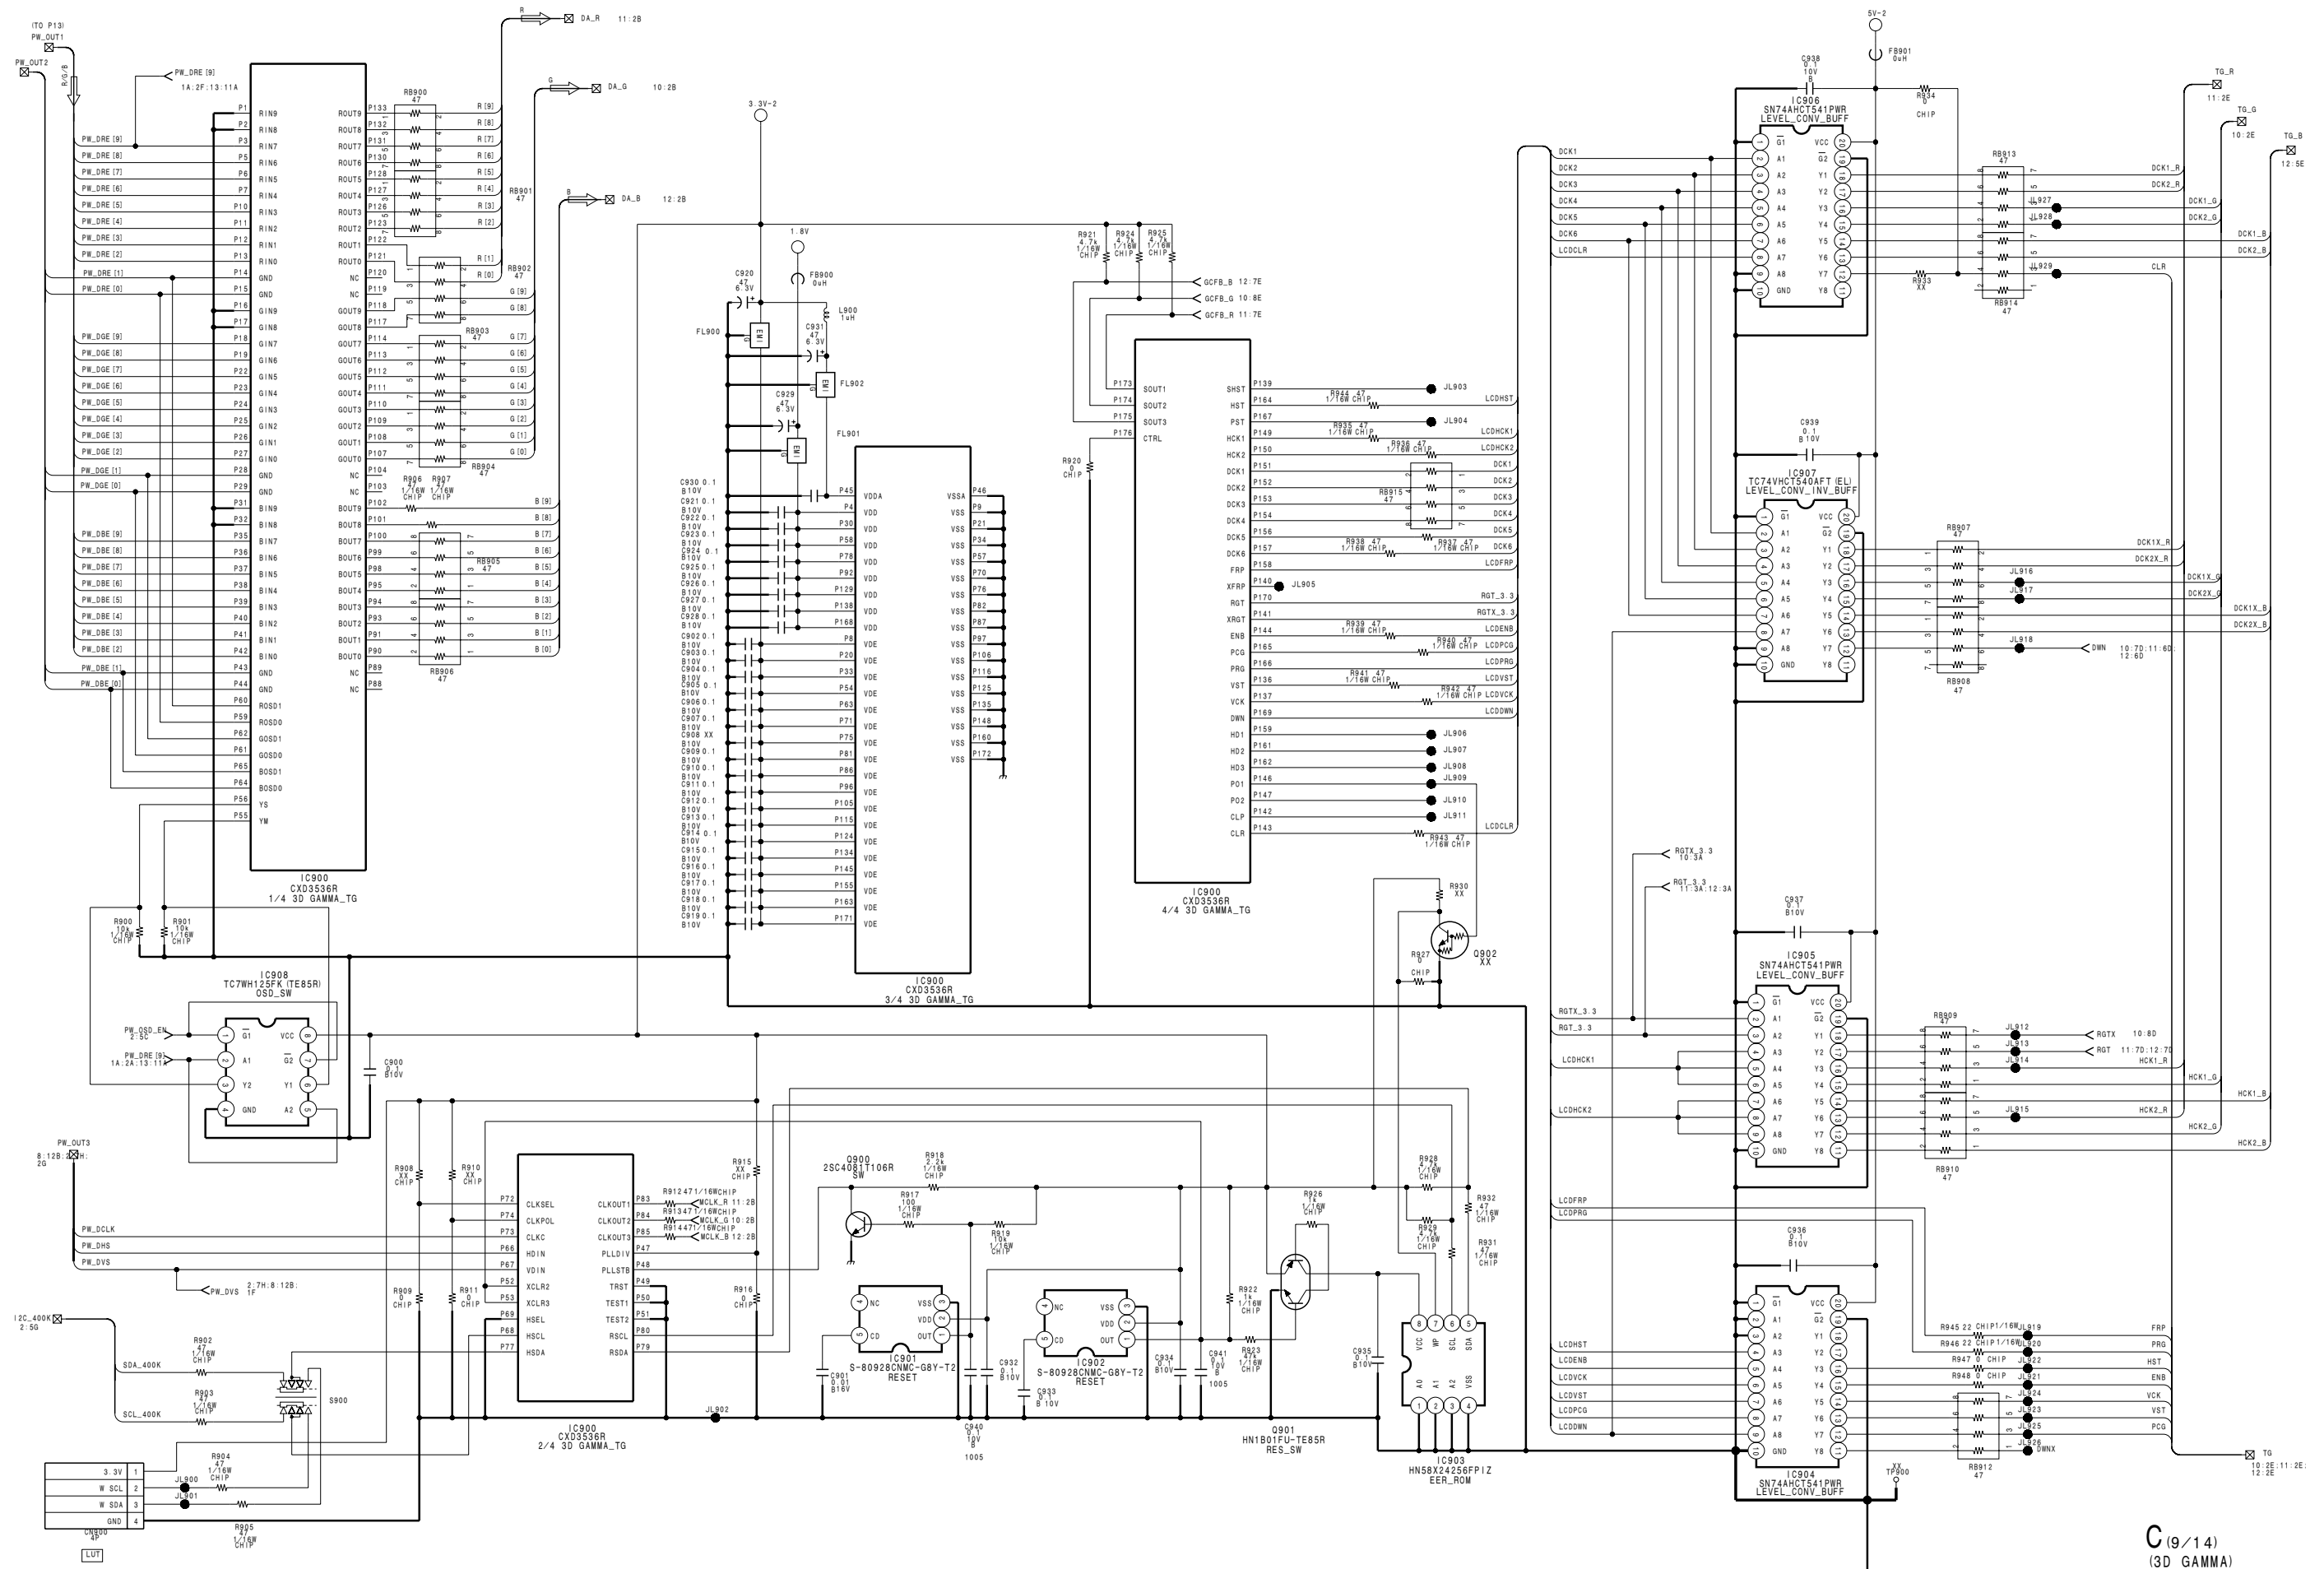


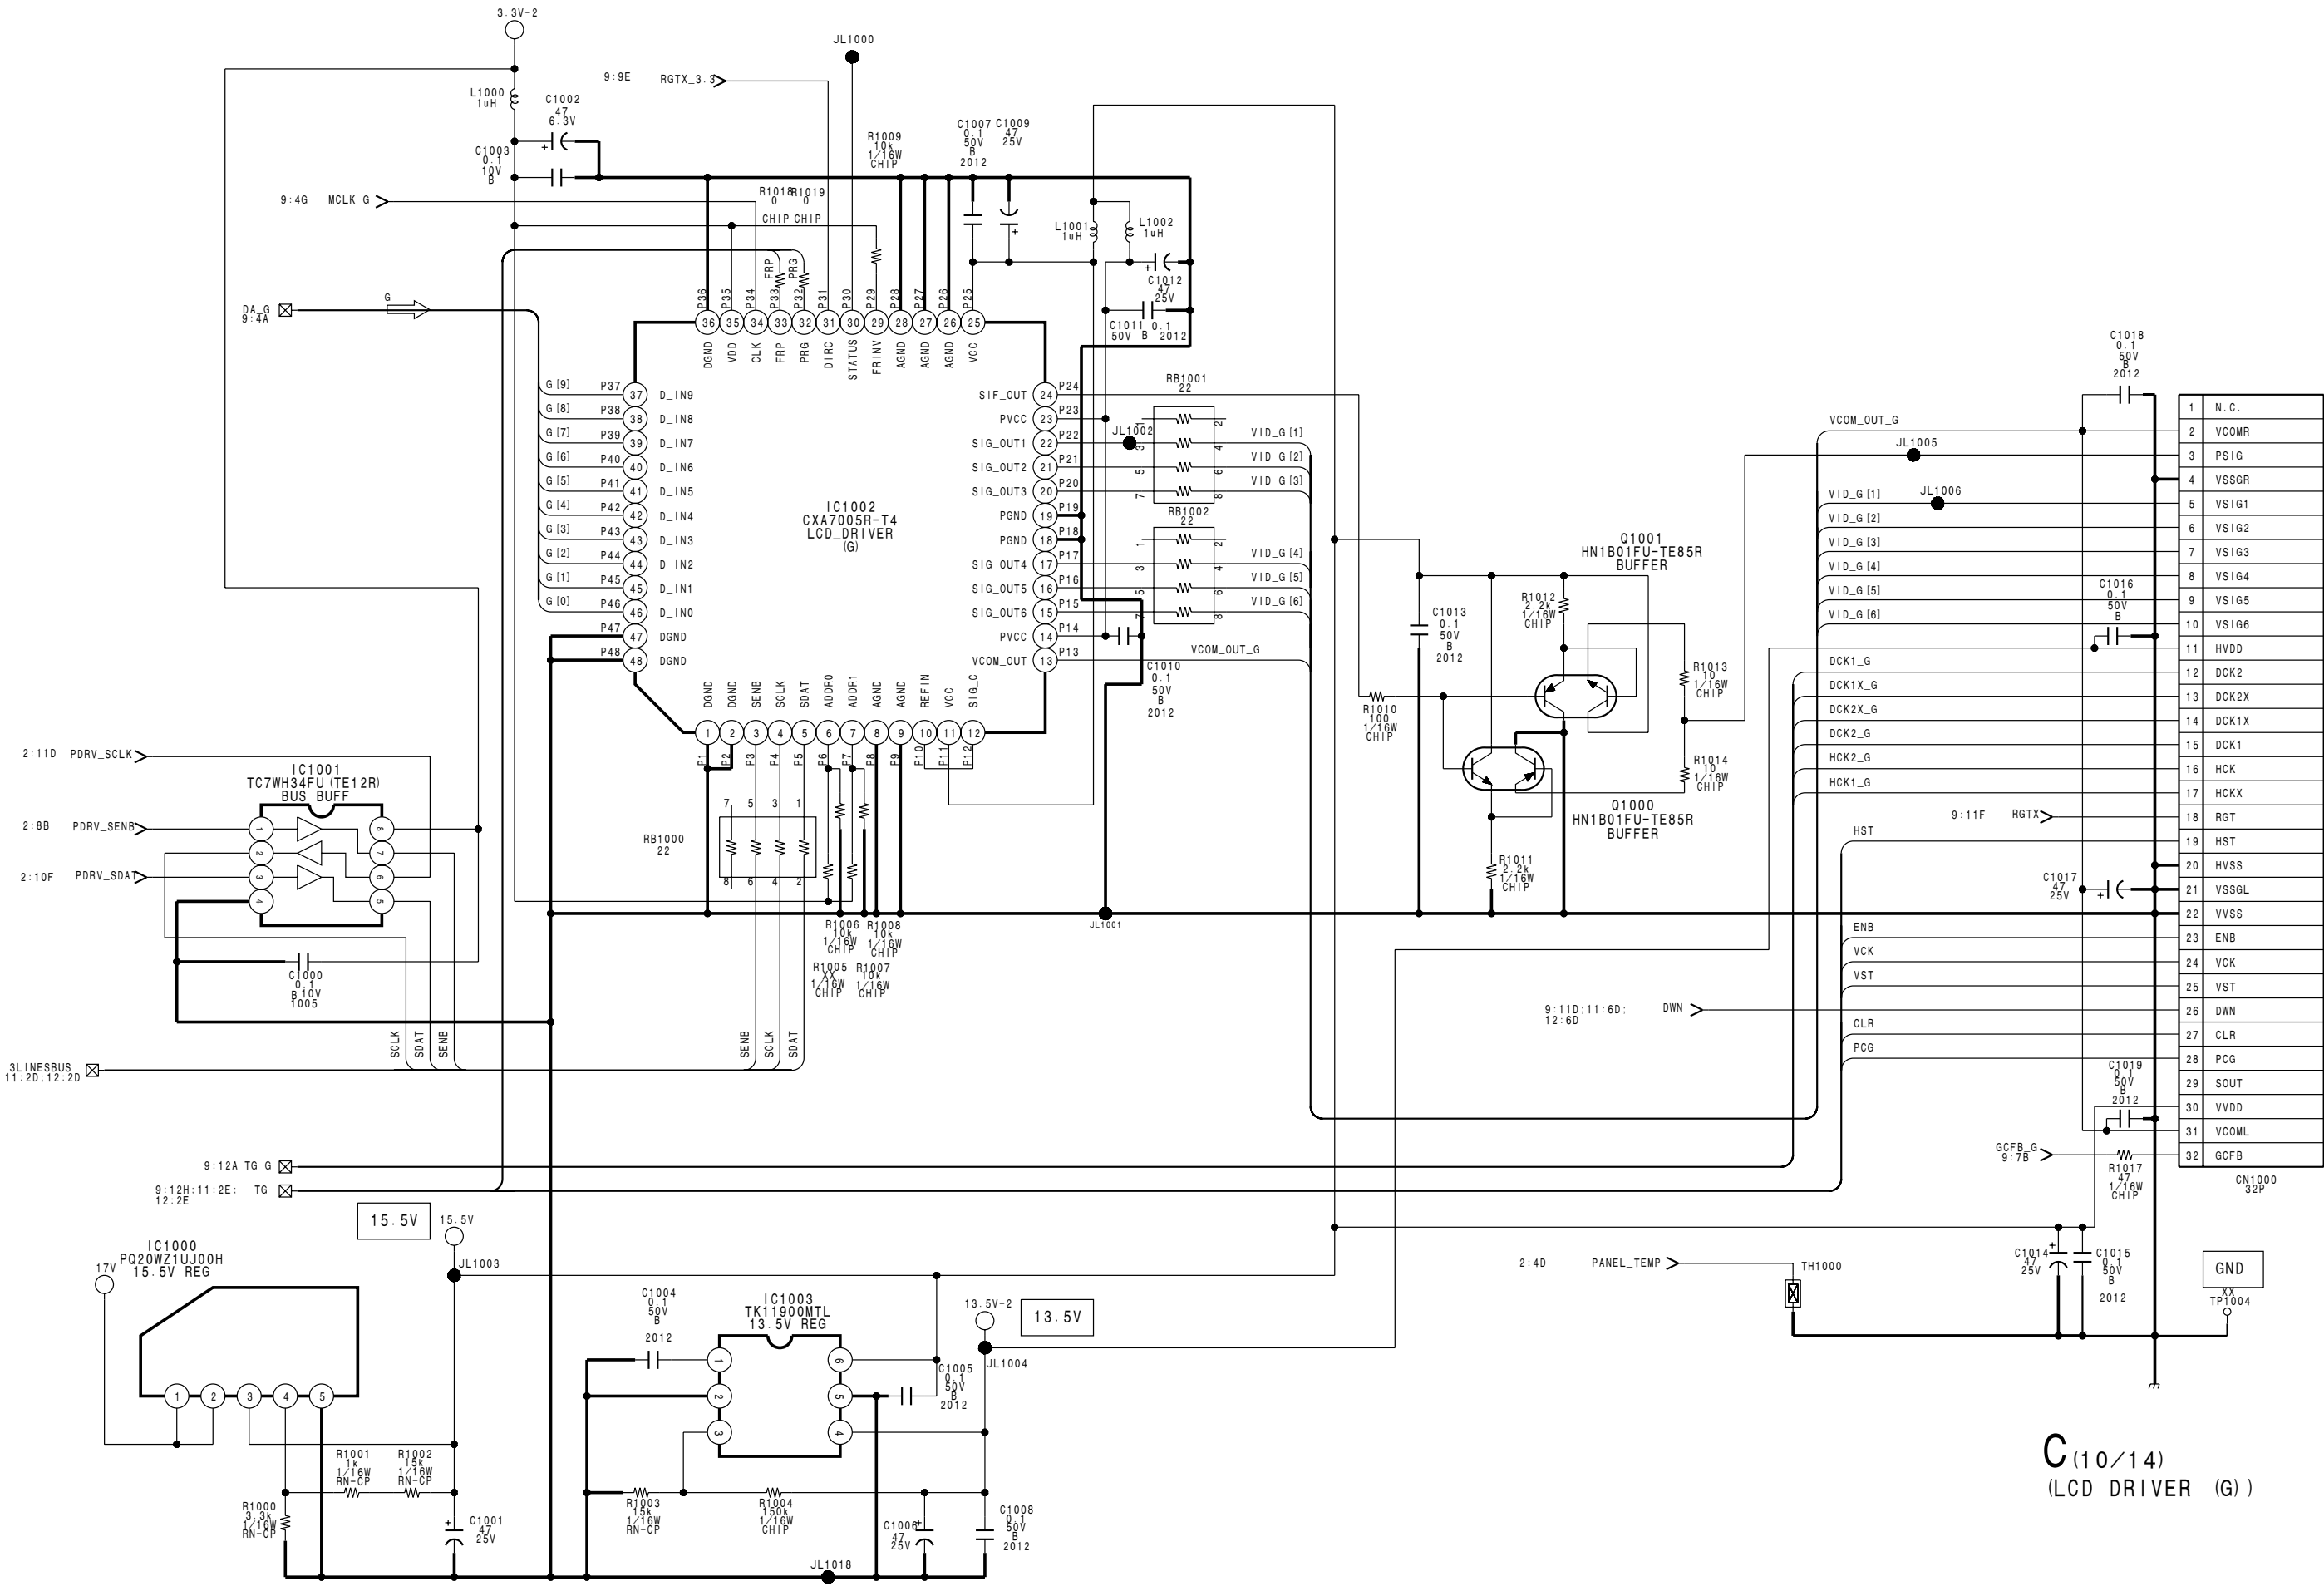


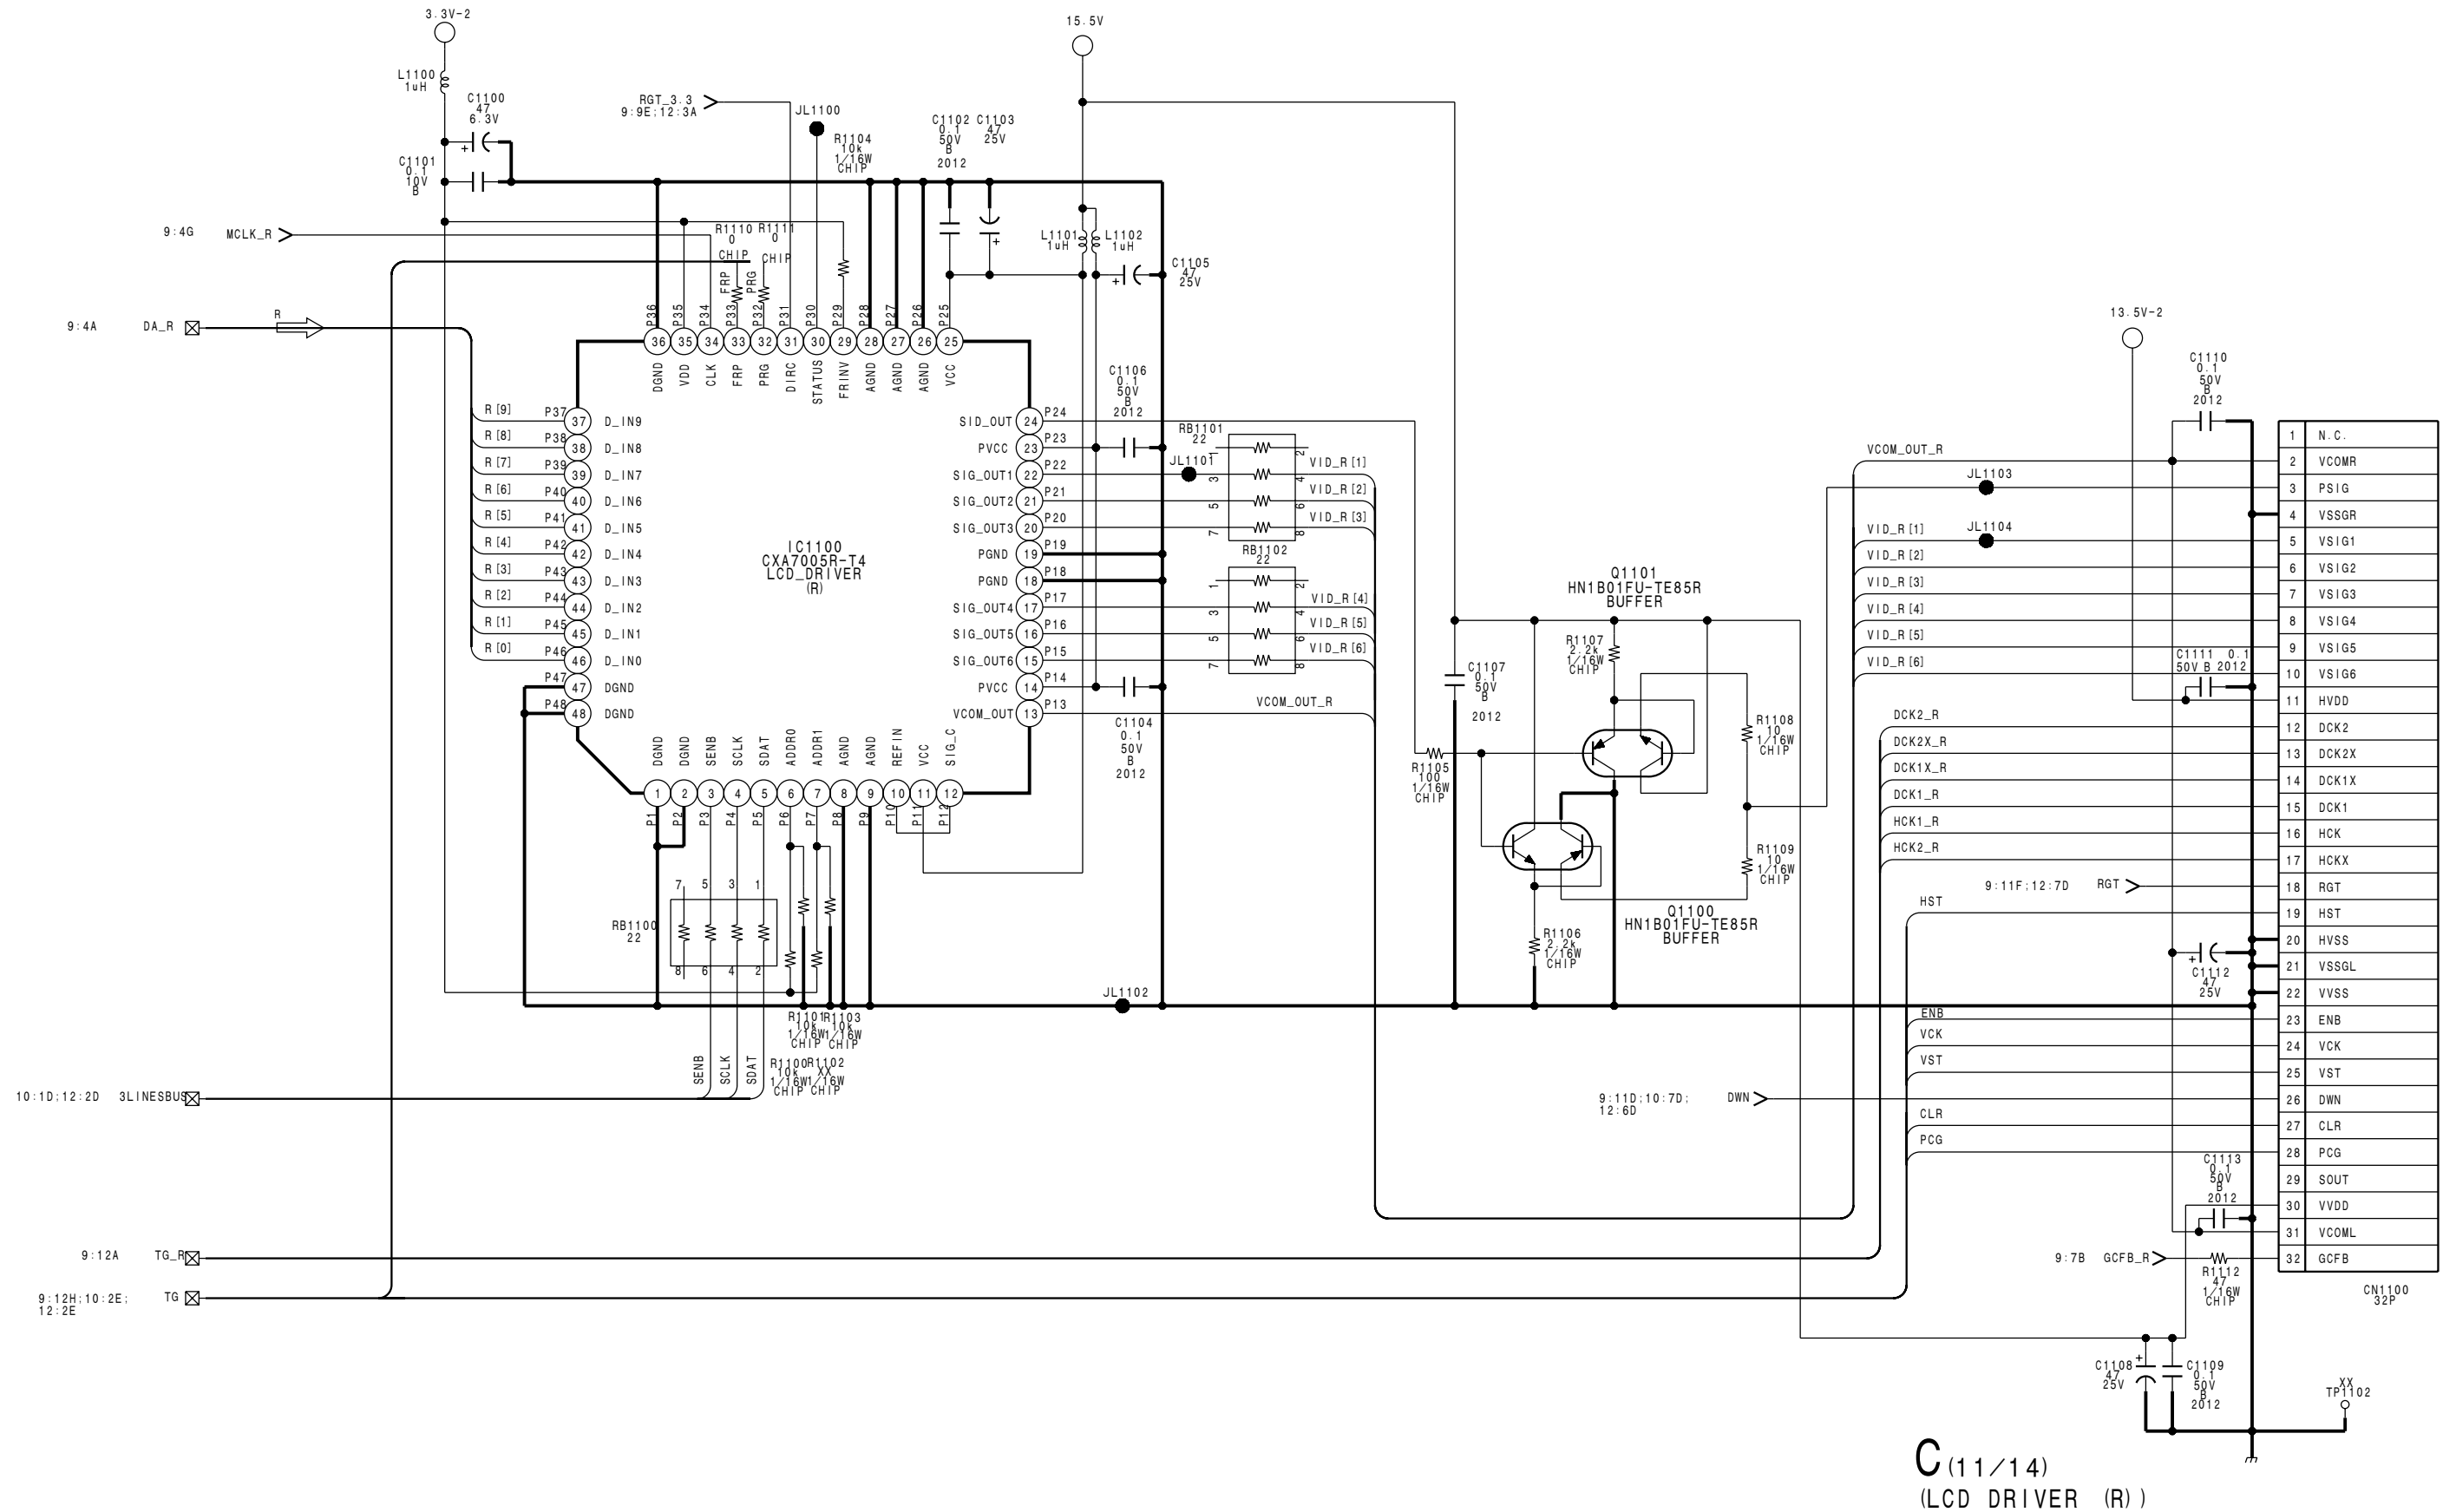

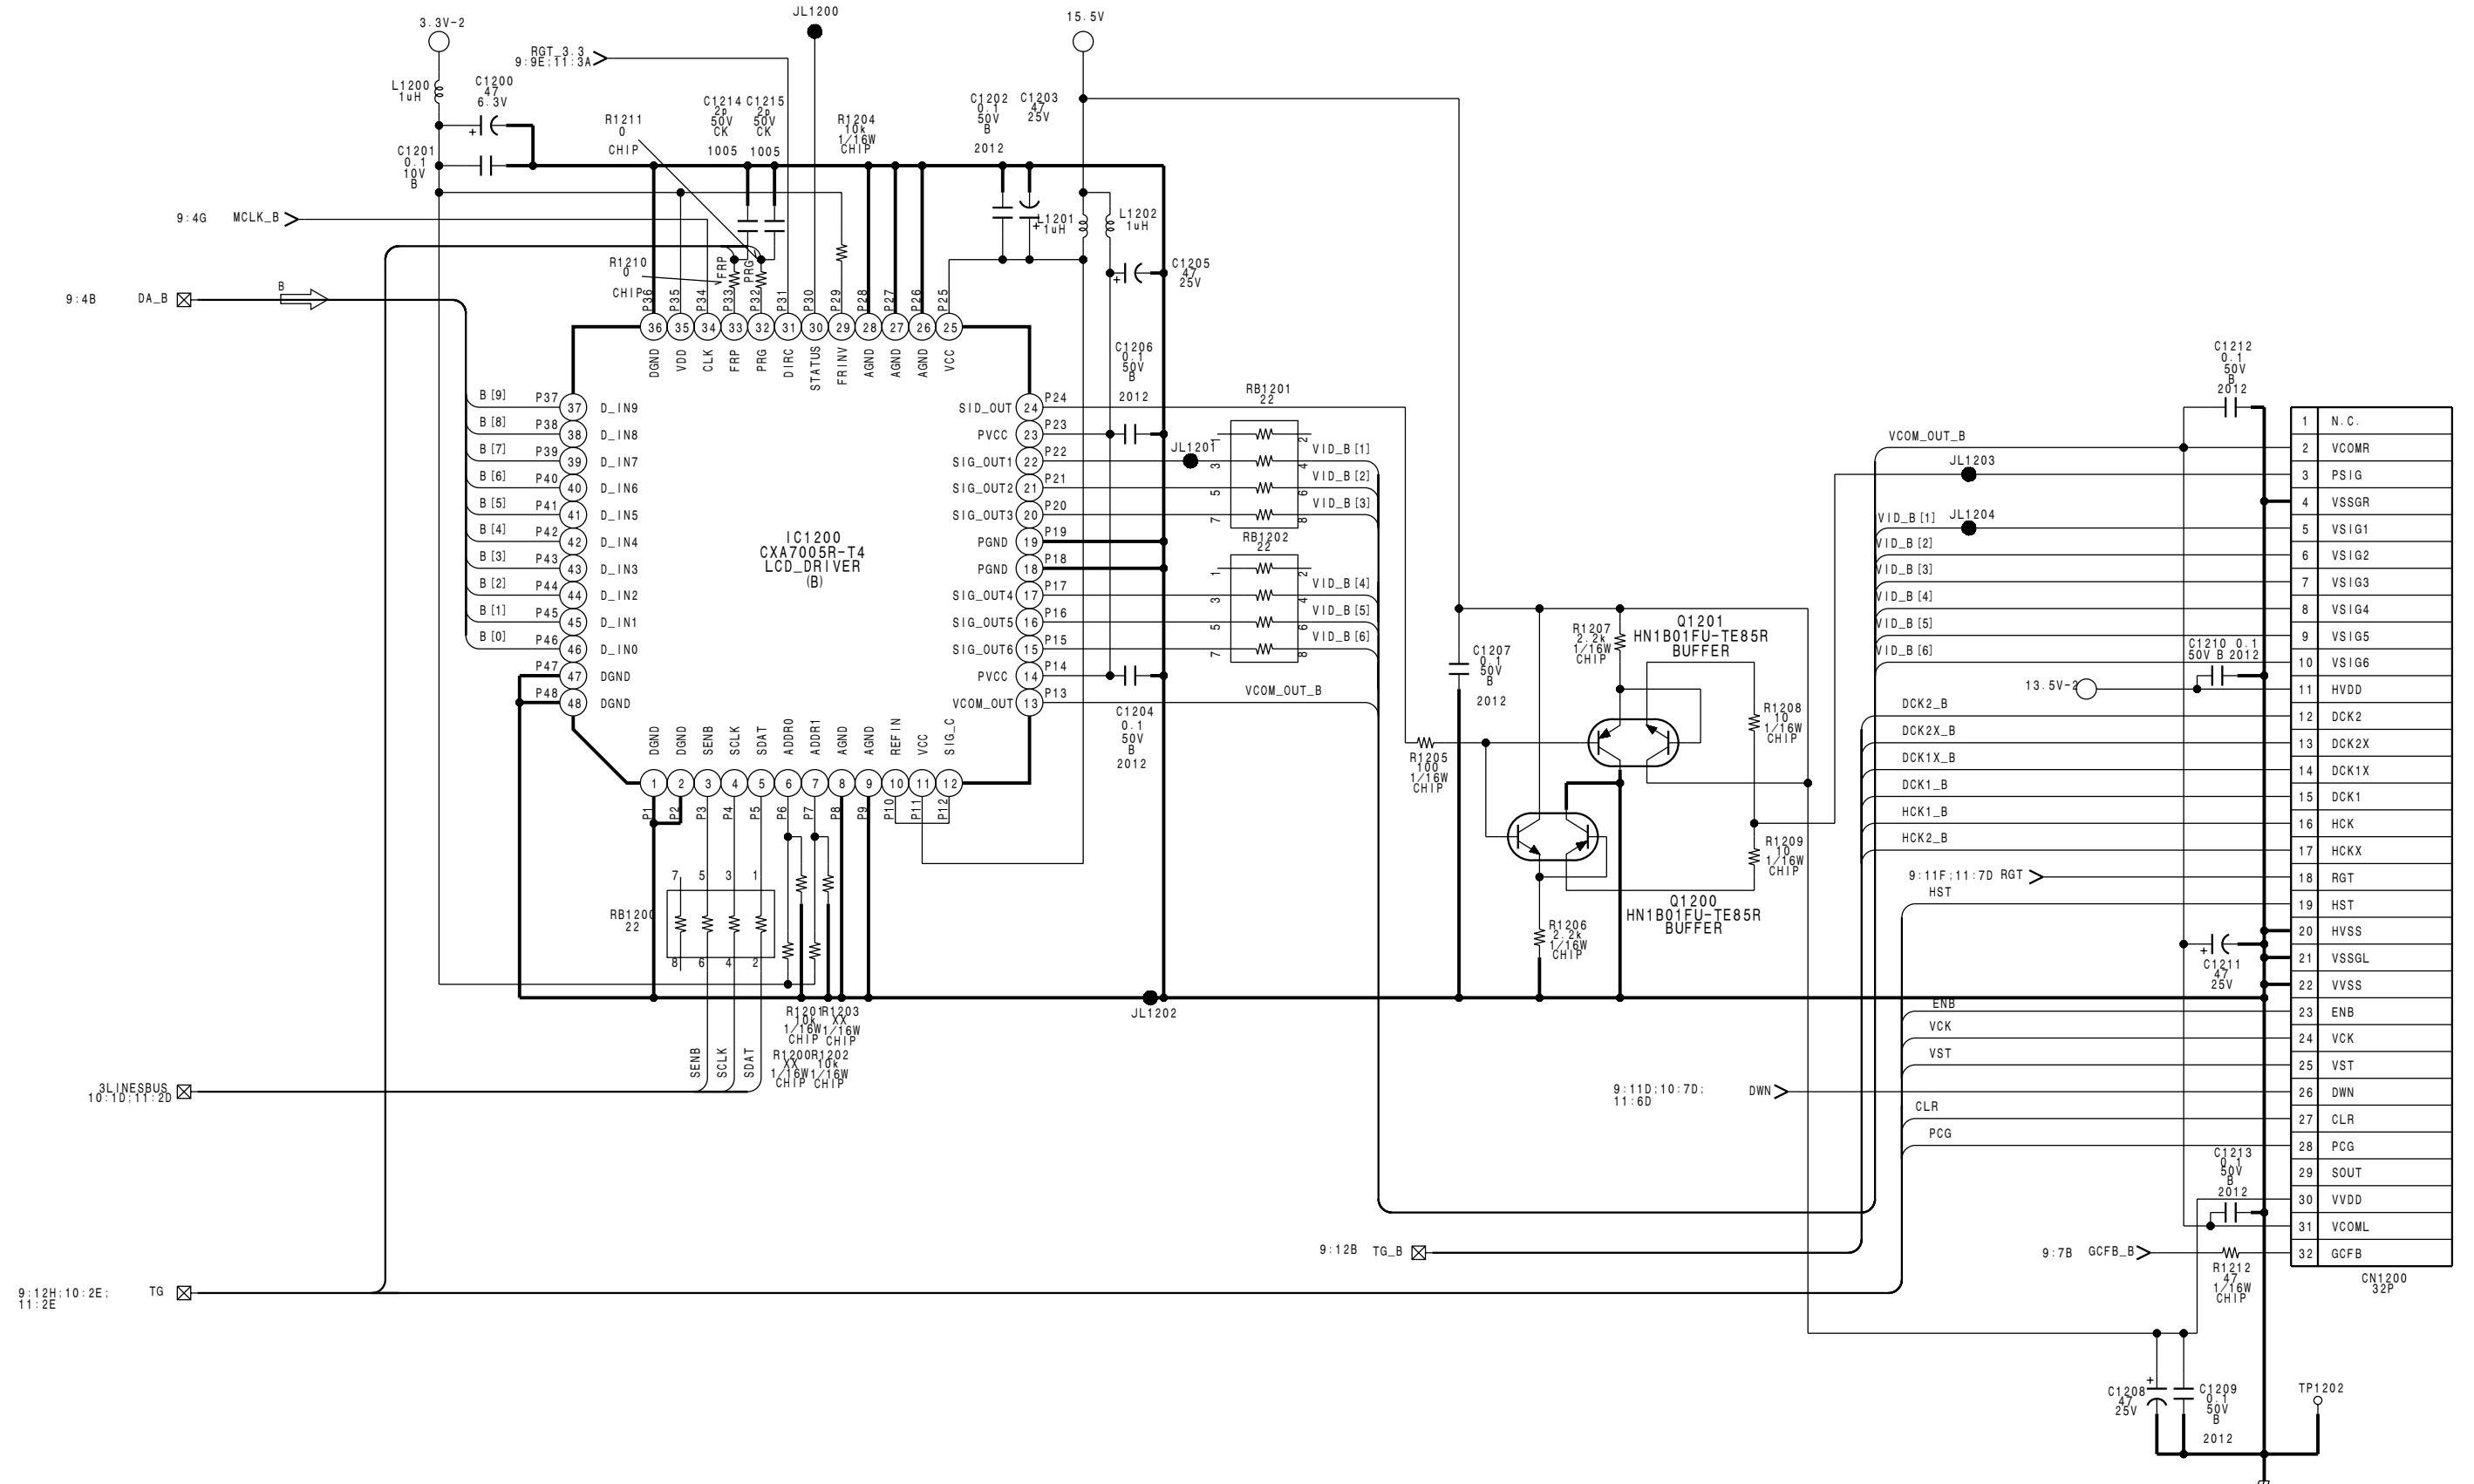


C (12/14)
(LCD DRIVER (B))

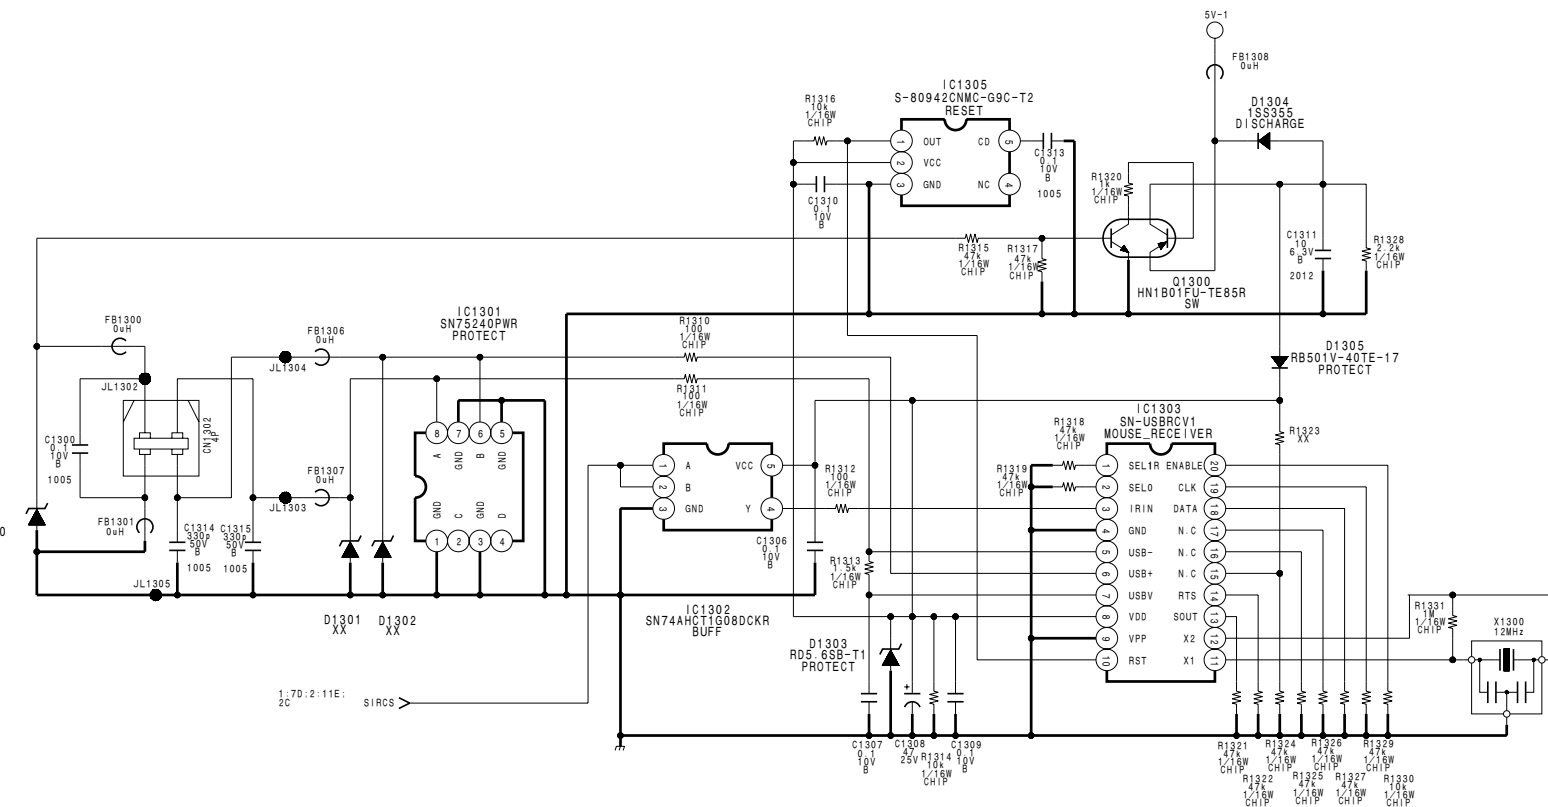


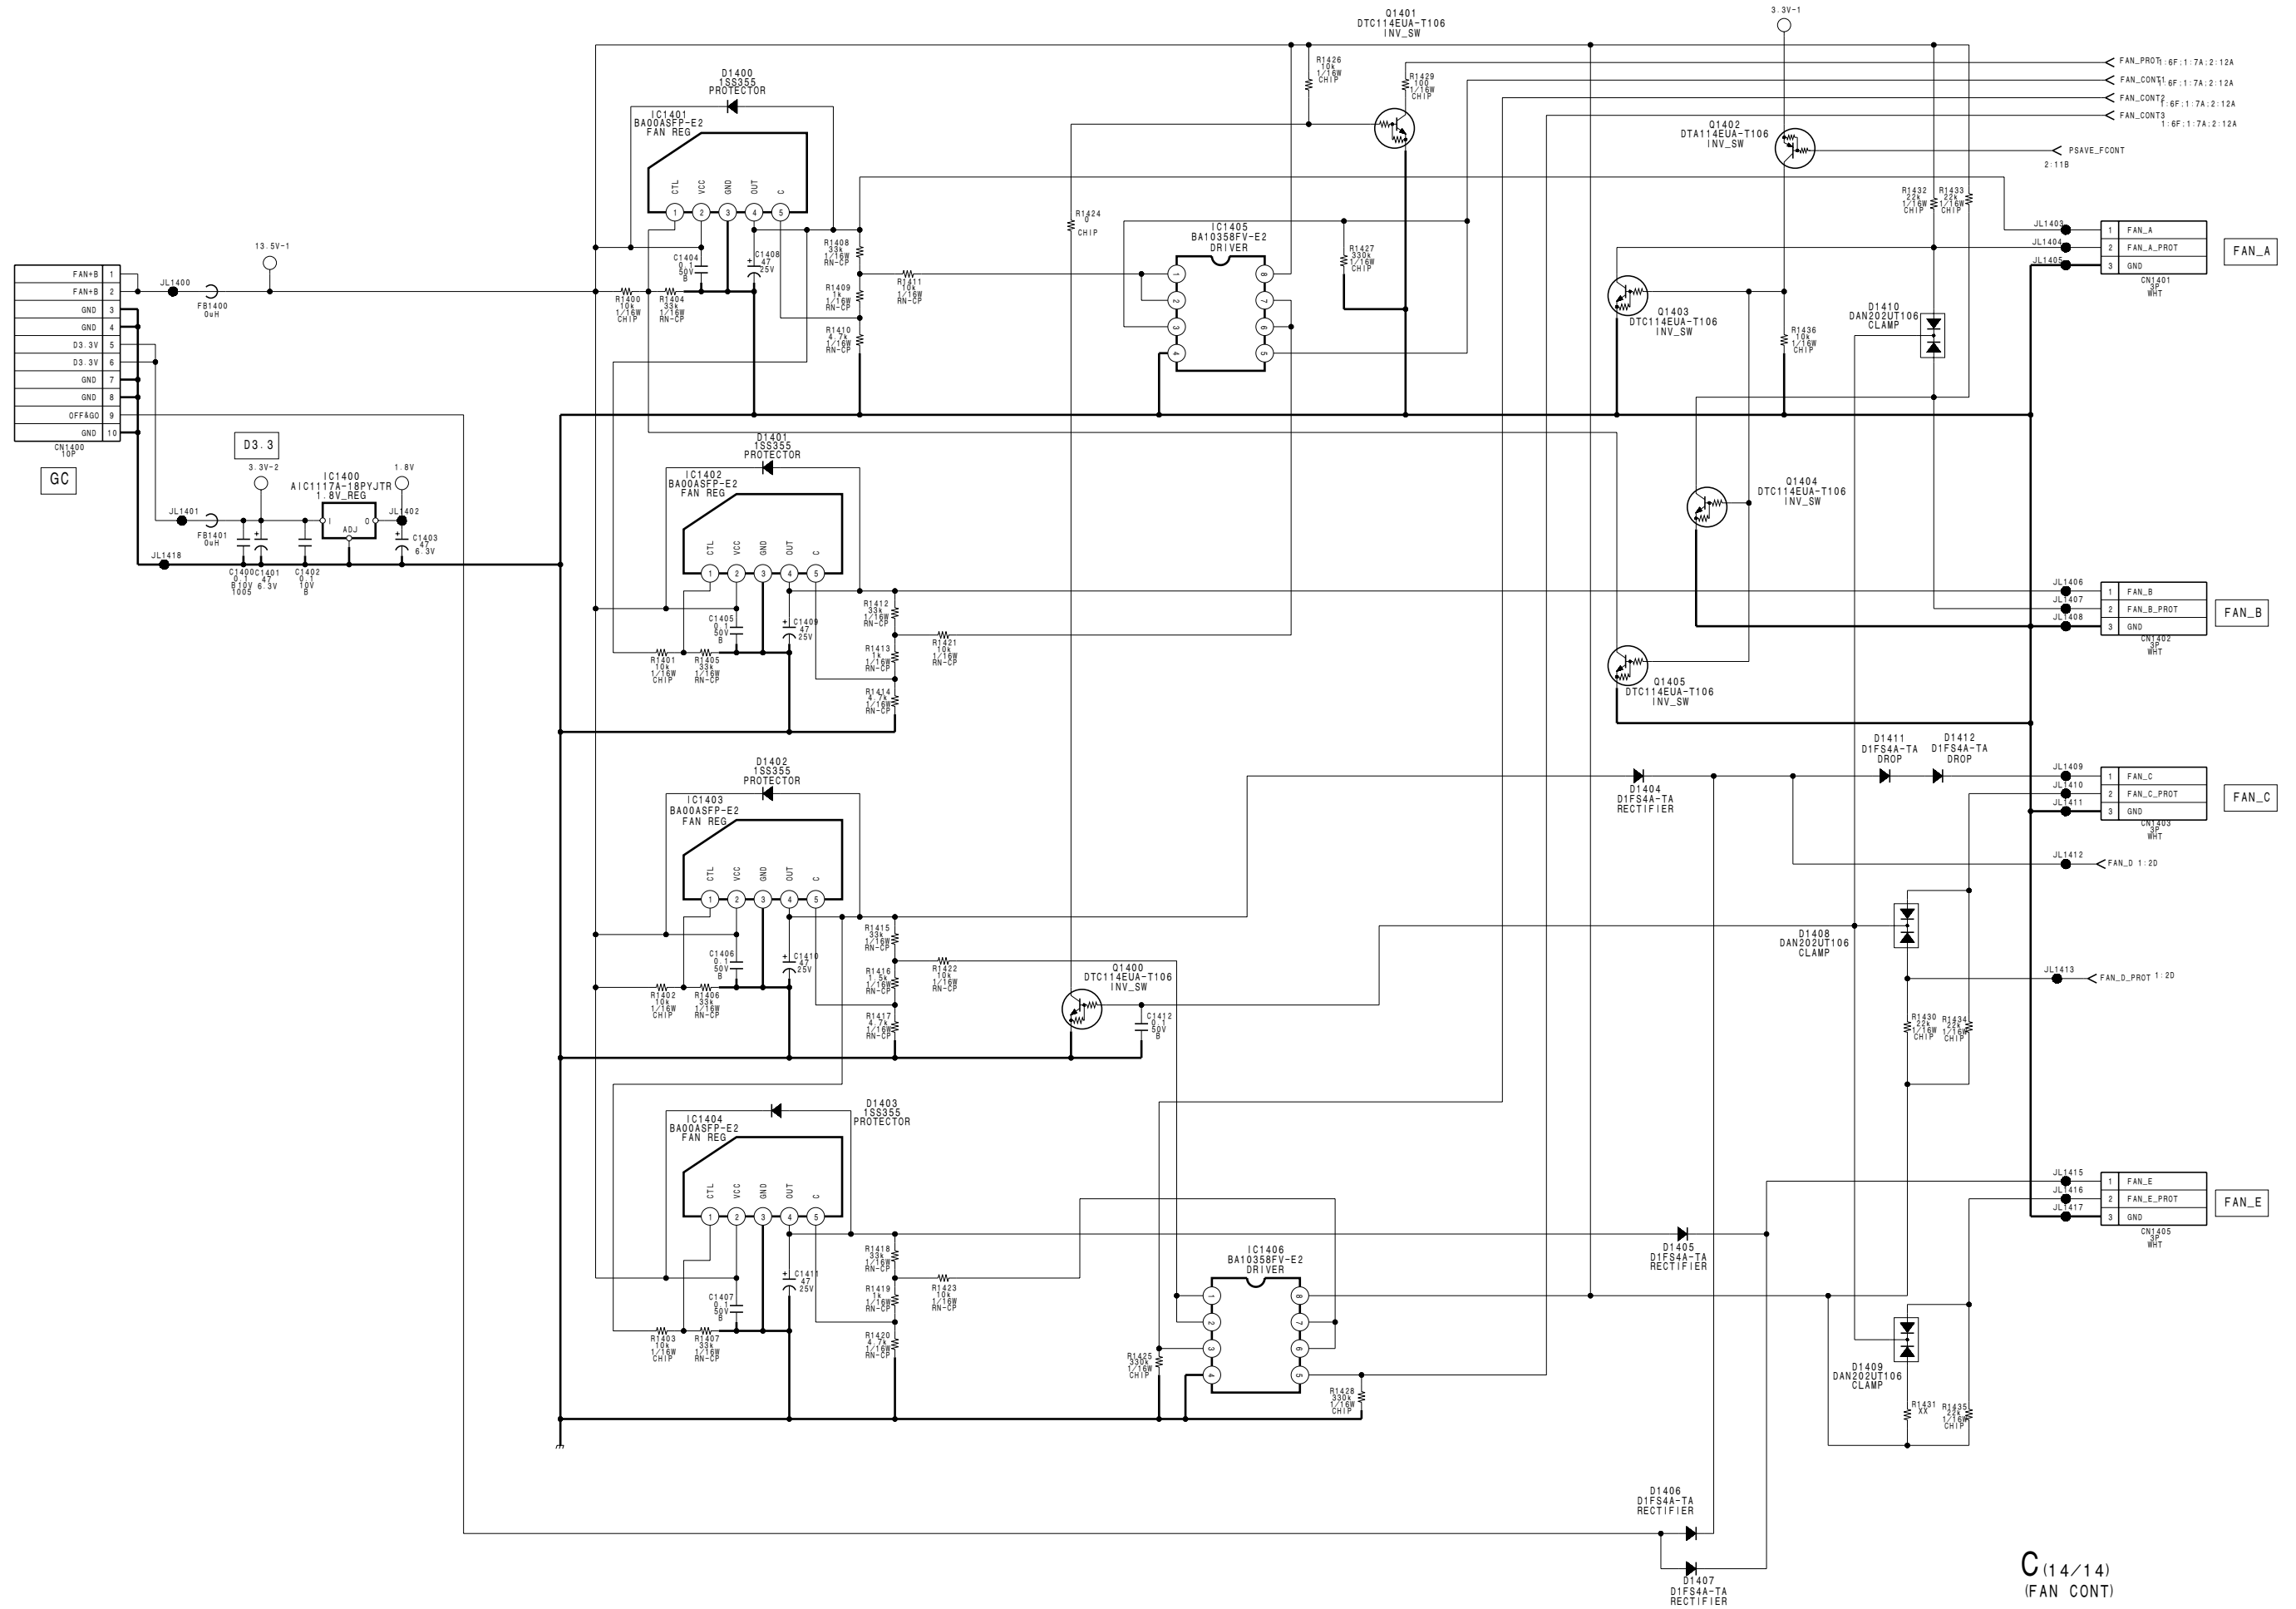


C (1/14) IRMF-A0T-QTP (IC103)

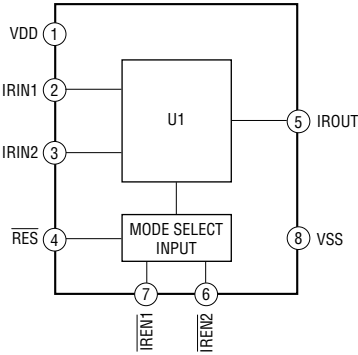


C (2/14) TC74LCX125FT (IC201)

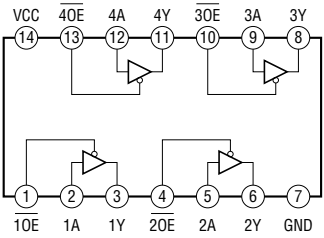


C (3/14) BA6287F-E2 (IC308)

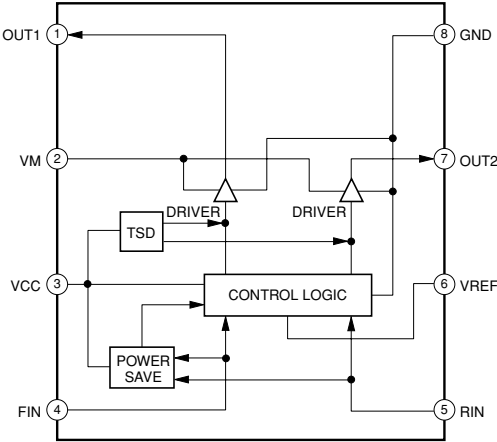


C (3/14) BA6288FS (IC305)

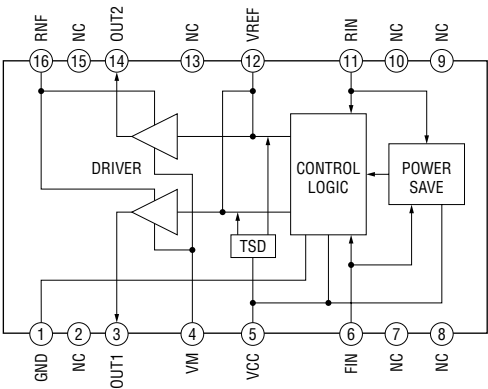


C (3/14) CXA1875AM-T4 (IC304)

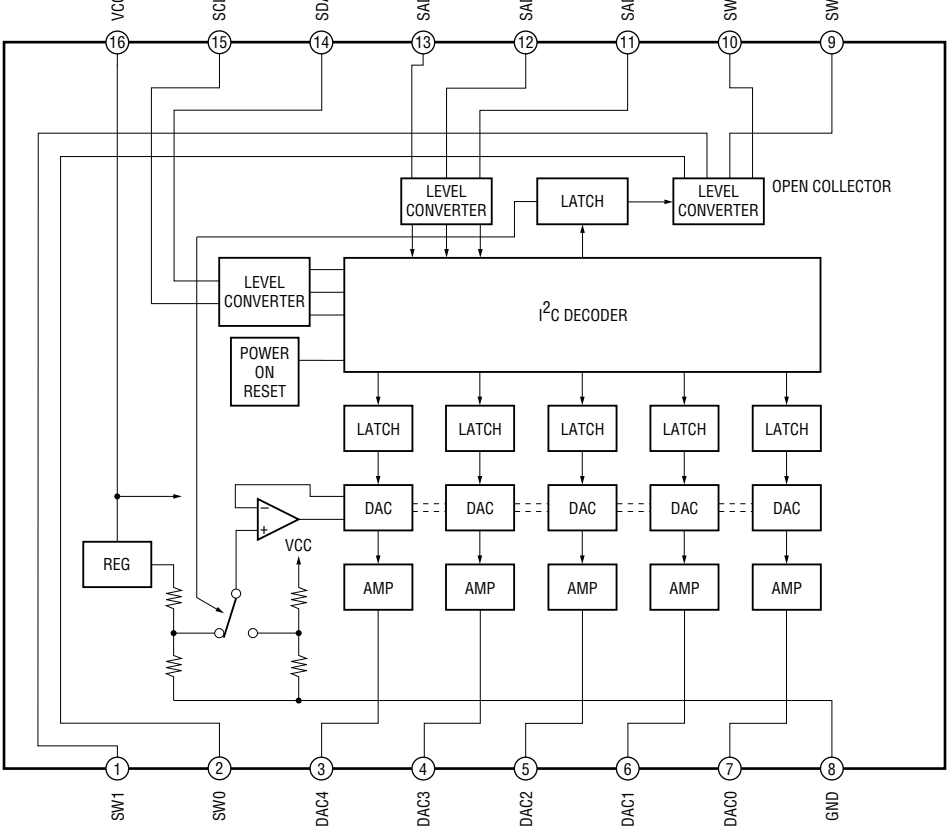


C (3/14) TC74VHCT138AFT (IC300)

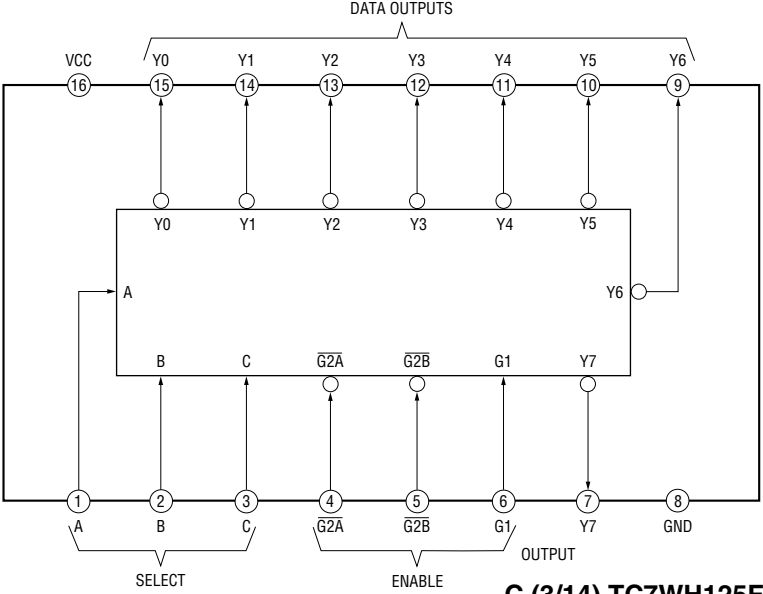


C (3/14) TC7WH04FK(TE85R) (IC302)

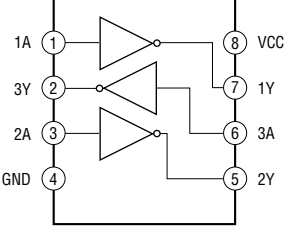


C (3/14) TC7WH125FK (IC306)

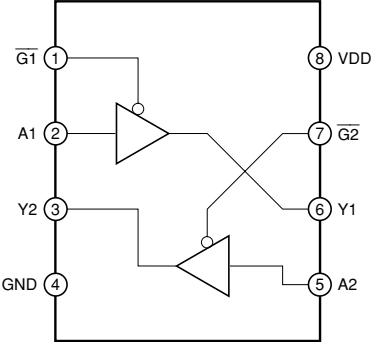


C (4/14) TDA7309D013TR (IC400)

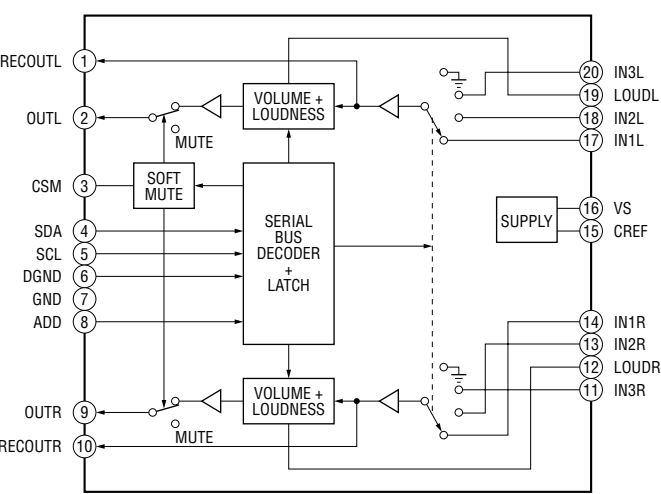


C (4/14) TPA2001D1PWR (IC401)

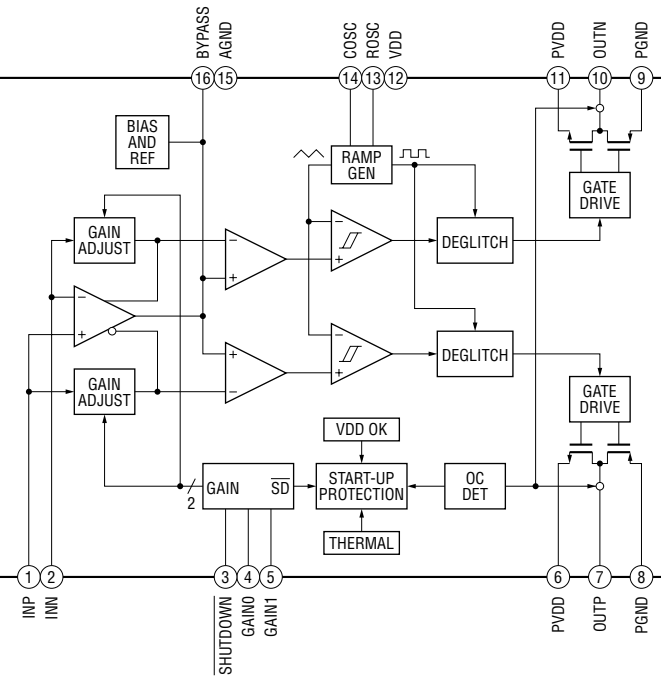


C (5/14) TC74HC4052AFT(EL) (IC501)

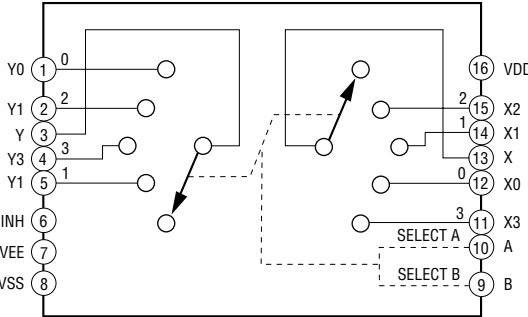


C (6/14) CXA2171AQ-T6 (IC602)

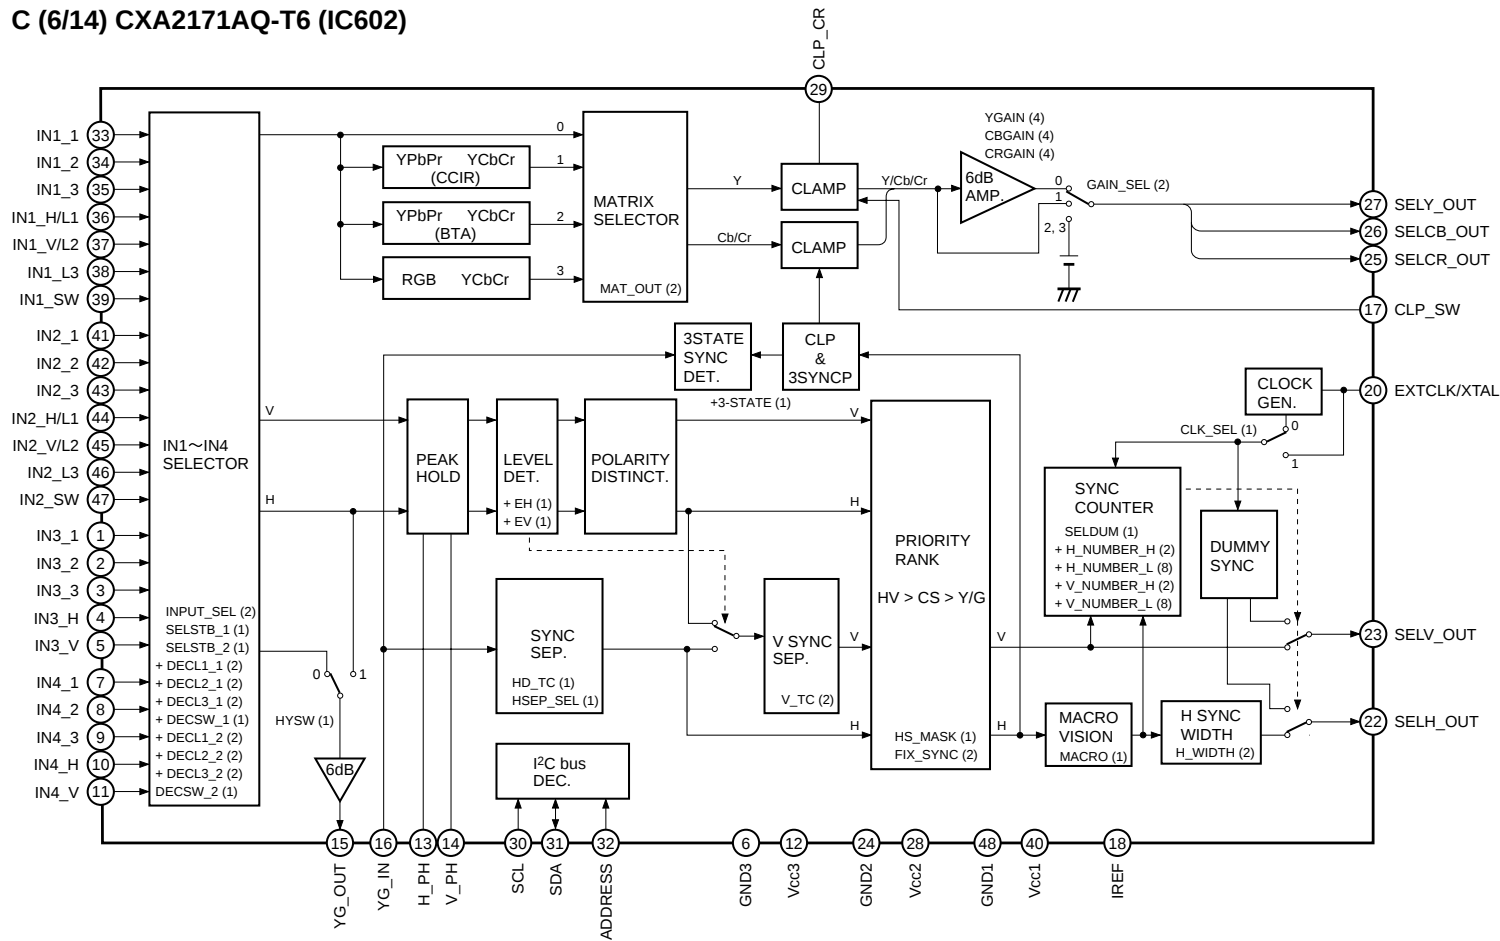


C (6/14) M52347FP-TE (IC601)

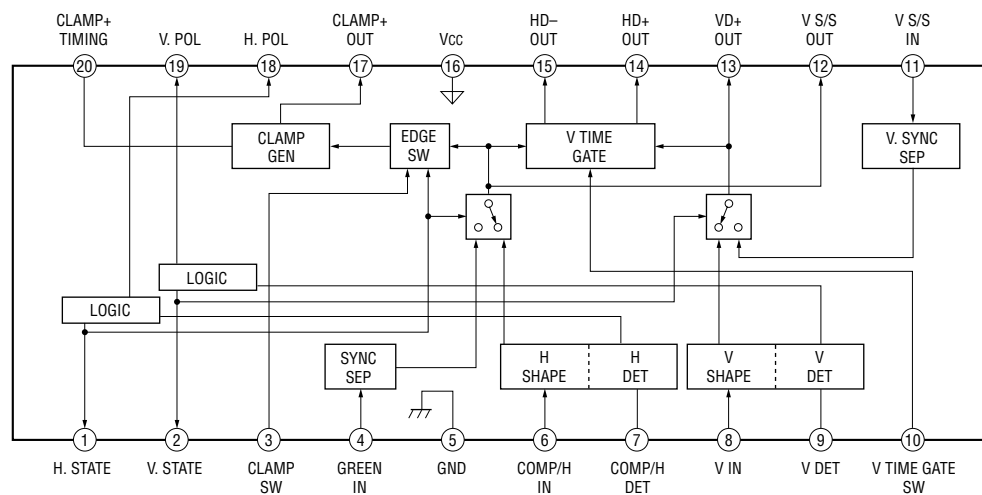


C (6/14) SN74LV244APWR (IC605)

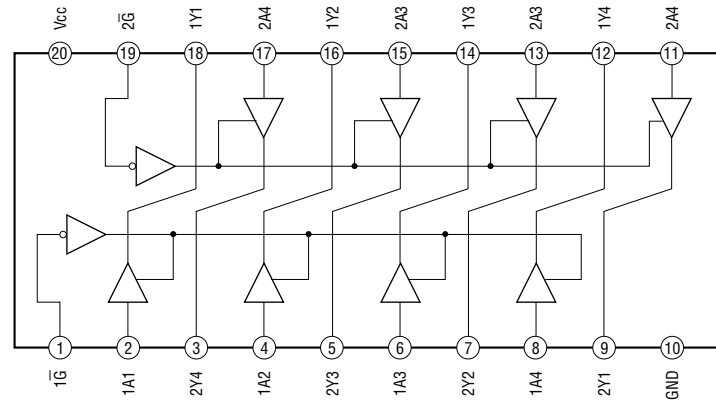


C (6/14) SN74LV00APWR (IC604)

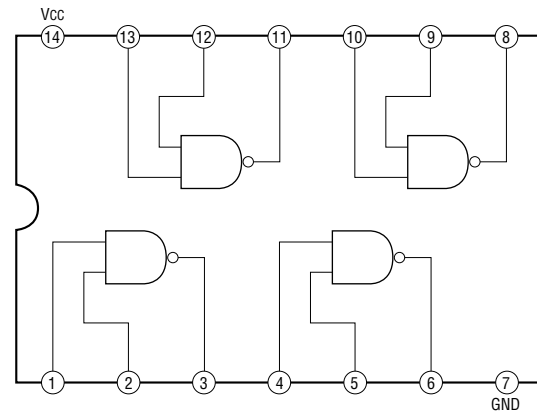


C (9/14) SN74AHCT541PWR (IC904, IC905, IC906)

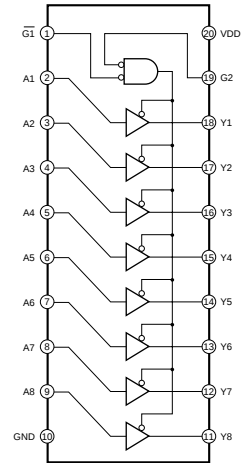


C (9/14) TC74VHCT540AFT(EL) (IC907)

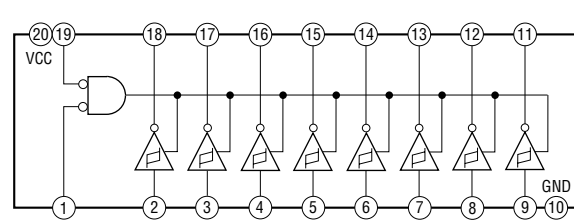


C (9/14) TC7WH125FK(TE85R) (IC908)

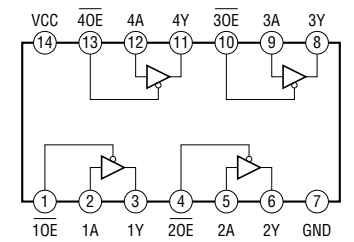


C (10/14), (11/14), (12/14) CXA7005R-T4 (IC1002, IC1100, IC1200)

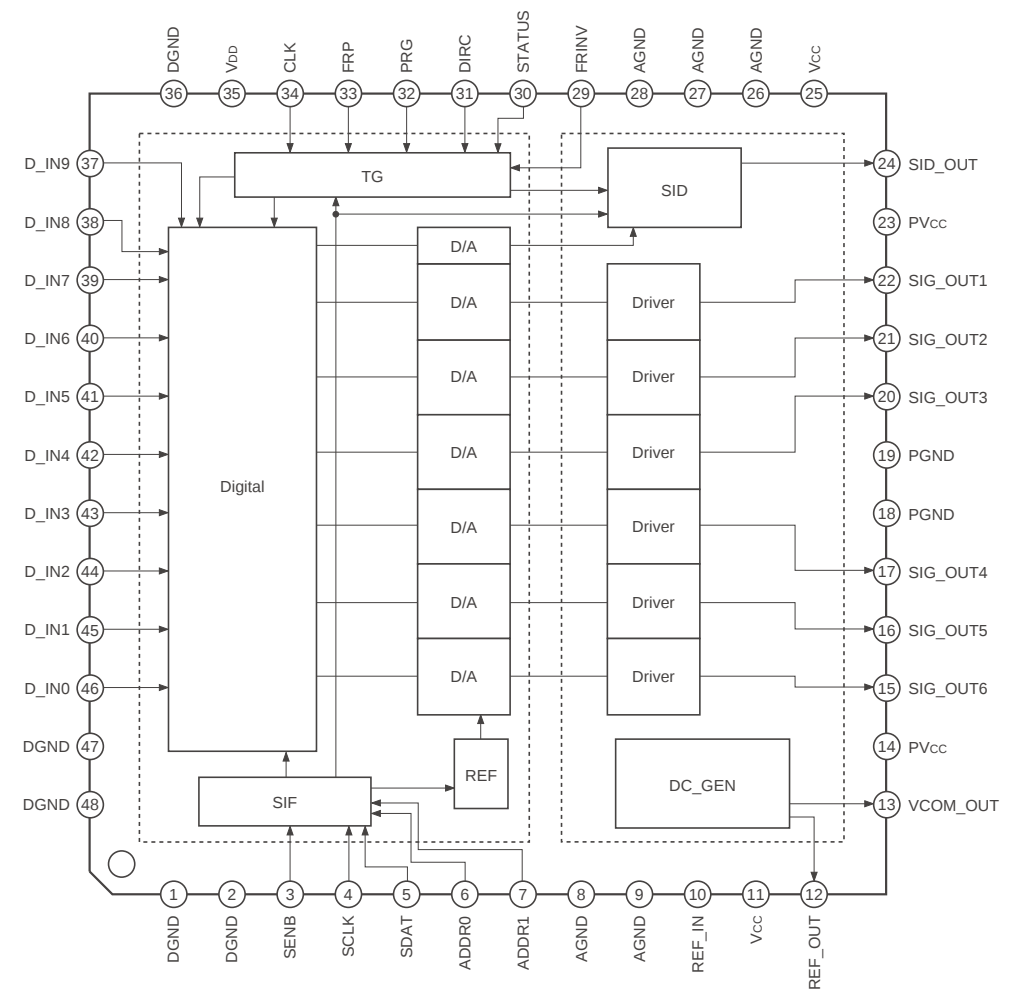


C (13/14) SN74LV4052APWR (IC1300)

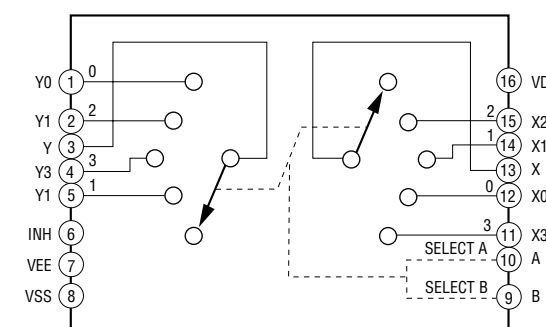

C (14/14) BA10358FV-E2 (IC1405, IC1406)

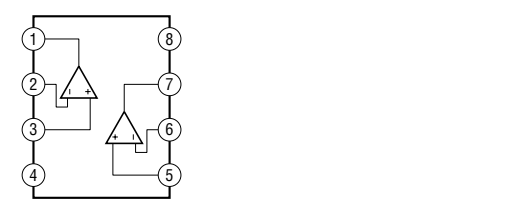

C (14/14) BA00ASFP-E2 (IC1401, IC1402, IC1403, IC1404)

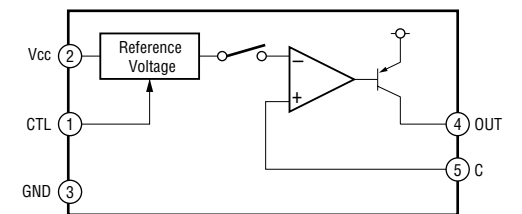


1


2

3

4

5

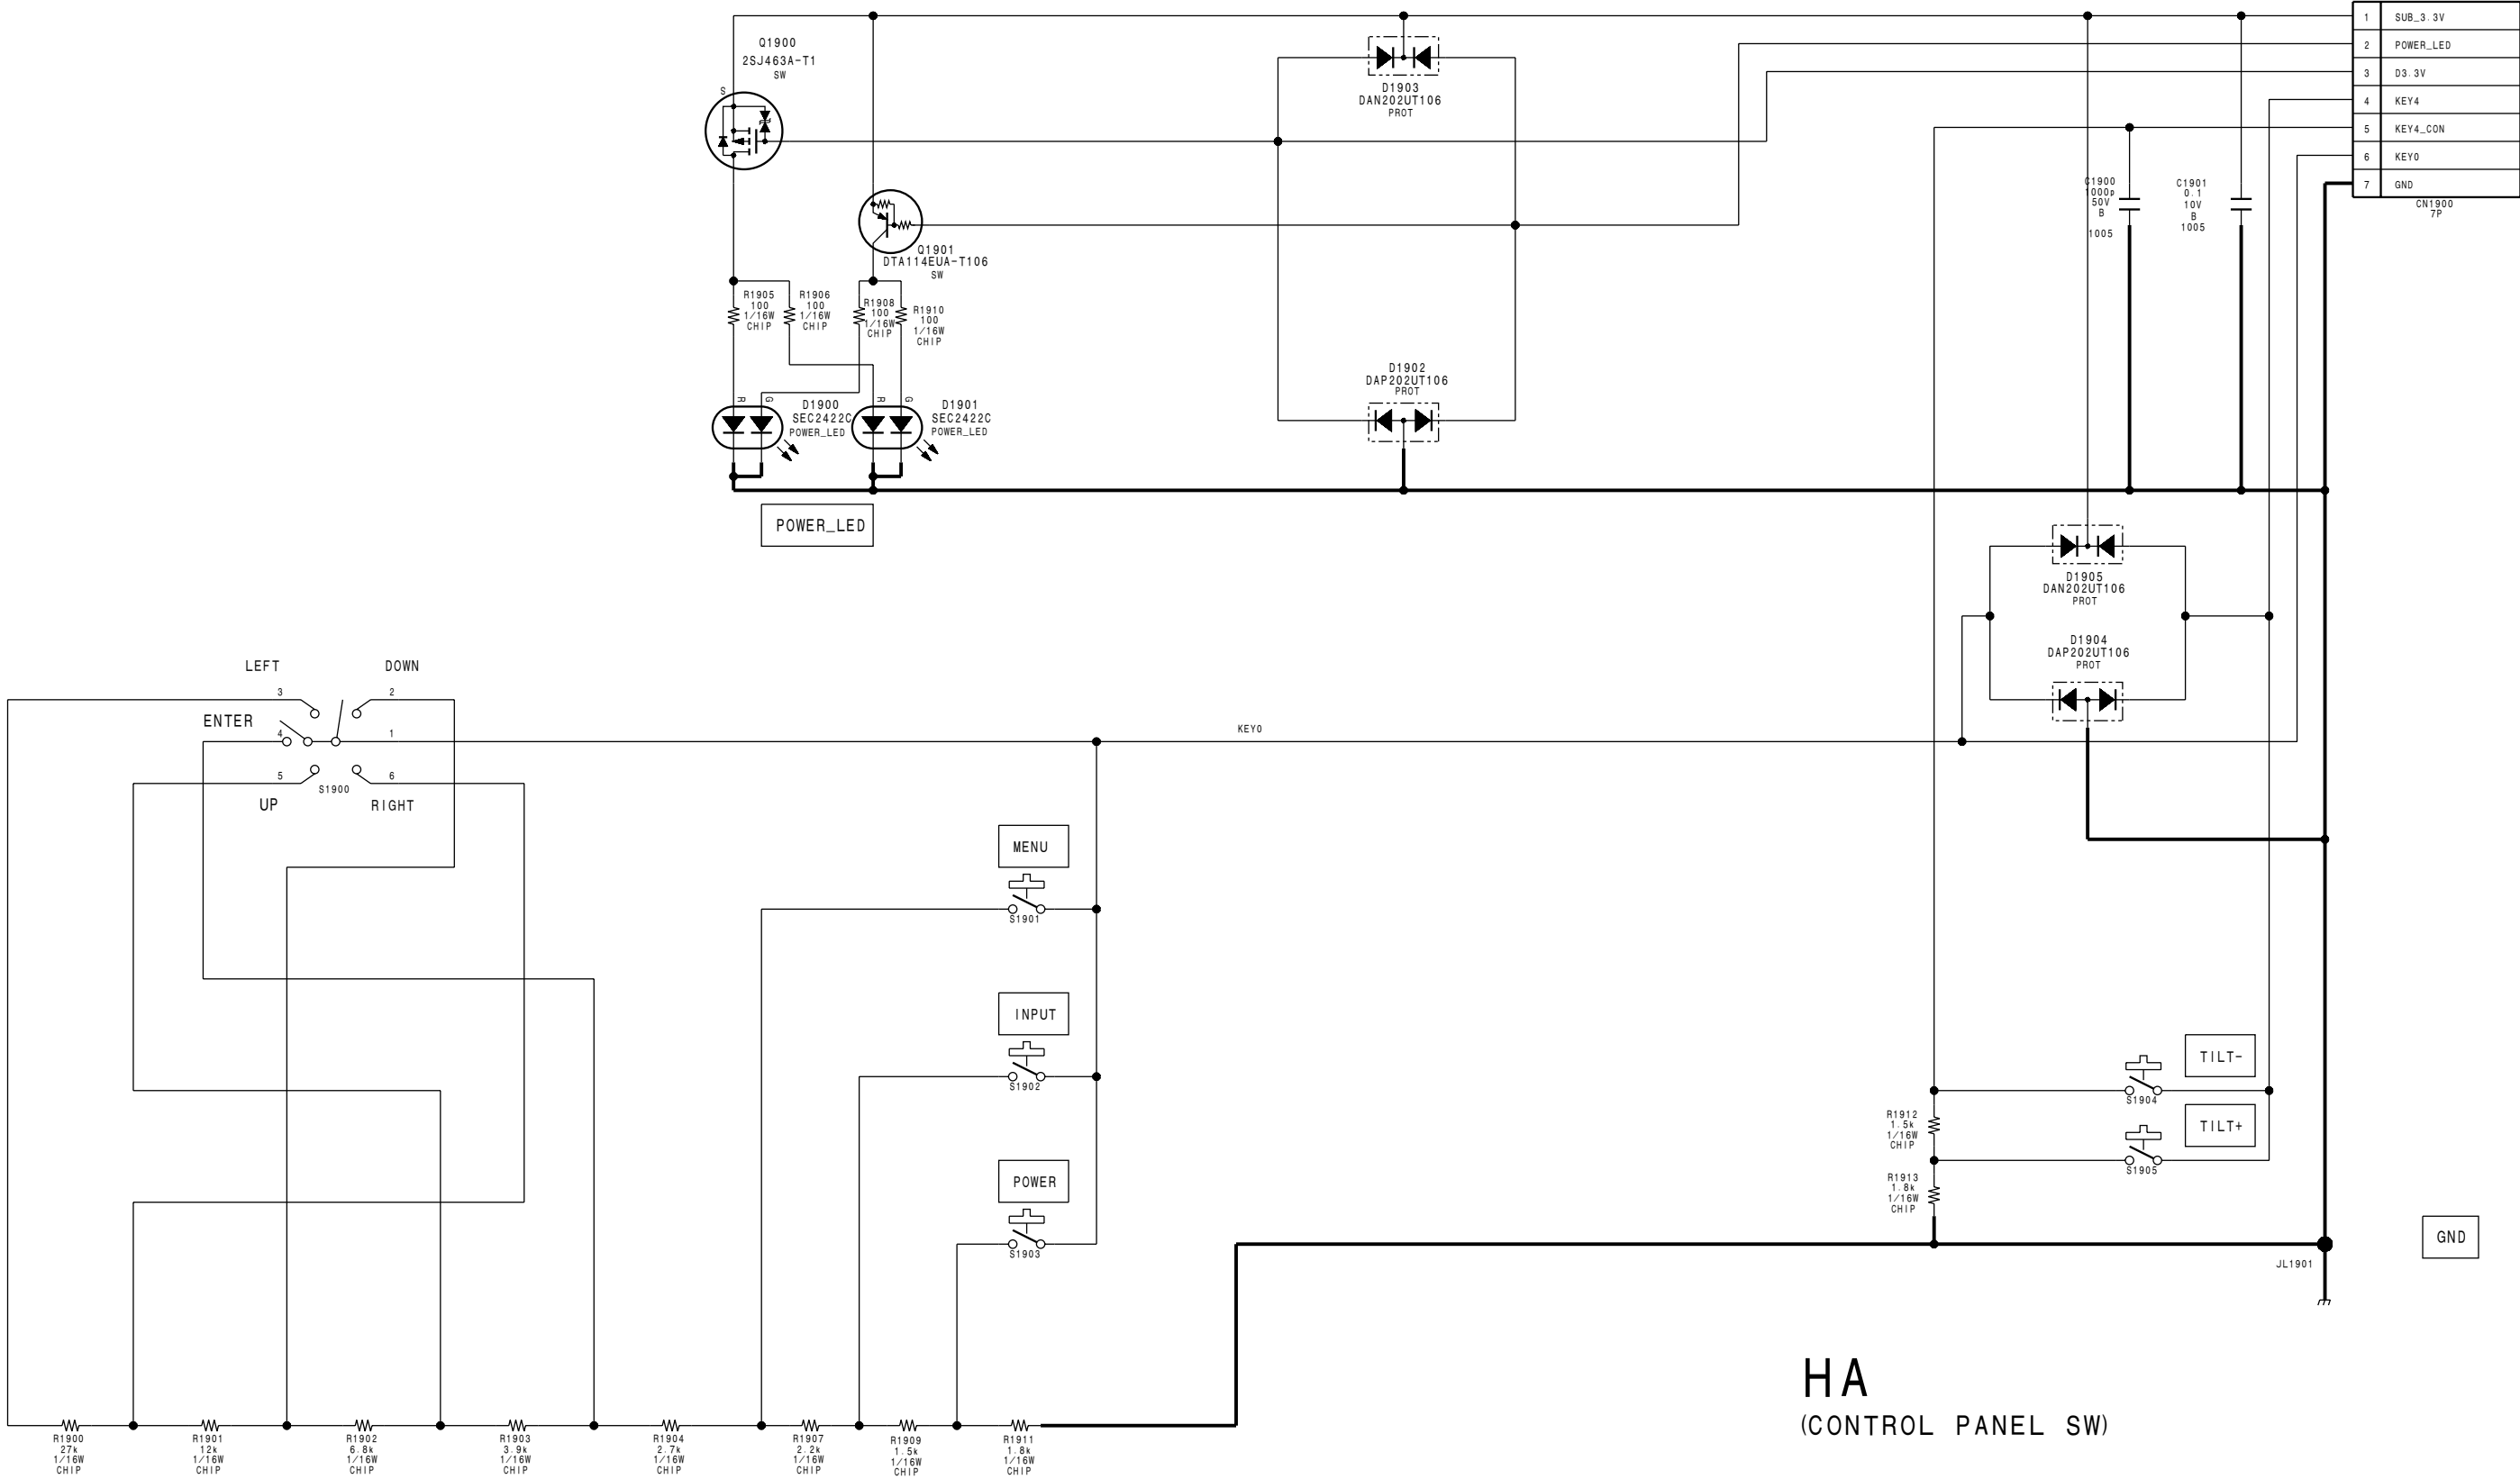


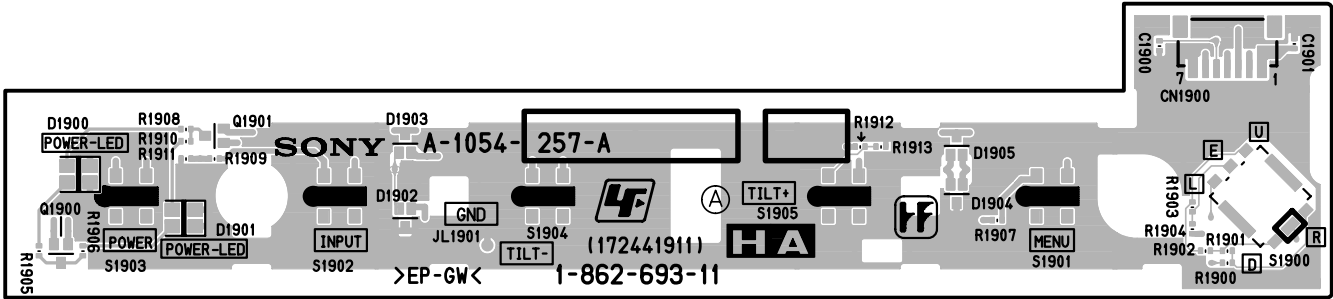


HA -A SIDE-
SUFFIX: -11




HA -B SIDE-
SUFFIX: -11

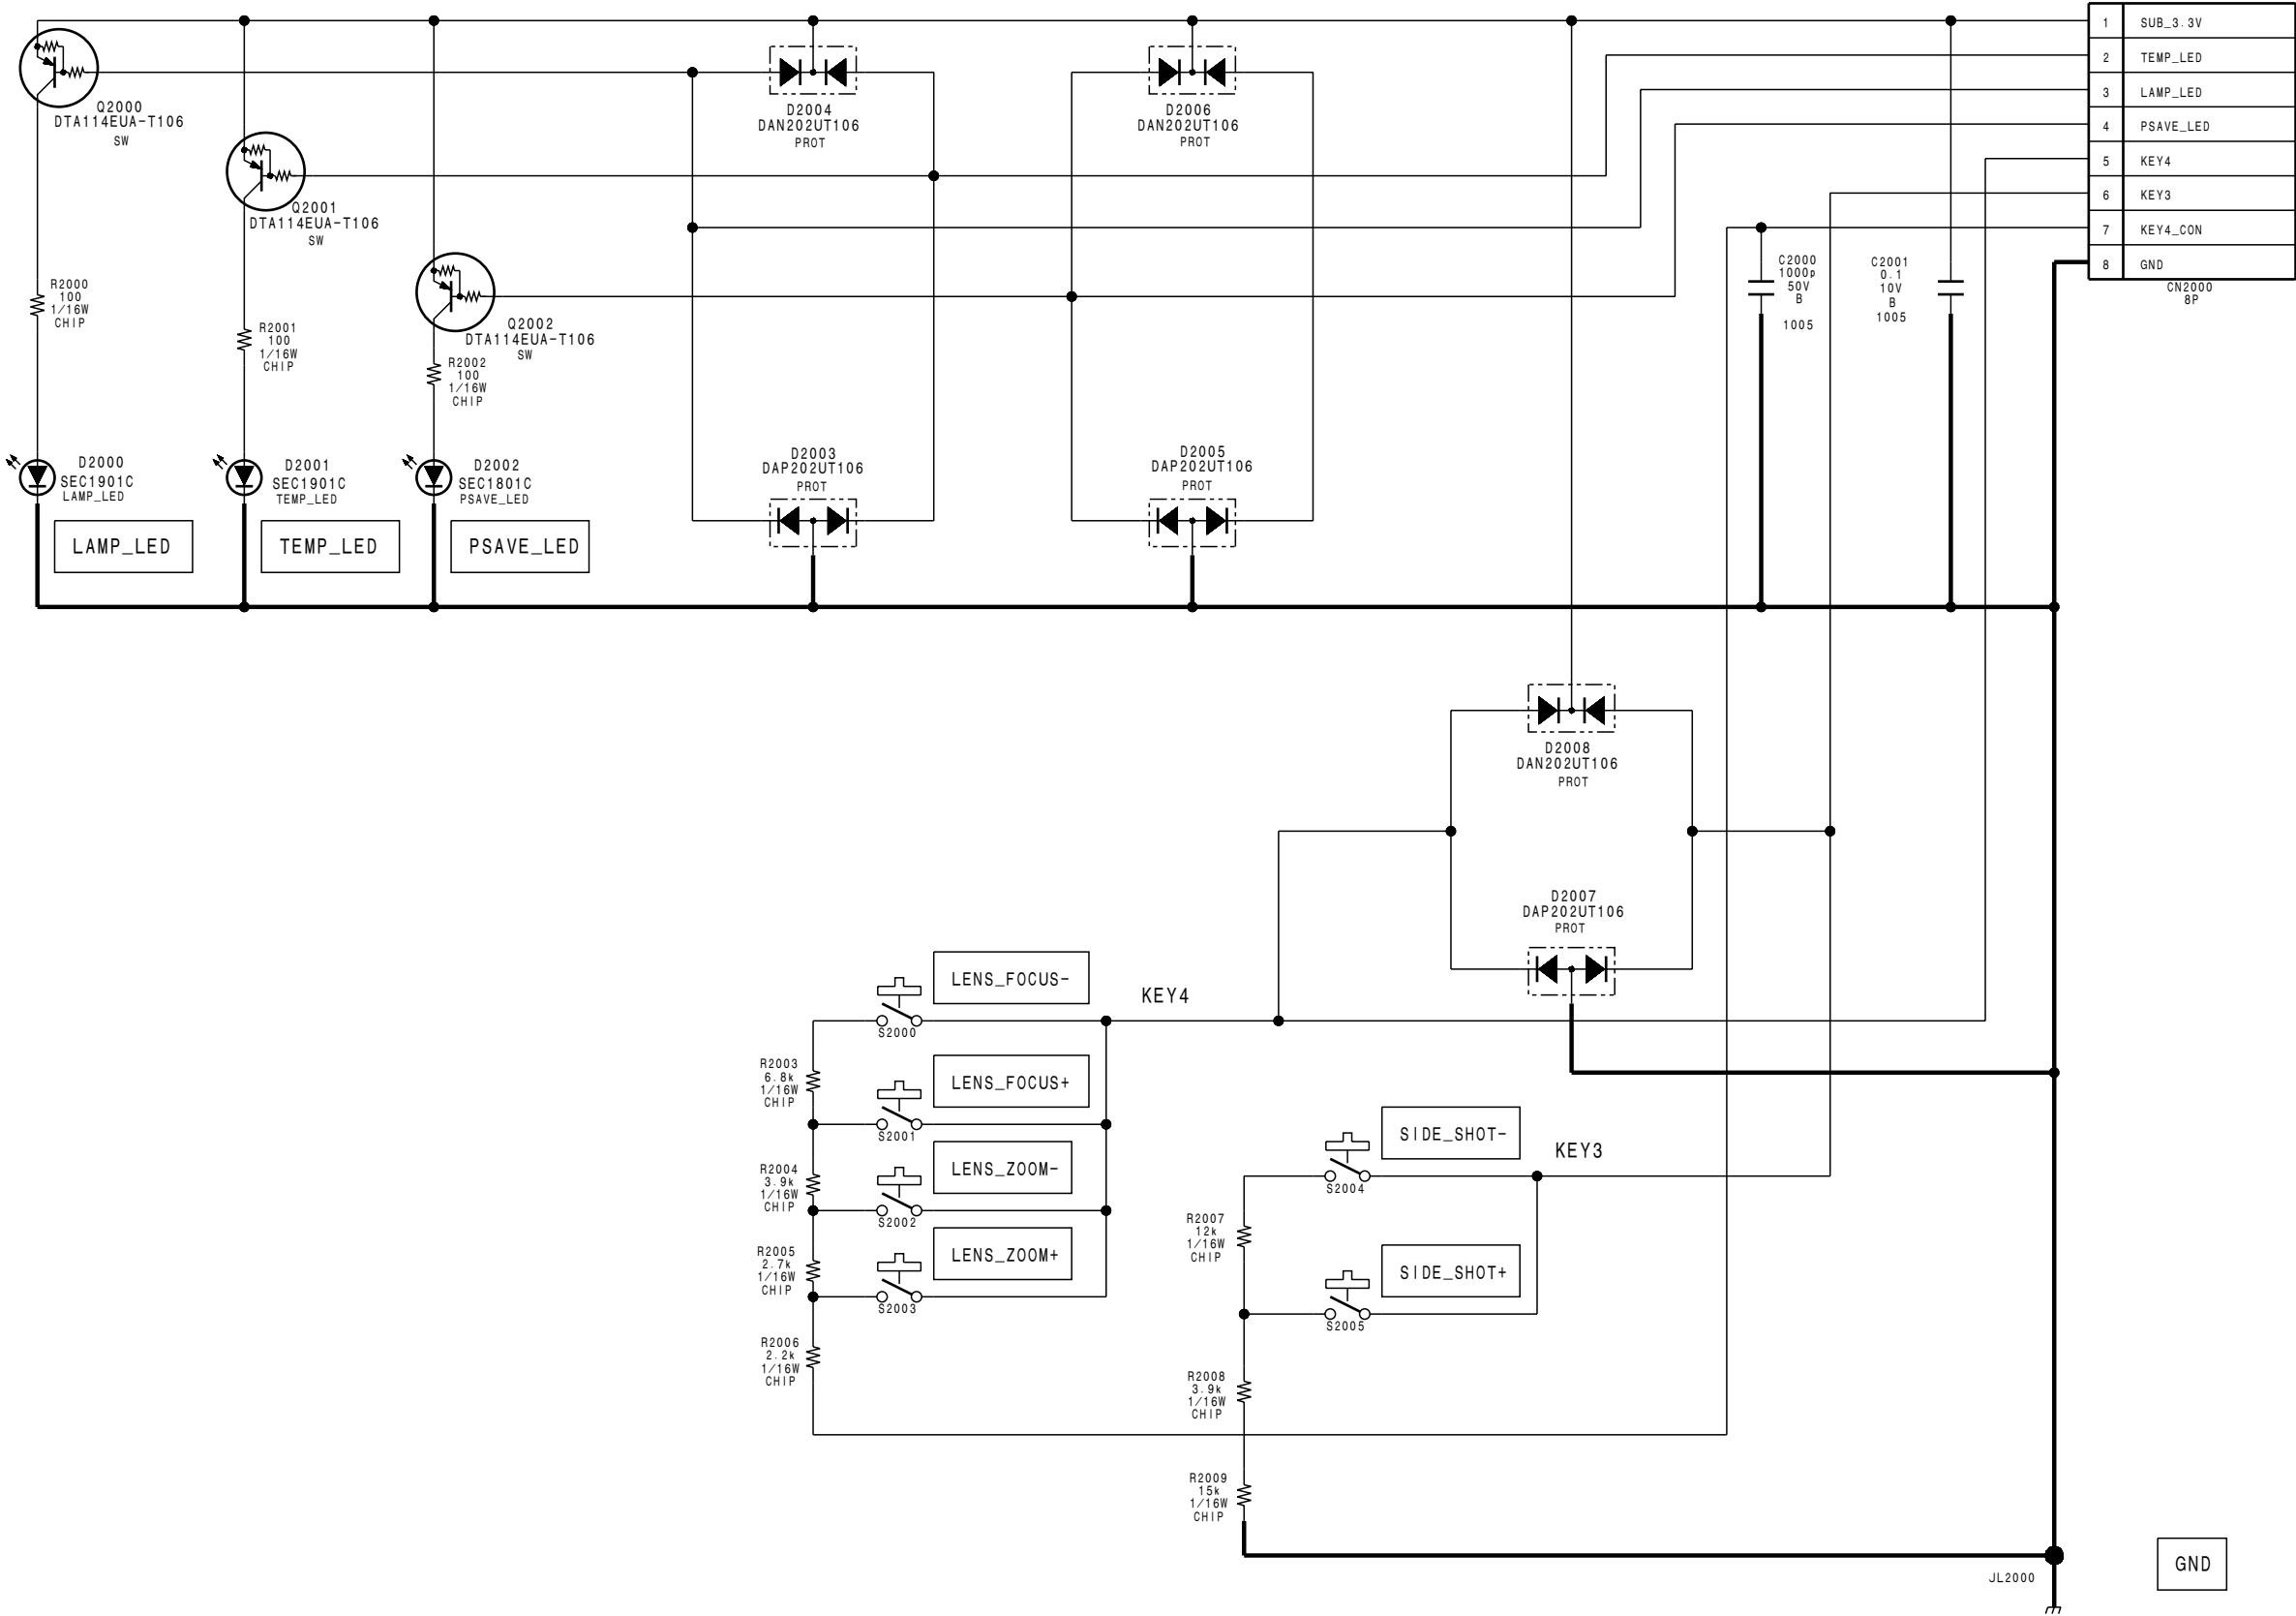

HB
(CONTROL PANEL SW)

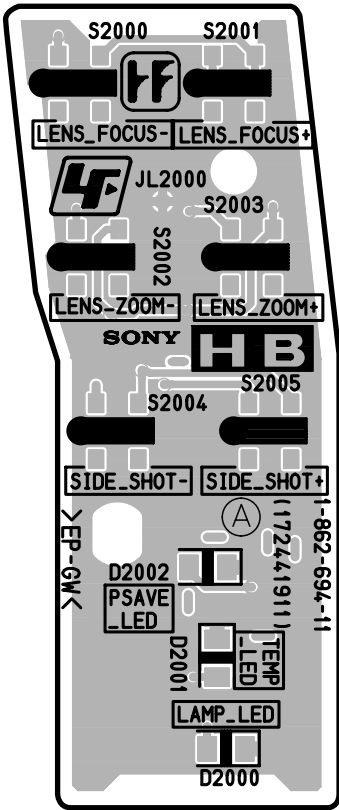


HB -A SIDE-
SUFFIX: -11

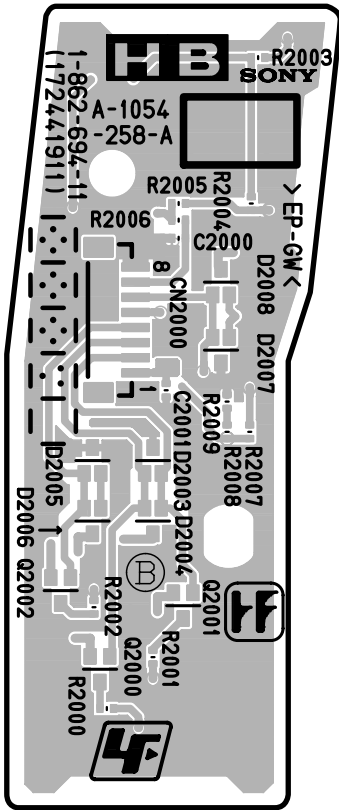


HB -B SIDE-
SUFFIX: -11

1

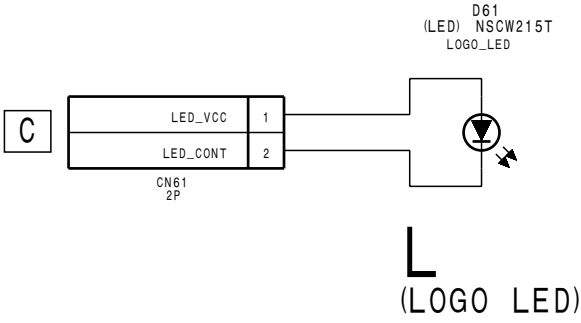


2

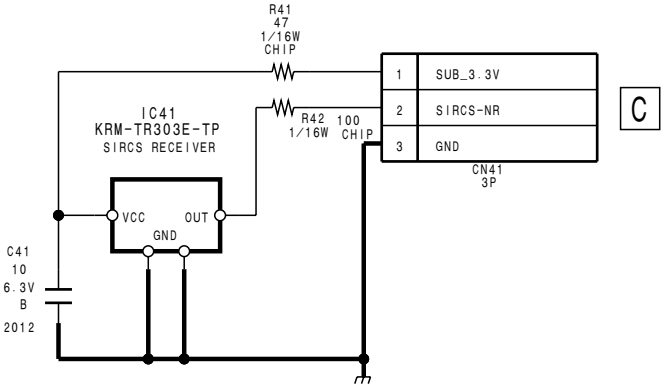

U


(LAMP COVER SW)

3

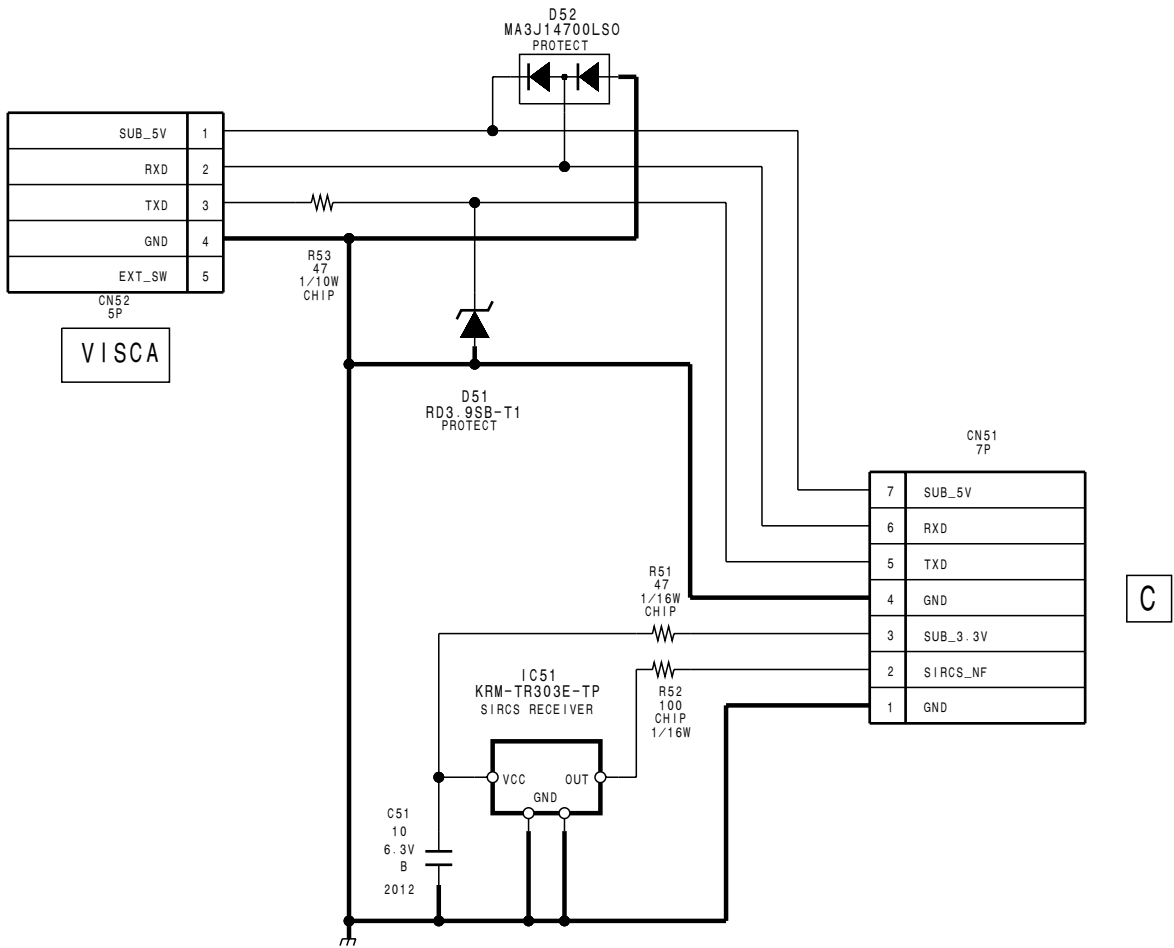


NF

(SIRCS RECEIVER)

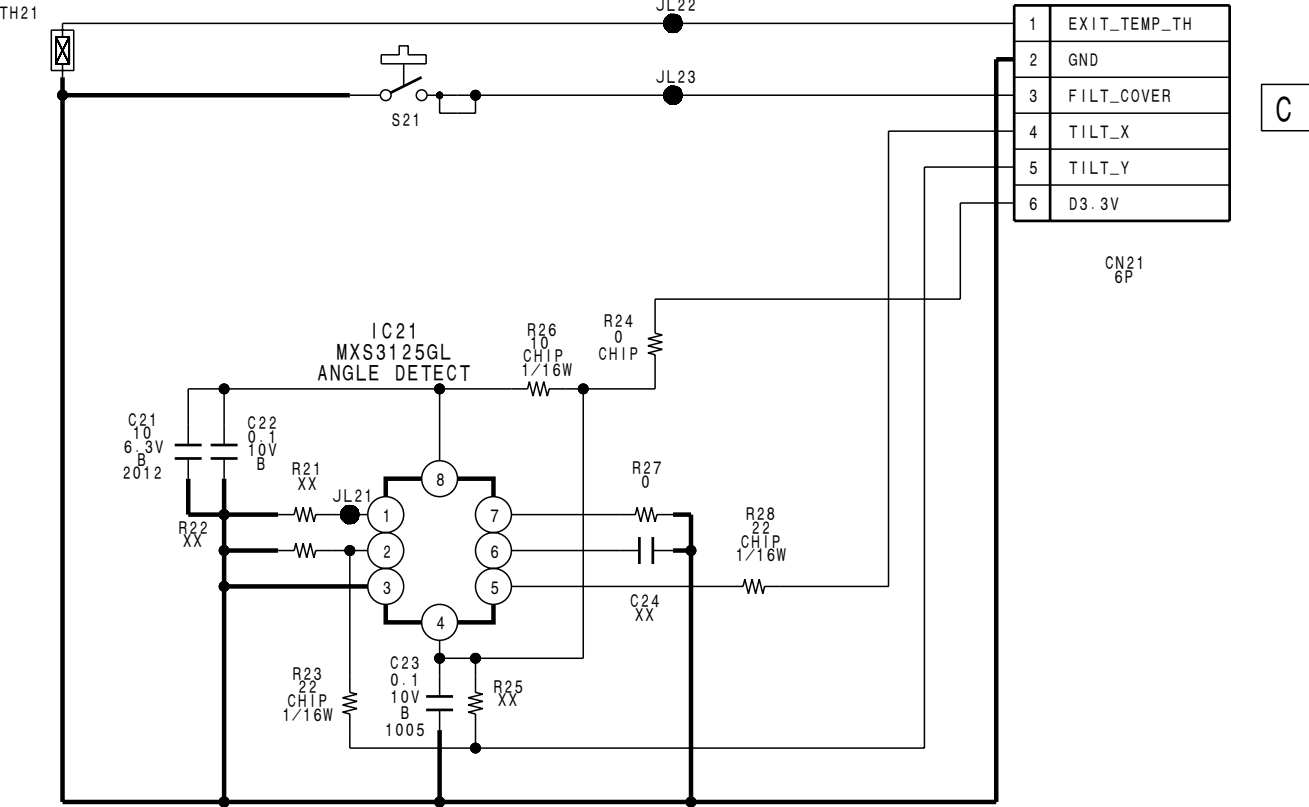


V


(ANGLE DETECT)

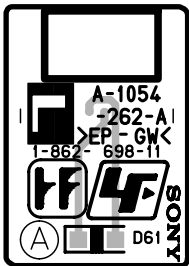


L -A SIDE-
SUFFIX: -11

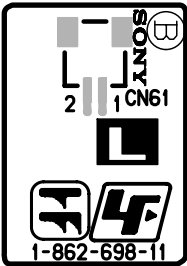


L -B SIDE-
SUFFIX: -11

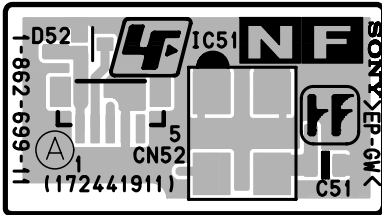


NF -A SIDE-
SUFFIX: -11

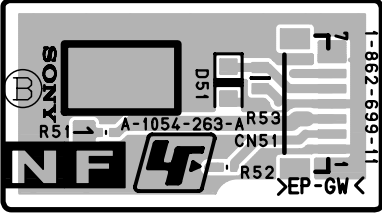


NF -B SIDE-
SUFFIX: -11

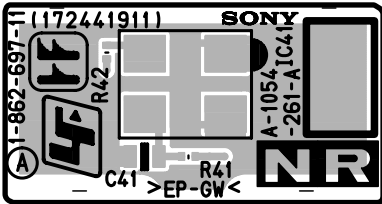


NR -A SIDE-
SUFFIX: -11

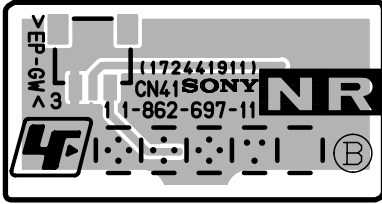


NR -B SIDE-
SUFFIX: -11

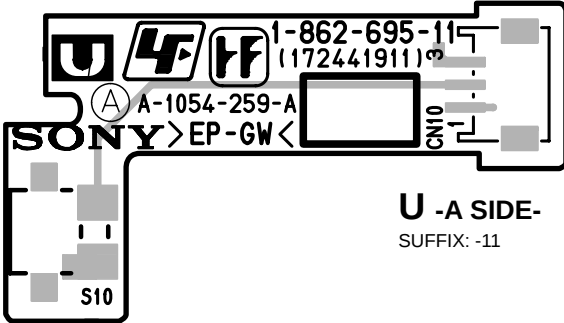


U -A SIDE-
SUFFIX: -11

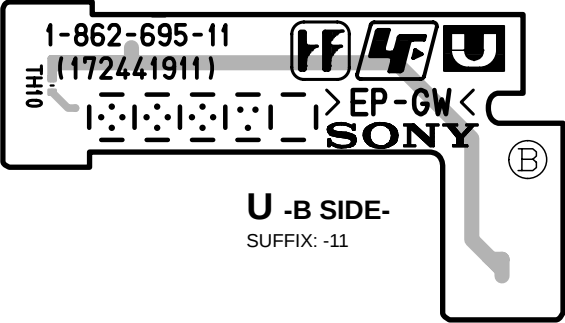

U -B SIDE-
SUFFIX: -11

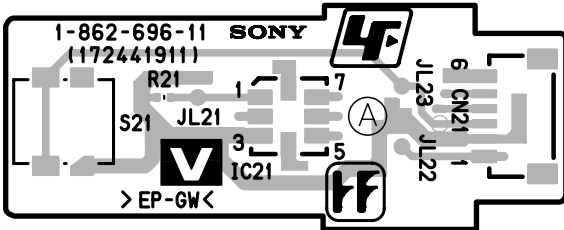


V -A SIDE-
SUFFIX: -11

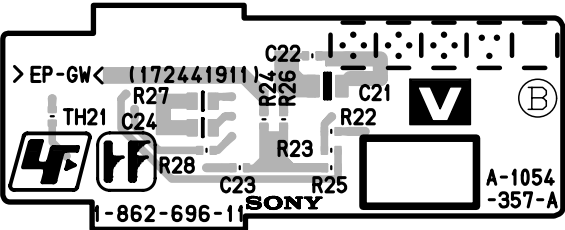


V -B SIDE-
SUFFIX: -11


M (1/5) AK4352VT-E2 (IC1505)

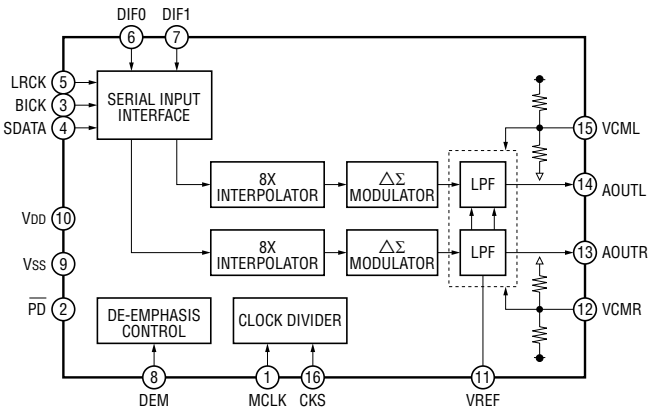


M (1/5) MIC2562A-OBMTR (IC1501)







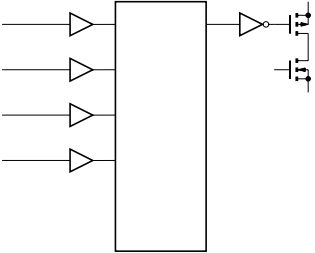


M (1/5) CY27027ZCT (IC1500)

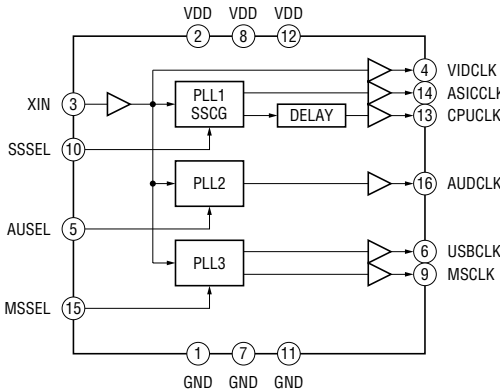

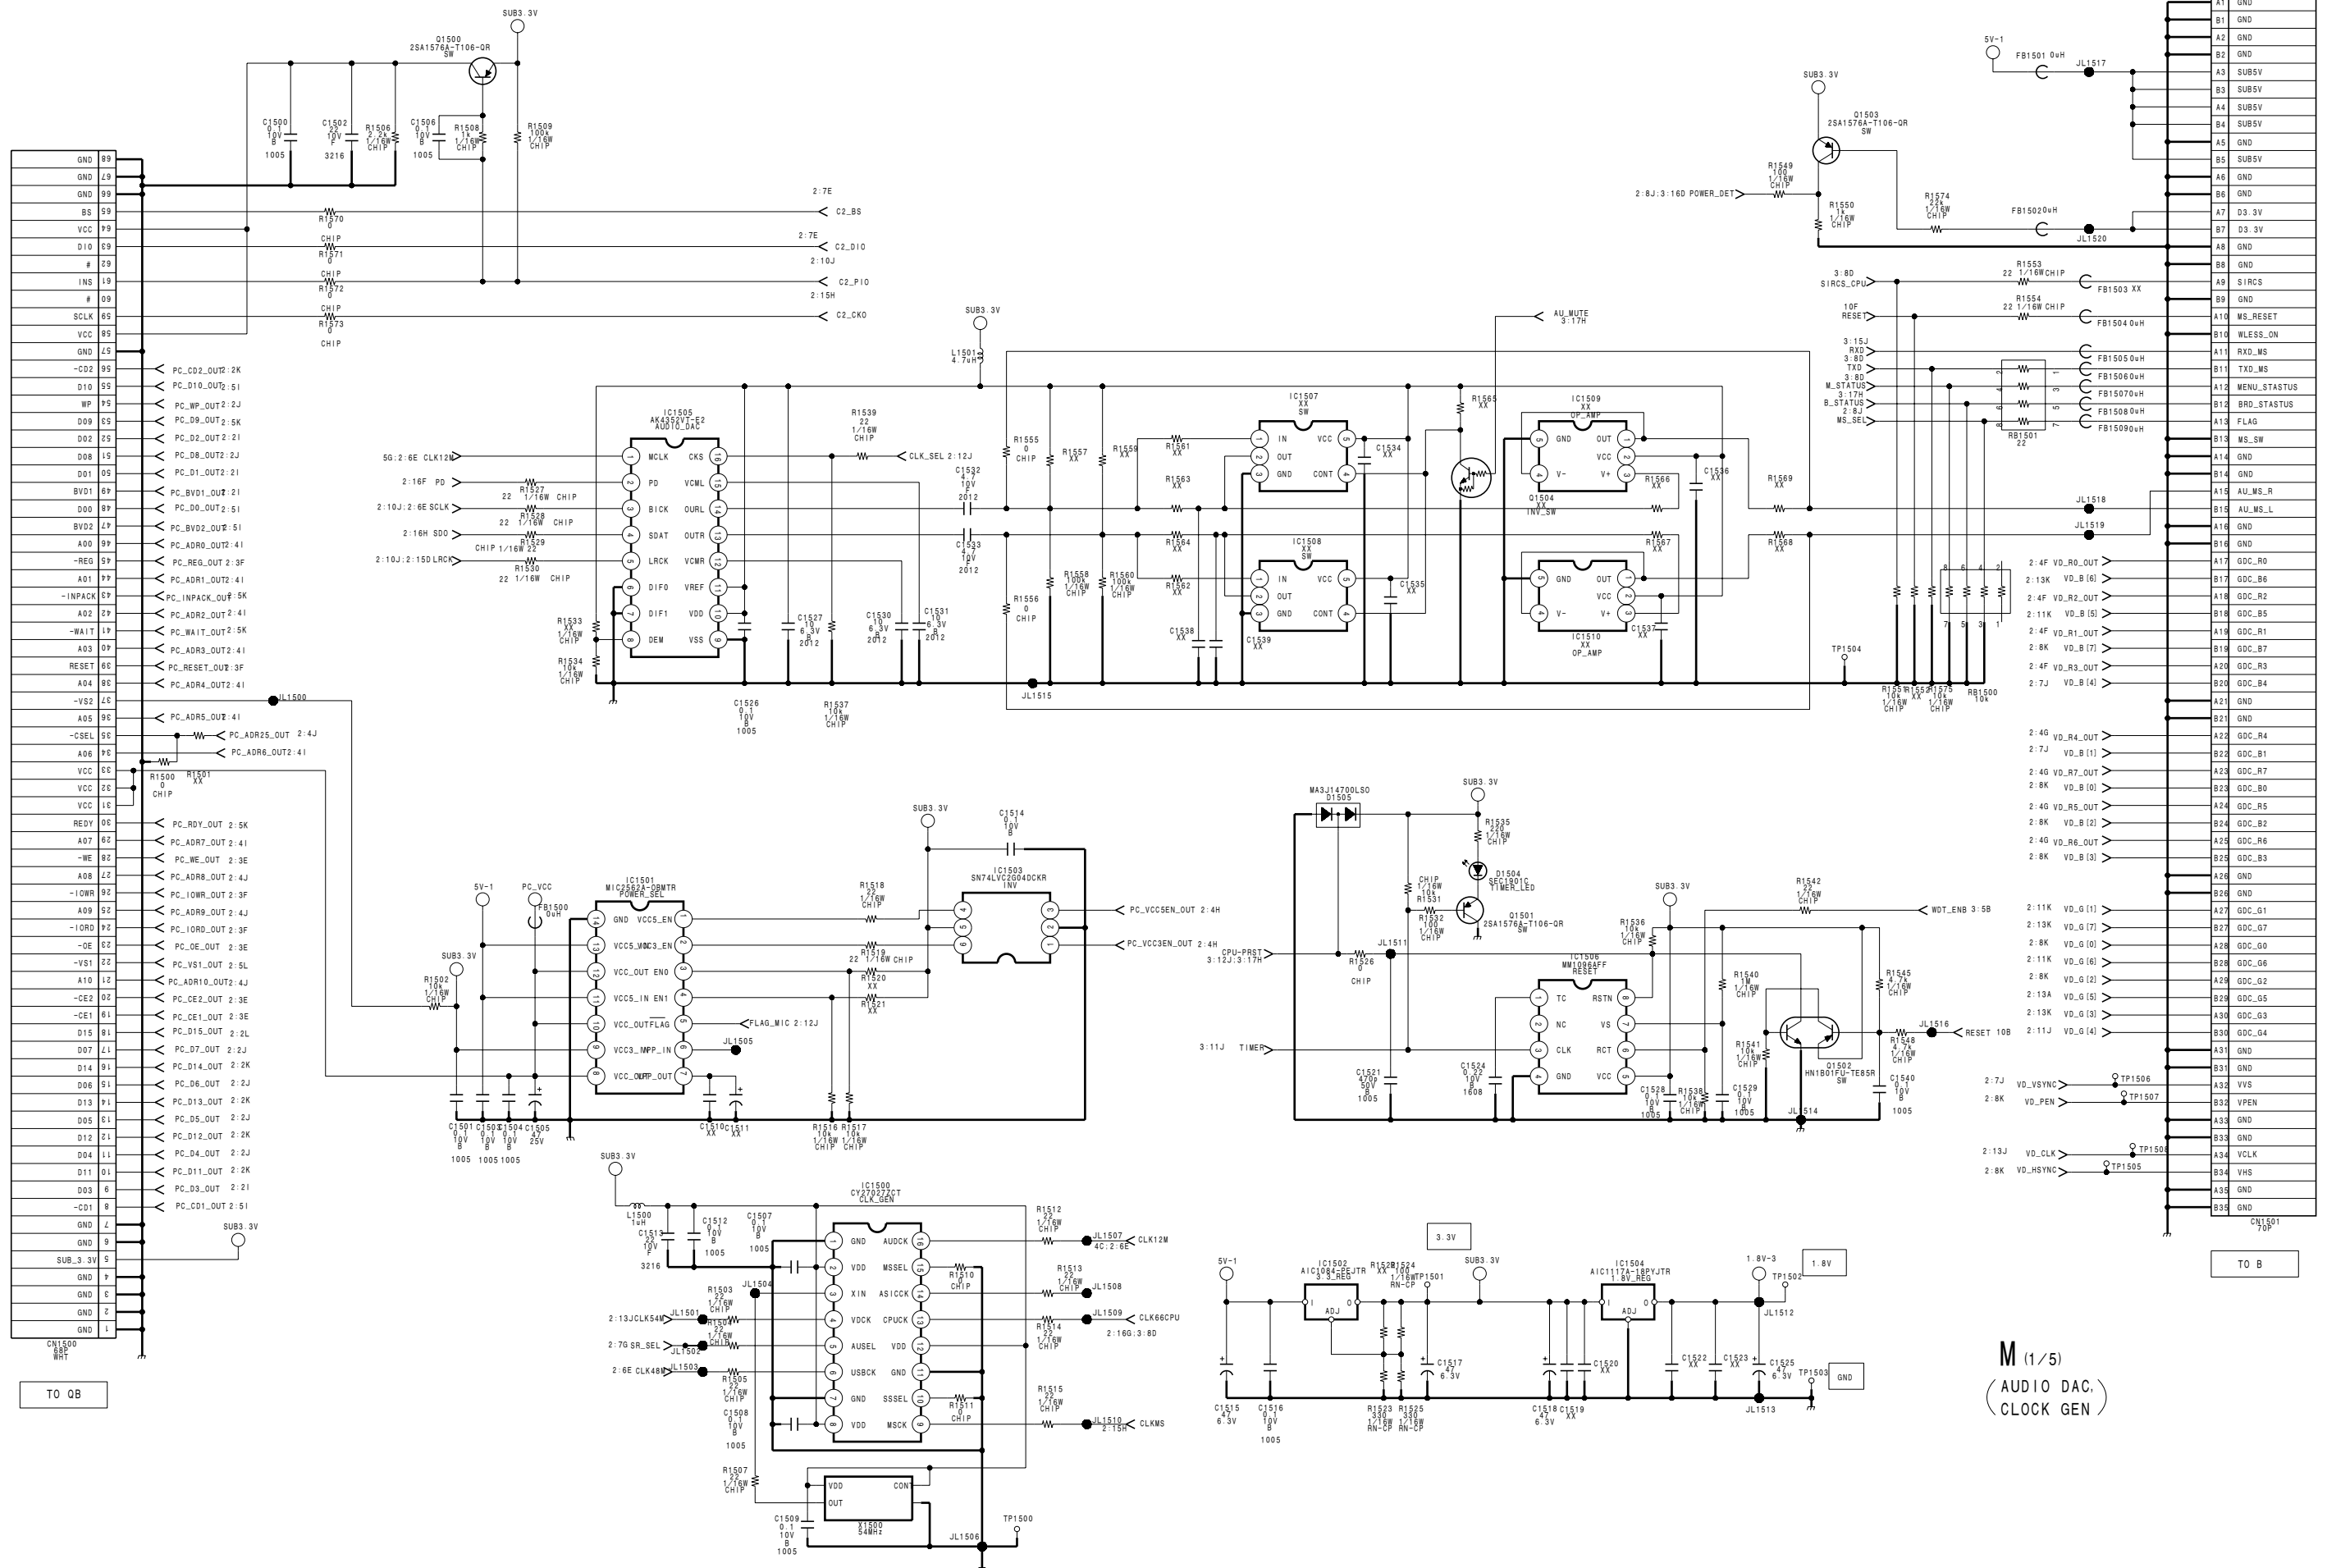



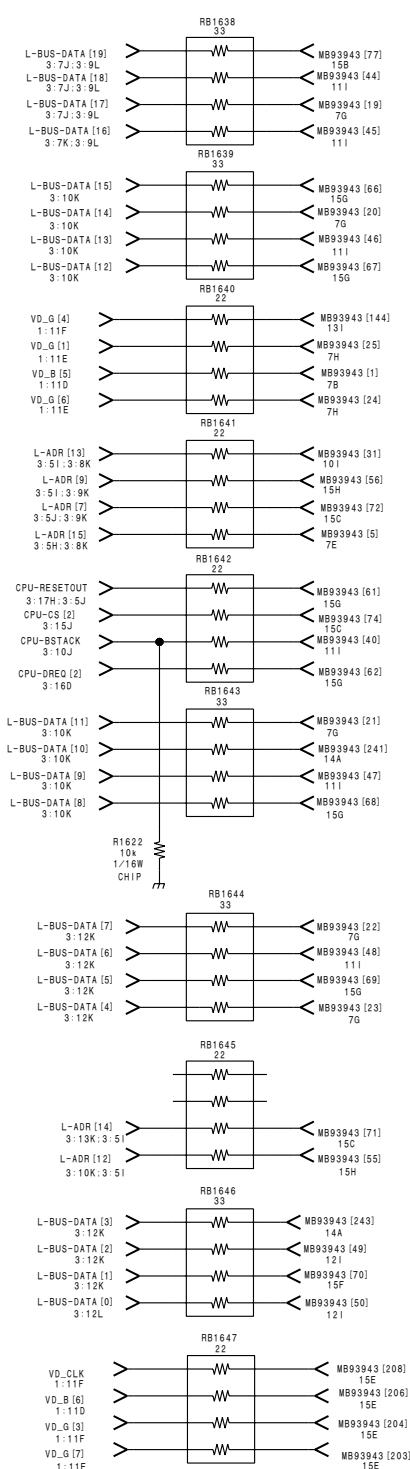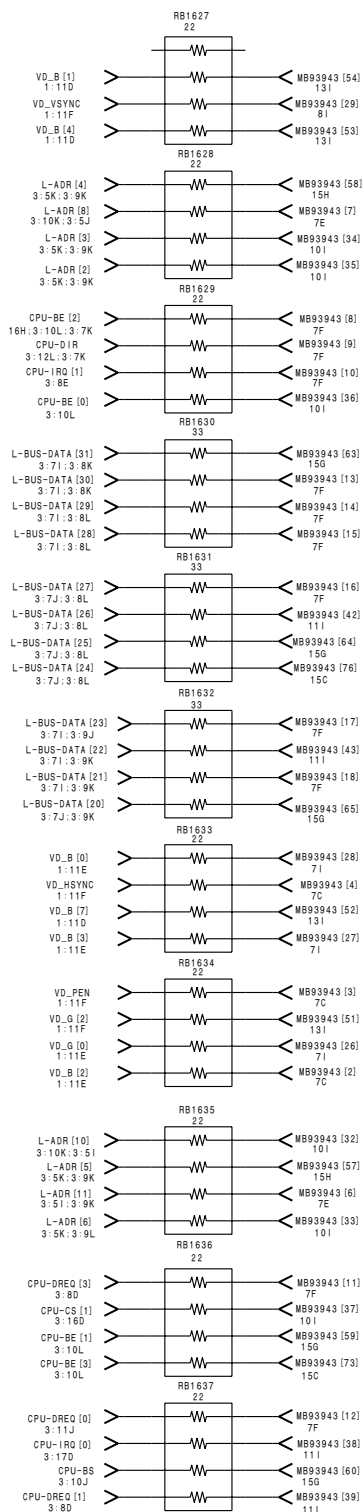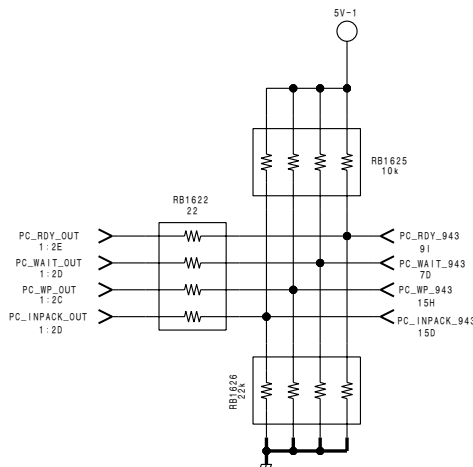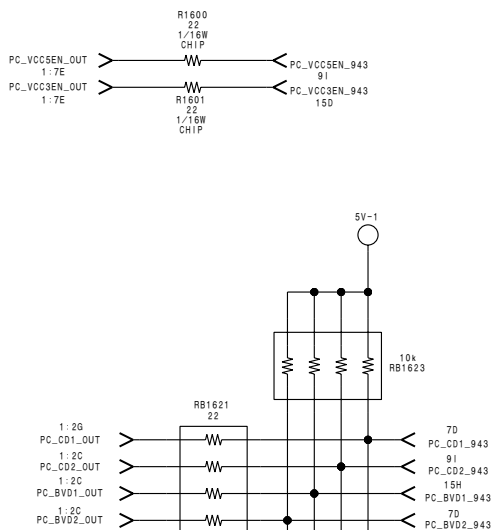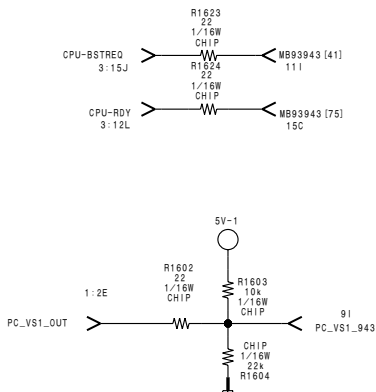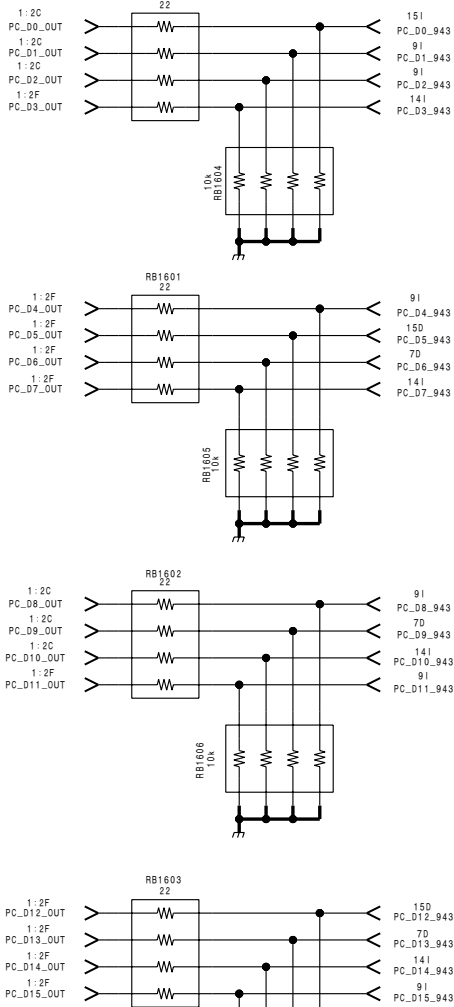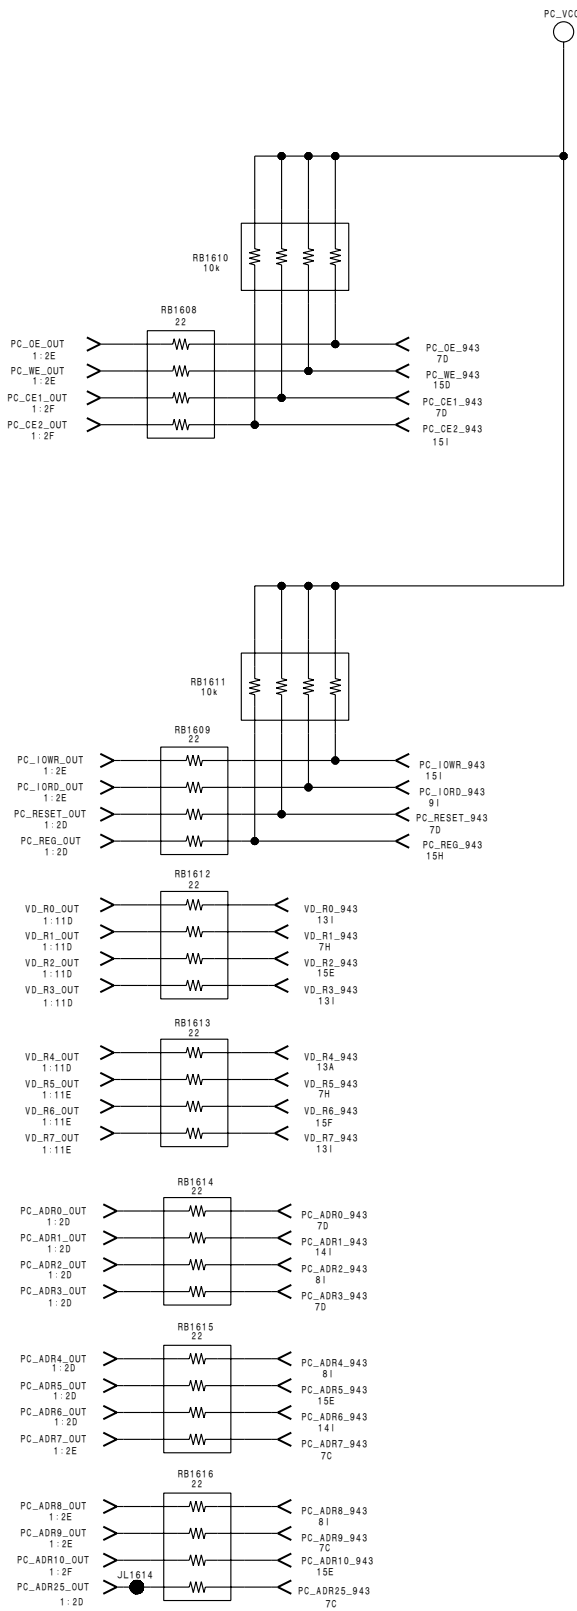


1



2


3

4

5

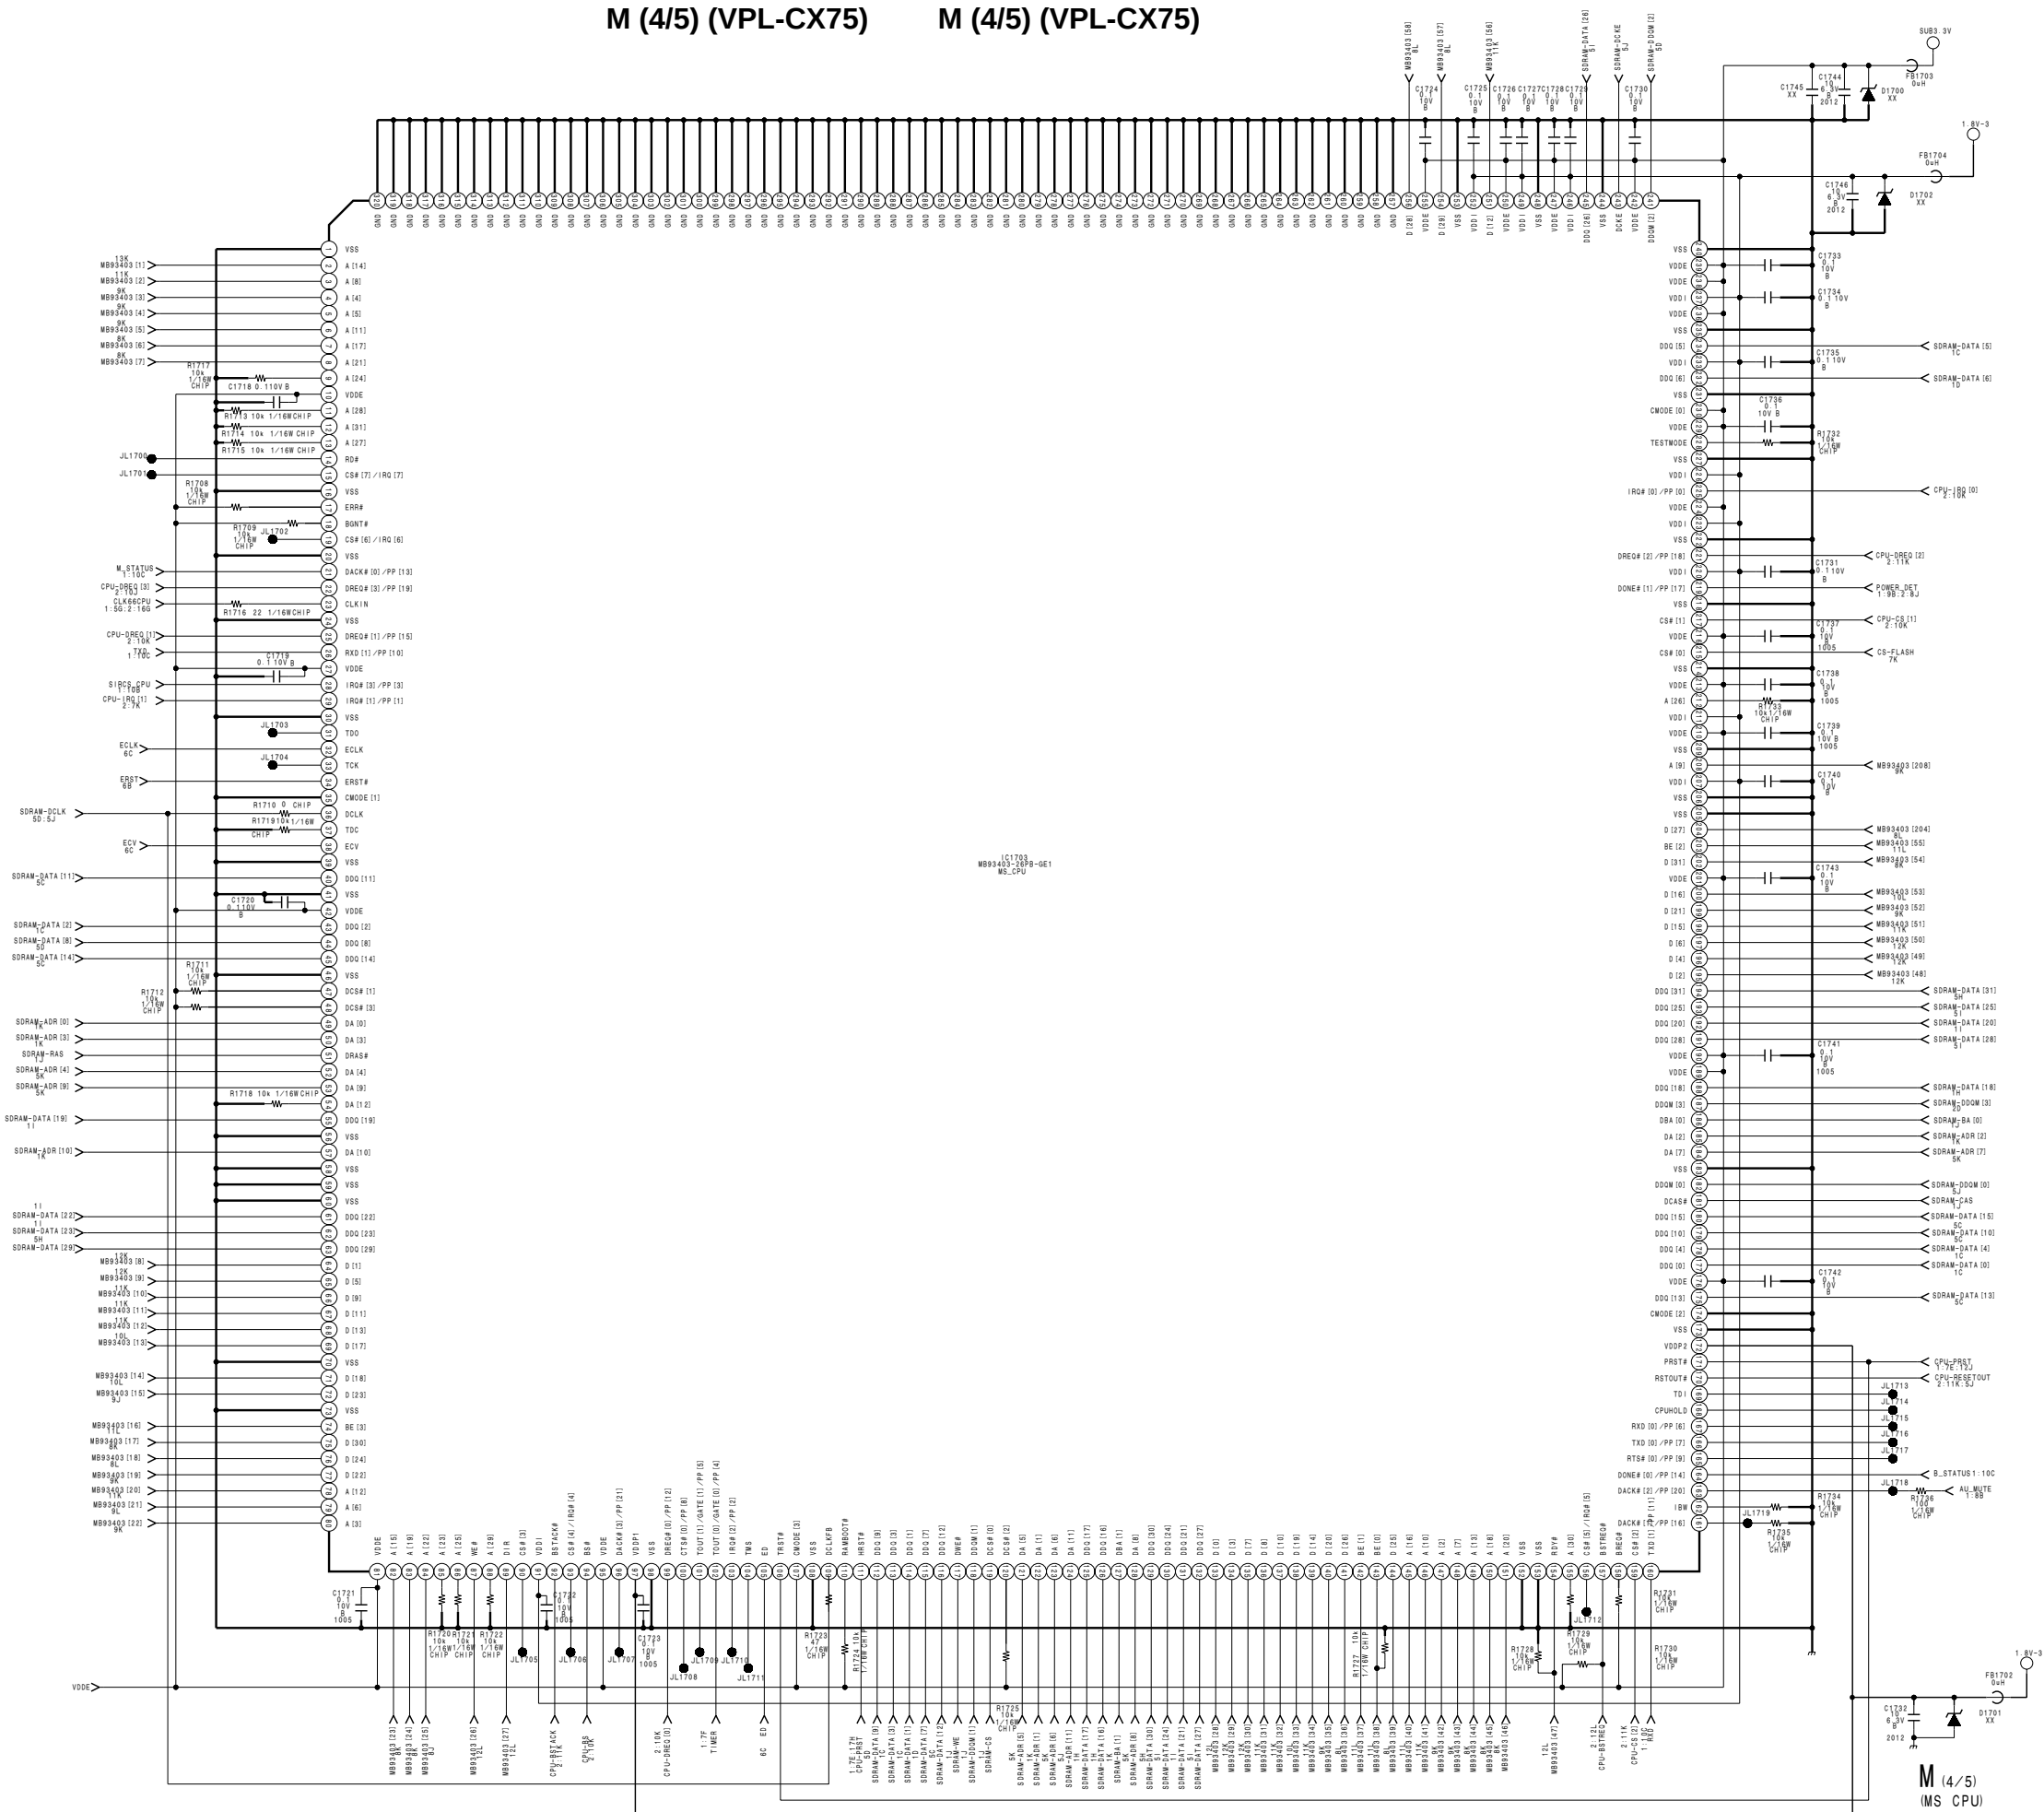

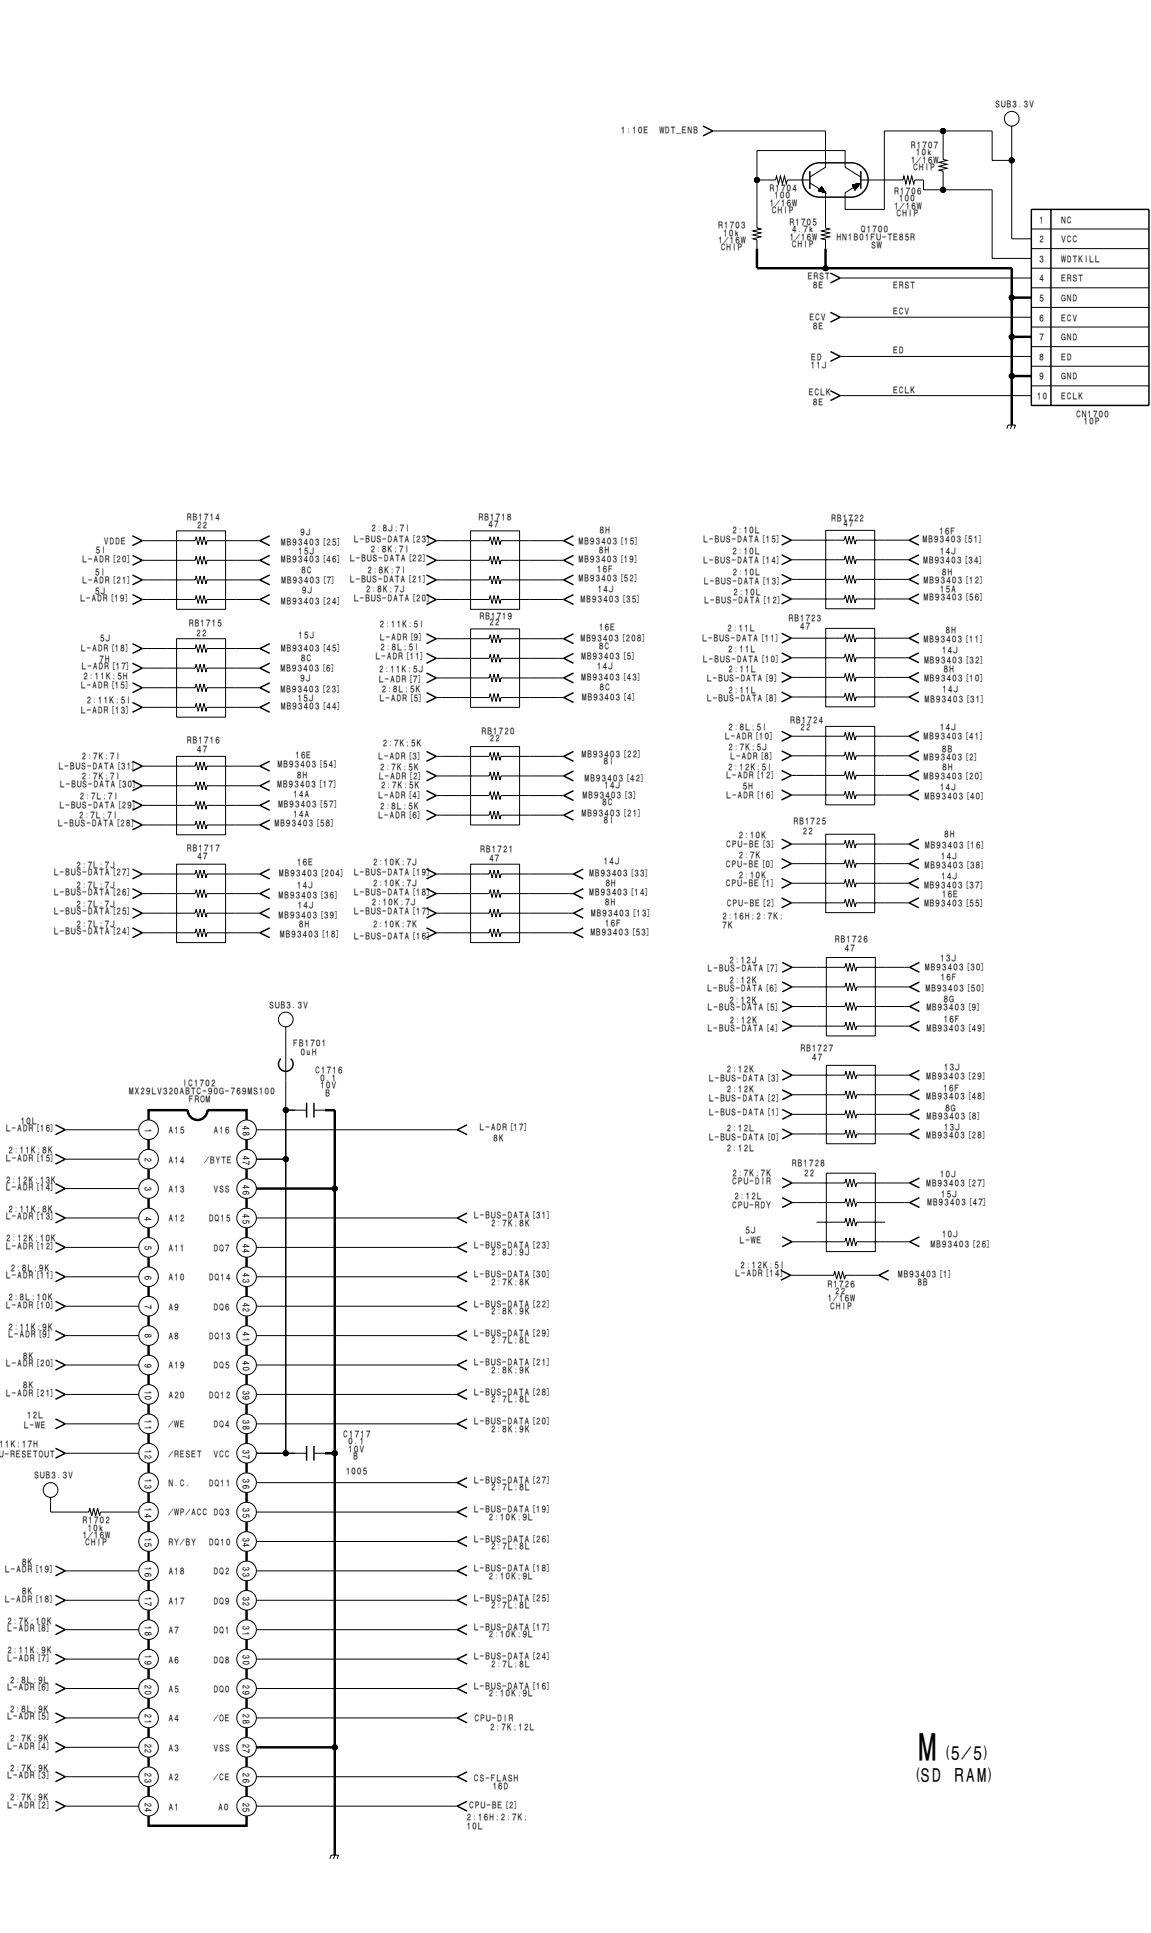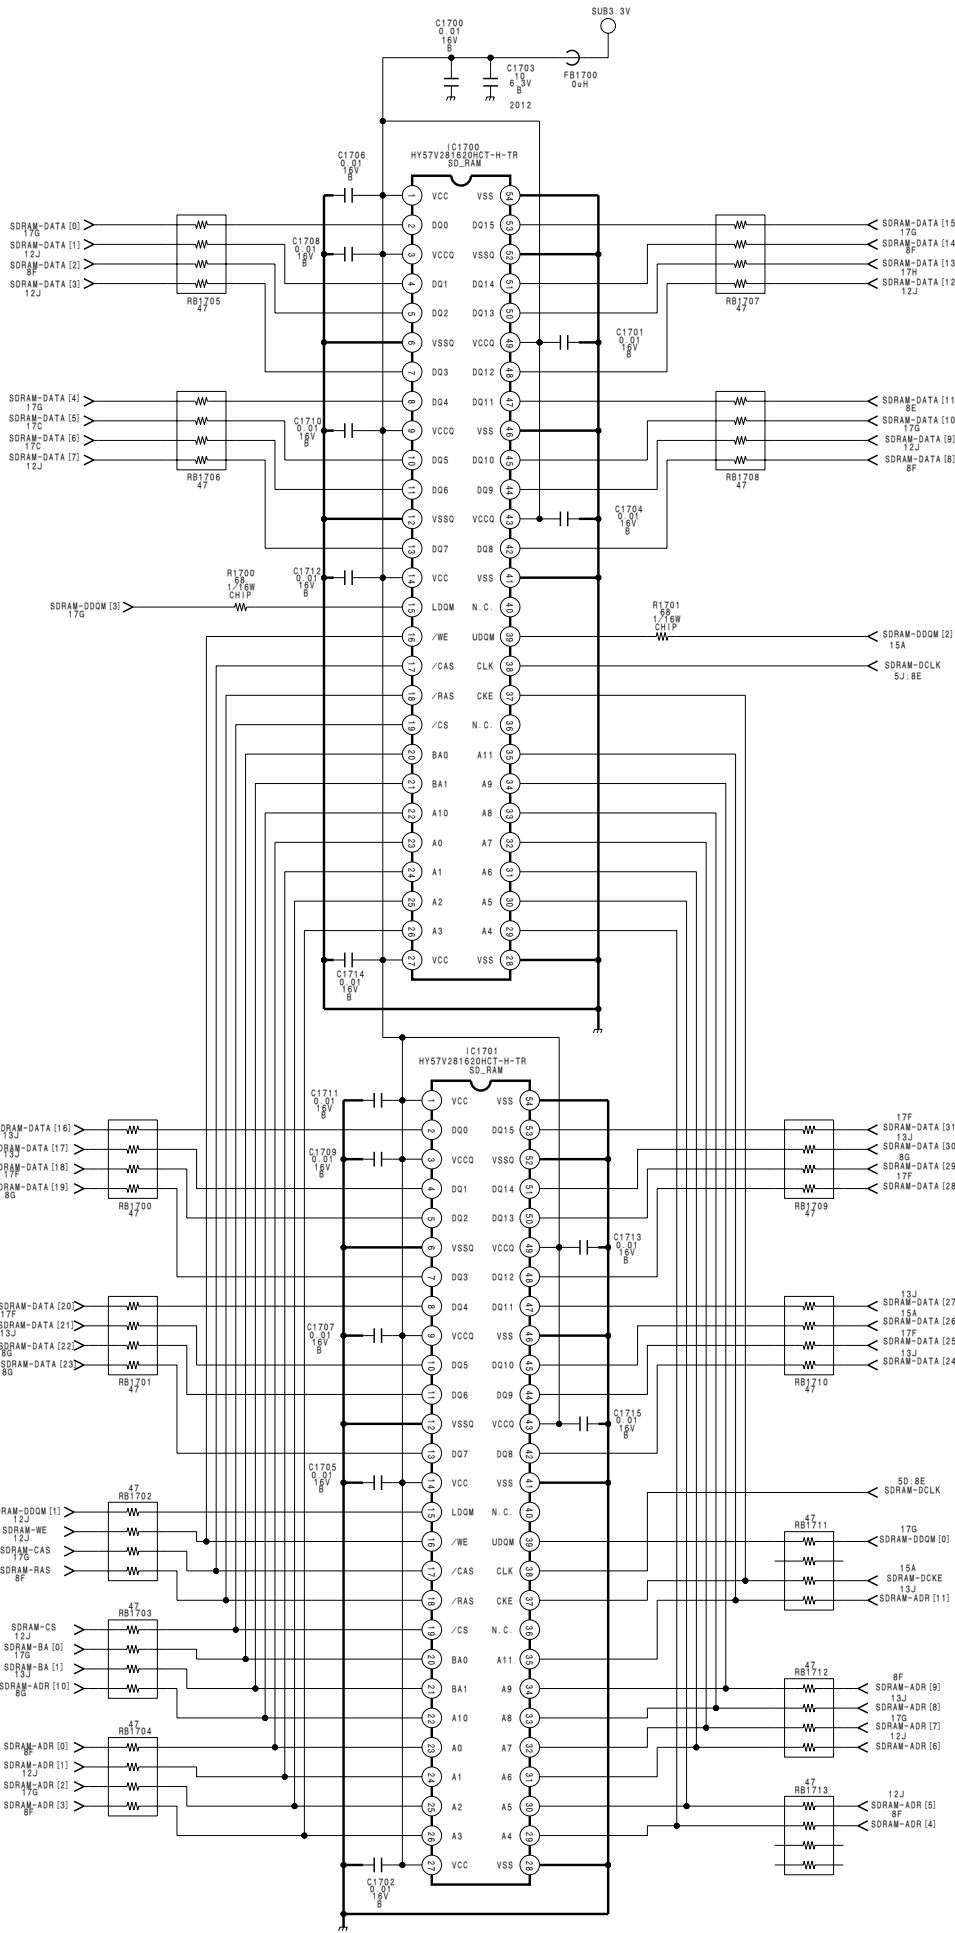

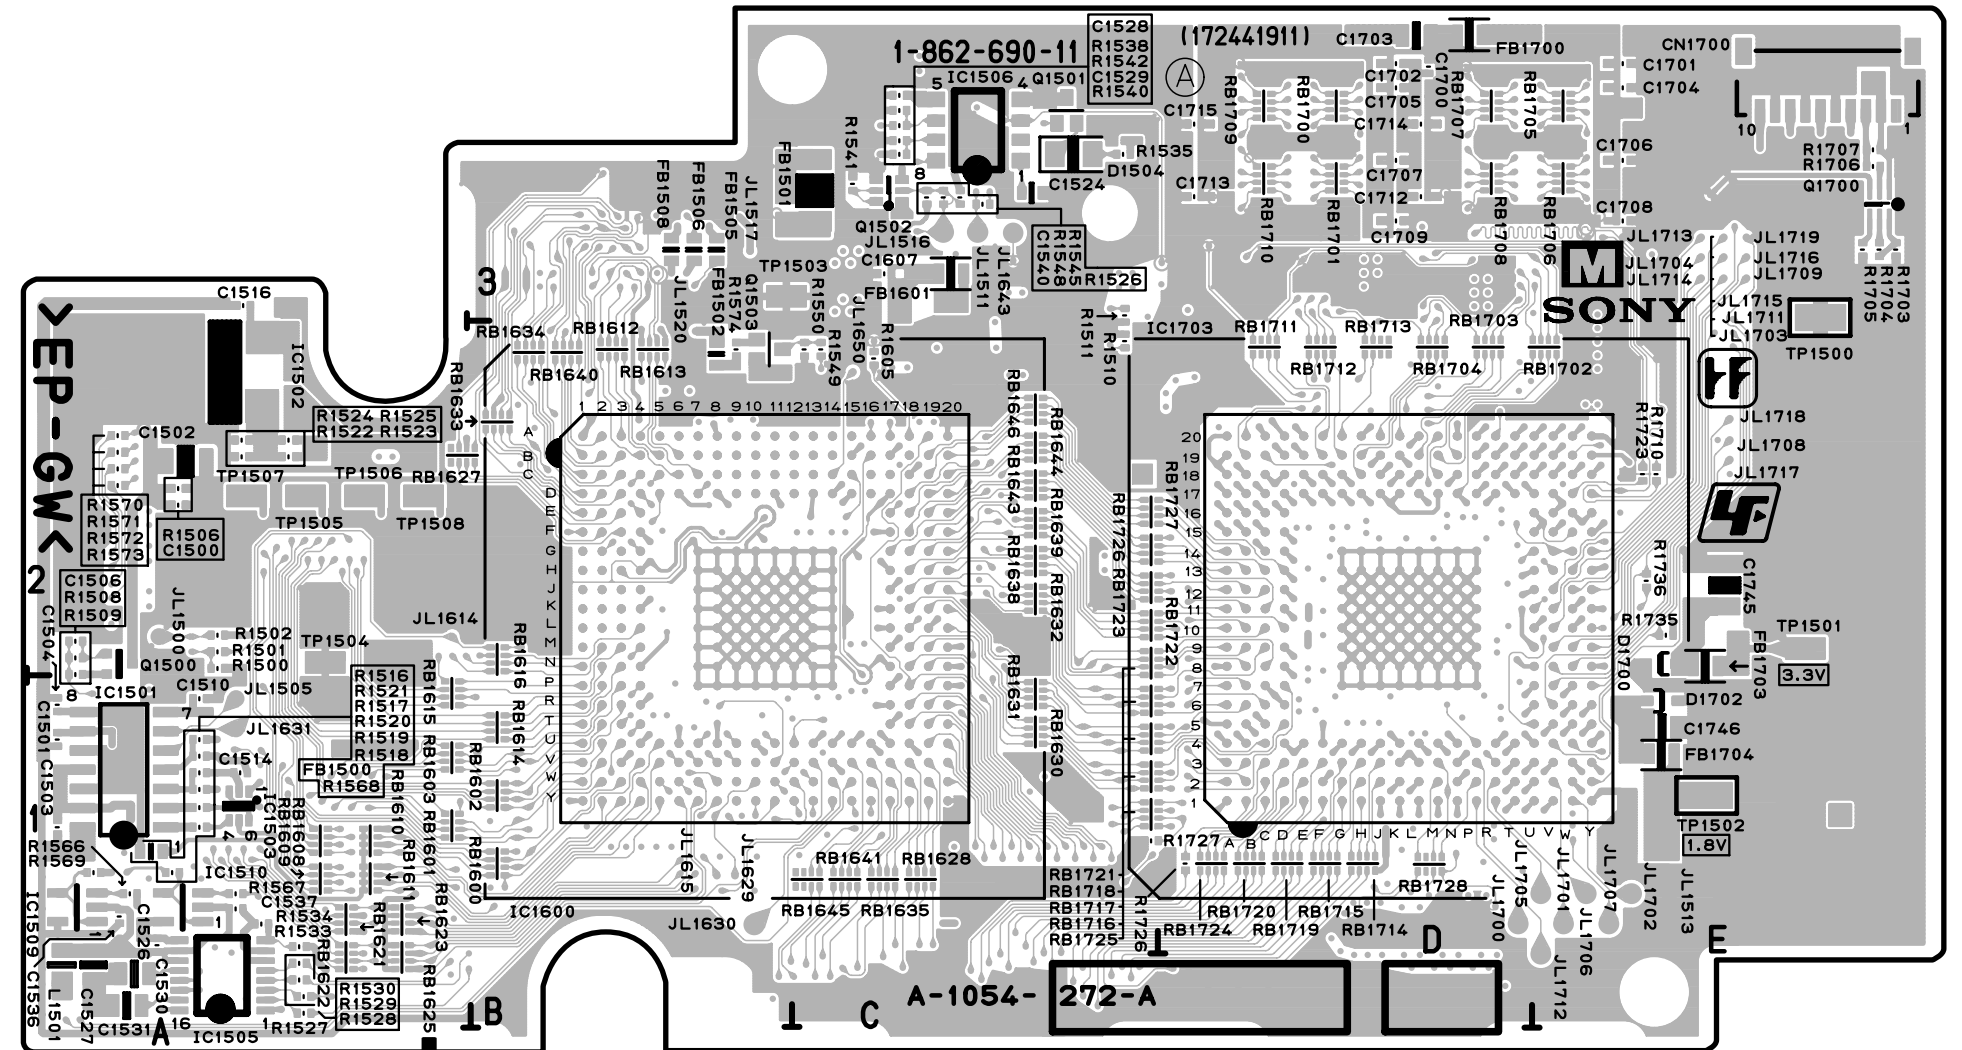




1

2


3

4


5

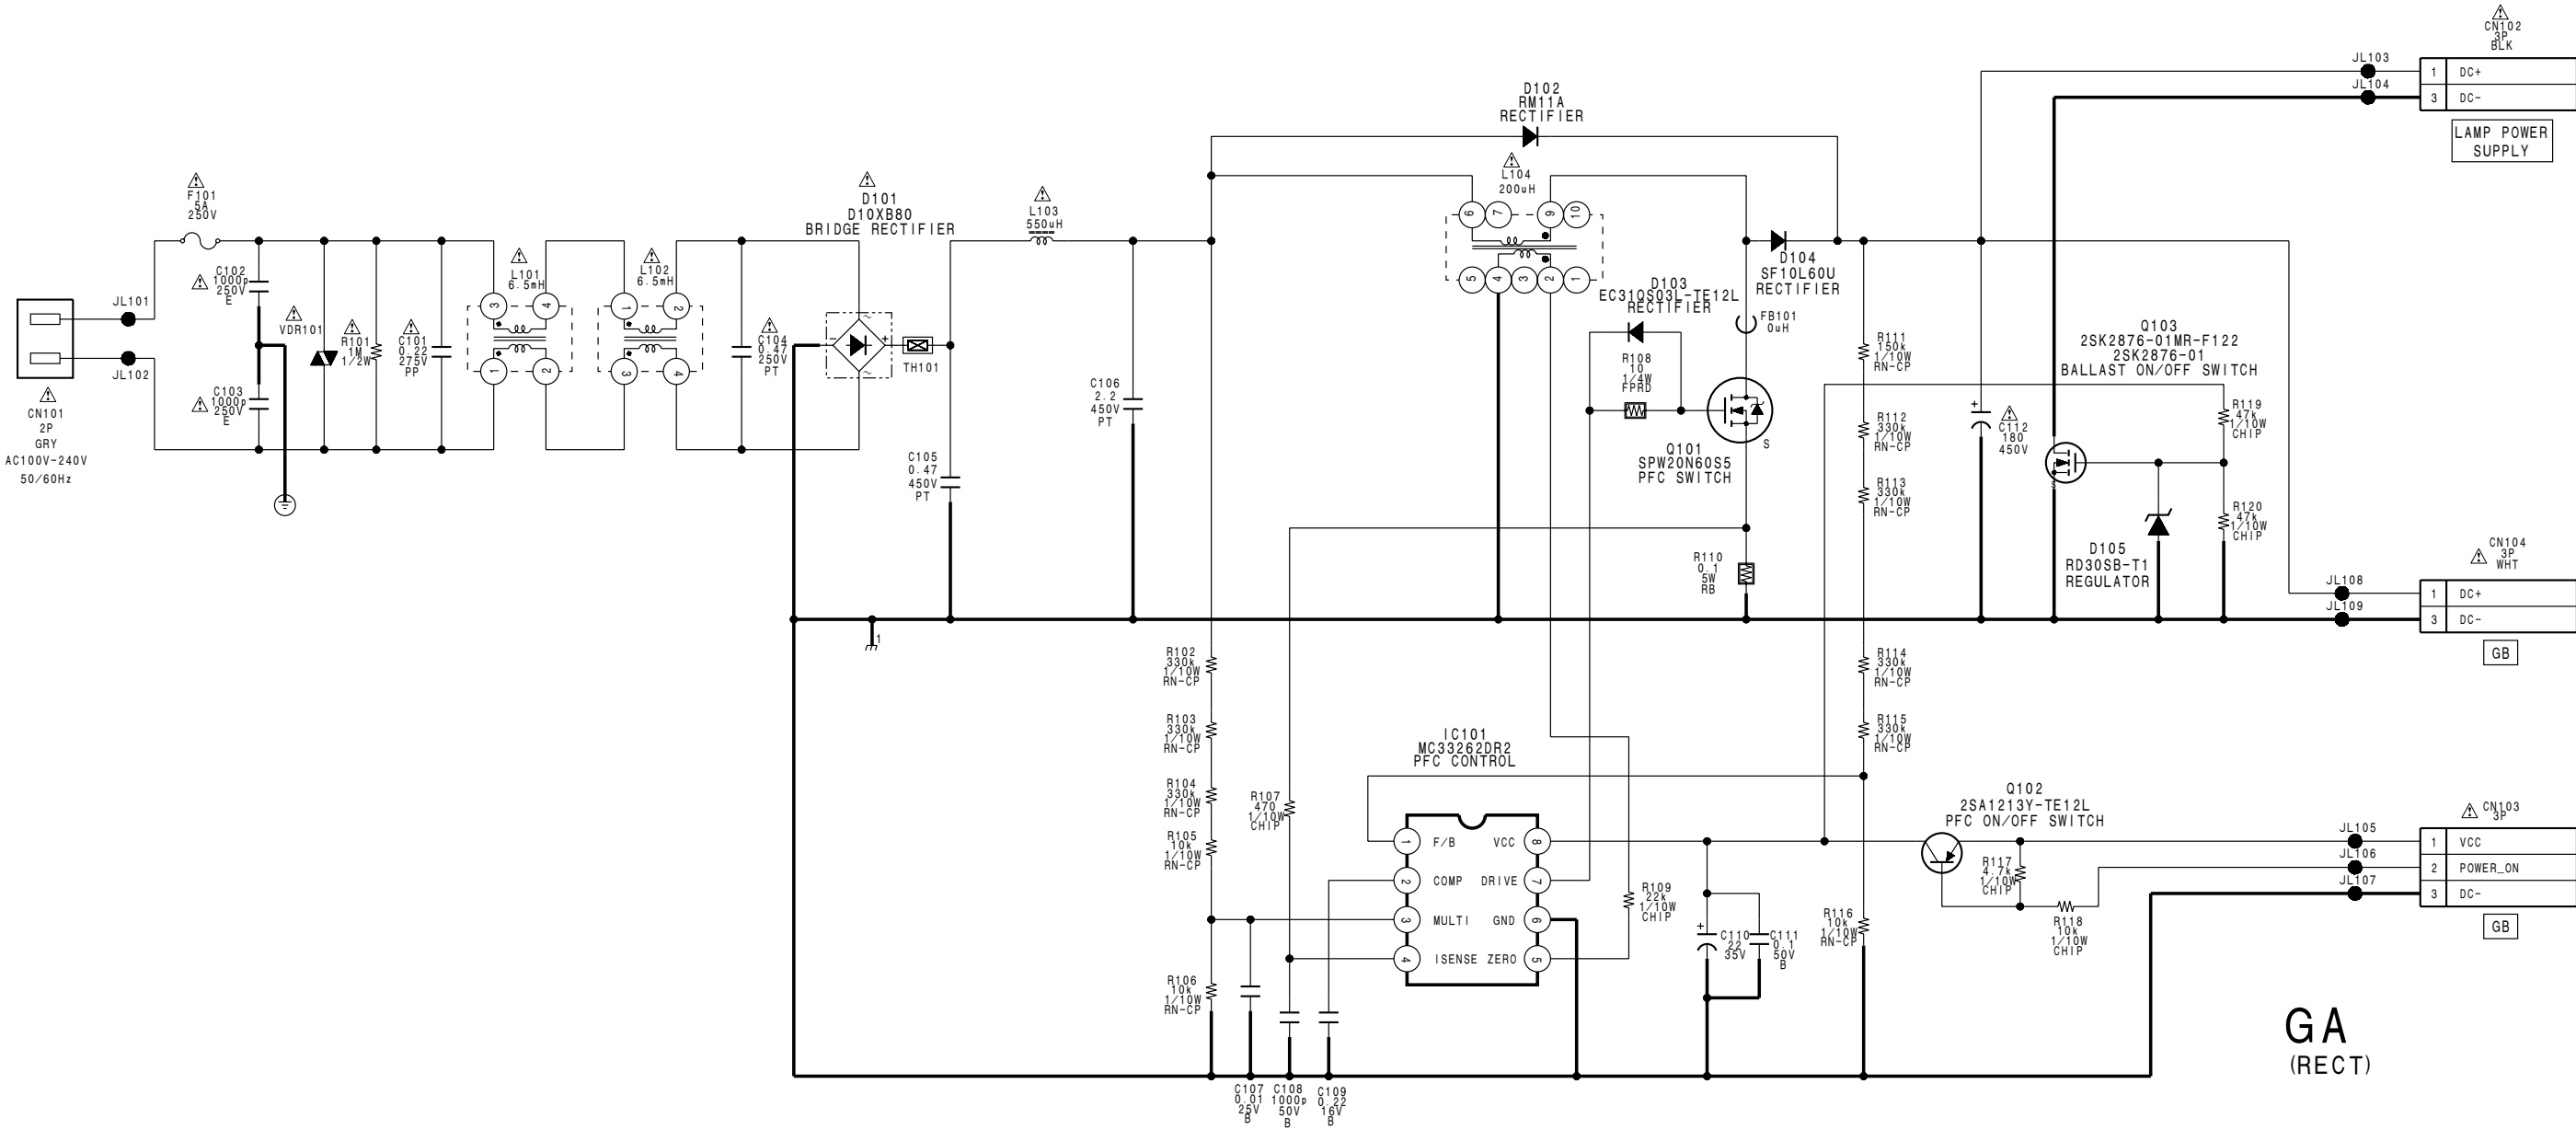


GA
(RECT)

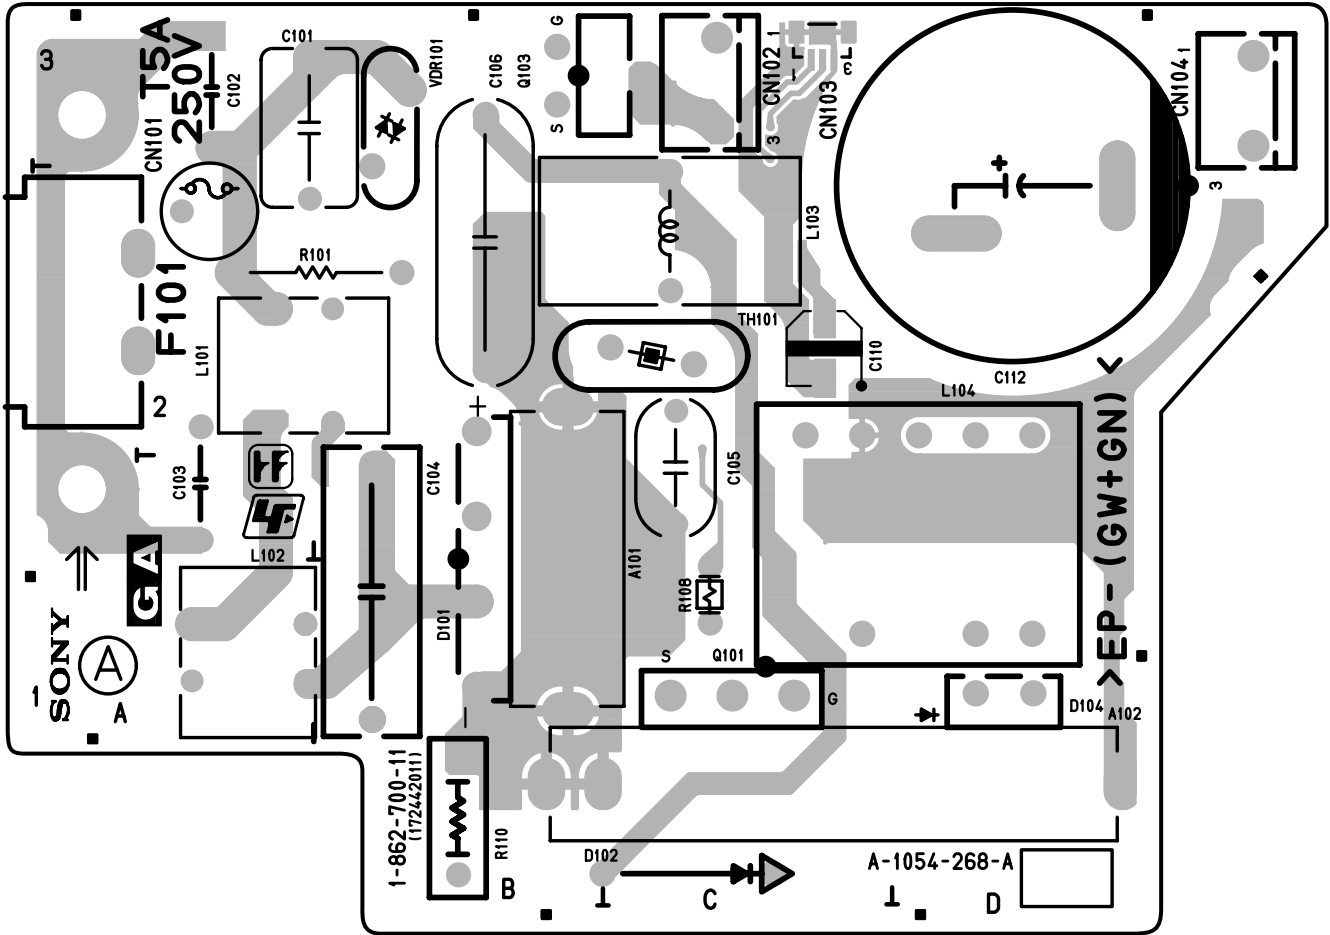


GA -A SIDE-
SUFFIX: -11

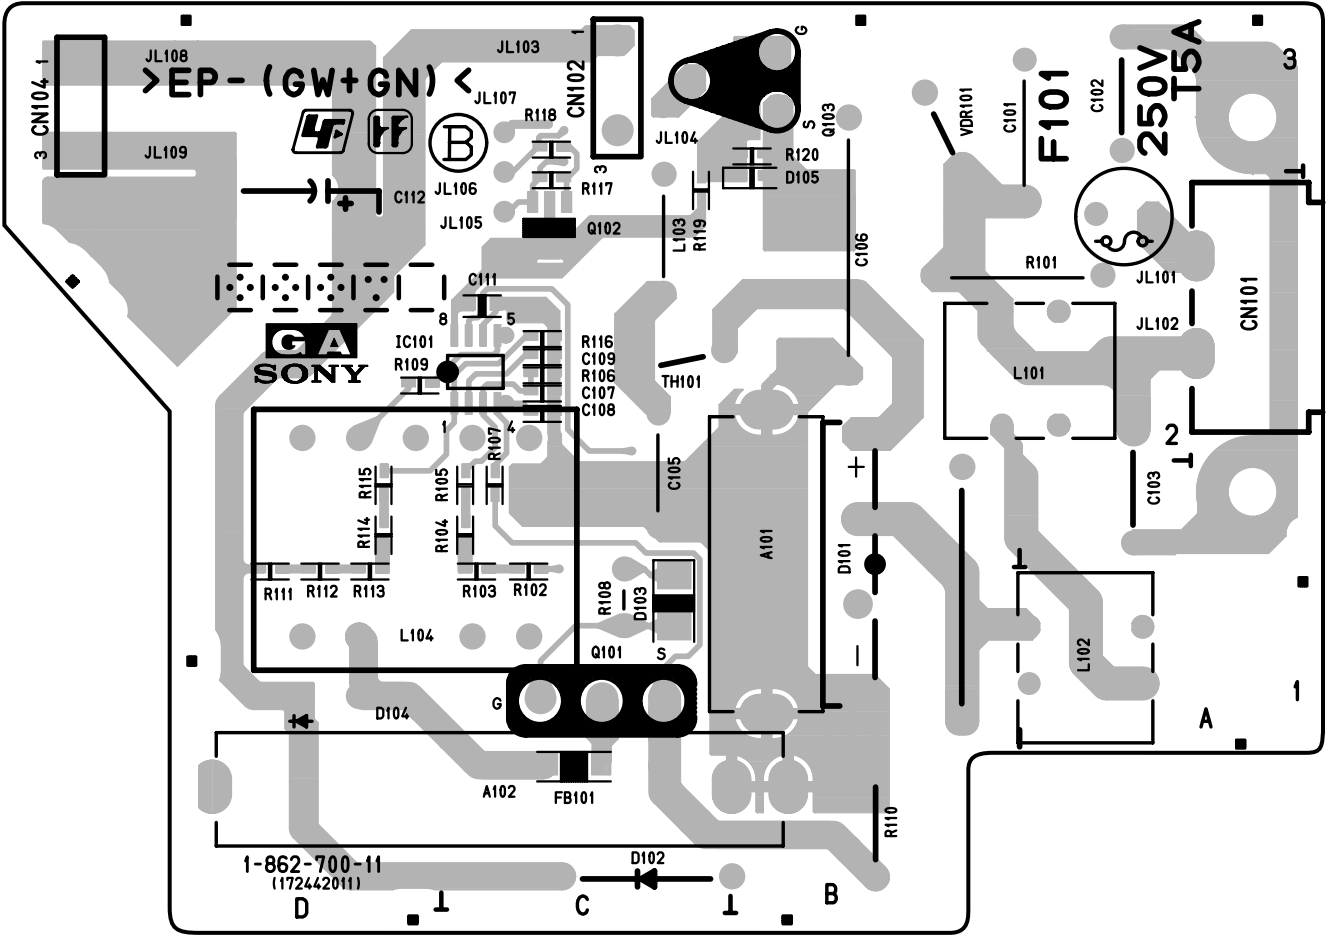

GA -B SIDE-
SUFFIX: -11

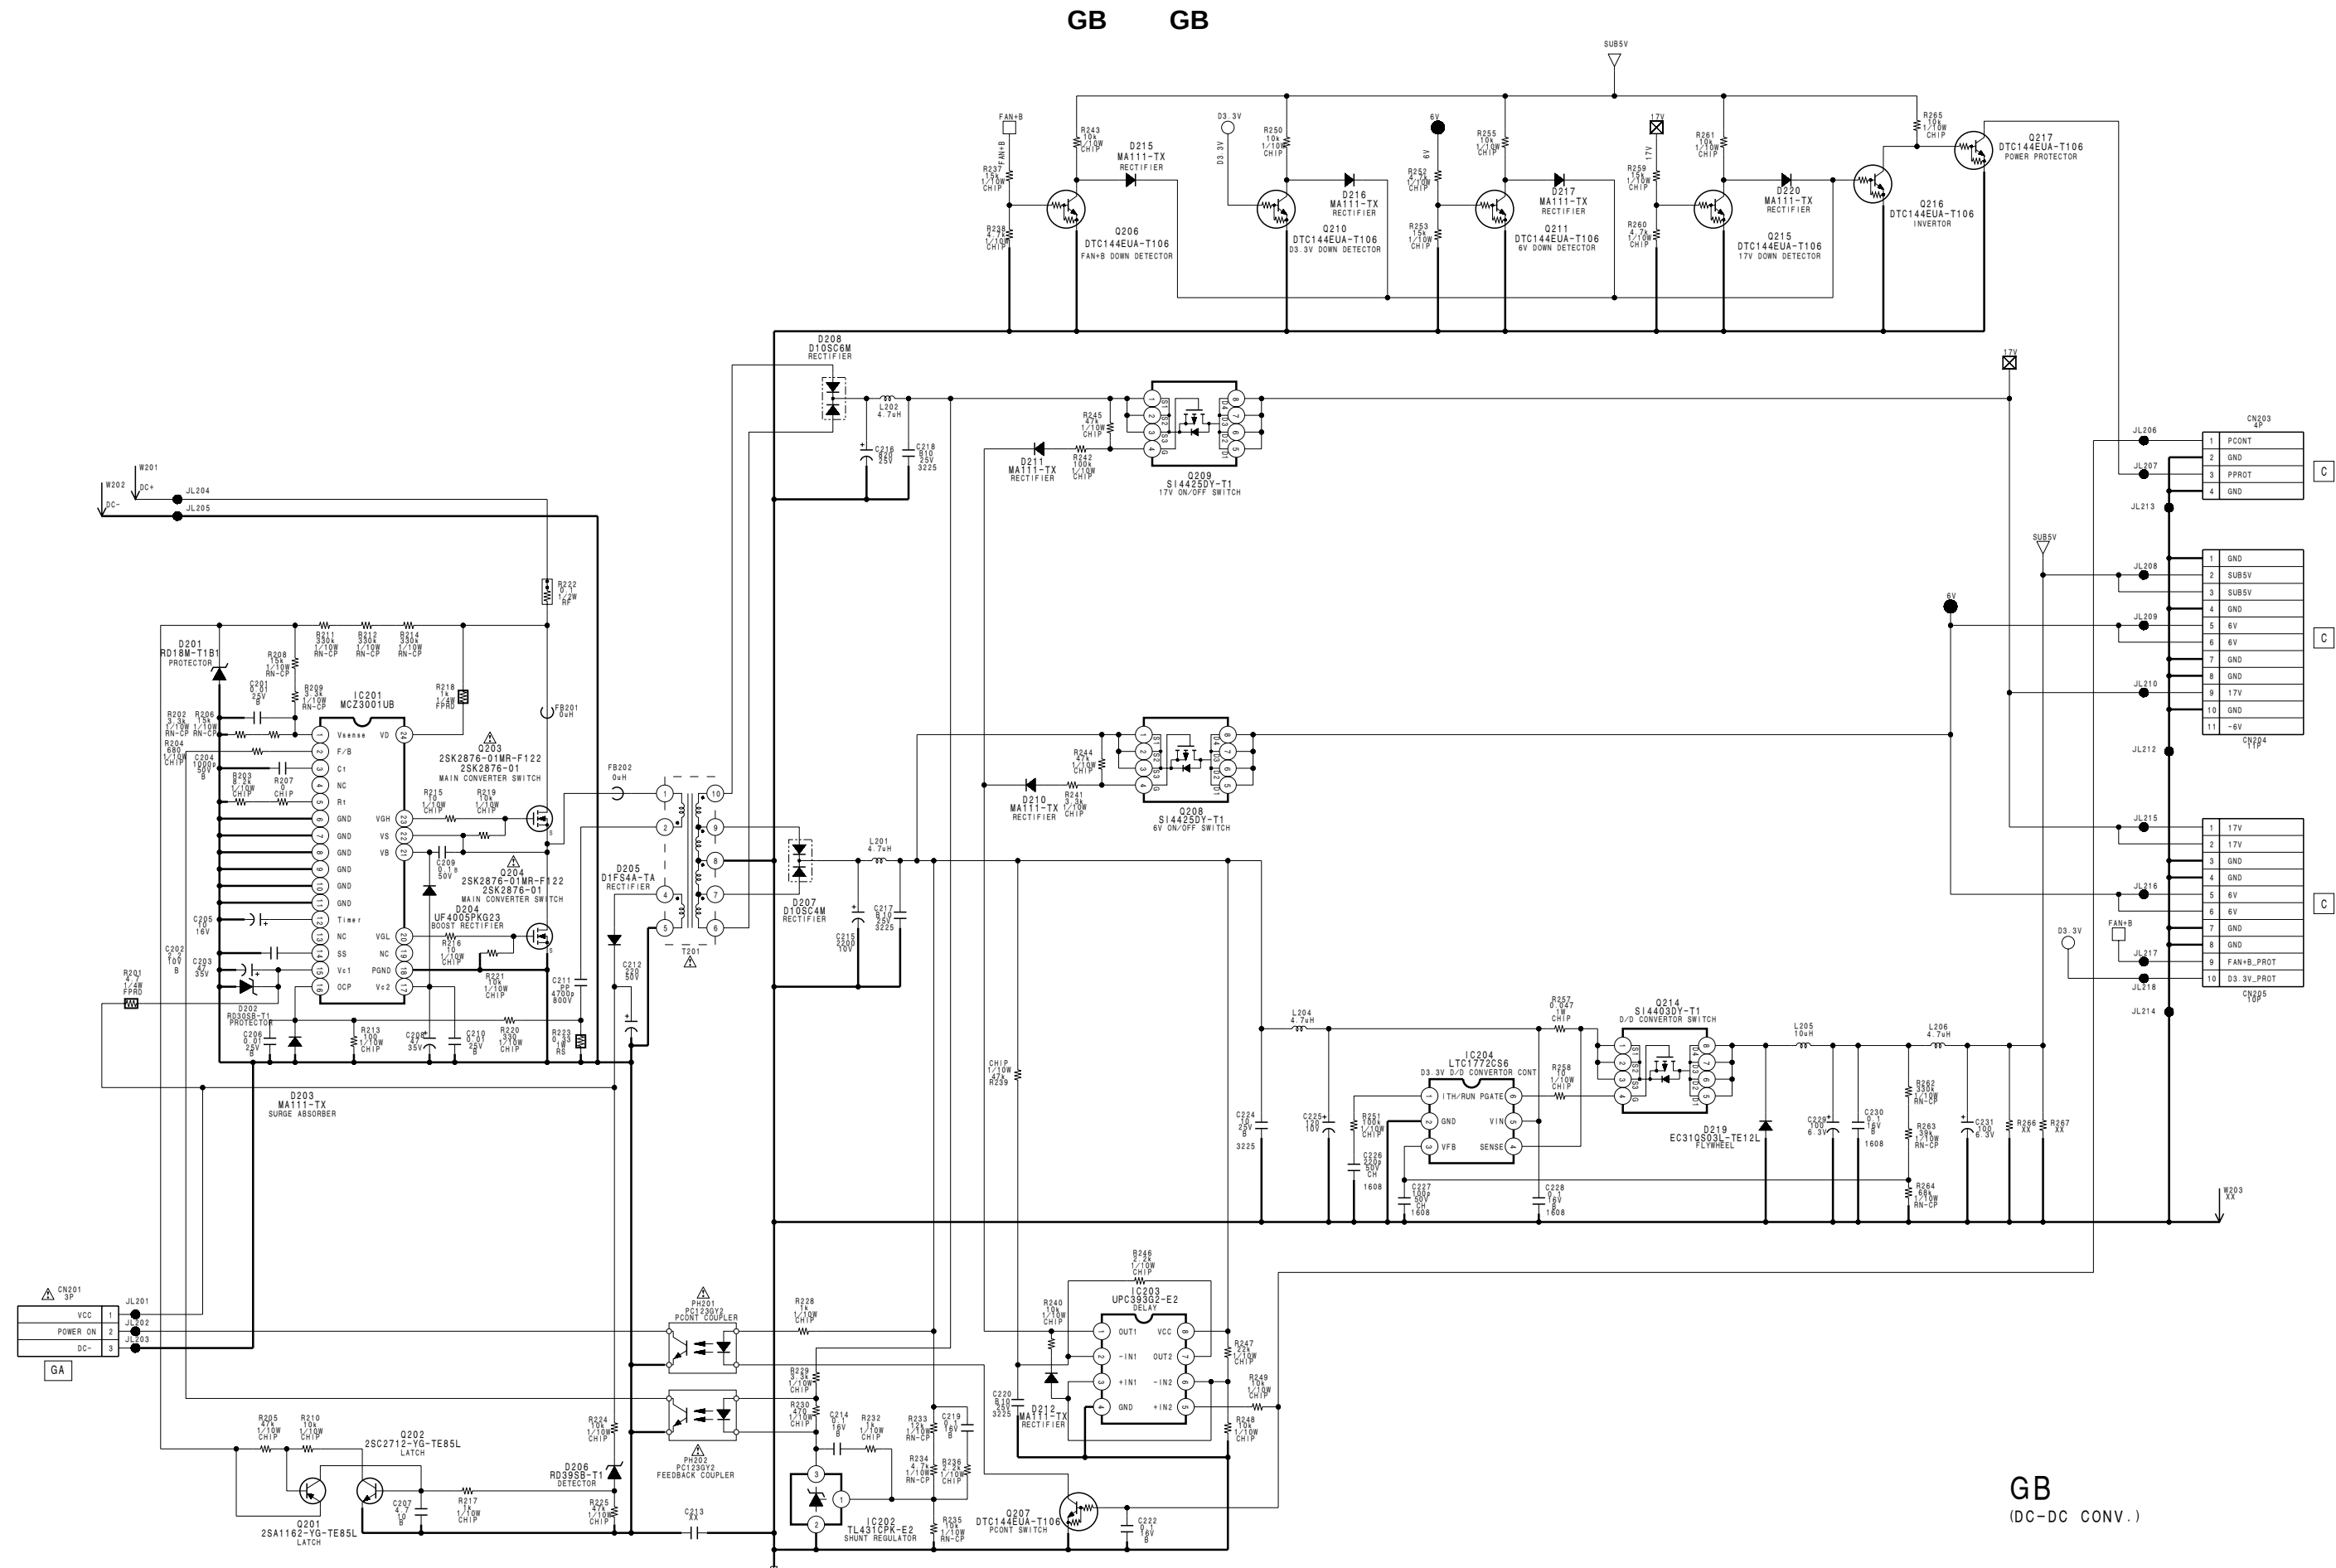

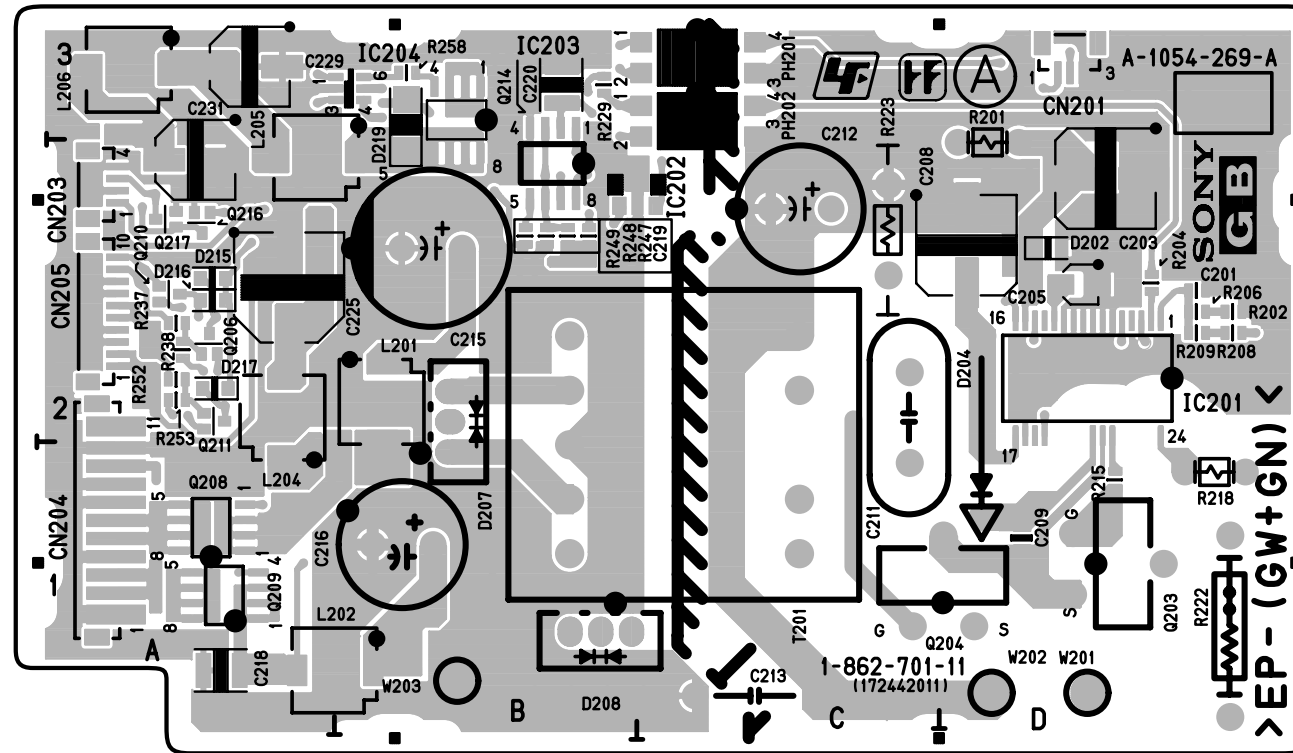


GB -A SIDE-
SUFFIX: -11

GB BOARD

* : B SIDE

D201	* D-2
D202	D-2
D203	* D-2
D204	D-2
D205	* C-2
D206	* D-2
D207	B-2
D208	B-1
D210	* A-1
D211	* A-1
D212	* B-2
D215	A-2
D216	A-2
D217	A-2
D219	B-3
D220	* A-2
IC201	D-2
IC202	B-2
IC203	B-2
IC204	B-3
PH201	C-3
PH202	C-3
Q201	* D-2
Q202	* D-3
Q203	D-1
Q204	C-1
Q206	A-2
Q207	* B-3
Q208	A-1
Q209	A-1
Q210	A-2
Q211	A-2
Q214	B-3
Q215	* A-2
Q216	A-2
Q217	A-2

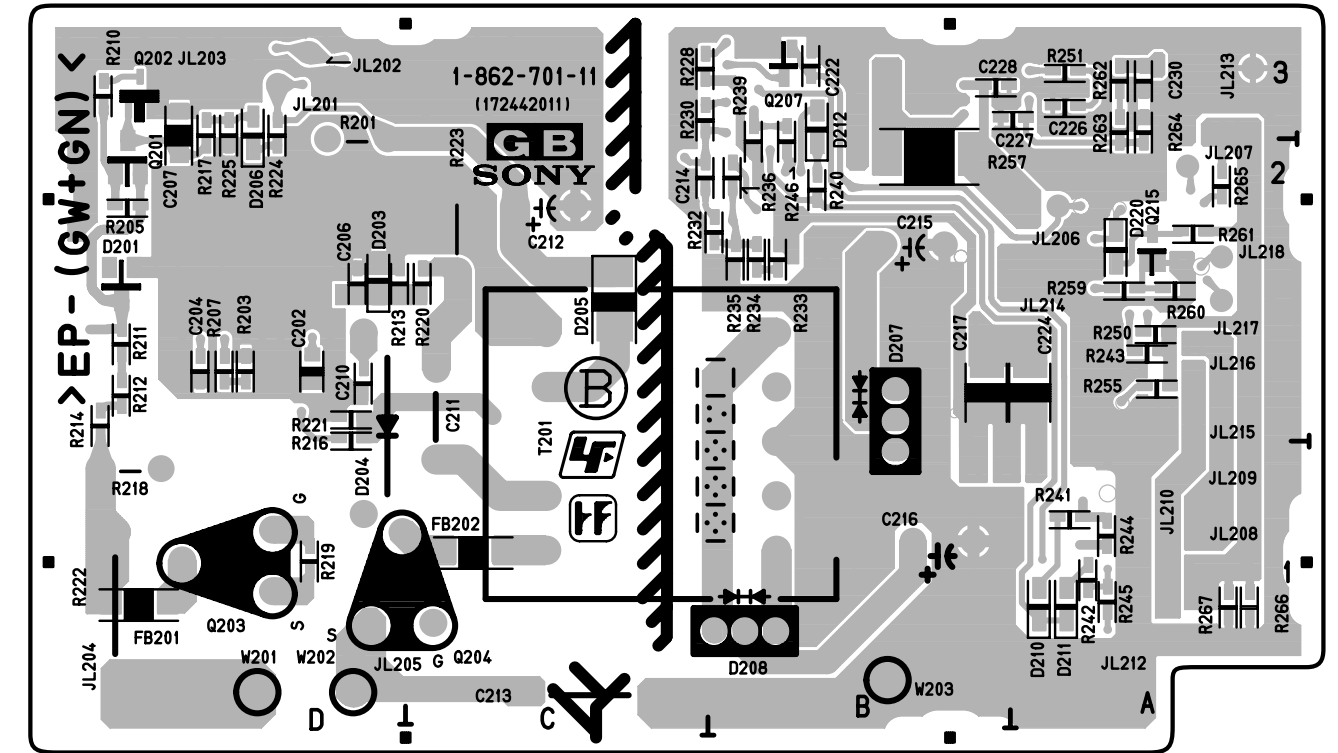

GB -B SIDE-
SUFFIX: -11


1

2

3

4


5

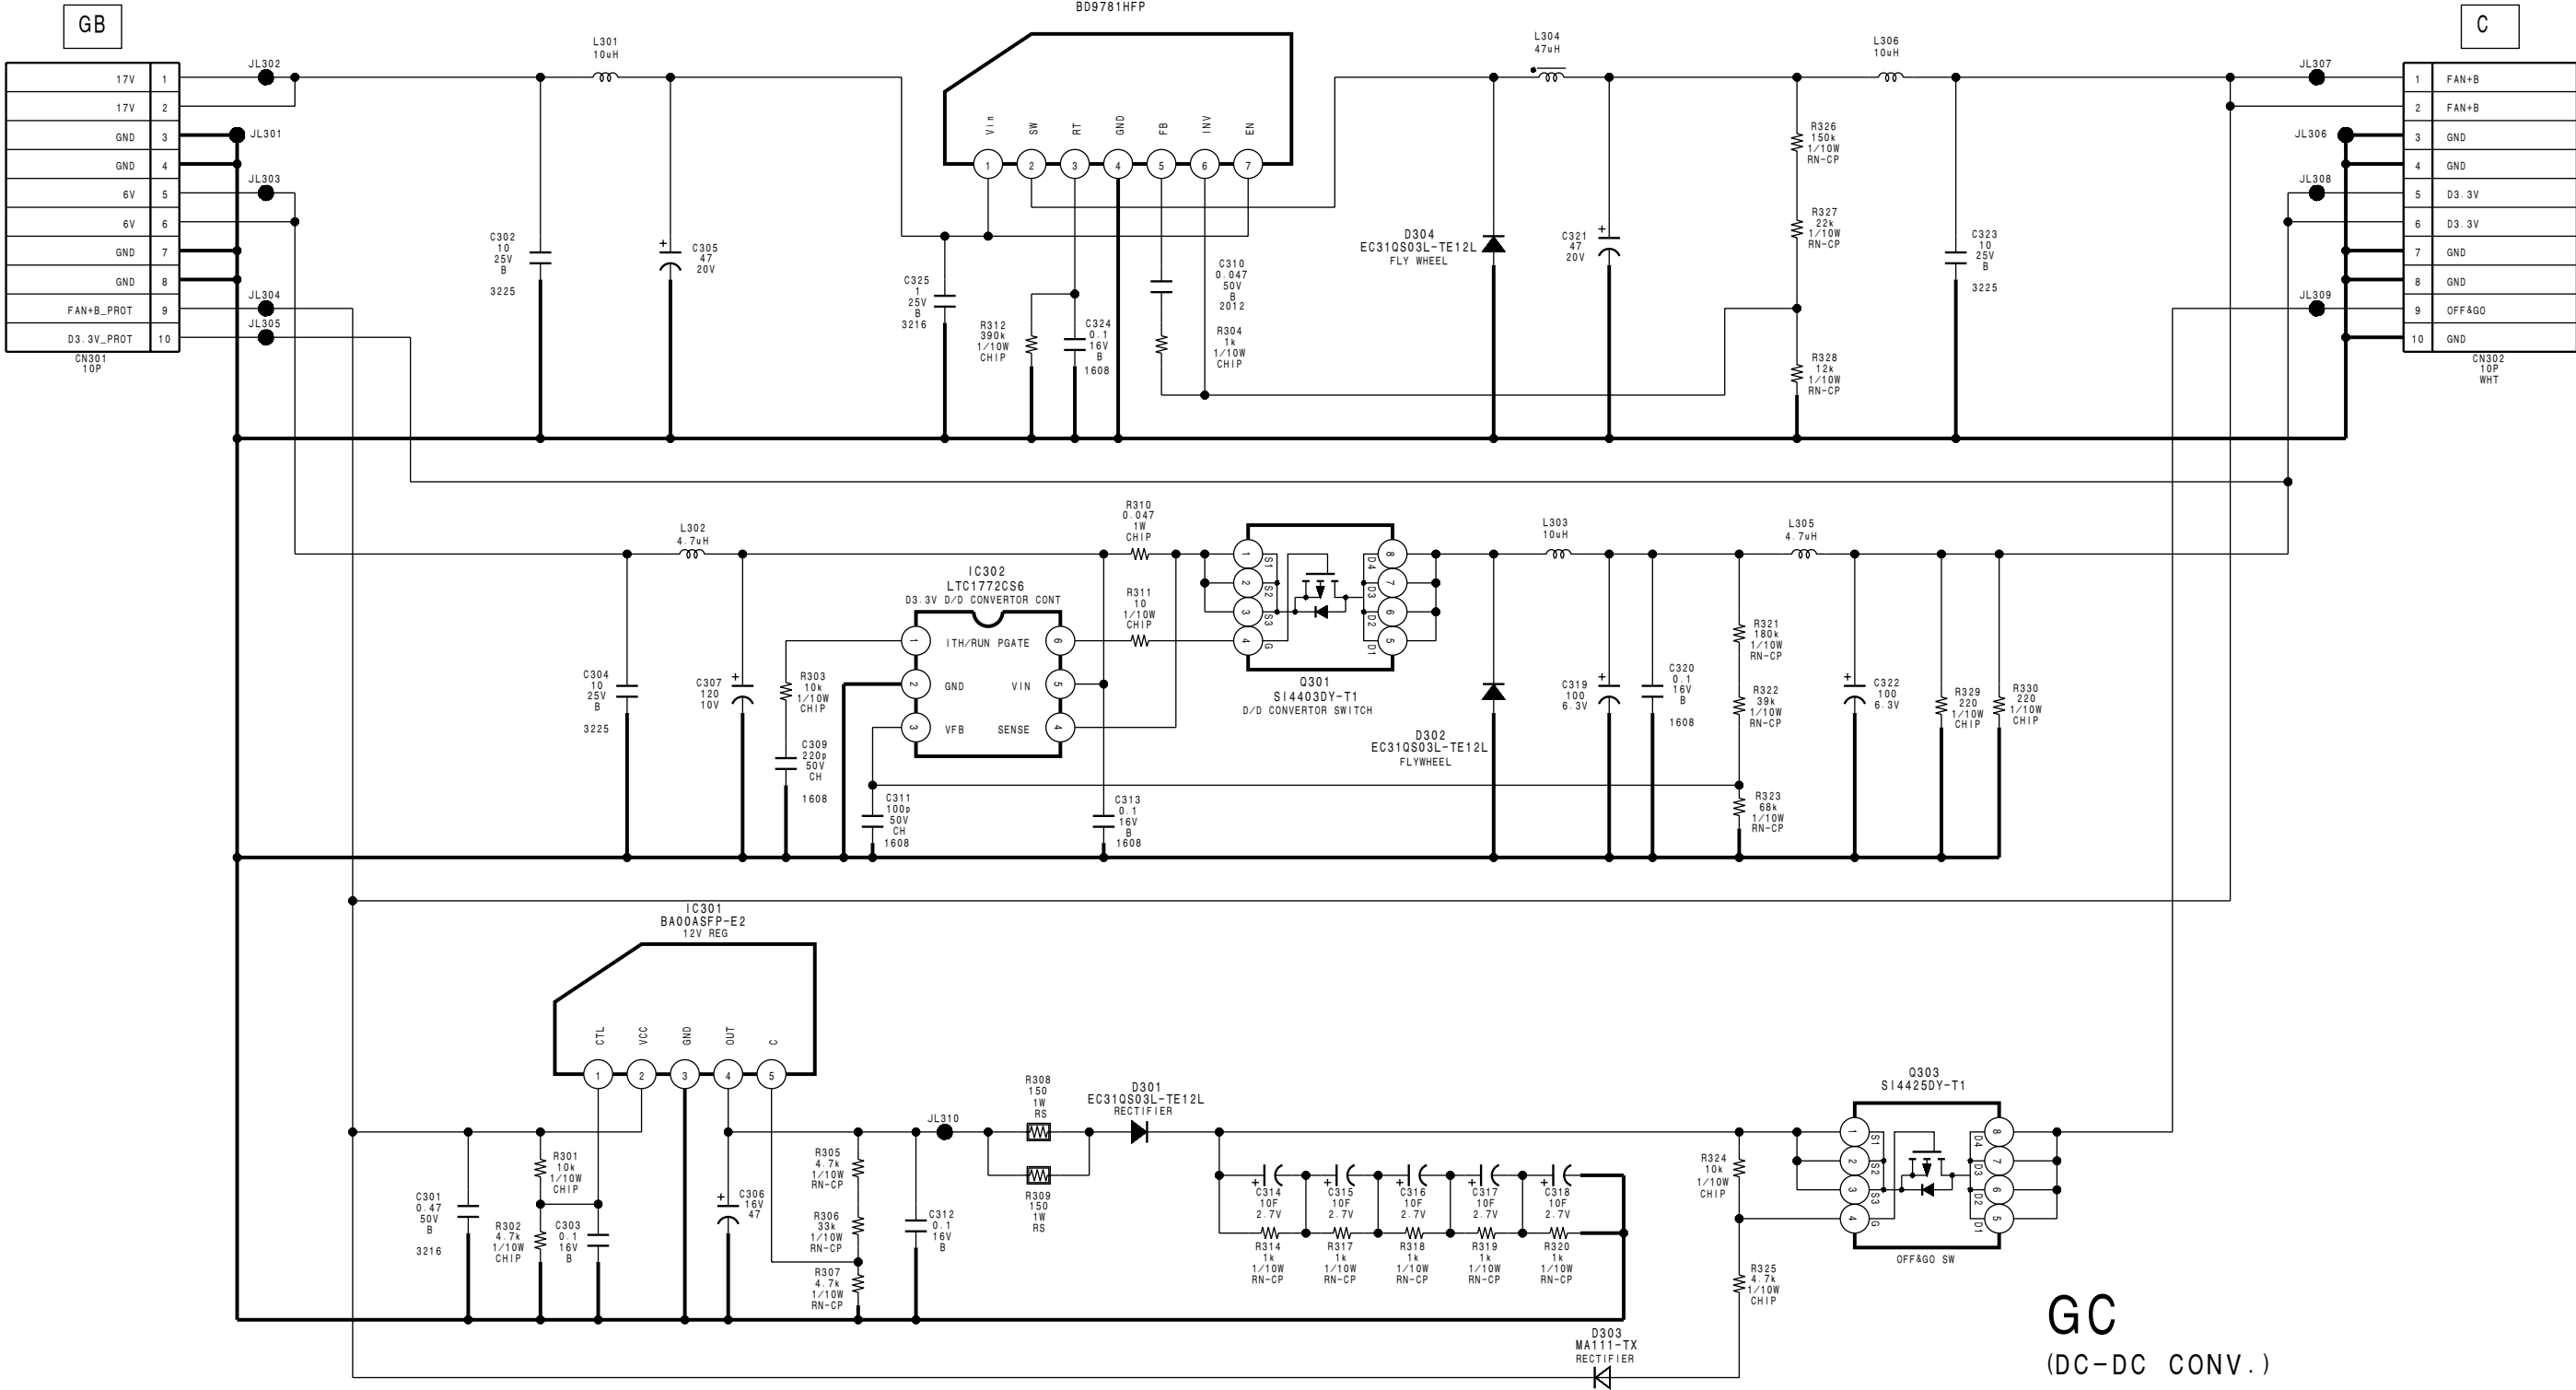


GC
(DC-DC CONV.)




GA MC33262DR2 (IC101)

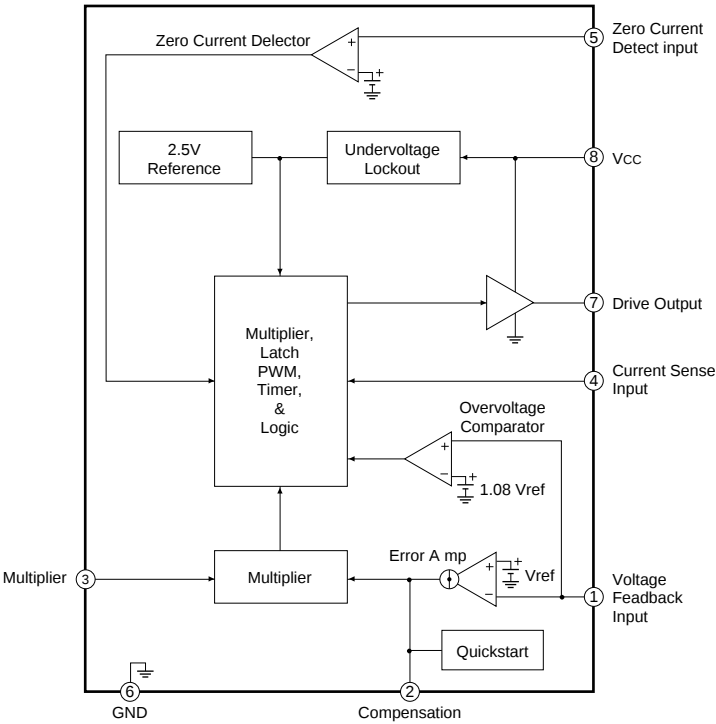

GB MCZ3001UB (IC201)

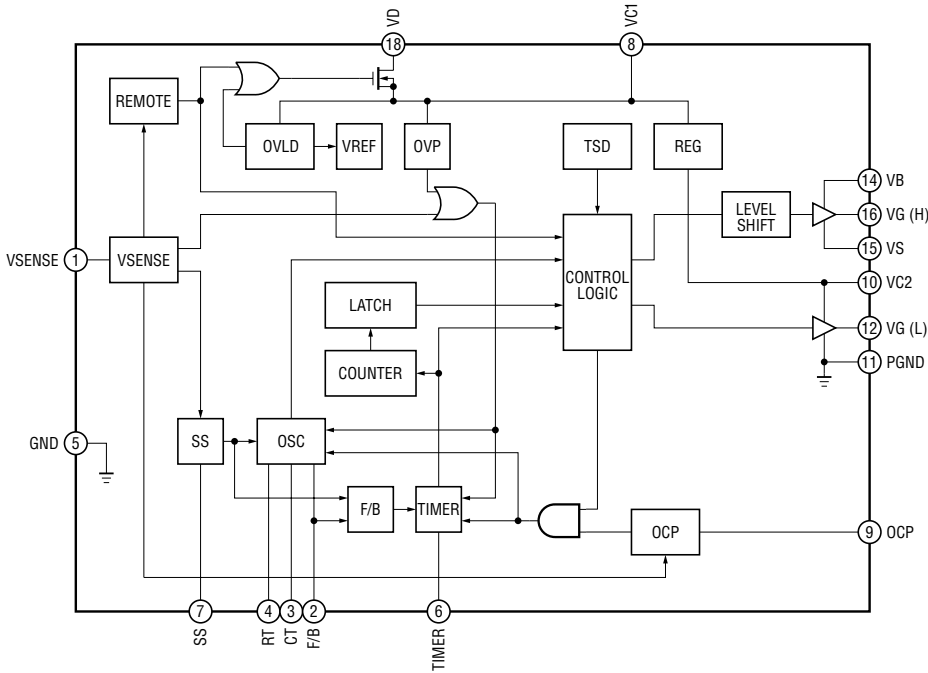

GB UPC393G2-E2 (IC203)

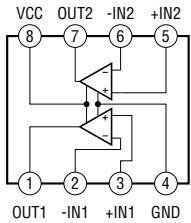

SAFETY CHECK-OUT


After correcting the original service problem, perform the following safety checks before releasing the set to the customer :

Check the metal trim, “metallized” knobs, screws, and all other exposed metal parts for AC leakage. Check leakage as described below.

LEAKAGE TEST

The AC leakage from any exposed metal part to earth ground and from all exposed metal parts to any exposed metal part having a return to chassis, must not exceed 0.5 mA. Leakage current can be measured by any one of three methods.

1. A commercial leakage tester, such as the Simpson 229 or RCA WT-540A. Follow the manufacturers' instructions to use these instruments.
2. A battery-operated AC milliammeter. The Data Precision 245 digital multimeter is suitable for this job.
3. Measuring the voltage drop across a resistor by means of a VOM or battery-operated AC voltmeter. The “limit” indication is 0.75 V, so analog meters must have an accurate low-voltage scale. The Simpson 250 and Sanwa SH-63Trd are examples of a passive VOM that is suitable. Nearly all battery operated digital multimeters that have a 2 V AC range are suitable. (See Fig. A)

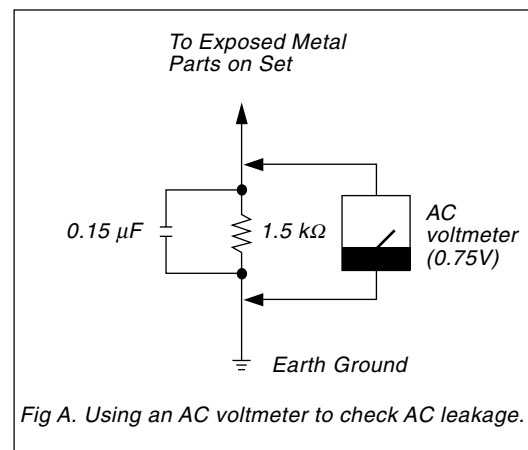

VPL-CX70 (SY)
VPL-CX75 (SY) E
9-878-402-01

Sony Corporation
B&P Company

Printed in Japan
2004. 7 16
©2004