



# HONDA


## INSTALLATION INSTRUCTIONS

Accessory  
**BACK UP ALARM**  
**P/N 08V70-HL5-A00**  
**BACK UP ALARM HARNESS**  
**P/N 08V71-HL5-A00**

Application  
**SXS500M2**

Publication No.  
**MII 14948**  
 Issue Date  
**July 2014**

### PARTS LIST

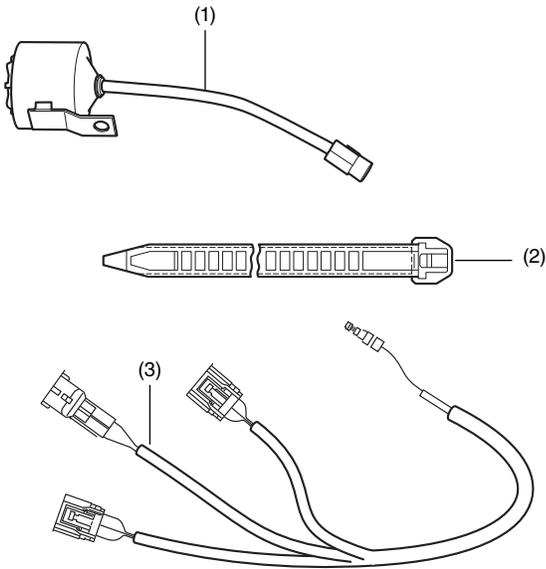


No.	Description	Qty
(1)	Back up alarm	1
(2)	Wire tie short	14
(3)	Back up alarm harness (sold separately)	1

#### ACCESSORY SUB-HARNESS

Sold separately P/N 08Z08-HL5-A00

The Accessory Sub-Harness is required for the installation of this accessory.

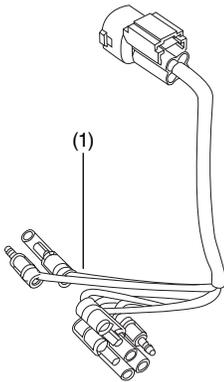

No.	Description	Qty
(1)	Accessory sub-harness	1

### TOOLS AND SUPPLIES REQUIRED

Scissors

### TORQUE CHART

Tighten all screws bolts, and nuts to their specified torque values. Refer to the Service Manual for the torque values of the removed parts.


### USE AND CARE INFORMATION

Check accessory mounts frequently and retighten if necessary. Trim all excess material on wire ties no shorter than 5 mm.



### INSTALLATION

- Refer to the Service Manual for the vehicle and remove the following components in the following order:
  - Rear fender/carrier/center cover as an assembly.
  - Battery cover
  - Air cleaner housing
  - Seat (cushion and backrest)
  - Seat bottom cover (right and left)
  - Seat rear cover
  - Rear floor cover
  - Front floor plate
  - Front hood
- Refer to the Service Manual for the vehicle and disconnect negative (-) battery cable.

- Install and connect the back up alarm harness between the two halves of the gear position switch connector as shown.

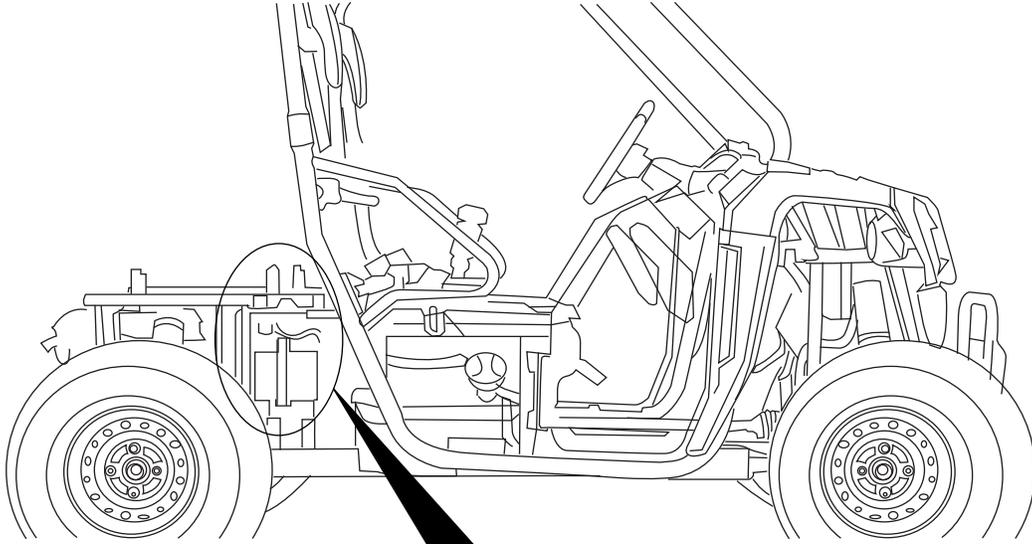




**Back up alarm harness connection:**

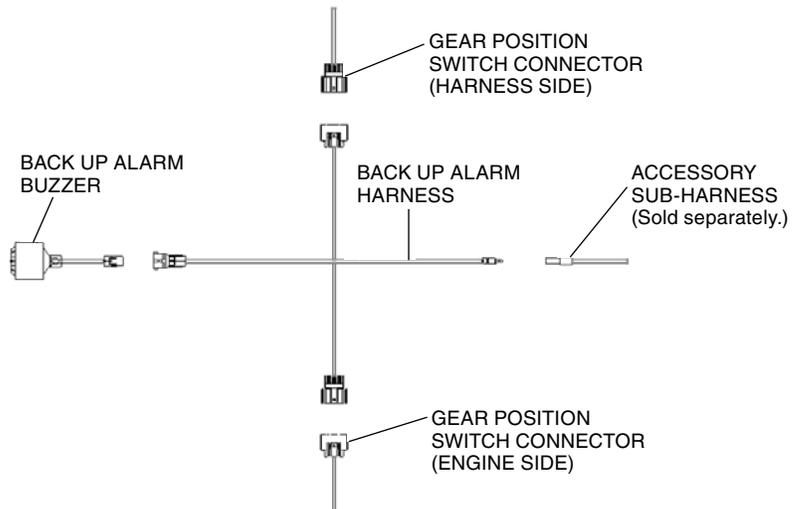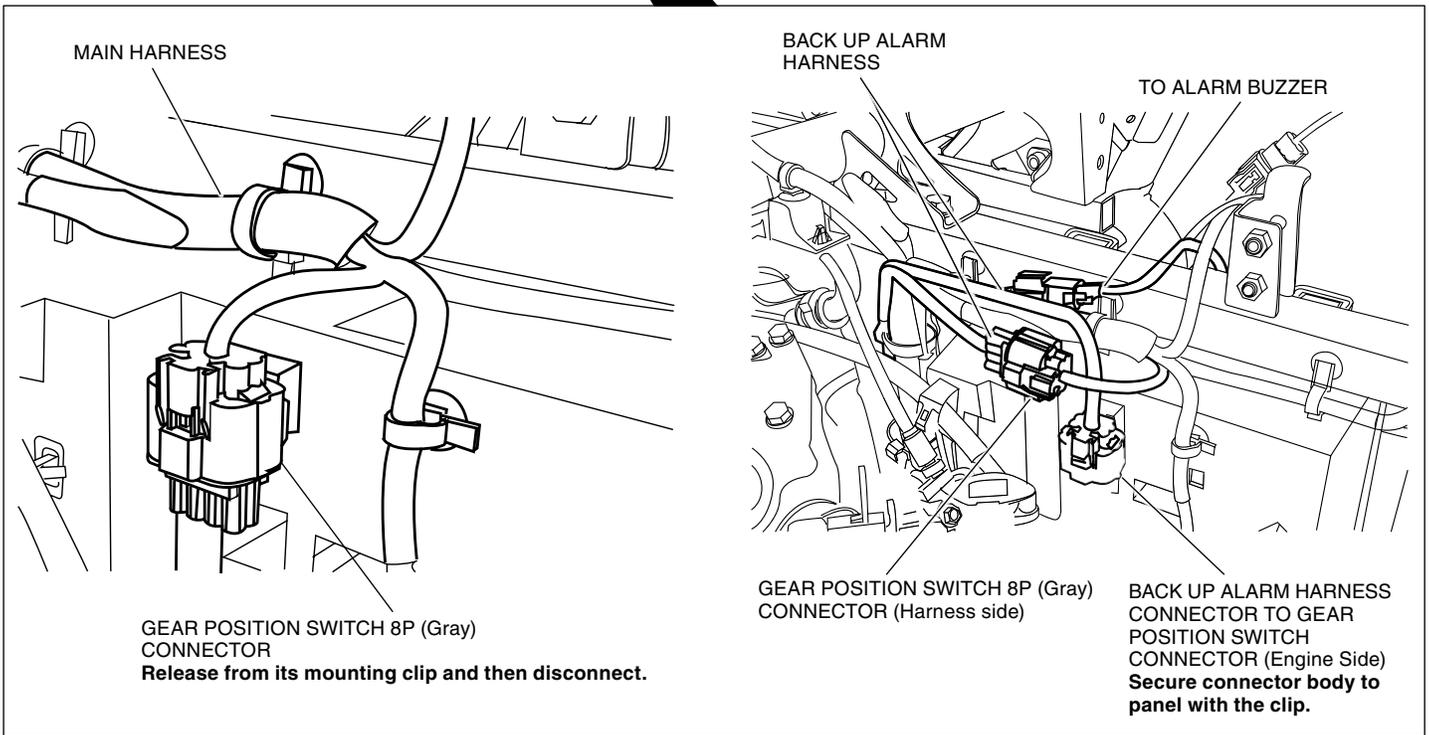


4. Follow the main harness down. Secure the back up alarm harness to the main harness with wire ties near the back of the engine, under the passenger seat as shown.

**NOTE:**

Secure the alarm harness only to the main harness. Do not wire tie any control cables.

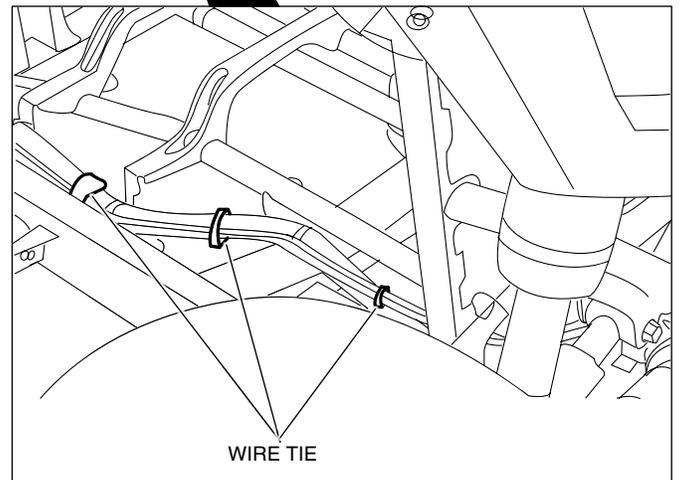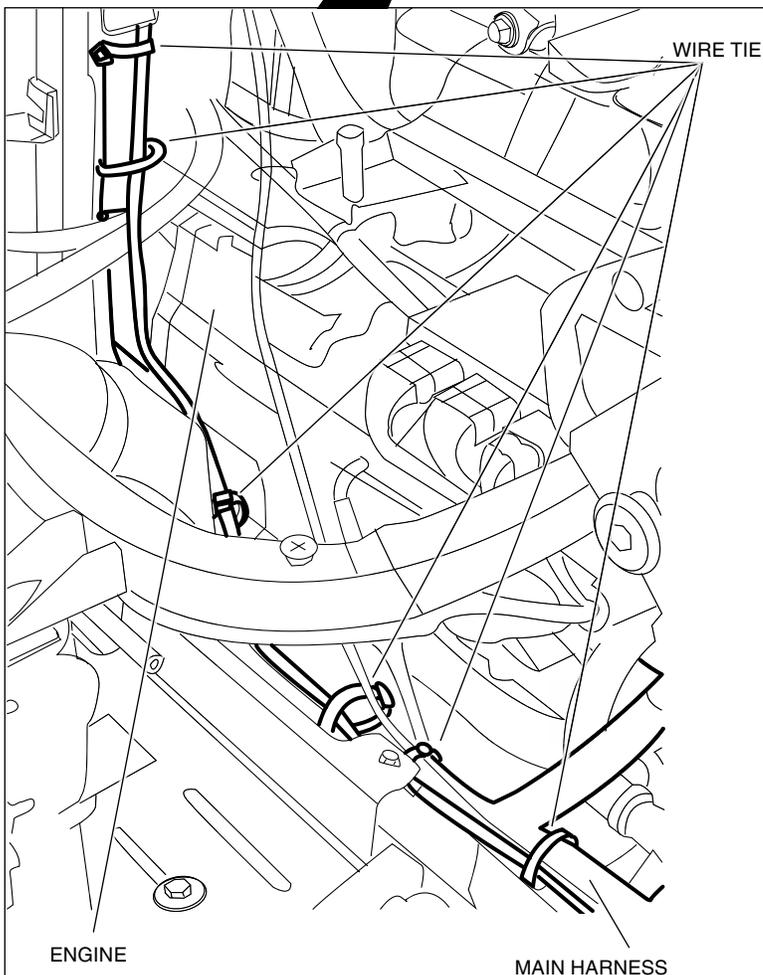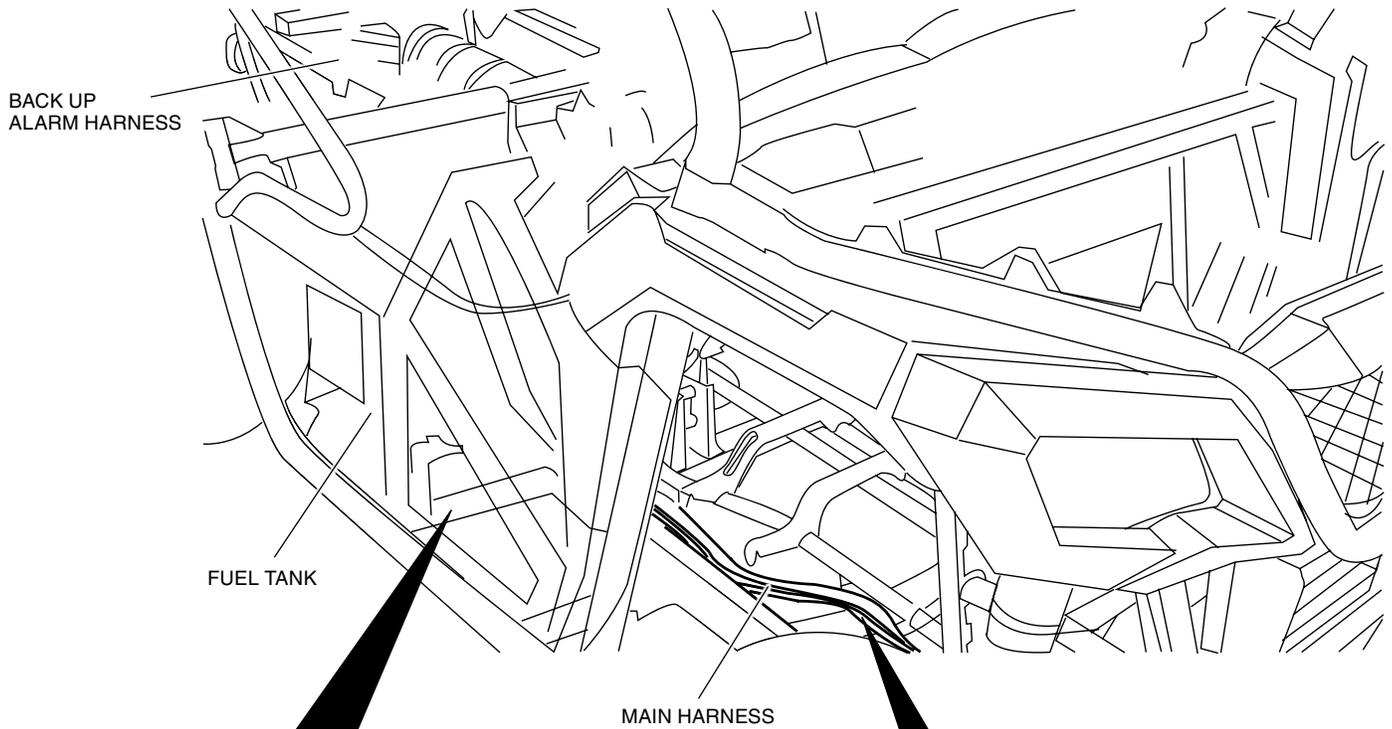


5. Follow the main harness going up. Secure the back up alarm harness to the main harness with wire ties along the front right side of the vehicle as shown.

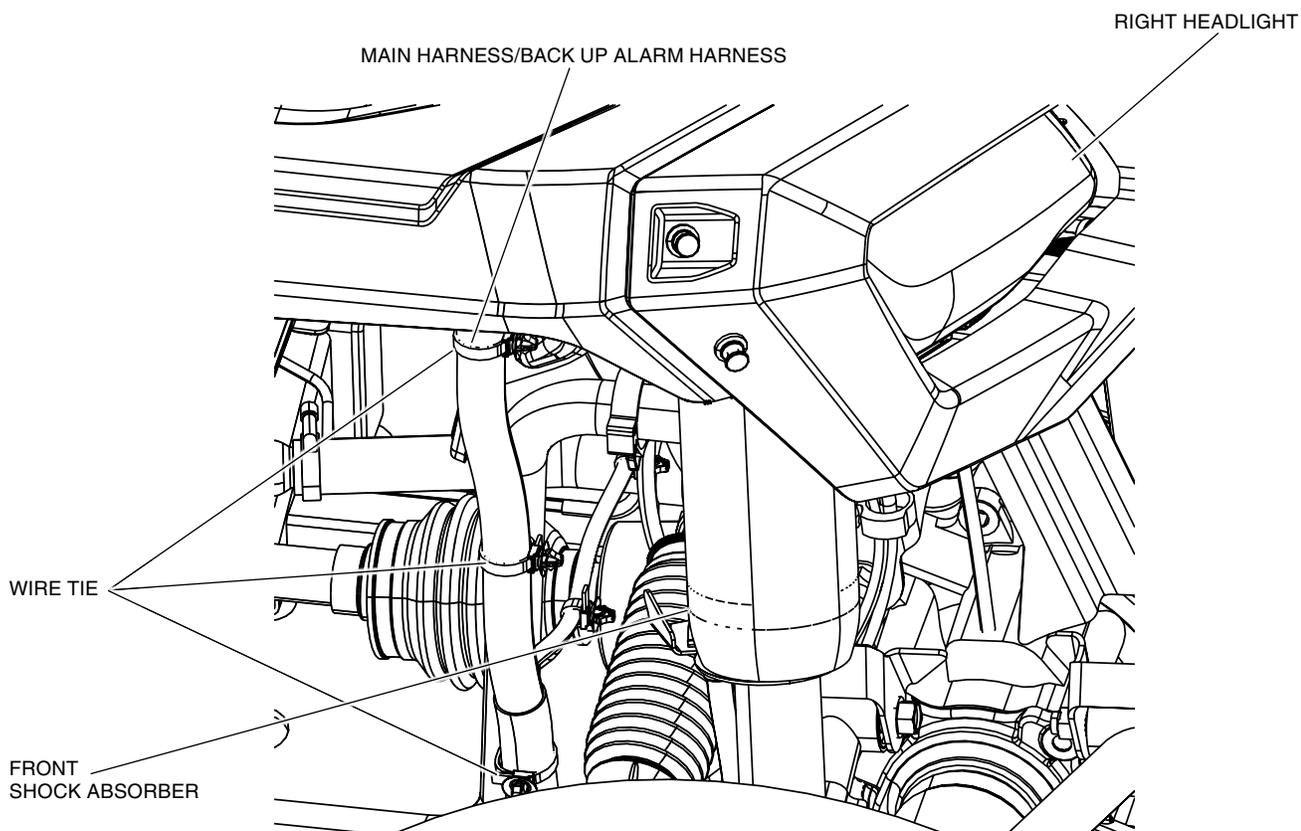



6. Locate the DLC (4P Red) connector and remove the dummy cap. Be sure to leave the black tape around the connector body (harness side).

<VIEW UNDER FRONT HOOD>

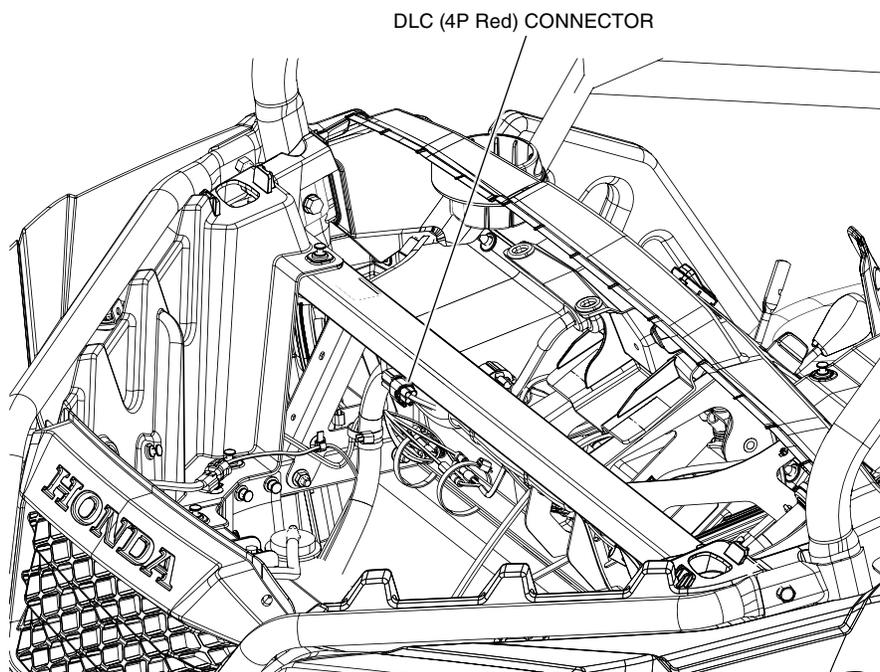



7. Connect the accessory sub-harness to the DLC (4P Red) connector.  
 Connect the back up alarm harness to the red tape wire of the accessory sub-harness as shown.
- Note that only one connector of the accessory sub-harness is used for the back up alarm, the remaining connectors are for other accessories.
- Secure any excess harness to the frame with wire ties.

<VIEW UNDER FRONT HOOD>

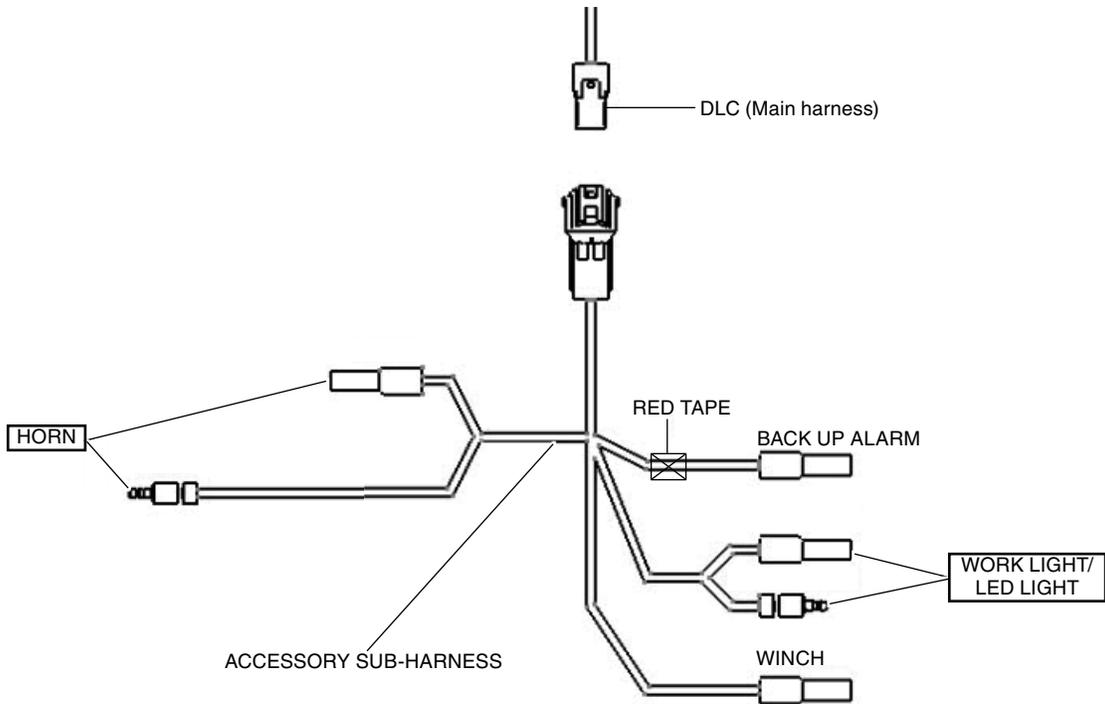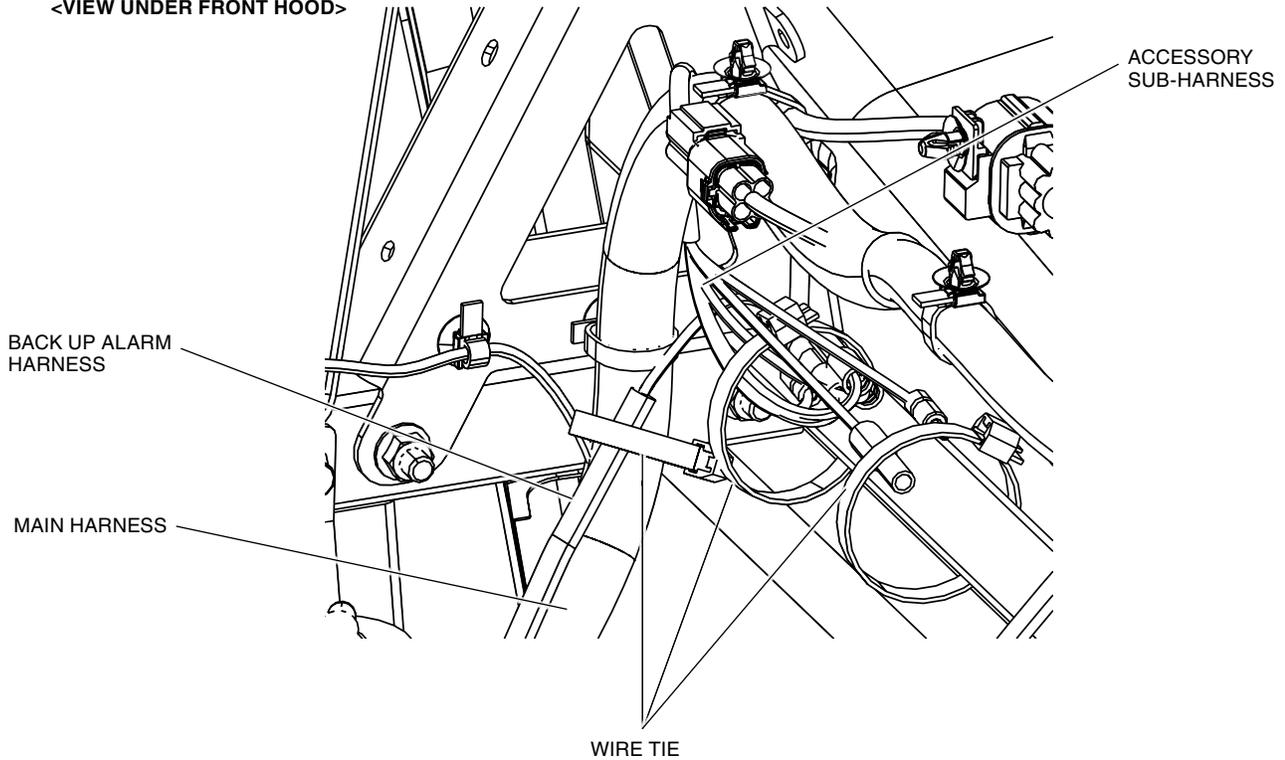

8. Install the back up alarm buzzer to the location shown:

**Back up alarm buzzer installation:**

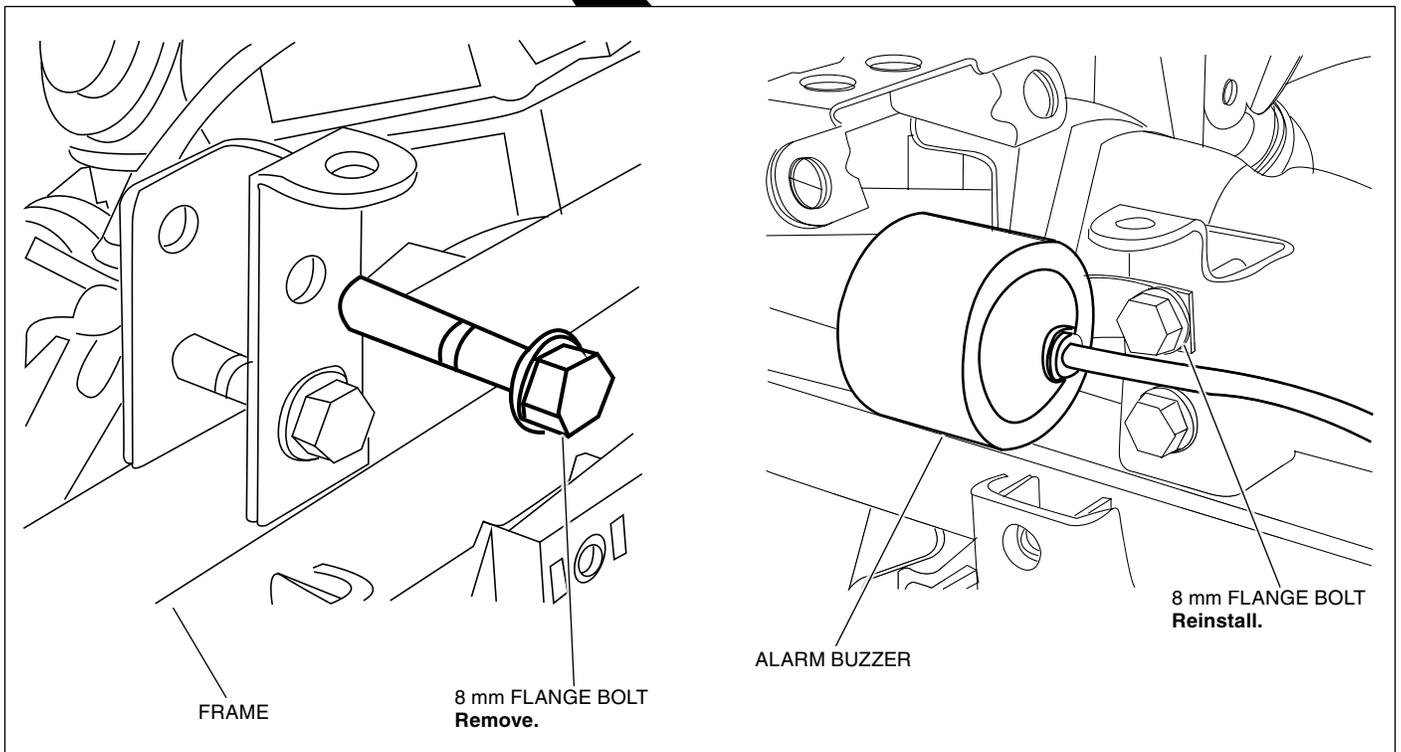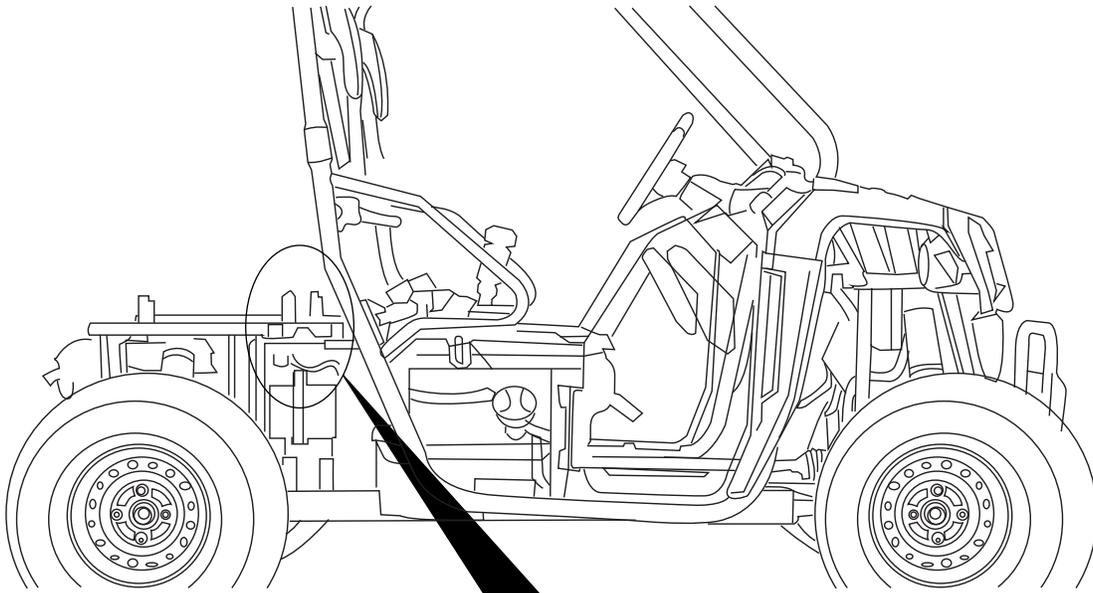

9. Connect the back up alarm buzzer connector to the back up alarm harness.
10. Reconnect the negative (-) battery cable.
11. Start the engine and then select reverse to confirm the performance of the back up alarm.
  - Troubleshoot any problems if necessary.
12. Refer to the Service Manual, reinstall the removed vehicle parts in the reverse order of removal.