

GENERAL PURPOSE ENGINE

GX390UT1
GX390RT1

PARTS CATALOGUE

3



GX390UT1

FOREWORD INDEX

1

ENGINE GROUP

2

PART NUMBER INDEX

3

PART NAME INDEX

4

Instruction for use of parts catalogue

- **This parts catalogue was prepared based on the latest information available as of February 10, 2009.**
- See the parts catalogue news for any revision that is made after February 10, 2009.
- **Always specify the part number when ordering a part.**
- Check the model, type, serial numbers, color, maker, and the size as needed before ordering a part.
- Note that the illustrations (part drawings) can differ from the actual parts in shape.
They are given just to help you to refer to the parts.
- **When modifications or additions to this parts catalogue are made, a revised edition will be issued at an appropriate time, with successively progressing revision numbers on the cover. We recommend obtaining such revisions in order to keep your parts catalogue up-to-date at all times. To check whether a parts catalogue revision has been issued, please contact your Honda distributor.**


Initial version issue date June 20, 2005
Honda Motor Co., Ltd.

CONTENTS

	Page	Address No.
● Instruction for use of parts catalogue	1	B 1
● How to refer to the part information	2	B 2
● Part catalogue structure	3	B 3
● When the parts were revised	4	B 4
● Abbreviations used in the parts catalogue	4	B 4
● How to check the part block and serial numbers	5	B 5
● Models, parts catalogue codes and applicable serial numbers	6	B 6
● Features of each type	10	B10
● Fuel hose, general purpose hoses and vinyl hose	19	C 3
● FLAT RATE SERVICE TIME	20	C 4
● Illustrated index	25	C 9
● ENGINE GROUP	29	D 1
● PART NO. INDEX	104	I 1
● PART NAME INDEX	107	J 1

How to refer to the part information

A Reference with "Illustrated index"

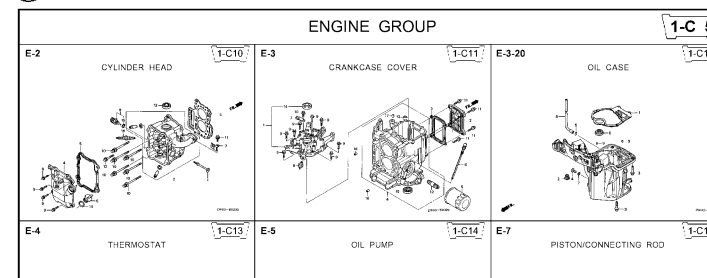

B Reference with "Part number index"

PART NO. INDEX			
Part Number	Address	Page	Ref.
06000			
06316-ZW9-000	1-69	88	1
11000			
11300-ZW9-405	1-C11	27	1
11300-ZW9-406	1-C11	27	1
11340-ZW9-000	1-C11	27	2
11342-ZW9-000	1-C11	27	3
11381-ZW9-003	1-C12	28	1
12000			
12000-ZW9-405ZA	1-C11	27	4
12155-ZV4-A00	1-C13	29	1
12166-ZW9-000	1-C10	26	1
12209-GB4-681	1-C16	32	1
12210-ZW9-405ZA	1-C10	26	2
12216-ZE2-300	1-E8	55	1
	1-E11	58	1
15212-ZW9-000	1-C14	30	
15220-ZW9-003	1-C14	30	
15332-ZW9-000	1-E8	55	
15332-ZW9-A30	1-E11	58	
15400-PFB-004	1-C11	27	
15422-ZW9-000	1-C14	30	
15473-881-000	1-C14	30	
15474-ZW9-000	1-C14	30	
15611-921-000	1-C10	26	
15655-ZW9-000	1-C11	27	
16000			
16010-ZV4-005	1-D4	36	
16011-ZV4-005	1-D4	36	
16013-ZW9-003	1-D4	36	
16016-ZW9-003	1-D4	36	
16016-ZW9-721	1-D4	36	
16023-ZW9-003	1-D4	36	
16024-ZV4-650	1-D4	36	
16028-ZV4-650	1-D4	36	

C Reference with "Part name index"

PART NAME INDEX			
Partname	Address	Page	Ref.
[A]			
ABSORBER, FUEL	1-E15	62	5
ARMATURE COMP.	1-D11	43	7
ARM COMP., LINK JOINT	1-G6	85	18
ARM COMP., SHIFT LINK	1-G6	85	14
ARM COMP., TILT	1-F15	79	20
ARM, FUEL PUMP ROCKER	1-C16	32	4
ARM, REVERSE LOCK	1-F15	79	18
ARM, SHIFT LINK	1-F11	74	7
ARM, STOPPER	1-D1	33	12
ARM, THROTTLE REMOTE	1-F11	74	6
ARM, VALVE ROCKER	1-C16	32	3
[B]			
BAG, TOOL, 160MM	1-G5	84	10
BAND	1-G6	86	37
BAND B1, WIRE	1-F6	69	1
BAND, CORD	1-F3	67	18
BAND, TUBE CLIP, 11MM	1-E15	63	20
BAND, TUBE CLIP, 12.5MM	1-E15	63	19

Address No. 1-C10

Block No. E-2

Ref No. CYLINDER HEAD

Service item F.R.T.

O-RING, 26X2.7	0.1
PLUG, SPARK	0.2
O-RING, 9.5X1.5	0.2
SENSOR ASSY., WATER TEMPERATURE	0.3
COVER COMP., HEAD	1.8
GASKET, CYLINDER HEAD	2.4
OIL SEAL, 20X32X6	3.1
HEAD COMP., CYLINDER	3.1

ZW93-ED200

Ref. No.	Part No.	Description	Reqd. QTY	Serial No.	Parts catalogue code
			BF 99D1 BFP 99D1 BF 100D1 BFP 100D1 BF 100D1 BFP 100D1		
1	12166-ZW9-000	STOPPER, ENGINE SIDE	2 2 2 2 2 2		
2	12210-ZW9-000ZA	HEAD COMP., CYLINDER	1 1 1 1 1 1		
3	12251-ZW9-003	GASKET, CYLINDER HEAD	1 1 1 1 1 1		
4	12310-ZW9-000	COVER COMP., HEAD	1 1 1 1 1 1		
5	12312-ZW9-000	PACKING, HEAD COVER	1 1 1 1 1 1		
6	15611-921-000	CAP, OIL (NO GAUGE)	1 1 1 1 1 1		
7	16617-ZW9-000	HOLDER, CABLE	1 1 1 1 1 1		SC,SG
	16617-ZW9-010		1 1 1 1 1 1	1001801	LHC,LHD
8	35675-ZW5-003	SENSOR ASSY., WATER TEMPERATURE	1 1 1 1 1 1		
9	90003-ZW9-000	BOLT, FLANGE, 6X22	4 4 4 4 4 4		
10	90007-ZW9-003	BOLT, FLANGE, 8X83	6 6 6 6 6 6		
11	90011-ZW9-000	BOLT, FLANGE, 6X14 (CT200)	1 1 1 1 1 1		
12	90020-ZW9-000	BOLT, FLANGE, 8X40	2 2 2 2 2 2		
13	91202-KJ9-003	OIL SEAL, 20X32X6	1 1 1 1 1 1		
14	91301-805-000	O-RING, 26X2.7	1 1 1 1 1 1		
15	91307-PK2-005	O-RING, 9.5X1.5 (HONDA KIKAKI)	1 1 1 1 1 1		
16	98059-55916	PLUG, SPARK (CR5EH-9)	2 2 2 2 2 2		
	98059-55926	PLUG, SPARK (U16FER9)	2 2 2 2 2 2		

2000.09.20 E

Page No.

Part catalogue structure

E-2 CYLINDER HEAD **1-C10**

Service item F.R.T.

Service item	F.R.T.
O-RING, 26X2.7	0.1
PLUG, SPARK	0.2
O-RING, 9.5X1.5	0.2
SENSOR ASSY., WATER	0.3
COVER COMP., HEAD	1.8
PACKING, HEAD COVER	2.4
GASKET, CYLINDER HEAD	3.1
OIL SEAL, 20X32X6	
HEAD COMP., CYLINDER	

Ref. No. Part No. Description

Ref. No.	Part No.	Description	Reqd. QTY						Serial No.	Parts catalogue code
			BF	BFP	BF	BFP	BF	BFP		
1	12166-ZW9-000	STOPPER, ENGINE SIDE	2	2	2	2	2	2		
2	12210-ZW9-000ZA	HEAD COMP., CYLINDER								
3	12251-ZW9-003	GASKET, CYLINDER HEAD	1	1	1	1	1	1		
4	12310-ZW9-000	COVER COMP., HEAD	1	1	1	1	1	1		
5	12312-ZW9-000	PACKING, HEAD COVER	1	1	1	1	1	1		
6	15611-921-000	CAP, OIL	1	1	1	1	1	1		
7	16617-ZW9-000	HOLDER, CABLE	1	1	1	1	1	1		
	16617-ZW9-010		1	1	1	1	1	1		

Serial No. SC,SG 1001800 LHC,LHD

E-14-10 THROTTLE ROD **1-C10**

Service item F.R.T.

Service item	F.R.T.
CAM, THROTTLE (INC. RELATIVE PART)	0.2
LINKAGE, PIVOT	0.3
ROD COMP., THROTTLE	
DIAPHRAGM ASSY.	

① Address number

- Address No. is provided (in place of the page No.) to help you refer to the part with the part No. or part name.

② Block title ③ Block number

④ Service item/Flat rate time

⑤ Reference number

- Title number marked with the parenthesis or parentheses indicates that it continues from the previous page.

⑥ Part number ⑦ Honda color code

⑧ Description

⑨ Assemblies

- Sections framed with broken lines in the exploded view drawings are available as complete assemblies. (Their individual parts can also be obtained.)

⑩ Color description

⑪ Note

- Notes are shown with the parentheses in the part name column.

⑫ Required quantity

- Required QTY shown in the parenthesis or parentheses indicates the optional part.
- Required QTY marked with "N" Indicates the optional part that should be selected as needed.
- Required QTY indicates the number of the part used in the block.

⑬ Serial number

⑭ Type

- When the type column is blank, it indicates that the part is applicable to all types.
- As the type of the actual unit may differ from the "parts catalogue, type" please refer to "Models, types and applicable serial numbers" for confirmation.

⑮

- Parts enclosed within a dotted line are covered in a different block.

⑯

- A hollow arrow indicates the block No. for the parts enclosed within a dotted line .

⑰

- A solid arrow indicates the block No. the part in question is connected to.

When the parts were revised



Be sure to check the serial number!!



Ref. No.	Part No.	Description	Reqd. QTY						Serial No.
			BF	BFP	BF	BFP	BF	BFP	
			9.9D1	9.9D1	10D1	10D1	10B1	10B1	
1	12166-ZW9-000	STOPPER, ENGINE SIDE	2	2	2	2	2	2	
2	12210-ZW9-000ZA	HEAD COMP., CYLINDER *NH8*.....DARK GRAY	1	1	1	1	1	1	
3	12251-ZW9-003	GASKET, CYLINDER HEAD	1	1	1	1	1	1	
4	12310-ZW9-000	COVER COMP., HEAD	1	1	1	1	1	1	
5	12312-ZW9-000	PACKING, HEAD COVER	1	1	1	1	1	1	
6	15611-921-000	CAP, OIL (NO GAUGE)	1	1	1	1	1	1	
7	16617-ZW9-000	HOLDER, CABLE (###).....	1	1	1	1	1	1	
	16617-ZW9-010		1	1	1	1	1	1	

The number has been used from the initial model without revision.

When shown at the left side, it is applicable to the models of No.1001801 and the subsequent numbers.

When shown at the right side, it is applicable to the models up to No.1001800.




• The parts listed with "###" at the end of the parts name have limited supply period (parts not for sale).

Abbreviations used in the parts catalogue

• The following abbreviations are used in the parts name column.

A Ampere	FR.Front
A.C. Alternating current	IN.Inlet
ASSY. Assembly	L (100L) .Link (100 Links)
AT. Automatic transmission	L.Left
C.D.I. Capacitive discharge ignition	MMMillimeter
COMP. ... Complete	MT.Manual Transmission
D.C. Direct current	P.T.O.Power take off
EX. Exhaust	R.Right
G.F.C.I ... Ground fault circuit interruptor	RR.Rear
HEX. Hexagonal	STD.Standard
H.S.T. Hydrostatic transmission	T (22T) ...Tooth (22 Teeth)
	VVolt
	WWatt

How to check the part block and serial numbers

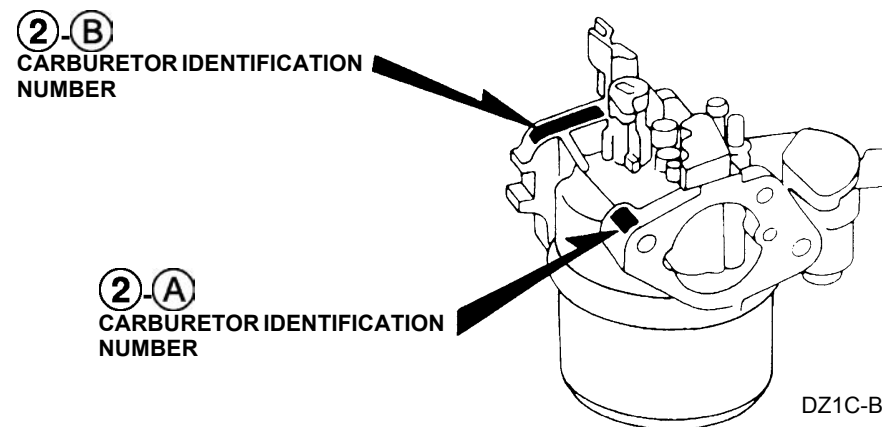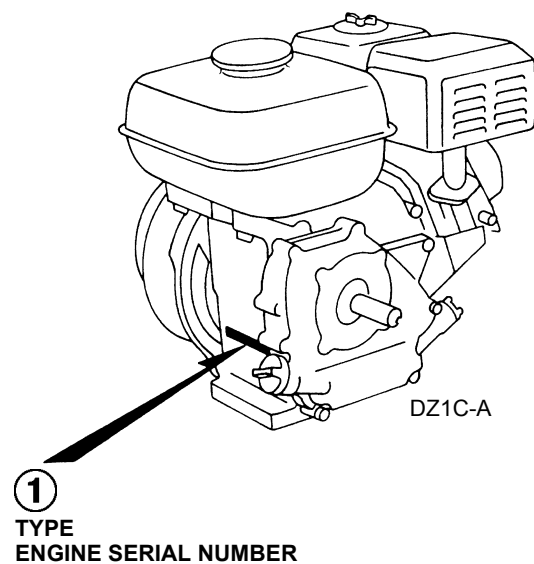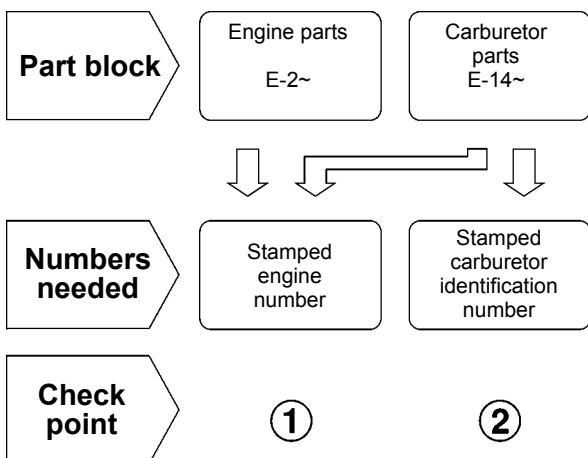

Models, parts catalogue codes and applicable serial numbers

- Models, parts catalogue codes and applicable serial Nos. given in this parts catalogue can be identified as follows.

Model	Type	Parts catalogue type	Applicable engine serialNo.	Applicable carburetor identificationNo.
GX390UT1	HA2	HA2	GCAKT-1000001~	BE85Q A
	LKE	LKE		
	LXE4	LXE4		
	LXE8	LXE8		
	LXQ4	LXQ4		
	LXU	LXU		
	LX2	LX2		
	PAE2	PAE2		
	PA2	PA2		
	PXD8	PXD8		
	PXE8	PXE8		
	PXU	PXU		
	QAA2	QAA2		

Model	Type	Parts catalogue type	Applicable engine serialNo.	Applicable carburetor identificationNo.
GX390UT1	QAA6	QAA6	GCAKT-1000001~	BE85Q A
	QAE2	QAE2		
	QAE6	QAE6		
	QAW	QAW		
	QA2	QA2		
	QA26	QA26		
	QC2	QC2		BE94B A
	QDW9	QDW9		BE85C B
	QE	QE		BE85Q A
	QHB4	QHB4		
	QKA4	QKA4		
	QK4	QK4		
	QME0	QME0		

Model	Type	Parts catalogue type	Applicable engine serialNo.	Applicable carburetor identificationNo.
GX390UT1	QNE2	QNE2	GCAKT-1000001~	BE85Q A
	QNE6	QNE6		
	QNE8	QNE8		
	QNR2	QNR2		
	QNR6	QNR6		
	QTT	QTT		
	QWA4	QWA4		BE85C B
	QWC4	QWC4		BE94B A
	QWT2	QWT2		BE85C B
	QXB7	QXB7		BE85Q A
	QXB9	QXB9		
	QXC4	QXC4		BE94A A
	QXC6	QXC6		BE94B A
	QXC9	QXC9		BE85C B
	QXER	QXER		BE85Q A
	QXE4	QXE4		
	QXE6	QXE6		

Model	Type	Parts catalogue type	Applicable engine serialNo.	Applicable carburetor identificationNo.
GX390UT1	QXE7	QXE7	GCAKT-1000001~	BE85Q A
	QXE8	QXE8		
	QXE9	QXE9		
	QXH9	QXH9		
	QXQ4	QXQ4		
	QXS4	QXS4		BE94B A
	QXU	QXU		BE85Q A
	QXUZ	QXUZ		
	SCK4	SCK4		
	SHQ4	SHQ4		
	SMC1	SMC1		BE85Z A
	SMD3	SMD3		
	SME0	SME0		BE85Q A
	SME6	SME6		
	SM32	SM32		
	SNC	SNC		BE94A A
	STC4	STC4		BE85Q A

Model	Type	Parts catalogue type	Applicable engine serialNo.	Applicable carburetor identificationNo.
GX390UT1	SWA4	SWA4	GCAKT-1000001~	BE85Q A
	SXB7	SXB7		
	SXB9	SXB9		
	SXE4	SXE4		
	SXE8	SXE8		
	SXQ4	SXQ4		
	SXU	SXU		
	VA2	VA2		
	VC2N	VC2N		BE85L A
	VKX4	VKX4		BE89U A
	VM2	VM2		BE89E A / B
	VNG1	VNG1		BE85L A
	VN27	VN27		
	VPX4	VPX4		
	VPX9	VPX9		BE89F B
	VSD7	VSD7		BE85L A
	VSD9	VSD9		

Model	Type	Parts catalogue type	Applicable engine serialNo.	Applicable carburetor identificationNo.
GX390UT1	VXB7	VXB7	GCAKT-1000001~	BE85L A
	VXB9	VXB9		
	VXE2	VXE2		
	VXE6	VXE6		
	VXE7	VXE7		
	VXE8	VXE8		
	VXE9	VXE9		
	VXG	VXG		
	VXQ4	VXQ4		BE89F B
	VX8	VX8		BE85L A
GX390RT1	QNB2	QNB2		BE85Q A
	QTT	QTT		
	QWA2	QWA2		
	VAA1	VAA1		BE89S A
	VAA8	VAA8		
	VAC2	VAC2		BE85L A
	VAG2	VAG2		

Model	Type	Parts catalogue type	Applicable engine serialNo.	Applicable carburetor identificationNo.
GX390RT1	VCN2	VCN2	GCAKT-1000001~	BE85L A
	VC2	VC2		BE89U A
	VDE2	VDE2		BE85L A
	VD2	VD2		
	VEP9	VEP9		BE89R A
	VKB2	VKB2		BE85L A
	VKE4	VKE4		BE89T A
	VKX4	VKX4		BE89E B
	VK2	VK2		BE85L A
	VNG1	VNG1		
	VPE5	VPE5		BE89U A

Model	Type	Parts catalogue type	Applicable engine serialNo.	Applicable carburetor identificationNo.
GX390RT1	VPE9	VPE9	GCAKT-1000001~	BE89U A
	VPX4	VPX4		BE89F B
	VPX9	VPX9		
	VSD4	VSD4		BE89T A
	VS49	VS49		
	VTH4	VTH4		BE89S A
	VWC	VWC		BE89R A
	VWC9	VWC9		BE85L A
	VWE	VWE		BE89R A
	VWT4	VWT4		BE85Z A
	VXG	VXG		BE89F B

* Of carburetor identification numbers, only the portions underlined in the example below are used for registration.

BE 85Q A KC ㄗ
 (A) (B)

Features of each type

- See the following table for the features of each type. (Items in brackets are optional)

Model Type		GX390UT1												
		HA2	LKE	LXE4	LXE8	LXQ4	LXU	LX2	PAE2	PA2	PXD8	PXE8	PXU	QAA2
Crankshaft	20mmØ Spline	●												
	25.4mmØ Spline								●	●	●	●	●	
	30mmØ Spline		●	●	●	●	●	●						
	25mmØ Straight													
	25.4mmØ Straight													●
	5/16" Tapered													
Air cleaner	Silent	●	●	●	●	●	●	●	●	●	●	●	●	●
	Cyclone													
	Generator													
Muffler	Silent	●	●	●	●	●	●	●	●	●	●	●	●	●
	Standard													
	Generator													
Coil	Charge coil		●	●	●				●		●	●		
	Lamp coil													
Muffler cover			(●)	(●)		(●)								
Spark arrester		●	(●)	(●)	(●)	(●)	(●)	(●)	●	(●)	●	(●)	(●)	(●)
Starter motor			●	●	●				●		●	●		
Control box			●	●	●				●		●	●		
Reduction		●	●	●	●	●	●	●						

Specifications		Model	GX390UT1												
		Type	QAA6	QAE2	QAE6	QAW	QA2	QA26	QC2	QDW9	QE	QHB4	QKA4	QK4	QME0
Crankshaft	20mmØ Spline														
	25.4mmØ Spline														
	30mmØ Spline														
	25mmØ Straight														
	25.4mmØ Straight	●	●	●	●	●	●	●	●	●	●	●	●	●	
	5/16" Tapered														
Air cleaner	Silent	●	●	●	●	●	●			●	●	●	●	●	
	Cyclone							●	●						
	Generator														
Muffler	Silent	●	●	●	●	●	●	●	●	●	●	●	●	●	
	Standard														
	Generator														
Coil	Charge coil		●	●				●				●		●	
	Lamp coil														
Muffler cover										(●)	(●)	(●)	(●)	(●)	
Spark arrester		(●)	●	●	●	●	●	●	●	●	●	●	●	(●)	
Starter motor			●	●				●				●		●	
Control box			●	●								●		●	
Reduction															

Specifications		Model	GX390UT1												
		Type	QNE2	QNE6	QNE8	QNR2	QNR6	QTT	QWA4	QWC4	QWT2	QXB7	QXB9	QXC4	QXC6
Crankshaft	20mmØ Spline														
	25.4mmØ Spline														
	30mmØ Spline														
	25mmØ Straight														
	25.4mmØ Straight	●	●	●	●	●	●	●	●	●	●	●	●	●	
	5/16" Tapered														
Air cleaner	Silent	●	●	●	●	●	●				●	●			
	Cyclone							●	●	●			●	●	
	Generator														
Muffler	Silent	●	●	●	●	●	●	●	●	●	●	●		●	
	Standard												●		
	Generator														
Coil	Charge coil	●	●	●	●	●			●						
	Lamp coil														
Muffler cover								(●)	(●)		(●)	(●)	(●)		
Spark arrester		(●)	(●)	(●)	(●)	(●)	(●)	●	●	(●)	●	●		(●)	
Starter motor		●	●	●	●	●									
Control box		●	●	●	●	●									
Reduction															

Specifications		Model	GX390UT1												
		Type	QXC9	QXER	QXE4	QXE6	QXE7	QXE8	QXE9	QXH9	QXQ4	QXS4	QXU	QXUZ	SCK4
Crankshaft	20mmØ Spline														
	25.4mmØ Spline														
	30mmØ Spline														
	25mmØ Straight													●	
	25.4mmØ Straight	●	●	●	●	●	●	●	●	●	●	●	●		
	5/16" Tapered														
Air cleaner	Silent		●	●	●	●	●	●	●	●		●	●	●	
	Cyclone	●									●				
	Generator														
Muffler	Silent	●	●	●	●	●	●	●	●	●		●	●	●	
	Standard										●				
	Generator														
Coil	Charge coil		●	●	●	●	●	●	●					●	
	Lamp coil														
Muffler cover				(●)		(●)		(●)	(●)	(●)				(●)	
Spark arrester		(●)	(●)	(●)	(●)	●	(●)	●	●	(●)		(●)	(●)	●	
Starter motor			●	●	●	●	●	●	●					●	
Control box			●	●	●	●	●	●	●					●	
Reduction															

Specifications		Model	GX390UT1											
		Type	SHQ4	SMC1	SMD3	SME0	SME6	SM32	SNC	STC4	SWA4	SXB7	SXB9	SXE4
Crankshaft	20mmØ Spline													
	25.4mmØ Spline													
	30mmØ Spline													
	25mmØ Straight	●	●	●	●	●	●	●	●	●	●	●	●	●
	25.4mmØ Straight													
	5/16" Tapered													
Air cleaner	Silent	●	●	●	●	●	●		●	●	●	●	●	●
	Cyclone							●						
	Generator													
Muffler	Silent	●	●		●	●	●		●	●	●	●	●	●
	Standard			●				●						
	Generator													
Coil	Charge coil				●	●	●		●				●	●
	Lamp coil		●											
Muffler cover		(●)	(●)	(●)	(●)	(●)		(●)	(●)	(●)	(●)	(●)	(●)	
Spark arrester		(●)	●	●	(●)	(●)	(●)	●	●	●	●	●	(●)	(●)
Starter motor					●		●		●				●	●
Control box					●		●		●				●	●
Reduction														

Specifications		Model	GX390UT1												
		Type	SXQ4	SXU	VA2	VC2N	VKX4	VM2	VNG1	VN27	VPX4	VPX9	VSD7	VSD9	VXB
Crankshaft	20mmØ Spline														
	25.4mmØ Spline														
	30mmØ Spline														
	25mmØ Straight	●	●												
	25.4mmØ Straight														
	5/16" Tapered			●	●	●	●	●	●	●	●	●	●	●	
Air cleaner	Silent	●	●	●			●	●	●			●	●	●	
	Cyclone														
	Generator				●	●				●	●				
Muffler	Silent	●	●	●			●	●	●	●		●	●	●	
	Standard														
	Generator					●									
Coil	Charge coil				●				●						
	Lamp coil						●								
Muffler cover		(●)						(●)	(●)	(●)		(●)	(●)	(●)	
Spark arrester		(●)	(●)	●	(●)	●	●	●	●	●	●	●	●	●	
Starter motor					●				●						
Control box					●				●						
Reduction															

Specifications		Model	GX390UT1									GX390RT1			
		Type	VXB9	VXE2	VXE6	VXE7	VXE8	VXE9	VXG	VXQ4	VX8	QNB2	QTT	QWA2	VAA1
Crankshaft	20mmØ Spline														
	25.4mmØ Spline														
	30mmØ Spline														
	25mmØ Straight														
	25.4mmØ Straight										●	●	●		
	5/16" Tapered	●	●	●	●	●	●	●	●	●				●	
Air cleaner	Silent	●	●	●	●	●	●		●	●	●	●	●		
	Cyclone														
	Generator							●						●	
Muffler	Silent	●	●	●	●	●	●		●	●	●	●	●		
	Standard														
	Generator													●	
Coil	Charge coil		●	●	●	●	●				●		●		
	Lamp coil														
Muffler cover		(●)			(●)		(●)		(●)						
Spark arrester		●	(●)	(●)	●	(●)	●	(●)	(●)	(●)	●	(●)	●	●	
Starter motor			●	●	●	●	●				●				
Control box			●	●	●	●	●								
Reduction															

Specifications		Model	GX390RT1												
		Type	VAA8	VAC2	VAG2	VCN2	VC2	VDE2	VD2	VEP9	VKB2	VKE4	VKX4	VK2	VNG1
Crankshaft	20mmØ Spline														
	25.4mmØ Spline														
	30mmØ Spline														
	25mmØ Straight														
	25.4mmØ Straight														
	5/16" Tapered	●	●	●	●	●	●	●	●	●	●	●	●	●	●
Air cleaner	Silent		●	●	●		●	●		●			●	●	
	Cyclone														
	Generator	●				●			●		●	●			
Muffler	Silent		●	●	●		●	●		●			●	●	
	Standard														
	Generator	●									●	●			
Coil	Charge coil	●			●	●	●		●	●	●		●		
	Lamp coil														
Muffler cover															(●)
Spark arrester		●	●	●	●	(●)	●	●		●	●	●	●	●	●
Starter motor		●			●	●	●			●	●		●		
Control box		●				●	●			●			●		
Reduction															

1

Model Type Specifications		GX390RT1											
		VPE5	VPE9	VPX4	VPX9	VSD4	VS49	VTH4	VWC	VWC9	VWE	VWT4	VXG
Crankshaft	20mmØ Spline												
	25.4mmØ Spline												
	30mmØ Spline												
	25mmØ Straight												
	25.4mmØ Straight												
	5/16" Tapered	●	●	●	●	●	●	●	●	●	●	●	●
Air cleaner	Silent									●		●	
	Cyclone												
	Generator	●	●	●	●	●	●	●	●		●		●
Muffler	Silent			●						●			
	Standard												
	Generator												
Coil	Charge coil	●	●			●	●	●			●		
	Lamp coil												
Muffler cover		(●)		(●)						(●)		(●)	
Spark arrester		●	●	●	●			●	(●)	●	(●)	(●)	(●)
Starter motor		●	●			●	●	●			●	●	
Control box													
Reduction													

Fuel hose, general purpose hoses and vinyl hose

- The standard part fuel hose, general purpose hose and vinyl hose may be substituted by the coiled bulk part.
- When ordering the standard part fuel hose, general purpose hose and vinyl hose use the bulk part number written in the parts catalog in brackets () underneath the part name.
- When exchanging the hose, cut and use at the specified length as mentioned in the part name.
(For the method of cutting the bulk part, and method of filling out orders etc., please refer to the instructions issued with the bulk part.)

Bulk part number of fuel hose, general purpose hose and vinyl hose.

Example: 9 5 0 0 1 - 7 5 0 0 1 - 5 0 M

Bulk part number:

Refers to the bulk part.

Marking code (fuel hose and general purpose hose)

Change code (Vinyl hose)

Indicates number mark or change sequence, however, the code for the bulk part must be strictly 0 (zero).

Types of code:

- Fuel hose
 - 2: Red outside braid (3 mm inside dia. only)
 - 5: Black inside braid
 - 3: Red (3 mm inside dia. only)
 - 4: Ash gray with red stripe (3 mm inside dia. only)
 - 6: Black

- General hose
 - 1: Ash gray
 - 2: Ash gray
 - 3: Black
 - 5: Black

- Vinyl hose
 - 1: Clear
 - 2: Black
 - 3: Light red
 - 6: Light red
 - 7: Pale black

Lengths:

001: 1 m (standard)
003: 3 m
008: 8 m

Application or specification of some parts is not settled.

I.D code: (fuel hose and general purpose hose)

30: 3.0 mm
35: 3.5 mm
45: 4.5 mm

50: 5.0 mm
55: 5.3 mm, 5.5 mm
65: 6.5 mm

70: 7.0 mm
75: 7.3 mm, 7.5 mm
80: 8.0 mm

11: 11 mm
91: 12 (outside dia. 15) mm
92: 12 (outside dia. 16) mm

12: 12 (outside dia. 17) mm
14: 14 mm
17: 17 mm

ID./OD. code: (vinyl hose)

01: ID. 2.9, OD. 6.8 mm
03: ID. 3.0, OD. 6.0 mm
05: ID. 3.5, OD. 6.5 mm
07: ID. 4.0, OD. 7.0 mm
08: ID. 4.5, OD. 6.5 mm
09: ID. 4.5, OD. 8.0 mm

12: ID. 5.0, OD. 7.0 mm
10: ID. 5.0, OD. 8.0 mm
11: ID. 5.0, OD. 9.0 mm
14: ID. 6.0, OD. 9.0 mm
17: ID. 7.0, OD. 9.0 mm
19: ID. 7.0, OD. 11.0 mm

21: ID. 8.0, OD. 9.0 mm
23: ID. 8.0, OD. 12.0 mm
25: ID. 9.0, OD. 11.0 mm
27: ID. 9.0, OD. 13.0 mm
33: ID. 10.0, OD. 14.0 mm
36: ID. 11.0, OD. 13.0 mm

37: ID. 11.0, OD. 15.0 mm
38: ID. 12.0, OD. 13.0 mm
39: ID. 12.0, OD. 14.0 mm
40: ID. 12.0, OD. 16.0 mm
43: ID. 13.0, OD. 15.0 mm
45: ID. 14.0, OD. 18.0 mm

50: ID. 16.0, OD. 19.0 mm
55: ID. 17.5, OD. 20.5 mm
60: ID. 22.0, OD. 27.0 mm

Hose type:

- 1: Fuel hose
- 3: Vinyl hose
- 5: General hose


⊙ **CAUTION:** It is **DANGEROUS** to confuse the fuel hose with the general purpose hose or vinyl hose.

Never use a general purpose hose or vinyl hose in place of a fuel hose or vice versa. Always use the correct bulk part in the parts catalogue, according to the service manual or the instructions issued with the bulk part.

FLAT RATE SERVICE TIME

Flat rate service time (FRT) means the standard time required to service a product, which is listed in this manual to help the dealers control the actual working process and calculate the service charge by using it as a guide.

FRT setting system

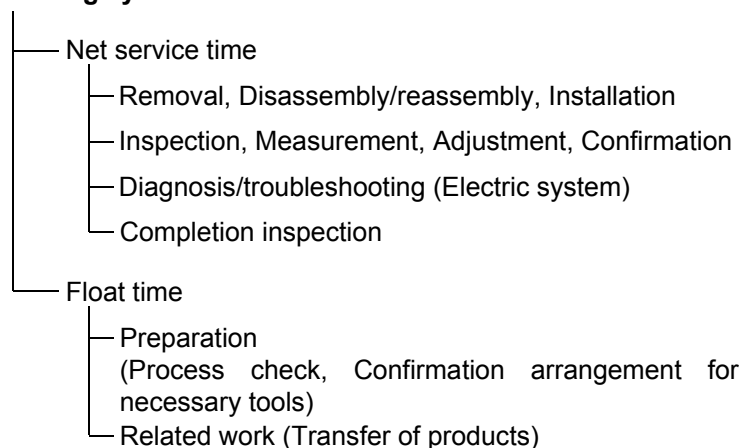

* Float time is set by multiplying the net service time by a given coefficient.

Editorial style

The service items shown in the text are listed with the exchange work time for the repair sales parts as the subject. Other representative service items not using repair parts (removal/installation, adjustment, inspection/measuring, and other work) are listed collectively in the list in the preface, classified according to the work.

FRT setting standard

- Decimal system (in unit of 0.1) is adopted to set FRT as it is convenient to calculate the wage.
Example: (0.1) → 6 minutes, (0.2) → 12 minutes
[Labor cost per hour] x [FRT] = [Wage]
- FRT is set with a hand tool.
- Service items and FRT can be subject to change depending on development of tools and service equipment and improvement in service procedure.

Work procedure

- As the work procedure is set with the work time according to the method in the separate Service Manual, refer to this Manual as required.
- Work methods permitting servicing in the shortest time still permitting assurance of safe work and product warranty are used for the setting of service items not listed in the Service Manual.
- Work basically is to be performed by one person, and when two or more people are required, setting is done as the total time for the number of people.
- The set value for the technological level of the workers uses a person with three years of experience in the repair of Honda products as the standard.
- Special tools and service equipment used to set FRT are those specified or recommended in Service Manual.

Service item whose FRT is not presented

- Accessories and service parts that are not listed to use in this manual.
 - Locations with little aging deterioration or breakage during normal use.
 - Service work that can be finished by one touch.
 - Service work that is seldom done (i.e. extremely small causes of trouble and service frequency).
 - Products and parts whose location for installation differs according to its status of use and application.
- * When FRT is not presented, please calculate wages based on appropriate actual work time.

Operation not included of FRT

- Oil and coolant water draining, Waiting time for warming up operation and etc..
- Additional operation that involves removal/installation of standard exterior equipment.
- Indirect time spent for service by visiting the customer, trade-in, and delivery.
- Indirect time required for ordering and delivery of parts.
- Cost for grease, adhesive agent, etc. used for service work.

Explanation of FRT by using an example
(The example may differ from the actual presented items)

Ref. No.	L.O.N.	(Relative ref. Number) Description	F.R.T.
① ②	1111L1	④ (1, 3, 4, 7) VALVE, INTAKE 4.1	②
③	1111L1A	⑥ • NOTE: OHV type • Includes: Engine removal and installation	⑦
		⑤ One head (intake all) add 1.4	

- ① Reference No. of the illustration of part that shows location of the replacement work.
- ② FRT is an abbreviation of Flat Rate Time indicating the standard service time required for the replacement.
- ③ LON is an abbreviation of Labor Operation Number, and it is a classification of the service items by the work unit code.

The same operation code is used regardless of the models.

Standard operation is indicated with 6 digits code, and additional operation is indicated with 7 digits code.


- ④ Indicating the intake valve replacement and FRT4.1.
- ⑤ Indicating FRT1.4 that will be added when additional operation (whole intake side of one cylinder head) is done in association with intake valve replacement.

- ⑥ Indicating work condition or application condition of the service item.
- ⑦ Indicating work contents that are included in the service item.
- ⑧ Indicating a reference No. whose operation and time are the same as FRT4.1 for the intake valve.

(The application range is limited to the service items without an LON setting within a same block.)

How to refer to the service item by using the sample
 (intake valve replacement)

Open to the page of the block where the intake valve's spare part illustration is shown.



Look for the intake valve illustration, and refer to the service item and FRT that agree with the reference No.

Indication mark for the listing of service items that continues to the following page

Ref. No.	L.O.N.	(Relative ref. Number) Description	F.R.T.
2	1111L1	VALVE, INTAKE	4.1
	.	.	.
	.	.	.

+

Mark indicated at the last line.

Indication of the block with no setting of FRT

Ref. No.	L.O.N.	(Relative ref. Number) Description	F.R.T.
NO INFORMATION			

• LON code system

1	11	1	L1	A
a	b	c	d	e

- a) Category code..... Engine
- b) Location/function code Engine upper
- c) Operation code..... Replace
- d) Operation sequence number (Unit code can be shown with alphabet)
..... Intake valve
(No regular rule of code)
- e) Additional code One head (intake all)
(No regular rule of code)

1	11	1	L1	A
a		c		

a) Category codes and classification

Code	Category
1	Engine
2	Power drive
3	Fuel & Exhaust
4	Frame & Body
5	Steering
6	Electrical
7	Axle & Brake
8	Control system
9	-
0	Attachments

c) Operation codes and classification

Code	Operation category
1	Replace, Removal/Installation, Change
2	Overhaul
3	Adjust, Rotation
4	(Paint-related work: Top-coat)
5	Test, Inspect/diagnose, Measurement
6	(Overhaul-related work: Rebore)
7	(Overhaul-related work: Reseal)
8	(Resurface)
9	(Paint-related work: Refinish)
0	Repair, Cleaning, Air bleeding

Major service items without using spare parts

(1) Removal/Installation, (2) Adjustment,
(3) Inspection/Measurement, (4) Overhaul, (5) Other work

E: Engine, T: Transmission, D: Drive system,
B: Body and related parts

(1) Removal/Installation

Set with the parts configuration in the status of being removed from the product.

	LON	DESCRIPTION	FRT
E	1111L3	CYLINDER HEAD ASSEMBLY-REMOVAL/INSTALLATION	0.5

(2) Adjustment

	LON	DESCRIPTION	FRT
E	1113A1	VALVE CLEARANCE-ADJUSTMENT NOTE: For 1 product	0.3
	1163A0	CONTROL, THROTTLE/GOVERNOR-ADJUSTMENT	0.2
	3113A2	CARBURETOR IDLE-ADJUSTMENT	0.2

(3) Inspection, Measurement, Cleaning

	LON	DESCRIPTION	FRT
E	1105A0	ENGINE OIL-INSPECTION	0.1
	3120A0	AIR CLEANER-CLEANING INCLUDES: Air cleaner-inspection	0.2
	3130A0	SPARK ARRESTER-CLEANING INCLUDES: Spark arrester-inspection	0.2
	6140A0	SPARK PLUG-ADJUSTMENT/CLEANING INCLUDES: Spark plug check NOTE: For 1 product	0.1

(4) Overhaul

Work condition: The required Measurements, inspections, adjustments, and cleaning/washing of each part are performed, including the main body removal/installation work and the replacement of defective parts.

	LON	DESCRIPTION	FRT
E	3112A0	CARBURETOR-OVERHAUL INCLUDES: All necessary adjustment	0.6

(5) Other work

	LON	DESCRIPTION	FRT
E	1101E1	ENGINE OIL-CHANGE INCLUDES: Engine oil-inspection	0.2


ENGINE GROUP

C 9

E-2

D 1


CYLINDER HEAD

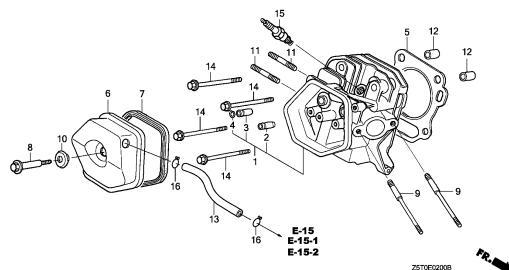

E-3

D 4


CYLINDER BARREL

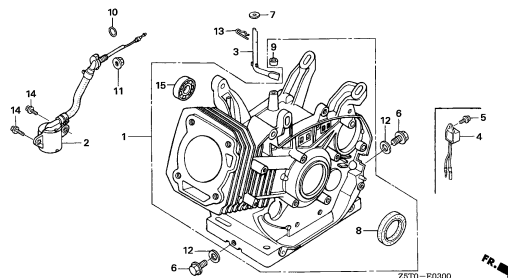

E-6

D 6


CRANKCASE COVER(1)

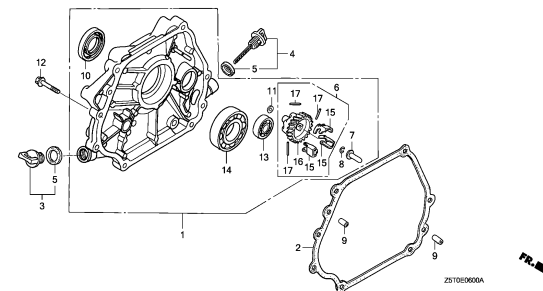

E-6-1

D10


CRANKCASE COVER(2)

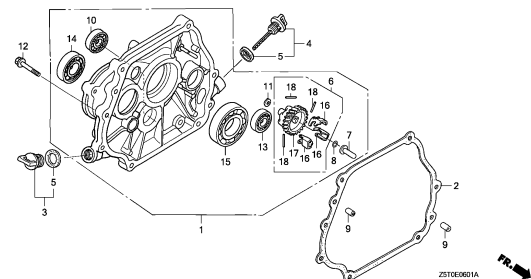

E-7

D11


CRANKSHAFT

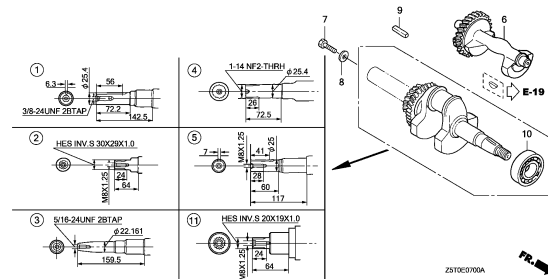

E-8

D13


PISTON

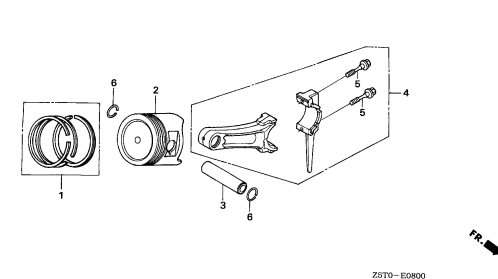

E-9

E 1


CAMSHAFT

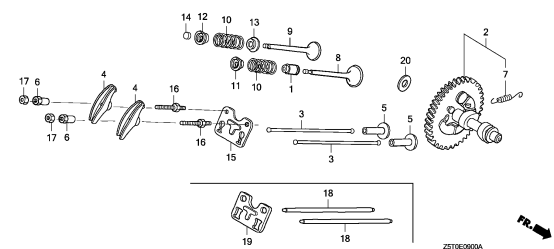

E-11

E 4


RECOIL STARTER

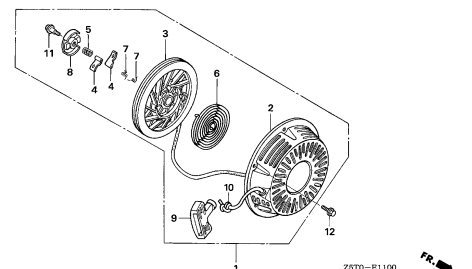

E-12

E 7

FAN COVER

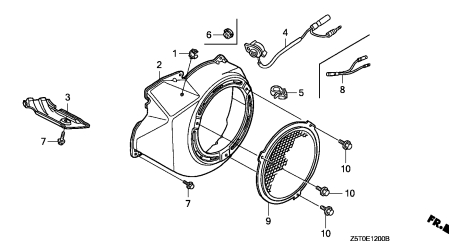

2


ENGINE GROUP

C10

E-14

CARBURETOR(1)


E 9

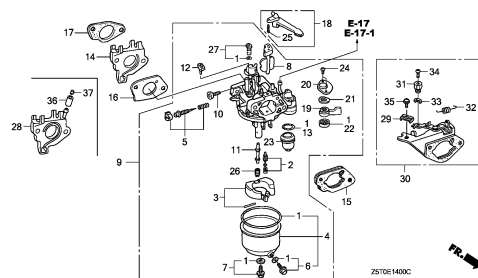

E-14-1

CARBURETOR(2)


E16

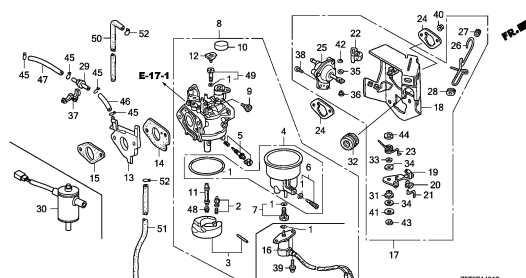

E-15

AIR CLEANER(1)


F 4

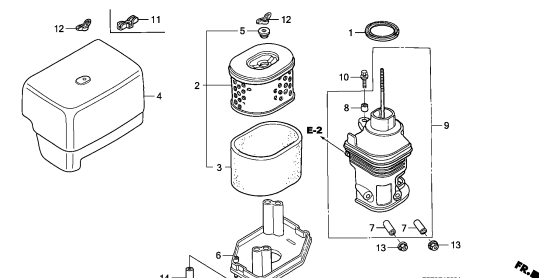

E-15-1

AIR CLEANER(2)


F 6

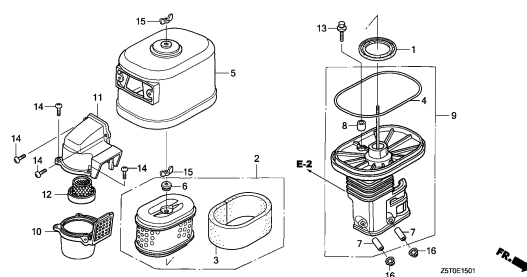

E-15-2

AIR CLEANER(3)


F 7

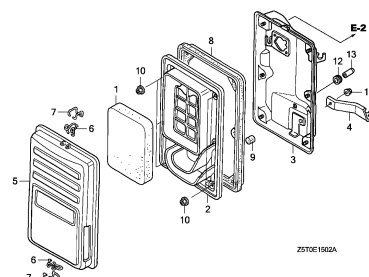

E-16

MUFFLER(1)


F 8

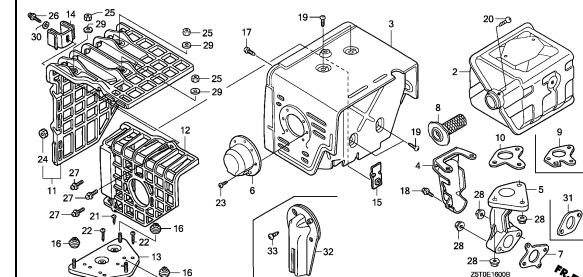

E-16-1

MUFFLER(2)


F12

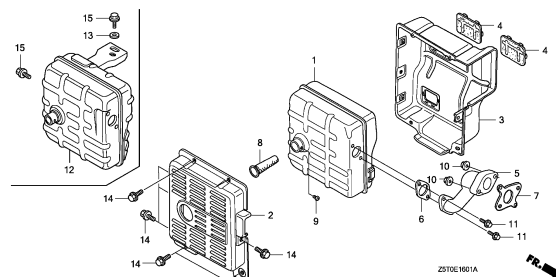

E-16-2

MUFFLER(3)


F13

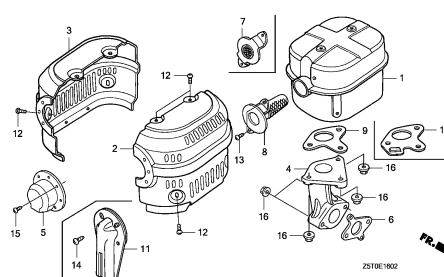

E-17

FUEL TUBE

F14

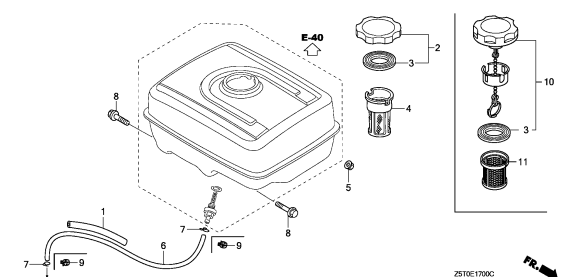

C11

Exploded view diagram of the washing machine door assembly. The diagram shows the door panel (4) with various components like the handle (8), lock (9), and hinges (15, 17). It also shows the door gasket (1) and the door frame (14). The diagram is labeled with part numbers and assembly instructions.

[illegible]

Exploded view diagram of the Z5T0-E2100 engine assembly. The diagram shows the following components and their assembly relationships:

- Engine Block (1)**: The main lower component, featuring a cooling fan (13) and a water pump (16).
- Cylinder Head (2)**: The upper component that fits onto the engine block.
- Valve Train Components**: Includes the intake valve (3), valve guides (4), valve springs (5), and valve retainers (6).
- Pistons and Crankshaft**: The piston (7) is shown with its connecting rod (8) and crankshaft (9).
- Timing Components**: Includes the timing belt (10) and timing pulleys (11, 12).
- Accessories**: Includes the alternator (14), water pump (16), and various fasteners (17, 18, 19, 20).

The diagram is labeled with the part number **Z5T0-E2100** in the bottom right corner.

[illegible]


ENGINE GROUP

C12

E-26

H 4


REDUCTION

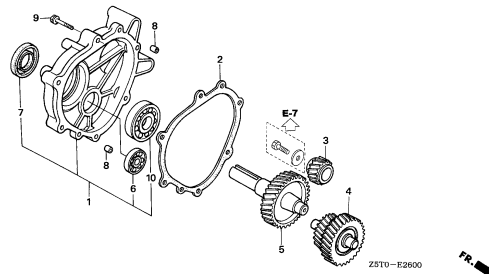

E-28

H 5


LABEL

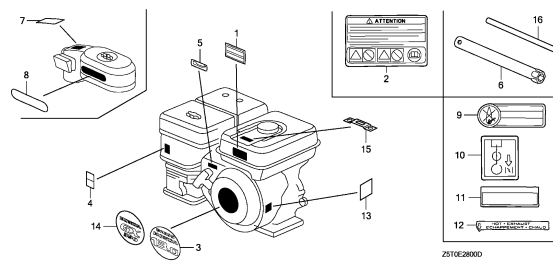

E-40

H 8


OTHER PARTS(FUEL TANK)

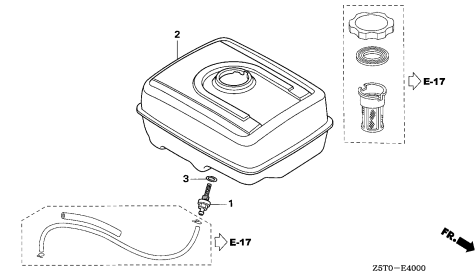

E-40-1

H 9


OTHER PARTS (COMBINATION SWITCH)

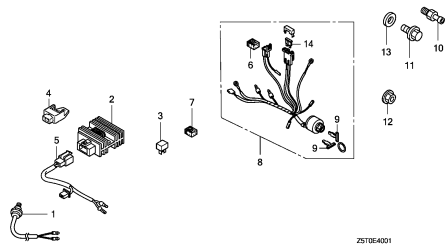

E-40-2

H10


OTHER PARTS (MUFFLER)

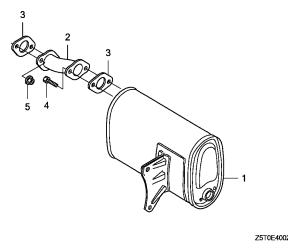

EOP-1

H11

GASKET KIT

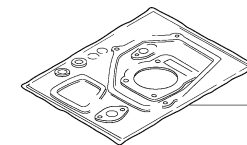


2

E-2

CYLINDER HEAD


D 1

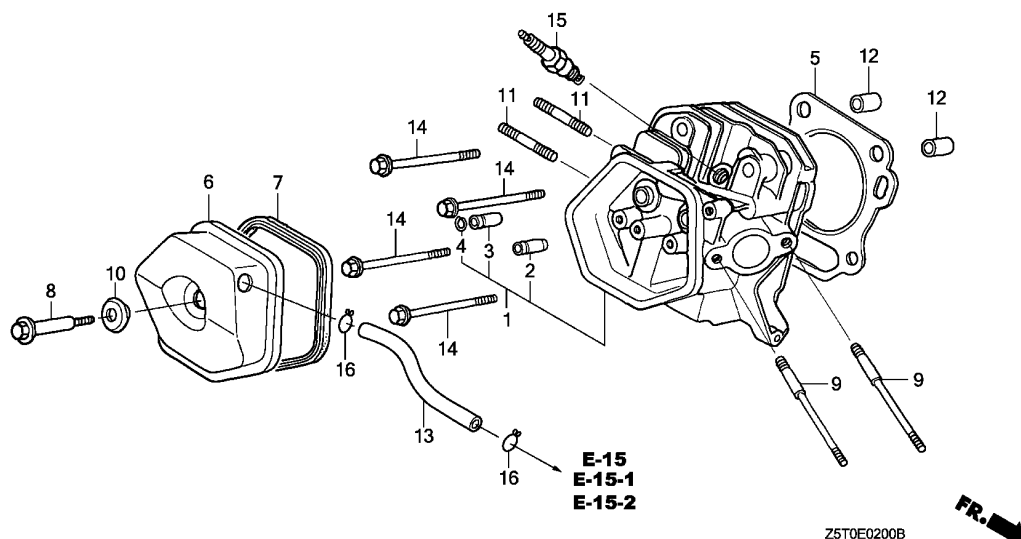

Ref. No.	L.O.N.	(Relative ref. Number) Description	F.R.T.
1	1111N3	HEAD, CYLINDERINCLUDES: Valve clearance adjustment and reface	0.9
2	1111E9	GUIDE, INTAKE VALVEINCLUDES: Valve clearance adjustment	0.8
	1111E9E	.Replace intake and exhaust all add	0.2
3	1111E8	GUIDE, EXHAUST VALVEINCLUDES: Valve clearance adjustment	0.8
	1111E8E	.Replace intake and exhaust all add	0.2
5	1111N4	GASKET, CYLINDER HEAD (7)	0.5
6	1111D5	COVER, CYLINDER HEAD AND/OR PACKING, HEAD COVER	0.1
13	1111K5	TUBE, BREATHER	0.1
15	6141C1	PLUG, SPARKINCLUDES: Spark plug check	0.1

Ref. No.	Part No.	Description	Reqd. GX 390 UT1	QTY GX 390 RT1	Serial No.	Parts catalogue code
1	12200-ZF6-406	HEAD COMP., CYLINDER	1	1	-----	HA2,LKE,LXE4,LXQ4,LX2,PAE2,PA2,QAE2,QAE6,QC2,QE,QHB4,QKA4,QME0,QNB2,QNE2,QNE6,QNE8,QNR2,QNR6,QWA2,QWC4,QXB7,QXB9,QXC4,QXC6,QXE4,QXE6,QXE7,QXE9,QXH9,QXS4,SCK4,SMC1,SMD3,SME0,SME6,SM32,SNC,STC4,SWA4,SBX7,SBX9,SXE4,SXU,VAA1,VAC2,VAG2,VA2,VCN2,VC2,VC2N,VDE2,VD2,VEP9,VKB2,VKE4,VK2,VM2,VN27,VPE5,VPE9,VSD4,VS49,VTH4,VWC,VWC9,VWE,VWT4,VXE2,VXE6,VXE7,VXE9,VXQ4
	12200-Z1C-406		1	1	-----	LXE8,LXU,PXD8,PXE8,PXU,QAA2,QAA6,QAW,QA2,QA26,QDW9,QK4,QTQ,QWA4,QWT2,QXC9,QXER,QXE8,QXQ4,QXU,QXUZ,SHQ4,SXE8,SXQ4,VAA8,VKX4,VNG1,VPX4,VPX9,VSD7,VSD9,VXB7,VXB9,VXE8,VXG,VX8
2	12204-ZE2-306	GUIDE, IN. VALVE (O.S.)	1	1		
3	12205-ZE2-305	GUIDE, EX. VALVE (O.S.)	1	1		
4	12216-ZE2-300	CLIP, VALVE GUIDE	1	1		
5	12251-ZF6-W00	GASKET, CYLINDER HEAD	1	-	1360188	LXE8,LXU,PXE8,PXU,QAA2,QAA6,QAW,QA2,QA26,QDW9,QK4,QTQ,QWA4,QWT2,QXC9,QXE8,QXQ4,QXU,SHQ4,SXE8,SXQ4,VXE8,VX8
	12251-Z1C-801	GASKET, CYLINDER HEAD (THAI LEAKLESS)	1	-	-----	HA2,LKE,LXE4,LXQ4,LX2,PAE2,PA2,PXD8,QAE2,QAE6,QC2,QE,QHB4,QKA4,QME0,QNE2,QNE6,QNE8,QNR2,QNR6,QWC4,QXB7,QXB9,QXC4,QXC6,QXER,QXE4,QXE6,QXE7,QXE9,QXH9,QXS4,QXUZ,SCK4,SMC1,SMD3,SME0,SME6,SM32,SNC,STC4,SWA4,SBX7,SBX9,SXE4,SXU,VA2,VC2N,VKX4,VM2,VNG1,VN27,VPX4,VPX9,VSD7,VSD9,VXB7,VXB9,VXE2,VXE6,VXE7,VXE9,VXG,VXQ4
			1	-	1360189	LXE8,LXU,PXE8,PXU,QAA2,QAA6,QAW,QA2,QA26,QDW9,QK4,QTQ,QWA4,QWT2,QXC9,QXE8,QXQ4,QXU,SHQ4,SXE8,SXQ4,VXE8,VX8
			-	1		
6	12310-ZE3-791	COVER COMP., HEAD (BREATHING TUBE JOINT)	1	-	-----	QC2,QDW9,QWA4,QWC4,QWT2,QXC4,QXC6,QXC9,QXS4,SNC

2

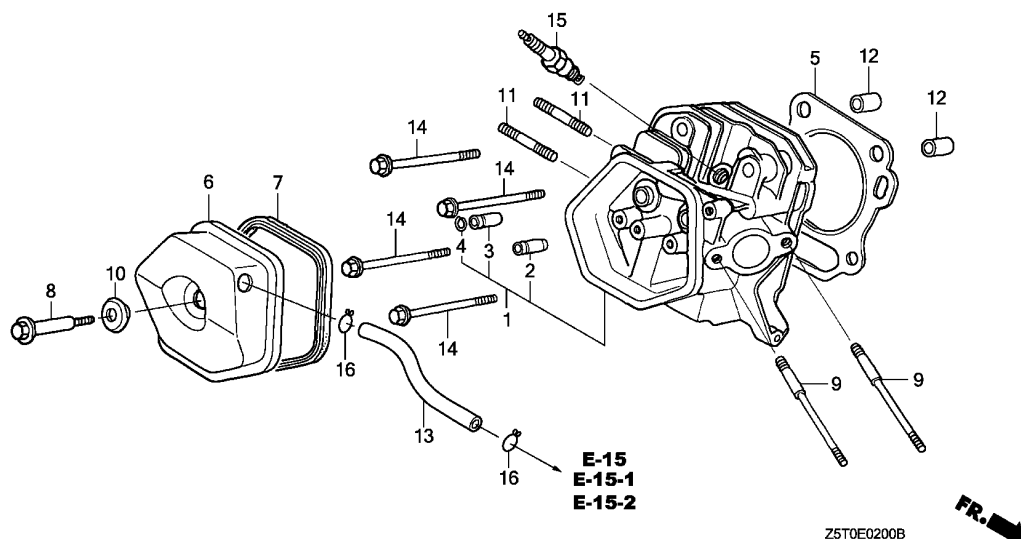

Ref. No.	Part No.	Description	Reqd. QTY		Serial No.	Parts catalogue code
			GX 390 UT1	GX 390 RT1		
(6)	12310-ZE2-020	COVER COMP., HEAD	1	-	-----	HA2,LKE,LXE4,LXE8,LXQ4,LXU,LX2,PAE2,PA2,PXD8,PXE8,PXU,QAA2,QAA6,QAE2 QAE6,QAW,QA2,QA26,QC2,QDW9,QE,QHB4,QKA4,QK4,QME0,QNE2,QNE6,QNE8,QNR2,QNR6,QTT QXB7,QXB9,QXER,QXE4,QXE6,QXE7,QXE8,QXE9,QXH9,QXQ4,QXU,QXUZ,SCK4,SHQ4 SMC1,SMD3,SME0,SME6,SM32,STC4,SWA4,SBX7,SBX9,SXE4,SXE8, SXQ4, SXU,VA2 VC2N,VKX4,VM2,VNG1,VN27,VPX4,VPX9,VSD7,VSD9,VXB7,VXB9,VXE2,VXE6,VXE7 VXE8,VXE9,VXG,VXQ4,VX8
7	12391-ZE2-020	PACKING, HEAD COVER	-	1		
8	90014-ZE2-000	BOLT, HEAD COVER	1	1		
9	90042-ZE8-000	BOLT, STUD, 8X131.5	2	2	-----	HA2,LKE,LXE4,LXE8,LXQ4,LXU,LX2,PAE2,PA2,PXD8,PXE8,PXU,QAA2,QAA6,QAE2 QAE6,QAW,QA2,QA26,QC2,QDW9,QE,QHB4,QKA4,QK4,QME0,QNB2,QNE2,QNE6,QNE8 QNR2,QNR6,QTT,QWA2,QWA4,QWC4,QWT2,QXB7,QXB9,QXC4,QXC6,QXC9,QXER,QXE4 QXE6,QXE7,QXE8,QXE9,QXH9,QXQ4,QXS4,QXU,QXUZ,SCK4,SHQ4,SMC1,SMD3,SME0 SME6,SM32,SNC,STC4,SWA4,SBX7,SBX9,SXE4,SXE8, SXQ4, SXU,VAC2,VAG2,VA2 VCN2,VDE2,VD2,VKB2,VK2,VM2,VNG1,VN27,VSD7,VSD9,VWC9,VWT4,VXB7,VXB9 VXE2,VXE6,VXE7,VXE8,VXE9,VXQ4,VX8
	90042-ZE3-700	BOLT, STUD, 8X106	2	2	-----	VAA1,VAA8,VC2,VC2N,VEP9,VKE4,VKX4,VPE5,VPE9,VPX4,VPX9,VSD4,VS49,VTH4 VWC,VWE,VXG
10	90441-ZE2-010	WASHER COMP., HEAD COVER	1	1		
11	92900-08032-0E	BOLT, STUD, 8X32	2	2	-----	HA2,LKE,LXE4,LXE8,LXQ4,LXU,LX2,PAE2,PA2,PXD8,PXE8,PXU,QAA2,QAA6,QAE2 QAE6,QAW,QA2,QA26,QC2,QDW9,QE,QHB4,QKA4,QK4,QME0,QNB2,QNE2,QNE6,QNE8 QNR2,QNR6,QTT,QWA2,QWA4,QWC4,QWT2,QXB7,QXB9,QXC4,QXC6,QXC9,QXER,QXE4 QXE6,QXE7,QXE8,QXE9,QXH9,QXQ4,QXS4,QXU,QXUZ,SCK4,SHQ4,SMC1,SMD3,SME0 SME6,SM32,SNC,STC4,SWA4,SBX7,SBX9,SXE4,SXE8, SXQ4, SXU,VAA1,VAA8,VAC2 VAG2,VA2,VCN2,VC2,VC2N,VDE2,VD2,VKB2,VKE4,VKX4,VK2,VM2,VNG1,VN27,VPX4 VSD4,VSD7,VSD9,VS49,VTH4,VWC9,VWT4,VXB7,VXB9,VXE2,VXE6,VXE7,VXE8,VXE9 VXG,VXQ4,VX8
	90018-ZK6-P10	BOLT, STUD, 8X22	2	2	-----	VEP9,VPE5,VPE9,VPX9


E-2

CYLINDER HEAD

D 3

Ref. No.	Part No.	Description	Reqd. GX 390 UT1	QTY GX 390 RT1	Serial No.	Parts catalogue code
11)	90047-ZE3-791	BOLT, STUD, 8X40	-	2	-----	VWC,VWE
12	94301-12200	DOWEL PIN, 12X20	2	2	-----	
13	12315-ZE3-840	TUBE, BREATHER	1	-	-----	QC2,QDW9,QWA4,QWC4,QWT2,QXC4,QXC6,QXC9,QXS4,SNC
	15721-ZB4-000		1	1	-----	VAA1,VAA8,VC2,VC2N,VEP9,VKE4,VKX4,VPE5,VPE9,VPX4,VPX9,VSD4,VS49,VTH4
	95005-11105-30	TUBE, 11X105 (95005-11001-30M)	1	1	-----	VWC,VWE,VXG HA2,LKE,LXE4,LXE8,LXQ4,LXU,LX2,PAE2,PA2,PXD8,PXE8,PXU,QAA2,QAA6,QAE2 QAE6,QAW,QA2,QA26,QE,QHB4,QKA4,QK4,QME0,QNB2,QNE2,QNE6,QNE8,QNR2,QNR6 QTT,QWA2,QXB7,QXB9,QXER,QXE4,QXE6,QXE7,QXE8,QXE9,QXH9,QXQ4,QXU,QXUZ SCK4,SHQ4,SMC1,SMD3,SME0,SME6,SM32,STC4,SWA4,SXB7,SXB9,SXE4,SXE8,SXQ4 SXU,VAC2,VAG2,VA2,VCN2,VDE2,VD2,VKB2,VK2,VM2,VNG1,VN27,VSD7,VSD9,VWC9 VWT4,VXB7,VXB9,VXE2,VXE6,VXE7,VXE8,VXE9,VXQ4,VX8
14	95701-10080-00	BOLT, FLANGE, 10X80	4	4	-----	
15	98079-55841	PLUG, SPARK (BP5ES) (NGK)	(1)	-	-----	SMD3
	98079-55846	PLUG, SPARK (BPR5ES) (NGK) ...	(1)	(1)	-----	HA2,LKE,LXE4,LXQ4,LX2,PAE2,PA2,QAE2,QAE6,QC2,QE,QHB4,QKA4,QME0,QNB2 QNE2,QNE6,QNE8,QNR2,QNR6,QWA2,QWC4,QXB7,QXB9,QXC4,QXC6,QXE4,QXE6,QXE7 QXE9,QXH9,QXS4,SCK4,SMC1,SMD3,SME0,SME6,SM32,SNC,STC4,SWA4,SXB7,SXB9 SXE4,SXU,VAA1,VAA8,VAC2,VAG2,VA2,VCN2,VC2,VC2N,VDE2,VD2,VEP9,VKB2 VKE4,VK2,VM2,VN27,VPE5,VPE9,VSD4,VS49,VTH4,VWC9,VWT4,VXE2,VXE6,VXE7 VXE9,VXQ4
	98079-55855	PLUG, SPARK (W16EPR-U) (DENSO)	(1)	(1)	-----	LKE,LXE4,LXQ4,LX2,PAE2,PA2,QAE2,QAE6,QC2,QE,QHB4,QKA4,QME0,QNB2,QNE2 QNE6,QNE8,QNR2,QNR6,QWA2,QWC4,QXB7,QXB9,QXC4,QXC6,QXE4,QXE6,QXE7,QXE9 QXH9,QXS4,SCK4,SMC1,SMD3,SME0,SME6,SM32,SNC,STC4,SWA4,SXB7,SXB9,SXE4 SXU,VAA1,VAA8,VAC2,VAG2,VA2,VCN2,VC2,VC2N,VDE2,VD2,VEP9,VKB2,VKE4,VK2 VM2,VN27,VPE5,VPE9,VSD4,VS49,VTH4,VWC9,VWE,VWT4,VXE2,VXE6,VXE7 VXE9,VXQ4
	98079-55876	PLUG, SPARK (BPR5ES)	(1)	(1)	-----	LXE8,LXU,PXD8,PXE8,PXU,QAA2,QAA6,QAW,QA2,QA26,QDW9,QK4,QTT,QWA4,QWT2 QXC9,QXER,QXE8,QXQ4,QXU,QXUZ,SHQ4,SXE8,SXQ4,VXE8,VX8
	98079-56876	PLUG, SPARK (BPR6ES)	-	1	-----	VAA1,VAA8,VWC,VWE
			1	-	-----	
			-	1	-----	QNB2,QTT,QWA2,VAC2,VAG2,VCN2,VC2,VDE2,VD2,VEP9,VKB2,VKE4,VKX4,VK2 VNG1,VPE5,VPE9,VPX4,VPX9,VSD4,VS49,VTH4,VWC9,VWT4,VXG
16	17316-611-000	CLIP, BREATHER TUBE	2	-	-----	QC2,QDW9,QWA4,QWC4,QWT2,QXC4,QXC6,QXC9,QXS4,SNC


2

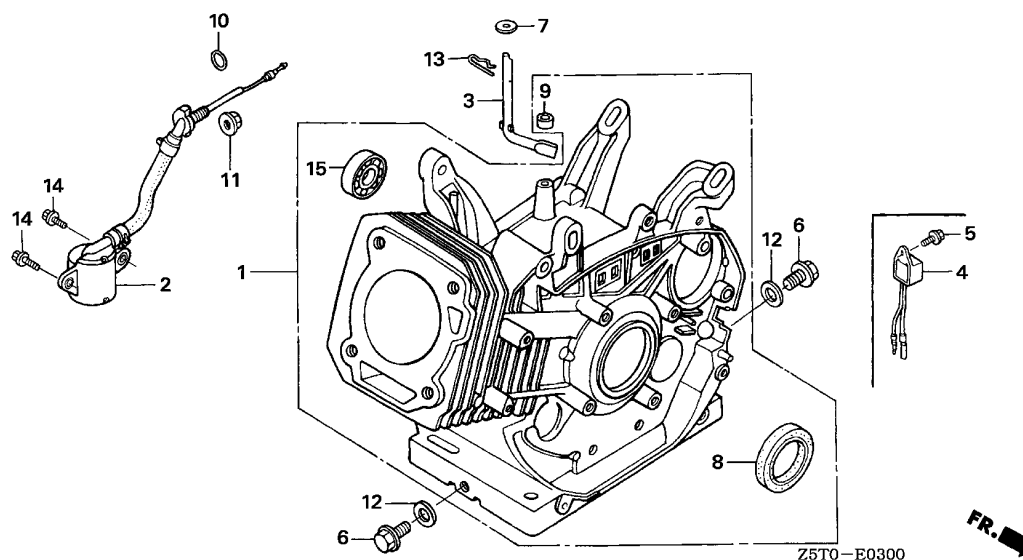

Ref. No.	L.O.N.	(Relative ref. Number) Description	F.R.T.
1	1101A0	BARREL, CYLINDER (10)	1.8
2	6151E8	SWITCH, OIL LEVEL	0.5
3	1161B4	SHAFT, GOVERNOR ARM	0.9
4	6151A0	ALERT UNIT, ENGINE OIL	0.1
8	1101E4	OIL SEAL, CRANKSHAFT :FRONT	1.2
9	1101C4	OIL SEAL, GOVERNOR ARM SHAFT	0.9
12	1101D5	WASHER, DRAIN PLUG	0.1
15	1101F4	BEARING, BALANCER WEIGHT :FRONT	0.5

Ref. No.	Part No.	Description	Reqd. QTY	Serial No.	Parts catalogue code
			GX 390 UT1	GX 390 RT1	
1	12000-ZF6-416	BARREL ASSY., CYLINDER	1	-	QE,QHB4,SMC1
	12000-Z1C-405		1	1	LXE8,PXD8,PXE8,QXER,QXE8,SXE8,VAA8,VXE8
	12000-Z1C-406		1	-	SHQ4
	12000-Z1C-407		1	1	LXU,PXU,QAA2,QAA6,QAW,QA2,QA26,QDW9,QK4,QT,T,QWA4,QWA4,QWT2,QXC9,QXQ4,QXU,QXUZ,SXQ4,VAA1,VAC2,VKX4,VNG1,VPX4,VPX9,VSD7,VSD9,VXB7,VXB9,VXG,VX8
	12000-ZF6-417	BARREL ASSY., CYLINDER (ALERT)	1	1	HA2,LXQ4,LX2,PA2,QWC4,QXB7,QXB9,QXC4,QXC6,QXS4,SMD3,SME6,SNC,SWA4,SXB7,SXB9,SXU,VAG2,VA2,VD2,VEP9,VM2,VVC,VVC9,VXQ4
	12000-ZF6-435	BARREL ASSY., CYLINDER (SELFSTARTER+ALERT)	1	1	LKE,LXE4,PAE2,QAE2,QAE6,QC2,QA4,QME0,QNB2,QNE2,QNE6,QNE8,QNR2,QNR6,QXE4,QXE6,QXE7,QXE9,QXH9,SCK4,SME0,SM32,STC4,SXE4,VN27,VXE2,VXE6,VXE7,VXE9
2	15510-ZE2-043	SWITCH ASSY., OIL LEVEL	1	-	1495141 LXE8,LXU,PXE8,PXU,QAA2,QAA6,QAW,QA2,QA26,QDW9,QK4,QT,T,QWA4,QWT2,QXC9,QXE8,QXQ4,QXU,SXE8,SXQ4,VXE8,VX8
	15510-ZE2-053		1	-	LKE,LXE4,PAE2,QAE2,QAE6,QA4,QME0,QNE2,QNE6,QNE8,QNR2,QNR6,QXE4,QXE6,QXE7,QXE9,QXH9,SCK4,SME0,SM32,STC4,SXE4,VN27,VXE2,VXE6,VXE7,VXE9
	35480-ZF6-003		1	-	HA2,LXQ4,LX2,PA2,PXD8,QC2,QWC4,QXB7,QXB9,QXC4,QXC6,QXER,QXS4,QXUZ,SMD3,SME6,SNC,SWA4,SXB7,SXB9,SXU,VA2,VC2N,VKX4,VM2,VNG1,VPX4,VPX9,VSD7,VSD9,VXB7,VXB9,VXG,VXQ4
			1	-	1495142 LXE8,LXU,PXE8,PXU,QAA2,QAA6,QAW,QA2,QA26,QDW9,QK4,QT,T,QWA4,QWT2,QXC9,QXE8,QXQ4,QXU,SXE8,SXQ4,VXE8,VX8
3	16541-ZE3-010	SHAFT, GOVERNOR ARM	-	1	
4	34150-ZH7-003	ALERT UNIT, OIL	1	-	1338742 LXU,PXU,QAA2,QAA6,QAW,QA2,QA26,QDW9,QK4,QT,T,QWA4,QWT2,QXC9,QXQ4,QXU,SXQ4,VKX4,VNG1,VPX4,VPX9,VSD7,VSD9,VXB7,VXB9,VXG,VX8

Ref. No.	Part No.	Description	Reqd. QTY		Serial No.	Parts catalogue code
			GX 390 UT1	GX 390 RT1		
(4)	34150-ZH7-013	ALERT UNIT, OIL	1	1	-----	HA2,LXQ4,LX2,PA2,QC2,QNB2,QWA2,QWC4,QXB7,QXB9,QXC4,QXC6,QXS4,QXUZ SMD3,SME6,SNC,SWA4,SB7,SB9,SXU,VAA1,VAC2,VAG2,VA2,VCN2,VD2,VEP9 VKE4,VM2,VPE5,VPE9,VSD4,VS49,VTH4,VWC,VWC9,VWE,VWT4,VXQ4
			1	-	1338743	----- LXU,PXU,QAA2,QAA6,QAW,QA2,QA26,QDW9,QK4,QT1,QWA4,QWT2,QXC9,QXQ4,QXU SXQ4,VKX4,VNG1,VPX4,VPX9,VSD7,VSD9,VXB7,VXB9,VXG,VX8
			-	1	-----	----- QTT,VKX4,VNG1,VPX4,VPX9,VXG
5	90013-883-000	BOLT, FLANGE, 6X12(CT200) ...	1	1	-----	HA2,LXQ4,LXU,LX2,PA2,PXU,QAA2,QAA6,QAW,QA2,QA26,QC2,QDW9,QK4,QNB2,QT1 QWA2,QWA4,QWC4,QWT2,QXB7,QXB9,QXC4,QXC6,QXC9,QXQ4,QXS4,QXU,QXUZ,SMD3 SME6,SNC,SWA4,SB7,SB9,SXQ4,SXU,VAA1,VAC2,VAG2,VA2,VCN2,VD2,VEP9 VKE4,VKX4,VM2,VNG1,VPE5,VPE9,VPX4,VPX9,VSD4,VSD7,VSD9,VS49,VTH4,VWC VWC9,VWE,VWT4,VXB7,VXB9,VXG,VXQ4,VX8
6	90131-883-000	BOLT, DRAIN PLUG, 12X15	2	2		
7	90446-KE1-000	WASHER, 8.2X17X0.8	1	1		
8	91201-Z1C-003	OIL SEAL, 35X52X8	1	1		
9	91203-952-771	OIL SEAL, 8X14X5	1	1		
10	91353-671-004	O-RING, 14MM(NOK)	1	-	-----	HA2,LKE,LXE4,LXE8,LXQ4,LXU,LX2,PAE2,PA2,PXD8,PXE8,PXU,QAA2,QAA6,QAE2 QAE6,QAW,QA2,QA26,QC2,QDW9,QKA4,QK4,QME0,QNE2,QNE6,QNE8,QNR2,QNR6,QT1 QWA4,QWC4,QWT2,QXB7,QXB9,QXC4,QXC6,QXC9,QXER,QXE4,QXE6,QXE7,QXE8,QXE9 QXH9,QXQ4,QXS4,QXU,QXUZ,SCK4,SMD3,SMEO,SME6,SM32,SNC,STC4,SWA4,SB7 SB9,SXE4,SXE8,SXQ4,SXU,VA2,VC2N,VKX4,VM2,VNG1,VN27,VPX4,VPX9,VSD7 VSD9,VXB7,VXB9,VXE2,VXE6,VXE7,VXE8,VXE9,VXG,VXQ4,VX8
			-	1		
11	94050-10000	NUT, FLANGE, 10MM	1	-	-----	HA2,LKE,LXE4,LXE8,LXQ4,LXU,LX2,PAE2,PA2,PXD8,PXE8,PXU,QAA2,QAA6,QAE2 QAE6,QAW,QA2,QA26,QC2,QDW9,QKA4,QK4,QME0,QNE2,QNE6,QNE8,QNR2,QNR6,QT1 QWA4,QWC4,QWT2,QXB7,QXB9,QXC4,QXC6,QXC9,QXER,QXE4,QXE6,QXE7,QXE8,QXE9 QXH9,QXQ4,QXS4,QXU,QXUZ,SCK4,SMD3,SMEO,SME6,SM32,SNC,STC4,SWA4,SB7 SB9,SXE4,SXE8,SXQ4,SXU,VA2,VC2N,VKX4,VM2,VNG1,VN27,VPX4,VPX9,VSD7 VSD9,VXB7,VXB9,VXE2,VXE6,VXE7,VXE8,VXE9,VXG,VXQ4,VX8
			-	1		
12	94109-12000	WASHER, DRAIN PLUG, 12MM	2	2		
13	94251-10000	PIN, LOCK, 10MM	1	1		
14	95701-06012-00	BOLT, FLANGE, 6X12	2	-	-----	HA2,LKE,LXE4,LXE8,LXQ4,LXU,LX2,PAE2,PA2,PXD8,PXE8,PXU,QAA2,QAA6,QAE2 QAE6,QAW,QA2,QA26,QC2,QDW9,QKA4,QK4,QME0,QNE2,QNE6,QNE8,QNR2,QNR6,QT1 QWA4,QWC4,QWT2,QXB7,QXB9,QXC4,QXC6,QXC9,QXER,QXE4,QXE6,QXE7,QXE8,QXE9 QXH9,QXQ4,QXS4,QXU,QXUZ,SCK4,SMD3,SMEO,SME6,SM32,SNC,STC4,SWA4,SB7 SB9,SXE4,SXE8,SXQ4,SXU,VA2,VC2N,VKX4,VM2,VNG1,VN27,VPX4,VPX9,VSD7 VSD9,VXB7,VXB9,VXE2,VXE6,VXE7,VXE8,VXE9,VXG,VXQ4,VX8
			-	2		
15	96100-62020-00	BEARING, RADIAL BALL, 6202 ..	1	1		

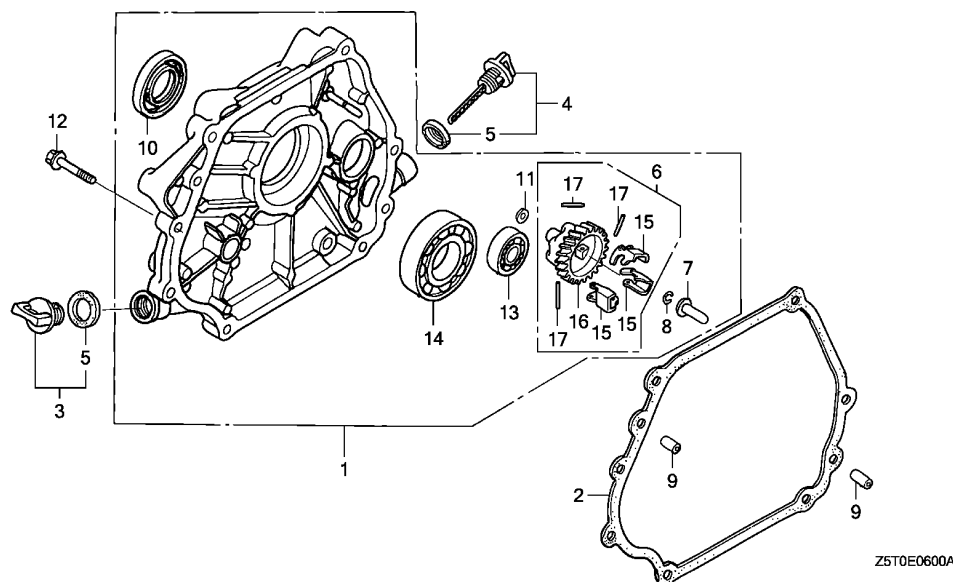

Ref. No.	L.O.N.	(Relative ref. Number) Description	F.R.T.
1	1101F1	COVER, CRANKCASE	0.2
2	1101E9	PACKING, CRANKCASE COVER	0.2
6	1161C4	GOVERNOR ASSEMBLY	0.3
7	1161B6	SLIDER, GOVERNOR	0.3
10	1101E5	OIL SEAL, CRANKSHAFT :REAR ...	0.3
13	1101F5	BEARING, BALANCER WEIGHT :REAR	0.3
14	1101A6	BEARING, CRANKSHAFT :REAR	0.3
16		(15)	
	1161A7	HOLDER, GOVERNOR WEIGHT	0.3

Ref. No.	Part No.	Description	Reqd. QTY GX 390 UT1	Serial No.	Parts catalogue code
1	11300-Z1C-000	COVER ASSY., CRANKCASE	1	-	SCK4,SHQ4,SMC1,SMD3,SME0,SME6,SM32,STC4,SWA4,SXB7,SXB9,SXE4,SXE8,SXQ4 SXU
	11300-Z1C-600		1	-	PAE2,PA2,PXD8,PXE8,PXU,QAA2,QAA6,QAE2,QAE6,QAW,QA2,QA26,QC2,QDW9,QE QHB4,QKA4,QK4,QME0,QNE2,QNE6,QNE8,QNR2,QNR6,QTT,QWA4,QWC4,QWT2,QXB7 QXB9,QXC4,QXC6,QXC9,QXER,QXE4,QXE6,QXE7,QXE8,QXE9,QXH9,QXQ4,QXS4,QXU QXUZ,SNC,VA2,VC2N,VKX4,VM2,VNG1,VN27,VPX4,VPX9,VSD7,VSD9,VXB7,VXB9 VXE2,VXE6,VXE7,VXE8,VXE9,VXG,VXQ4,VX8
2	11381-ZE3-801	PACKING, CASE COVER	- 1	-	PAE2,PA2,PXD8,PXE8,PXU,QAA2,QAA6,QAE2,QAE6,QAW,QA2,QA26,QC2,QDW9,QE QHB4,QKA4,QK4,QME0,QNE2,QNE6,QNE8,QNR2,QNR6,QTT,QWA4,QWC4,QWT2,QXB7 QXB9,QXC4,QXC6,QXC9,QXER,QXE4,QXE6,QXE7,QXE8,QXE9,QXH9,QXQ4,QXS4,QXU QXUZ,SCK4,SHQ4,SMC1,SMD3,SME0,SME6,SM32,SNC,STC4,SWA4,SXB7,SXB9,SXE4 SXE8,SXQ4,SXU,VA2,VC2N,VKX4,VM2,VNG1,VN27,VPX4,VPX9,VSD7,VSD9,VXB7 VXB9,VXE2,VXE6,VXE7,VXE8,VXE9,VXG,VXQ4,VX8
3	15600-Z0T-820	CAP ASSY., OIL FILLER	- 1	-	PAE2,PA2,PXD8,PXE8,PXU,QAA2,QAA6,QAE2,QAE6,QAW,QA2,QA26,QC2,QDW9,QE QKA4,QK4,QME0,QNE2,QNE6,QNE8,QNR2,QNR6,QTT,QWA4,QWC4,QWT2,QXB7,QXB9 QXC4,QXC6,QXC9,QXER,QXE4,QXE6,QXE7,QXE8,QXE9,QXH9,QXQ4,QXS4,QXU,QXUZ SCK4,SHQ4,SMC1,SMD3,SME0,SME6,SM32,SNC,STC4,SWA4,SXB7,SXB9,SXE4,SXE8 SXQ4,SXU,VA2,VKX4,VM2,VNG1,VN27,VPX4,VPX9,VSD7,VSD9,VXB7,VXB9,VXE2 VXE6,VXE7,VXE8,VXE9,VXG,VXQ4,VX8
	15600-ZG4-003		1	1	QHB4,QNB2,QWA2,VAA1,VAA8,VAC2,VAG2,VCN2,VC2,VC2N,VDE2,VD2,VEP9,VKB2 VK2,VPE5,VPE9,VSD4,VS49,VTH4,VWC,VWC9,VWE,VWT4
4	15600-Z1C-000	CAP ASSY., OIL FILLER	1	1	PAE2,PA2,PXD8,PXE8,PXU,QAA2,QAA6,QAE2,QAE6,QAW,QA2,QA26,QC2,QDW9,QE QKA4,QK4,QME0,QNE2,QNE6,QNE8,QNR2,QNR6,QTT,QWA4,QWC4,QWT2,QXB7,QXB9 QXC4,QXC6,QXC9,QXER,QXE4,QXE6,QXE7,QXE8,QXE9,QXH9,QXQ4,QXS4,QXU,QXUZ SCK4,SHQ4,SMC1,SMD3,SME0,SME6,SM32,SNC,STC4,SWA4,SXB7,SXB9,SXE4,SXE8 SXQ4,SXU,VA2,VKX4,VM2,VNG1,VN27,VPX4,VPX9,VSD7,VSD9,VXB7,VXB9,VXE2 VXE6,VXE7,VXE8,VXE9,VXG,VXQ4,VX8


E-6

CRANKCASE COVER(1)


D 7

Ref. No.	Part No.	Description	Reqd. QTY		Serial No.	Parts catalogue code
			GX 390 UT1	GX 390 RT1		
(4)	15600-735-003	CAP ASSY., OIL FILLER	1	1	-----	QHB4,QNB2,QWA2,VAA1,VAA8,VAC2,VAG2,VCN2,VC2,VC2N,VDE2,VD2,VEP9,VKB2,VKE4,VK2,VPE5,VPE9,VWC,VWC9,VWE,VWT4
5	15625-Z0T-800	PACKING, OIL FILLER CAP	2	2	-----	PAE2,PA2,PXD8,PXE8,PXU,QAA2,QAA6,QAE2,QAE6,QAW,QA2,QA26,QC2,QDW9,QE,QKA4,QK4,QME0,QNE2,QNE6,QNE8,QNR2,QNR6,QTT,QWA4,QWC4,QWT2,QXB7,QXB9,QXC4,QXC6,QXC9,QXER,QXE4,QXE6,QXE7,QXE8,QXE9,QXH9,QXQ4,QXS4,QXU,QXUZ,SCK4,SHQ4,SMC1,SMD3,SME0,SME6,SM32,SNC,STC4,SWA4,SXB7,SXB9,SXE4,SXE8,SXQ4,SXU,VA2,VKX4,VM2,VNG1,VN27,VPX4,VPX9,VSD7,VSD9,VXB7,VXE2,VXE6,VXE7,VXE8,VXE9,VXG,VXQ4,VX8
	15625-ZE1-003		2	2	-----	QHB4,QNB2,QNR2,QNR6,QWA2,VAA1,VAA8,VAC2,VAG2,VCN2,VC2,VC2N,VDE2,VD2,VEP9,VKB2,VKE4,VK2,VM2,VPE5,VPE9,VSD4,VS49,VTH4,VWC,VWC9,VWE,VWT4
6	16510-ZE3-000	GOVERNOR ASSY.	1	-	-----	PAE2,PA2,PXD8,PXE8,PXU,QAA2,QAA6,QAE2,QAE6,QAW,QA2,QA26,QC2,QDW9,QE,QHB4,QKA4,QK4,QME0,QNE2,QNE6,QNE8,QNR2,QNR6,QTT,QWA4,QWC4,QWT2,QXB7,QXB9,QXC4,QXC6,QXC9,QXER,QXE4,QXE6,QXE7,QXE8,QXE9,QXH9,QXQ4,QXS4,QXU,QXUZ,SCK4,SHQ4,SMC1,SMD3,SME0,SME6,SM32,SNC,STC4,SWA4,SXB7,SXB9,SXE4,SXE8,SXQ4,SXU,VA2,VC2N,VKX4,VM2,VNG1,VN27,VPX4,VPX9,VSD7,VSD9,VXB7,VXB9,VXE2,VXE6,VXE7,VXE8,VXE9,VXG,VXQ4,VX8
7	16531-Z0A-000	SLIDER, GOVERNOR	-	1	-----	PAE2,PA2,PXD8,PXE8,PXU,QAA2,QAA6,QAE2,QAE6,QAW,QA2,QA26,QC2,QDW9,QE,QHB4,QKA4,QK4,QME0,QNE2,QNE6,QNE8,QNR2,QNR6,QTT,QWA4,QWC4,QWT2,QXB7,QXB9,QXC4,QXC6,QXC9,QXER,QXE4,QXE6,QXE7,QXE8,QXE9,QXH9,QXQ4,QXS4,QXU,QXUZ,SCK4,SHQ4,SMC1,SMD3,SME0,SME6,SM32,SNC,STC4,SWA4,SXB7,SXB9,SXE4,SXE8,SXQ4,SXU,VA2,VC2N,VKX4,VM2,VNG1,VN27,VPX4,VPX9,VSD7,VSD9,VXB7,VXB9,VXE2,VXE6,VXE7,VXE8,VXE9,VXG,VXQ4,VX8
8	90602-ZE1-000	CLIP, GOVERNOR HOLDER	-	1	-----	PAE2,PA2,PXD8,PXE8,PXU,QAA2,QAA6,QAE2,QAE6,QAW,QA2,QA26,QC2,QDW9,QE,QHB4,QKA4,QK4,QME0,QNE2,QNE6,QNE8,QNR2,QNR6,QTT,QWA4,QWC4,QWT2,QXB7,QXB9,QXC4,QXC6,QXC9,QXER,QXE4,QXE6,QXE7,QXE8,QXE9,QXH9,QXQ4,QXS4,QXU,QXUZ,SCK4,SHQ4,SMC1,SMD3,SME0,SME6,SM32,SNC,STC4,SWA4,SXB7,SXB9,SXE4,SXE8,SXQ4,SXU,VA2,VC2N,VKX4,VM2,VNG1,VN27,VPX4,VPX9,VSD7,VSD9,VXB7,VXB9,VXE2,VXE6,VXE7,VXE8,VXE9,VXG,VXQ4,VX8
9	90701-HC4-000	DOWEL PIN, 8X12	-	1	-----	PAE2,PA2,PXD8,PXE8,PXU,QAA2,QAA6,QAE2,QAE6,QAW,QA2,QA26,QC2,QDW9,QE,QHB4,QKA4,QK4,QME0,QNE2,QNE6,QNE8,QNR2,QNR6,QTT,QWA4,QWC4,QWT2,QXB7,QXB9,QXC4,QXC6,QXC9,QXER,QXE4,QXE6,QXE7,QXE8,QXE9,QXH9,QXQ4,QXS4,QXU,QXUZ,SCK4,SHQ4,SMC1,SMD3,SME0,SME6,SM32,SNC,STC4,SWA4,SXB7,SXB9,SXE4,SXE8,SXQ4,SXU,VA2,VC2N,VKX4,VM2,VNG1,VN27,VPX4,VPX9,VSD7,VSD9,VXB7,VXB9,VXE2,VXE6,VXE7,VXE8,VXE9,VXG,VXQ4,VX8
10	91201-Z1C-003	OIL SEAL, 35X52X8	-	2	-----	PAE2,PA2,PXD8,PXE8,PXU,QAA2,QAA6,QAE2,QAE6,QAW,QA2,QA26,QC2,QDW9,QE,QHB4,QKA4,QK4,QME0,QNE2,QNE6,QNE8,QNR2,QNR6,QTT,QWA4,QWC4,QWT2,QXB7,QXB9,QXC4,QXC6,QXC9,QXER,QXE4,QXE6,QXE7,QXE8,QXE9,QXH9,QXQ4,QXS4,QXU,QXUZ,SCK4,SHQ4,SMC1,SMD3,SME0,SME6,SM32,SNC,STC4,SWA4,SXB7,SXB9,SXE4,SXE8,SXQ4,SXU,VA2,VC2N,VKX4,VM2,VNG1,VN27,VPX4,VPX9,VSD7,VSD9,VXB7,VXB9,VXE2,VXE6,VXE7,VXE8,VXE9,VXG,VXQ4,VX8
			-	1	-----	PAE2,PA2,PXD8,PXE8,PXU,QAA2,QAA6,QAE2,QAE6,QAW,QA2,QA26,QC2,QDW9,QE,QHB4,QKA4,QK4,QME0,QNE2,QNE6,QNE8,QNR2,QNR6,QTT,QWA4,QWC4,QWT2,QXB7,QXB9,QXC4,QXC6,QXC9,QXER,QXE4,QXE6,QXE7,QXE8,QXE9,QXH9,QXQ4,QXS4,QXU,QXUZ,SCK4,SHQ4,SMC1,SMD3,SME0,SME6,SM32,SNC,STC4,SWA4,SXB7,SXB9,SXE4,SXE8,SXQ4,SXU,VA2,VC2N,VKX4,VM2,VNG1,VN27,VPX4,VPX9,VSD7,VSD9,VXB7,VXB9,VXE2,VXE6,VXE7,VXE8,VXE9,VXG,VXQ4,VX8
11	94101-06800	WASHER, PLAIN, 6MM	1	-	-----	PAE2,PA2,PXD8,PXE8,PXU,QAA2,QAA6,QAE2,QAE6,QAW,QA2,QA26,QC2,QDW9,QE,QHB4,QKA4,QK4,QME0,QNE2,QNE6,QNE8,QNR2,QNR6,QTT,QWA4,QWC4,QWT2,QXB7,QXB9,QXC4,QXC6,QXC9,QXER,QXE4,QXE6,QXE7,QXE8,QXE9,QXH9,QXQ4,QXS4,QXU,QXUZ,SCK4,SHQ4,SMC1,SMD3,SME0,SME6,SM32,SNC,STC4,SWA4,SXB7,SXB9,SXE4,SXE8,SXQ4,SXU,VA2,VC2N,VKX4,VM2,VNG1,VN27,VPX4,VPX9,VSD7,VSD9,VXB7,VXB9,VXE2,VXE6,VXE7,VXE8,VXE9,VXG,VXQ4,VX8
			-	1	-----	PAE2,PA2,PXD8,PXE8,PXU,QAA2,QAA6,QAE2,QAE6,QAW,QA2,QA26,QC2,QDW9,QE,QHB4,QKA4,QK4,QME0,QNE2,QNE6,QNE8,QNR2,QNR6,QTT,QWA4,QWC4,QWT2,QXB7,QXB9,QXC4,QXC6,QXC9,QXER,QXE4,QXE6,QXE7,QXE8,QXE9,QXH9,QXQ4,QXS4,QXU,QXUZ,SCK4,SHQ4,SMC1,SMD3,SME0,SME6,SM32,SNC,STC4,SWA4,SXB7,SXB9,SXE4,SXE8,SXQ4,SXU,VA2,VC2N,VKX4,VM2,VNG1,VN27,VPX4,VPX9,VSD7,VSD9,VXB7,VXB9,VXE2,VXE6,VXE7,VXE8,VXE9,VXG,VXQ4,VX8


2

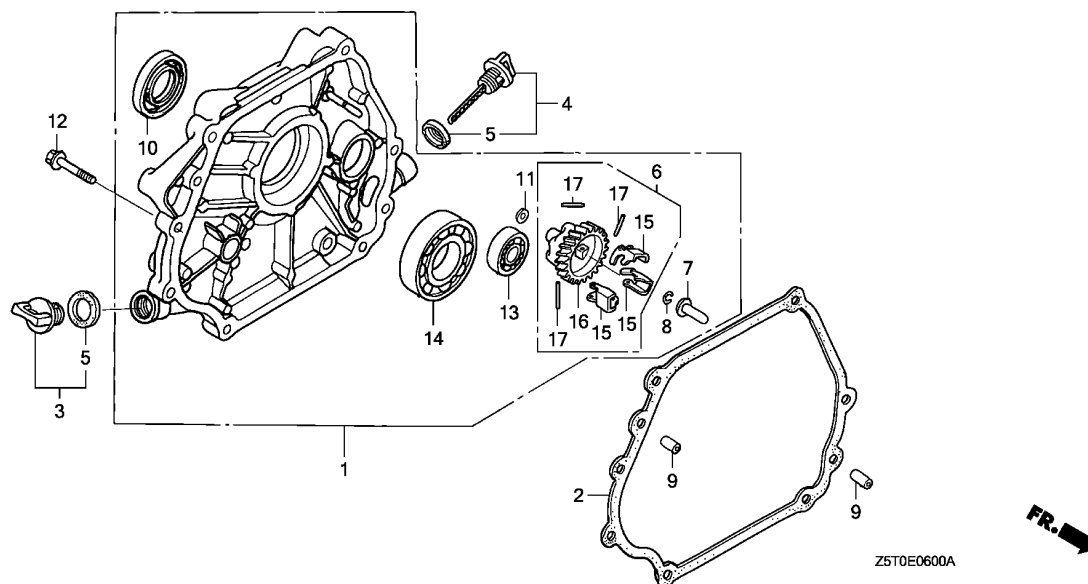

Ref. No.	Part No.	Description	Reqd. QTY		Serial No.	Parts catalogue code
			GX 390 UT1	GX 390 RT1		
12	95701-08040-00	BOLT, FLANGE, 8X40	7	-	-----	PAE2,PA2,PXD8,PXE8, PXU,QAA2,QAA6,QAE2,QAE6,QAW,QA2,QA26,QC2,QDW9,QE QHB4,QKA4,QK4,QME0,QNE2,QNE6,QNE8,QNR2,QNR6,QT1,QWA4,QWC4,QWT2,QXB7 QXB9,QXC4,QXC6,QXC9,QXER,QXE4,QXE6,QXE7,QXE8,QXE9,QXH9,QXQ4,QXS4,QXU QXUZ,SCK4,SHQ4,SMC1,SMD3,SME0,SME6,SM32,SNC,STC4,SWA4,SBX7,SBX9,SXE4 SXE8,SXQ4,SXU,VA2,VC2N,VKX4,VM2,VNG1,VN27,VPX4,VPX9,VSD7,VSD9,VXB7 VXB9,VXE2,VXE6,VXE7,VXE8,VXE9,VXG,VXQ4,VX8
13	96100-62020-00	BEARING, RADIAL BALL, 6202 ..	1	7	-----	PAE2,PA2,PXD8,PXE8, PXU,QAA2,QAA6,QAE2,QAE6,QAW,QA2,QA26,QC2,QDW9,QE QHB4,QKA4,QK4,QME0,QNE2,QNE6,QNE8,QNR2,QNR6,QT1,QWA4,QWC4,QWT2,QXB7 QXB9,QXC4,QXC6,QXC9,QXER,QXE4,QXE6,QXE7,QXE8,QXE9,QXH9,QXQ4,QXS4,QXU QXUZ,SCK4,SHQ4,SMC1,SMD3,SME0,SME6,SM32,SNC,STC4,SWA4,SBX7,SBX9,SXE4 SXE8,SXQ4,SXU,VA2,VC2N,VKX4,VM2,VNG1,VN27,VPX4,VPX9,VSD7,VSD9,VXB7 VXB9,VXE2,VXE6,VXE7,VXE8,VXE9,VXG,VXQ4,VX8
14	96100-62070-00	BEARING, RADIAL BALL, 6207 ..	1	1	-----	PAE2,PA2,PXD8,PXE8, PXU,QAA2,QAA6,QAE2,QAE6,QAW,QA2,QA26,QC2,QDW9,QE QHB4,QKA4,QK4,QME0,QNE2,QNE6,QNE8,QNR2,QNR6,QT1,QWA4,QWC4,QWT2,QXB7 QXB9,QXC4,QXC6,QXC9,QXER,QXE4,QXE6,QXE7,QXE8,QXE9,QXH9,QXQ4,QXS4,QXU QXUZ,SCK4,SHQ4,SMC1,SMD3,SME0,SME6,SM32,SNC,STC4,SWA4,SBX7,SBX9,SXE4 SXE8,SXQ4,SXU,VA2,VC2N,VKX4,VM2,VNG1,VN27,VPX4,VPX9,VSD7,VSD9,VXB7 VXB9,VXE2,VXE6,VXE7,VXE8,VXE9,VXG,VXQ4,VX8
15	16511-ZE8-000	WEIGHT, GOVERNOR	3	1	-----	PAE2,PA2,PXD8,PXE8, PXU,QAA2,QAA6,QAE2,QAE6,QAW,QA2,QA26,QC2,QDW9,QE QHB4,QKA4,QK4,QME0,QNE2,QNE6,QNE8,QNR2,QNR6,QT1,QWA4,QWC4,QWT2,QXB7 QXB9,QXC4,QXC6,QXC9,QXER,QXE4,QXE6,QXE7,QXE8,QXE9,QXH9,QXQ4,QXS4,QXU QXUZ,SCK4,SHQ4,SMC1,SMD3,SME0,SME6,SM32,SNC,STC4,SWA4,SBX7,SBX9,SXE4 SXE8,SXQ4,SXU,VA2,VC2N,VKX4,VM2,VNG1,VN27,VPX4,VPX9,VSD7,VSD9,VXB7 VXB9,VXE2,VXE6,VXE7,VXE8,VXE9,VXG,VXQ4,VX8
			-	3		

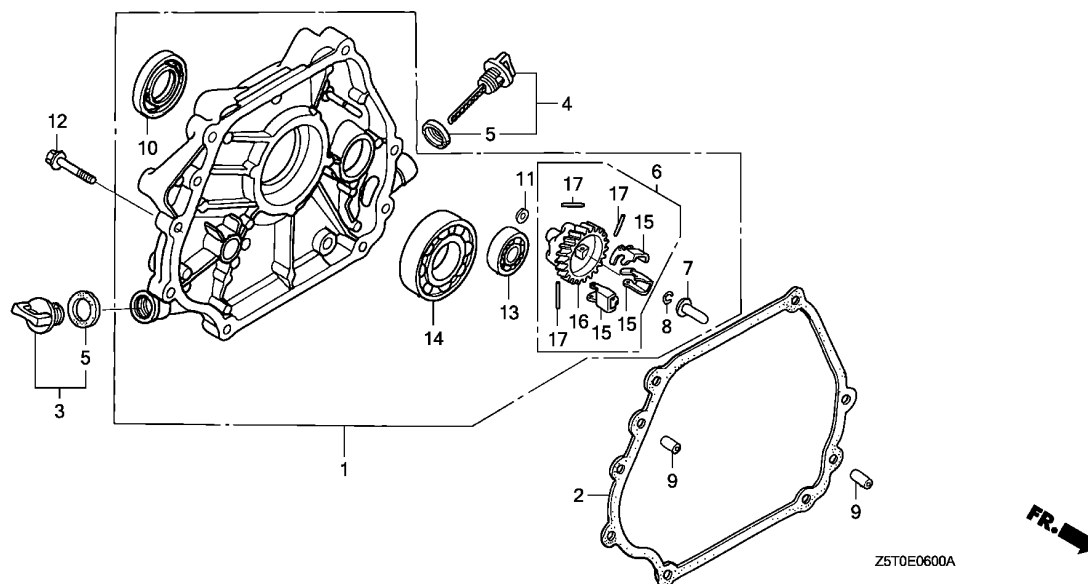


Ref. No.	Part No.	Description	Reqd. QTY		Serial No.	Parts catalogue code
			GX 390 UT1	GX 390 RT1		
16	16512-ZE3-000	HOLDER, GOVERNOR WEIGHT	1	-	-----	PAE2,PA2,PXD8,PXE8, PXU,QAA2,QAA6,QAE2,QAE6,QAW,QA2,QA26,QC2,QDW9,QE QHB4,QKA4,QK4,QME0,QNE2,QNE6,QNE8,QNR2,QNR6,QT1,QWA4,QWC4,QWT2,QXB7 QXB9,QXC4,QXC6,QXC9,QXER,QXE4,QXE6,QXE7,QXE8,QXE9,QXH9,QXQ4,QXS4,QXU QXUZ,SCK4,SHQ4,SMC1,SMD3,SME0,SME6,SM32,SNC,STC4,SWA4,SBX7,SBX9,SXE4 SXE8,SXQ4,SXU,VA2,VC2N,VKX4,VM2,VNG1,VN27,VPX4,VPX9,VSD7,VSD9,VXB7 VXB9,VXE2,VXE6,VXE7,VXE8,VXE9,VXG,VXQ4,VX8
17	16513-ZE2-000	PIN, GOVERNOR WEIGHT	3	1	-----	PAE2,PA2,PXD8,PXE8, PXU,QAA2,QAA6,QAE2,QAE6,QAW,QA2,QA26,QC2,QDW9,QE QHB4,QKA4,QK4,QME0,QNE2,QNE6,QNE8,QNR2,QNR6,QT1,QWA4,QWC4,QWT2,QXB7 QXB9,QXC4,QXC6,QXC9,QXER,QXE4,QXE6,QXE7,QXE8,QXE9,QXH9,QXQ4,QXS4,QXU QXUZ,SCK4,SHQ4,SMC1,SMD3,SME0,SME6,SM32,SNC,STC4,SWA4,SBX7,SBX9,SXE4 SXE8,SXQ4,SXU,VA2,VC2N,VKX4,VM2,VNG1,VN27,VPX4,VPX9,VSD7,VSD9,VXB7 VXB9,VXE2,VXE6,VXE7,VXE8,VXE9,VXG,VXQ4,VX8
			-	3		

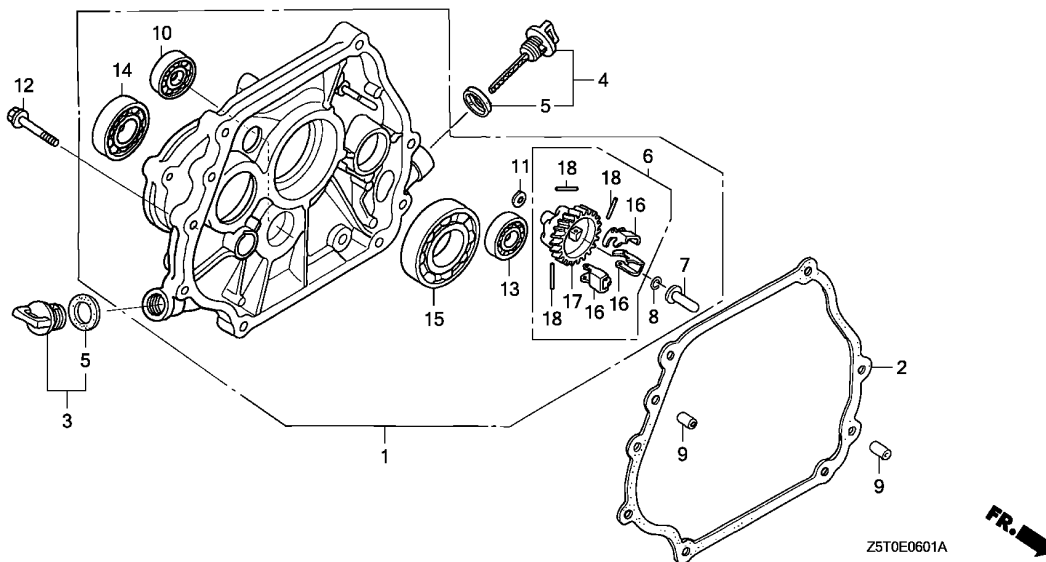


Ref. No.	L.O.N.	(Relative ref. Number) Description	F.R.T.
1	1101G0	COVER, CRANKCASE(A)	0.3
2	1101F9	PACKING, CRANKCASE COVER(A) ..	0.3
6	1161C4	GOVERNOR ASSEMBLY	0.3
7	1161B6	SLIDER, GOVERNOR	0.3
10	2101U3	BEARING, COUNTERSHAFT :FRONT ..	0.4
13	1101G5	BEARING, BALANCER WEIGHT(A) :REAR	0.4
14	2141A7	BEARING, POWER TAKE OFF SHAFT :FRONT	0.4
15	1101G4	BEARING, CRANKSHAFT(A) :REAR ..	0.4
17	1161A7	HOLDER, GOVERNOR WEIGHT	0.3

Ref. No.	Part No.	Description	Reqd. QTY	Serial No.	Parts catalogue code
			GX 390 UT1	GX 390 RT1	
1	11300-ZE3-614	COVER ASSY., CRANKCASE	1	-	LKE,LXE4,LXE8,LXQ4,LXU,LX2
	11300-ZF6-W32		1	-	HA2
2	11381-ZE3-801	PACKING, CASE COVER	1	-	HA2,LKE,LXE4,LXE8,LXQ4,LXU,LX2
3	15600-ZOT-820	CAP ASSY., OIL FILLER	1	-	HA2,LKE,LXE4,LXE8,LXQ4,LXU,LX2
4	15600-Z1C-000	CAP ASSY., OIL FILLER	1	-	HA2,LKE,LXE4,LXE8,LXQ4,LXU,LX2
5	15625-ZOT-800	PACKING, OIL FILLER CAP	2	-	HA2,LKE,LXE4,LXE8,LXQ4,LXU,LX2
6	16510-ZE3-000	GOVERNOR ASSY.	1	-	HA2,LKE,LXE4,LXE8,LXQ4,LXU,LX2
7	16531-Z0A-000	SLIDER, GOVERNOR	1	-	HA2,LKE,LXE4,LXE8,LXQ4,LXU,LX2
8	90602-ZE1-000	CLIP, GOVERNOR HOLDER	1	-	HA2,LKE,LXE4,LXE8,LXQ4,LXU,LX2
9	90701-HC4-000	DOWEL PIN, 8X12	2	-	HA2,LKE,LXE4,LXE8,LXQ4,LXU,LX2
10	91009-KJ1-003	BEARING, RADIAL BALL, 6202 (NTN)	1	-	HA2,LKE,LXE4,LXE8,LXQ4,LXU,LX2
11	94101-06800	WASHER, PLAIN, 6MM	1	-	HA2,LKE,LXE4,LXE8,LXQ4,LXU,LX2
12	95701-08040-00	BOLT, FLANGE, 8X40	7	-	HA2,LKE,LXE4,LXE8,LXQ4,LXU,LX2
13	96100-62020-00	BEARING, RADIAL BALL, 6202 ..	1	-	HA2,LKE,LXE4,LXE8,LXQ4,LXU,LX2
14	96100-62040-00	BEARING, RADIAL BALL, 6204 ..	1	-	LKE,LXE4,LXE8,LXQ4,LXU,LX2
	91102-GE0-003	BEARING, RADIAL BALL, 6204 (TOYO)	1	-	HA2
15	96100-62070-00	BEARING, RADIAL BALL, 6207 ..	1	-	HA2,LKE,LXE4,LXE8,LXQ4,LXU,LX2
16	16511-ZE8-000	WEIGHT, GOVERNOR	3	-	HA2,LKE,LXE4,LXE8,LXQ4,LXU,LX2
17	16512-ZE3-000	HOLDER, GOVERNOR WEIGHT	1	-	HA2,LKE,LXE4,LXE8,LXQ4,LXU,LX2
18	16513-ZE2-000	PIN, GOVERNOR WEIGHT	3	-	HA2,LKE,LXE4,LXE8,LXQ4,LXU,LX2

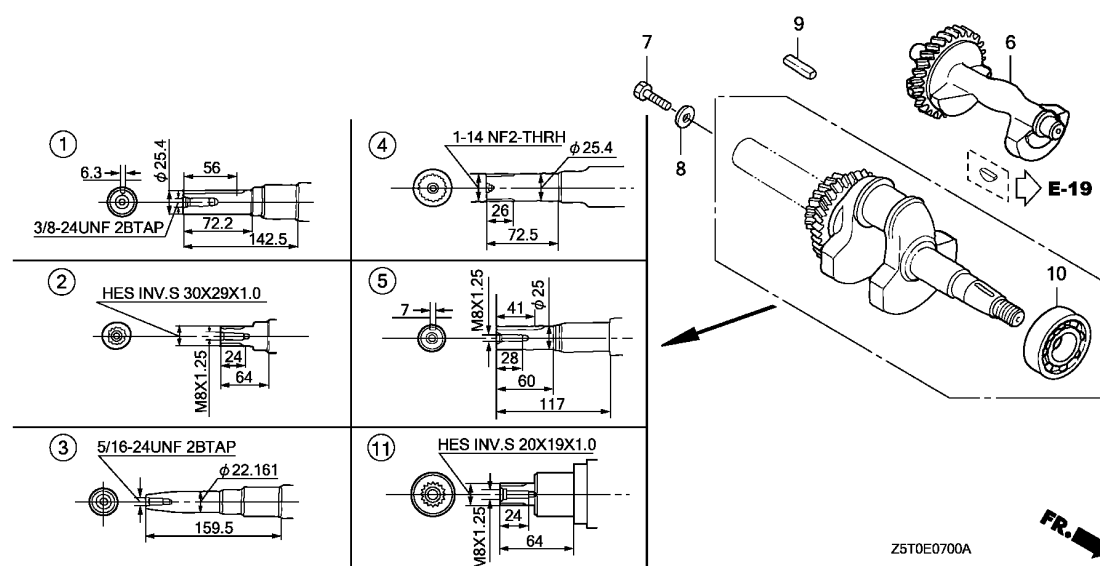


Ref. No.	L.O.N.	(Relative ref. Number) Description	F.R.T.
1		(2,3,4,5,11)	
1101F0		CRANKSHAFT	1.1
1101D8		WEIGHT, BALANCER	0.4
1101A4		BEARING, CRANKSHAFT :FRONT ...	1.3

Ref. No.	Part No.	Description	Reqd. QTY	Serial No.	Parts catalogue code
			GX 390 UT1		
1	13310-ZF6-W11	CRANKSHAFT COMP.	1	1199162	QAA2,QAA6,QA2,QA26,QXE8,QXQ4,QXU
	13310-ZF6-W12		1	1199163	QAE2,QAE6,QAW,QC2,QDW9,QE,QHB4,QKA4,QK4,QME0,QNB2,QNE2,QNE6,QNE8,QNR2,QNR6,QTT,QWA2,QWA4,QWC4,QWT2,QXC4,QXC6,QXC9,QXER,QXE4,QXE6,QXS4,QXUZ
	13310-ZK6-602		1		QAA2,QAA6,QA2,QA26,QXE8,QXQ4,QXU
2	13310-ZF6-W21	CRANKSHAFT COMP.	1	1141663	QXB7,QXB9,QXE7,QXE9,QXH9
	13310-ZF6-W22		1	1141664	LXE8,LXU
3	13310-ZF6-W41	CRANKSHAFT COMP.	1	1208706	LKE,LXE4,LXQ4,LX2
	13310-ZF6-W42		1	1208707	LXE8,LXU
	13310-ZK6-672		1		VXE8,VX8
4	13310-ZF6-W61	CRANKSHAFT COMP.	1	1271955	VAA1,VAA8,VAC2,VAG2,VA2,VCN2,VC2,VC2N,VDE2,VD2,VKB2,VKE4,VKX4,VK2,VM2,VNG1,VPE5,VPX4,VSD4,VTH4,VWC,VWE,VWT4,VXE2,VXE6,VXG,VXQ4
	13310-ZF6-W62		1	1271956	VXE8,VX8
5	13310-ZF6-W71	CRANKSHAFT COMP.	1	1196462	VEP9,VN27,VPE9,VPX9,VSD7,VSD9,VS49,VWC9,VXB7,VXB9,VXE7,VXE9
	13310-ZF6-W72		1	1196463	PXE8,PXU
	13310-ZK6-020		1		PAE2,PA2,PIXD8
6	13351-ZE3-010	WEIGHT, BALANCER	1		PXE8,PXU
7	90107-959-003	BOLT, HEX., 8X25	1		SXE8,SXQ4
	92101-08025-0A		1		SCK4,SHQ4,SMC1,SMD3,SME0,SME6,SM32,SNC,STC4,SWA4,SXE4,SXU
	95701-08025-00	BOLT, FLANGE, 8X25	1		SXE8,SXQ4
8	90473-ZE3-010	WASHER, 8MM	1		SXB7,SXB9
	90473-842-000		1		LKE,LXE4,LXE8,LXQ4,LXU,LX2
	90534-706-010	WASHER, LOCK, 8MM	1		HA2
					SM32,STC4

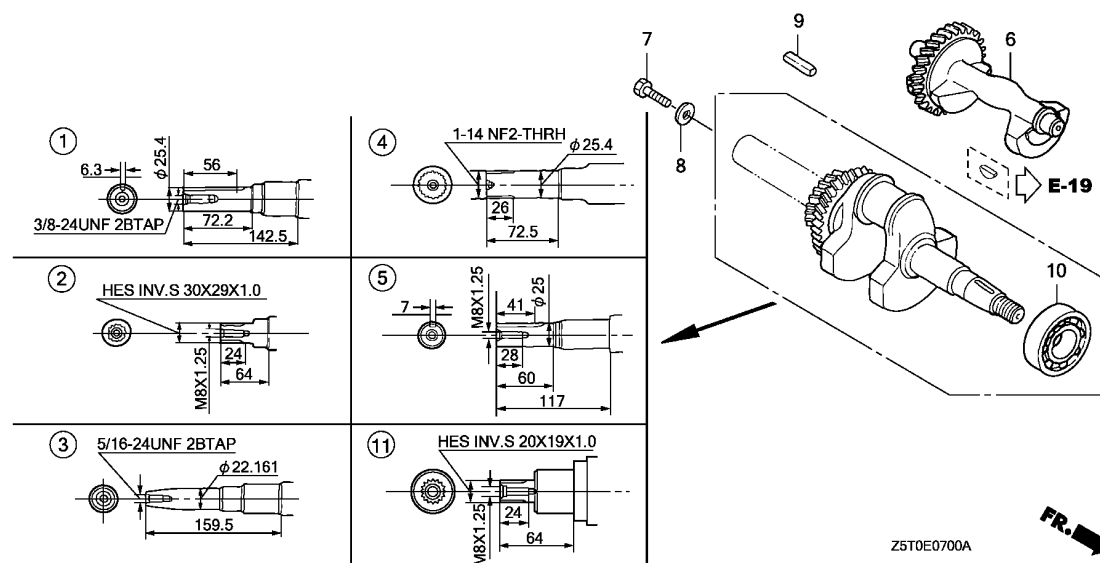


Ref. No.	Part No.	Description	Reqd. QTY		Serial No.	Parts catalogue code
			GX 390 UT1	GX 390 RT1		
9	90741-805-000	KEY, 7X7X33	1	-	-----	LKE,LXE4,LXE8,LXQ4,LXU,LX2,SCK4,SHQ4,SMC1,SM32,STC4,SWA4,SXB7,SXB9 SXE4,SXE8,SXQ4,SXU
	90741-889-810	KEY, 7X7X33 (YELLOW)	1	-	-----	SNC
			(1)	-	-----	LKE,LXE4,LXE8,LXQ4,LXU,LX2,SCK4,SHQ4,SMC1,SMD3,SME0,SME6,STC4,SWA4 SXB7,SXB9,SXE4,SXE8,SXQ4,SXU
	90745-ZE2-600	KEY, 6.3X6.3X43	1	1	-----	HA2,PAE2,PA2,QAA2,QAA6,QAE2,QAE6,QAW,QA2,QA26,QC2,QDW9,QE,QKA4,QK4 QNB2,QNE2,QNE6,QNE8,QNR2,QNR6,QT1,QWA2,QWA4,QWC4,QWT2,QXB7,QXB9,QXC4 QXC6,QXC9,QXER,QXE4,QXE6,QXE7,QXE8,QXE9,QXH9,QXQ4,QXS4,QXU,QXUZ
10	91001-ZF6-003	BEARING, RADIAL BALL, 6207S -	1	-	-----	1161663 LXE8,LXU
			1	-	-----	1196462 SXE8,SXQ4
			1	-	-----	1199162 QAA2,QAA6,QA2,QA26,QXE8,QXQ4,QXU
			1	-	-----	1208706 VXE8,VX8
			1	-	-----	1271955 PXE8,PXU
	91001-ZF6-013	BEARING, RADIAL BALL, 6207SH	1	-	-----	HA2,LKE,LXE4,LXQ4,LX2,PAE2,PA2,PXD8,QAE2,QAE6,QAW,QC2,QDW9,QE,QHB4 QKA4,QK4,QME0,QNE2,QNE6,QNE8,QNR2,QNR6,QT1,QWA4,QWC4,QWT2,QXB7,QXB9 QXC4,QXC6,QXC9,QXER,QXE4,QXE6,QXE7,QXE9,QXH9,QXS4,QXUZ,SCK4,SHQ4,SMC1 SMD3,SME0,SME6,SM32,SNC,STC4,SWA4,SXB7,SXB9,SXE4,SXU,VA2,VC2N,VKX4 VM2,VNG1,VN27,VPX4,VPX9,VSD7,VSD9,VXB7,VXB9,VXE2,VXE6,VXE7,VXE9,VXG VXQ4
			1	-	1161664	----- LXE8,LXU
			1	-	1196463	----- SXE8,SXQ4
			1	-	1199163	----- QAA2,QAA6,QA2,QA26,QXE8,QXQ4,QXU
			1	-	1208707	----- VXE8,VX8
			1	-	1271956	----- PXE8,PXU
			-	1		
11	13310-ZF6-W32	CRANKSHAFT COMP.	1	-	-----	HA2

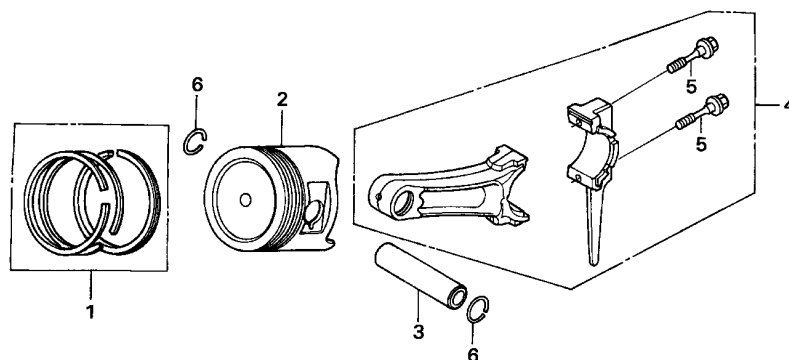

Z5T0-E0800

Ref. No.	L.O.N.	(Relative ref. Number) Description	F.R.T.
2		(1,3,4)	
1111R1		PISTON AND/OR RING SET AND/OR BEARING AND/OR RODINCLUDES: Inspection/ Measurement/Cleaning	1.2

Ref. No.	Part No.	Description	Reqd. QTY	Serial No.	Parts catalogue code
			GX 390 UT1 RT1		
1	13010-Z1C-800	RING SET, PISTON (STD.) (RIKEN)	1	-----	1382377 LXE8,LXU,PXE8, PXU, QAA2, QAA6, QAW, QA2, QA26, QDW9, QK4, QTT, QWA4, QWT2, QXC9 QXE8, QXQ4, QXU, SHQ4, SXE8, SXQ4, VKX4, VNG1, VPX4, VPX9, VSD7, VSD9, VXB7, VXB9 VXE8, VXG, VX8
	13011-Z1C-800	RING SET, PISTON (0.25) (RIKEN)	(1)	-----	1382377 LXE8,LXU,PXE8, PXU, QAA2, QAA6, QAW, QA2, QA26, QDW9, QK4, QTT, QWA4, QWT2, QXC9 QXE8, QXQ4, QXU, SHQ4, SXE8, SXQ4, VKX4, VNG1, VPX4, VPX9, VSD7, VSD9, VXB7, VXB9 VXE8, VXG, VX8
	13012-Z1C-800	RING SET, PISTON (0.50) (RIKEN)	(1)	-----	1382377 LXE8,LXU,PXE8, PXU, QAA2, QAA6, QAW, QA2, QA26, QDW9, QK4, QTT, QWA4, QWT2, QXC9 QXE8, QXQ4, QXU, SHQ4, SXE8, SXQ4, VKX4, VNG1, VPX4, VPX9, VSD7, VSD9, VXB7, VXB9 VXE8, VXG, VX8
	13013-Z1C-800	RING SET, PISTON (0.75) (RIKEN)	(1)	-----	1382377 LXE8,LXU,PXE8, PXU, QAA2, QAA6, QAW, QA2, QA26, QDW9, QK4, QTT, QWA4, QWT2, QXC9 QXE8, QXQ4, QXU, SHQ4, SXE8, SXQ4, VKX4, VNG1, VPX4, VPX9, VSD7, VSD9, VXB7, VXB9 VXE8, VXG, VX8
	13010-Z5R-004	RING SET, PISTON (STD.) (TEIKOKU)	1	-----	HA2, LKE, LXE4, LXQ4, LX2, PAE2, PA2, PXD8, QAE2, QAE6, QC2, QE, QHB4, QKA4, QME0 QNE2, QNE6, QNE8, QNR2, QNR6, QWC4, QXB7, QXB9, QXC4, QXC6, QXER, QXE4, QXE6, QXE7 QXE9, QXH9, QXS4, QXUZ, SCK4, SMC1, SMD3, SME0, SME6, SM32, SNC, STC4, SWA4, SXB7 SXB9, SXE4, SXU, VA2, VC2N, VM2, VN27, VXE2, VXE6, VXE7, VXE9, VXQ4
			1	1382378	----- LXE8,LXU,PXE8, PXU, QAA2, QAA6, QAW, QA2, QA26, QDW9, QK4, QTT, QWA4, QWT2, QXC9 QXE8, QXQ4, QXU, SHQ4, SXE8, SXQ4, VKX4, VNG1, VPX4, VPX9, VSD7, VSD9, VXB7, VXB9 VXE8, VXG, VX8
	13010-Z5T-003	RING SET, PISTON (STD.) (RIKEN)	1	-----	PXD8, QXER, QXUZ
			1	1382378	----- LXE8,LXU,PXE8, PXU, QAA2, QAA6, QAW, QA2, QA26, QDW9, QK4, QTT, QWA4, QWT2, QXC9 QXE8, QXQ4, QXU, SHQ4, SXE8, SXQ4, VKX4, VNG1, VPX4, VPX9, VSD7, VSD9, VXB7, VXB9 VXE8, VXG, VX8
			1	-----	QTT, VKX4, VNG1, VPX4, VPX9, VXG

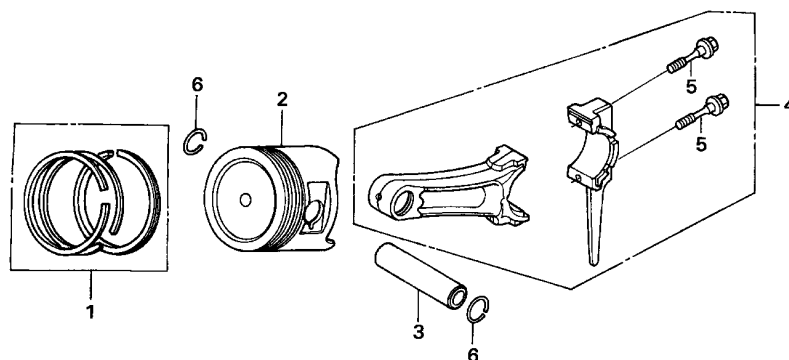


FR.

Z5T0-E0800


Ref. No.	Part No.	Description	Reqd. QTY		Serial No.	Parts catalogue code
			GX 390 UT1	GX 390 RT1		
(1)	13011-Z5R-004	RING SET, PISTON (0.25) (TEIKOKU)	(1)	-	-----	HA2,LKE,LXE4,LXQ4,LX2,PAE2,PA2,PXD8,QAE2,QAE6,QC2,QE,QHB4,QKA4,QME0,QNE2,QNE6,QNE8,QNR2,QNR6,QWC4,QXB7,QXB9,QXC4,QXC6,QXER,QXE4,QXE6,QXE7,QXE9,QXH9,QXS4,QXUZ,SCK4,SMC1,SMD3,SME0,SME6,SM32,SNC,STC4,SWA4,SBX7,SBX9,SXE4,SXU,VA2,VC2N,VM2,VN27,VXE2,VXE6,VXE7,VXE9,VXQ4
			(1)	-	1382378	LXE8,LXU,PXE8,PXU,QAA2,QAA6,QAW,QA2,QA26,QDW9,QK4,QT,T,QWA4,QWT2,QXC9,QXE8,QXQ4,QXU,SHQ4,SXE8,SXQ4,VKX4,VNG1,VPX4,VPX9,VSD7,VSD9,VXB7,VXB9,VXE8,VXG,VX8
			-	(1)	-----	PXD8,QXER,QXUZ
	13011-Z5T-003	RING SET, PISTON (0.25)(RIKEN)	(1)	-	-----	LXE8,LXU,PXE8,PXU,QAA2,QAA6,QAW,QA2,QA26,QDW9,QK4,QT,T,QWA4,QWT2,QXC9,QXE8,QXQ4,QXU,SHQ4,SXE8,SXQ4,VKX4,VNG1,VPX4,VPX9,VSD7,VSD9,VXB7,VXB9,VXE8,VXG,VX8
			(1)	-	1382378	QT,T,VKX4,VNG1,VPX4,VPX9,VXG
			-	(1)	-----	QT,T,VKX4,VNG1,VPX4,VPX9,VXG
	13012-Z5R-004	RING SET, PISTON (0.50) (TEIKOKU)	(1)	-	-----	HA2,LKE,LXE4,LXQ4,LX2,PAE2,PA2,PXD8,QAE2,QAE6,QC2,QE,QHB4,QKA4,QME0,QNE2,QNE6,QNE8,QNR2,QNR6,QWC4,QXB7,QXB9,QXC4,QXC6,QXER,QXE4,QXE6,QXE7,QXE9,QXH9,QXS4,QXUZ,SCK4,SMC1,SMD3,SME0,SME6,SM32,SNC,STC4,SWA4,SBX7,SBX9,SXE4,SXU,VA2,VC2N,VM2,VN27,VXE2,VXE6,VXE7,VXE9,VXQ4
			(1)	-	1382378	LXE8,LXU,PXE8,PXU,QAA2,QAA6,QAW,QA2,QA26,QDW9,QK4,QT,T,QWA4,QWT2,QXC9,QXE8,QXQ4,QXU,SHQ4,SXE8,SXQ4,VKX4,VNG1,VPX4,VPX9,VSD7,VSD9,VXB7,VXB9,VXE8,VXG,VX8
			-	(1)	-----	PXD8,QXER,QXUZ
	13012-Z5T-003	RING SET, PISTON (0.50)(RIKEN)	(1)	-	-----	LXE8,LXU,PXE8,PXU,QAA2,QAA6,QAW,QA2,QA26,QDW9,QK4,QT,T,QWA4,QWT2,QXC9,QXE8,QXQ4,QXU,SHQ4,SXE8,SXQ4,VKX4,VNG1,VPX4,VPX9,VSD7,VSD9,VXB7,VXB9,VXE8,VXG,VX8
			(1)	-	1382378	QT,T,VKX4,VNG1,VPX4,VPX9,VXG
			-	(1)	-----	QT,T,VKX4,VNG1,VPX4,VPX9,VXG

Ref. No.	Part No.	Description	Reqd. GX 390 UT1	QTY GX 390 RT1	Serial No.	Parts catalogue code
(1)	13013-Z5R-004	RING SET, PISTON (0.75) (TEIKOKU)	(1)	-	-----	HA2,LKE,LXE4,LXQ4,LX2,PAE2,PA2,PXD8,QAE2,QAE6,QC2,QE,QHB4,QKA4,QMEO,QNE2,QNE6,QNE8,QNR2,QNR6,QWC4,QXB7,QXB9,QXC4,QXC6,QXER,QXE4,QXE6,QXE7,QXE9,QXH9,QXS4,QXUZ,SCK4,SMC1,SMD3,SME0,SME6,SM32,SNC,STC4,SWA4,SBX7,SBX9,SXE4,SXU,VA2,VC2N,VM2,VN27,VXE2,VXE6,VXE7,VXE9,VXQ4
			(1)	-	1382378	LXE8,LXU,PXE8,PXU,QAA2,QAA6,QAW,QA2,QA26,QDW9,QK4,QTT,QWA4,QWT2,QXC9,QXE8,QXQ4,QXU,SHQ4,SXE8,SXQ4,VKX4,VNG1,VPX4,VPX9,VSD7,VSD9,VXB7,VXB9,VXE8,VXG,VX8
	13013-Z5T-003	RING SET, PISTON (0.75)(RIKEN)	-	(1)	-----	PXD8,QXER,QXUZ
			(1)	-	1382378	LXE8,LXU,PXE8,PXU,QAA2,QAA6,QAW,QA2,QA26,QDW9,QK4,QTT,QWA4,QWT2,QXC9,QXE8,QXQ4,QXU,SHQ4,SXE8,SXQ4,VKX4,VNG1,VPX4,VPX9,VSD7,VSD9,VXB7,VXB9,VXE8,VXG,VX8
2	13101-ZF6-W00	PISTON (STD.)	-	(1)	-----	QTT,VKX4,VNG1,VPX4,VPX9,VXG
			1	-	1382377	LXE8,LXU,PXE8,PXU,QAA2,QAA6,QAW,QA2,QA26,QDW9,QK4,QTT,QWA4,QWT2,QXC9,QXE8,QXQ4,QXU,SHQ4,SXE8,SXQ4,VKX4,VNG1,VPX4,VPX9,VSD7,VSD9,VXB7,VXB9,VXE8,VXG,VX8
	13102-ZF6-W00	PISTON (0.25)	(1)	-	1382377	LXE8,LXU,PXE8,PXU,QAA2,QAA6,QAW,QA2,QA26,QDW9,QK4,QTT,QWA4,QWT2,QXC9,QXE8,QXQ4,QXU,SHQ4,SXE8,SXQ4,VKX4,VNG1,VPX4,VPX9,VSD7,VSD9,VXB7,VXB9,VXE8,VXG,VX8
	13103-ZF6-W00	PISTON (0.50)	(1)	-	1382377	LXE8,LXU,PXE8,PXU,QAA2,QAA6,QAW,QA2,QA26,QDW9,QK4,QTT,QWA4,QWT2,QXC9,QXE8,QXQ4,QXU,SHQ4,SXE8,SXQ4,VKX4,VNG1,VPX4,VPX9,VSD7,VSD9,VXB7,VXB9,VXE8,VXG,VX8
	13104-ZF6-W00	PISTON (0.75)	(1)	-	1382377	LXE8,LXU,PXE8,PXU,QAA2,QAA6,QAW,QA2,QA26,QDW9,QK4,QTT,QWA4,QWT2,QXC9,QXE8,QXQ4,QXU,SHQ4,SXE8,SXQ4,VKX4,VNG1,VPX4,VPX9,VSD7,VSD9,VXB7,VXB9,VXE8,VXG,VX8
	13101-Z5T-000	PISTON (STD.)	1	-	-----	PXD8,QXER,QXUZ
			1	-	1382378	LXE8,LXU,PXE8,PXU,QAA2,QAA6,QAW,QA2,QA26,QDW9,QK4,QTT,QWA4,QWT2,QXC9,QXE8,QXQ4,QXU,SHQ4,SXE8,SXQ4,VKX4,VNG1,VPX4,VPX9,VSD7,VSD9,VXB7,VXB9,VXE8,VXG,VX8
	13102-Z5T-000	PISTON (0.25)	-	1	-----	QTT,VKX4,VNG1,VPX4,VPX9,VXG
			(1)	-	-----	PXD8,QXER,QXUZ
			(1)	-	1382378	LXE8,LXU,PXE8,PXU,QAA2,QAA6,QAW,QA2,QA26,QDW9,QK4,QTT,QWA4,QWT2,QXC9,QXE8,QXQ4,QXU,SHQ4,SXE8,SXQ4,VKX4,VNG1,VPX4,VPX9,VSD7,VSD9,VXB7,VXB9,VXE8,VXG,VX8
	13103-Z5T-000	PISTON (0.50)	-	(1)	-----	QTT,VKX4,VNG1,VPX4,VPX9,VXG
			(1)	-	-----	PXD8,QXER,QXUZ
			(1)	-	1382378	LXE8,LXU,PXE8,PXU,QAA2,QAA6,QAW,QA2,QA26,QDW9,QK4,QTT,QWA4,QWT2,QXC9,QXE8,QXQ4,QXU,SHQ4,SXE8,SXQ4,VKX4,VNG1,VPX4,VPX9,VSD7,VSD9,VXB7,VXB9,VXE8,VXG,VX8
	13104-Z5T-000	PISTON (0.75)	-	(1)	-----	QTT,VKX4,VNG1,VPX4,VPX9,VXG
			(1)	-	-----	PXD8,QXER,QXUZ
			(1)	-	1382378	LXE8,LXU,PXE8,PXU,QAA2,QAA6,QAW,QA2,QA26,QDW9,QK4,QTT,QWA4,QWT2,QXC9,QXE8,QXQ4,QXU,SHQ4,SXE8,SXQ4,VKX4,VNG1,VPX4,VPX9,VSD7,VSD9,VXB7,VXB9,VXE8,VXG,VX8
	13101-ZF6-W01	PISTON (STD.)	-	(1)	-----	QTT,VKX4,VNG1,VPX4,VPX9,VXG
			1	1	-----	HA2,LKE,LXE4,LXQ4,LX2,PAE2,PA2,QAE2,QAE6,QC2,QE,QHB4,QKA4,QMEO,QNB2,QNE2,QNE6,QNE8,QNR2,QNR6,QWA2,QWC4,QXB7,QXB9,QXC4,QXC6,QXE4,QXE6,QXE7,QXE9,QXH9,QXS4,SCK4,SMC1,SMD3,SME0,SME6,SM32,SNC,STC4,SWA4,SBX7,SBX9,SXE4,SXU,VAA1,VAA8,VAC2,VAG2,VA2,VCN2,VC2,VC2N,VDE2,VD2,VEP9,VKB2,VKE4,VK2,VM2,VN27,VPE5,VPE9,VSD4,VS49,VTH4,VWC,VWC9,VWE,VWT4,VXE2,VXE6,VXE7,VXE9,VXQ4
	13102-ZF6-W01	PISTON (0.25)	(1)	(1)	-----	HA2,LKE,LXE4,LXQ4,LX2,PAE2,PA2,QAE2,QAE6,QC2,QE,QHB4,QKA4,QMEO,QNB2,QNE2,QNE6,QNE8,QNR2,QNR6,QWA2,QWC4,QXB7,QXB9,QXC4,QXC6,QXE4,QXE6,QXE7,QXE9,QXH9,QXS4,SCK4,SMC1,SMD3,SME0,SME6,SM32,SNC,STC4,SWA4,SBX7,SBX9,SXE4,SXU,VAA1,VAA8,VAC2,VAG2,VA2,VCN2,VC2,VC2N,VDE2,VD2,VEP9,VKB2,VKE4,VK2,VM2,VN27,VPE5,VPE9,VSD4,VS49,VTH4,VWC,VWC9,VWE,VWT4,VXE2,VXE6,VXE7,VXE9,VXQ4

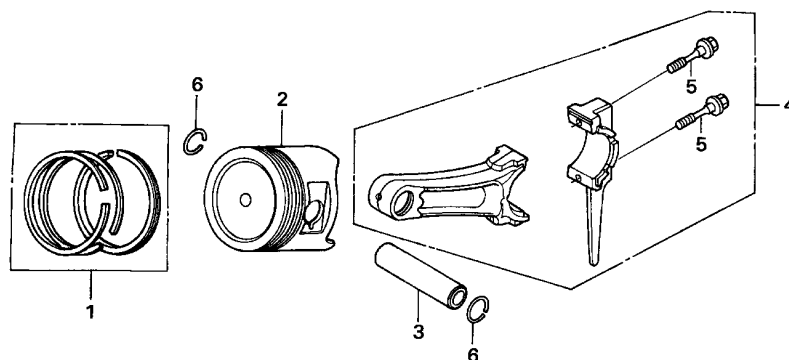


Z5T0-E0800

Ref. No.	Part No.	Description	Reqd. QTY		Serial No.	Parts catalogue code
			GX 390 UT1	GX 390 RT1		
(2)	13103-ZF6-W01	PISTON (0.50)	(1)	(1)	-----	HA2,LKE,LXE4,LXQ4,LX2,PAE2,PA2,QAE2,QAE6,QC2,QE,QHB4,QKA4,QMEO,QNB2,QNE2,QNE6,QNE8,QNR2,QNR6,QWA2,QWC4,QXB7,QXB9,QXC4,QXC6,QXE4,QXE6,QXE7,QXE9,QXH9,QXS4,SCK4,SMC1,SMD3,SMEO,SME6,SM32,SNC,STC4,SWA4,SBX7,SBX9,SXE4,SXU,VAA1,VAA8,VAC2,VAG2,VA2,VCN2,VC2,VC2N,VDE2,VD2,VEP9,VKB2,VKE4,VK2,VM2,VN27,VPE5,VPE9,VSD4,VS49,VTH4,VWC,VWC9,VWE,VWT4,VXE2,VXE6,VXE7,VXE9,VXQ4
	13104-ZF6-W01	PISTON (0.75)	(1)	(1)	-----	HA2,LKE,LXE4,LXQ4,LX2,PAE2,PA2,QAE2,QAE6,QC2,QE,QHB4,QKA4,QMEO,QNB2,QNE2,QNE6,QNE8,QNR2,QNR6,QWA2,QWC4,QXB7,QXB9,QXC4,QXC6,QXE4,QXE6,QXE7,QXE9,QXH9,QXS4,SCK4,SMC1,SMD3,SMEO,SME6,SM32,SNC,STC4,SWA4,SBX7,SBX9,SXE4,SXU,VAA1,VAA8,VAC2,VAG2,VA2,VCN2,VC2,VC2N,VDE2,VD2,VEP9,VKB2,VKE4,VK2,VM2,VN27,VPE5,VPE9,VSD4,VS49,VTH4,VWC,VWC9,VWE,VWT4,VXE2,VXE6,VXE7,VXE9,VXQ4
3	13111-ZF6-W00	PIN, PISTON	1	1		
4	13200-Z1C-000	ROD ASSY., CONNECTING (STD.)	1	1		
	13200-Z1C-305	ROD ASSY., CONNECTING (0.25 UNDER SIZE)	(1)	(1)	-----	LXE8,LXU,PXD8,PXE8,PXU,QAA2,QAA6,QAW,QA2,QA26,QDW9,QK4,QT,T,QWA4,QWT2,QXC9,QXER,QXE8,QXQ4,QXU,QXUZ,SHQ4,SXE8,SXQ4,VXE8,VX8
	13200-ZE3-315		(1)	(1)	-----	HA2,LKE,LXE4,LXQ4,LX2,PAE2,PA2,QAE2,QAE6,QC2,QE,QHB4,QKA4,QMEO,QNB2,QNE2,QNE6,QNE8,QNR2,QNR6,QWA2,QWC4,QXB7,QXB9,QXC4,QXC6,QXE4,QXE6,QXE7,QXE9,QXH9,QXS4,SCK4,SMC1,SMD3,SMEO,SME6,SM32,SNC,STC4,SWA4,SBX7,SBX9,SXE4,SXU,VAA1,VAA8,VAC2,VAG2,VA2,VCN2,VC2,VC2N,VDE2,VD2,VEP9,VKB2,VKE4,VKX4,VK2,VM2,VNG1,VN27,VPE5,VPE9,VPX4,VPX9,VSD4,VSD7,VSD9,VS49,VTH4,VWC,VWC9,VWE,VWT4,VXB7,VXB9,VXE2,VXE6,VXE7,VXE9,VXG,VXQ4
5	90001-ZE8-000	BOLT, CONNECTING ROD	2	2		
6	90601-ZE3-000	CLIP, PISTON PIN, 20MM	2	2		

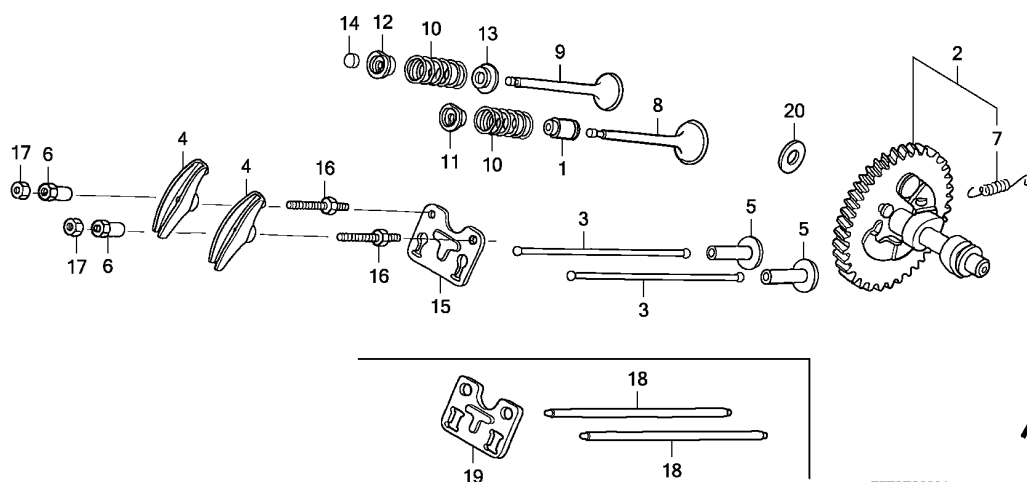

Ref. No.	L.O.N.	(Relative ref. Number) Description	F.R.T.
1	1111K2	SEAL, INTAKE VALVE STEMINCLUDES: Valve clearance adjustment	0.6
2	1111C2	CAMSHAFTINCLUDES: Valve clearance adjustment	0.4
3	1111L6	ROD, PUSH :INTAKEINCLUDES: Valve clearance adjustment	0.2
	1111L6A	.Replace exhaust push rod add	0.1
	1111L7	ROD, PUSH :EXHAUSTINCLUDES: Valve clearance adjustment	0.2
	1111L7A	.Replace intake push rod add	0.1
4	1111A2	ARM, ROCKER :INTAKEINCLUDES: Valve clearance adjustment	0.2
	1111A2A	.Replace exhaust rocker arm add	0.1
	1111A1	ARM, ROCKER :EXHAUSTINCLUDES: Valve clearance adjustment	0.2
	1111A1A	.Replace intake rocker arm add	0.1
+ 5	1111L9	LIFTER, VALVE :INTAKEINCLUDES: Valve clearance adjustment	0.4

Ref. No.	Part No.	Description	Reqd. QTY	Serial No.	Parts catalogue code
			GX 390 UT1	GX 390 RT1	
1	12209-ZE8-003	SEAL, VALVE STEM	1	1	HA2,LKE,LXE4,LXE8,LXQ4,LXU,LX2,PAE2,PA2,PXD8,PXE8,PXU,QAA2,QAA6,QAE2,QAE6,QAW,QA2,QA26,QC2,QDW9,QE,QHB4,QKA4,QK4,QME0,QNB2,QNE2,QNE6,QNE8,QNR2,QNR6,QTT,QWA2,QWA4,QWC4,QWT2,QXC4,QXC6,QXC9,QXER,QXE4,QXE6,QXE8,QXQ4,QXS4,QXU,QXUZ,SCK4,SHQ4,SMC1,SMD3,SME0,SME6,SM32,SNC,STC4,SWA4,SXE4,SXE8,SXQ4,SXU,VAA1,VAA8,VAC2,VAG2,VA2,VCN2,VC2,VC2N,VDE2,VD2,VKB2,VKE4,VKX4,VK2,VM2,VNG1,VPE5,VPX4,VSD4,VTH4,VWC,VWE,VWT4,VXE2,VXE6,VXE8,VXG,VXQ4,VX8
2	14100-ZF6-W01	CAMSHAFT ASSY.	1	1	QXB7,QXE7,SXB7,VN27,VSD7,VXB7,VXE7
	14100-ZK6-870		1	-	QXB9,QXE9,QXH9,SXB9,VEP9,VPE9,VPX9,VSD9,VS49,VWC9,VXB9,VXE9
	14100-ZK6-880		1	1	HA2,LKE,LXE4,LXE8,LXQ4,LXU,LX2,PAE2,PA2,PXD8,PXE8,PXU,QAA2,QAA6,QAE2,QAE6,QAW,QA2,QA26,QC2,QDW9,QE,QHB4,QKA4,QK4,QME0,QNB2,QNE2,QNE6,QNE8,QNR2,QNR6,QTT,QWA2,QWA4,QWC4,QWT2,QXB7,QXC4,QXC6,QXC9,QXER,QXE4,QXE6,QXE7,QXE8,QXQ4,QXS4,QXU,QXUZ,SCK4,SHQ4,SMC1,SMD3,SME0,SME6,SM32,SNC,STC4,SWA4,SXB7,SXE4,SXE8,SXQ4,SXU,VAA1,VAA8,VAC2,VAG2,VA2,VCN2,VC2,VC2N,VDE2,VD2,VKB2,VKE4,VKX4,VK2,VM2,VNG1,VN27,VPE5,VPX4,VSD4,VSD7,VTH4,VWC,VWE,VWT4,VXB7,VXE2,VXE6,VXE7,VXE8,VXG,VXQ4,VX8
3	14410-Z1C-000	ROD, PUSH	2	2	
4	14431-ZE2-010	ARM, VALVE ROCKER	2	2	
5	14441-ZE2-000	LIFTER, VALVE	2	2	
6	14451-ZE1-013	PIVOT, ROCKER ARM	2	2	
7	14568-ZE1-000	SPRING, WEIGHT RETURN	1	1	
8	14711-ZE3-000	VALVE, IN.	1	1	
9	14721-ZE3-000	VALVE, EX.	1	1	
10	14751-Z1C-000	SPRING, VALVE	2	2	
11	14771-ZE2-000	RETAINER, IN. VALVE SPRING ..	1	1	LXE8,LXU,PXD8,PXE8,PXU,QAA2,QAA6,QAW,QA2,QA26,QDW9,QK4,QTT,QWA4,QWT2,QXC9,QXER,QXE8,QXQ4,QXU,QXUZ,SHQ4,SXE8,SXQ4,VKX4,VNG1,VPX4,VPX9,VSD7,VSD9,VXB7,VXB9,VXE8,VXG,VX8

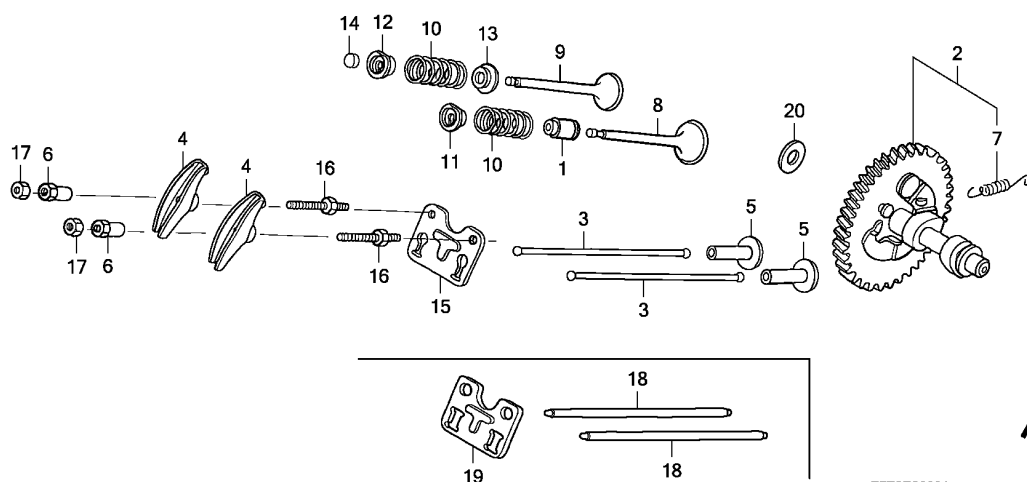


Ref. No.	L.O.N.	(Relative ref. Number) Description	F.R.T.
+ 5		.NOTE: Same time for two units	
1111M0		LIFTER, VALVE :EXHAUST	0.4
8		.NOTE: Same time for two units	
1111L1		VALVE, INTAKE	0.7
		.INCLUDES: Valve clearance adjustment and reface	
1111L1E		.Replace intake and exhaust all add	0.1
9		1111L0 VALVE, EXHAUST	0.7
		.INCLUDES: Valve clearance adjustment and reface	
1111LOE		.Replace intake and exhaust all add	0.1
10		1111P3 SPRING, VALVE :INTAKE	0.6
		.INCLUDES: Valve clearance adjustment	
1111P3A		.Replace intake and exhaust all add	0.1
1111P4		SPRING, VALVE :EXHAUST	0.6
		.INCLUDES: Valve clearance adjustment	
1111P4A		.Replace intake and exhaust all add	0.1
+14		1111J7 ROTATOR, VALVE	0.2

Ref. No.	Part No.	Description	Reqd. QTY GX 390 UT1	Serial No.	Parts catalogue code
11)	14771-Z8S-000	RETAINER, IN. VALVE SPRING ..	1 1	-----	HA2,LKE,LXE4,LXQ4,LX2,PAE2,PA2,QAE2,QAE6,QC2,QE,QHB4,QKA4,QMEO,QNB2,QNE2,QNE6,QNE8,QNR2,QNR6,QWA2,QWC4,QXB7,QXB9,QXC4,QXC6,QXE4,QXE6,QXE7,QXE9,QXH9,QXS4,SCK4,SMC1,SMD3,SME0,SME6,SM32,SNC,STC4,SWA4,SBX7,SBX9,SXE4,SXU,VAA1,VAA8,VAC2,VAG2,VA2,VCN2,VC2,VC2N,VDE2,VD2,VEP9,VKB2,VKE4,VK2,VM2,VN27,VPE5,VPE9,VSD4,VS49,VTH4,VWC,VWC9,VWE,VWT4,VXE2,VXE6,VXE7,VXE9,VXQ4
12	14773-ZE2-000	RETAINER, EX. VALVE SPRING ..	1 1	-----	LXE8,LXU,PXD8,PXE8,PXU,QAA2,QAA6,QAW,QA2,QA26,QDW9,QK4,QTT,QWA4,QWT2,QXC9,QXER,QXE8,QXQ4,QXU,QXUZ,SHQ4,SXE8,SXQ4,VKX4,VNG1,VPX4,VPX9,VSD7,VSD9,VXB7,VXB9,VXE8,VXG,VX8
	14773-Z8S-000		1 1	-----	HA2,LKE,LXE4,LXQ4,LX2,PAE2,PA2,QAE2,QAE6,QC2,QE,QHB4,QKA4,QMEO,QNB2,QNE2,QNE6,QNE8,QNR2,QNR6,QWA2,QWC4,QXB7,QXB9,QXC4,QXC6,QXE4,QXE6,QXE7,QXE9,QXH9,QXS4,SCK4,SMC1,SMD3,SME0,SME6,SM32,SNC,STC4,SWA4,SBX7,SBX9,SXE4,SXU,VAA1,VAA8,VAC2,VAG2,VA2,VCN2,VC2,VC2N,VDE2,VD2,VEP9,VKB2,VKE4,VK2,VM2,VN27,VPE5,VPE9,VSD4,VS49,VTH4,VWC,VWC9,VWE,VWT4,VXE2,VXE6,VXE7,VXE9,VXQ4
13	14775-ZE2-010	SEAT, VALVE SPRING	1 1	-----	
14	14781-ZE2-000	ROTATOR, VALVE	1 1	-----	
15	14791-ZE2-010	GUIDE, PUSH ROD	1 1	-----	HA2,LKE,LXE4,LXE8,LXQ4,LXU,LX2,PAE2,PA2,PXD8,PXE8,PXU,QAA2,QAA6,QAE2,QAE6,QAW,QA2,QA26,QC2,QDW9,QE,QHB4,QKA4,QK4,QMEO,QNB2,QNE2,QNE6,QNE8,QNR2,QNR6,QTT,QWA2,QWA4,QWC4,QWT2,QXB7,QXC4,QXC6,QXC9,QXER,QXE4,QXE6,QXE7,QXE8,QXQ4,QXS4,QXU,QXUZ,SCK4,SHQ4,SMC1,SMD3,SME0,SME6,SM32,SNC,STC4,SWA4,SBX7,SXE4,SXE8,SXQ4,SXU,VAA1,VAA8,VAC2,VAG2,VA2,VCN2,VC2,VC2N,VDE2,VD2,VKB2,VKE4,VKX4,VK2,VM2,VNG1,VN27,VPE5,VPX4,VSD4,VSD7,VTH4,VWC,VWE,VWT4,VXB7,VXE2,VXE6,VXE7,VXE8,VXG,VXQ4,VX8
16	90012-ZE0-010	BOLT, PIVOT, 8MM	2 2	-----	
17	90206-ZE1-000	NUT, PIVOT ADJUSTING	2 2	-----	
18	14410-ZK6-880	ROD COMP., PUSH	2 2	-----	QXB9,QXE9,QXH9,SBX9,VEP9,VPE9,VPX9,VSD9,VS49,VWC9,VXB9,VXE9
19	14791-ZK6-880	GUIDE, PUSH ROD	1 1	-----	QXB9,QXE9,QXH9,SBX9,VEP9,VPE9,VPX9,VSD9,VS49,VWC9,VXB9,VXE9
20	90413-ZK6-880	WASHER, THRUST, 16.1MM	1 1	-----	QXB9,QXE9,QXH9,SBX9,VEP9,VPE9,VPX9,VSD9,VS49,VWC9,VXB9,VXE9

E-9


CAMSHAFT

E 3

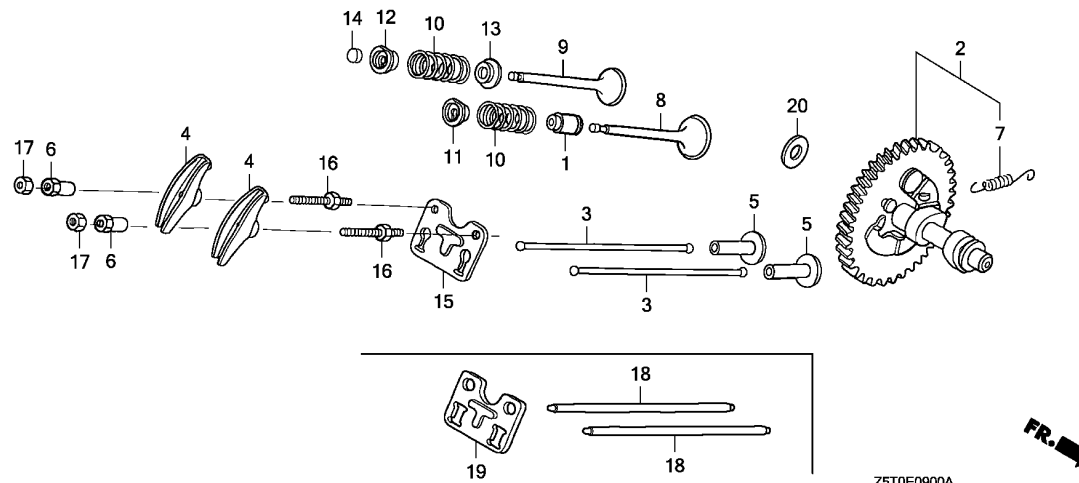

Ref. No.	L.O.N.	(Relative ref. Number) Description	F.R.T.
+14		.INCLUDES: Valve clearance adjustment	


2

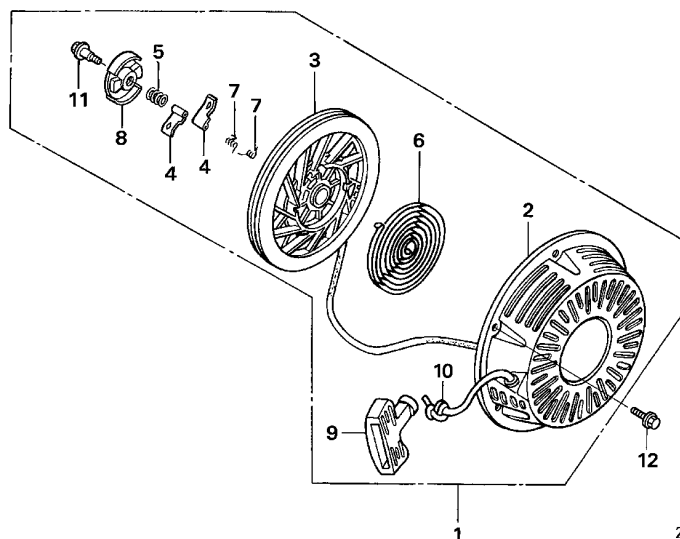


Ref. No.	L.O.N.	(Relative ref. Number) Description	F.R.T.
1	1121B9	STARTER, RECOIL	0.1
3	1121B1	REEL, RECOIL STARTER	0.3
4	1121B0	RATCHET, STARTER AND/OR SPRING, RATCHET	0.2
6	1121B7	SPRING, RECOIL STARTER RETURN (5)	0.3
8	1121B2	RETAINER, SPRING	0.2
10	1121B3	ROPE, RECOIL STARTER	0.3

Ref. No.	Part No.	Description	Reqd. QTY GX 390 UT1	Serial No.	Parts catalogue code
1	28400-ZE3-W01ZB	STARTER ASSY., RECOIL *NH1*.....BLACK	1	1	PA2,QAA2,QAE2,QA2,QC2,QDW9,QNR2,QT,T,QWA4,QWC4,QWT2,QXC9,QXS4,SME6 SM32,SWA4,SXU,VC2,VC2N,VKE4,VKX4,VN27,VSD7,VSD9,VXB7,VXB9 VNG1
	28400-ZE3-W01ZD	*T39*.....GEKO BLUE	1	1	QWA2,VDE2,VM2,VWC,VWC9,VWE,VXE2,VXE7,VXE9,VXG
	28400-ZE3-W01ZH	*NH105*...MAT BLACK (#15-#20)	1	1	HA2,LXE4,LXE8,LXQ4,LXU,LX2,PAE2,PA2,PXD8,PXE8,PUX,QAA2,QAA6,QAE2,QAE6 QAW,QA2,QA26,QDW9,QE,QHB4,QKA4,QK4,QME0,QNB2,QNE2,QNE6,QNE8,QNR2,QNR6 QWA4,QXB7,QXB9,QXC4,QXC6,QXC9,QXER,QXE4,QXE6,QXE7,QXE8,QXE9,QXH9,QXQ4 QXS4,QXU,QXUZ,SCK4,SHQ4,SMC1,SMD3,SMEO,SME6,SM32,SNC,STC4,SWA4,SB7 SXB9,SXE4,SXE8,SXQ4,SXU,VAA1,VAA8,VAC2,VAG2,VA2,VCN2,VC2,VC2N,VDE2 VD2,VEP9,VKB2,VK2,VNG1,VN27,VPE5,VPE9,VPX4,VPX9,VSD4,VSD7,VSD9,VS49 VTH4,VWC9,VWT4,VXB7,VXB9,VXE2,VXE6,VXE7,VXE8,VXE9,VXG,VXQ4,VX8
	28400-ZE3-W01ZP	*R280*.....POWER RED	1	1	
2	28410-ZE3-W01ZB	CASE COMP., RECOIL STARTER *NH1*.....BLACK	1	1	PA2,QAA2,QAE2,QA2,QC2,QDW9,QNR2,QT,T,QWA4,QWC4,QWT2,QXC9,QXS4,SME6 SM32,SWA4,SXU,VC2,VC2N,VKE4,VKX4,VN27,VSD7,VSD9,VXB7,VXB9 VNG1
	28410-ZE3-W01ZE	*T39*.....GEKO BLUE	1	1	QWA2,VDE2,VM2,VWC,VWC9,VWE,VXE2,VXE7,VXE9,VXG
	28410-ZE3-W01ZH	*NH105*...MAT BLACK (#15-#20)	1	1	HA2,LXE4,LXE8,LXQ4,LXU,LX2,PAE2,PA2,PXD8,PXE8,PUX,QAA2,QAA6,QAE2,QAE6 QAW,QA2,QA26,QDW9,QE,QHB4,QKA4,QK4,QME0,QNB2,QNE2,QNE6,QNE8,QNR2,QNR6 QWA4,QXB7,QXB9,QXC4,QXC6,QXC9,QXER,QXE4,QXE6,QXE7,QXE8,QXE9,QXH9,QXQ4 QXS4,QXU,QXUZ,SCK4,SHQ4,SMC1,SMD3,SMEO,SME6,SM32,SNC,STC4,SWA4,SB7 SXB9,SXE4,SXE8,SXQ4,SXU,VAA1,VAA8,VAC2,VAG2,VA2,VCN2,VC2,VC2N,VDE2 VD2,VEP9,VKB2,VK2,VNG1,VN27,VPE5,VPE9,VPX4,VPX9,VSD4,VSD7,VSD9,VS49 VTH4,VWC9,VWT4,VXB7,VXB9,VXE2,VXE6,VXE7,VXE8,VXE9,VXG,VXQ4,VX8
	28410-ZE3-W01ZP	*R280*.....POWER RED	1	1	

Ref. No.	Part No.	Description	Reqd. QTY		Serial No.	Parts catalogue code
			GX 390 UT1	GX 390 RT1		
3	28421-ZE3-W01	PULLEY, RECOIL STARTER	1	-	-----	HA2,LXE4,LXE8,LXQ4,LXU,LX2,PAE2,PA2,PXD8,PXE8,PXU,QAA2,QAA6,QAE2,QAE6 QAW,QA2,QA26,QC2,QDW9,QE,QHB4,QKA4,QK4,QME0,QNE2,QNE6,QNE8,QNR2,QNR6 QTT,QWA4,QWC4,QWT2,QXB7,QXB9,QXC4,QXC6,QXC9,QXER,QXE4,QXE6,QXE7,QXE8 QXE9,QXH9,QXQ4,QXS4,QXU,QXUZ,SCK4,SHQ4,SMC1,SMD3,SME0,SME6,SM32,SNC STC4,SWA4,SXB7,SXB9,SXE4,SXE8,SXQ4,SXU,VA2,VC2N,VKX4,VM2,VNG1,VN27 VPX4,VPX9,VSD7,VSD9,VXB7,VXB9,VXE2,VXE6,VXE7,VXE8,VXE9,VXG,VXQ4,VX8
4	28422-ZE2-W01	RATCHET, STARTER	2	-	-----	HA2,LXE4,LXE8,LXQ4,LXU,LX2,PAE2,PA2,PXD8,PXE8,PXU,QAA2,QAA6,QAE2,QAE6 QAW,QA2,QA26,QC2,QDW9,QE,QHB4,QKA4,QK4,QME0,QNE2,QNE6,QNE8,QNR2,QNR6 QTT,QWA4,QWC4,QWT2,QXB7,QXB9,QXC4,QXC6,QXC9,QXER,QXE4,QXE6,QXE7,QXE8 QXE9,QXH9,QXQ4,QXS4,QXU,QXUZ,SCK4,SHQ4,SMC1,SMD3,SME0,SME6,SM32,SNC STC4,SWA4,SXB7,SXB9,SXE4,SXE8,SXQ4,SXU,VA2,VC2N,VKX4,VM2,VNG1,VN27 VPX4,VPX9,VSD7,VSD9,VXB7,VXB9,VXE2,VXE6,VXE7,VXE8,VXE9,VXG,VXQ4,VX8
5	28441-ZE2-W01	SPRING, FRICTION	1	-	-----	HA2,LXE4,LXE8,LXQ4,LXU,LX2,PAE2,PA2,PXD8,PXE8,PXU,QAA2,QAA6,QAE2,QAE6 QAW,QA2,QA26,QC2,QDW9,QE,QHB4,QKA4,QK4,QME0,QNE2,QNE6,QNE8,QNR2,QNR6 QTT,QWA4,QWC4,QWT2,QXB7,QXB9,QXC4,QXC6,QXC9,QXER,QXE4,QXE6,QXE7,QXE8 QXE9,QXH9,QXQ4,QXS4,QXU,QXUZ,SCK4,SHQ4,SMC1,SMD3,SME0,SME6,SM32,SNC STC4,SWA4,SXB7,SXB9,SXE4,SXE8,SXQ4,SXU,VA2,VC2N,VKX4,VM2,VNG1,VN27 VPX4,VPX9,VSD7,VSD9,VXB7,VXB9,VXE2,VXE6,VXE7,VXE8,VXE9,VXG,VXQ4,VX8
6	28442-ZE2-W01	SPRING, STARTER RETURN	1	-	-----	HA2,LXE4,LXE8,LXQ4,LXU,LX2,PAE2,PA2,PXD8,PXE8,PXU,QAA2,QAA6,QAE2,QAE6 QAW,QA2,QA26,QC2,QDW9,QE,QHB4,QKA4,QK4,QME0,QNE2,QNE6,QNE8,QNR2,QNR6 QTT,QWA4,QWC4,QWT2,QXB7,QXB9,QXC4,QXC6,QXC9,QXER,QXE4,QXE6,QXE7,QXE8 QXE9,QXH9,QXQ4,QXS4,QXU,QXUZ,SCK4,SHQ4,SMC1,SMD3,SME0,SME6,SM32,SNC STC4,SWA4,SXB7,SXB9,SXE4,SXE8,SXQ4,SXU,VA2,VC2N,VKX4,VM2,VNG1,VN27 VPX4,VPX9,VSD7,VSD9,VXB7,VXB9,VXE2,VXE6,VXE7,VXE8,VXE9,VXG,VXQ4,VX8
7	28443-ZE2-W01	SPRING, RATCHET	2	-	-----	HA2,LXE4,LXE8,LXQ4,LXU,LX2,PAE2,PA2,PXD8,PXE8,PXU,QAA2,QAA6,QAE2,QAE6 QAW,QA2,QA26,QC2,QDW9,QE,QHB4,QKA4,QK4,QME0,QNE2,QNE6,QNE8,QNR2,QNR6 QTT,QWA4,QWC4,QWT2,QXB7,QXB9,QXC4,QXC6,QXC9,QXER,QXE4,QXE6,QXE7,QXE8 QXE9,QXH9,QXQ4,QXS4,QXU,QXUZ,SCK4,SHQ4,SMC1,SMD3,SME0,SME6,SM32,SNC STC4,SWA4,SXB7,SXB9,SXE4,SXE8,SXQ4,SXU,VA2,VC2N,VKX4,VM2,VNG1,VN27 VPX4,VPX9,VSD7,VSD9,VXB7,VXB9,VXE2,VXE6,VXE7,VXE8,VXE9,VXG,VXQ4,VX8
8	28444-ZE2-W01	RETAINER, SPRING	1	-	-----	HA2,LXE4,LXE8,LXQ4,LXU,LX2,PAE2,PA2,PXD8,PXE8,PXU,QAA2,QAA6,QAE2,QAE6 QAW,QA2,QA26,QC2,QDW9,QE,QHB4,QKA4,QK4,QME0,QNE2,QNE6,QNE8,QNR2,QNR6 QTT,QWA4,QWC4,QWT2,QXB7,QXB9,QXC4,QXC6,QXC9,QXER,QXE4,QXE6,QXE7,QXE8 QXE9,QXH9,QXQ4,QXS4,QXU,QXUZ,SCK4,SHQ4,SMC1,SMD3,SME0,SME6,SM32,SNC STC4,SWA4,SXB7,SXB9,SXE4,SXE8,SXQ4,SXU,VA2,VC2N,VKX4,VM2,VNG1,VN27 VPX4,VPX9,VSD7,VSD9,VXB7,VXB9,VXE2,VXE6,VXE7,VXE8,VXE9,VXG,VXQ4,VX8
9	28461-ZE2-W02	GRIP, STARTER	1	-	-----	HA2,LXE4,LXE8,LXQ4,LXU,LX2,PAE2,PA2,PXD8,PXE8,PXU,QAA2,QAA6,QAE2,QAE6 QAW,QA2,QA26,QC2,QDW9,QE,QHB4,QKA4,QK4,QME0,QNE2,QNE6,QNE8,QNR2,QNR6 QTT,QWA4,QWC4,QWT2,QXB7,QXB9,QXC4,QXC6,QXC9,QXER,QXE4,QXE6,QXE7,QXE8 QXE9,QXH9,QXQ4,QXS4,QXU,QXUZ,SCK4,SHQ4,SMC1,SMD3,SME0,SME6,SM32,SNC STC4,SWA4,SXB7,SXB9,SXE4,SXE8,SXQ4,SXU,VA2,VC2N,VKX4,VM2,VNG1,VN27 VPX4,VPX9,VSD7,VSD9,VXB7,VXB9,VXE2,VXE6,VXE7,VXE8,VXE9,VXG,VXQ4,VX8
10	28462-ZE3-W01	ROPE, RECOIL STARTER	1	-	-----	HA2,LXE4,LXE8,LXQ4,LXU,LX2,PAE2,PA2,PXD8,PXE8,PXU,QAA2,QAA6,QAE2,QAE6 QAW,QA2,QA26,QC2,QDW9,QE,QHB4,QKA4,QK4,QME0,QNE2,QNE6,QNE8,QNR2,QNR6 QTT,QWA4,QWC4,QWT2,QXB7,QXB9,QXC4,QXC6,QXC9,QXER,QXE4,QXE6,QXE7,QXE8 QXE9,QXH9,QXQ4,QXS4,QXU,QXUZ,SCK4,SHQ4,SMC1,SMD3,SME0,SME6,SM32,SNC STC4,SWA4,SXB7,SXB9,SXE4,SXE8,SXQ4,SXU,VA2,VC2N,VKX4,VM2,VNG1,VN27 VPX4,VPX9,VSD7,VSD9,VXB7,VXB9,VXE2,VXE6,VXE7,VXE8,VXE9,VXG,VXQ4,VX8

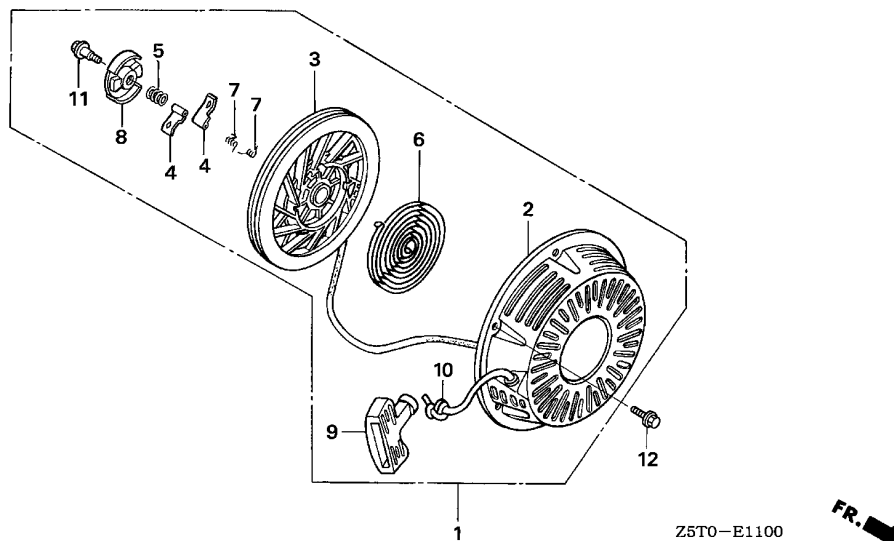


Ref. No.	Part No.	Description	Reqd. QTY		Serial No.	Parts catalogue code
			GX 390 UT1	GX 390 RT1		
11	90004-ZE2-W01	SCREW, CENTER	1	-	-----	HA2,LXE4,LXE8,LXQ4,LXU,LX2,PAE2,PA2,PXD8,PXE8,PXU,QAA2,QAA6,QAE2,QAE6 QAW,QA2,QA26,QC2,QDW9,QE,QHB4,QKA4,QK4,QME0,QNE2,QNE6,QNE8,QNR2,QNR6 QTT,QWA4,QWC4,QWT2,QXB7,QXB9,QXC4,QXC6,QXC9,QXER,QXE4,QXE6,QXE7,QXE8 QXE9,QXH9,QXQ4,QXS4,QXU,QXUZ,SCK4,SHQ4,SMC1,SMD3,SME0,SME6,SM32,SNC STC4,SWA4,SXB7,SXB9,SXE4,SXE8,SXQ4,SXU,VA2,VC2N,VKX4,VM2,VNG1,VN27 VPX4,VPX9,VSD7,VSD9,VXB7,VXB9,VXE2,VXE6,VXE7,VXE8,VXE9,VXG,VXQ4,VX8
12	90008-ZE2-003	BOLT, FLANGE, 6X10	3	-	-----	HA2,LXE4,LXE8,LXQ4,LXU,LX2,PAE2,PA2,PXD8,PXE8,PXU,QAA2,QAA6,QAE2,QAE6 QAW,QA2,QA26,QC2,QDW9,QE,QHB4,QKA4,QK4,QME0,QNE2,QNE6,QNE8,QNR2,QNR6 QTT,QWA4,QWC4,QWT2,QXB7,QXB9,QXC4,QXC6,QXC9,QXER,QXE4,QXE6,QXE7,QXE8 QXE9,QXH9,QXQ4,QXS4,QXU,QXUZ,SCK4,SHQ4,SMC1,SMD3,SME0,SME6,SM32,SNC STC4,SWA4,SXB7,SXB9,SXE4,SXE8,SXQ4,SXU,VA2,VC2N,VKX4,VM2,VNG1,VN27 VPX4,VPX9,VSD7,VSD9,VXB7,VXB9,VXE2,VXE6,VXE7,VXE8,VXE9,VXG,VXQ4,VX8

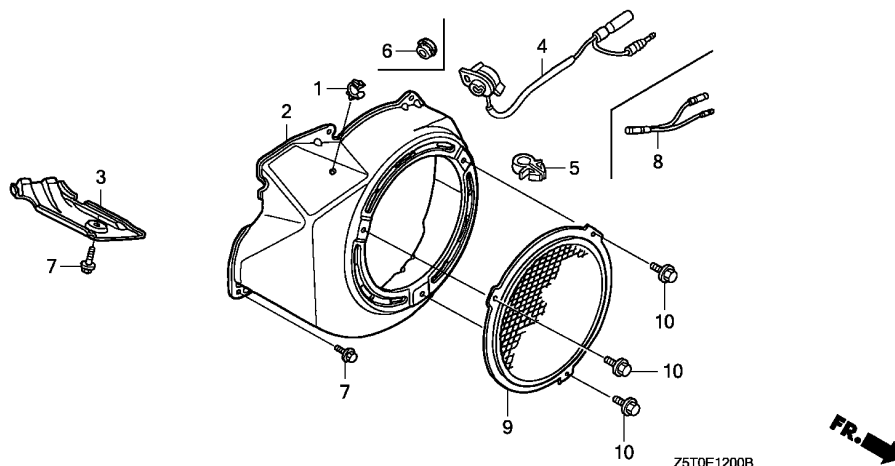


Ref. No.	L.O.N.	(Relative ref. Number) Description	F.R.T.
2	1141G8	COVER, ENGINE COOLING FAN	0.2
4	6151D9	SWITCH, ENGINE STOP	0.1

Ref. No.	Part No.	Description	Reqd. QTY	Serial No.	Parts catalogue code
			GX 390 UT1	GX 390 RT1	
1	16731-ZE2-003	CLIP, TUBE	1	-	QNB2, QTT, QWA2, VAC2, VAG2, VCN2, VC2, VDE2, VD2, VEP9, VKB2, VKE4, VKX4, VK2, VNG1, VPE5, VPE9, VPX4, VPX9, VSD4, VS49, VTH4, VWC, VWC9, VWE, VWT4, VXG
2	19610-ZE3-010ZB	COVER COMP., FAN *NH1*.....BLACK	1	1	PA2, QAA2, QAE2, QA2, QC2, QDW9, QNR2, QTT, QWA4, QWC4, QWT2, QXC9, QXS4, SME6, SM32, SWA4, SXU, VC2, VC2N
	19610-ZE3-010ZG	*NH105*...MAT BLACK (#15-#20)	1	1	QWA2, VDE2, VM2, VWC, VWE, VXE2, VXG
	19610-ZE3-010ZL	*R280*.....POWER RED	1	1	HA2, LKE, LXE4, LXE8, LXQ4, LXU, LX2, PAE2, PA2, PXD8, PXE8, PXU, QAA2, QAA6, QAE2, QAE6, QAW, QA2, QA26, QDW9, QE, QHB4, QKA4, QK4, QME0, QNB2, QNE2, QNE6, QNE8, QNR2, QNR6, QWA4, QXC4, QXC6, QXC9, QXER, QXE4, QXE6, QXE8, QXQ4, QXS4, QXU, QXUZ, SHQ4, SMC1, SMD3, SME0, SME6, SM32, SNC, STC4, SWA4, SXE4, SXE8, SXQ4, SXU, VAA1, VAA8, VAC2, VAG2, VA2, VCN2, VC2, VC2N, VDE2, VD2, VKB2, VK2, VXE2, VXE6, VXE8, VXG, VXQ4, VX8
	19610-ZE3-W02ZB	*T39*.....GEKO BLUE	1	1	VNG1
	19610-ZE3-W02ZD	*NH1*.....BLACK	1	1	VKE4, VKX4, VN27, VSD7, VSD9, VXB7, VXB9
	19610-ZE3-W02ZE	*NH105*...MAT BLACK (#15-#20)	1	1	VWC9, VXE7, VXE9
	19610-ZE3-W02ZF	*R280*.....POWER RED	1	1	QXB7, QXB9, QXE7, QXE9, QXH9, SCK4, SXB7, SXB9, VEP9, VNG1, VN27, VPE5, VPE9, VPX4, VPX9, VSD4, VSD7, VSD9, VS49, VTH4, VWC9, VWT4, VXB7, VXB9, VXE7, VXE9
3	19631-ZE3-W00	SHROUD	1	1	LXU, PXU, QAA2, QAA6, QAW, QA2, QA26, QDW9, QK4, QTT, QWA4, QWT2, QXC9, QXQ4, QXU
4	36100-ZF6-P81	SWITCH ASSY., ENGINE STOP ...	1	-	SXQ4, VNG1, VPX9, VSD7, VSD9, VXB7, VXB9, VXG, VX8
	35120-Z0D-V81		1	1	QE, SHQ4, SMC1, VAA1
	36100-ZF6-P82		1	1	HA2, LXQ4, LX2, PA2, QC2, QWC4, QXB7, QXB9, QXC4, QXC6, QXS4, QXUZ, SMD3, SME6, SNC, SWA4, SXB7, SXB9, SXU, VAC2, VAG2, VA2, VD2, VM2, VWC9, VXQ4
			-	1	QTT, VNG1, VPX9, VXG
5	36103-ZE1-000	HOLDER, STOP SWITCH CORD	1	1	LKE, LXE4, LXE8, PAE2, PXD8, PXE8, QAE2, QAE6, QE, QHB4, QKA4, QME0, QNE2, QNE6, QNE8, QNR2, QNR6, QXER, QXE4, QXE6, QXE7, QXE8, QXE9, QXH9, SCK4, SHQ4, SMC1, SME0, SM32, STC4, SXE4, SXE8, VAA8, VC2, VC2N, VDE2, VKB2, VK2, VN27, VXE2, VXE6, VXE7, VXE8, VXE9

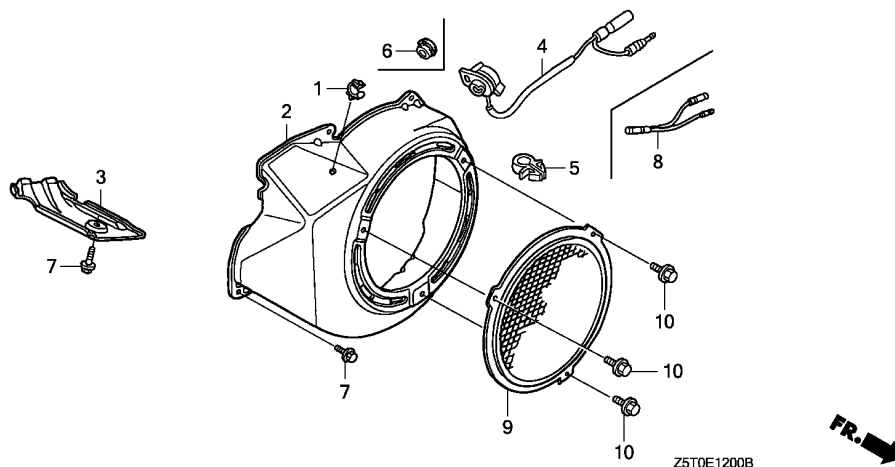


Ref. No.	Part No.	Description	Reqd. QTY		Serial No.	Parts catalogue code
			GX 390 UT1	GX 390 RT1		
6	81329-567-020	GROMMET, DRAIN HOLE	1	1	-----	LKE,LXE4,LXE8,PAE2,PXD8,PXE8,QAE2,QAE6,QHB4,QKA4,QME0,QNB2,QNE2,QNE6 QNE8,QNR2,QNR6,QT1,QWA2,QXER,QXE4,QXE6,QXE7,QXE8,QXE9,QXH9,SCK4,SME0 SM32,STC4,SXE4,SXE8,VAA1,VAA8,VCN2,VC2,VC2N,VDE2,VEP9,VKB2,VKE4,VKX4 VK2,VN27,VPE5,VPE9,VPX4,VSD4,VS49,VTH4,VWC,VWE,VWT4,VXE2,VXE6,VXE7 VXE8,VXE9
7	90013-883-000	BOLT, FLANGE, 6X12(CT200) ...	6	6	-----	
8	32197-ZH8-003	SUB HARNESS	1	1	-----	VAA1,VEP9,VXG
9	19620-ZE3-811	PROTECTOR COMP., FAN COVER ..	1	-	-----	LKE
10	90008-ZE2-003	BOLT, FLANGE, 6X10	3	-	-----	LKE

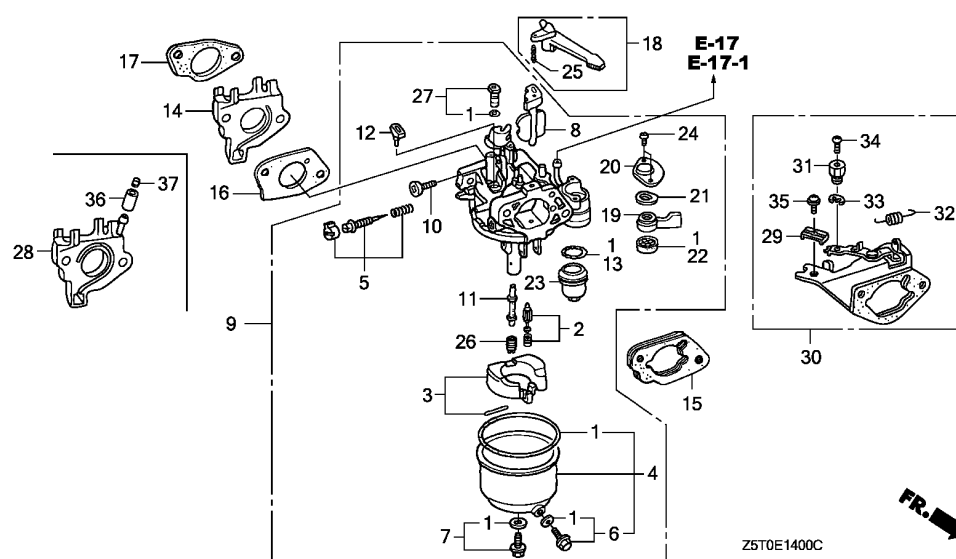


Ref. No.	L.O.N.	(Relative ref. Number) Description	F.R.T.
1	3111B1	GASKET SET, CARBURETOR (3)	0.3
2	3111E1	VALVE SET, FLOAT AND/OR FLOAT SET	0.3
4	3111A3	CHAMBER SET, FLOAT AND/OR GASKET, FLOAT CHAMBER	0.2
5	3111D7	SCREW SET, PILOT	0.2
9	3111F3	CARBURETOR (23)	0.2
13	3101L6	PACKING, FUEL STRAINER CUP (17,28)	0.2
14	3111C0	INSULATOR, CARBURETOR AND/OR PACKING, INSULATOR	0.2
16	3111C8	PACKING, CARBURETOR	0.2
18	8101F9	LEVER, CARBURETOR CHOKE (19,20,21)	0.2
22	3101C5	PACKING, FUEL COCK	0.2
26	3111C3	JET, MAIN	0.3
30	3111G3	STAY, CHOKE CONTROL	0.3

Ref. No.	Part No.	Description	Reqd. QTY GX 390 UT1	Serial No.	Parts catalogue code
1	16010-ZE2-812	GASKET SET (INCLUDE 16173-001-004)	1 1	-----	HA2,LKE,LXE4,LXE8,LXQ4,LXU,LX2,PAE2,PA2,PXD8,PXE8,PXU,QAA2,QAA6,QAE2,QAE6,QAW,QA2,QA26,QC2,QDW9,QE,QHB4,QKA4,QK4,QME0,QNB2,QNE2,QNE6,QNE8,QNR2,QNR6,QTT,QWA2,QWA4,QWC4,QWT2,QXB7,QXB9,QXC4,QXC6,QXC9,QXER,QXE4,QXE6,QXE7,QXE8,QXE9,QXH9,QXQ4,QXS4,QXU,QXUZ,SCK4,SHQ4,SMC1,SMD3,SME0,SME6,SM32,SNC,STC4,SWA4,SXB7,SXB9,SXE4,SXE8,SXQ4,SXU,VAC2,VAG2,VA2,VCN2,VDE2,VD2,VKB2,VK2,VM2,VNG1,VN27,VSD7,VSD9,VWC9,VWT4,VXB7,VXB9,VXE2,VXE6,VXE7,VXE8,VXE9,VXQ4,VX8
2	16011-ZA0-931	VALVE SET, FLOAT	1 1	-----	HA2,LKE,LXE4,LXE8,LXQ4,LXU,LX2,PAE2,PA2,PXD8,PXE8,PXU,QAA2,QAA6,QAE2,QAE6,QAW,QA2,QA26,QC2,QDW9,QE,QHB4,QKA4,QK4,QME0,QNB2,QNE2,QNE6,QNE8,QNR2,QNR6,QTT,QWA2,QWA4,QWC4,QWT2,QXB7,QXB9,QXC4,QXC6,QXC9,QXER,QXE4,QXE6,QXE7,QXE8,QXE9,QXH9,QXQ4,QXS4,QXU,QXUZ,SCK4,SHQ4,SMC1,SMD3,SME0,SME6,SM32,SNC,STC4,SWA4,SXB7,SXB9,SXE4,SXE8,SXQ4,SXU,VAC2,VAG2,VA2,VCN2,VDE2,VD2,VKB2,VK2,VM2,VNG1,VN27,VSD7,VSD9,VWC9,VWT4,VXB7,VXB9,VXE2,VXE6,VXE7,VXE8,VXE9,VXQ4,VX8
3	16013-Z1C-003	FLOAT SET	1 1	-----	HA2,LKE,LXE4,LXE8,LXQ4,LXU,LX2,PAE2,PA2,PXD8,PXE8,PXU,QAA2,QAA6,QAE2,QAE6,QAW,QA2,QA26,QC2,QE,QHB4,QKA4,QK4,QME0,QNB2,QNE2,QNE6,QNE8,QNR2,QNR6,QTT,QWA2,QWC4,QXB7,QXB9,QXC4,QXC6,QXER,QXE4,QXE6,QXE7,QXE8,QXE9,QXH9,QXQ4,QXS4,QXU,QXUZ,SCK4,SHQ4,SMC1,SMD3,SME0,SME6,SM32,SNC,STC4,SWA4,SXB7,SXB9,SXE4,SXE8,SXQ4,SXU,VAC2,VAG2,VA2,VCN2,VDE2,VD2,VKB2,VK2,VM2,VNG1,VN27,VSD7,VSD9,VWC9,VWT4,VXB7,VXB9,VXE2,VXE6,VXE7,VXE8,VXE9,VXQ4,VX8
	16013-ZA0-931		1 -	-----	QDW9,QWA4,QWT2,QXC9

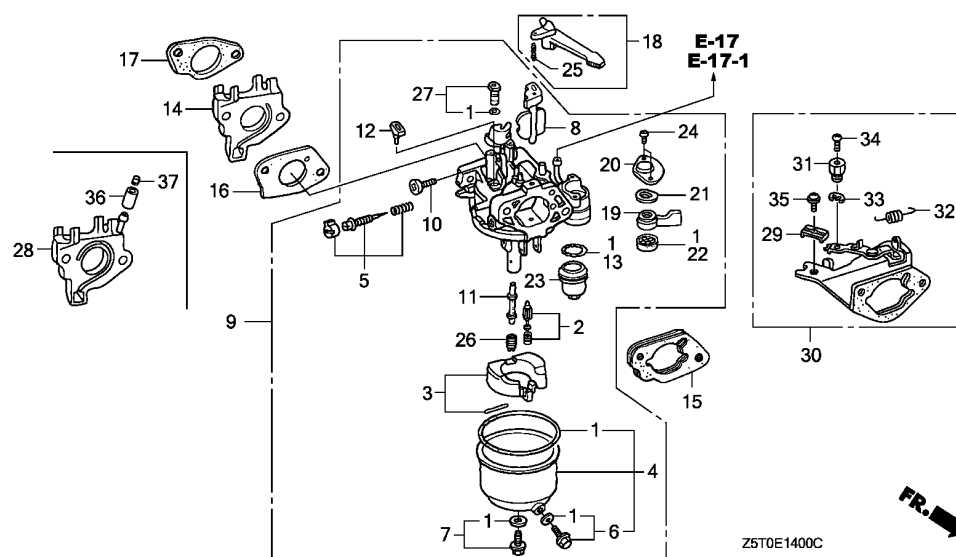


Ref. No.	Part No.	Description	Reqd. QTY		Serial No.	Parts catalogue code
			GX 390 UT1	GX 390 RT1		
4	16015-ZE8-005	CHAMBER SET, FLOAT	1	1	-----	HA2,LKE,LXE4,LXE8,LXQ4,LXU,LX2,PAE2,PA2,PXD8,PXE8,PXU,QAA2,QAA6,QAE2,QAE6,QAW,QA2,QA26,QC2,QDW9,QE,QHB4,QKA4,QK4,QME0,QNB2,QNE2,QNE6,QNE8,QNR2,QNR6,QTT,QWA2,QWA4,QWC4,QWT2,QXB7,QXB9,QXC4,QXC6,QXC9,QXER,QXE4,QXE6,QXE7,QXE8,QXE9,QXH9,QXQ4,QXS4,QXU,QXUZ,SCK4,SHQ4,SMC1,SMD3,SME0,SME6,SM32,SNC,STC4,SWA4,SXB7,SXB9,SXE4,SXE8,SXQ4,SXU,VAC2,VAG2,VA2,VCN2,VDE2,VD2,VKB2,VK2,VM2,VNG1,VN27,VSD7,VSD9,VWC9,VWT4,VXB7,VXB9,VXE2,VXE6,VXE7,VXE8,VXE9,VXQ4,VX8
5	16016-ZH7-W01	SCREW SET, PILOT	1	1	-----	HA2,LKE,LXE4,LXE8,LXQ4,LXU,LX2,PAE2,PA2,PXD8,PXE8,PXU,QAA2,QAA6,QAE2,QAE6,QAW,QA2,QA26,QC2,QDW9,QE,QHB4,QKA4,QK4,QME0,QNB2,QNE2,QNE6,QNE8,QNR2,QNR6,QTT,QWA2,QWA4,QWC4,QWT2,QXB7,QXB9,QXC4,QXC6,QXC9,QXER,QXE4,QXE6,QXE7,QXE8,QXE9,QXH9,QXQ4,QXS4,QXU,QXUZ,SCK4,SHQ4,SMC1,SMD3,SME0,SME6,SM32,SNC,STC4,SWA4,SXB7,SXB9,SXE4,SXE8,SXQ4,SXU,VAC2,VAG2,VA2,VCN2,VDE2,VD2,VKB2,VK2,VM2,VNG1,VN27,VSD7,VSD9,VWC9,VWT4,VXB7,VXB9,VXE2,VXE6,VXE7,VXE8,VXE9,VXQ4,VX8
6	16024-ZE1-811	SCREW SET, DRAIN	1	1	-----	HA2,LKE,LXE4,LXE8,LXQ4,LXU,LX2,PAE2,PA2,PXD8,PXE8,PXU,QAA2,QAA6,QAE2,QAE6,QAW,QA2,QA26,QC2,QDW9,QE,QHB4,QKA4,QK4,QME0,QNB2,QNE2,QNE6,QNE8,QNR2,QNR6,QTT,QWA2,QWA4,QWC4,QWT2,QXB7,QXB9,QXC4,QXC6,QXC9,QXER,QXE4,QXE6,QXE7,QXE8,QXE9,QXH9,QXQ4,QXS4,QXU,QXUZ,SCK4,SHQ4,SMC1,SMD3,SME0,SME6,SM32,SNC,STC4,SWA4,SXB7,SXB9,SXE4,SXE8,SXQ4,SXU,VAC2,VAG2,VA2,VCN2,VDE2,VD2,VKB2,VK2,VM2,VNG1,VN27,VSD7,VSD9,VWC9,VWT4,VXB7,VXB9,VXE2,VXE6,VXE7,VXE8,VXE9,VXQ4,VX8
7	16028-ZE0-005	SCREW SET	1	1	-----	HA2,LKE,LXE4,LXE8,LXQ4,LXU,LX2,PAE2,PA2,PXD8,PXE8,PXU,QAA2,QAA6,QAE2,QAE6,QAW,QA2,QA26,QC2,QDW9,QE,QHB4,QKA4,QK4,QME0,QNB2,QNE2,QNE6,QNE8,QNR2,QNR6,QTT,QWA2,QWA4,QWC4,QWT2,QXB7,QXB9,QXC4,QXC6,QXC9,QXER,QXE4,QXE6,QXE7,QXE8,QXE9,QXH9,QXQ4,QXS4,QXU,QXUZ,SCK4,SHQ4,SMC1,SMD3,SME0,SME6,SM32,SNC,STC4,SWA4,SXB7,SXB9,SXE4,SXE8,SXQ4,SXU,VAC2,VAG2,VA2,VCN2,VDE2,VD2,VKB2,VK2,VM2,VNG1,VN27,VSD7,VSD9,VWC9,VWT4,VXB7,VXB9,VXE2,VXE6,VXE7,VXE8,VXE9,VXQ4,VX8

Ref. No.	Part No.	Description	Reqd. QTY		Serial No.	Parts catalogue code
			GX 390 UT1	GX 390 RT1		
8	16044-ZE3-W20	CHOKE SET	1	1	-----	HA2,LKE,LXE4,LXE8,LXQ4,LXU,LX2,PAE2,PA2,PXD8,PXE8,PXU,QAA2,QAA6,QAE2,QAE6,QAW,QA2,QA26,QC2,QDW9,QE,QHB4,QKA4,QK4,QME0,QNB2,QNE2,QNE6,QNE8,QNR2,QNR6,QTT,QWA2,QWA4,QWC4,QWT2,QXB7,QXB9,QXC4,QXC6,QXC9,QXER,QXE4,QXE6,QXE7,QXE8,QXE9,QXH9,QXQ4,QXS4,QXU,QXUZ,SCK4,SHQ4,SMC1,SMD3,SME0,SME6,SM32,SNC,STC4,SWA4,SBX7,SBX9,SXE4,SXE8, SXQ4, SXU,VAC2,VAG2,VA2,VCN2,VDE2,VD2,VKB2,VK2,VM2,VNG1,VN27,VSD7,VSD9,VWC9,VWT4,VXB7,VXB9,VXE2,VXE6,VXE7,VXE8,VXE9,VXQ4,VX8
9	16100-Z1C-V01	CARBURETOR ASSY. (BE85Q A) ..	1	1	-----	HA2,LKE,LXE4,LXE8,LXQ4,LXU,LX2,PAE2,PA2,PXD8,PXE8,PXU,QAA2,QAA6,QAE2,QAE6,QAW,QA2,QA26,QE,QHB4,QKA4,QK4,QME0,QNB2,QNE2,QNE6,QNE8,QNR2,QNR6,QTT,QWA2,QXB7,QXB9,QXER,QXE4,QXE6,QXE7,QXE8,QXE9,QXH9,QXQ4,QXU,QXUZ,SCK4,SHQ4,SMC1,SME0,SME6,SM32,STC4,SWA4,SBX7,SBX9,SXE4,SXE8, SXQ4, SXU,VAC2,VAG2,VA2,VCN2,VDE2,VD2,VKB2,VK2,VM2,VNG1,VN27,VSD7,VSD9,VWC9,VXB7,VXB9,VXE2,VXE6,VXE7,VXE8,VXE9,VXQ4,VX8
	16100-Z1C-V51	CARBURETOR ASSY. (BE85L A) ..	1	1	-----	VAC2,VAG2,VA2,VCN2,VDE2,VD2,VKB2,VK2,VM2,VNG1,VN27,VSD7,VSD9,VWC9,VXB7,VXB9,VXE2,VXE6,VXE7,VXE8,VXE9,VXQ4,VX8
	16100-ZF6-V21	CARBURETOR ASSY. (BE85C B) ..	1	-	-----	QDW9,QWA4,QWT2,QXC9
	16100-Z5T-P81	CARBURETOR ASSY. (BE94B A) ..	1	-	-----	QC2,QWC4,QXC6,QXS4
	16100-Z5T-801	CARBURETOR ASSY. (BE85Z A) ..	1	1	-----	SMD3,VWT4
	16100-Z5T-811	CARBURETOR ASSY. (BE94A A) ..	1	-	-----	QXC4,SNC
10	16124-ZE0-005	SCREW, THROTTLE STOP	1	1	-----	HA2,LKE,LXE4,LXE8,LXQ4,LXU,LX2,PAE2,PA2,PXD8,PXE8,PXU,QAA2,QAA6,QAE2,QAE6,QAW,QA2,QA26,QE,QHB4,QKA4,QK4,QME0,QNB2,QNE2,QNE6,QNE8,QNR2,QNR6,QTT,QWA2,QWA4,QWC4,QWT2,QXB7,QXB9,QXC4,QXC6,QXC9,QXER,QXE4,QXE6,QXE7,QXE8,QXE9,QXH9,QXQ4,QXS4,QXU,QXUZ,SCK4,SHQ4,SMC1,SMD3,SME0,SME6,SM32,SNC,STC4,SWA4,SBX7,SBX9,SXE4,SXE8, SXQ4, SXU,VAC2,VAG2,VA2,VCN2,VDE2,VD2,VKB2,VK2,VM2,VNG1,VN27,VSD7,VSD9,VWC9,VWT4,VXB7,VXB9,VXE2,VXE6,VXE7,VXE8,VXE9,VXQ4,VX8
11	16166-ZF6-V00	NOZZLE, MAIN	1	1	-----	HA2,LKE,LXE4,LXE8,LXQ4,LXU,LX2,PAE2,PA2,PXD8,PXE8,PXU,QAA2,QAA6,QAE2,QAE6,QAW,QA2,QA26,QE,QHB4,QKA4,QK4,QME0,QNB2,QNE2,QNE6,QNE8,QNR2,QNR6,QTT,QWA2,QXB7,QXB9,QXER,QXE4,QXE6,QXE7,QXE8,QXE9,QXH9,QXQ4,QXS4,QXU,QXUZ,SCK4,SHQ4,SMC1,SME0,SME6,SM32,STC4,SWA4,SBX7,SBX9,SXE4,SXE8, SXQ4, SXU,VAC2,VAG2,VA2,VCN2,VDE2,VD2,VKB2,VK2,VM2,VNG1,VN27,VSD7,VSD9,VWC9,VXB7,VXB9,VXE2,VXE6,VXE7,VXE8,VXE9,VXQ4,VX8
	16166-ZF6-W10		1	-	-----	QC2,QDW9,QWA4,QWC4,QWT2,QXC4,QXC6,QXC9,QXS4,SNC
	16166-ZF6-W20		1	1	-----	SMD3,VWT4
12	16172-ZE3-W10	COLLAR, SETTING	1	1	-----	HA2,LKE,LXE4,LXE8,LXQ4,LXU,LX2,PAE2,PA2,PXD8,PXE8,PXU,QAA2,QAA6,QAE2,QAE6,QAW,QA2,QA26,QC2,QDW9,QE,QHB4,QKA4,QK4,QME0,QNB2,QNE2,QNE6,QNE8,QNR2,QNR6,QTT,QWA2,QWA4,QWC4,QWT2,QXB7,QXB9,QXC4,QXC6,QXC9,QXER,QXE4,QXE6,QXE7,QXE8,QXE9,QXH9,QXQ4,QXS4,QXU,QXUZ,SCK4,SHQ4,SMC1,SME0,SME6,SM32,STC4,SWA4,SBX7,SBX9,SXE4,SXE8, SXQ4, SXU,VAC2,VAG2,VA2,VCN2,VDE2,VD2,VKB2,VK2,VM2,VNG1,VN27,VSD7,VSD9,VWC9,VXB7,VXB9,VXE2,VXE6,VXE7,VXE8,VXE9,VXQ4,VX8
13	16173-001-004	PACKING, FUEL STRAINER CUP ..	1	1	-----	HA2,LKE,LXE4,LXE8,LXQ4,LXU,LX2,PAE2,PA2,PXD8,PXE8,PXU,QAA2,QAA6,QAE2,QAE6,QAW,QA2,QA26,QC2,QDW9,QE,QHB4,QKA4,QK4,QME0,QNB2,QNE2,QNE6,QNE8,QNR2,QNR6,QTT,QWA2,QWA4,QWC4,QWT2,QXB7,QXB9,QXC4,QXC6,QXC9,QXER,QXE4,QXE6,QXE7,QXE8,QXE9,QXH9,QXQ4,QXS4,QXU,QXUZ,SCK4,SHQ4,SMC1,SMD3,SME0,SME6,SM32,SNC,STC4,SWA4,SBX7,SBX9,SXE4,SXE8, SXQ4, SXU,VAC2,VAG2,VA2,VCN2,VDE2,VD2,VKB2,VK2,VM2,VNG1,VN27,VSD7,VSD9,VWC9,VXB7,VXB9,VXE2,VXE6,VXE7,VXE8,VXE9,VXQ4,VX8
14	16211-ZF6-000	INSULATOR, CARBURETOR	1	1	-----	HA2,LKE,LXE4,LXE8,LXQ4,LXU,LX2,PAE2,PA2,PXD8,PXE8,PXU,QAA2,QAA6,QAE2,QAE6,QAW,QA2,QA26,QC2,QDW9,QE,QHB4,QKA4,QK4,QME0,QNB2,QNE2,QNE6,QNE8,QNR2,QNR6,QTT,QWA2,QWA4,QWC4,QWT2,QXB7,QXB9,QXC4,QXC6,QXC9,QXER,QXE4,QXE6,QXE7,QXE8,QXE9,QXH9,QXQ4,QXS4,QXU,QXUZ,SCK4,SHQ4,SMC1,SMD3,SME0,SME6,SM32,SNC,STC4,SWA4,SBX7,SBX9,SXE4,SXE8, SXQ4, SXU,VAC2,VAG2,VA2,VCN2,VDE2,VD2,VKB2,VM2,VNG1,VN27,VSD7,VSD9,VWC9,VWT4,VXB7,VXB9,VXE2,VXE6,VXE7,VXE8,VXE9,VXQ4,VX8

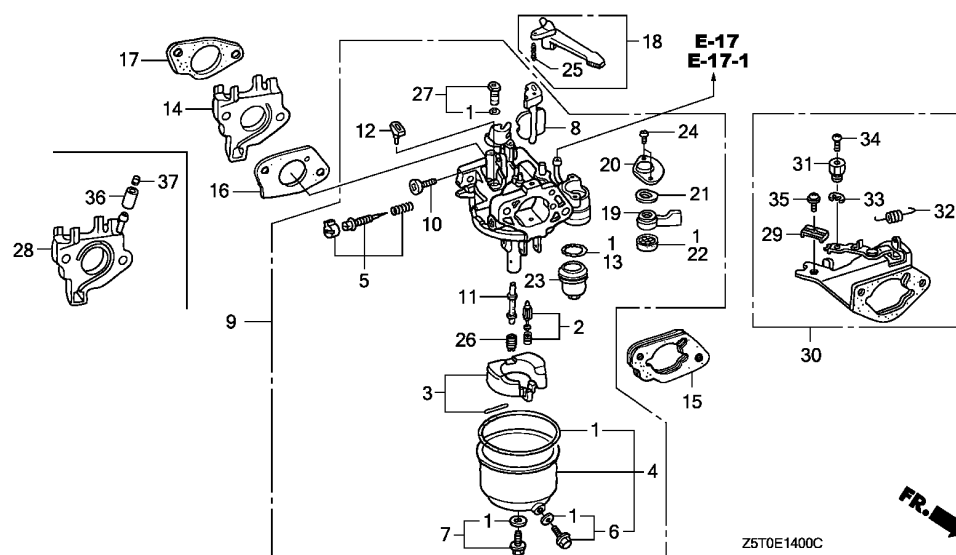


Ref. No.	Part No.	Description	Reqd. QTY		Serial No.	Parts catalogue code
			GX 390 UT1	GX 390 RT1		
15	16220-ZA0-702	SPACER COMP., CARBURETOR	1	1	-----	HA2,LXE4,LXE8,LXQ4,LXU,LX2,PAE2,PA2,PXD8,PXE8,PXU,QAA2,QAA6,QAE2,QAE6,QAW,QA2,QA26,QC2,QDW9,QE,QHB4,QKA4,QK4,QME0,QNE2,QNE6,QNE8,QNR2,QNR6,QTT,QWA2,QWA4,QWC4,QWT2,QXB7,QXB9,QXC4,QXC6,QXC9,QXER,QXE4,QXE6,QXE7,QXE8,QXE9,QXH9,QXQ4,QXS4,QXU,QXUZ,SCK4,SHQ4,SMC1,SMD3,SME0,SME6,SM32,SNC,STC4,SWA4,SBX7,SBX9,SXE4,SXE8,SXQ4,SXU,VAC2,VAG2,VA2,VCN2,VDE2,VD2,VKB2,VK2,VM2,VNG1,VN27,VSD7,VSD9,VWC9,VWT4,VXB7,VXB9,VXE2,VXE6,VXE7,VXE8,VXE9,VXQ4,VX8
16	16221-ZF6-800	PACKING, CARBURETOR	1	1	-----	HA2,LKE,LXE4,LXE8,LXQ4,LXU,LX2,PAE2,PA2,PXD8,PXE8,PXU,QAA2,QAA6,QAE2,QAE6,QAW,QA2,QA26,QC2,QDW9,QE,QHB4,QKA4,QK4,QME0,QNB2,QNE2,QNE6,QNE8,QNR2,QNR6,QTT,QWA2,QWA4,QWC4,QWT2,QXB7,QXB9,QXC4,QXC6,QXC9,QXER,QXE4,QXE6,QXE7,QXE8,QXE9,QXH9,QXQ4,QXS4,QXU,QXUZ,SCK4,SHQ4,SMC1,SMD3,SME0,SME6,SM32,SNC,STC4,SWA4,SBX7,SBX9,SXE4,SXE8,SXQ4,SXU,VAC2,VAG2,VA2,VCN2,VDE2,VD2,VKB2,VK2,VM2,VNG1,VN27,VSD7,VSD9,VWC9,VWT4,VXB7,VXB9,VXE2,VXE6,VXE7,VXE8,VXE9,VXQ4,VX8
17	16223-ZE3-W00	PACKING, INSULATOR	1	1	-----	HA2,LKE,LXE4,LXE8,LXQ4,LXU,LX2,PAE2,PA2,PXD8,PXE8,PXU,QAA2,QAA6,QAE2,QAE6,QAW,QA2,QA26,QC2,QDW9,QE,QHB4,QKA4,QK4,QME0,QNB2,QNE2,QNE6,QNE8,QNR2,QNR6,QTT,QWA2,QWA4,QWC4,QWT2,QXB7,QXB9,QXC4,QXC6,QXC9,QXER,QXE4,QXE6,QXE7,QXE8,QXE9,QXH9,QXQ4,QXS4,QXU,QXUZ,SCK4,SHQ4,SMC1,SMD3,SME0,SME6,SM32,SNC,STC4,SWA4,SBX7,SBX9,SXE4,SXE8,SXQ4,SXU,VAC2,VAG2,VA2,VCN2,VDE2,VD2,VKB2,VK2,VM2,VNG1,VN27,VSD7,VSD9,VWC9,VWT4,VXB7,VXB9,VXE2,VXE6,VXE7,VXE8,VXE9,VXQ4,VX8
18	16610-ZE1-000	LEVER COMP., CHOKE (STD.)	1	1	-----	HA2,LXE4,LXE8,LXQ4,LXU,LX2,PAE2,PA2,PXD8,PXE8,PXU,QAA2,QAA6,QAE2,QAE6,QAW,QA2,QA26,QC2,QDW9,QE,QHB4,QKA4,QK4,QME0,QNE2,QNE6,QNE8,QNR2,QNR6,QTT,QWA2,QWA4,QWC4,QWT2,QXB7,QXB9,QXC4,QXC6,QXC9,QXER,QXE4,QXE6,QXE7,QXE8,QXE9,QXH9,QXQ4,QXS4,QXU,QXUZ,SCK4,SHQ4,SMC1,SMD3,SME0,SME6,SM32,SNC,STC4,SWA4,SBX7,SBX9,SXE4,SXE8,SXQ4,SXU,VAC2,VAG2,VA2,VCN2,VDE2,VD2,VKB2,VK2,VM2,VNG1,VN27,VSD7,VSD9,VWC9,VWT4,VXB7,VXB9,VXE2,VXE6,VXE7,VXE8,VXE9,VXQ4,VX8

Ref. No.	Part No.	Description	Reqd. QTY		Serial No.	Parts catalogue code
			GX 390 UT1	GX 390 RT1		
19	16953-ZE1-812	LEVER, COCK	1	1	-----	HA2,LKE,LXE4,LXE8,LXQ4,LXU,LX2,PAE2,PA2,PXD8,PXE8,PXU,QAA2,QAA6,QAE2,QAE6,QAW,QA2,QA26,QC2,QDW9,QE,QHB4,QKA4,QK4,QME0,QNB2,QNE2,QNE6,QNE8,QNR2,QNR6,QT1,QWA2,QWA4,QWC4,QWT2,QXB7,QXB9,QXC4,QXC6,QXC9,QXER,QXE4,QXE6,QXE7,QXE8,QXE9,QXH9,QXQ4,QXS4,QXU,QXUZ,SCK4,SHQ4,SMC1,SMD3,SME0,SME6,SM32,SNC,STC4,SWA4,SBX7,SBX9,SXE4,SXE8, SXQ4, SXU, VAC2, VAG2, VA2, VCN2, VDE2, VD2, VKB2, VK2, VM2, VNG1, VN27, VSD7, VSD9, VWC9, VWT4, VXB7, VXB9, VXE2, VXE6, VXE7, VXE8, VXE9, VXQ4, VX8
20	16954-ZE1-812	PLATE, LEVER SETTING	1	1	-----	HA2,LKE,LXE4,LXE8,LXQ4,LXU,LX2,PAE2,PA2,PXD8,PXE8,PXU,QAA2,QAA6,QAE2,QAE6,QAW,QA2,QA26,QC2,QDW9,QE,QHB4,QKA4,QK4,QME0,QNB2,QNE2,QNE6,QNE8,QNR2,QNR6,QT1,QWA2,QWA4,QWC4,QWT2,QXB7,QXB9,QXC4,QXC6,QXC9,QXER,QXE4,QXE6,QXE7,QXE8,QXE9,QXH9,QXQ4,QXS4,QXU,QXUZ,SCK4,SHQ4,SMC1,SMD3,SME0,SME6,SM32,SNC,STC4,SWA4,SBX7,SBX9,SXE4,SXE8, SXQ4, SXU, VAC2, VAG2, VA2, VCN2, VDE2, VD2, VKB2, VK2, VM2, VNG1, VN27, VSD7, VSD9, VWC9, VWT4, VXB7, VXB9, VXE2, VXE6, VXE7, VXE8, VXE9, VXQ4, VX8
21	16956-ZE1-811	SPRING, COCK LEVER	1	1	-----	HA2,LKE,LXE4,LXE8,LXQ4,LXU,LX2,PAE2,PA2,PXD8,PXE8,PXU,QAA2,QAA6,QAE2,QAE6,QAW,QA2,QA26,QC2,QDW9,QE,QHB4,QKA4,QK4,QME0,QNB2,QNE2,QNE6,QNE8,QNR2,QNR6,QT1,QWA2,QWA4,QWC4,QWT2,QXB7,QXB9,QXC4,QXC6,QXC9,QXER,QXE4,QXE6,QXE7,QXE8,QXE9,QXH9,QXQ4,QXS4,QXU,QXUZ,SCK4,SHQ4,SMC1,SMD3,SME0,SME6,SM32,SNC,STC4,SWA4,SBX7,SBX9,SXE4,SXE8, SXQ4, SXU, VAC2, VAG2, VA2, VCN2, VDE2, VD2, VKB2, VK2, VM2, VNG1, VN27, VSD7, VSD9, VWC9, VWT4, VXB7, VXB9, VXE2, VXE6, VXE7, VXE8, VXE9, VXQ4, VX8
22	16957-ZE1-812	PACKING, FUEL COCK	1	1	-----	HA2,LKE,LXE4,LXE8,LXQ4,LXU,LX2,PAE2,PA2,PXD8,PXE8,PXU,QAA2,QAA6,QAE2,QAE6,QAW,QA2,QA26,QC2,QDW9,QE,QHB4,QKA4,QK4,QME0,QNB2,QNE2,QNE6,QNE8,QNR2,QNR6,QT1,QWA2,QWA4,QWC4,QWT2,QXB7,QXB9,QXC4,QXC6,QXC9,QXER,QXE4,QXE6,QXE7,QXE8,QXE9,QXH9,QXQ4,QXS4,QXU,QXUZ,SCK4,SHQ4,SMC1,SMD3,SME0,SME6,SM32,SNC,STC4,SWA4,SBX7,SBX9,SXE4,SXE8, SXQ4, SXU, VAC2, VAG2, VA2, VCN2, VDE2, VD2, VKB2, VK2, VM2, VNG1, VN27, VSD7, VSD9, VWC9, VWT4, VXB7, VXB9, VXE2, VXE6, VXE7, VXE8, VXE9, VXQ4, VX8
23	16967-ZE0-811	CUP, FUEL STRAINER	1	1	-----	HA2,LKE,LXE4,LXE8,LXQ4,LXU,LX2,PAE2,PA2,PXD8,PXE8,PXU,QAA2,QAA6,QAE2,QAE6,QAW,QA2,QA26,QC2,QDW9,QE,QHB4,QKA4,QK4,QME0,QNB2,QNE2,QNE6,QNE8,QNR2,QNR6,QT1,QWA2,QWA4,QWC4,QWT2,QXB7,QXB9,QXC4,QXC6,QXC9,QXER,QXE4,QXE6,QXE7,QXE8,QXE9,QXH9,QXQ4,QXS4,QXU,QXUZ,SCK4,SHQ4,SMC1,SMD3,SME0,SME6,SM32,SNC,STC4,SWA4,SBX7,SBX9,SXE4,SXE8, SXQ4, SXU, VAC2, VAG2, VA2, VCN2, VDE2, VD2, VKB2, VK2, VM2, VNG1, VN27, VSD7, VSD9, VWC9, VWT4, VXB7, VXB9, VXE2, VXE6, VXE7, VXE8, VXE9, VXQ4, VX8
24	93500-03006-1H	SCREW, PAN, 3X6	2	2	-----	HA2,LKE,LXE4,LXE8,LXQ4,LXU,LX2,PAE2,PA2,PXD8,PXE8,PXU,QAA2,QAA6,QAE2,QAE6,QAW,QA2,QA26,QC2,QDW9,QE,QHB4,QKA4,QK4,QME0,QNB2,QNE2,QNE6,QNE8,QNR2,QNR6,QT1,QWA2,QWA4,QWC4,QWT2,QXB7,QXB9,QXC4,QXC6,QXC9,QXER,QXE4,QXE6,QXE7,QXE8,QXE9,QXH9,QXQ4,QXS4,QXU,QXUZ,SCK4,SHQ4,SMC1,SMD3,SME0,SME6,SM32,SNC,STC4,SWA4,SBX7,SBX9,SXE4,SXE8, SXQ4, SXU, VAC2, VAG2, VA2, VCN2, VDE2, VD2, VKB2, VK2, VM2, VNG1, VN27, VSD7, VSD9, VWC9, VWT4, VXB7, VXB9, VXE2, VXE6, VXE7, VXE8, VXE9, VXQ4, VX8
25	94305-20122	PIN, SPRING, 2X12	1	1	-----	HA2,LXE4,LXE8,LXQ4,LXU,LX2,PAE2,PA2,PXD8,PXE8,PXU,QAA2,QAA6,QAE2,QAE6,QAW,QA2,QA26,QC2,QDW9,QE,QHB4,QKA4,QK4,QME0,QNE2,QNE6,QNE8,QNR2,QNR6,QT1,QWA2,QWA4,QWC4,QWT2,QXB7,QXB9,QXC4,QXC6,QXC9,QXER,QXE4,QXE6,QXE7,QXE8,QXE9,QXH9,QXQ4,QXS4,QXU,QXUZ,SCK4,SHQ4,SMC1,SMD3,SME0,SME6,SM32,SNC,STC4,SWA4,SBX7,SBX9,SXE4,SXE8, SXQ4, SXU, VAC2, VAG2, VA2, VCN2, VDE2, VD2, VKB2, VK2, VM2, VNG1, VN27, VSD7, VSD9, VWC9, VWT4, VXB7, VXB9, VXE2, VXE6, VXE7, VXE8, VXE9, VXQ4, VX8
26	99101-ZH8-0880	JET, MAIN, #88	(1)	(1)	-----	HA2,LKE,LXE4,LXE8,LXQ4,LXU,LX2,PAE2,PA2,PXD8,PXE8,PXU,QAA2,QAA6,QAE2,QAE6,QAW,QA2,QA26,QE,QHB4,QKA4,QK4,QME0,QNB2,QNE2,QNE6,QNE8,QNR2,QNR6,QT1,QWA2,QXB7,QXB9,QXER,QXE4,QXE6,QXE7,QXE8,QXE9,QXH9,QXQ4,QXU,QXUZ,SCK4,SHQ4,SMC1,SME0,SME6,SM32,STC4,SWA4,SBX7,SBX9,SXE4,SXE8, SXQ4, SXU

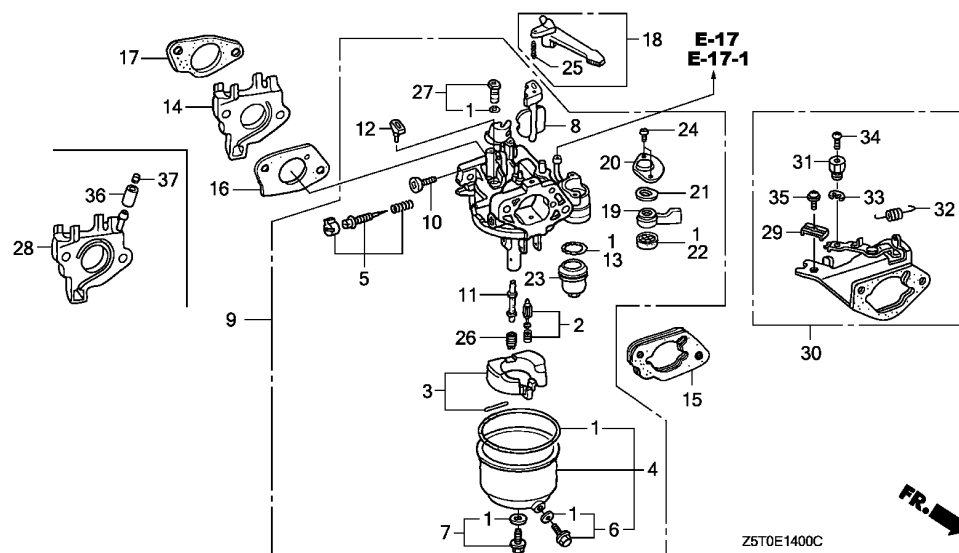

Ref. No.	Part No.	Description	Reqd. QTY		Serial No.	Parts catalogue code
			GX 390 UT1	GX 390 RT1		
26)	99101-ZH8-0900	JET, MAIN, #90	(1)	(1)	-----	HA2,LKE,LXE4,LXE8,LXQ4,LXU,LX2,PAE2,PA2,PXD8,PXE8,PXU,QAA2,QAA6,QAE2 QAE6,QAW,QA2,QA26,QE,QHB4,QKA4,QK4,QME0,QNB2,QNE2,QNE6,QNE8,QNR2,QNR6 QTT,QWA2,QXB7,QXB9,QXER,QXE4,QXE6,QXE7,QXE8,QXE9,QXH9,QXQ4,QXU,QXUZ SCK4,SHQ4,SMC1,SME0,SME6,SM32,STC4,SWA4,SBX7,SBX9,SXE4,SXE8,SXQ4,SXU VAC2,VAG2,VA2,VCN2,VDE2,VD2,VKB2,VK2,VM2,VNG1,VN27,VSD7,VSD9,VWC9 VXB7,VXB9,VXE2,VXE6,VXE7,VXE8,VXE9,VXQ4,VX8
	99101-ZH8-0920	JET, MAIN, #92	1	1	-----	HA2,LKE,LXE4,LXE8,LXQ4,LXU,LX2,PAE2,PA2,PXD8,PXE8,PXU,QAA2,QAA6,QAE2 QAE6,QAW,QA2,QA26,QE,QHB4,QKA4,QK4,QME0,QNB2,QNE2,QNE6,QNE8,QNR2,QNR6 QTT,QWA2,QXB7,QXB9,QXER,QXE4,QXE6,QXE7,QXE8,QXE9,QXH9,QXQ4,QXU,QXUZ SCK4,SHQ4,SMC1,SME0,SME6,SM32,STC4,SWA4,SBX7,SBX9,SXE4,SXE8,SXQ4,SXU VAC2,VAG2,VA2,VCN2,VDE2,VD2,VKB2,VK2,VM2,VNG1,VN27,VSD7,VSD9,VWC9 VXB7,VXB9,VXE2,VXE6,VXE7,VXE8,VXE9,VXQ4,VX8
	99101-ZH8-0950	JET, MAIN, #95	1	1	-----	VA2,VM2,VNG1,VN27,VSD7,VSD9,VXB7,VXB9,VXE2,VXE6,VXE7,VXE8,VXE9,VXQ4 VX8
			(1)	1	-----	QC2,QDW9,QWA4,QWC4,QWT2,QXC6,QXC9,QXS4,SMD3,VAC2,VAG2,VCN2,VDE2,VD2 VKB2,VK2,VWC9
			-	(1)	-----	VWT4
	99101-ZH8-0980	JET, MAIN, #98	(1)	(1)	-----	QC2,QDW9,QWA4,QWC4,QWT2,QXC6,QXC9,QXS4,SMD3,VWT4
	99101-ZH8-1000	JET, MAIN, #100	1	1	-----	QC2,QDW9,QWA4,QWC4,QWT2,QXC6,QXC9,QXS4,SMD3,VWT4
	99101-ZH8-1100	JET, MAIN, #110	(1)	-	-----	QXC4,SNC
	99101-ZH8-1120	JET, MAIN, #112	(1)	-	-----	QXC4,SNC
	99101-ZH8-1150	JET, MAIN, #115	1	-	-----	QXC4,SNC
27	99204-ZA0-0450	JET SET, PILOT, #45	1	1	-----	HA2,LKE,LXE4,LXE8,LXQ4,LXU,LX2,PAE2,PA2,PXD8,PXE8,PXU,QAA2,QAA6,QAE2 QAE6,QAW,QA2,QA26,QC2,QDW9,QE,QHB4,QKA4,QK4,QME0,QNB2,QNE2,QNE6,QNE8 QNR2,QNR6,QTT,QWA2,QWA4,QWC4,QWT2,QXB7,QXB9,QXC6,QXC9,QXER,QXE4,QXE6 QXE7,QXE8,QXE9,QXH9,QXQ4,QXS4,QXU,QXUZ,SCK4,SHQ4,SMC1,SME0,SME6,SM32 STC4,SWA4,SBX7,SBX9,SXE4,SXE8,SXQ4,SXU,VAC2,VAG2,VA2,VCN2,VDE2,VD2 VKB2,VK2,VM2,VNG1,VN27,VSD7,VSD9,VWC9,VXB7,VXB9,VXE2,VXE6,VXE7,VXE8 VXE9,VXQ4,VX8

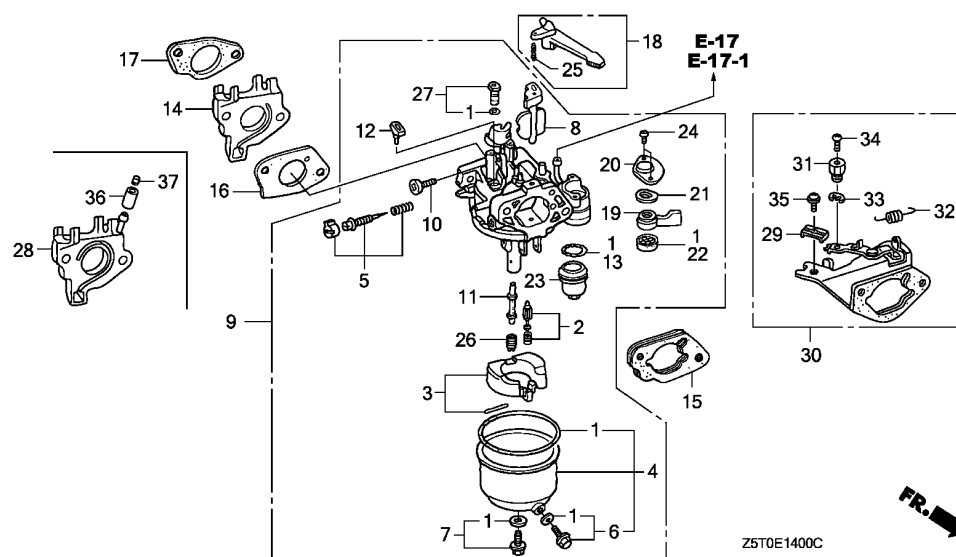


Ref. No.	Part No.	Description	Reqd. QTY		Serial No.	Parts catalogue code
			GX 390 UT1	GX 390 RT1		
27)	99204-ZA0-0400	JET SET, PILOT, #40	1	1	-----	SMD3,VWT4
	99204-ZE2-0400		1	-	-----	QXC4,SNC
28	16211-ZF6-D40	INSULATOR, CARBURETOR	-	1	-----	VK2
29	16576-891-000	HOLDER, CABLE	1	1	-----	LKE,QNB2
30	16590-ZE2-812	STAY ASSY., CHOKE CONTROL (REMOTE)	1	1	-----	LKE,QNB2
31	16594-883-010	HOLDER, WIRE	1	1	-----	LKE,QNB2
32	16615-ZE2-810	SPRING, RETURN	1	1	-----	LKE,QNB2
33	90605-230-000	CIRCLIP, 5MM	1	1	-----	LKE,QNB2
34	93500-04006-0H	SCREW, PAN, 4X6	1	1	-----	LKE,QNB2
35	93893-05016-00	SCREW-WASHER, 5X16	1	1	-----	LKE,QNB2
36	95001-35025-40	TUBE, FUEL, 3.5X25 (95001-35001-60M)	-	1	-----	VK2
37	96205-04005	PLUG, CONE TYPE, 4X5	-	1	-----	VK2

E-14-1

CARBURETOR(2)


E16

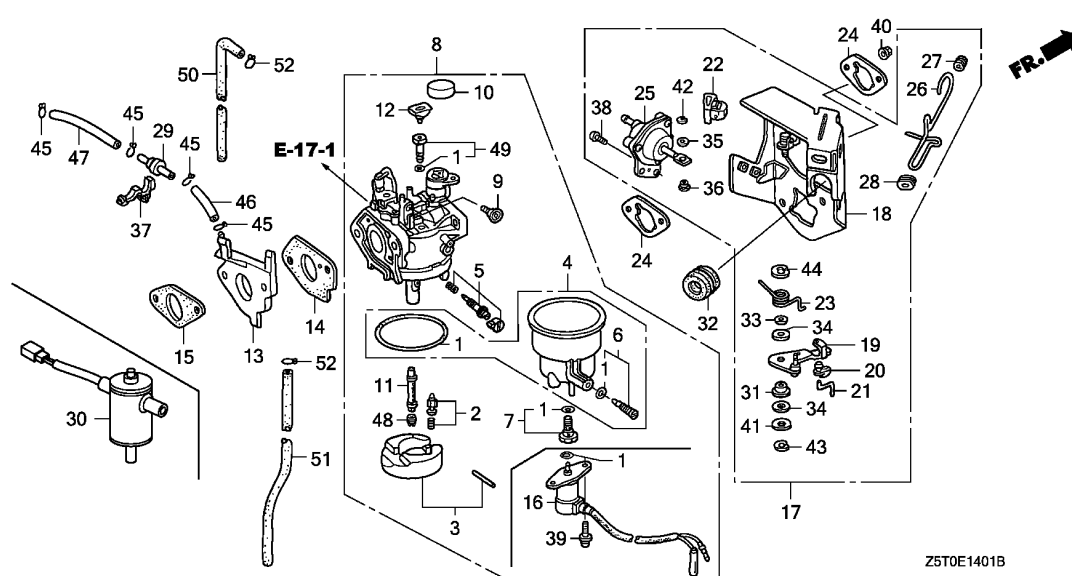

Ref. No.	L.O.N.	(Relative ref. Number) Description	F.R.T.
1	3111G1	GASKET SET, CARBURETOR(A) (3)	0.4
2	3111G6	VALVE SET, FLOAT AND/OR FLOAT SET(A)	0.4
4	3111M2	CHAMBER SET, FLOAT AND/OR GASKET, FLOAT CHAMBER(A)	0.4
8	3111G7	CARBURETOR(A)	0.3
13	3111G2	INSULATOR, CARBURETOR AND/OR PACKING, INSULATOR(A)	0.3
14	3111G5	PACKING, CARBURETOR(A)	0.3
16	6211C0	VALVE, CARBURETOR SOLENOID ...	0.2
17	8101R1	STAY, MANUAL CHOKE	0.3
24	3121D9	PACKING, AIR CLEANER	0.2
	3121D9A	.Replace carburetor side add ..	0.1
25	3111A7	DIAPHRAGM, CARBURETOR	0.3
26	8101Q2	ROD, CHOKE CONTROL	0.2
29		(46,47)	
	311175	VALVE, DASHPOT CHECK	0.1
48	3111G4	JET, MAIN(A)	0.4
50	1111M9	TUBE, AIR VENT	0.1
51	3101F6	TUBE, FUEL	0.1

Ref. No.	Part No.	Description	Reqd. QTY	Serial No.	Parts catalogue code
			GX 390 UT1	GX 390 RT1	
1	16010-ZA0-921	GASKET SET	1	1	VAA1,VAA8,VC2,VC2N,VPE5,VPE9,VPX4,VPX9,VTH4,VXG
	16010-ZE3-701		1	1	VEP9,VKE4,VKX4,VSD4,VS49,VWC,VWE
2	16011-ZA0-931	VALVE SET, FLOAT	1	1	VAA1,VAA8,VC2,VC2N,VEP9,VKE4,VKX4,VPE5,VPE9,VPX4,VPX9,VSD4,VS49,VTH4,VWC,VWE,VXG
3	16013-ZA0-931	FLOAT SET	1	1	VKX4,VPX4,VPX9,VXG
	16013-Z1C-003		1	1	VAA1,VAA8,VC2,VC2N,VEP9,VKE4,VPE5,VPE9,VSD4,VS49,VTH4,VWC,VWE
4	16015-ZA0-931	CHAMBER SET, FLOAT	1	1	VAA1,VAA8,VC2,VC2N,VEP9,VKE4,VKX4,VPE5,VPE9,VPX4,VPX9,VSD4,VS49,VTH4,VWC,VWE,VXG
5	16016-ZH8-W01	SCREW SET	1	1	VAA1,VAA8,VC2,VC2N,VEP9,VKE4,VKX4,VPE5,VPE9,VPX4,VPX9,VSD4,VS49,VTH4,VWC,VWE,VXG
6	16024-124-760	SCREW SET, DRAIN	1	1	VAA1,VAA8,VC2,VC2N,VEP9,VKE4,VKX4,VPE5,VPE9,VPX4,VPX9,VSD4,VS49,VTH4,VWC,VWE,VXG
7	16028-ZA0-701	SCREW SET	1	1	VAA1,VAA8,VC2,VC2N,VPE5,VPE9,VPX4,VPX9,VTH4,VXG
	16028-ZA0-931		1	1	VEP9,VKE4,VKX4,VSD4,VS49,VWC,VWE
8	16100-Z5R-U71	CARBURETOR ASSY. (BE89F B) ..	1	1	VPX4,VPX9,VXG
	16100-Z5S-U31	CARBURETOR ASSY. (BE89E A/B) ..	1	-	VKX4
	16100-Z5S-U32	CARBURETOR ASSY. (BE89E B) ..	-	1	VKX4
	16100-Z5T-P91	CARBURETOR ASSY. (BE89S A) ..	-	1	VAA1,VAA8,VTH4
	16100-Z5T-U31	CARBURETOR ASSY. (BE89T A) ..	-	1	VKE4,VSD4,VS49
	16100-Z5T-U71	CARBURETOR ASSY. (BE89U A) ..	1	1	VC2,VC2N,VPE5,VPE9
	16100-Z5T-741	CARBURETOR ASSY. (BE89R A) ..	-	1	VEP9,VWC,VWE
9	16124-ZE0-005	SCREW, THROTTLE STOP	1	1	VAA1,VAA8,VC2,VC2N,VEP9,VKE4,VKX4,VPE5,VPE9,VPX4,VPX9,VSD4,VS49,VTH4,VWC,VWE,VXG
10	16148-141-881	CAP, CHOKE DUST	1	1	VAA1,VAA8,VC2,VC2N,VEP9,VKE4,VKX4,VPE5,VPE9,VPX4,VPX9,VSD4,VS49,VTH4,VWC,VWE,VXG
11	16166-ZF6-005	NOZZLE, MAIN	1	1	VAA1,VAA8,VC2,VC2N,VEP9,VKE4,VKX4,VPE5,VPE9,VPX4,VPX9,VSD4,VS49,VTH4,VWC,VWE,VXG

Ref. No.	Part No.	Description	Reqd. GX 390 UT1	QTY GX 390 RT1	Serial No.	Parts catalogue code
12	16172-ZE3-W10	COLLAR, SETTING	1	1	-----	VAA1,VAA8,VC2,VC2N,VEP9,VKE4,VKX4,VPE5,VPE9,VPX4,VPX9,VSD4,VS49,VTH4 VWC,VWE,VXG
13	16211-ZF6-D40	INSULATOR, CARBURETOR	1	1	-----	VC2,VC2N,VEP9,VKE4,VKX4,VPE5,VPE9,VPX4,VPX9,VSD4,VS49,VTH4,VWC,VWE VXG
	16211-ZF6-000		-	1	-----	VAA1,VAA8
14	16221-ZF6-800	PACKING, CARBURETOR	1	1	-----	VAA1,VAA8,VC2,VC2N,VEP9,VKE4,VKX4,VPE5,VPE9,VPX4,VPX9,VSD4,VS49,VTH4 VWC,VWE,VXG
15	16223-ZE3-W00	PACKING, INSULATOR	1	1	-----	VAA1,VAA8,VC2,VC2N,VEP9,VKE4,VKX4,VPE5,VPE9,VPX4,VPX9,VSD4,VS49,VTH4 VWC,VWE,VXG
16	16230-ZE3-701	VALVE ASSY., SOLENOID	1	-	-----	VKX4
	16230-ZE3-702		-	1	-----	VEP9,VKE4,VKX4,VSD4,VS49,VWC,VWE
17	16260-ZE3-D21	STAY ASSY., MANUAL CHOKE	1	-	1353550	VKX4,VPX4,VPX9,VXG
	16260-ZE3-D22		1	1	-----	VC2,VC2N,VEP9,VPE5,VPE9,VSD4,VS49,VWC,VWE
			1	-	1353551	VKX4,VPX4,VPX9,VXG
			-	1	-----	VKX4,VPX4,VPX9,VXG
	16260-ZE2-723		-	1	-----	VKE4,VTH4
	16260-ZF6-U70		-	1	-----	VAA1,VAA8
18	16261-ZE2-702	STAY COMP., SOLENOID	1	1	-----	VAA1,VAA8,VC2,VC2N,VEP9,VKE4,VKX4,VPE5,VPE9,VPX4,VPX9,VSD4,VS49,VTH4 VWC,VWE,VXG
19	16262-ZE2-711	LEVER, CHOKE	1	1	-----	VAA1,VAA8,VC2,VC2N,VEP9,VKE4,VKX4,VPE5,VPE9,VPX4,VPX9,VSD4,VS49,VTH4 VWC,VWE,VXG
20	16263-ZA0-000	JOINT, ROD	1	1	-----	VAA1,VAA8,VC2,VC2N,VEP9,VKE4,VKX4,VPE5,VPE9,VPX4,VPX9,VSD4,VS49,VTH4 VWC,VWE,VXG
21	16264-ZE2-701	ROD, CHOKE	1	1	-----	VAA1,VAA8,VC2,VC2N,VEP9,VKE4,VKX4,VPE5,VPE9,VPX4,VPX9,VSD4,VS49,VTH4 VWC,VWE,VXG
22	16265-ZE2-721	STOPPER, CHOKE ROD	1	1	-----	VAA1,VAA8,VC2,VC2N,VEP9,VKE4,VKX4,VPE5,VPE9,VPX4,VPX9,VSD4,VS49,VTH4 VWC,VWE,VXG
23	16268-ZE2-721	SPRING, MANUAL CHOKE	1	1	-----	VAA1,VAA8,VC2,VC2N,VEP9,VKE4,VKX4,VPE5,VPE9,VPX4,VPX9,VSD4,VS49,VTH4 VWC,VWE,VXG
24	16269-ZA0-800	PACKING, AIR CLEANER	2	2	-----	VAA1,VAA8,VC2,VC2N,VEP9,VKE4,VKX4,VPE5,VPE9,VPX4,VPX9,VSD4,VS49,VTH4 VWC,VWE,VXG
25	16400-ZE2-703	DIAPHRAGM ASSY.	1	-	1353550	VKX4,VPX4,VPX9,VXG
	16400-ZE2-704		1	1	-----	VC2,VC2N,VEP9,VKE4,VPE5,VPE9,VSD4,VS49,VTH4,VWC,VWE
			1	-	1353551	VKX4,VPX4,VPX9,VXG
			-	1	-----	VKX4,VPX4,VPX9,VXG
26	16611-ZE3-D21	ROD, CHOKE CONTROL	1	1	-----	VC2,VC2N,VEP9,VKX4,VPE5,VPE9,VPX4,VPX9,VSD4,VS49,VWC,VWE,VXG
	16611-ZE2-711		-	1	-----	VAA1,VAA8,VKE4,VTH4
27	16613-893-000	GROMMET, CHOKE ROD	1	1	-----	VAA1,VAA8,VC2,VC2N,VEP9,VKE4,VKX4,VPE5,VPE9,VPX4,VPX9,VSD4,VS49,VTH4 VWC,VWE,VXG
28	16615-893-000	GUIDE, CHOKE ROD	1	1	-----	VAA1,VAA8,VC2,VC2N,VEP9,VKE4,VKX4,VPE5,VPE9,VPX4,VPX9,VSD4,VS49,VTH4 VWC,VWE,VXG
29	36135-ZF6-D41	VALVE, DASHPOT CHECK	1	1	-----	VC2,VC2N,VEP9,VKE4,VKX4,VPE5,VPE9,VPX4,VPX9,VSD4,VS49,VTH4,VWC,VWE VXG
30	36170-ZB4-003	VALVE ASSY., SOLENOID	1	-	-----	VKX4
	36170-ZB4-013		-	1	-----	VKE4,VKX4
31	53149-964-003	BUSH, ARM PIVOT	1	1	-----	VAA1,VAA8,VC2,VC2N,VEP9,VKE4,VKX4,VPE5,VPE9,VPX4,VPX9,VSD4,VS49,VTH4 VWC,VWE,VXG
32	88911-MJ3-000	GROMMET, FENDER	1	1	-----	VAA1,VAA8,VC2,VC2N,VEP9,VKE4,VKX4,VPE5,VPE9,VPX4,VPX9,VSD4,VS49,VTH4 VWC,VWE,VXG
33	90431-ZE2-700	WASHER, CHOKE LEVER	1	1	-----	VAA1,VAA8,VC2,VC2N,VEP9,VKE4,VKX4,VPE5,VPE9,VPX4,VPX9,VSD4,VS49,VTH4 VWC,VWE,VXG
34	90432-ZE2-700	SEAL, CHOKE LEVER	2	2	-----	VAA1,VAA8,VC2,VC2N,VEP9,VKE4,VKX4,VPE5,VPE9,VPX4,VPX9,VSD4,VS49,VTH4 VWC,VWE,VXG

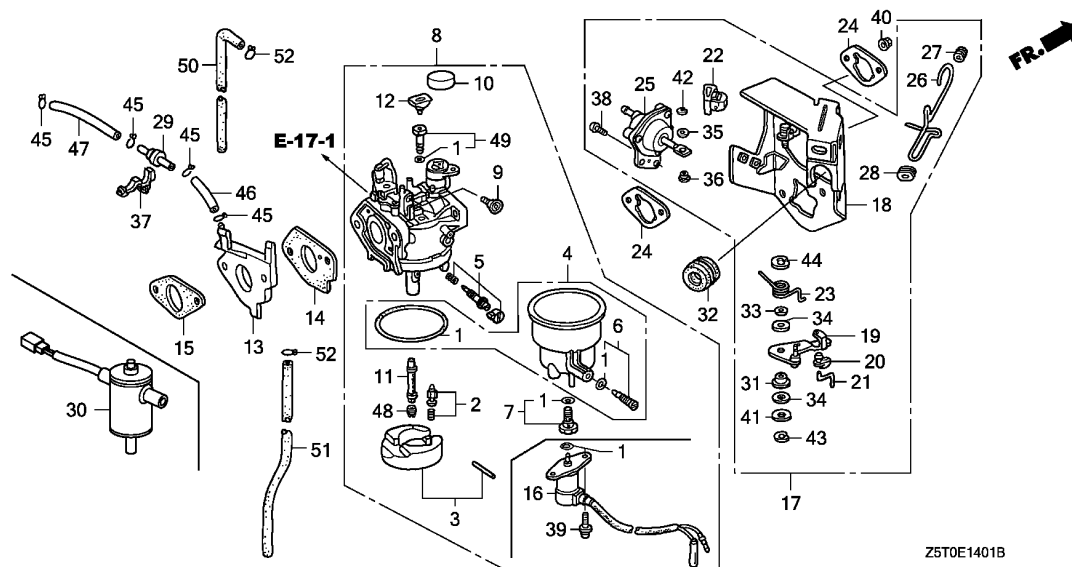


Ref. No.	Part No.	Description	Reqd. QTY		Serial No.	Parts catalogue code
			GX 390 UT1	GX 390 RT1		
35	90433-ZE2-700	WASHER, THRUST, 2.7X8	1	1	-----	VC2,VC2N,VEP9,VKE4,VKX4,VPE5,VPE9,VPX4,VPX9,VSD4,VS49,VTH4,VWC,VWE,VXG
36	90434-ZE2-700	COLLAR, LEVER	1	1	-----	VC2,VC2N,VEP9,VKE4,VKX4,VPE5,VPE9,VPX4,VPX9,VSD4,VS49,VTH4,VWC,VWE,VXG
37	90650-SD9-003	CLIP, WIRE HARNESS	1	1	-----	VC2,VC2N,VSD4,VS49,VTH4,VWC,VWE,VXG
38	93500-05012-0A	SCREW, PAN, 5X12	2	2	-----	VC2,VC2N,VEP9,VKE4,VKX4,VPE5,VPE9,VPX4,VPX9,VSD4,VS49,VTH4,VWC,VWE,VXG
39	93892-05012-18	SCREW-WASHER, 5X12	2	2	-----	VEP9,VKE4,VKX4,VSD4,VS49,VWC,VWE
40	94050-06000	NUT, FLANGE, 6MM	2	2	-----	VAA1,VAA8,VC2,VC2N,VEP9,VKE4,VKX4,VPE5,VPE9,VPX4,VPX9,VSD4,VS49,VTH4,VWC,VWE,VXG
41	94103-05000	WASHER, PLAIN, 5MM	1	1	-----	VAA1,VAA8,VC2,VC2N,VEP9,VKE4,VKX4,VPE5,VPE9,VPX4,VPX9,VSD4,VS49,VTH4,VWC,VWE,VXG
42	94540-02010	E-RING, 2MM	1	1	-----	VC2,VC2N,VEP9,VKE4,VKX4,VPE5,VPE9,VPX4,VPX9,VSD4,VS49,VTH4,VWC,VWE,VXG
43	94540-04010	E-RING, 4MM	1	1	-----	VAA1,VAA8,VC2,VC2N,VEP9,VKE4,VKX4,VPE5,VPE9,VPX4,VPX9,VSD4,VS49,VTH4,VWC,VWE,VXG
44	94540-07010	E-RING, 7MM	1	1	-----	VAA1,VAA8,VC2,VC2N,VEP9,VKE4,VKX4,VPE5,VPE9,VPX4,VPX9,VSD4,VS49,VTH4,VWC,VWE,VXG
45	95002-02070	CLIP, TUBE (B7)	4	4	-----	VC2,VC2N,VEP9,VKE4,VKX4,VPE5,VPE9,VPX4,VPX9,VSD4,VS49,VTH4,VWC,VWE,VXG
46	95005-35075-10	TUBE, 3.5X75(95005-35001-10M)	1	1	-----	VC2,VC2N,VEP9,VKE4,VKX4,VPE5,VPE9,VPX4,VPX9,VSD4,VS49,VTH4,VWC,VWE,VXG
47	95005-35130-10	TUBE, 3.5X130(95005-35001-10M)	1	1	-----	VC2,VC2N,VEP9,VKE4,VKX4,VPE5,VPE9,VPX4,VPX9,VSD4,VS49,VTH4,VWC,VWE,VXG
48	99101-ZH8-0980	JET, MAIN, #98	(1)	(1)	-----	VAA1,VAA8,VEP9,VKE4,VKX4,VSD4,VS49,VTH4,VWC,VWE
	99101-ZH8-1000	JET, MAIN, #100	(1)	(1)	-----	VAA1,VAA8,VEP9,VKE4,VKX4,VSD4,VS49,VTH4,VWC,VWE

E-14-1

CARBURETOR(2)

F 3

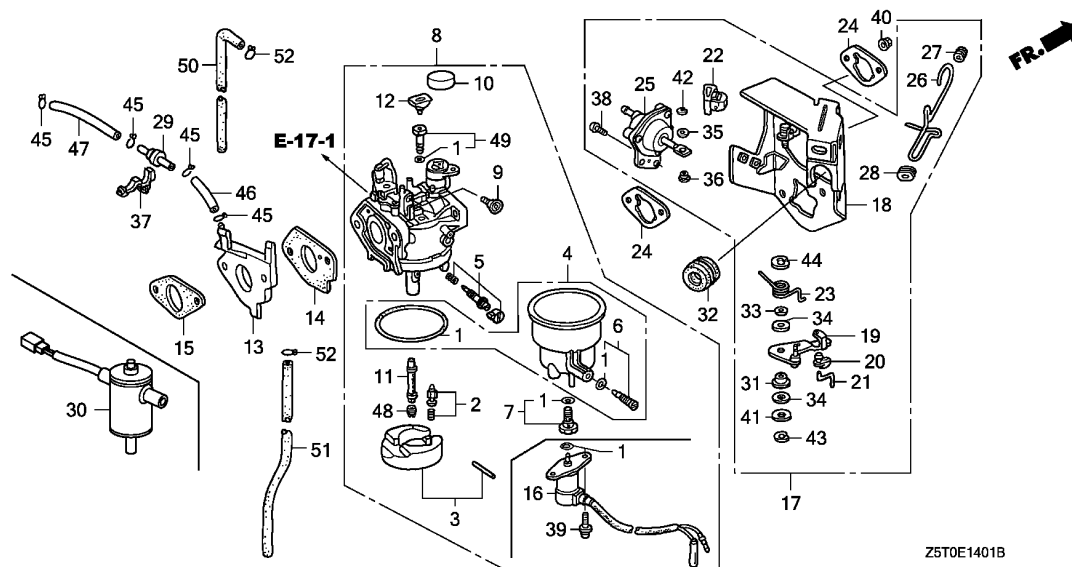

Z5T0E1401B


Ref. No.	Part No.	Description	Reqd. QTY		Serial No.	Parts catalogue code
			GX 390 UT1	GX 390 RT1		
48)	99101-ZH8-1020	JET, MAIN, #102	1	1	-----	VKX4
			(1)	1	-----	VAA1,VAA8,VC2N,VEP9,VKE4,VSD4,VS49,VTH4,VWC,VWE
	99101-ZH8-1050	JET, MAIN, #105	(1)	(1)	-----	VC2,VPE5,VPE9,VPX4,VPX9,VXG
	99101-ZH8-1080	JET, MAIN, #108	(1)	(1)	-----	VC2,VC2N,VPE5,VPE9,VPX4,VPX9,VXG
49	99204-ZA0-0450	JET SET, PILOT, #45	1	1	-----	VC2,VC2N,VPE5,VPE9,VPX4,VPX9,VXG
			1	1	-----	VAA1,VAA8,VC2,VC2N,VEP9,VKE4,VKX4,VPE5,VPE9,VPX4,VPX9,VSD4,VS49,VTH4
50	16199-ZA0-930	TUBE, AIR VENT	-	1	-----	VWC,VWE,VXG
			-	1	-----	VSD4,VS49,VTH4
51	95001-45300-40	TUBE, FUEL, 4.5X300 (95001-45001-60M)	-	1	-----	VSD4,VS49,VTH4
52	95002-02080	CLIP, TUBE (B8)	-	2	-----	VSD4,VS49,VTH4

2

E-15

AIR CLEANER(1)

F 4

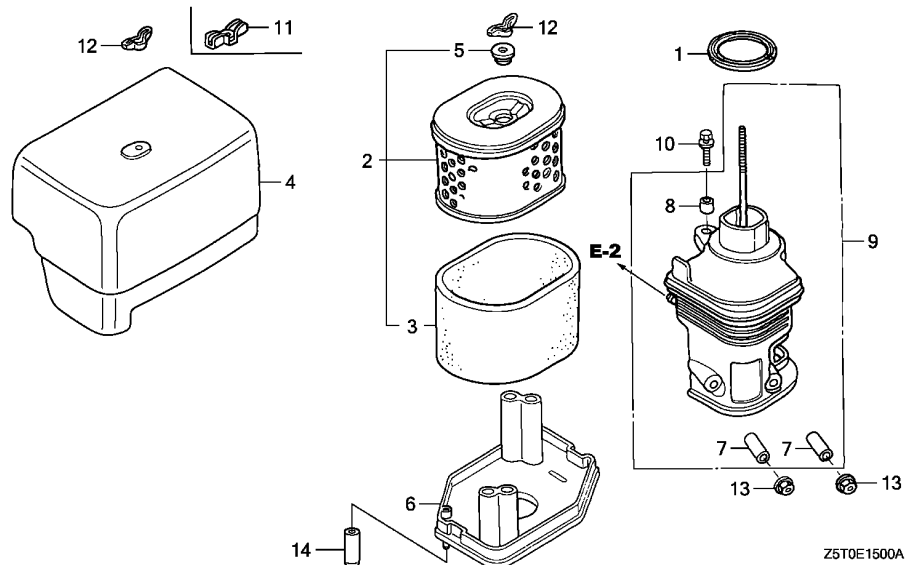

Ref. No.	L.O.N.	(Relative ref. Number) Description	F.R.T.
1	3121E1	PACKING, ELBOW	0.1
2	3121B8	ELEMENT, AIR CLEANER	0.1
3	3121C1	FILTER, OUTER	0.1
6	3121D6	NOSE, SILENCER	0.1
9	3121B4	ELBOW, AIR CLEANER	0.1


Ref. No.	Part No.	Description	Reqd. QTY GX 390 UT1	Serial No.	Parts catalogue code
1	16271-ZE2-010	PACKING, ELBOW	1	1	HA2,LKE,LXE4,LXE8,LXQ4,LXU,LX2,PAE2,PA2,PXD8,PXE8,PXU,QAA2,QAA6,QAE2,QAE6,QAW,QA2,QA26,QE,QHB4,QKA4,QK4,QME0,QNB2,QNE2,QNE6,QNE8,QNR2,QNR6,QTT,QWA2,QXB7,QXB9,QXER,QXE4,QXE6,QXE7,QXE8,QXE9,QXH9,QXQ4,QXU,QXUZ,SCK4,SHQ4,SMC1,SMD3,SME0,SME6,SM32,STC4,SWA4,SXB7,SXB9,SXE4,SXE8,SXQ4,SXU,VAC2,VAG2,VA2,VCN2,VDE2,VD2,VKB2,VK2,VM2,VNG1,VN27,VSD7,VSD9,VWC9,VWT4,VXB7,VXB9,VXE2,VXE6,VXE7,VXE8,VXE9,VXQ4,VX8
2	17210-ZE3-010	ELEMENT, AIR CLEANER	1	1	HA2,LKE,LXE4,LXE8,LXQ4,LXU,LX2,PAE2,PA2,PXD8,PXE8,PXU,QAA2,QAA6,QAE2,QAE6,QAW,QA2,QA26,QE,QHB4,QKA4,QK4,QME0,QNB2,QNE2,QNE6,QNE8,QNR2,QNR6,QTT,QWA2,QXB7,QXB9,QXER,QXE4,QXE6,QXE7,QXE8,QXE9,QXH9,QXQ4,QXU,QXUZ,SCK4,SHQ4,SMC1,SMD3,SME0,SME6,SM32,STC4,SWA4,SXB7,SXB9,SXE4,SXE8,SXQ4,SXU,VAC2,VAG2,VA2,VCN2,VDE2,VD2,VKB2,VK2,VM2,VNG1,VN27,VSD7,VSD9,VWC9,VWT4,VXB7,VXB9,VXE2,VXE6,VXE7,VXE8,VXE9,VXQ4,VX8
3	17218-ZE3-000	FILTER, OUTER	1	1	HA2,LKE,LXE4,LXE8,LXQ4,LXU,LX2,PAE2,PA2,PXD8,PXE8,PXU,QAA2,QAA6,QAE2,QAE6,QAW,QA2,QA26,QE,QHB4,QKA4,QK4,QME0,QNB2,QNE2,QNE6,QNE8,QNR2,QNR6,QTT,QWA2,QXB7,QXB9,QXER,QXE4,QXE6,QXE7,QXE8,QXE9,QXH9,QXQ4,QXU,QXUZ,SCK4,SHQ4,SMC1,SMD3,SME0,SME6,SM32,STC4,SWA4,SXB7,SXB9,SXE4,SXE8,SXQ4,SXU,VAC2,VAG2,VA2,VCN2,VDE2,VD2,VKB2,VK2,VM2,VNG1,VN27,VSD7,VSD9,VWC9,VWT4,VXB7,VXB9,VXE2,VXE6,VXE7,VXE8,VXE9,VXQ4,VX8
4	17231-ZE3-W01	COVER, AIR CLEANER	1	1	HA2,LKE,LXE4,LXE8,LXQ4,LXU,LX2,PAE2,PA2,PXD8,PXE8,PXU,QAA2,QAA6,QAE2,QAE6,QAW,QA2,QA26,QE,QHB4,QKA4,QK4,QME0,QNB2,QNE2,QNE6,QNE8,QNR2,QNR6,QTT,QWA2,QXB7,QXB9,QXER,QXE4,QXE6,QXE7,QXE8,QXE9,QXH9,QXQ4,QXU,QXUZ,SCK4,SHQ4,SMC1,SMD3,SME0,SME6,SM32,STC4,SWA4,SXB7,SXB9,SXE4,SXE8,SXQ4,SXU,VAC2,VAG2,VA2,VCN2,VDE2,VD2,VKB2,VK2,VM2,VNG1,VN27,VSD7,VSD9,VWC9,VWT4,VXB7,VXB9,VXE2,VXE6,VXE7,VXE8,VXE9,VXQ4,VX8

Ref. No.	Part No.	Description	Reqd. GX 390 UT1	QTY GX 390 RT1	Serial No.	Parts catalogue code
5	17232-891-000	GROMMET, AIR CLEANER	1	1	-----	HA2,LKE,LXE4,LXE8,LXQ4,LXU,LX2,PAE2,PA2,PXD8,PXE8,PXU,QAA2,QAA6,QAE2,QAE6,QAW,QA2,QA26,QE,QHB4,QKA4,QK4,QME0,QNB2,QNE2,QNE6,QNE8,QNR2,QNR6,QTT,QWA2,QXB7,QXB9,QXER,QXE4,QXE6,QXE7,QXE8,QXE9,QXH9,QXQ4,QXU,QXUZ,SCK4,SHQ4,SMC1,SMD3,SME0,SME6,SM32,STC4,SWA4,SBX7,SBX9,SXE4,SXE8,SXQ4,SXU,VAC2,VAG2,VA2,VCN2,VDE2,VD2,VKB2,VK2,VM2,VNG1,VN27,VSD7,VSD9,VWC9,VWT4,VXB7,VXB9,VXE2,VXE6,VXE7,VXE8,VXE9,VXQ4,VX8
6	17235-ZH9-N01	NOSE, SILENCER	1	-	-----	HA2,LKE,LXE4,LXE8,LXQ4,LXU,LX2,PAE2,PA2,PXD8,PXE8,PXU,QAA2,QAA6,QAE2,QAE6,QAW,QA2,QA26,QE,QHB4,QKA4,QK4,QME0,QNE2,QNE6,QNE8,QNR2,QNR6,QTT,QXB7,QXB9,QXER,QXE4,QXE6,QXE7,QXE8,QXE9,QXH9,QXQ4,QXU,QXUZ,SCK4,SHQ4,SMC1,SMD3,SME0,SME6,SM32,STC4,SWA4,SBX7,SBX9,SXE4,SXE8,SXQ4,SXU,VA2,VM2,VNG1,VN27,VSD7,VSD9,VXB7,VXB9,VXE2,VXE6,VXE7,VXE8,VXE9,VXQ4,VX8
17235-Z5R-800			-	1	-----	QNB2,QTT,QWA2,VAC2,VAG2,VCN2,VDE2,VD2,VKB2,VK2,VNG1,VWC9,VWT4
7	17238-ZE2-310	COLLAR, AIR CLEANER	2	2	-----	HA2,LKE,LXE4,LXE8,LXQ4,LXU,LX2,PAE2,PA2,PXD8,PXE8,PXU,QAA2,QAA6,QAE2,QAE6,QAW,QA2,QA26,QE,QHB4,QKA4,QK4,QME0,QNB2,QNE2,QNE6,QNE8,QNR2,QNR6,QTT,QWA2,QXB7,QXB9,QXER,QXE4,QXE6,QXE7,QXE8,QXE9,QXH9,QXQ4,QXU,QXUZ,SCK4,SHQ4,SMC1,SMD3,SME0,SME6,SM32,STC4,SWA4,SBX7,SBX9,SXE4,SXE8,SXQ4,SXU,VAC2,VAG2,VA2,VCN2,VDE2,VD2,VKB2,VK2,VM2,VNG1,VN27,VSD7,VSD9,VWC9,VWT4,VXB7,VXB9,VXE2,VXE6,VXE7,VXE8,VXE9,VXQ4,VX8
8	17239-ZE1-000	COLLAR B, AIR CLEANER	1	1	-----	HA2,LKE,LXE4,LXE8,LXQ4,LXU,LX2,PAE2,PA2,PXD8,PXE8,PXU,QAA2,QAA6,QAE2,QAE6,QAW,QA2,QA26,QE,QHB4,QKA4,QK4,QME0,QNB2,QNE2,QNE6,QNE8,QNR2,QNR6,QTT,QWA2,QXB7,QXB9,QXER,QXE4,QXE6,QXE7,QXE8,QXE9,QXH9,QXQ4,QXU,QXUZ,SCK4,SHQ4,SMC1,SMD3,SME0,SME6,SM32,STC4,SWA4,SBX7,SBX9,SXE4,SXE8,SXQ4,SXU,VAC2,VAG2,VA2,VCN2,VDE2,VD2,VKB2,VK2,VM2,VNG1,VN27,VSD7,VSD9,VWC9,VWT4,VXB7,VXB9,VXE2,VXE6,VXE7,VXE8,VXE9,VXQ4,VX8
9	17410-ZH9-N00	ELBOW COMP., AIR CLEANER	1	1	-----	HA2,LKE,LXE4,LXE8,LXQ4,LXU,LX2,PAE2,PA2,PXD8,PXE8,PXU,QAA2,QAA6,QAE2,QAE6,QAW,QA2,QA26,QE,QHB4,QKA4,QK4,QME0,QNB2,QNE2,QNE6,QNE8,QNR2,QNR6,QTT,QWA2,QXB7,QXB9,QXER,QXE4,QXE6,QXE7,QXE8,QXE9,QXH9,QXQ4,QXU,QXUZ,SCK4,SHQ4,SMC1,SMD3,SME0,SME6,SM32,STC4,SWA4,SBX7,SBX9,SXE4,SXE8,SXQ4,SXU,VAC2,VAG2,VA2,VCN2,VDE2,VD2,VKB2,VK2,VM2,VNG1,VN27,VSD7,VSD9,VWC9,VWT4,VXB7,VXB9,VXE2,VXE6,VXE7,VXE8,VXE9,VXQ4,VX8
10	90009-Z1C-000	BOLT-WASHER, 6X22	1	1	-----	HA2,LKE,LXE4,LXE8,LXQ4,LXU,LX2,PAE2,PA2,PXD8,PXE8,PXU,QAA2,QAA6,QAE2,QAE6,QAW,QA2,QA26,QE,QHB4,QKA4,QK4,QME0,QNB2,QNE2,QNE6,QNE8,QNR2,QNR6,QTT,QWA2,QXB7,QXB9,QXER,QXE4,QXE6,QXE7,QXE8,QXE9,QXH9,QXQ4,QXU,QXUZ,SCK4,SHQ4,SMC1,SMD3,SME0,SME6,SM32,STC4,SWA4,SBX7,SBX9,SXE4,SXE8,SXQ4,SXU,VAC2,VAG2,VA2,VCN2,VDE2,VD2,VKB2,VK2,VM2,VNG1,VN27,VSD7,VSD9,VWC9,VWT4,VXB7,VXB9,VXE2,VXE6,VXE7,VXE8,VXE9,VXQ4,VX8
11	90203-ZA0-800	NUT, WING, 6MM(BLACK)	1	-	-----	HA2,PAE2,PA2,QAA2,QAA6,QAE2,QAE6,QAW,QA2,QA26,QNE2,QNE6,QNR6,QTT,QXE6,SM32,VA2,VM2,VXE2,VXE6
12	90325-044-000	NUT, TOOL BOX SETTING	1	2	-----	HA2,PAE2,PA2,QAA2,QAA6,QAE2,QAE6,QAW,QA2,QA26,QNB2,QNE2,QNE6,QNR6,QTT,QWA2,QXE6,SM32,VAC2,VAG2,VA2,VCN2,VDE2,VD2,VKB2,VK2,VM2,VWC9,VWT4,VXE2,VXE6
			2	2	-----	LKE,LXE4,LXE8,LXQ4,LXU,LX2,PXD8,PXE8,PXU,QE,QHB4,QKA4,QK4,QME0,QNE8,QNR2,QXB7,QXB9,QXER,QXE4,QXE7,QXE8,QXE9,QXH9,QXQ4,QXU,QXUZ,SCK4,SHQ4,SMC1,SMD3,SME0,SME6,STC4,SWA4,SBX7,SBX9,SXE4,SXE8,SXQ4,SXU,VNG1,VN27,VSD7,VSD9,VXB7,VXB9,VXE7,VXE8,VXE9,VXQ4,VX8
13	94050-06000	NUT, FLANGE, 6MM	2	2	-----	HA2,LKE,LXE4,LXE8,LXQ4,LXU,LX2,PAE2,PA2,PXD8,PXE8,PXU,QAA2,QAA6,QAE2,QAE6,QAW,QA2,QA26,QE,QHB4,QKA4,QK4,QME0,QNB2,QNE2,QNE6,QNE8,QNR2,QNR6,QTT,QWA2,QXB7,QXB9,QXER,QXE4,QXE6,QXE7,QXE8,QXE9,QXH9,QXQ4,QXU,QXUZ,SCK4,SHQ4,SMC1,SMD3,SME0,SME6,SM32,STC4,SWA4,SBX7,SBX9,SXE4,SXE8,SXQ4,SXU,VAC2,VAG2,VA2,VCN2,VDE2,VD2,VKB2,VK2,VM2,VNG1,VN27,VSD7,VSD9,VWC9,VWT4,VXB7,VXB9,VXE2,VXE6,VXE7,VXE8,VXE9,VXQ4,VX8
14	90634-ZL8-H00	CAP, SEALING	1	1	-----	QNB2,QTT,QWA2,VAC2,VAG2,VCN2,VDE2,VD2,VKB2,VK2,VNG1,VWC9,VWT4

E-15-1

AIR CLEANER(2)

F 6

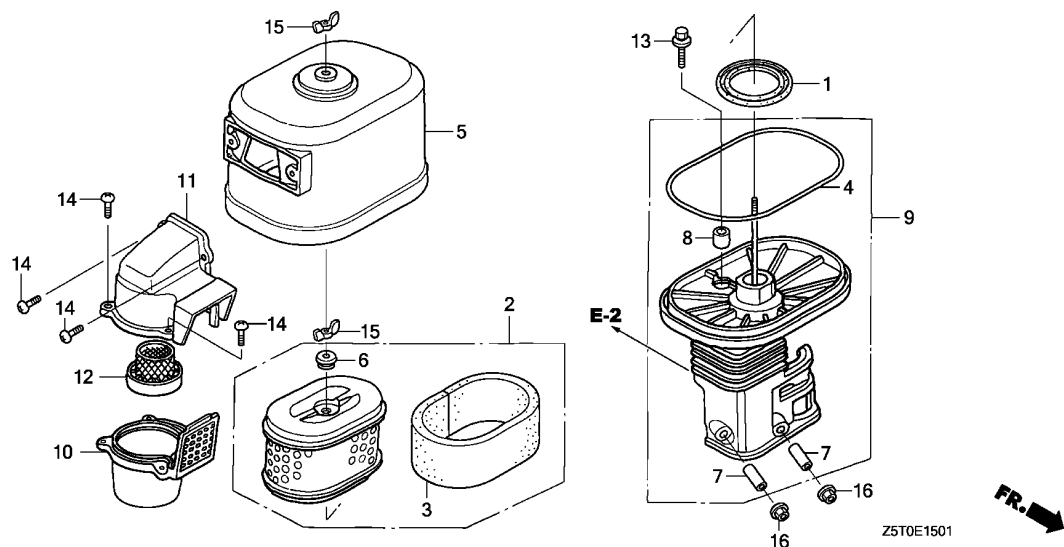


Ref. No.	L.O.N.	(Relative ref. Number) Description	F.R.T.
1	3121E1	PACKING, ELBOW	0.1
2	3121B8	ELEMENT, AIR CLEANER	0.1
3	3121C1	FILTER, OUTER	0.1
4	3121E0	PACKING, AIR CLEANER COVER ...	0.1
9	3121B4	ELBOW, AIR CLEANER	0.1
10	3121A6	CASE, PRE AIR CLEANER	0.1
11	3121A4	CAP, PRE AIR CLEANER	0.1
12	3121C8	GUIDE, PRE AIR CLEANER	0.1

Ref. No.	Part No.	Description	Reqd. QTY	Serial No.	Parts catalogue code
			GX 390 UT1 RT1		
1	16271-ZE2-010	PACKING, ELBOW	1	-	QC2,QDW9,QWA4,QWC4,QWT2,QXC4,QXC6,QXC9,QXS4,SNC
2	17210-ZE3-010	ELEMENT, AIR CLEANER	1	-	QC2,QDW9,QWA4,QWC4,QWT2,QXC4,QXC6,QXC9,QXS4,SNC
3	17218-ZE3-000	FILTER, OUTER	1	-	QC2,QDW9,QWA4,QWC4,QWT2,QXC4,QXC6,QXC9,QXS4,SNC
4	17219-ZE3-840	PACKING, AIR CLEANER COVER ..	1	-	QC2,QDW9,QWA4,QWC4,QWT2,QXC4,QXC6,QXC9,QXS4,SNC
5	17230-ZE3-841	COVER COMP., AIR CLEANER (CYCLONE)	1	-	QC2,QDW9,QWA4,QWC4,QWT2,QXC4,QXC6,QXC9,QXS4,SNC
6	17232-891-000	GROMMET, AIR CLEANER	1	-	QC2,QDW9,QWA4,QWC4,QWT2,QXC4,QXC6,QXC9,QXS4,SNC
7	17238-ZE2-310	COLLAR, AIR CLEANER	2	-	QC2,QDW9,QWA4,QWC4,QWT2,QXC4,QXC6,QXC9,QXS4,SNC
8	17239-ZE3-840	COLLAR B, AIR CLEANER	1	-	QC2,QDW9,QWA4,QWC4,QWT2,QXC4,QXC6,QXC9,QXS4,SNC
9	17410-ZE3-840	ELBOW COMP., AIR CLEANER	1	-	QC2,QDW9,QWA4,QWC4,QWT2,QXC4,QXC6,QXC9,QXS4,SNC
10	17470-ZE3-842	CASE COMP., PRE AIR CLEANER ..	1	-	QC2,QDW9,QWA4,QWC4,QWT2,QXC4,QXC6,QXC9,QXS4,SNC
11	17475-ZE3-841	CAP, PRE AIR CLEANER	1	-	QC2,QDW9,QWA4,QWC4,QWT2,QXC4,QXC6,QXC9,QXS4,SNC
12	17476-ZE3-841	GUIDE, PRE AIR CLEANER	1	-	QC2,QDW9,QWA4,QWC4,QWT2,QXC4,QXC6,QXC9,QXS4,SNC
13	90009-Z1C-000	BOLT-WASHER, 6X22	1	-	QC2,QDW9,QWA4,QWC4,QWT2,QXC4,QXC6,QXC9,QXS4,SNC
14	90142-MB0-000	SCREW, PAN, 5X16.5	5	-	QC2,QDW9,QWA4,QWC4,QWT2,QXC4,QXC6,QXC9,QXS4,SNC
15	90325-044-000	NUT, TOOL BOX SETTING	2	-	QC2,QDW9,QWA4,QWC4,QWT2,QXC4,QXC6,QXC9,QXS4,SNC
16	94050-06000	NUT, FLANGE, 6MM	2	-	QC2,QDW9,QWA4,QWC4,QWT2,QXC4,QXC6,QXC9,QXS4,SNC

E-15-2

AIR CLEANER(3)

F 7

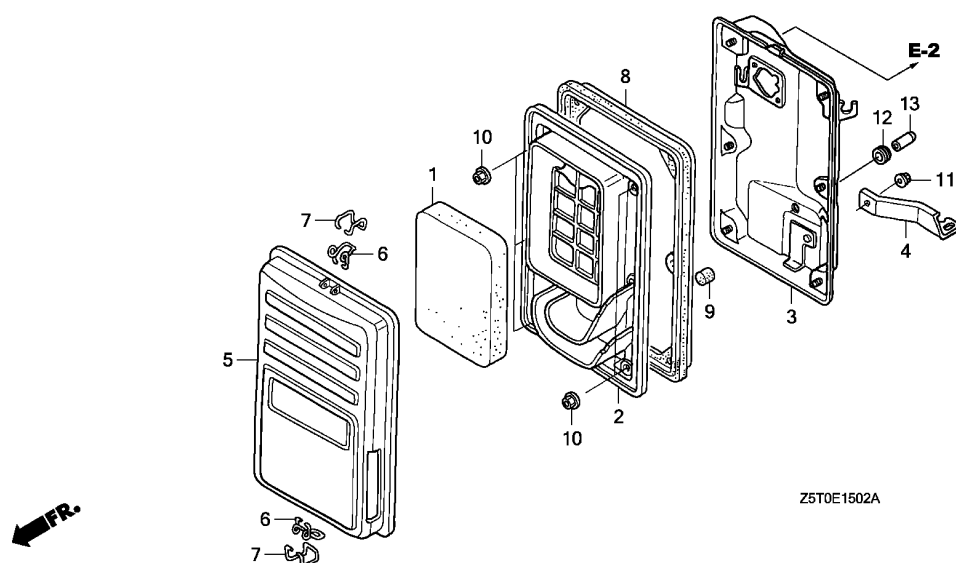

Ref. No.	L.O.N.	(Relative ref. Number) Description	F.R.T.
1	3121B8	ELEMENT, AIR CLEANER	0.1
2	3121F0	SEPARATOR, AIR CLEANER	0.1
3	3121A5	CASE, AIR CLEANER	0.2
8	3121E8	SEAL, AIR CLEANER CASE	0.1


Ref. No.	Part No.	Description	Reqd. GX 390 UT1	QTY GX 390 RT1	Serial No.	Parts catalogue code
1	17211-899-000	ELEMENT, AIR CLEANER	1	1	-----	VAA1,VAA8,VC2,VC2N,VEP9,VKE4,VKX4,VPE5,VPE9,VPX4,VPX9,VSD4,VS49,VTH4 VWC,VWE,VXG
2	17212-ZB4-003 17212-Z5R-000	SEPARATOR, AIR CLEANER	1	- 1	----- -----	VKX4,VPX4,VPX9,VXG VAA1,VAA8,VC2,VC2N,VEP9,VKE4,VPE5,VPE9,VSD4,VS49,VTH4,VWC,VWE
3	17220-ZB4-003 17220-Z5R-000	CASE COMP., AIR CLEANER	1	- 1	----- -----	VKX4,VPX4,VPX9,VXG VAA1,VAA8,VC2,VC2N,VEP9,VKE4,VPE5,VPE9,VSD4,VS49,VTH4,VWC,VWE
4	17222-ZC2-000	STAY, AIR CLEANER	1	1	-----	VKX4,VPX4,VPX9,VXG VAA1,VAA8,VC2,VC2N,VEP9,VKE4,VKX4,VPE5,VPE9,VPX4,VPX9,VSD4,VS49,VTH4 VWC,VWE,VXG
5	17231-899-000	COVER COMP., AIR CLEANER	1	1	-----	VAA1,VAA8,VC2,VC2N,VEP9,VKE4,VKX4,VPE5,VPE9,VPX4,VPX9,VSD4,VS49,VTH4 VWC,VWE,VXG
6	17235-899-000	CLIP A, AIR CLEANER WIRE	2	2	-----	VAA1,VAA8,VC2,VC2N,VEP9,VKE4,VKX4,VPE5,VPE9,VPX4,VPX9,VSD4,VS49,VTH4 VWC,VWE,VXG
7	17236-899-000	CLIP B, AIR CLEANER WIRE	2	2	-----	VAA1,VAA8,VC2,VC2N,VEP9,VKE4,VKX4,VPE5,VPE9,VPX4,VPX9,VSD4,VS49,VTH4 VWC,VWE,VXG
8	17252-899-000	SEAL, AIR CLEANER	1	1	-----	VAA1,VAA8,VC2,VC2N,VEP9,VKE4,VKX4,VPE5,VPE9,VPX4,VPX9,VSD4,VS49,VTH4 VWC,VWE,VXG
9	17367-413-690	FILTER, DRAIN TUBE	1	1	-----	VAA1,VAA8,VC2,VC2N,VEP9,VKE4,VKX4,VPE5,VPE9,VPX4,VPX9,VSD4,VS49,VTH4 VWC,VWE,VXG
10	94050-05000	NUT, FLANGE, 5MM	6	6	-----	VAA1,VAA8,VC2,VC2N,VEP9,VKE4,VKX4,VPE5,VPE9,VPX4,VPX9,VSD4,VS49,VTH4 VWC,VWE,VXG
11	94050-06000	NUT, FLANGE, 6MM	1	1	-----	VAA1,VAA8,VC2,VC2N,VEP9,VKE4,VKX4,VPE5,VPE9,VPX4,VPX9,VSD4,VS49,VTH4 VWC,VWE,VXG
12	17232-898-000	GROMMET, AIR CLEANER	1	1	-----	VAA1,VAA8,VC2,VC2N,VEP9,VKE4,VKX4,VPE5,VPE9,VPX4,VPX9,VSD4,VS49,VTH4 VWC,VWE,VXG
13	90634-ZL8-H00	CAP, SEALING	1	1	-----	VAA1,VAA8,VC2,VC2N,VEP9,VKE4,VKX4,VPE5,VPE9,VPX4,VPX9,VSD4,VS49,VTH4 VWC,VWE,VXG

2

E-16

MUFFLER(1)


F 8

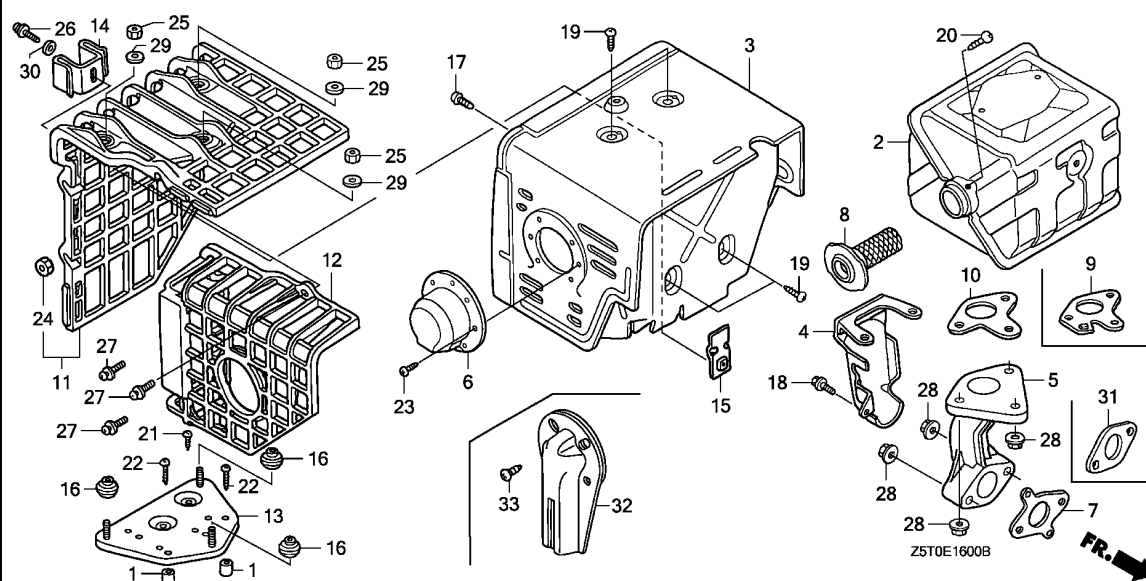

Ref. No.	L.O.N.	(Relative ref. Number) Description	F.R.T.
2	3131C5	MUFFLER, EXHAUST	0.2
3	3131D6	PROTECTOR, EXHAUST MUFFLER ...	0.2
5	3131C9	PIPE, EXHAUST	0.2
7		(31)	
	3131B5	GASKET, EXHAUST PIPE	0.2
8	3131A1	ARRESTER, SPARK	0.2
10		(9)	
	3131B4	GASKET, EXHAUST MUFFLER	0.2
11	3131A7	COVER, EXHAUST MUFFLER	0.1
12	3131A6	COVER, EXHAUST MUFFLER :REAR -	0.1
13	3131A2	BASE, EXHAUST MUFFLER COVER ..	0.2

Ref. No.	Part No.	Description	Reqd. QTY	Serial No.	Parts catalogue code
			GX 390 UT1	GX 390 RT1	
1	17233-896-701	COLLAR, AIR CLEANER CASE	(2)	(2)	LKE,LXE4,LXQ4,QE,QHB4,QKA4,QK4,QME0,QWA4,QWC4,QXB7,QXB9,QXC4,QXE4,QXE7,QXE9,QXH9,QXQ4,SCK4,SHQ4,SMC1,SMD3,SME0,SME6,SNC,STC4,SWA4,SWB7,SWB9,SXE4, SXQ4,VNG1,VN27,VPE5,VPX4,VSD7,VSD9,VWC9,VWT4,VXB7,VXB9,VXE7,VXE9,VXQ4
2	18310-ZE2-W61	MUFFLER COMP. (100DB)	1	1	HA2,LKE,LXE4,LXE8,LXQ4,LXU,LX2,PAE2,PA2,PXD8,PXE8, PXU,QAA2,QAA6,QAE2,QAE6,QAW,QA2,QA26,QC2,QDW9,QE,QHB4,QKA4,QK4,QME0,QNB2,QNE2,QNE6,QNE8,QNR2,QNR6, QTT,QWA2,QWA4,QWC4,QWT2,QXB7,QXC6,QXC9,QXER,QXE4,QXE6,QXE7,QXE8,QXQ4,QXU,QXUZ,SCK4,SHQ4,SMC1,SME0,SME6,SM32,STC4,SWA4,SWB7,SXE4,SXE8, SXQ4, SXU,VAC2,VAG2,VA2,VCN2,VDE2,VD2,VKB2,VK2,VM2,VNG1,VN27,VPX4,VSD7,VXB7,VXE2,VXE6,VXE7,VXE8,VXQ4,VX8
18310-ZK6-880	MUFFLER COMP.	1	1		QXB9,QXE9,QXH9,SWB9,VSD9,VWC9,VXB9,VXE9
3	18320-ZE2-W61	PROTECTOR COMP., MUFFLER	1	1	HA2,LKE,LXE4,LXE8,LXQ4,LXU,LX2,PAE2,PA2,PXD8,PXE8, PXU,QAA2,QAA6,QAE2,QAE6,QAW,QA2,QA26,QC2,QDW9,QE,QHB4,QKA4,QK4,QME0,QNB2,QNE2,QNE6,QNE8,QNR2,QNR6, QTT,QWA2,QWA4,QWC4,QWT2,QXB7,QXC6,QXC9,QXER,QXE4,QXE6,QXE7,QXE8,QXQ4,QXU,QXUZ,SHQ4,SMC1,SME0,SME6,SM32,STC4,SWA4,SWB7,SXE4,SXE8, SXQ4, SXU,VAC2,VAG2,VA2,VCN2,VDE2,VD2,VKB2,VK2,VM2,VXE2,VXE6,VXE8,VXQ4,VX8
18320-ZF6-W01	PROTECTOR COMP., MUFFLER (100DB)	1	1		QXB7,QXB9,QXE7,QXE9,QXH9,SCK4,SWB7,SWB9,VNG1,VN27,VSD7,VSD9,VWC9,VXB7,VXB9,VXE7,VXE9
4	18323-ZE3-W40	PROTECTOR, EX. PIPE	1	1	HA2,PAE2,QAA2,QAA6,QAE2,QAE6,QAW,QA2,QA26,QNB2,QNE2,QNE6,QNE8,QNR2,QNR6, QTT,QWA2,SWA4,VAC2,VAG2,VA2,VDE2,VD2,VM2
5	18330-ZE2-W00	PIPE, EX.	1	1	HA2,LKE,LXE4,LXE8,LXQ4,LXU,LX2,PAE2,PA2,PXD8,PXE8, PXU,QAA2,QAA6,QAE2,QAE6,QAW,QA2,QA26,QC2,QDW9,QE,QHB4,QKA4,QK4,QME0,QNB2,QNE2,QNE6,QNE8,QNR2,QNR6, QTT,QWA2,QWA4,QWC4,QWT2,QXB7,QXB9,QXC6,QXC9,QXER,QXE4,QXE6,QXE7,QXE8,QXE9,QXH9,QXQ4,QXU,QXUZ,SCK4,SHQ4,SMC1,SME0,SME6,SM32,STC4,SWA4,SWB7,SWB9,SXE4,SXE8, SXQ4, SXU,VAC2,VAG2,VA2,VCN2,VDE2,VD2,VKB2,VK2,VM2,VNG1,VN27,VSD7,VSD9,VWC9,VXB7,VXB9,VXE2,VXE6,VXE7,VXE8,VXE9,VXQ4,VX8

Ref. No.	Part No.	Description	Reqd. QTY		Serial No.	Parts catalogue code
			GX 390 UT1	GX 390 RT1		
6	18331-ZE3-810	CAP, MUFFLER	1	-	1401132	QAW,QA2,QA26,QK4,QWA4,QWT2
	18331-ZE3-811		1	1	-----	HA2,PAE2,PXD8,QA2,QA6,QE,QHB4,QKA4,QNB2,QNE2,QNE6,QNE8,QNR2,QNR6 QWC4,QXER,QXUZ,SMC1,SMD3,SM32,SNC,VA2,VD2,VKB2,VK2,VM2
7	18333-ZF6-W01	GASKET, EX. PIPE	1	-	1401133	QAW,QA2,QA26,QK4,QWA4,QWT2
			1	1	-----	HA2,LKE,LXE4,LXE8,LXQ4,LXU,LX2,PAE2,PA2,PXD8,PXE8,PXU,QAA2,QAA6,QA2 QA6,QAW,QA2,QA26,QC2,QDW9,QE,QHB4,QKA4,QK4,QME0,QNB2,QNE2,QNE6,QNE8 QNR2,QNR6,QTT,QWA2,QWA4,QWC4,QWT2,QXB7,QXB9,QXC6,QXC9,QXER,QXE4,QXE6 QXE7,QXE8,QXE9,QXH9,QXQ4,QXU,QXUZ,SCK4,SHQ4,SMC1,SME0,SME6,SM32,STC4 SWA4,SBX7,SBX9,SXE4,SXE8,SXQ4,SXU,VAC2,VAG2,VA2,VCN2,VC2,VC2N,VDE2 VD2,VKB2,VK2,VM2,VNG1,VN27,VPE5,VPE9,VPX9,VSD7,VSD9,VWC9,VWE,VXB7 VXB9,VXE2,VXE6,VXE7,VXE8,VXE9,VXG,VXQ4,VX8
8	18355-ZE2-W00	ARRESTER, SPARK	1	1	-----	HA2,PAE2,PXD8,QA2,QA6,QAW,QA2,QA26,QC2,QDW9,QE,QHB4,QKA4,QK4,QNB2 QWA2,QWA4,QWC4,QXB7,QXB9,QXE7,QXE9,QXH9,SCK4,SMC1,STC4,SWA4,SBX7,SBX9 VAC2,VAG2,VA2,VCN2,VDE2,VD2,VKB2,VK2,VM2,VNG1,VN27,VPE5,VPE9,VPX4 VPX9,VSD7,VSD9,VWC9,VXB7,VXB9,VXE7,VXE9
			(1)	(1)	-----	LKE,LXE4,LXE8,LXQ4,LXU,LX2,PA2,PXE8,PXU,QAA2,QAA6,QME0,QNE2,QNE6,QNE8 QNR2,QNR6,QTT,QWT2,QXC6,QXC9,QXER,QXE4,QXE6,QXE8,QXQ4,QXU,QXUZ,SHQ4 SME0,SME6,SM32,SXE4,SXE8,SXQ4,SXU,VC2,VC2N,VKX4,VWC,VWE,VWT4,VXE2 VXE6,VXE8,VXG,VXQ4,VX8
9	18381-ZE2-W10	GASKET, MUFFLER (ARRESTER) (NIPPON LEAKLESS)	1	1	-----	PXD8,QAW,QA2,QA26,QDW9,QK4,QWA4,QXB9,QXE9,QXH9,SBX9,VNG1,VPX4,VSD7 VSD9,VWC9,VXB7,VXB9,VXE9
			(1)	(1)	-----	HA2,LKE,LXE4,LXE8,LXQ4,LXU,LX2,PA2,PXE8,PXU,QAA2,QAA6,QA2,QA6 QC2,QE,QHB4,QKA4,QME0,QNB2,QNE2,QNE6,QNE8,QNR2,QNR6,QTT,QWA2,QWC4 QWT2,QXB7,QXC6,QXC9,QXER,QXE4,QXE6,QXE7,QXE8,QXQ4,QXU,QXUZ,SCK4,SHQ4 SMC1,SME0,SME6,SM32,STC4,SWA4,SBX7,SXE4,SXE8,SXQ4,SXU,VAC2,VAG2,VA2 VCN2,VC2,VC2N,VDE2,VD2,VKB2,VKX4,VK2,VM2,VN27,VPE5,VWC,VWE,VWT4,VXE2 VXE6,VXE7,VXE8,VXG,VXQ4,VX8
	18381-Z8S-801	GASKET, MUFFLER (ARRESTER) (THAI LEAKLESS)	1	1	-----	HA2,PAE2,QA2,QA6,QC2,QE,QHB4,QKA4,QNB2,QWA2,QWC4,QXB7,QXB9,QXE7 QXE9,QXH9,SCK4,SMC1,SMD3,SNC,STC4,SWA4,SBX7,SBX9,VAC2,VAG2,VA2,VCN2 VDE2,VD2,VKB2,VK2,VM2,VN27,VSD9,VWC9,VXB9,VXE7,VXE9
10	18381-ZE2-800	GASKET, MUFFLER (NIPPON LEAKLESS)	1	-	-----	LKE,LXE4,LXQ4,LX2,PA2,QME0,QXC6,QXER,QXE4,QXE6,QXUZ,SME0,SME6,SM32 SXE4,SXU,VXE2,VXE6,VXQ4
			1	-	1360188	LXE8,LXU,PXE8,PXU,QAA2,QAA6,QTT,QWT2,QXC9,QXE8,QXQ4,QXU,SHQ4,SXE8 SXQ4,VXE8,VX8
	18381-Z1C-801	GASKET, MUFFLER (THAI LEAKLESS)	1	-	-----	LKE,LXE4,LXQ4,LX2,PA2,QME0,QNE2,QNE6,QNE8,QNR2,QNR6,QXC6,QXER,QXE4 QXE6,QXUZ,SME0,SME6,SM32,SXE4,SXU,VXE2,VXE6,VXQ4
			1	-	1360189	LXE8,LXU,PXE8,PXU,QAA2,QAA6,QTT,QWT2,QXC9,QXE8,QXQ4,QXU,SHQ4,SXE8 SXQ4,VXE8,VX8
			-	1	-----	QTT
11	18433-ZF6-W40	COVER COMP., MUFFLER	(1)	(1)	-----	LKE,LXE4,LXQ4,QE,QHB4,QKA4,QK4,QME0,QWA4,QWC4,QXB7,QXB9,QXC4,QXE4 QXE7,QXE9,QXH9,QXQ4,SCK4,SHQ4,SMC1,SMD3,SME0,SME6,SNC,STC4,SWA4,SBX7 SBX9,SXE4,SXQ4,VNG1,VN27,VPE5,VPX4,VSD7,VSD9,VWC9,VWT4,VXB7,VXB9,VXE7 VXE9,VXQ4
12	18434-ZF6-W40	COVER COMP., RR. MUFFLER	(1)	(1)	-----	LKE,LXE4,LXQ4,QE,QHB4,QKA4,QK4,QME0,QWA4,QWC4,QXB7,QXB9,QXC4,QXE4 QXE7,QXE9,QXH9,QXQ4,SCK4,SHQ4,SMC1,SMD3,SME0,SME6,SNC,STC4,SWA4,SBX7 SBX9,SXE4,SXQ4,VNG1,VN27,VPE5,VPX4,VSD7,VSD9,VWC9,VWT4,VXB7,VXB9,VXE7 VXE9,VXQ4
13	18436-ZH8-W40	BASE COMP., MUFFLER COVER ...	(1)	(1)	-----	LKE,LXE4,LXQ4,QE,QHB4,QKA4,QK4,QME0,QWA4,QWC4,QXB7,QXB9,QXC4,QXE4 QXE7,QXE9,QXH9,QXQ4,SCK4,SHQ4,SMC1,SMD3,SME0,SME6,SNC,STC4,SWA4,SBX7 SBX9,SXE4,SXQ4,VNG1,VN27,VPE5,VPX4,VSD7,VSD9,VWC9,VWT4,VXB7,VXB9,VXE7 VXE9,VXQ4

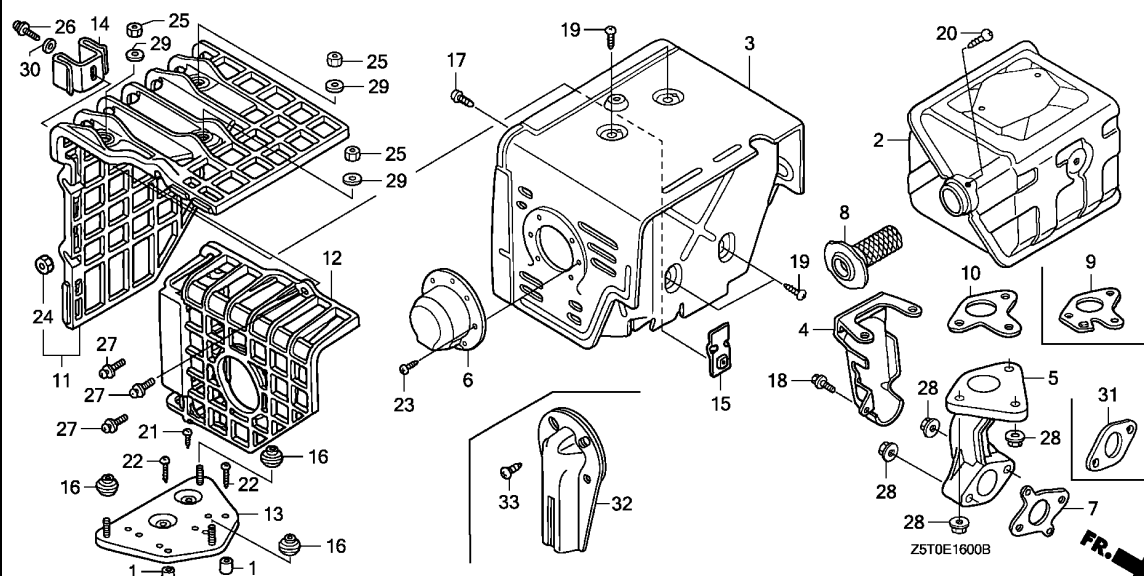

Ref. No.	Part No.	Description	Reqd. QTY		Serial No.	Parts catalogue code
			GX 390 UT1	GX 390 RT1		
14	18437-ZF6-W40	STAY, MUFFLER COVER	(1)	(1)	-----	LKE,LXE4,LXQ4,QE,QHB4,QKA4,QK4,QME0,QWA4,QWC4,QXB7,QXB9,QXC4,QXE4,QXE7,QXE9,QXH9,QXQ4,SCK4,SHQ4,SMC1,SMD3,SME0,SME6,SNC,STC4,SWA4,SBX7,SBX9,SXE4, SXQ4,VNG1,VN27,VPE5,VPX4,VSD7,VSD9,VWC9,VWT4,VXB7,VXB9,VXE7,VXE9,VXQ4
15	18438-ZF6-W40	PLATE, SET	(1)	(1)	-----	LKE,LXE4,LXQ4,QE,QHB4,QKA4,QK4,QME0,QWA4,QWC4,QXB7,QXB9,QXC4,QXE4,QXE7,QXE9,QXH9,QXQ4,SCK4,SHQ4,SMC1,SMD3,SME0,SME6,SNC,STC4,SWA4,SBX7,SBX9,SXE4, SXQ4,VNG1,VN27,VPE5,VPX4,VSD7,VSD9,VWC9,VWT4,VXB7,VXB9,VXE7,VXE9,VXQ4
16	18466-ZH8-W40	SPACER, MUFFLER COVER	(3)	(3)	-----	LKE,LXE4,LXQ4,QE,QHB4,QKA4,QK4,QME0,QWA4,QWC4,QXB7,QXB9,QXC4,QXE4,QXE7,QXE9,QXH9,QXQ4,SCK4,SHQ4,SMC1,SMD3,SME0,SME6,SNC,STC4,SWA4,SBX7,SBX9,SXE4, SXQ4,VNG1,VN27,VPE5,VPX4,VSD7,VSD9,VWC9,VWT4,VXB7,VXB9,VXE7,VXE9,VXQ4
17	90006-ZE2-000	SCREW, TAPPING, 6X10	1	1	-----	HA2,LKE,LXE4,LXE8,LXQ4,LXU,LX2,PAE2,PA2,PXD8,PXE8, PXU,QAA2,QAA6,QAE2,QAE6,QAW,QA2,QA26,QC2,QDW9,QE,QHB4,QKA4,QK4,QME0,QNB2,QNE2,QNE6,QNE8,QNR2,QNR6,QTT,QWA2,QWA4,QWC4,QWT2,QXB7,QXB9,QXC6,QXC9,QXER,QXE4,QXE6,QXE7,QXE8,QXE9,QXH9,QXQ4,QXU,QXUZ,SCK4,SHQ4,SMC1,SME0,SME6,SM32,STC4,SWA4,SBX7,SBX9,SXE4,SXE8, SXQ4, SXU,VAC2,VAG2,VA2,VCN2,VDE2,VD2,VKB2,VK2,VM2,VNG1,VN27,VSD7,VSD9,VWC9,VXB7,VXB9,VXE2,VXE6,VXE7,VXE8,VXE9,VXQ4,VX8
18	90013-883-000	BOLT, FLANGE, 6X12(CT200) ...	1	1	-----	HA2,PAE2,QAA2,QAA6,QAE2,QAE6,QAW,QA2,QA26,QNB2,QNE2,QNE6,QNE8,QNR2,QNR6,QTT,QWA2,SWA4,VAC2,VAG2,VA2,VDE2,VD2,VM2
19	90050-ZE1-000	SCREW, TAPPING, 5X8	4	4	-----	HA2,LKE,LXE4,LXE8,LXQ4,LXU,LX2,PAE2,PA2,PXD8,PXE8, PXU,QAA2,QAA6,QAE2,QAE6,QAW,QA2,QA26,QC2,QDW9,QE,QHB4,QKA4,QK4,QME0,QNB2,QNE2,QNE6,QNE8,QNR2,QNR6,QTT,QWA2,QWA4,QWC4,QWT2,QXB7,QXB9,QXC6,QXC9,QXER,QXE4,QXE6,QXE7,QXE8,QXE9,QXH9,QXQ4,QXU,QXUZ,SCK4,SHQ4,SMC1,SME0,SME6,SM32,STC4,SWA4,SBX7,SBX9,SXE4,SXE8, SXQ4, SXU,VAC2,VAG2,VA2,VCN2,VDE2,VD2,VKB2,VK2,VM2,VNG1,VN27,VSD7,VSD9,VWC9,VXB7,VXB9,VXE2,VXE6,VXE7,VXE8,VXE9,VXQ4,VX8

E-16

MUFFLER(1)

F11


Ref. No.	Part No.	Description	Reqd. QTY		Serial No.	Parts catalogue code
			GX 390 UT1	GX 390 RT1		
20	90050-ZE1-000	SCREW, TAPPING, 5X8	1	1	-----	HA2,PAE2,PXD8,QAE2,QAE6,QAW,QA2,QA26,QC2,QDW9,QE,QHB4,QKA4,QK4,QNB2,QWA2,QWA4,QWC4,QXB7,QXB9,QXE7,QXE9,QXH9,SCK4,SMC1,STC4,SWA4,SBX7,SBX9,VAC2,VAG2,VA2,VCN2,VDE2,VD2,VKB2,VM2,VNG1,VN27,VPE5,VPE9,VPX4,VPX9,VSD7,VSD9,VWC9,VXB7,VXB9,VXE7,VXE9
	90055-ZE1-000	SCREW, TAPPING, 4X6	(1)	(1)	-----	QXUZ,VC2,VC2N,VWC,VWE,VWT4
			(1)	(1)	-----	LKE,LXE4,LXE8,LXQ4,LXU,LX2,PA2,PXE8,PXU,QAA2,QAA6,QME0,QNE2,QNE6,QNE8,QNR2,QNR6,QTT,QWT2,QXC6,QXC9,QXER,QXE4,QXE6,QXE8,QXQ4,QXU,SHQ4,SME0,SME6,SM32,SXE4,SXE8,SXQ4,SXU,VKX4,VXE2,VXE6,VXE8,VXG,VXQ4,VX8
21	90050-ZE1-000	SCREW, TAPPING, 5X8	(1)	(1)	-----	LKE,LXE4,LXQ4,QE,QHB4,QKA4,QK4,QME0,QWA4,QWC4,QXB7,QXB9,QXC4,QXE4,QXE7,QXE9,QXH9,QXQ4,SCK4,SHQ4,SMC1,SMD3,SME0,SME6,SNC,STC4,SWA4,SBX7,SBX9,SXE4,SXQ4,VNG1,VN27,VPE5,VPX4,VSD7,VSD9,VWC9,VWT4,VXB7,VXB9,VXE7,VXE9,VXQ4
22	90050-ZH8-W40	SCREW, TAPPING, 5X25	(2)	(2)	-----	LKE,LXE4,LXQ4,QE,QHB4,QKA4,QK4,QME0,QWA4,QWC4,QXB7,QXB9,QXC4,QXE4,QXE7,QXE9,QXH9,QXQ4,SCK4,SHQ4,SMC1,SMD3,SME0,SME6,SNC,STC4,SWA4,SBX7,SBX9,SXE4,SXQ4,VNG1,VN27,VPE5,VPX4,VSD7,VSD9,VWC9,VWT4,VXB7,VXB9,VXE7,VXE9,VXQ4
23	90055-ZE1-000	SCREW, TAPPING, 4X6	3	3	-----	HA2,PAE2,PXD8,QAE2,QAE6,QAW,QA2,QA26,QE,QHB4,QKA4,QK4,QNB2,QNE2,QNE6,QNE8,QNR2,QNR6,QWA4,QWC4,QWT2,QXER,QXUZ,SMC1,SMD3,SM32,SNC,VA2,VD2,VKB2,VK2,VM2
24	90301-782-000	NUT, U, 6MM	(3)	(3)	-----	LKE,LXE4,LXQ4,QE,QHB4,QKA4,QK4,QME0,QWA4,QWC4,QXB7,QXB9,QXC4,QXE4,QXE7,QXE9,QXH9,QXQ4,SCK4,SHQ4,SMC1,SMD3,SME0,SME6,SNC,STC4,SWA4,SBX7,SBX9,SXE4,SXQ4,VNG1,VN27,VPE5,VPX4,VSD7,VSD9,VWC9,VWT4,VXB7,VXB9,VXE7,VXE9,VXQ4
25	90302-KF9-900	NUT, HEX., 5MM	(3)	(3)	-----	LKE,LXE4,LXQ4,QE,QHB4,QKA4,QK4,QME0,QWA4,QWC4,QXB7,QXB9,QXC4,QXE4,QXE7,QXE9,QXH9,QXQ4,SCK4,SHQ4,SMC1,SMD3,SME0,SME6,SNC,STC4,SWA4,SBX7,SBX9,SXE4,SXQ4,VNG1,VN27,VPE5,VPX4,VSD7,VSD9,VWC9,VWT4,VXB7,VXB9,VXE7,VXE9,VXQ4
26	93891-05012-00	SCREW-WASHER, 5X12	(1)	(1)	-----	LKE,LXE4,LXQ4,QE,QHB4,QKA4,QK4,QME0,QWA4,QWC4,QXB7,QXB9,QXC4,QXE4,QXE7,QXE9,QXH9,QXQ4,SCK4,SHQ4,SMC1,SMD3,SME0,SME6,SNC,STC4,SWA4,SBX7,SBX9,SXE4,SXQ4,VNG1,VN27,VPE5,VPX4,VSD7,VSD9,VWC9,VWT4,VXB7,VXB9,VXE7,VXE9,VXQ4
27	93891-06020-07	SCREW-WASHER, 6X20	(3)	(3)	-----	LKE,LXE4,LXQ4,QE,QHB4,QKA4,QK4,QME0,QWA4,QWC4,QXB7,QXB9,QXC4,QXE4,QXE7,QXE9,QXH9,QXQ4,SCK4,SHQ4,SMC1,SMD3,SME0,SME6,SNC,STC4,SWA4,SBX7,SBX9,SXE4,SXQ4,VNG1,VN27,VPE5,VPX4,VSD7,VSD9,VWC9,VWT4,VXB7,VXB9,VXE7,VXE9,VXQ4
28	94050-08000	NUT, FLANGE, 8MM	5	5	-----	HA2,LKE,LXE4,LXE8,LXQ4,LXU,LX2,PAE2,PA2,PXD8,PXE8,PXU,QAA2,QAA6,QAE2,QAE6,QAW,QA2,QA26,QC2,QDW9,QE,QHB4,QKA4,QK4,QME0,QNB2,QNE2,QNE6,QNE8,QNR2,QNR6,QTT,QWA2,QWA4,QWC4,QWT2,QXB7,QXB9,QXC6,QXC9,QXER,QXE4,QXE6,QXE7,QXE8,QXE9,QXH9,QXQ4,QXU,QXUZ,SCK4,SHQ4,SMC1,SME0,SME6,SM32,STC4,SWA4,SBX7,SBX9,SXE4,SXE8,SXQ4,SXU,VAC2,VAG2,VA2,VCN2,VDE2,VD2,VKB2,VK2,VM2,VNG1,VN27,VSD7,VSD9,VWC9,VXB7,VXB9,VXE2,VXE6,VXE7,VXE8,VXE9,VXQ4,VX8
29	94103-05700	WASHER, PLAIN, 5MM	(3)	(3)	-----	LKE,LXE4,LXQ4,QE,QHB4,QKA4,QK4,QME0,QWA4,QWC4,QXB7,QXB9,QXC4,QXE4,QXE7,QXE9,QXH9,QXQ4,SCK4,SHQ4,SMC1,SMD3,SME0,SME6,SNC,STC4,SWA4,SBX7,SBX9,SXE4,SXQ4,VNG1,VN27,VPE5,VPX4,VSD7,VSD9,VWC9,VWT4,VXB7,VXB9,VXE7,VXE9,VXQ4
30	94111-05000	WASHER, SPRING, 5MM	(1)	(1)	-----	LKE,LXE4,LXQ4,QE,QHB4,QKA4,QK4,QME0,QWA4,QWC4,QXB7,QXB9,QXC4,QXE4,QXE7,QXE9,QXH9,QXQ4,SCK4,SHQ4,SMC1,SMD3,SME0,SME6,SNC,STC4,SWA4,SBX7,SBX9,SXE4,SXQ4,VNG1,VN27,VPE5,VPX4,VSD7,VSD9,VWC9,VWT4,VXB7,VXB9,VXE7,VXE9,VXQ4
31	18333-ZE3-800	GASKET, EX. PIPE	1	1	-----	VPX4
	18333-Z1C-801		-	1	-----	VWT4
32	18430-ZF6-W50	DEFLECTOR COMP., MUFFLER	(1)	-	-----	QE,QHB4,SMC1
33	90050-ZE1-000	SCREW, TAPPING, 5X8	(2)	-	-----	QE,QHB4,SMC1

2

E-16-1

MUFFLER(2)

F12

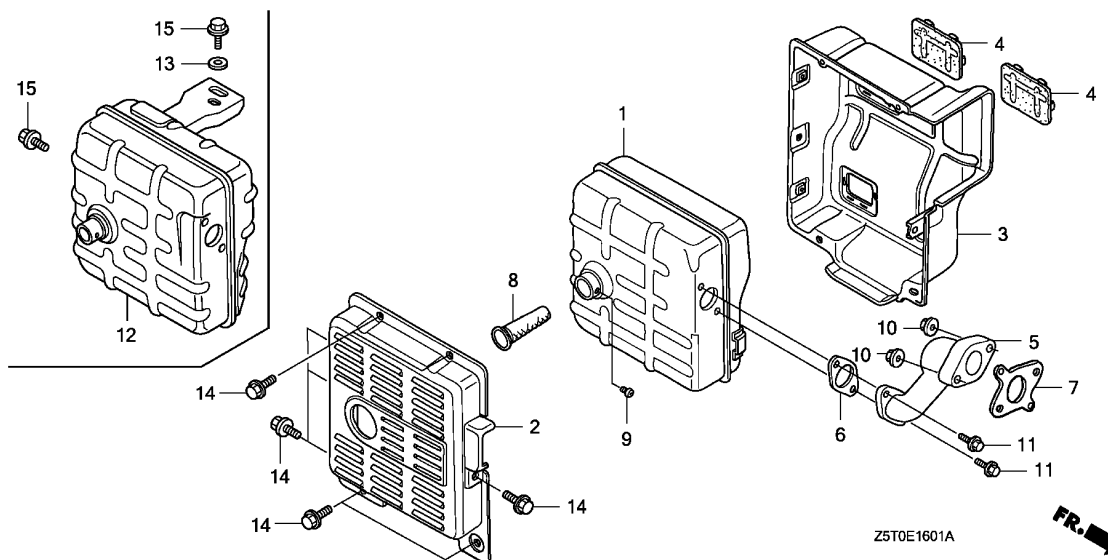


Ref. No.	L.O.N.	(Relative ref. Number) Description	F.R.T.
1	3131C5	(12) MUFFLER, EXHAUST	0.2
2	3131D9	PROTECTOR, EXHAUST MUFFLER :OUTER	0.1
3	3131D8	PROTECTOR, EXHAUST MUFFLER :INNER	0.2
4	3131G6	SEAL, MUFFLER PROTECTOR	0.2
5	3131C9	PIPE, EXHAUST	0.2
6	3131B5	(7) GASKET, EXHAUST PIPE	0.2
8	3131F9	ARRESTER, SPARK(A)	0.1

Ref. No.	Part No.	Description	Reqd. QTY	Serial No.	Parts catalogue code
			GX 390 UT1	GX 390 RT1	
1	18310-ZE2-V60	MUFFLER COMP. (TSURUMI)	1	1	VKX4
	18310-ZE2-V61		-	1	VKE4
2	18320-ZC2-000	PROTECTOR, MUFFLER OUTER ...	1	1	VAA1,VAA8,VKE4,VKX4
3	18325-ZB4-000	PROTECTOR, MUFFLER INNER	1	1	VAA1,VAA8,VKE4,VKX4
4	18329-ZB4-000	SEAL, MUFFLER PROTECTOR	2	2	VAA1,VAA8,VKE4,VKX4
5	18330-ZE3-700	PIPE, EX.	1	1	VAA1,VAA8,VKE4,VKX4,VSD4,VS49,VTH4
6	18333-ZB4-800	GASKET, EX. PIPE	1	1	VAA1,VAA8,VKE4,VKX4,VSD4,VS49,VTH4
7	18333-ZF6-W01	GASKET, EX. PIPE	1	1	VAA1,VAA8,VKE4,VKX4,VSD4,VS49,VTH4
8	18355-ZB4-630	ARRESTER, SPARK	1	1	VAA1,VAA8,VKE4,VKX4,VTH4
9	90002-ZE2-U91	SCREW, TAPPING, 4X8	1	1	VAA1,VAA8,VKX4
	90002-Z0T-800		-	1	VKE4,VTH4
10	94050-08000	NUT, FLANGE, 8MM	2	2	VAA1,VAA8,VKE4,VKX4,VSD4,VS49,VTH4
11	95701-08020-00	BOLT, FLANGE, 8X20	2	2	VAA1,VAA8,VKE4,VKX4
12	18310-ZD1-E32	MUFFLER COMP. (SANKEI)	-	1	VAA1,VAA8
13	94103-08000	WASHER, PLAIN, 8MM	-	1	VAA1,VAA8
14	95701-06010-00	BOLT, FLANGE, 6X10	-	8	VAA1,VAA8
15	95701-08016-08	BOLT, FLANGE, 8X16	-	2	VAA1,VAA8

E-16-2

MUFFLER(3)

F13

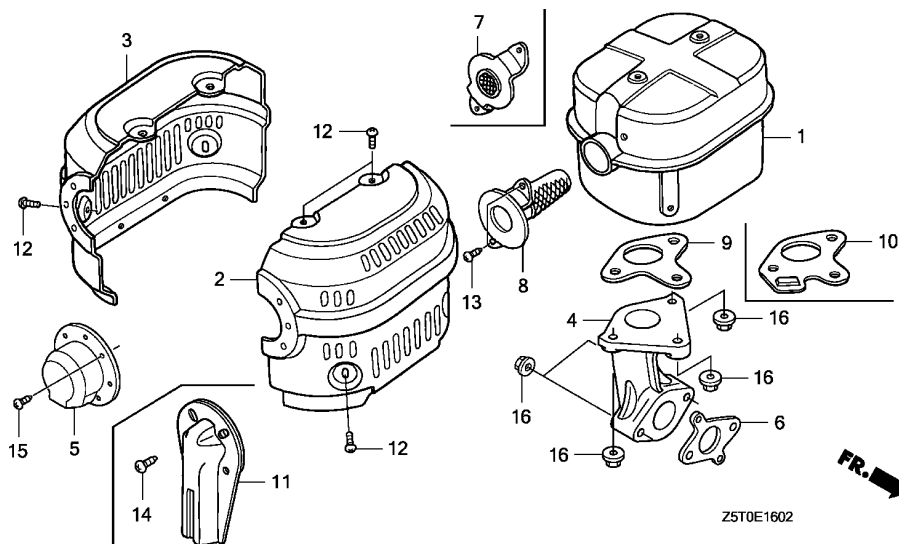

Ref. No.	L.O.N.	(Relative ref. Number) Description	F.R.T.
1	3131C5	MUFFLER, EXHAUST	0.2
2	3131H0	PROTECTOR, EXHAUST MUFFLER :FRONT	0.2
3	3131D3	PROTECTOR, EXHAUST MUFFLER :REAR	0.2
4	3131C9	PIPE, EXHAUST	0.2
6	3131B5	GASKET, EXHAUST PIPE	0.2
8	3131A1	ARRESTER, SPARK (10)	0.2
9	3131B4	GASKET, EXHAUST MUFFLER	0.2

Ref. No.	Part No.	Description	Reqd. QTY	Serial No.	Parts catalogue code
			GX 390 UT1	GX 390 RT1	
1	18310-Z8T-000	MUFFLER COMP.	1	-	QXC4,QXS4,SMD3,SNC
2	18320-ZE3-H00	PROTECTOR, R. MUFFLER	1	-	QXC4,QXS4,SMD3,SNC
3	18325-ZE3-H00	PROTECTOR, L. MUFFLER	1	-	QXC4,QXS4,SMD3,SNC
4	18330-ZE2-000	PIPE, EX.	1	-	QXC4,QXS4,SMD3,SNC
5	18331-ZE3-810	CAP, MUFFLER	1	-	SMD3,SNC
6	18333-ZF6-W01	GASKET, EX. PIPE	1	-	QXC4,QXS4,SMD3,SNC
7	18336-ZE3-000	FLANGE COMP., BAFFLE	1	-	QXC4,QXS4
8	18355-ZE3-010	ARRESTER, SPARK	1	-	SMD3,SNC
9	18381-ZE2-800	GASKET, MUFFLER (NIPPON LEAKLESS)	1	-	QXC4,QXS4
	18381-Z1C-801	GASKET, MUFFLER (THAI LEAKLESS)	1	-	QXC4,QXS4
10	18381-ZE2-W10	GASKET, MUFFLER (ARRESTER) (NIPPON LEAKLESS)	(1)	-	QXC4,QXS4,SMD3,SNC
	18381-Z8S-801	GASKET, MUFFLER (ARRESTER) (THAI LEAKLESS)	1	-	SMD3,SNC
11	18430-ZF6-W50	DEFLECTOR COMP., MUFFLER	(1)	-	SMD3,SNC
12	90050-ZE1-000	SCREW, TAPPING, 5X8	6	-	SMD3,SNC
	90050-ZE3-H00		6	-	QXC4,QXS4
13	90050-ZE1-000	SCREW, TAPPING, 5X8	2	-	QXC4,QXS4,SMD3,SNC
14	90050-ZE1-000	SCREW, TAPPING, 5X8	(2)	-	SNC
	90055-ZE1-000	SCREW, TAPPING, 4X6	(2)	-	SMD3
15	90055-ZE1-000	SCREW, TAPPING, 4X6	2	-	SMD3,SNC
16	94050-08000	NUT, FLANGE, 8MM	5	-	QXC4,QXS4,SMD3,SNC

2



Ref. No.	Part No.	Description	Reqd. QTY		Serial No.	Parts catalogue code
			GX 390 UT1	GX 390 RT1		
1	16854-ZH8-000	RUBBER, SUPPORTER (107MM) ...	1	1	-----	LXE8,LXU,PXD8,PXE8,PXU,QAA2,QAA6,QAW,QA2,QA26,QDW9,QK4,QT1,QWA4,QWT2,QXC9,QXER,QXE8,QXQ4,QXU,QXUZ,SHQ4,SXE8,SXQ4,VXE8,VX8
2	17620-Z0T-813	CAP COMP., FUEL FILLER (CHROME PLATED)	1	-	-----	1372503 LXE8,LXU,PXE8,PXU,QAA2,QAA6,QAW,QA2,QA26,QDW9,QK4,QWA4,QWT2,QXC9,QXE8,QXQ4,QXU,SHQ4,SXE8,SXQ4,VXE8,VX8
3	17631-Z0T-801	PACKING, FUEL FILLER CAP (39X62X3)	1	-	-----	PXD8,QXER,QXUZ
			1	-	-----	1372503 LXE8,LXU,PXE8,PXU,QAA2,QAA6,QAW,QA2,QA26,QDW9,QK4,QWA4,QWT2,QXC9,QXE8,QXQ4,QXU,SHQ4,SXE8,SXQ4,VXE8,VX8
	17631-Z4H-800		1	-	1372504	1422261 LXE8,LXU,PXE8,PXU,QAA2,QAA6,QAW,QA2,QA26,QDW9,QK4,QWA4,QWT2,QXC9,QXE8,QXQ4,QXU,SHQ4,SXE8,SXQ4,VXE8,VX8
	17631-Z0T-801		1	-	1422262	----- LXE8,LXU,PXE8,PXU,QAA2,QAA6,QAW,QA2,QA26,QDW9,QK4,QWA4,QWT2,QXC9,QXE8,QXQ4,QXU,SHQ4,SXE8,SXQ4,VXE8,VX8
4	17672-ZE2-W01	FILTER, FUEL	1	-	-----	1382377 QAA2,QAA6,QAW,QA2,QA26,QK4
5	94050-08000	NUT, FLANGE, 8MM	2	-	-----	LXE8,LXU,PXD8,PXE8,PXU,QAA2,QAA6,QAW,QA2,QA26,QDW9,QK4,QWA4,QWT2,QXC9,QXER,QXE8,QXQ4,QXU,QXUZ,SHQ4,SXE8,SXQ4,VXE8,VX8
6	95001-45235-40	TUBE, FUEL, 4.5X235 (95001-45001-60M)	1	-	-----	1070261 LXE8,LXU,PXE8,PXU,QAA2,QAA6,QA2,QA26,QXE8,QXQ4,QXU,SXE8,SXQ4,VXE8,VX8
	91424-Z5L-801	TUBE, FUEL, 4.5X235 (FKM)	1	-	-----	PXD8,QAW,QDW9,QK4,QWA4,QWT2,QXC9,QXUZ,SHQ4
			1	-	1070262	----- LXE8,LXU,PXE8,PXU,QAA2,QAA6,QA2,QA26,QXE8,QXQ4,QXU,SXE8,SXQ4,VXE8,VX8
	91424-Z5L-802		1	-	-----	QXER
	91424-Z5R-801	TUBE, FUEL, 4.5X260 (FKM)	1	1	-----	QT1
7	95002-02080	CLIP, TUBE (B8)	2	-	-----	1070261 LXE8,LXU,PXE8,PXU,QAA2,QAA6,QA2,QA26,QXE8,QXQ4,QXU,SXE8,SXQ4,VXE8,VX8
8	95701-08025-00	BOLT, FLANGE, 8X25	2	-	-----	LXE8,LXU,PXD8,PXE8,PXU,QAA2,QAA6,QAW,QA2,QA26,QDW9,QK4,QWA4,QWT2,QXC9,QXER,QXE8,QXQ4,QXU,QXUZ,SHQ4,SXE8,SXQ4,VXE8,VX8
9	95002-40800-08	CLAMP, TUBE (D8)	2	2	-----	PXD8,QAW,QDW9,QK4,QT1,QWA4,QWT2,QXC9,QXER,QXUZ,SHQ4
			2	-	1070262	----- LXE8,LXU,PXE8,PXU,QAA2,QAA6,QA2,QA26,QXE8,QXQ4,QXU,SXE8,SXQ4,VXE8,VX8

F15



2

E-17-1

FUEL TANK(1)

G 1

Ref. No.	Part No.	Description	Reqd. QTY		Serial No.	Parts catalogue code
			GX 390 UT1	GX 390 RT1		
6	17534-ZK6-880	NUT, TANK MOUNTING	2	-	-----	VSD9,VXB9
	17534-ZK6-881		2	-	-----	VXE9
7	17536-ZK6-880	RUBBER COMP., TANK MOUNTING	2	-	-----	VSD9,VXB9,VXE9
8	17620-ZOT-305	CAP COMP., FUEL FILLER (CHROME PLATED)	1	-	-----	1372503 VSD7,VSD9,VXB7,VXB9
9	17631-ZOT-812	PACKING, FUEL FILLER CAP (39X62X3)	1	-	-----	1372503 VSD7,VSD9,VXB7,VXB9
10	90008-ZE2-003	BOLT, FLANGE, 6X10	4	-	-----	VSD9,VXB9,VXE9
11	90854-ZB3-000	RUBBER, FUEL (9X15X20)	1	1	-----	VEP9,VKE4,VKX4,VPE5,VPE9,VPX4,VPX9
12	91353-671-004	O-RING, 14MM(NOK)	1	-	-----	HA2,LKE,LXE4,LXQ4,LX2,PAE2,PA2,QAE2,QAE6,QC2,QE,QHB4,QKA4,QME0,QNE2 QNE6,QNE8,QNR2,QNR6,QWC4,QXB7,QXB9,QXC4,QXC6,QXE4,QXE6,QXE7,QXE9,QXH9 QXS4,SCK4,SMC1,SMD3,SME0,SME6,SM32,SNC,STC4,SWA4,SWB7,SWB9,SXE4,SXU VA2,VM2,VN27,VSD7,VSD9,VXB7,VXB9,VXE2,VXE6,VXE7,VXE9,VXQ4
13	91424-Z4G-822	TUBE, FUEL, 4.5X400(FKM)	-	1	-----	VTH4
	91424-Z4K-801	TUBE, FUEL, 4.5X180(FKM)	1	1	-----	1496914 VKX4,VPX4,VPX9
	91424-Z5S-802	TUBE, FUEL, 4.5X250(FKM)	-	1	-----	VSD4,VS49
	91424-Z4K-802	TUBE, FUEL, 4.5X180(FKM)	1	1	1496915	VKX4,VPX4,VPX9
			-	1	-----	VKE4,VPE5,VPE9
14	91424-Z4J-812	TUBE, FUEL, 4.5X300(FKM)	-	1	-----	VEP9
	91424-Z4J-822	TUBE, FUEL, 4.5X430(FKM)	-	1	-----	VCN2
	91424-Z5L-801	TUBE, FUEL, 4.5X235(FKM)	1	1	-----	VNG1,VSD7,VSD9,VXB7,VXB9,VXG
	91424-Z5L-822	TUBE, FUEL, 4.5X580(FKM)	-	1	-----	QNB2
	91424-Z5L-802	TUBE, FUEL, 4.5X235(FKM)	1	1	-----	HA2,LKE,LXE4,LXQ4,LX2,PAE2,PA2,QAE2,QAE6,QC2,QE,QHB4,QKA4,QME0,QNE2 QNE6,QNE8,QNR2,QNR6,QWA2,QWC4,QXB7,QXB9,QXC4,QXC6,QXE4,QXE6,QXE7,QXE9 QXH9,QXS4,SCK4,SMC1,SMD3,SME0,SME6,SM32,SNC,STC4,SWA4,SWB7,SWB9,SXE4 SXU,VAC2,VAG2,VA2,VC2,VC2N,VDE2,VD2,VKB2,VK2,VM2,VN27,VWC,VWE,VXE2 VXE6,VXE7,VXE9,VXQ4
15	94050-08000	NUT, FLANGE, 8MM	2	2	-----	HA2,LKE,LXE4,LXQ4,LX2,PAE2,PA2,QAE2,QAE6,QC2,QE,QHB4,QKA4,QME0,QNE2 QNE6,QNE8,QNR2,QNR6,QWA2,QWC4,QXB7,QXB9,QXC4,QXC6,QXE4,QXE6,QXE7,QXE9 QXH9,QXS4,SCK4,SMC1,SMD3,SME0,SME6,SM32,SNC,STC4,SWA4,SWB7,SWB9,SXE4 SXU,VAC2,VAG2,VA2,VC2,VC2N,VDE2,VD2,VKB2,VK2,VM2,VN27,VWC,VWE,VXE2 VXE6,VXE7,VXE9,VXQ4
16	95002-40800-08	CLAMP, TUBE (D8)	2	2	-----	HA2,LKE,LXE4,LXQ4,LX2,PAE2,PA2,QAE2,QAE6,QC2,QE,QHB4,QKA4,QME0,QNB2 QNE2,QNE6,QNE8,QNR2,QNR6,QWA2,QWC4,QXB7,QXB9,QXC4,QXC6,QXE4,QXE6,QXE7 QXE9,QXH9,QXS4,SCK4,SMC1,SMD3,SME0,SME6,SM32,SNC,STC4,SWA4,SWB7,SWB9 SXE4,SXU,VAC2,VAG2,VA2,VCN2,VC2,VC2N,VDE2,VD2,VEP9,VKB2,VKE4,VKX4,VK2 VM2,VNG1,VN27,VPE5,VPE9,VPX4,VPX9,VSD4,VSD7,VSD9,VS49,VTH4,VWC,VWE VXB7,VXB9,VXE2,VXE6,VXE7,VXE9,VXG,VXQ4
17	95701-08025-00	BOLT, FLANGE, 8X25	2	-	-----	HA2,LKE,LXE4,LXQ4,LX2,PAE2,PA2,QAE2,QAE6,QC2,QE,QHB4,QKA4,QME0,QNE2 QNE6,QNE8,QNR2,QNR6,QWC4,QXB7,QXB9,QXC4,QXC6,QXE4,QXE6,QXE7,QXE9,QXH9 QXS4,SCK4,SMC1,SMD3,SME0,SME6,SM32,SNC,STC4,SWA4,SWB7,SWB9,SXE4,SXU VA2,VM2,VN27,VSD7,VSD9,VXB7,VXB9,VXE2,VXE6,VXE7,VXE9,VXQ4
18	17620-Z4H-010	CAP COMP., FUEL FILLER	1	-	1372504	1422261 VSD7,VSD9,VXB7,VXB9
	17620-Z4H-020		1	-	-----	HA2,LKE,LXE4,LXQ4,LX2,PAE2,PA2,QAE2,QAE6,QC2,QE,QHB4,QKA4,QME0,QNE2 QNE6,QNE8,QNR2,QNR6,QWC4,QXB7,QXB9,QXC4,QXC6,QXE4,QXE6,QXE7,QXE9,QXH9 QXS4,SCK4,SMC1,SMD3,SME0,SME6,SM32,SNC,STC4,SWA4,SWB7,SWB9,SXE4,SXU VA2,VM2,VN27,VXE2,VXE6,VXE7,VXE9,VXQ4
			1	-	1422262	VSD7,VSD9,VXB7,VXB9
19	17631-ZOT-801	PACKING, FUEL FILLER CAP (39X62X3)	1	-	-----	HA2,LKE,LXE4,LXQ4,LX2,PAE2,PA2,QAE2,QAE6,QC2,QE,QHB4,QKA4,QME0,QNE2 QNE6,QNE8,QNR2,QNR6,QWC4,QXB7,QXB9,QXC4,QXC6,QXE4,QXE6,QXE7,QXE9,QXH9 QXS4,SCK4,SMC1,SMD3,SME0,SME6,SM32,SNC,STC4,SWA4,SWB7,SWB9,SXE4,SXU VA2,VM2,VN27,VXE2,VXE6,VXE7,VXE9,VXQ4
	17631-Z4H-800		1	-	1372504	1422261 VSD7,VSD9,VXB7,VXB9
	17631-ZOT-801		1	-	1422262	VSD7,VSD9,VXB7,VXB9


2

78

E-17-2

FUEL TANK(2)

G 3

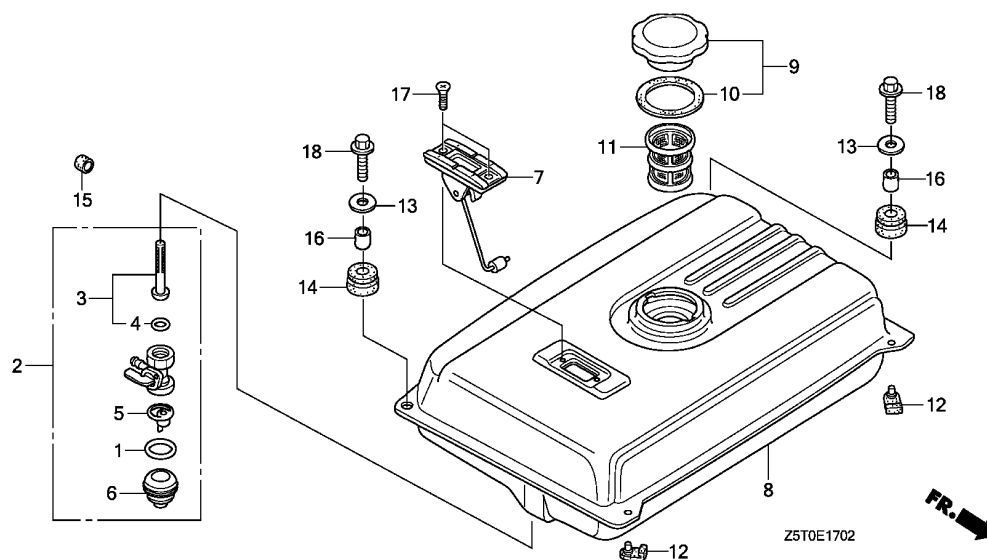


Ref. No.	L.O.N.	(Relative ref. Number) Description	F.R.T.
2	3101A3	COCK, FUEL	0.2
3		(4)	
3	3101D5	SCREEN, FUEL STRAINER	0.2
5		(1)	
5	3101A7	FILTER, FUEL TANK CUP	0.2
7	6171A1	METER/GAUGE UNIT, FUEL	0.1
8	3101D0	TANK, FUEL(A)	0.3
11	3101A6	FILTER, FUEL	0.1


Ref. No.	Part No.	Description	Reqd. QTY	Serial No.	Parts catalogue code
			GX 390 UT1		
1	16173-001-004	PACKING, FUEL STRAINER CUP ..	- 1	-----	VAA1,VAA8
2	16950-ZB4-015	COCK ASSY., FUEL	- 1	-----	VAA1,VAA8
3	16952-ZB4-005	SCREEN SET, FUEL STRAINER ...	- 1	-----	VAA1,VAA8
4	16958-397-771	O-RING, 9.0X1.3	- 1	-----	VAA1,VAA8
5	16959-471-831	FILTER, CUP	- 1	-----	VAA1,VAA8
6	16967-GA6-671	CUP, FUEL STRAINER	- 1	-----	VAA1,VAA8
7	17505-ZB2-003	METER ASSY., FUEL	- 1	-----	VAA1,VAA8
8	17510-ZC2-000ZJ	TANK COMP., FUEL	- 1	-----	VAA1,VAA8
		R280.....POWER RED	- 1	-----	VAA1,VAA8
9	17620-899-013	CAP COMP., FUEL FILLER	- 1	-----	VAA1,VAA8
10	17631-899-000	PACKING, FUEL FILLER CAP	- 1	-----	VAA1,VAA8
11	17672-899-000	FILTER, FUEL	- 1	-----	VAA1,VAA8
12	50319-ZB2-000	RUBBER, TANK MOUNTING	- 2	-----	VAA1,VAA8
13	90503-898-000	WASHER, TANK CUSHION	- 2	-----	VAA1,VAA8
14	90851-898-000	RUBBER, TANK CUSHION	- 2	-----	VAA1,VAA8
15	90854-ZB2-000	RUBBER, FUEL (9X15X10)	- 1	-----	VAA1,VAA8
16	91551-898-000	COLLAR, TANK CUSHION	- 2	-----	VAA1,VAA8
17	93600-05010-0A	SCREW, FLAT, 5X10	- 2	-----	VAA1,VAA8
18	95701-06022-00	BOLT, FLANGE, 6X22	- 2	-----	VAA1,VAA8

2

FR. 

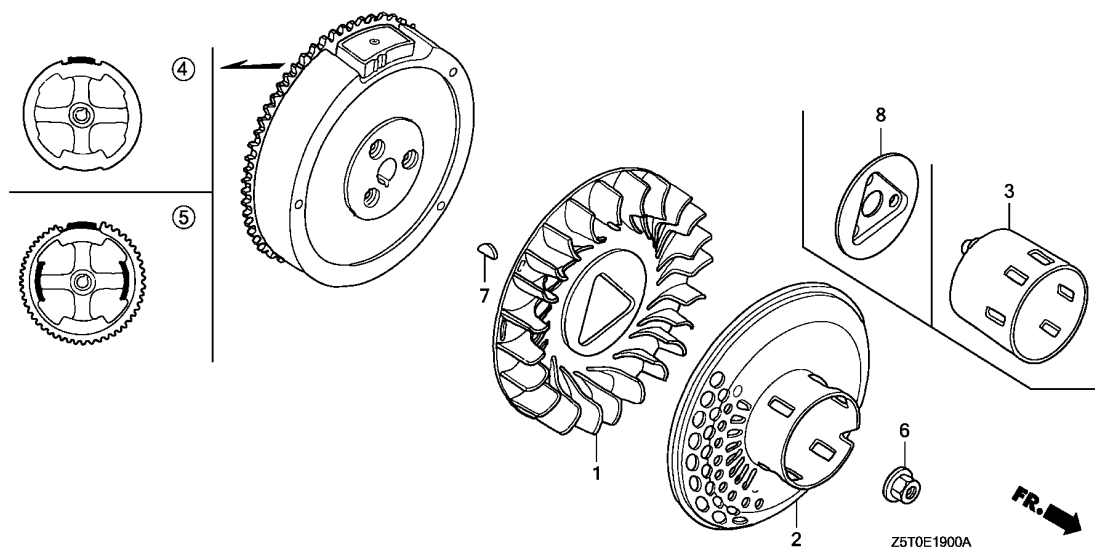

Ref. No.	Part No.	Description	Reqd. QTY		Serial No.	Parts catalogue code
			GX 390 UT1	GX 390 RT1		
(5)	31100-ZE3-W01	FLYWHEEL COMP. (SEL-4POLE) ..	1	1	-----	LKE,PAE2,QAE2,QAE6,QC2,QKA4,QME0,QNB2,QNE2,QNE6,QNE8,QWA2,QXH9,SCK4
	31100-ZE3-W21	FLYWHEEL COMP. (SEL-18A)	1	-	-----	SME0,SME6,SM32,STC4,VKE4,VK2,VN27,VTH4
						QNR2,QNR6
6	90201-ZE3-V00	NUT, SPECIAL, 16MM	1	-	-----	LXE8,LXU,PXE8,PXU,QAA2,QAA6,QAW,QA2,QA26,QDW9,QK4,QTT,QWA4,QWT2,QXC9
	90201-ZE3-790		1	-	-----	QXE8,QXQ4,QXU,SHQ4,SXE8,SXQ4,VXE8,VX8
						HA2,LKE,LXE4,LXQ4,LX2,PAE2,PA2,PXD8,QAE2,QAE6,QC2,QE,QHB4,QKA4,QME0
						QNE2,QNE6,QNE8,QNR2,QNR6,QWC4,QXB7,QXB9,QXC4,QXC6,QXER,QXE4,QXE6,QXE7
						QXE9,QXH9,QXS4,QXUZ,SCK4,SMC1,SMD3,SME0,SME6,SM32,SNC,STC4,SWA4,SXB7
						SXB9,SXE4,SXU,VA2,VC2N,VKX4,VM2,VNG1,VN27,VPX4,VPX9,VSD7,VSD9,VXB7
						VXB9,VXE2,VXE6,VXE7,VXE9,VXG,VXQ4
7	90741-ZE2-000	KEY, SPECIAL WOODRUFF, 25X18	-	1		
8	19512-ZE2-000	PLATE, COOLING FAN SETTING ..	1	1	-----	LKE

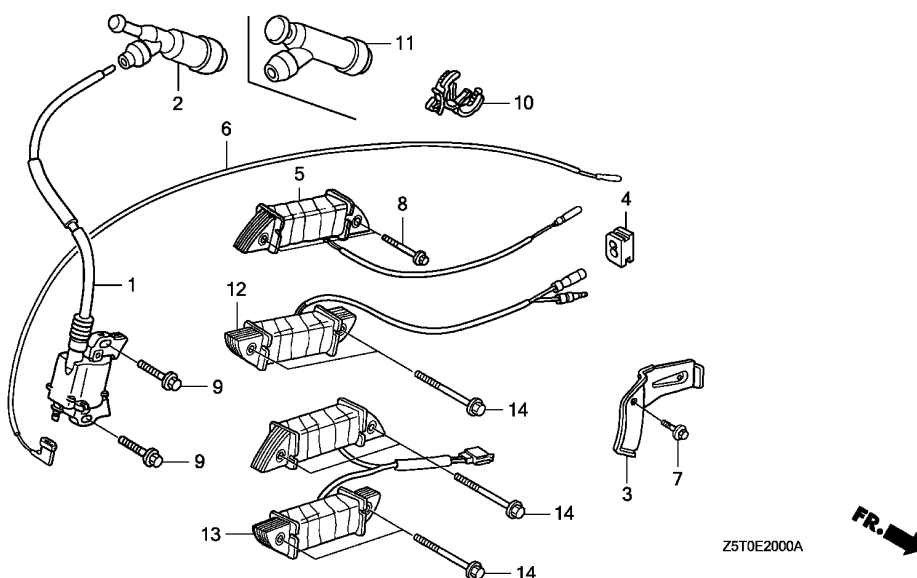


Ref. No.	L.O.N.	(Relative ref. Number) Description	F.R.T.
1	6141A5	COIL, IGNITION(ONE) (11)	0.2
2	6141B8	TERMINAL, HIGH TENSION (13)	0.1
5	6131C3	COIL, CHARGE	0.4
6	6111B3	CORD, STOP SWITCH	0.3
12	6141A6	COIL, LAMP	0.4

Ref. No.	Part No.	Description	Reqd. GX 390 UT1	QTY GX 390 RT1	Serial No.	Parts catalogue code
1	30500-Z1C-013	COIL ASSY., IGNITION	1	-	1486604	LXE8,LXU,PXE8,PXU,QAA2,QAA6,QAW,QA2,QA26,QDW9,QK4,QT,T,QWA4,QWT2,QXC9,QXE8,QXQ4,QXU,SHQ4,SXE8, SXQ4,VXE8,VX8
	30500-Z1C-023		1	-	-----	HA2,LKE,LXE4,LXQ4,LX2,PAE2,PA2,PXD8,PAE2,PAE6,QC2,QE,QHB4,QKA4,QME0,QNE2,QNE6,QNE8,QWC4,QXB7,QXB9,QXC4,QXC6,QXER,QXE4,QXE6,QXE7,QXE9,QXH9,QXS4,QXUZ,SCK4,SMC1,SMD3,SME0,SME6,SM32,SNC,STC4,SWA4, SXB7, SXB9, SXE4, SXU,VA2,VC2N,VKX4,VM2,VNG1,VN27,VPX4,VPX9,VSD7,VSD9,VXB7,VXB9,VXE2,VXE6,VXE7,VXE9,VXG,VXQ4
			1	-	1486605	-----LXE8,LXU,PXE8,PXU,QAA2,QAA6,QAW,QA2,QA26,QDW9,QK4,QT,T,QWA4,QWT2,QXC9,QXE8,QXQ4,QXU,SHQ4,SXE8, SXQ4,VXE8,VX8
2	30700-Z1C-811	CAP ASSY., NOISE SUPPRESSOR (NGK Y-EZD)	1	1	-----	HA2,LKE,LXE4,LXE8,LXQ4,LXU,LX2,PAE2,PA2,PXD8,PXE8,PXU,QAA2,QAA6,PAE2,QAE6,QAW,QA2,QA26,QC2,QDW9,QE,QHB4,QKA4,QK4,QME0,QNB2,QNE2,QNE6,QNE8,QT,T,QWA2,QWA4,QWC4,QWT2,QXB7,QXB9,QXC4,QXC6,QXC9,QXER,QXE4,QXE6,QXE7,QXE8,QXE9,QXH9,QXQ4,QXS4,QXU,QXUZ,SCK4,SHQ4,SMC1,SMD3,SME0,SME6,SM32,SNC,STC4,SWA4, SXB7, SXB9, SXE4, SXE8, SXQ4, SXU,VAA1,VAA8,VAC2,VAG2,VA2,VCN2,VC2,VC2N,VDE2,VD2,VEP9,VKB2,VKE4,VKX4,VK2,VM2,VNG1,VN27,VPE5,VPE9,VPX4,VPX9,VSD4,VSD7,VSD9,VS49,VWC,VWC9,VWE,VWT4,VXB7,VXB9,VXE2,VXE6,VXE7,VXE8,VXE9,VXG,VXQ4,VX8
3	31511-ZE3-000	CLAMPER, CORD	1	1	-----	LKE,LXE4,LXE8,PAE2,PXD8,PXE8,PAE2,QAE6,QC2,QKA4,QME0,QNB2,QNE2,QNE6,QNE8,QWA2,QWC4,QXER,QXE4,QXE6,QXE7,QXE8,QXE9,QXH9,SCK4,SMC1,SME0,SME6,SM32,STC4,SXE4,SXE8,VAA8,VCN2,VC2,VC2N,VDE2,VEP9,VKB2,VKE4,VK2,VM2,VN27,VPE5,VPE9,VSD4,VS49,VTH4,VWE,VXE2,VXE6,VXE7,VXE8,VXE9


G 7

2

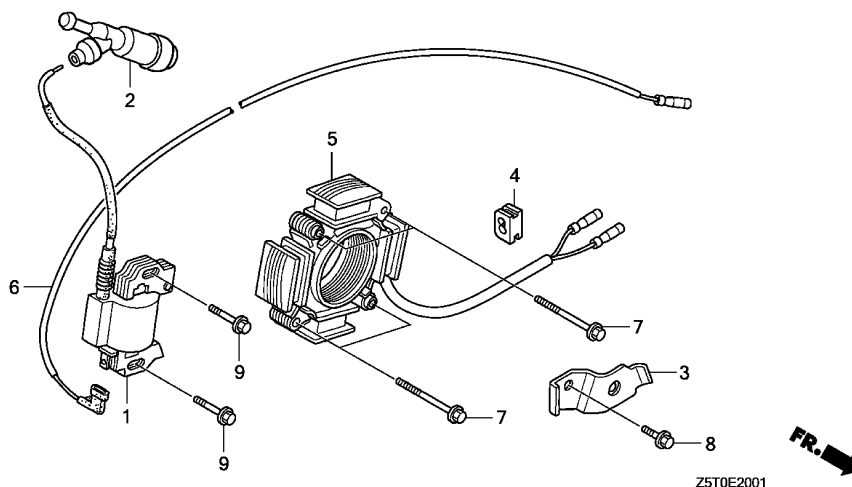


Ref. No.	L.O.N.	(Relative ref. Number) Description	F.R.T.
1	6141A5	COIL, IGNITION(ONE)	0.2
2	6141B8	TERMINAL, HIGH TENSION	0.1
5	6131C3	COIL, CHARGE	0.4

Ref. No.	Part No.	Description	Reqd. QTY		Serial No.	Parts catalogue code
			GX 390 UT1	GX 390 RT1		
1	30500-Z1C-023	COIL ASSY., IGNITION	1	-	-----	QNR2,QNR6
2	30700-Z1C-811	CAP ASSY., NOISE SUPPRESSOR (NGK Y-EZD)	1	-	-----	QNR2,QNR6
3	31511-ZE2-W00	CLAMPER, CORD	1	-	-----	QNR2,QNR6
4	31512-ZE2-000	GROMMET, CORD	1	-	-----	QNR2,QNR6
5	31630-ZE2-W01	COIL ASSY., CHARGE (12V/18A)	1	-	-----	QNR2,QNR6
6	36101-ZE2-701	CORD, STOP SWITCH (430MM) ...	1	-	-----	QNR2,QNR6
7	90012-888-000	BOLT, FLANGE, 6X40(CT200) ...	4	-	-----	QNR2,QNR6
8	90013-883-000	BOLT, FLANGE, 6X12(CT200) ...	1	-	-----	QNR2,QNR6
9	90015-883-000	BOLT, FLANGE, 6X28(CT200) ...	2	-	-----	QNR2,QNR6

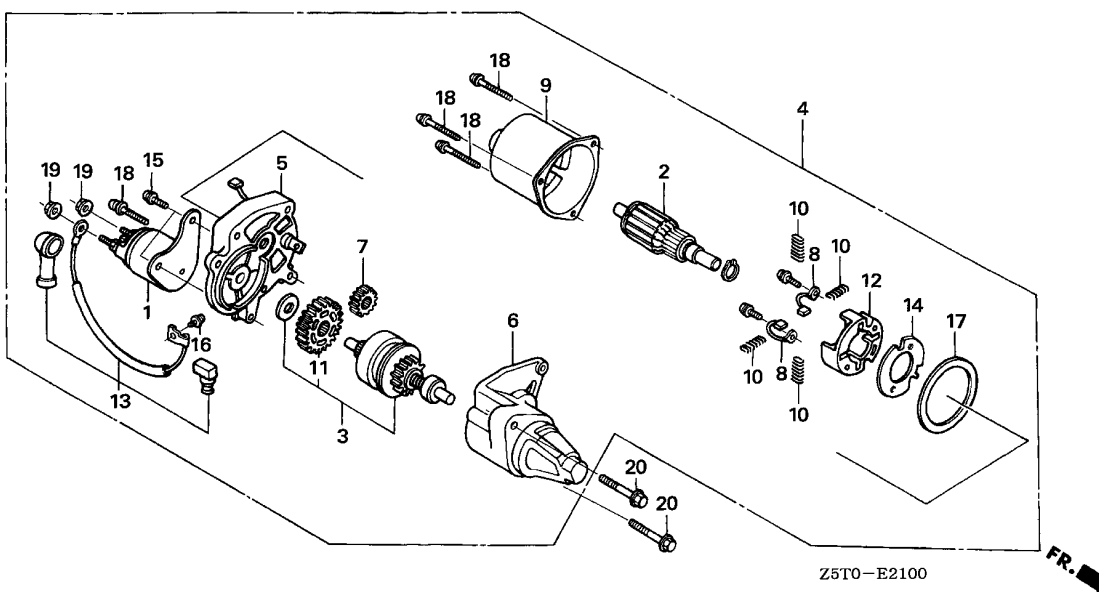


Ref. No.	L.O.N.	(Relative ref. Number) Description	F.R.T.
1	6121E5	CONTACTOR, STARTER	0.2
2	6121A0	ARMATURE, STARTER	0.4
3	6121B0	CLUTCH, OVERRUNNING	0.4
4	6121D5	MOTOR, STARTER	0.2
5	6121C3	BRACKET, STARTER :CENTER	0.4
6	6121D2	BRACKET, STARTER :FRONT	0.3
8	6121A9	BRUSH, STARTER	0.4


Ref. No.	Part No.	Description	Reqd. GX 390 UT1	QTY GX 390 RT1	Serial No.	Parts catalogue code
1	31204-ZA0-003	CONTACTOR ASSY.	1	1	-----	LKE,LXE4,LXE8,PAE2,PXD8,PXE8,QAE2,QAE6,QC2,QKA4,QME0,QNB2,QNE2,QNE6,QNE8,QNR2,QNR6,QXER,QXE4,QXE6,QXE7,QXE8,QXE9,QXH9,SCK4,SME0,SM32,STC4,SXE4,SXE8,VAA8,VCN2,VC2,VC2N,VDE2,VKB2,VKE4,VK2,VN27,VPE5,VPE9,VSD4,VS49,VTH4,VWE,VWT4,VXE2,VXE6,VXE7,VXE8,VXE9
2	31206-ZE3-003	ARMATURE COMP.	1	1	-----	LKE,LXE4,LXE8,PAE2,PXD8,PXE8,QAE2,QAE6,QC2,QKA4,QME0,QNB2,QNE2,QNE6,QNE8,QNR2,QNR6,QXER,QXE4,QXE6,QXE7,QXE8,QXE9,QXH9,SCK4,SME0,SM32,STC4,SXE4,SXE8,VAA8,VCN2,VC2,VC2N,VDE2,VKB2,VKE4,VK2,VN27,VPE5,VPE9,VSD4,VS49,VTH4,VWE,VWT4,VXE2,VXE6,VXE7,VXE8,VXE9
3	31207-ZE3-003	CLUTCH COMP., OVERRUNNING ...	1	1	-----	LKE,LXE4,LXE8,PAE2,PXD8,PXE8,QAE2,QAE6,QC2,QKA4,QME0,QNB2,QNE2,QNE6,QNE8,QNR2,QNR6,QXER,QXE4,QXE6,QXE7,QXE8,QXE9,QXH9,SCK4,SME0,SM32,STC4,SXE4,SXE8,VAA8,VCN2,VC2,VC2N,VDE2,VKB2,VKE4,VK2,VN27,VPE5,VPE9,VSD4,VS49,VTH4,VWE,VWT4,VXE2,VXE6,VXE7,VXE8,VXE9
4	31210-ZE3-013 31210-ZE3-023	MOTOR UNIT, STARTER	1 1	- 1	1338742	LXE8,PXE8,QXE8,SXE8,VXE8 LKE,LXE4,PAE2,PXD8,QAE2,QAE6,QC2,QKA4,QME0,QNB2,QNE2,QNE6,QNE8,QNR2,QNR6,QXER,QXE4,QXE6,QXE7,QXE8,QXE9,QXH9,SCK4,SME0,SM32,STC4,SXE4,VAA8,VCN2,VC2,VC2N,VDE2,VKB2,VKE4,VK2,VN27,VPE5,VPE9,VSD4,VS49,VTH4,VWE,VWT4,VXE2,VXE6,VXE7,VXE9
5	31211-ZE2-003	BRACKET, CENTER	1 1	- 1	1338743	LXE8,PXE8,QXE8,SXE8,VXE8 LKE,LXE4,LXE8,PAE2,PXD8,PXE8,QAE2,QAE6,QC2,QKA4,QME0,QNB2,QNE2,QNE6,QNE8,QNR2,QNR6,QXER,QXE4,QXE6,QXE7,QXE8,QXE9,QXH9,SCK4,SME0,SM32,STC4,SXE4,SXE8,VAA8,VCN2,VC2,VC2N,VDE2,VKB2,VKE4,VK2,VN27,VPE5,VPE9,VSD4,VS49,VTH4,VWE,VWT4,VXE2,VXE6,VXE7,VXE8,VXE9
6	31212-ZE3-003	BRACKET, FR.	1	1	-----	LKE,LXE4,LXE8,PAE2,PXD8,PXE8,QAE2,QAE6,QC2,QKA4,QME0,QNB2,QNE2,QNE6,QNE8,QNR2,QNR6,QXER,QXE4,QXE6,QXE7,QXE8,QXE9,QXH9,SCK4,SME0,SM32,STC4,SXE4,SXE8,VAA8,VCN2,VC2,VC2N,VDE2,VKB2,VKE4,VK2,VN27,VPE5,VPE9,VSD4,VS49,VTH4,VWE,VWT4,VXE2,VXE6,VXE7,VXE8,VXE9

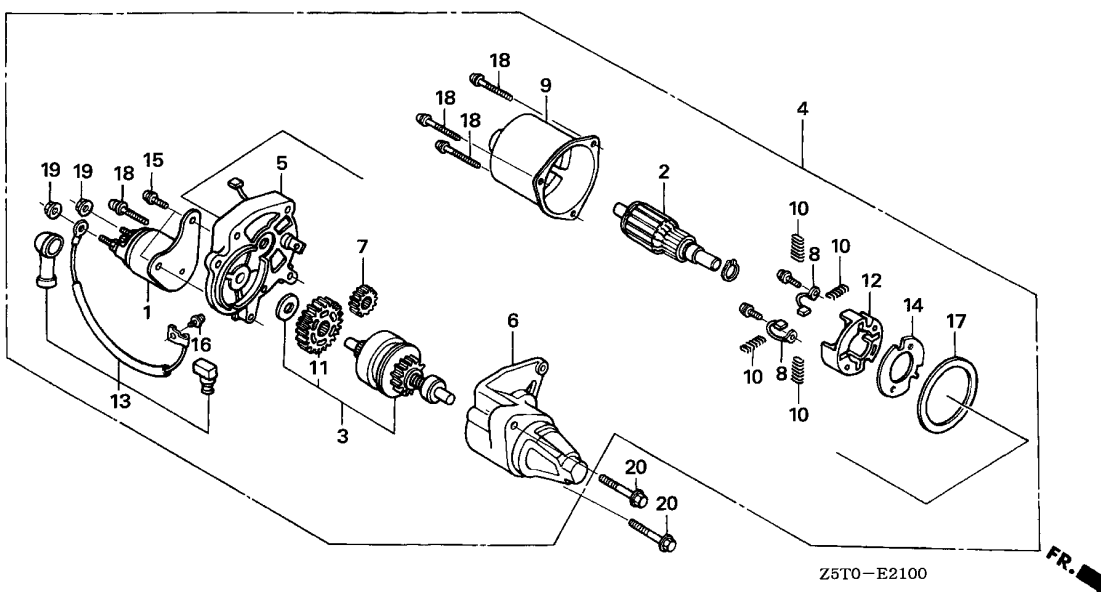

Ref. No.	Part No.	Description	Reqd. QTY		Serial No.	Parts catalogue code
			GX 390 UT1	GX 390 RT1		
7	31213-ZE2-003	GEAR, DRIVE PINION	1	1	-----	LKE,LXE4,LXE8,PAE2,PXD8,PXE8,QAE2,QAE6,QC2,QKA4,QME0,QNB2,QNE2,QNE6,QNE8,QNR2,QNR6,QXER,QXE4,QXE6,QXE7,QXE8,QXE9,QXH9,SCK4,SME0,SM32,STC4,SXE4,SXE8,VAA8,VCN2,VC2,VC2N,VDE2,VKB2,VKE4,VK2,VN27,VPE5,VPE9,VSD4,VS49,VTH4,VWE,VWT4,VXE2,VXE6,VXE7,VXE8,VXE9
8	31215-ZE2-003	BRUSH	2	2	-----	LKE,LXE4,LXE8,PAE2,PXD8,PXE8,QAE2,QAE6,QC2,QKA4,QME0,QNB2,QNE2,QNE6,QNE8,QNR2,QNR6,QXER,QXE4,QXE6,QXE7,QXE8,QXE9,QXH9,SCK4,SME0,SM32,STC4,SXE4,SXE8,VAA8,VCN2,VC2,VC2N,VDE2,VKB2,VKE4,VK2,VN27,VPE5,VPE9,VSD4,VS49,VTH4,VWE,VWT4,VXE2,VXE6,VXE7,VXE8,VXE9
9	31218-ZE3-003	YOKE COMP.	1	1	-----	LKE,LXE4,LXE8,PAE2,PXD8,PXE8,QAE2,QAE6,QC2,QKA4,QME0,QNB2,QNE2,QNE6,QNE8,QNR2,QNR6,QXER,QXE4,QXE6,QXE7,QXE8,QXE9,QXH9,SCK4,SME0,SM32,STC4,SXE4,SXE8,VAA8,VCN2,VC2,VC2N,VDE2,VKB2,VKE4,VK2,VN27,VPE5,VPE9,VSD4,VS49,VTH4,VWE,VWT4,VXE2,VXE6,VXE7,VXE8,VXE9
10	31219-ZE2-003	SPRING, BRUSH RETURN	4	4	-----	LKE,LXE4,LXE8,PAE2,PXD8,PXE8,QAE2,QAE6,QC2,QKA4,QME0,QNB2,QNE2,QNE6,QNE8,QNR2,QNR6,QXER,QXE4,QXE6,QXE7,QXE8,QXE9,QXH9,SCK4,SME0,SM32,STC4,SXE4,SXE8,VAA8,VCN2,VC2,VC2N,VDE2,VKB2,VKE4,VK2,VN27,VPE5,VPE9,VSD4,VS49,VTH4,VWE,VWT4,VXE2,VXE6,VXE7,VXE8,VXE9
11	31222-ZE3-791	GEAR, REDUCTION	1	1	-----	LKE,LXE4,LXE8,PAE2,PXD8,PXE8,QAE2,QAE6,QC2,QKA4,QME0,QNB2,QNE2,QNE6,QNE8,QNR2,QNR6,QXER,QXE4,QXE6,QXE7,QXE8,QXE9,QXH9,SCK4,SME0,SM32,STC4,SXE4,SXE8,VAA8,VCN2,VC2,VC2N,VDE2,VKB2,VKE4,VK2,VN27,VPE5,VPE9,VSD4,VS49,VTH4,VWE,VWT4,VXE2,VXE6,VXE7,VXE8,VXE9
12	31231-ZE2-003	HOLDER, BRUSH	1	1	-----	LKE,LXE4,LXE8,PAE2,PXD8,PXE8,QAE2,QAE6,QC2,QKA4,QME0,QNB2,QNE2,QNE6,QNE8,QNR2,QNR6,QXER,QXE4,QXE6,QXE7,QXE8,QXE9,QXH9,SCK4,SME0,SM32,STC4,SXE4,SXE8,VAA8,VCN2,VC2,VC2N,VDE2,VKB2,VKE4,VK2,VN27,VPE5,VPE9,VSD4,VS49,VTH4,VWE,VWT4,VXE2,VXE6,VXE7,VXE8,VXE9
13	31232-ZE3-003	WIRE, WATER COVER	1	1	-----	LKE,LXE4,LXE8,PAE2,PXD8,PXE8,QAE2,QAE6,QC2,QKA4,QME0,QNB2,QNE2,QNE6,QNE8,QNR2,QNR6,QXER,QXE4,QXE6,QXE7,QXE8,QXE9,QXH9,SCK4,SME0,SM32,STC4,SXE4,SXE8,VAA8,VCN2,VC2,VC2N,VDE2,VKB2,VKE4,VK2,VN27,VPE5,VPE9,VSD4,VS49,VTH4,VWE,VWT4,VXE2,VXE6,VXE7,VXE8,VXE9

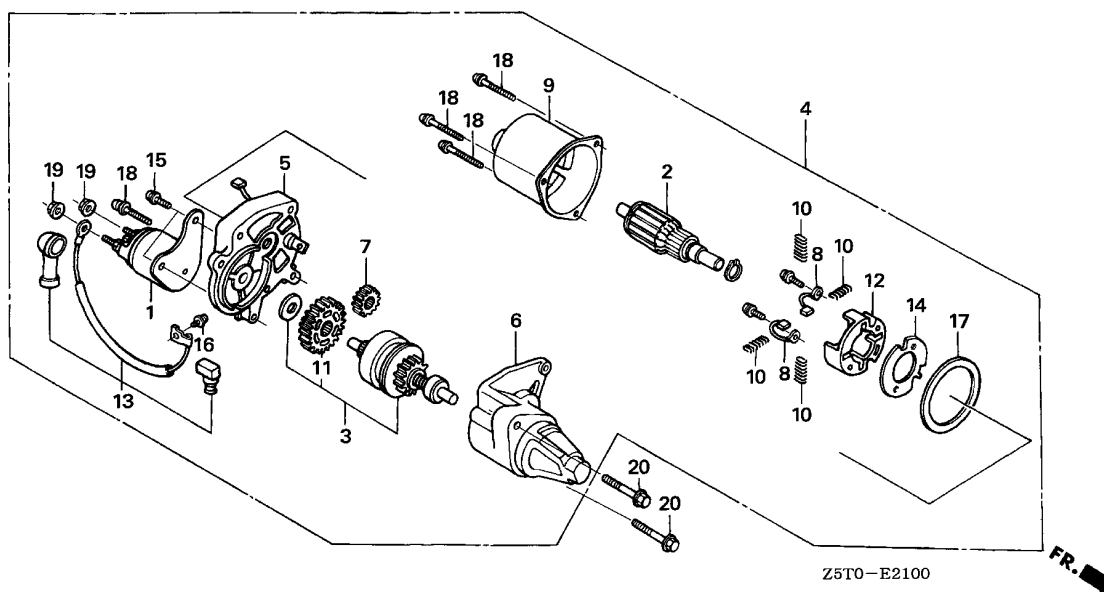


Ref. No.	Part No.	Description	Reqd. QTY		Serial No.	Parts catalogue code
			GX 390 UT1	GX 390 RT1		
14	31233-ZE2-003	INSULATOR	1	1	-----	LKE,LXE4,LXE8,PAE2,PXD8,PXE8,QAE2,QAE6,QC2,QKA4,QME0,QNB2,QNE2,QNE6,QNE8,QNR2,QNR6,QXER,QXE4,QXE6,QXE7,QXE8,QXE9,QXH9,SCK4,SME0,SM32,STC4,SXE4,SXE8,VAA8,VCN2,VC2,VC2N,VDE2,VKB2,VKE4,VK2,VN27,VPE5,VPE9,VSD4,VS49,VTH4,VWE,VWT4,VXE2,VXE6,VXE7,VXE8,VXE9
15	90007-ZE2-003	BOLT-WASHER, 5X14	2	2	-----	LKE,LXE4,LXE8,PAE2,PXD8,PXE8,QAE2,QAE6,QC2,QKA4,QME0,QNB2,QNE2,QNE6,QNE8,QNR2,QNR6,QXER,QXE4,QXE6,QXE7,QXE8,QXE9,QXH9,SCK4,SME0,SM32,STC4,SXE4,SXE8,VAA8,VCN2,VC2,VC2N,VDE2,VKB2,VKE4,VK2,VN27,VPE5,VPE9,VSD4,VS49,VTH4,VWE,VWT4,VXE2,VXE6,VXE7,VXE8,VXE9
16	90110-ZE2-003	SCREW-WASHER, 4X6	1	1	-----	LKE,LXE4,LXE8,PAE2,PXD8,PXE8,QAE2,QAE6,QC2,QKA4,QME0,QNB2,QNE2,QNE6,QNE8,QNR2,QNR6,QXER,QXE4,QXE6,QXE7,QXE8,QXE9,QXH9,SCK4,SME0,SM32,STC4,SXE4,SXE8,VAA8,VCN2,VC2,VC2N,VDE2,VKB2,VKE4,VK2,VN27,VPE5,VPE9,VSD4,VS49,VTH4,VWE,VWT4,VXE2,VXE6,VXE7,VXE8,VXE9
17	91601-ZE2-003	PACKING	1	1	-----	LKE,LXE4,LXE8,PAE2,PXD8,PXE8,QAE2,QAE6,QC2,QKA4,QME0,QNB2,QNE2,QNE6,QNE8,QNR2,QNR6,QXER,QXE4,QXE6,QXE7,QXE8,QXE9,QXH9,SCK4,SME0,SM32,STC4,SXE4,SXE8,VAA8,VCN2,VC2,VC2N,VDE2,VKB2,VKE4,VK2,VN27,VPE5,VPE9,VSD4,VS49,VTH4,VWE,VWT4,VXE2,VXE6,VXE7,VXE8,VXE9
18	93892-05032-18	SCREW-WASHER, 5X32	4	4	-----	LKE,LXE4,LXE8,PAE2,PXD8,PXE8,QAE2,QAE6,QC2,QKA4,QME0,QNB2,QNE2,QNE6,QNE8,QNR2,QNR6,QXER,QXE4,QXE6,QXE7,QXE8,QXE9,QXH9,SCK4,SME0,SM32,STC4,SXE4,SXE8,VAA8,VCN2,VC2,VC2N,VDE2,VKB2,VKE4,VK2,VN27,VPE5,VPE9,VSD4,VS49,VTH4,VWE,VWT4,VXE2,VXE6,VXE7,VXE8,VXE9
19	94070-06080	NUT-WASHER, 6MM	2	2	-----	LKE,LXE4,LXE8,PAE2,PXD8,PXE8,QAE2,QAE6,QC2,QKA4,QME0,QNB2,QNE2,QNE6,QNE8,QNR2,QNR6,QXER,QXE4,QXE6,QXE7,QXE8,QXE9,QXH9,SCK4,SME0,SM32,STC4,SXE4,SXE8,VAA8,VCN2,VC2,VC2N,VDE2,VKB2,VKE4,VK2,VN27,VPE5,VPE9,VSD4,VS49,VTH4,VWE,VWT4,VXE2,VXE6,VXE7,VXE8,VXE9
20	95701-08035-08	BOLT, FLANGE, 8X35	2	2	-----	LKE,LXE4,LXE8,PAE2,PXD8,PXE8,QAE2,QAE6,QC2,QKA4,QME0,QNB2,QNE2,QNE6,QNE8,QNR2,QNR6,QXER,QXE4,QXE6,QXE7,QXE8,QXE9,QXH9,SCK4,SME0,SM32,STC4,SXE4,SXE8,VAA8,VCN2,VC2,VC2N,VDE2,VKB2,VKE4,VK2,VN27,VPE5,VPE9,VSD4,VS49,VTH4,VWE,VWT4,VXE2,VXE6,VXE7,VXE8,VXE9

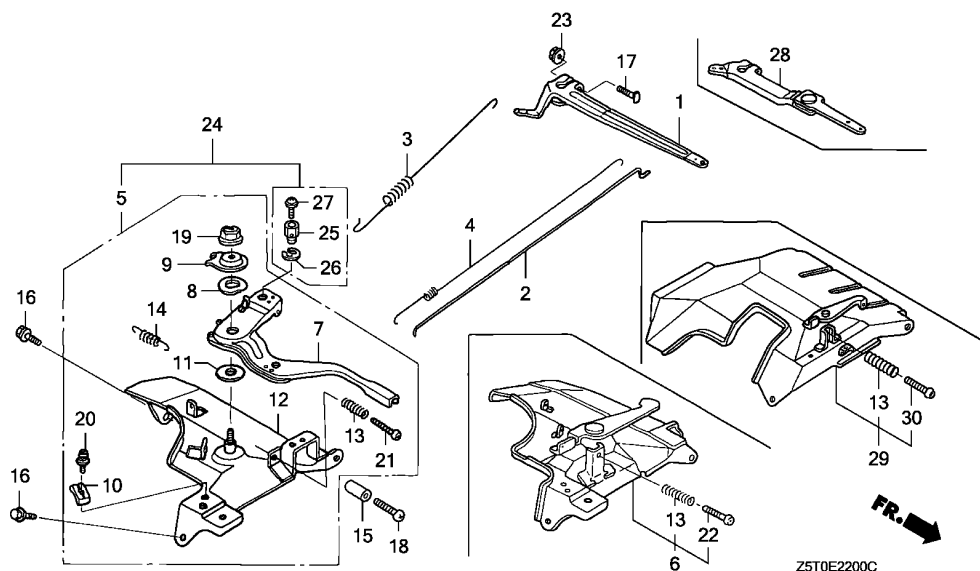


Ref. No.	L.O.N.	(Relative ref. Number) Description	F.R.T.
1		(28)	
1	1161A0	ARM, GOVERNOR	0.2
2	1161B1	ROD, GOVERNOR	0.3
3	1161C5	SPRING, GOVERNOR	0.2
4	1161C2	SPRING, THROTTLE RETURN	0.3
5		(24)	
	1161A5	CONTROL, THROTTLE/GOVERNOR ...	0.2
7	1161A8	LEVER, CONTROL	0.3
12	1161A2	BASE, CONTROL	0.3

Ref. No.	Part No.	Description	Reqd. GX 390 UT1	QTY GX 390 RT1	Serial No.	Parts catalogue code
1	16551-ZE3-000	ARM, GOVERNOR	1	1	-----	HA2,LKE,LXE4,LXE8,LXQ4,LXU,LX2,PAE2,PA2,PXD8,PXE8,PXU,QAA2,QAA6,QAE2,QAE6,QAW,QA2,QA26,QC2,QDW9,QE,QHB4,QKA4,QK4,QME0,QNB2,QNE2,QNE6,QNE8,QNR2,QNR6,QTT,QWA2,QWA4,QWC4,QWT2,QXB7,QXB9,QXC4,QXC6,QXC9,QXER,QXE4,QXE6,QXE7,QXE8,QXE9,QXH9,QXQ4,QXS4,QXU,QXUZ,SCK4,SHQ4,SMC1,SMD3,SME0,SME6,SM32,SNC,STC4,SWA4,SBX7,SBX9,SXE4,SXE8, SXQ4, SXU, VAA1, VAA8, VAG2, VA2, VDE2, VEP9, VK2, VM2, VNG1, VN27, VPE5, VPE9, VPX4, VPX9, VSD4, VSD7, VSD9, VS49, VTH4, VWC9, VWT4, VXB7, VXB9, VXE2, VXE6, VXE7, VXE8, VXE9, VXQ4, VX8
2	16555-ZE3-000	ROD, GOVERNOR	1	1	-----	HA2,LKE,LXE4,LXE8,LXQ4,LXU,LX2,PAE2,PA2,PXD8,PXE8,PXU,QAA2,QAA6,QAE2,QAE6,QAW,QA2,QA26,QC2,QDW9,QE,QHB4,QKA4,QK4,QME0,QNB2,QNE2,QNE6,QNE8,QNR2,QNR6,QTT,QWA2,QWA4,QWC4,QWT2,QXB7,QXB9,QXC4,QXC6,QXC9,QXER,QXE4,QXE6,QXE7,QXE8,QXE9,QXH9,QXQ4,QXS4,QXU,QXUZ,SCK4,SHQ4,SMC1,SMD3,SME0,SME6,SM32,SNC,STC4,SWA4,SBX7,SBX9,SXE4,SXE8, SXQ4, SXU, VAA1, VAA8, VKE4, VKX4, VSD4, VS49, VTH4
3	16561-ZE3-000	SPRING, GOVERNOR (L=137.5MM)	1	1	-----	VAC2,VAG2,VCN2,VC2,VC2N,VD2,VKB2,VK2,VSD7,VSD9,VWC,VWC9,VXE8,VXG,VX8
	16561-ZF6-T21	SPRING, GOVERNOR	1	1	-----	VEP9,VPE5,VPE9,VPX4,VPX9,VWT4
	16561-ZE3-710	SPRING, GOVERNOR (L=132.0MM)	1	1	-----	VA2,VDE2,VM2,VNG1,VN27,VWE,VXB7,VXB9,VXE2,VXE6,VXE7,VXE9,VXQ4
4	16562-ZE3-000	SPRING, THROTTLE RETURN	1	1	-----	HA2,LKE,LXE4,LXE8,LXQ4,LXU,LX2,PAE2,PA2,PXD8,PXE8,PXU,QAA2,QAA6,QAE2,QAE6,QAW,QA2,QA26,QC2,QDW9,QE,QHB4,QKA4,QK4,QME0,QNB2,QNE2,QNE6,QNE8,QNR2,QNR6,QTT,QWA2,QWA4,QWC4,QWT2,QXB7,QXB9,QXC4,QXC6,QXC9,QXER,QXE4,QXE6,QXE7,QXE8,QXE9,QXH9,QXQ4,QXS4,QXU,QXUZ,SCK4,SHQ4,SMC1,SMD3,SME0,SME6,SM32,SNC,STC4,SWA4,SBX7,SBX9,SXE4,SXE8, SXQ4, SXU, VAA1, VAA8, VAG2, VA2, VDE2, VEP9, VKE4, VKX4, VK2, VM2, VNG1, VN27, VPE5, VPE9, VPX4, VPX9, VSD4, VSD7, VSD9, VS49, VTH4, VWC9, VWT4, VXB7, VXB9, VXE2, VXE6, VXE7, VXE8, VXE9, VXQ4, VX8
	16562-ZE3-700		1	1	-----	VAC2,VCN2,VC2,VC2N,VD2,VKB2,VWC,VWE,VXG

Ref. No.	Part No.	Description	Reqd. QTY		Serial No.	Parts catalogue code
			GX 390 UT1	GX 390 RT1		
5	16570-ZE3-W20	CONTROL ASSY. (REMOTE)	1	1	-----	HA2,LXE4,LXE8,LXQ4,LXU,LX2,PAE2,PA2,PXD8,PXE8,PXU,QAA2,QAA6,QAE2,QAE6 QAW,QA2,QA26,QE,QME0,QNB2,QNE2,QNE6,QNE8,QNR2,QNR6,QT1,QWA2,QWA4,QWC4 QWT2,QXB7,QXB9,QXC4,QXC6,QXC9,QXER,QXE4,QXE6,QXE7,QXE8,QXE9,QXH9,QXQ4 QXS4,QXU,QXUZ,SHQ4,SME0,SWA4,SBX7,SBX9,SXE4,SXE8,SEQ4,SXU,VA2,VM2
	16570-ZK3-870	CONTROL ASSY.	1	-	-----	VXB7,VXB9,VXE7,VXE9
	16570-ZE3-W30		1	1	-----	VNG1
	16570-ZK3-720		1	-	-----	VN27
	16570-ZE3-W00	CONTROL ASSY. (STD.)	1	1	-----	VDE2,VXE2,VXE6,VXQ4
6	16570-ZE3-721	CONTROL ASSY.	1	1	-----	VAC2,VAG2,VCN2,VC2,VC2N,VD2,VKB2,VK2,VPE5,VPX4,VWT4,VXE8,VXG,VX8
	16570-ZK3-D21		1	1	-----	VEP9,VPE9,VPX9,VSD7,VSD9,VWC9
7	16571-ZE3-W00	LEVER, CONTROL	1	1	-----	HA2,LKE,LXE4,LXE8,LXQ4,LXU,LX2,PAE2,PA2,PXD8,PXE8,PXU,QAA2,QAA6,QAE2 QAE6,QAW,QA2,QA26,QC2,QDW9,QE,QHB4,QKA4,QK4,QME0,QNB2,QNE2,QNE6,QNE8 QNR2,QNR6,QT1,QWA2,QWA4,QWC4,QWT2,QXB7,QXB9,QXC4,QXC6,QXC9,QXER,QXE4 QXE6,QXE7,QXE8,QXE9,QXH9,QXQ4,QXS4,QXU,QXUZ,SC4,SHQ4,SMC1,SMD3,SME0 SME6,SM32,SNC,STC4,SWA4,SBX7,SBX9,SXE4,SXE8,SEQ4,SXU,VA2,VDE2,VM2 VXB7,VXB9,VXE2,VXE6,VXE7,VXE9,VXQ4
	16571-ZE3-W10		1	1	-----	VNG1,VN27
8	16574-ZE1-000	SPRING, LEVER	1	1	-----	HA2,LKE,LXE4,LXE8,LXQ4,LXU,LX2,PAE2,PA2,PXD8,PXE8,PXU,QAA2,QAA6,QAE2 QAE6,QAW,QA2,QA26,QC2,QDW9,QE,QHB4,QKA4,QK4,QME0,QNB2,QNE2,QNE6,QNE8 QNR2,QNR6,QT1,QWA2,QWA4,QWC4,QWT2,QXB7,QXB9,QXC4,QXC6,QXC9,QXER,QXE4 QXE6,QXE7,QXE8,QXE9,QXH9,QXQ4,QXS4,QXU,QXUZ,SC4,SHQ4,SMC1,SMD3,SME0 SME6,SM32,SNC,STC4,SWA4,SBX7,SBX9,SXE4,SXE8,SEQ4,SXU,VA2,VDE2,VM2 VNG1,VN27,VXB7,VXB9,VXE2,VXE6,VXE7,VXE9,VXQ4
9	16575-ZE2-W00	WASHER, CONTROL LEVER	1	1	-----	HA2,LKE,LXE4,LXE8,LXQ4,LXU,LX2,PAE2,PA2,PXD8,PXE8,PXU,QAA2,QAA6,QAE2 QAE6,QAW,QA2,QA26,QC2,QDW9,QE,QHB4,QKA4,QK4,QME0,QNB2,QNE2,QNE6,QNE8 QNR2,QNR6,QT1,QWA2,QWA4,QWC4,QWT2,QXB7,QXB9,QXC4,QXC6,QXC9,QXER,QXE4 QXE6,QXE7,QXE8,QXE9,QXH9,QXQ4,QXS4,QXU,QXUZ,SC4,SHQ4,SMC1,SMD3,SME0 SME6,SM32,SNC,STC4,SWA4,SBX7,SBX9,SXE4,SXE8,SEQ4,SXU,VA2,VDE2,VM2 VNG1,VN27,VXB7,VXB9,VXE2,VXE6,VXE7,VXE9,VXQ4
10	16576-891-000	HOLDER, CABLE	1	1	-----	HA2,LKE,LXE4,LXE8,LXQ4,LXU,LX2,PAE2,PA2,PXD8,PXE8,PXU,QAA2,QAA6,QAE2 QAE6,QAW,QA2,QA26,QC2,QDW9,QE,QHB4,QKA4,QK4,QME0,QNB2,QNE2,QNE6,QNE8 QNR2,QNR6,QT1,QWA2,QWA4,QWC4,QWT2,QXB7,QXB9,QXC4,QXC6,QXC9,QXER,QXE4 QXE6,QXE7,QXE8,QXE9,QXH9,QXQ4,QXS4,QXU,QXUZ,SC4,SHQ4,SMC1,SMD3,SME0 SME6,SM32,SNC,STC4,SWA4,SBX7,SBX9,SXE4,SXE8,SEQ4,SXU,VA2,VM2
11	16578-ZE1-000	SPACER, CONTROL LEVER	1	1	-----	HA2,LKE,LXE4,LXE8,LXQ4,LXU,LX2,PAE2,PA2,PXD8,PXE8,PXU,QAA2,QAA6,QAE2 QAE6,QAW,QA2,QA26,QC2,QDW9,QE,QHB4,QKA4,QK4,QME0,QNB2,QNE2,QNE6,QNE8 QNR2,QNR6,QT1,QWA2,QWA4,QWC4,QWT2,QXB7,QXB9,QXC4,QXC6,QXC9,QXER,QXE4 QXE6,QXE7,QXE8,QXE9,QXH9,QXQ4,QXS4,QXU,QXUZ,SC4,SHQ4,SMC1,SMD3,SME0 SME6,SM32,SNC,STC4,SWA4,SBX7,SBX9,SXE4,SXE8,SEQ4,SXU,VA2,VDE2,VM2 VNG1,VN27,VXB7,VXB9,VXE2,VXE6,VXE7,VXE9,VXQ4
12	16581-ZE3-W00	BASE COMP., CONTROL (###) ...	1	1	-----	HA2,LKE,LXE4,LXE8,LXQ4,LXU,LX2,PAE2,PA2,PXD8,PXE8,PXU,QAA2,QAA6,QAE2 QAE6,QAW,QA2,QA26,QC2,QDW9,QE,QHB4,QKA4,QK4,QME0,QNB2,QNE2,QNE6,QNE8 QNR2,QNR6,QT1,QWA2,QWA4,QWC4,QWT2,QXB7,QXB9,QXC4,QXC6,QXC9,QXER,QXE4 QXE6,QXE7,QXE8,QXE9,QXH9,QXQ4,QXS4,QXU,QXUZ,SC4,SHQ4,SMC1,SMD3,SME0 SME6,SM32,SNC,STC4,SWA4,SBX7,SBX9,SXE4,SXE8,SEQ4,SXU,VA2,VDE2,VM2 VNG1,VXE2,VXE6,VXQ4
13	16584-883-300	SPRING, CONTROL ADJUSTING ...	1	1		
14	16592-883-310	SPRING, CABLE RETURN	1	1	-----	HA2,LKE,LXE4,LXE8,LXQ4,LXU,LX2,PAE2,PA2,PXD8,PXE8,PXU,QAA2,QAA6,QAE2 QAE6,QAW,QA2,QA26,QC2,QDW9,QE,QHB4,QKA4,QK4,QME0,QNB2,QNE2,QNE6,QNE8 QNR2,QNR6,QT1,QWA2,QWA4,QWC4,QWT2,QXB7,QXB9,QXC4,QXC6,QXC9,QXER,QXE4 QXE6,QXE7,QXE8,QXE9,QXH9,QXQ4,QXS4,QXU,QXUZ,SC4,SHQ4,SMC1,SMD3,SME0 SME6,SM32,SNC,STC4,SWA4,SBX7,SBX9,SXE4,SXE8,SEQ4,SXU,VA2,VM2
15	16599-ZG1-M10	COLLAR, STOPPER	(1)	(1)	-----	LKE,LXE4,LXQ4,QE,QHB4,QKA4,QK4,QME0,QWA4,QWC4,QXB7,QXB9,QXC4,QXE4 QXE7,QXE9,QXH9,QXQ4,SC4,SHQ4,SMC1,SMD3,SME0,SME6,SNC,STC4,SWA4,SBX7 SBX9,SXE4,SEQ4,VEP9,VNG1,VN27,VPE5,VPE9,VPX4,VPX9,VSD7,VSD9,VWC9,VWT4 VXB7,VXB9,VXE7,VXE9,VXQ4

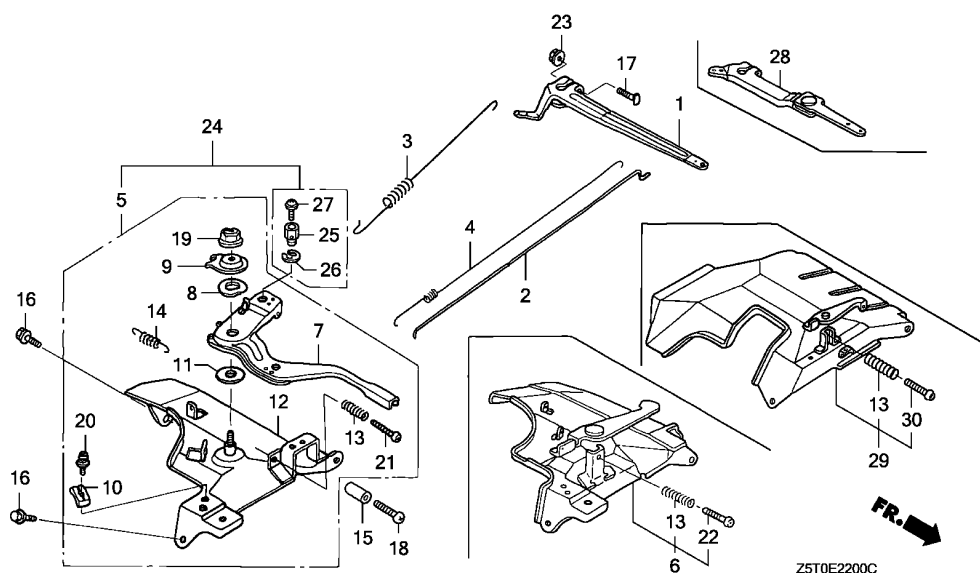

Ref. No.	Part No.	Description	Reqd. QTY		Serial No.	Parts catalogue code
			GX 390 UT1	GX 390 RT1		
16	90013-883-000	BOLT, FLANGE, 6X12(CT200) ...	2	2		
17	90015-ZE5-010	BOLT, GOVERNOR ARM	1	1		
18	90016-ZG9-N30	SCREW, RECESSED, 5X25	(1)	(1)		LKE, LXE4, LXQ4, QE, QHB4, QKA4, QK4, QME0, QWA4, QWC4, QXB7, QXB9, QXC4, QXE4, QXE7, QXE9, QXH9, QXQ4, SCK4, SHQ4, SMC1, SMD3, SME0, SME6, SNC, STC4, SWA4, SXB7, SXB9, SXE4, SXQ4, VEP9, VNG1, VN27, VPE5, VPE9, VPX4, VPX9, VSD7, VSD9, VWC9, VWT4, VXB7, VXB9, VXE7, VXE9, VXQ4
19	90114-SA0-000	NUT, SELF-LOCK, 6MM	1	1		HA2, LKE, LXE4, LXE8, LXQ4, LXU, LX2, PAE2, PA2, PXD8, PXE8, PXU, QAA2, QAA6, QAE2, QAE6, QAW, QA2, QA26, QC2, QDW9, QE, QHB4, QKA4, QK4, QME0, QNB2, QNE2, QNE6, QNE8, QNR2, QNR6, QTT, QWA2, QWA4, QWC4, QWT2, QXB7, QXB9, QXC4, QXC6, QXC9, QXER, QXE4, QXE6, QXE7, QXE8, QXE9, QXH9, QXQ4, QXS4, QXU, QXUZ, SCK4, SHQ4, SMC1, SMD3, SME0, SME6, SM32, SNC, STC4, SWA4, SXB7, SXB9, SXE4, SXE8, SXQ4, SXU, VA2, VDE2, VM2, VNG1, VN27, VXB7, VXB9, VXE2, VXE6, VXE7, VXE9, VXQ4
20	93500-05016-0A	SCREW, PAN, 5X16	1	1		HA2, LKE, LXE4, LXE8, LXQ4, LXU, LX2, PAE2, PA2, PXD8, PXE8, PXU, QAA2, QAA6, QAE2, QAE6, QAW, QA2, QA26, QC2, QDW9, QE, QHB4, QKA4, QK4, QME0, QNB2, QNE2, QNE6, QNE8, QNR2, QNR6, QTT, QWA2, QWA4, QWC4, QWT2, QXB7, QXB9, QXC4, QXC6, QXC9, QXER, QXE4, QXE6, QXE7, QXE8, QXE9, QXH9, QXQ4, QXS4, QXU, QXUZ, SCK4, SHQ4, SMC1, SMD3, SME0, SME6, SM32, SNC, STC4, SWA4, SXB7, SXB9, SXE4, SXE8, SXQ4, SXU, VA2, VDE2, VM2
21	93500-05032-0A	SCREW, PAN, 5X32	1	1		HA2, LKE, LXE4, LXE8, LXQ4, LXU, LX2, PAE2, PA2, PXD8, PXE8, PXU, QAA2, QAA6, QAE2, QAE6, QAW, QA2, QA26, QC2, QDW9, QE, QHB4, QKA4, QK4, QME0, QNB2, QNE2, QNE6, QNE8, QNR2, QNR6, QTT, QWA2, QWA4, QWC4, QWT2, QXB7, QXB9, QXC4, QXC6, QXC9, QXER, QXE4, QXE6, QXE7, QXE8, QXE9, QXH9, QXQ4, QXS4, QXU, QXUZ, SCK4, SHQ4, SMC1, SMD3, SME0, SME6, SM32, SNC, STC4, SWA4, SXB7, SXB9, SXE4, SXE8, SXQ4, SXU, VA2, VDE2, VM2, VNG1, VN27, VXB7, VXB9, VXE2, VXE6, VXE7, VXE9, VXQ4
22	93500-05045-0A	SCREW, PAN, 5X45	1	1		VAC2, VAG2, VCN2, VC2, VC2N, VD2, VEP9, VKB2, VK2, VPE5, VPE9, VPX4, VPX9, VSD7, VSD9, VWC9, VWT4, VXE8, VXG, VX8
23	94050-06000	NUT, FLANGE, 6MM	1	1		
24	16570-ZE3-W10	CONTROL ASSY. (REMOTE)	1	-		QC2, QDW9, QHB4, QKA4, QK4, SCK4, SMC1, SMD3, SME6, SM32, SNC, STC4
	16570-ZE3-W40	CONTROL ASSY. (REMOTE) (W/PLUG)	1	-		LKE

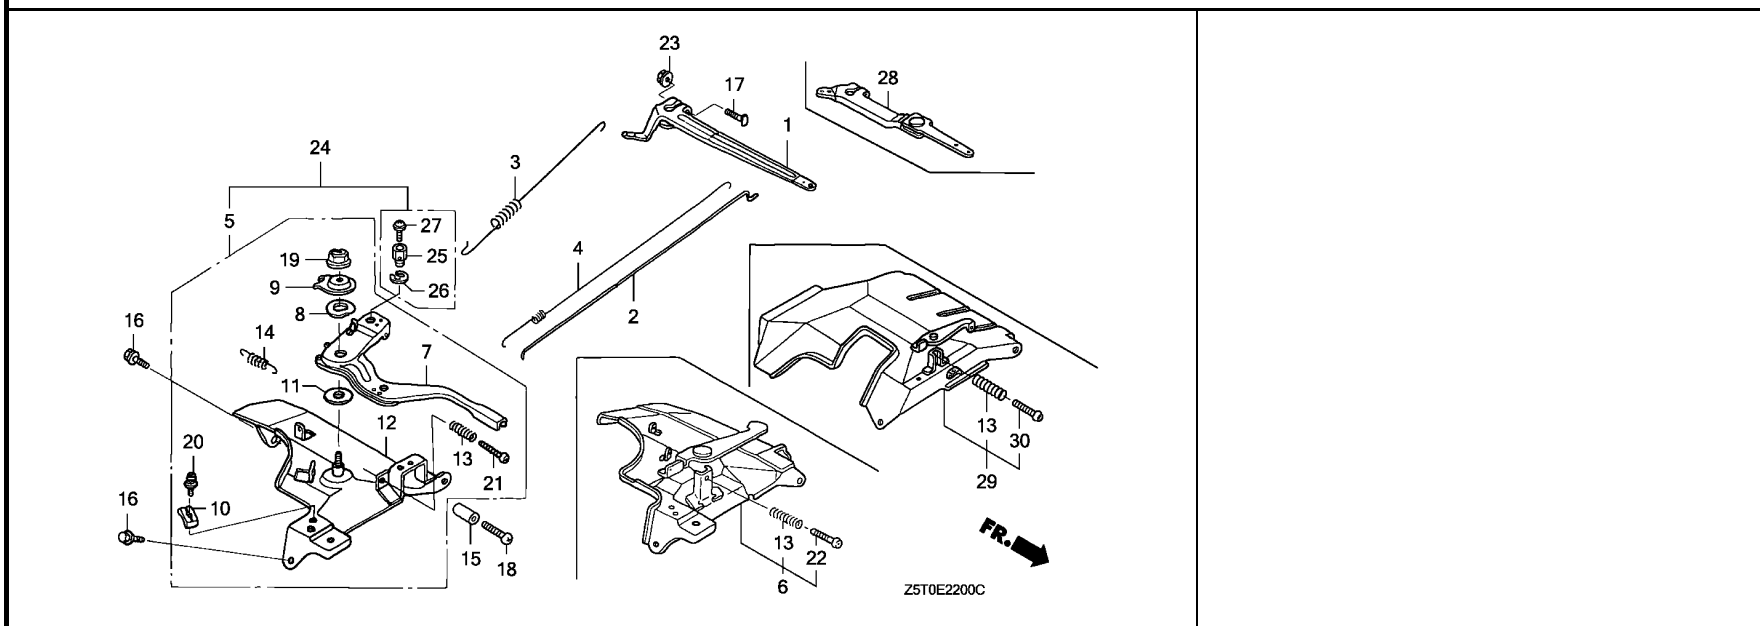


Ref. No.	Part No.	Description	Reqd. QTY		Serial No.	Parts catalogue code
			GX 390 UT1	GX 390 RT1		
25	16594-883-010	HOLDER, WIRE	1	-	-----	LKE,QC2,QDW9,QHB4,QKA4,QK4,SCK4,SMC1,SMD3,SME6,SM32,SNC,STC4
26	90605-230-000	CIRCLIP, 5MM	1	-	-----	LKE,QC2,QDW9,QHB4,QKA4,QK4,SCK4,SMC1,SMD3,SME6,SM32,SNC,STC4
27	93500-04006-0H	SCREW, PAN, 4X6	1	-	-----	LKE,QC2,QDW9,QHB4,QKA4,QK4,SCK4,SMC1,SMD3,SME6,SM32,SNC,STC4
28	16550-ZE3-700	ARM COMP., GOVERNOR	1	1	-----	VAC2,VCN2,VC2,VC2N,VD2,VKB2,VKE4,VKX4,VWC,VWE,VXG
29	16570-ZE3-700	CONTROL ASSY.	1	1	-----	VAA1,VAA8,VKE4,VKX4,VSD4,VS49,VTH4,VWC,VWE
30	93500-05035-0A	SCREW, PAN, 5X35	1	1	-----	VAA1,VAA8,VKE4,VKX4,VSD4,VS49,VTH4,VWC,VWE

E-22-20

AUTO THROTTLE


G16

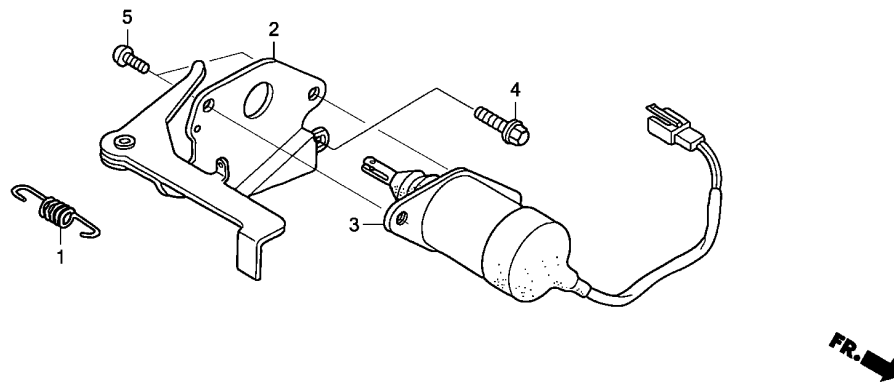

Z5T0E2220


Ref. No.	L.O.N.	(Relative ref. Number) Description	F.R.T.
2	8101H1	LEVER, THROTTLE	0.2
3	6211C5	SOLENOID, AUTO THROTTLE	0.3

Ref. No.	Part No.	Description	Reqd. QTY		Serial No.	Parts catalogue code
			GX 390 UT1	GX 390 RT1		
1	16268-893-000	SPRING, CHOKE RETURN	1	1	-----	VC2,VC2N,VD2,VWC,VWE,VXG
2	17850-ZD1-E30	LEVER COMP., THROTTLE	1	1	-----	VC2,VC2N,VD2,VWC,VWE,VXG
3	36160-ZB4-003	SOLENOID ASSY.	1	-	-----	VXG
	36160-ZB4-013		1	1	-----	VC2,VC2N,VD2,VWC,VWE
			-	1	-----	VXG
4	90013-883-000	BOLT, FLANGE, 6X12(CT200) ...	1	1	-----	VC2,VC2N,VD2,VWC,VWE,VXG
5	93500-05008-0A	SCREW, PAN, 5X8	2	2	-----	VC2,VC2N,VD2,VWC,VWE,VXG

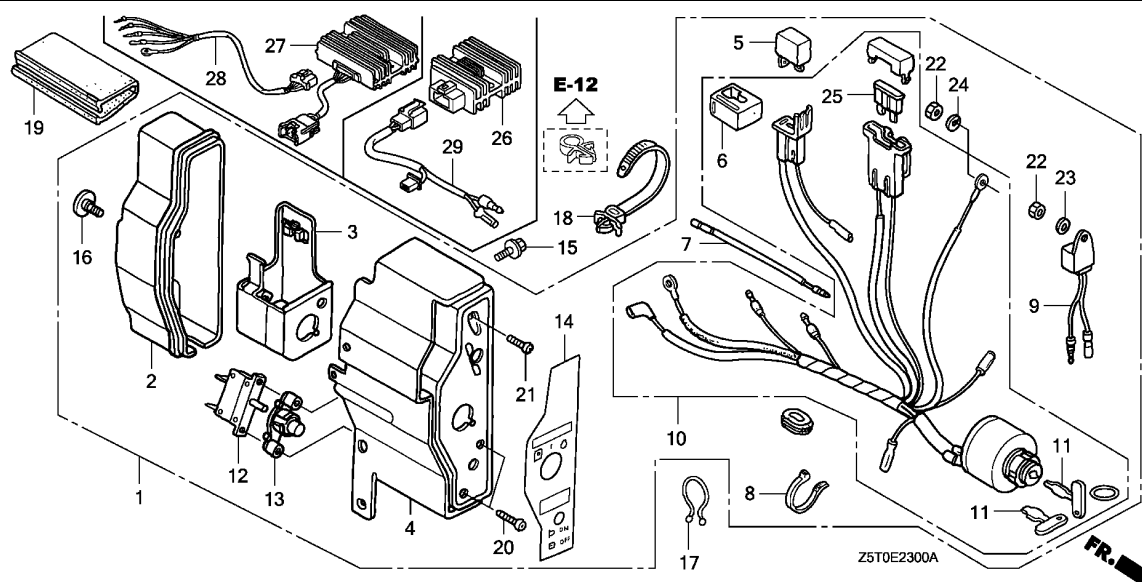


Ref. No.	L.O.N.	(Relative ref. Number) Description	F.R.T.
1	6221N7	BOX, ENGINE CONTROL	0.1
4	6221P7	PANEL, ENGINE CONTROL	0.2
5	6131B8	RECTIFIER, SILICON	0.2
9	6151K4	ALERT UNIT, ENGINE CONTROL OIL	0.2
10	6151E1	SWITCH, COMBINATION	0.2
12	6221D4	PROTECTOR, CIRCUIT	0.2
25	8121A7	FUSE, BLADE	0.1
.NOTE: Same time for two units or more			
26	6131B7	RECTIFIER, REGULATOR	0.2
29	6111E6	HARNESS, REGULATOR RECTIFIER	0.2

Ref. No.	Part No.	Description	Reqd. QTY	Serial No.	Parts catalogue code
			GX 390 UT1	GX 390 RT1	
1	31610-Z5R-821ZA	BOX ASSY., CONTROL (EXP-ALERT) (18A)			
		NH1.....BLACK	1	-	QNR2
	31610-Z5R-821ZB	*R280*.....POWER RED	1	-	QNR2,QNR6
	31610-Z5S-802ZA	BOX ASSY., CONTROL (EXP-ALERT) (3A)			
		NH1.....BLACK	1	-	QAE2,VN27
	31610-Z5S-802ZB	*R280*.....POWER RED	1	1	PAE2,QAE2,QAE6,VK2,VN27
	31610-Z5T-801ZA	BOX ASSY., CONTROL (EXP-ALERT) *R280*.....POWER RED	1	-	1338742 LXE8,PXE8,QXE8,SXE8,VXE8
	31610-Z5S-821ZA	BOX ASSY., CONTROL (EXP-ALERT) (10A)			
		NH1.....BLACK	1	-	SM32
	31610-Z5S-821ZB	*R280*.....POWER RED	1	-	LKE,QKA4,QME0,QNE2,QNE6,QNE8,QXH9,SCK4,SME0,SM32,STC4
	31610-Z5T-802ZA	BOX ASSY., CONTROL (EXP-ALERT) *R280*.....POWER RED	1	1	LXE4,PXD8,QXER,QXE4,QXE6,QXE7,QXE9,SXE4,VAA8,VC2,VC2N,VDE2,VKB2,VXE2,VXE6,VXE7,VXE9
			1	-	1338743 LXE8,PXE8,QXE8,SXE8,VXE8
	31610-Z5T-802ZB	*NH1*.....BLACK	1	1	VC2,VC2N
	31610-Z5T-802ZC	*NH105*...MAT BLACK (#15-#20)	1	1	VDE2,VXE2,VXE7,VXE9
2	31612-ZE2-003	CASE, CONTROL	1	1	LKE,LXE4,LXE8,PAE2,PXD8,PXE8,QAE2,QAE6,QKA4,QME0,QNE2,QNE6,QNE8,QNR2,QNR6,QXER,QXE4,QXE6,QXE7,QXE8,QXE9,QXH9,SCK4,SME0,SM32,STC4,SXE4,SXE8,VAA8,VC2,VC2N,VDE2,VKB2,VK2,VN27,VXE2,VXE6,VXE7,VXE8,VXE9
3	31614-ZE2-003	BRACKET, CASE MOUNTING	1	1	LKE,LXE4,LXE8,PAE2,PXD8,PXE8,QAE2,QAE6,QKA4,QME0,QNE2,QNE6,QNE8,QNR2,QNR6,QXER,QXE4,QXE6,QXE7,QXE8,QXE9,QXH9,SCK4,SME0,SM32,STC4,SXE4,SXE8,VAA8,VC2,VC2N,VDE2,VKB2,VK2,VN27,VXE2,VXE6,VXE7,VXE8,VXE9
4	31615-ZE3-003ZA	PANEL COMP., CONTROL			
		NH1.....BLACK	1	1	QAE2,QNR2,SM32,VC2,VC2N,VN27
	31615-ZE3-003ZD	*NH105*...MAT BLACK (#15-#20)	1	1	VDE2,VXE2,VXE7,VXE9

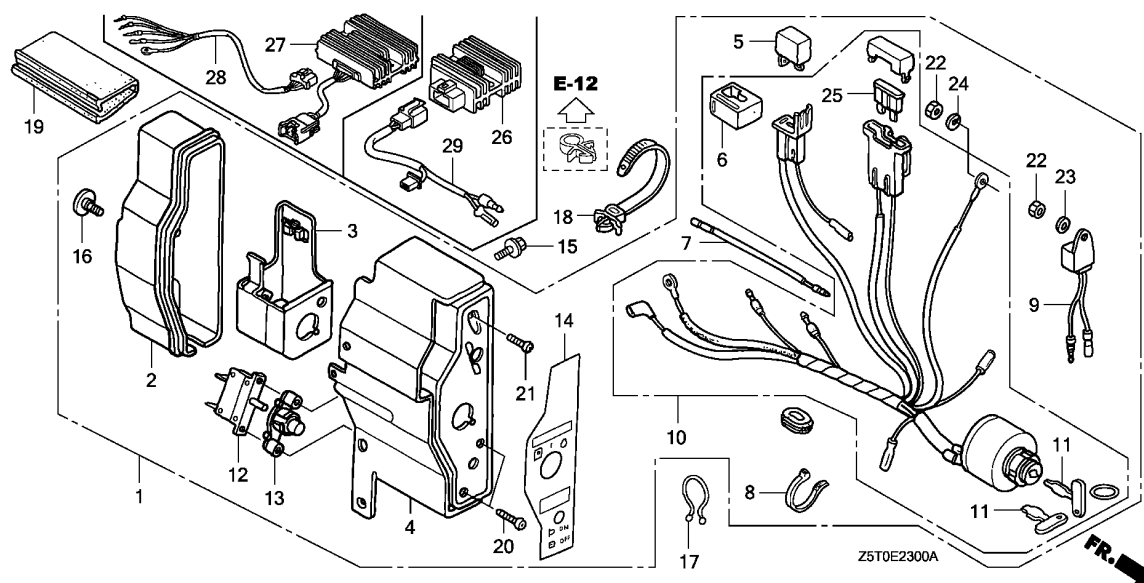


Ref. No.	Part No.	Description	Reqd. QTY		Serial No.	Parts catalogue code
			GX 390 UT1	GX 390 RT1		
(4)	31615-ZE3-003ZE	PANEL COMP., CONTROL *R280*.....POWER RED	1	1	-----	LKE,LXE4,LXE8,PAE2,PXD8,PXE8,QAE2,QAE6,QKA4,QME0,QNE2,QNE6,QNE8,QNR2,QNR6,QXER,QXE4,QXE6,QXE7,QXE8,QXE9,QXH9,SCK4,SME0,SM32,STC4,SXE4,SXE8,VAA8,VC2,VC2N,VDE2,VKB2,VK2,VN27,VXE2,VXE6,VXE7,VXE8,VXE9
5	31700-124-008	RECTIFIER ASSY., SILICON (SHINDENGEN)	1	1	-----	LXE4,LXE8,PAE2,PXD8,PXE8,QAE2,QAE6,QXER,QXE4,QXE6,QXE7,QXE8,QXE9,SXE4,SXE8,VAA8,VC2,VC2N,VDE2,VKB2,VK2,VN27,VXE2,VXE6,VXE7,VXE8,VXE9
6	32127-738-700	SUSPENSION, COUPLER	1	1	-----	LXE4,LXE8,PAE2,PXD8,PXE8,QAE2,QAE6,QXER,QXE4,QXE6,QXE7,QXE8,QXE9,SXE4,SXE8,VAA8,VC2,VC2N,VDE2,VKB2,VKX4,VK2,VN27,VXE2,VXE6,VXE7,VXE8,VXE9
7	32197-ZE1-003	HARNESS, SUB WIRE	1	1	-----	LKE,LXE4,LXE8,PAE2,PXD8,PXE8,QAE2,QAE6,QKA4,QME0,QNE2,QNE6,QNE8,QNR2,QNR6,QXER,QXE4,QXE6,QXE7,QXE8,QXE9,QXH9,SCK4,SME0,SM32,STC4,SXE4,SXE8,VAA8,VC2,VC2N,VDE2,VKB2,VK2,VN27,VXE2,VXE6,VXE7,VXE8,VXE9
8	32902-892-003	BAND	1	1	-----	LKE,LXE4,LXE8,PAE2,PXD8,PXE8,QAE2,QAE6,QKA4,QME0,QNE2,QNE6,QNE8,QNR2,QNR6,QXER,QXE4,QXE6,QXE7,QXE8,QXE9,QXH9,SCK4,SME0,SM32,STC4,SXE4,SXE8,VAA8,VC2,VC2N,VDE2,VKB2,VK2,VN27,VXE2,VXE6,VXE7,VXE8,VXE9
9	34150-ZH7-003 34150-ZH7-013	ALERT UNIT, OIL	1	-	1338742	LXE8,PXE8,QXE8,SXE8,VXE8
			1	1	-----	LKE,LXE4,PAE2,PXD8,QAE2,QAE6,QKA4,QME0,QNE2,QNE6,QNE8,QNR2,QNR6,QXER,QXE4,QXE6,QXE7,QXE9,QXH9,SCK4,SME0,SM32,STC4,SXE4,VAA8,VC2,VC2N,VDE2,VKB2,VK2,VN27,VXE2,VXE6,VXE7,VXE8,VXE9
10	35100-ZE2-023 35100-ZE2-033	SWITCH ASSY., COMBINATION ...	1	-	1338743	LXE8,PXE8,QXE8,SXE8,VXE8
			1	1	-----	LXE8,PXE8,QXE8,SXE8,VXE8
			1	1	-----	LXE4,PXD8,QXER,QXE4,QXE6,QXE7,QXE9,SXE4,VAA8,VC2,VC2N,VDE2,VKB2,VS49,VXE2,VXE6,VXE7,VXE9
	35100-ZE2-843	SWITCH ASSY., COMBINATION (3A-CHARGE)	1	-	1338743	LXE8,PXE8,QXE8,SXE8,VXE8
	35100-ZE2-W01	SWITCH ASSY., COMBINATION (18A-CHARGE)	1	1	-----	PAE2,QAE2,QAE6,VKX4,VK2,VN27
			1	-	-----	QNR2,QNR6

Ref. No.	Part No.	Description	Reqd. QTY		Serial No.	Parts catalogue code
			GX 390 UT1	GX 390 RT1		
10)	35100-ZE2-862	SWITCH ASSY., COMBINATION (10A-CHARGE)	1	-	-----	LKE, QKA4, QME0, QNE2, QNE6, QNE8, QXH9, SCK4, SME0, SM32, STC4
11	35111-880-013	KEY COMP.	2	2	-----	LKE, LXE4, LXE8, PAE2, PXD8, PXE8, QAE2, QAE6, QKA4, QME0, QNE2, QNE6, QNE8, QNR2, QNR6, QXER, QXE4, QXE6, QXE7, QXE8, QXE9, QXH9, SCK4, SME0, SM32, STC4, SXE4, SXE8, VAA8, VC2, VC2N, VDE2, VKB2, VKX4, VK2, VN27, VS49, VXE2, VXE6, VXE7, VXE8, VXE9, LXE4, LXE8, PXD8, PXE8, QXER, QXE4, QXE6, QXE7, QXE8, QXE9, SXE4, SXE8, VAA8, VC2, VC2N, VDE2, VKB2, VXE2, VXE6, VXE7, VXE8, VXE9
12	38240-VA3-900	PROTECTOR, CIRCUIT (1.0A) ...	1	1	-----	PAE2, QAE2, QAE6, VK2, VN27
	38240-ZE2-840	PROTECTOR, CIRCUIT (3.5A) ...	1	1	-----	LXE4, LXE8, PAE2, PXD8, PXE8, QAE2, QAE6, QXER, QXE4, QXE6, QXE7, QXE8, QXE9, SXE4, SXE8, VAA8, VC2, VC2N, VDE2, VKB2, VK2, VN27, VXE2, VXE6, VXE7, VXE8, VXE9
13	38250-ZA8-701	LENS ASSY., PROTECTOR	1	1	-----	LKE, QKA4, QME0, QNE2, QNE6, QNE8, QNR2, QNR6, QXH9, SCK4, SME0, SM32, STC4
14	87529-Z4S-820	MARK, CONTROL BOX (EXP)	1	-	-----	LXE4, LXE8, PAE2, PXD8, PXE8, QAE2, QAE6, QXER, QXE4, QXE6, QXE7, QXE8, QXE9, SXE4, SXE8, VAA8, VC2, VC2N, VDE2, VKB2, VK2, VN27, VXE2, VXE6, VXE7, VXE8, VXE9
	87529-Z4T-840	MARK, CONTROL BOX (EXTERNAL)	1	1	-----	LKE, LXE4, LXE8, PAE2, PXD8, PXE8, QAE2, QAE6, QKA4, QME0, QNE2, QNE6, QNE8, QNR2, QNR6, QXER, QXE4, QXE6, QXE7, QXE8, QXE9, QXH9, SCK4, SME0, SM32, STC4, SXE4, SXE8, VAA8, VC2, VC2N, VDE2, VKB2, VK2, VN27, VXE2, VXE6, VXE7, VXE8, VXE9
15	90013-883-000	BOLT, FLANGE, 6X12(CT200) ...	2	2	-----	LKE, LXE4, LXE8, PAE2, PXD8, PXE8, QAE2, QAE6, QKA4, QME0, QNE2, QNE6, QNE8, QNR2, QNR6, QXER, QXE4, QXE6, QXE7, QXE8, QXE9, QXH9, SCK4, SME0, SM32, STC4, SXE4, SXE8, VAA8, VC2, VC2N, VDE2, VKB2, VK2, VN27, VXE2, VXE6, VXE7, VXE8, VXE9
16	90380-MA6-010	SCREW, SPECIAL, 6X12	1	1	-----	LKE, LXE4, LXE8, PAE2, PXD8, PXE8, QAE2, QAE6, QKA4, QME0, QNE2, QNE6, QNE8, QNR2, QNR6, QXER, QXE4, QXE6, QXE7, QXE8, QXE9, QXH9, SCK4, SME0, SM32, STC4, SXE4, SXE8, VAA8, VC2, VC2N, VDE2, VKB2, VK2, VN27, VXE2, VXE6, VXE7, VXE8, VXE9
17	90630-751-000	CLIP, PURSE LOCK	1	1	-----	LKE, LXE4, LXE8, PAE2, PXD8, PXE8, QAE2, QAE6, QKA4, QME0, QNE2, QNE6, QNE8, QNR2, QNR6, QXER, QXE4, QXE6, QXE7, QXE8, QXE9, QXH9, SCK4, SME0, SM32, STC4, SXE4, SXE8, VAA8, VC2, VC2N, VDE2, VKB2, VK2, VN27, VXE2, VXE6, VXE7, VXE8, VXE9
18	90672-SA0-003	STRAP, CABLE, 118MM(BLACK) ..	1	1	-----	LKE, LXE4, LXE8, PAE2, PXD8, PXE8, QAE2, QAE6, QKA4, QME0, QNE2, QNE6, QNE8, QNR2, QNR6, QXER, QXE4, QXE6, QXE7, QXE8, QXE9, QXH9, SCK4, SME0, SM32, STC4, SXE4, SXE8, VAA8, VC2, VC2N, VDE2, VKB2, VK2, VN27, VXE2, VXE6, VXE7, VXE8, VXE9
19	91406-ZE2-003	TUBE, FASTENER, 30MM	1	1	-----	LKE, LXE4, LXE8, PAE2, PXD8, PXE8, QAE2, QAE6, QKA4, QME0, QNE2, QNE6, QNE8, QNR2, QNR6, QXER, QXE4, QXE6, QXE7, QXE8, QXE9, QXH9, SCK4, SME0, SM32, STC4, SXE4, SXE8, VAA8, VC2, VC2N, VDE2, VKB2, VK2, VN27, VXE2, VXE6, VXE7, VXE8, VXE9
20	93500-03012-0H	SCREW, PAN, 3X12	2	2	-----	LXE4, LXE8, PAE2, PXD8, PXE8, QAE2, QAE6, QXER, QXE4, QXE6, QXE7, QXE8, QXE9, SXE4, SXE8, VAA8, VC2, VC2N, VDE2, VKB2, VK2, VN27, VXE2, VXE6, VXE7, VXE8, VXE9
21	93500-04012-0H	SCREW, PAN, 4X12	1	1	-----	LKE, LXE4, LXE8, PAE2, PXD8, PXE8, QAE2, QAE6, QKA4, QME0, QNE2, QNE6, QNE8, QNR2, QNR6, QXER, QXE4, QXE6, QXE7, QXE8, QXE9, QXH9, SCK4, SME0, SM32, STC4, SXE4, SXE8, VAA8, VC2, VC2N, VDE2, VKB2, VK2, VN27, VXE2, VXE6, VXE7, VXE8, VXE9
22	94001-04390-0S	NUT, HEX., 4MM	2	2	-----	LKE, LXE4, LXE8, PAE2, PXD8, PXE8, QAE2, QAE6, QKA4, QME0, QNE2, QNE6, QNE8, QNR2, QNR6, QXER, QXE4, QXE6, QXE7, QXE8, QXE9, QXH9, SCK4, SME0, SM32, STC4, SXE4, SXE8, VAA8, VC2, VC2N, VDE2, VKB2, VK2, VN27, VXE2, VXE6, VXE7, VXE8, VXE9
23	94101-04800	WASHER, PLAIN, 4MM	1	1	-----	LKE, LXE4, LXE8, PAE2, PXD8, PXE8, QAE2, QAE6, QKA4, QME0, QNE2, QNE6, QNE8, QNR2, QNR6, QXER, QXE4, QXE6, QXE7, QXE8, QXE9, QXH9, SCK4, SME0, SM32, STC4, SXE4, SXE8, VAA8, VC2, VC2N, VDE2, VKB2, VK2, VN27, VXE2, VXE6, VXE7, VXE8, VXE9
24	94111-04800	WASHER, SPRING, 4MM	1	1	-----	LKE, LXE4, LXE8, PAE2, PXD8, PXE8, QAE2, QAE6, QKA4, QME0, QNE2, QNE6, QNE8, QNR2, QNR6, QXER, QXE4, QXE6, QXE7, QXE8, QXE9, QXH9, SCK4, SME0, SM32, STC4, SXE4, SXE8, VAA8, VC2, VC2N, VDE2, VKB2, VK2, VN27, VXE2, VXE6, VXE7, VXE8, VXE9
25	98200-30500	FUSE, BLADE (5A)	1	1	-----	LXE4, LXE8, PXD8, PXE8, QXER, QXE4, QXE6, QXE7, QXE8, QXE9, SXE4, SXE8, VAA8, VC2, VC2N, VDE2, VKB2, VS49, VXE2, VXE6, VXE7, VXE8, VXE9
	98200-31500	FUSE, BLADE (15A)	1	1	-----	LKE, PAE2, QAE2, QAE6, QKA4, QME0, QNE2, QNE6, QNE8, QXH9, SCK4, SME0, SM32, STC4, VKX4, VK2, VN27
	98200-32500	FUSE, BLADE (25A)	1	-	-----	QNR2, QNR6
26	31600-ZE2-861	RECTIFIER ASSY., REGULATOR (10A)	1	1	-----	LKE, QKA4, QME0, QNB2, QNE2, QNE6, QNE8, QXH9, SCK4, SME0, SM32, STC4
27	31620-ZG5-033	RECTIFIER ASSY., REGULATOR (20A)	1	-	-----	QNR2, QNR6
28	32110-ZE2-W00	HARNESS ASSY., SUB WIRE	1	-	-----	QNR2, QNR6
29	32110-ZE2-860	HARNESS ASSY., SUB WIRE	1	1	-----	LKE, QKA4, QME0, QNB2, QNE2, QNE6, QNE8, QXH9, SCK4, SME0, SM32, STC4

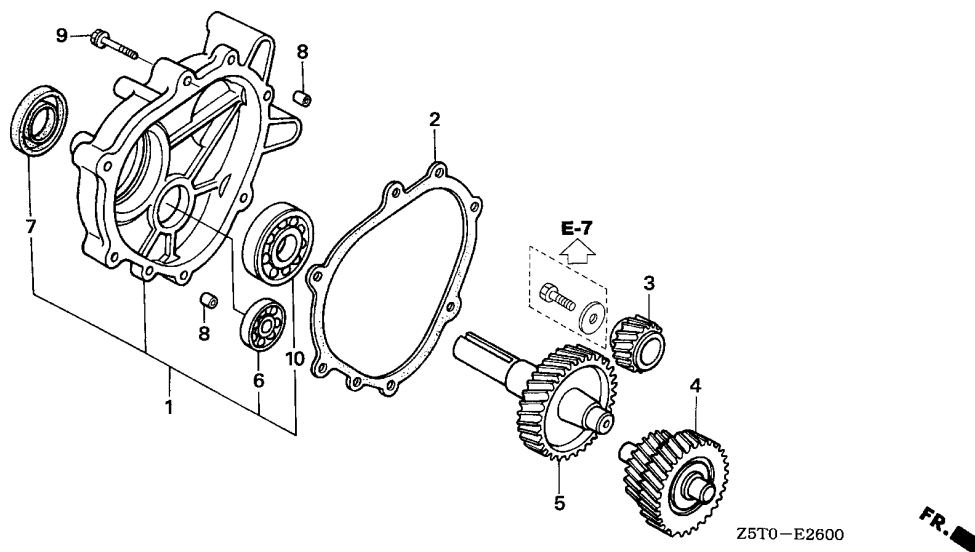

Ref. No.	L.O.N.	(Relative ref. Number) Description	F.R.T.
1		(2)	
2141AL		COVER, REDUCTION AND/OR PACKING, REDUCTION COVER (L-TYPE)	0.2
3	2141L2	GEAR, PRIMARY DRIVE	0.2
4	2141AK	COUNTERSHAFT, REDUCTION (L-TYPE)	0.2
5	2141V7	SHAFT, POWER TAKE OFF(L-TYPE)	0.2
6	2141AJ	BEARING, REDUCTION COUNTERSHAFT(L-TYPE) :REAR ..	0.3
7	2141X3	OIL SEAL, POWER TAKE OFF SHAFT (L-TYPE) :REAR	0.3
10	2141X8	BEARING, POWER TAKE OFF SHAFT (L-TYPE) :REAR	0.3


Ref. No.	Part No.	Description	Reqd. QTY	Serial No.	Parts catalogue code
			GX 390 UT1	GX 390 RT1	
1	11500-ZE3-611	COVER ASSY., GEAR CASE	1	-	LKE,LXE4,LXE8,LXQ4,LXU,LX2
	11500-Z8T-640		1	-	HA2
2	11521-ZE2-800	PACKING, CHAIN CASE COVER ...	1	-	LKE,LXE4,LXE8,LXQ4,LXU,LX2
3	22103-ZE3-610	GEAR, PRIMARY DRIVE (22T) ...	1	-	LKE,LXE4,LXE8,LXQ4,LXU,LX2
	22103-ZE3-640	GEAR, PRIMARY DRIVE (12T) ...	1	-	HA2
4	23220-ZE3-610	COUNTERSHAFT COMP. (21T/27T)	1	-	LKE,LXE4,LXE8,LXQ4,LXU,LX2
	23220-ZE3-640	COUNTERSHAFT COMP.	1	-	HA2
5	23710-ZE3-610	SHAFT, P.T.O. (33T)	1	-	LKE,LXE4,LXE8,LXQ4,LXU,LX2
	23710-ZE3-640	SHAFT, P.T.O. (34T)	1	-	HA2
6	91009-KJ1-003	BEARING, RADIAL BALL, 6202 (NTN)	1	-	LKE,LXE4,LXE8,LXQ4,LXU,LX2
	96100-63020-00	BEARING, RADIAL BALL, 6302 ..	1	-	HA2
7	91201-890-003	OIL SEAL, 30X46X8	1	-	LKE,LXE4,LXE8,LXQ4,LXU,LX2
	91201-Z1D-003		1	-	HA2
8	94301-08140	DOWEL PIN, 8X14	2	-	HA2,LKE,LXE4,LXE8,LXQ4,LXU,LX2
9	95701-08040-00	BOLT, FLANGE, 8X40	6	-	HA2,LKE,LXE4,LXE8,LXQ4,LXU,LX2
10	96100-62060-00	BEARING, RADIAL BALL, 6206 ..	1	-	LKE,LXE4,LXE8,LXQ4,LXU,LX2
	91006-MT3-003	BEARING, RADIAL BALL, 6206 (NTN)	1	-	HA2

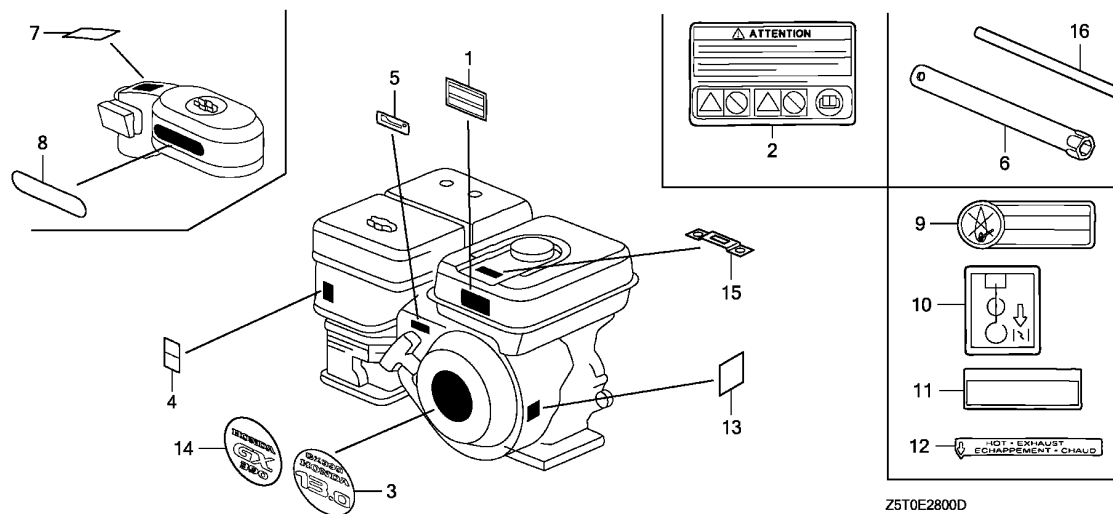

Ref. L.O.N. (Relative ref. Number)
No. Description F.R.T.


NO INFORMATION

Ref. No.	Part No.	Description	Reqd. GX 390 UT1	QTY GX 390 RT1	Serial No.	Parts catalogue code
1	87516-Z4H-000	MARK, OPERATOR CAUTION (ENGLISH)(MADE IN THAI)	1	1		
	87516-Z4H-810	MARK, OPERATOR CAUTION (PICTOGRAPH)(MADE IN THAI)	(1)	(1)	-----	LXE8,LXU,PXD8,PXE8,PXU,QAA2,QAA6,QAW,QA2,QA26,QDW9,QK4,QT1,QWA4,QWT2,QXC9,QXER,QXE8,QXQ4,QXU,QXUZ,SHQ4,SXE8, SXQ4,VKX4,VNG1,VPX4,VPX9,VSD7,VSD9,VXB7,VXB9,VXE8,VXG,VX8
	87516-ZH7-810	MARK, OPERATOR CAUTION (PICTOGRAPH)(MADE IN JAPAN)	(1)	(1)	-----	HA2,LKE,LXE4,LXQ4,LX2,PAE2,PA2,QAE2,QAE6,QC2,QE,QHB4,QKA4,QME0,QNB2,QNE2,QNE6,QNE8,QNR2,QNR6,QWA2,QWC4,QXB7,QXB9,QXC4,QXC6,QXE4,QXE6,QXE7,QXE9,QXH9,QXS4, SCK4, SMC1, SMD3, SME0, SME6, SM32, SNC, STC4, SWA4, SXB7, SXB9, SXE4, SXU, VAA1, VAA8, VAC2, VAG2, VA2, VCN2, VC2, VC2N, VDE2, VD2, VEP9, VKB2, VKE4, VK2, VM2, VN27, VPE5, VPE9, VSD4, VS49, VTH4, VWC, VWC9, VWE, VWT4, VXE2, VXE6, VXE7, VXE9, VXQ4
2	87516-Z4H-800	MARK, OPERATOR CAUTION (FRENCH)(MADE IN THAI)	1	1		
3	87521-ZF6-W03	EMBLEM (GX390 HONDA 13.0) ...	1	-	1284084	LXE8,LXU,PXE8,PXU,QAA2,QAA6,QAW,QA2,QA26,QDW9,QK4,QT1,QWA4,QWT2,QXC9,QXE8,QXQ4,QXU,SHQ4,SXE8, SXQ4,VKX4,VNG1,VPX4,VPX9,VSD7,VSD9,VXB7,VXB9,VXE8,VXG,VX8
4	87528-ZH7-000	MARK, CHOKE (GRAY)	1	1	-----	HA2,LKE,LXE4,LXE8,LXQ4,LXU,LX2,PAE2,PA2,PXD8,PXE8,PXU,QAA2,QAA6,QAE2,QAE6,QAW,QA2,QA26,QC2,QDW9,QE,QHB4,QKA4,QK4,QME0,QNB2,QNE2,QNE6,QNE8,QNR2,QNR6,QT1,QWA2,QWA4,QWC4,QWT2,QXB7,QXB9,QXC4,QXC6,QXC9,QXER,QXE4,QXE6,QXE7,QXE8,QXE9,QXH9,QXQ4,QXS4,QXU,QXUZ, SCK4, SHQ4, SMC1, SMD3, SME0, SME6, SM32, SNC, STC4, SWA4, SXB7, SXB9, SXE4, SXE8, SXQ4, SXU, VAC2, VAG2, VA2, VCN2, VDE2, VD2, VKB2, VK2, VM2, VNG1, VN27, VSD7, VSD9, VWC9, VWT4, VXB7, VXB9, VXE2, VXE6, VXE7, VXE8, VXE9, VXQ4, VX8

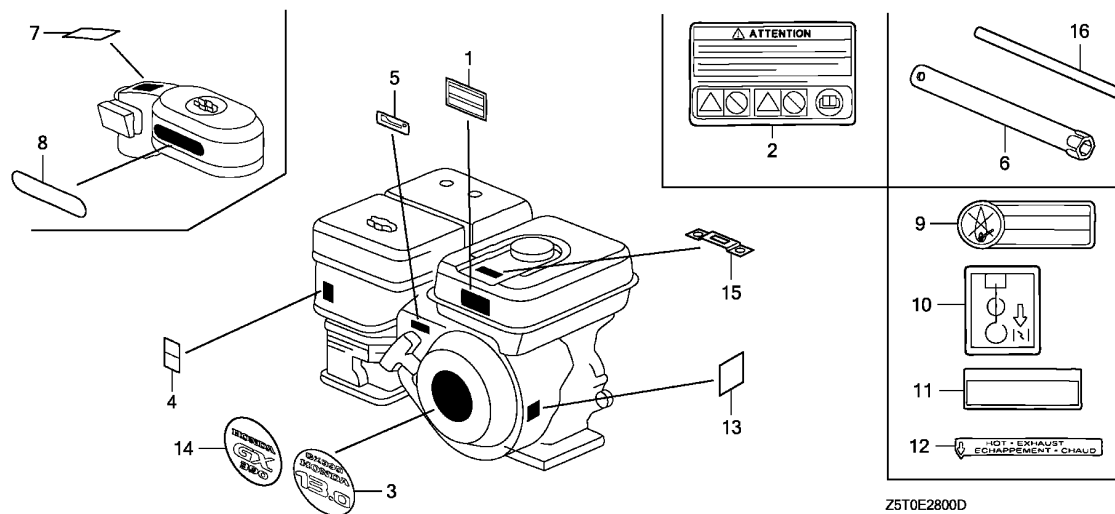


Z5T0E2800D

Ref. No.	Part No.	Description	Reqd. QTY		Serial No.	Parts catalogue code
			GX 390 UT1	GX 390 RT1		
5	87532-ZH7-000	MARK, THROTTLE INDICATION ...	1	1	-----	HA2,LKE,LXE4,LXE8,LXQ4,LXU,LX2,PAE2,PA2,PXD8,PXE8,PXU,QAA2,QAA6,QAE2,QAE6,QAW,QA2,QA26,QC2,QDW9,QE,QHB4,QKA4,QK4,QME0,QNB2,QNE2,QNE6,QNE8,QNR2,QNR6,QTT,QWA2,QWA4,QWC4,QWT2,QXB7,QXB9,QXC4,QXC6,QXC9,QXER,QXE4,QXE6,QXE7,QXE8,QXE9,QXH9,QXQ4,QXS4,QXU,QXUZ,SCK4,SHQ4,SMC1,SMD3,SME0,SME6,SM32,SNC,STC4,SWA4,SXB7,SXB9,SXE4,SXE8,SXQ4,SXU,VA2,VDE2,VM2,VNG1,VN27,VXB7,VXB9,VXE2,VXE6,VXE7,VXE9,VXQ4
6	89216-Z0T-800	WRENCH, SPARK PLUG	1	1	-----	HA2,PAE2,PA2,QAA2,QAA6,QAE2,QAE6,QA2,QA26,QNB2,QNE2,QNE6,QTT,QWA2,SMC1,SMD3,SM32,SNC,STC4,VA2,VD2,VKE4,VKX4,VM2,VNG1
	89218-ZE1-000	WRENCH COMP., SPARK PLUG	(1)	-	-----	QE,QHB4,QNE8,QNR2,QNR6
	89216-ZB4-000	WRENCH, PLUG	1	1	-----	QAW
7	87534-ZE1-841	LABEL, AIR CLEANER CAUTION ..	(1)	-	-----	VN27
8	87535-ZE1-841	MARK, AIR CLEANER SALES POINT	1	1	-----	VC2,VC2N,VXG
9	87522-883-660	MARK, CAUTION (ENGLISH/FRENCH/SPANISH)	1	1	-----	QC2,QDW9,QWA4,QWC4,QWT2,QXC6,QXC9,QXS4
10	87528-898-620	MARK, CHOKE	1	1	-----	QC2,QDW9,QWA4,QWC4,QWT2,QXC4,QXC6,QXC9,QXS4,SNC
11	87533-ZC0-630	MARK, AIR CLEANER	1	1	-----	VC2,VC2N,VWC,VWE,VXG
12	87539-898-620	MARK, EX. CAUTION (ENGLISH/FRENCH)	1	1	-----	VC2,VC2N,VEP9,VKE4,VKX4,VPE5,VPE9,VPX4,VPX9,VSD4,VS49,VTH4,VWC,VWE,VXG
13	87594-ZB4-A00	MARK, OIL CAUTION	1	1	-----	VC2,VC2N,VWC,VWE,VXG

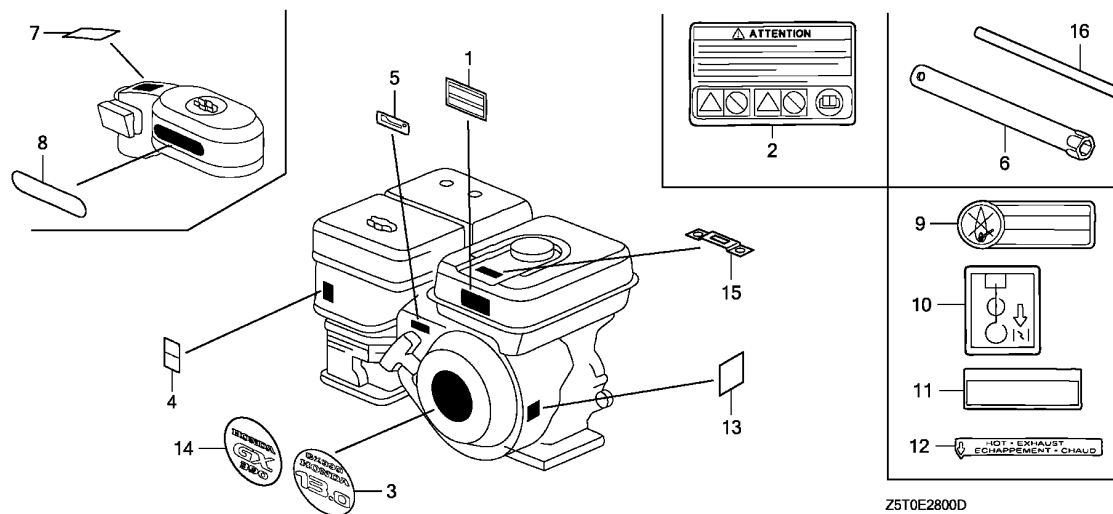


Ref. No.	Part No.	Description	Reqd. QTY		Serial No.	Parts catalogue code
			GX 390 UT1	GX 390 RT1		
14	87521-ZF6-W04	EMBLEM (HONDA GX390)	1	-	-----	HA2,LXE4,LXQ4,LX2,PAE2,PA2,PXD8,QAE2,QAE6,QC2,QE,QHB4,QKA4,QME0,QNE2,QNE6,QNE8,QNR2,QNR6,QWC4,QXB7,QXB9,QXC4,QXC6,QXER,QXE4,QXE6,QXE7,QXE9,QXH9,QXS4,QXUZ,SCK4,SMC1,SMD3,SMEO,SM32,SNC,STC4,SWA4,SXB7,SXB9,SXE4,SXU,VA2,VC2N,VM2,VN27,VXE2,VXE6,VXE7,VXE9,VXQ4
			1	-	1284085	-----LXE8,LXU,PXE8,PXU,QAA2,QAA6,QAW,QA2,QA26,QDW9,QK4,QTT,QWA4,QWT2,QXC9,QXE8,QXQ4,QXU,SHQ4,SXE8,SXQ4,VKX4,VNG1,VPX4,VPX9,VSD7,VSD9,VXB7,VXB9,VXE8,VXG,VX8
15	87565-ZE2-A01	MARK, FUEL INDICATION (PICTOGRAPH)	-	1	-----	STC4
	87565-ZE2-810	MARK, FUEL INDICATION (ENGLISH)	1	-	-----	VM2
16	89219-805-000	HANDLE, BOX WRENCH	1	-	-----	SM32

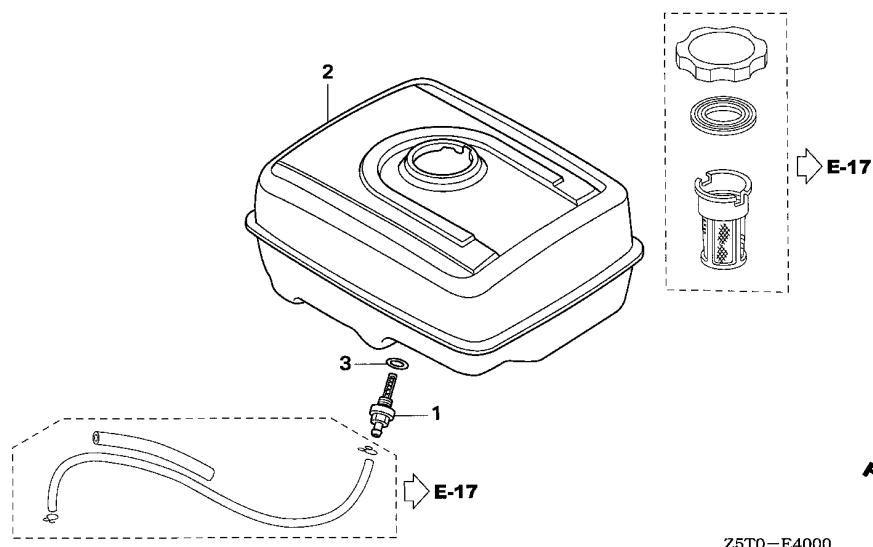

Ref. No. L.O.N. (Relative ref. Number) Description F.R.T.

NO INFORMATION


Ref. No.	Part No.	Description	Reqd. QTY		Serial No.	Parts catalogue code
			GX 390 UT1	GX 390 RT1		
1	16955-ZE1-000	JOINT, FUEL TANK	1	-	-----	LXE8,LXU,PXD8,PXE8,PXU,QAA2,QAA6,QAW,QA2,QA26,QDW9,QK4,QWA4,QWT2,QXC9 QXER,QXE8,QXQ4,QXU,QXUZ,SHQ4,SXE8,SXQ4,VXE8,VX8
2	17510-ZE3-020ZA	TANK COMP., FUEL *NH31*.....MCKINLEY WHITE	1	-	-----	1468775 LXE8,LXU,PXE8,PXU,QAA2,QAA6,QAW,QA2,QA26,QDW9,QK4,QWA4,QXC9,QXE8,QXQ4 QXU,SHQ4,SXE8,SXQ4,VXE8,VX8
	17510-ZE3-020ZB	*NH1*.....BLACK	1	-	-----	1468733 QAA2,QA2,QDW9,QWA4,QWT2,QXC9
	17510-ZE3-030ZA	*NH31*.....MCKINLEY WHITE	1	-	-----	PXD8,QXER,QXUZ
			1	-	1468776	----- LXE8,LXU,PXE8,PXU,QAA2,QAA6,QAW,QA2,QA26,QDW9,QK4,QWA4,QXC9,QXE8,QXQ4 QXU,SHQ4,SXE8,SXQ4,VXE8,VX8
	17510-ZE3-030ZB	*NH1*.....BLACK	1	-	1468734	----- QAA2,QA2,QDW9,QWA4,QWT2,QXC9
3	91353-671-004	O-RING, 14MM(NOK)	1	-	-----	LXE8,LXU,PXD8,PXE8,PXU,QAA2,QAA6,QAW,QA2,QA26,QDW9,QK4,QWA4,QWT2,QXC9 QXER,QXE8,QXQ4,QXU,QXUZ,SHQ4,SXE8,SXQ4,VXE8,VX8

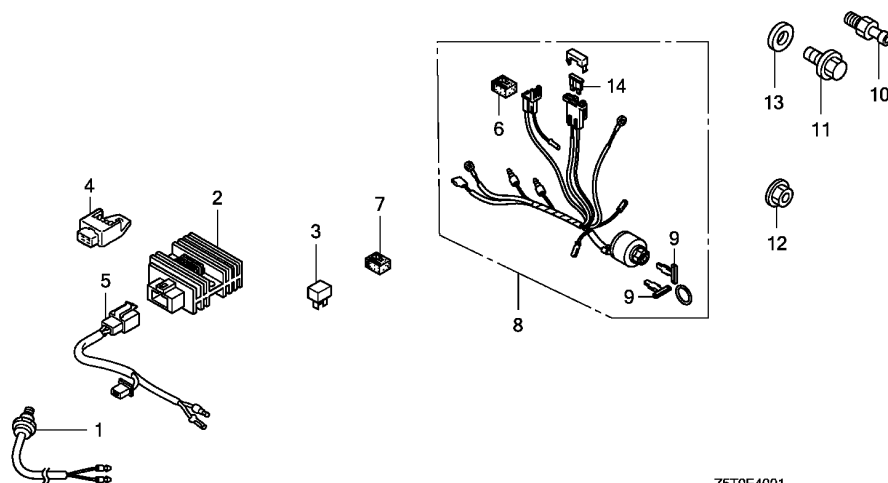

Ref. (Relative ref. Number)
No. L.O.N. Description F.R.T.

NO INFORMATION

Ref. No.	Part No.	Description	Reqd. QTY		Serial No.	Parts catalogue code
			GX 390 UT1	GX 390 RT1		
1	16500-ZE2-703	SWITCH, THERMO	-	1	-----	VKE4
2	31600-ZE2-861	RECTIFIER ASSY., REGULATOR (10A)	1	-	-----	QWC4
3	31700-124-008	RECTIFIER ASSY., SILICON (SHINDENGEN)	1	1	-----	QC2,VKE4,VPE5,VPE9,VSD4,VS49,VWE
4	31710-ZS9-A02	RECTIFIER ASSY.	-	1	-----	VEP9
5	32110-ZE2-860	HARNESS ASSY., SUB WIRE	1	-	-----	QWC4
6	32127-738-700	SUSPENSION, COUPLER	-	1	-----	VKE4,VSD4,VTH4
7	32127-738-700	SUSPENSION, COUPLER	-	1	-----	VPE5,VPE9,VS49
8	35100-ZE2-033	SWITCH ASSY., COMBINATION ...	-	1	-----	VSD4,VTH4
	35100-ZE2-843	SWITCH ASSY., COMBINATION (3A-CHARGE)	-	1	-----	VKE4
9	35111-880-013	KEY COMP.	-	2	-----	VKE4,VSD4,VTH4
10	90131-ZE3-790	PLUG, OIL DRAIN	2	-	-----	SM32
11	92800-12000	BOLT, DRAIN PLUG, 12MM	2	-	-----	SM32
12	94050-08000	NUT, FLANGE, 8MM	5	5	-----	VC2,VC2N,VEP9,VPE5,VPE9,VWC,VWE
13	94109-12000	WASHER, DRAIN PLUG, 12MM	2	-	-----	SM32
14	98200-30500	FUSE, BLADE (5A)	-	1	-----	VSD4,VTH4
	98200-31500	FUSE, BLADE (15A)	-	1	-----	VKE4

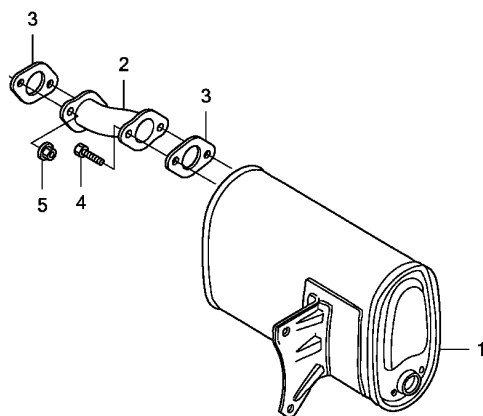

Z5T0E4002


Ref. No.	L.O.N.	(Relative ref. Number) Description	F.R.T.
1	3131C5	MUFFLER, EXHAUST	0.2
2	3131C9	PIPE, EXHAUST	0.2
3	3131B5	GASKET, EXHAUST PIPE	0.2
.NOTE: Same time for two units			

Ref. No.	Part No.	Description	Reqd. QTY		Serial No.	Parts catalogue code
			GX 390 UT1	GX 390 RT1		
1	18310-Z5T-V90	MUFFLER COMP.	-	1	-----	VEP9
2	18330-ZB8-003	PIPE COMP., EX.	-	1	-----	VEP9
3	18333-ZB7-800	GASKET, EX. PIPE	-	2	-----	VEP9
4	92101-08028-0A	BOLT, HEX., 8X28	-	2	-----	VEP9
5	94050-08000	NUT, FLANGE, 8MM	-	2	-----	VEP9

EOP-1

GASKET KIT

H11

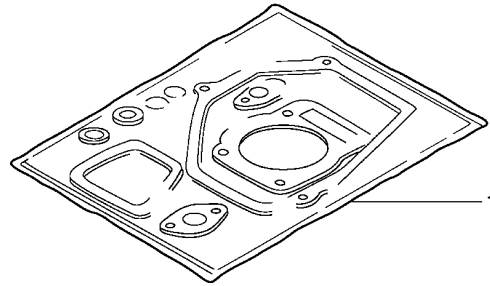

HENG-X0003

Ref. No.	L.O.N.	(Relative ref. Number) Description	F.R.T.
----------	--------	---------------------------------------	--------

NO INFORMATION

Ref. No.	Part No.	Description	Reqd. QTY		Serial No.	Parts catalogue code
			GX 390 UT1	GX 390 RT1		
1	06111-ZF6-R81	GASKET KIT	1	1	-----	LX2,QNR2,QNR6,VDE2,VM2

2

PART NO. INDEX

11

Part Number	Address	Page	Ref.	Part Number	Address	Page	Ref.	Part Number	Address	Page	Ref.	Part Number	Address	Page	Ref.	Part Number	Address	Page	Ref.
06000				13103-ZF6-W01	D16	44	2	15625-ZE1-003	D7	35	5	16230-ZE3-702	F1	61	16	16594-883-010	E15	59	31
06111-ZF6-R81	H11	103	1	13104-Z5T-000	D15	43	2	15721-ZB4-000	D3	31	13	16260-ZE2-723	F1	61	17		G15	91	25
				13104-ZF6-W00	D15	43	2					16260-ZE3-D21	F1	61	17	16599-ZG1-M10	G13	89	15
11000				13104-ZF6-W01	D16	44	2	16000				16260-ZE3-D22	F1	61	17	16610-ZE1-000	E12	56	18
				13111-ZF6-W00	D16	44	3					16260-ZF6-U70	F1	61	17	16611-ZE2-711	F1	61	26
11300-Z1C-000	D6	34	1	13200-Z1C-000	D16	44	4	16010-ZA0-921	E16	60	1	16261-ZE2-702	F1	61	18	16611-ZE3-D21	F1	61	26
11300-Z1C-600	D6	34	1	13200-Z1C-305	D16	44	4	16010-ZE2-812	E9	53	1	16262-ZE2-711	F1	61	19	16613-893-000	F1	61	27
11300-ZE3-614	D10	38	1	13200-ZE3-315	D16	44	4	16010-ZE3-701	E16	60	1	16263-ZA0-000	F1	61	20	16615-893-000	F1	61	28
11300-ZF6-W32	D10	38	1	13310-ZF6-W11	D11	39	1	16011-ZA0-931	E9	53	2	16264-ZE2-701	F1	61	21	16615-ZE2-810	E15	59	32
11381-ZE3-801	D6	34	2	13310-ZF6-W12	D11	39	1		E16	60	2	16265-ZE2-721	F1	61	22	16731-ZE2-003	E7	51	1
	D10	38	2	13310-ZF6-W21	D11	39	2	16013-Z1C-003	E9	53	3	16268-893-000	G16	92	1	16854-ZH8-000	F14	74	1
11500-Z8T-640	H4	96	1	13310-ZF6-W22	D11	39	2		E16	60	3	16268-ZE2-721	F1	61	23		F16	76	1
11500-ZE3-611	H4	96	1	13310-ZF6-W32	D12	40	11	16013-ZA0-931	E9	53	3	16269-ZA0-800	F1	61	24	16910-GB2-005	F16	76	2
11521-ZE2-800	H4	96	2	13310-ZF6-W41	D11	39	3		E16	60	3	16271-ZE2-010	F4	64	1	16910-ZE8-015	F16	76	2
				13310-ZF6-W42	D11	39	3	16015-ZA0-931	E16	60	4		F6	66	1	16950-ZB4-015	G3	79	2
12000				13310-ZF6-W61	D11	39	4	16015-ZE8-005	E10	54	4	16400-ZE2-703	F1	61	25	16952-ZB4-005	G3	79	3
				13310-ZF6-W62	D11	39	4	16016-ZH7-W01	E10	54	5	16400-ZE2-704	F1	61	25	16953-ZE1-812	E13	57	19
12000-Z1C-405	D4	32	1	13310-ZF6-W71	D11	39	5	16016-ZH8-W01	E16	60	5	16500-ZE2-703	H9	101	1	16954-ZE1-812	E13	57	20
12000-Z1C-406	D4	32	1	13310-ZF6-W72	D11	39	5	16024-124-760	E16	60	6	16510-ZE3-000	D7	35	6	16955-ZE1-000	F16	76	3
12000-Z1C-407	D4	32	1	13310-ZK6-020	D11	39	5	16024-ZE1-811	E10	54	6		D10	38	6		H8	100	1
12000-ZF6-416	D4	32	1	13310-ZK6-602	D11	39	1	16028-ZA0-701	E16	60	7	16511-ZE8-000	D8	36	15	16956-ZE1-811	E13	57	21
12000-ZF6-417	D4	32	1	13310-ZK6-672	D11	39	3	16028-ZA0-931	E16	60	7		D10	38	16	16957-ZE1-812	E13	57	22
12000-ZF6-435	D4	32	1	13351-ZE3-010	D11	39	6	16028-ZE0-005	E10	54	7	16512-ZE3-000	D9	37	16	16958-397-771	G3	79	4
12200-Z1C-406	D1	29	1					16044-ZE3-W20	E11	55	8		D10	38	17	16959-471-831	G3	79	5
12200-ZF6-406	D1	29	1	14000				16100-Z1C-V01	E11	55	9	16513-ZE2-000	D9	37	17	16967-GA6-671	G3	79	6
12204-ZE2-306	D1	29	2	14100-ZF6-W01	E1	45	2	16100-Z1C-V51	E11	55	9		D10	38	18	16967-ZE0-811	E13	57	23
12205-ZE2-305	D1	29	3	14100-ZK6-870	E1	45	2	16100-Z5R-U71	E16	60	8	16531-Z0A-000	D7	35	7				
12209-ZE8-003	E1	45	1	14100-ZK6-880	E1	45	2	16100-Z5S-U31	E16	60	8		D10	38	7	17000			
12216-ZE2-300	D1	29	4	14410-Z1C-000	E1	45	3	16100-Z5S-U32	E16	60	8	16541-ZE3-010	D4	32	3				
12251-Z1C-801	D1	29	5	14410-ZK6-880	E2	46	18	16100-Z5T-741	E16	60	8	16550-ZE3-700	G15	91	28	17210-ZE3-010	F4	64	2
12251-ZF6-W00	D1	29	5	14431-ZE2-010	E1	45	4	16100-Z5T-801	E11	55	9	16551-ZE3-000	G12	88	1		F6	66	2
12310-ZE2-020	D2	30	6	14441-ZE2-000	E1	45	5	16100-Z5T-811	E11	55	9	16555-ZE3-000	G12	88	2	17211-899-000	F7	67	1
12310-ZE3-791	D1	29	6	14451-ZE1-013	E1	45	6	16100-Z5T-P81	E11	55	9	16561-ZE3-000	G12	88	3	17212-Z5R-000	F7	67	2
12315-ZE3-840	D3	31	13	14568-ZE1-000	E1	45	7	16100-Z5T-P91	E16	60	8	16561-ZE3-710	G12	88	3	17212-ZB4-003	F7	67	2
12391-ZE2-020	D2	30	7	14711-ZE3-000	E1	45	8	16100-Z5T-U31	E16	60	8	16561-ZF6-T21	G12	88	3	17218-ZE3-000	F4	64	3
				14721-ZE3-000	E1	45	9	16100-Z5T-U71	E16	60	8	16561-ZF6-W32	G12	88	3		F6	66	3
13000				14751-Z1C-000	E1	45	10	16100-ZF6-V21	E11	55	9	16562-ZE3-000	G12	88	4	17219-ZE3-840	F6	66	4
				14771-Z8S-000	E2	46	11	16124-ZE0-005	E11	55	10	16562-ZE3-700	G12	88	4	17220-Z5R-000	F7	67	3
13010-Z1C-800	D13	41	1	14771-ZE2-000	E1	45	11	16148-141-881	E16	60	10	16570-ZE3-700	G15	91	29	17220-ZB4-003	F7	67	3
13010-Z5R-004	D13	41	1	14773-Z8S-000	E2	46	12	16166-ZF6-005	E16	60	11	16570-ZE3-721	G13	89	6	17222-ZC2-000	F7	67	4
13010-Z5T-003	D13	41	1	14773-ZE2-000	E2	46	12	16166-ZF6-V00	E11	55	11	16570-ZE3-W00	G13	89	5	17230-ZE3-841	F6	66	5
13011-Z1C-800	D13	41	1	14775-ZE2-010	E2	46	13	16166-ZF6-W10	E11	55	11	16570-ZE3-W10	G14	90	24	17231-899-000	F7	67	5
13011-Z5R-004	D14	42	1	14781-ZE2-000	E2	46	14	16166-ZF6-W20	E11	55	11	16570-ZE3-W20	G13	89	5	17231-ZE3-W01	F4	64	4
13011-Z5T-003	D14	42	1	14791-ZE2-010	E2	46	15	16172-ZE3-W10	E11	55	12	16570-ZE3-W30	G13	89	5	17232-891-000	F5	65	5
13012-Z1C-800	D13	41	1	14791-ZK6-880	E2	46	19		F1	61	12	16570-ZE3-W40	G14	90	24		F6	66	6
13012-Z5R-004	D14	42	1					16173-001-004	E11	55	13	16570-ZK3-720	G13	89	5	17232-898-000	F7	67	12
13012-Z5T-003	D14	42	1	15000					G3	79	1	16570-ZK3-870	G13	89	5	17233-896-701	F8	68	1
13013-Z1C-800	D13	41	1	15510-ZE2-043	D4	32	2	16199-ZA0-930	F3	63	50	16570-ZK3-D21	G13	89	6	17235-899-000	F7	67	6
13013-Z5R-004	D15	43	1	15510-ZE2-053	D4	32	2	16211-ZF6-000	E11	55	14	16571-ZE3-W00	G13	89	7	17235-Z5R-800	F5	65	6
13013-Z5T-003	D15	43	1	15600-735-003	D7	35	4		F1	61	13	16571-ZE3-W10	G13	89	7	17235-ZH9-N01	F5	65	6
13101-Z5T-000	D15	43	2	15600-Z0T-820	D6	34	3	16211-ZF6-D40	E15	59	28	16574-ZE1-000	G13	89	8	17236-899-000	F7	67	7
13101-ZF6-W00	D15	43	2		D10	38	3		F1	61	13	16575-ZE2-W00	G13	89	9	17238-ZE2-310	F5	65	7
13101-ZF6-W01	D15	43	2	15600-Z1C-000	D6	34	4	16220-ZA0-702	E12	56	15	16576-891-000	E15	59	29		F6	66	7
13102-Z5T-000	D15	43	2		D10	38	4	16221-ZF6-800	E12	56	16		G13	89	10	17239-ZE1-000	F5	65	8
13102-ZF6-W00	D15	43	2	15600-ZG4-003	D6	34	3		F1	61	14	16578-ZE1-000	G13	89	11	17239-ZE3-840	F6	66	8
13102-ZF6-W01	D15	43	2	15625-Z0T-800	D7	35	5	16223-ZE3-W00	E12	56	17	16581-ZE3-W00	G13	89	12	17252-899-000	F7	67	8
13103-Z5T-000	D15	43	2		D10	38	5		F1	61	15	16584-883-300	G13	89	13	17316-611-000	D3	31	16
13103-ZF6-W00	D15	43	2					16230-ZE3-701	F1	61	16	16590-ZE2-812	E15	59	30	17367-413-690	F7	67	9
												16592-883-310	G13	89	14	17410-ZE3-840	F6	66	9

PART NO. INDEX

13

Part Number	Address	Page	Ref.	Part Number	Address	Page	Ref.	Part Number	Address	Page	Ref.	Part Number	Address	Page	Ref.	Part Number	Address	Page	Ref.
87532-ZH7-000	H6	98	5		F13	73	12	91001-ZF6-013	D12	40	10	94000				95701-08040-00	D8	36	12
87533-ZC0-630	H6	98	11				13	91006-MT3-003	H4	96	10						D10	38	12
87534-ZE1-841	H6	98	7				14	91009-KJ1-003	D10	38	10	94001-04390-0S	H3	95	22		H4	96	9
87535-ZE1-841	H6	98	8	90050-ZE3-H00	F13	73	12		H4	96	6	94050-05000	F7	67	10	95701-10080-00	D3	31	14
87539-898-620	H6	98	12	90050-ZH8-W40	F11	71	22	91102-GE0-003	D10	38	14	94050-06000	F2	62	40				
87565-ZE2-810	H7	99	15	90055-ZE1-000	F11	71	20	91201-890-003	H4	96	7		F5	65	13	96000			
87565-ZE2-A01	H7	99	15				23	91201-Z1C-003	D5	33	8		F6	66	16				
87594-ZB4-A00	H6	98	13		F13	73	14		D7	35	10		F7	67	11	96100-62020-00	D5	33	15
							15	91201-Z1D-003	H4	96	7		G14	90	23		D8	36	13
88000				90107-959-003	D11	39	7	91203-952-771	D5	33	9	94050-08000	F11	71	28		D10	38	13
				90110-ZE2-003	G11	87	16	91353-671-004	D5	33	10		F12	72	10	96100-62040-00	D10	38	14
88911-MJ3-000	F1	61	32	90114-SAO-000	G14	90	19		G1	77	12		F13	73	16	96100-62060-00	H4	96	10
				90131-883-000	D5	33	6		H8	100	3		F14	74	5	96100-62070-00	D8	36	14
89000				90131-ZE3-790	H9	101	10	91406-ZE2-003	H3	95	19		G1	77	15		D10	38	15
				90142-MB0-000	F6	66	14	91424-Z4G-822	G1	77	13		H9	101	12	96100-63020-00	H4	96	6
89216-Z0T-800	H6	98	6	90201-ZE3-790	G5	81	6	91424-Z4J-812	G1	77	14		H10	102	5	96205-04005	E15	59	37
89216-ZB4-000	H6	98	6	90201-ZE3-V00	G5	81	6	91424-Z4J-822	G1	77	14	94050-10000	D5	33	11				
89218-ZE1-000	H6	98	6	90203-ZA0-800	F5	65	11	91424-Z4K-801	G1	77	13	94070-06080	G11	87	19	98000			
89219-805-000	H7	99	16	90206-ZE1-000	E2	46	17	91424-Z4K-802	G1	77	13	94101-04800	H3	95	23				
				90301-782-000	F11	71	24	91424-Z5L-801	F14	74	6	94101-06800	D7	35	11	98079-55841	D3	31	15
90000				90302-KF9-900	F11	71	25		G1	77	14		D10	38	11	98079-55846	D3	31	15
				90325-044-000	F5	65	12	91424-Z5L-802	F14	74	6	94103-05000	F2	62	41	98079-55855	D3	31	15
90001-ZE8-000	D16	44	5		F6	66	15		G1	77	14	94103-05700	F11	71	29	98079-55876	D3	31	15
90002-Z0T-800	F12	72	9	90380-MA6-010	H3	95	16	91424-Z5L-822	G1	77	14	94103-08000	F12	72	13	98079-56876	D3	31	15
90002-ZE2-U91	F12	72	9	90413-ZK6-880	E2	46	20	91424-Z5R-801	F14	74	6	94109-12000	D5	33	12	98200-30500	H3	95	25
90004-ZE2-W01	E6	50	11	90431-ZE2-700	F1	61	33	91424-Z5S-802	G1	77	13		H9	101	13		H9	101	14
90006-ZE2-000	F10	70	17	90432-ZE2-700	F1	61	34	91551-898-000	G3	79	16	94111-04800	H3	95	24	98200-31500	H3	95	25
90007-ZE2-003	G11	87	15	90433-ZE2-700	F2	62	35	91601-ZE2-003	G11	87	17	94111-05000	F11	71	30		H9	101	14
90008-ZE2-003	E6	50	12	90434-ZE2-700	F2	62	36					94251-10000	D5	33	13	98200-32500	H3	95	25
	E8	52	10	90441-ZE2-010	D2	30	10	92000				94301-08140	H4	96	8				
	G1	77	10	90446-KE1-000	D5	33	7					94301-12200	D3	31	12	99000			
90009-Z1C-000	F5	65	10	90473-842-000	D11	39	8	92101-08025-0A	D11	39	7	94305-20122	E13	57	25				
	F6	66	13	90473-ZE3-010	D11	39	8	92101-08028-0A	H10	102	4	94540-02010	F2	62	42	99101-ZH8-0880	E13	57	26
90012-888-000	G7	83	8	90503-898-000	G3	79	13	92800-12000	H9	101	11	94540-04010	F2	62	43	99101-ZH8-0900	E14	58	26
				90534-706-010	D11	39	8	92900-08032-0E	D2	30	11	94540-07010	F2	62	44	99101-ZH8-0920	E14	58	26
	G8	84	7	90601-ZE3-000	D16	44	6									99101-ZH8-0950	E14	58	26
90012-ZE0-010	E2	46	16	90602-ZE1-000	D7	35	8	93000				95000				99101-ZH8-0980	E14	58	26
90013-883-000	D5	33	5		D10	38	8									F2	62	48	
	E8	52	7	90605-230-000	E15	59	33	93500-03006-1H	E13	57	24	95001-35025-40	E15	59	36	99101-ZH8-1000	E14	58	26
	F10	70	18		G15	91	26	93500-03012-0H	H3	95	20	95001-45235-40	F14	74	6		F2	62	48
	G7	83	7	90630-751-000	H3	95	17	93500-04006-0H	E15	59	34	95001-45300-40	F3	63	51	99101-ZH8-1020	F3	63	48
	G8	84	8	90634-ZL8-H00	F5	65	14		G15	91	27	95002-02070	F2	62	45	99101-ZH8-1050	F3	63	48
	G14	90	16		F7	67	13	93500-04012-0H	H3	95	21	95002-02080	F3	63	52	99101-ZH8-1080	F3	63	48
	G16	92	4	90650-SD9-003	F2	62	37	93500-05008-0A	G16	92	5		F14	74	7	99101-ZH8-1100	E14	58	26
	H3	95	15	90672-SAO-003	H3	95	18	93500-05012-0A	F2	62	38	95002-40800-08	F14	74	9	99101-ZH8-1120	E14	58	26
90014-ZE2-000	D2	30	8	90684-ZA0-601	G7	83	10	93500-05016-0A	G14	90	20		G1	77	16	99101-ZH8-1150	E14	58	26
90014-ZE6-000	G7	83	8	90701-HC4-000	D7	35	9	93500-05032-0A	G14	90	21	95002-41050-08	G2	78	25	99204-ZA0-0400	E15	59	27
90015-883-000	G7	83	9		D10	38	9	93500-05035-0A	G15	91	30	95005-11105-30	D3	31	13	99204-ZA0-0450	E14	58	27
	G8	84	9	90741-805-000	D12	40	9	93500-05045-0A	G14	90	22	95005-35075-10	F2	62	46		F3	63	49
90015-ZE5-010	G14	90	17	90741-889-810	D12	40	9	93600-05010-0A	G2	78	24	95005-35130-10	F2	62	47	99204-ZE2-0400	E15	59	27
90016-ZG9-N30	G14	90	18	90741-ZE2-000	G5	81	7		G3	79	17	95701-06010-00	F12	72	14				
90018-ZK6-P10	D2	30	11	90745-ZE2-600	D12	40	9	93891-05012-00	F11	71	26	95701-06012-00	D5	33	14				
90042-ZE3-700	D2	30	9	90851-898-000	G3	79	14	93891-06020-07	F11	71	27	95701-06022-00	G3	79	18				
90042-ZE8-000	D2	30	9	90854-ZB2-000	G3	79	15	93892-05012-18	F2	62	39	95701-08016-08	F12	72	15				
90047-ZE3-791	D3	31	11	90854-ZB3-000	G1	77	11	93892-05032-18	G11	87	18	95701-08020-00	F12	72	11				
90050-ZE1-000	F10	70	19					93893-05016-00	E15	59	35	95701-08025-00	D11	39	7				
	F11	71	20	91000									F14	74	8				
			21										G1	77	17				
			33	91001-ZF6-003	D12	40	10					95701-08035-08	G11	87	20				

PART NAME INDEX

J 1

Part name	Address	Page	Ref.	Part name	Address	Page	Ref.	Part name	Address	Page	Ref.
[A]				BOLT, FLANGE, 8X20	F12	72	11	CLAMPER, CORD	G8	84	3
ALERT UNIT, OIL	D4	32	4	BOLT, FLANGE, 8X25	D11	39	7	CLAMP, TUBE	F14	74	9
	D5	33	4		F14	74	8		G1	77	16
	H2	94	9		G1	77	17		G2	78	25
ARMATURE COMP.	G9	85	2	BOLT, FLANGE, 8X35	G11	87	20	CLIP A, AIR CLEANER WIRE	F7	67	6
ARM COMP., GOVERNOR	G15	91	28	BOLT, FLANGE, 8X40	D8	36	12	CLIP B, AIR CLEANER WIRE	F7	67	7
ARM, GOVERNOR	G12	88	1		D10	38	12	CLIP, BREATHER TUBE	D3	31	16
ARM, VALVE ROCKER	E1	45	4		H4	96	9	CLIP, GOVERNOR HOLDER	D7	35	8
ARRESTER, SPARK	F9	69	8	BOLT, GOVERNOR ARM	G14	90	17		D10	38	8
	F12	72	8	BOLT, HEAD COVER	D2	30	8	CLIP, HARNESS	G7	83	10
	F13	73	8	BOLT, HEX., 8X25	D11	39	7	CLIP, PISTON PIN, 20MM	D16	44	6
[B]				BOLT, HEX., 8X28	H10	102	4	CLIP, PURSE LOCK	H3	95	17
				BOLT, PIVOT, 8MM	E2	46	16	CLIP, TUBE	E7	51	1
BAND	H2	94	8	BOLT, STUD, 8X106	D2	30	9		F2	62	45
BARREL ASSY., CYLINDER	D4	32	1	BOLT, STUD, 8X131.5	D2	30	9		F3	63	52
BASE COMP., CONTROL	G13	89	12	BOLT, STUD, 8X22	D2	30	11		F14	74	7
BASE COMP., MUFFLER COVER	F9	69	13	BOLT, STUD, 8X32	D2	30	11	CLIP, VALVE GUIDE	D1	29	4
BEARING, RADIAL BALL, 6202 ...	D5	33	15	BOLT, STUD, 8X40	D3	31	11	CLIP, WIRE HARNESS	F2	62	37
	D8	36	13	BOX ASSY., CONTROL	H1	93	1	CLUTCH COMP., OVERRUNNING	G9	85	3
	D10	38	10	BRACKET, CASE MOUNTING	H1	93	3	COCK ASSY., FUEL	G3	79	2
				BRACKET, CENTER	G9	85	5	COIL ASSY., CHARGE	G7	83	5
				BRACKET, FR.	G9	85	6				
	H4	96	6	BRUSH	G10	86	8		G8	84	5
BEARING, RADIAL BALL, 6204 ...	D10	38	14	BUSH, ARM PIVOT	F1	61	31	COIL ASSY., IGNITION	G6	82	1
BEARING, RADIAL BALL, 6206 ...	H4	96	10	[C]					G8	84	1
BEARING, RADIAL BALL, 6207 ...	D8	36	14	CAMSHAFT ASSY.	E1	45	2	COIL ASSY., LAMP	G7	83	12
	D10	38	15	CAP ASSY., NOISE SUPPRESSOR ...	G6	82	2	COLLAR B, AIR CLEANER	F5	65	8
BEARING, RADIAL BALL, 6207S ..	D12	40	10		G7	83	11		F6	66	8
BEARING, RADIAL BALL, 6207SH ..	D12	40	10		G8	84	2	COLLAR, AIR CLEANER	F5	65	7
BEARING, RADIAL BALL, 6302 ...	H4	96	6		G8	84	2	COLLAR, AIR CLEANER CASE	F6	66	7
BOLT-WASHER, 5X14	G11	87	15	CAP ASSY., OIL FILLER	D6	34	3	COLLAR, LEVER	F2	62	36
BOLT-WASHER, 6X22	F5	65	10					COLLAR, SETTING	E11	55	12
	F6	66	13		D7	35	4		F1	61	12
BOLT, CONNECTING ROD	D16	44	5		D10	38	3	COLLAR, STOPPER	G13	89	15
BOLT, DRAIN PLUG, 12MM	H9	101	11					COLLAR, TANK CUSHION	G3	79	16
BOLT, DRAIN PLUG, 12X15	D5	33	6	CAP COMP., FUEL FILLER	F14	74	2	CONTACTOR ASSY.	G9	85	1
BOLT, FLANGE, 10X80	D3	31	14		F15	75	10	CONTROL ASSY.	G13	89	5
BOLT, FLANGE, 6X10	E6	50	12		G1	77	8				
	E8	52	10						G14	90	24
	F12	72	14		G3	79	9		G15	91	29
	G1	77	10	CAP, CHOKE DUST	E16	60	10	CORD, STOP SWITCH	G7	83	6
BOLT, FLANGE, 6X12	D5	33	5	CAP, MUFFLER	F9	69	6		G8	84	6
					F13	73	5	COUNTERSHAFT COMP.	H4	96	4
	E8	52	7	CAP, PRE AIR CLEANER	F6	66	11	COVER ASSY., CRANKCASE	D6	34	1
	F10	70	18	CAP, SEALING	F5	65	14		D10	38	1
	G7	83	7		F7	67	13	COVER ASSY., GEAR CASE	H4	96	1
	G8	84	8	CARBURETOR ASSY.	E11	55	9	COVER COMP., AIR CLEANER	F6	66	5
	G14	90	16		E16	60	8		F7	67	5
	G16	92	4	CASE COMP., AIR CLEANER	F7	67	3	COVER COMP., FAN	E7	51	2
	H3	95	15	CASE COMP., PRE AIR CLEANER ...	F6	66	10	COVER COMP., HEAD	D1	29	6
BOLT, FLANGE, 6X22	G3	79	18	CASE COMP., RECOIL STARTER ...	E4	48	2		D2	30	6
BOLT, FLANGE, 6X28	G7	83	9	CASE, CONTROL	H1	93	2	COVER COMP., MUFFLER	F9	69	11
	G8	84	9	CHAMBER SET, FLOAT	E10	54	4	COVER COMP., RR. MUFFLER	F9	69	12
BOLT, FLANGE, 6X35	G7	83	8		E16	60	4	COVER, AIR CLEANER	F4	64	4
BOLT, FLANGE, 6X40	G7	83	8	CHOKE SET	E11	55	8	CRANKSHAFT COMP.	D11	39	1
				CIRCLIP, 5MM	E15	59	33				
	G8	84	7		G15	91	26				
BOLT, FLANGE, 8X16	F12	72	15	CLAMPER, CORD	G6	82	3				

PART NAME INDEX

J 2

Part name	Address	Page	Ref.	Part name	Address	Page	Ref.	Part name	Address	Page	Ref.
CRANKSHAFT COMP.	D11	39	5	GASKET, EX. PIPE	H10	102	3	JET, MAIN,	F3	63	48
	D12	40	11	GASKET, MUFFLER	F9	69	9	JOINT, FUEL TANK	F16	76	3
CUP, FUEL STRAINER	E13	57	23				10		H8	100	1
	G3	79	6		F13	73	9	JOINT, ROD	F1	61	20
							10				
[D]				GAUGE ASSY., FUEL	G2	78	21	[K]			
DEFLECTOR COMP., MUFFLER	F11	71	32	GEAR, DRIVE PINION	G10	86	7	KEY COMP.	H3	95	11
	F13	73	11	GEAR, PRIMARY DRIVE	H4	96	3		H9	101	9
DIAPHRAGM ASSY.	F1	61	25	GEAR, REDUCTION	G10	86	11	KEY, 6.3X6.3X43	D12	40	9
DOWEL PIN, 12X20	D3	31	12	GOVERNOR ASSY.	D7	35	6	KEY, 7X7X33	D12	40	9
DOWEL PIN, 8X12	D7	35	9		D10	38	6	KEY, SPECIAL WOODRUFF, 25X18 ..	G5	81	7
DOWEL PIN, 8X14	D10	38	9	GRIP, STARTER	E5	49	9				
	H4	96	8	GROMMET, AIR CLEANER	F5	65	5				
					F6	66	6				
[E]					F7	67	12	[L]			
ELBOW COMP., AIR CLEANER	F5	65	9	GROMMET, CHOKE ROD	F1	61	27	LABEL, AIR CLEANER CAUTION	H6	98	7
	F6	66	9	GROMMET, CORD	G7	83	4	LENS ASSY., PROTECTOR	H3	95	13
ELEMENT, AIR CLEANER	F4	64	2		G8	84	4	LEVER COMP., CHOKE	E12	56	18
	F6	66	2	GROMMET, DRAIN HOLE	E8	52	6	LEVER COMP., THROTTLE	G16	92	2
	F7	67	1	GROMMET, FENDER	F1	61	32	LEVER, CHOKE	F1	61	19
EMBLEM	H5	97	3	GUIDE, CHOKE ROD	F1	61	28	LEVER, COCK	E13	57	19
	H7	99	14	GUIDE, EX. VALVE	D1	29	3	LEVER, CONTROL	G13	89	7
E-RING, 2MM	F2	62	42	GUIDE, IN. VALVE	D1	29	2	LIFTER, VALVE	E1	45	5
E-RING, 4MM	F2	62	43	GUIDE, PRE AIR CLEANER	F6	66	12				
E-RING, 7MM	F2	62	44	GUIDE, PUSH ROD	E2	46	15				
							19	[M]			
[F]				[H]				MARK, AIR CLEANER	H6	98	11
FAN, COOLING	G4	80	1	HANDLE, BOX WRENCH	H7	99	16	MARK, AIR CLEANER SALES POINT ..	H6	98	8
FILTER, CUP	G3	79	5	HARNESS ASSY., SUB WIRE	H3	95	28	MARK, CAUTION	H6	98	9
FILTER, DRAIN TUBE	F7	67	9				29	MARK, CHOKE	H5	97	4
FILTER, FUEL	F14	74	4		H9	101	5	MARK, CONTROL BOX	H3	95	14
	F15	75	11	HARNESS, SUB WIRE	H2	94	7	MARK, EX. CAUTION	H6	98	12
	G2	78	22	HEAD COMP., CYLINDER	D1	29	1	MARK, FUEL INDICATION	H7	99	15
	G3	79	11	HOLDER, BRUSH	G10	86	12	MARK, OIL CAUTION	H6	98	13
FILTER, OUTER	F4	64	3	HOLDER, CABLE	E15	59	29	MARK, OPERATOR CAUTION	H5	97	1
	F6	66	3		G13	89	10				
FLANGE COMP., BAFFLE	F13	73	7	HOLDER, GOVERNOR WEIGHT	D9	37	16	MARK, THROTTLE INDICATION	H6	98	5
FLOAT SET	E9	53	3		D10	38	17	METER ASSY., FUEL	G3	79	7
	E16	60	3	HOLDER, STOP SWITCH CORD	E7	51	5	MOTOR UNIT, STARTER	G9	85	4
FLYWHEEL COMP.	G4	80	4	HOLDER, WIRE	E15	59	31	MUFFLER COMP.	F8	68	2
			5		G15	91	25		F12	72	1
	G5	81	5								12
FUSE, BLADE	H3	95	25	[I]					F13	73	1
	H9	101	14	INSULATOR	G11	87	14		H10	102	1
				INSULATOR, CARBURETOR	E11	55	14	[N]			
[G]					E15	59	28	NOSE, SILENCER	F5	65	6
GASKET KIT	H11	103	1		F1	61	13	NOZZLE, MAIN	E11	55	11
GASKET SET	E9	53	1						E16	60	11
	E16	60	1	[J]				NUT-WASHER, 6MM	G11	87	19
GASKET, CYLINDER HEAD	D1	29	5	JET SET, PILOT,	E14	58	27	NUT, FLANGE, 10MM	D5	33	11
GASKET, EX. PIPE	F9	69	7		E15	59	27	NUT, FLANGE, 5MM	F7	67	10
	F11	71	31		F3	63	49	NUT, FLANGE, 6MM	F2	62	40
	F12	72	6	JET, MAIN,	E13	57	26		F5	65	13
			7		E14	58	26		F6	66	16
	F13	73	6		F2	62	48		F7	67	11
									G14	90	23

PART NAME INDEX

J 3

Part name	Address	Page	Ref.	Part name	Address	Page	Ref.	Part name	Address	Page	Ref.
NUT, FLANGE, 8MM	F11	71	28	PIN, SPRING, 2X12	E13	57	25	[S]			
	F12	72	10	PIPE COMP., EX.	H10	102	2	SCREEN SET, FUEL STRAINER	G3	79	3
	F13	73	16	PIPE, EX.	F8	68	5	SCREW-WASHER, 4X6	G11	87	16
	F14	74	5		F12	72	5	SCREW-WASHER, 5X12	F2	62	39
	G1	77	15		F13	73	4		F11	71	26
	H9	101	12	PISTON	D15	43	2	SCREW-WASHER, 5X16	E15	59	35
	H10	102	5		D16	44	2	SCREW-WASHER, 5X32	G11	87	18
NUT, HEX., 4MM	H3	95	22	PIVOT, ROCKER ARM	E1	45	6	SCREW-WASHER, 6X20	F11	71	27
NUT, HEX., 5MM	F11	71	25	PLATE, COOLING FAN SETTING	G5	81	8	SCREW SET	E10	54	7
NUT, PIVOT ADJUSTING	E2	46	17	PLATE, LEVER SETTING	E13	57	20		E16	60	5
NUT, SELF-LOCK, 6MM	G14	90	19	PLATE, SET	F10	70	15				
NUT, SPECIAL, 16MM	G5	81	6	PLUG, CONE TYPE, 4X5	E15	59	37	SCREW SET, DRAIN	E10	54	6
NUT, TANK MOUNTING	G1	77	6	PLUG, OIL DRAIN	H9	101	10		E16	60	6
NUT, TOOL BOX SETTING	F5	65	12	PLUG, SPARK	D3	31	15	SCREW SET, PILOT	E10	54	5
	F6	66	15	PROTECTOR COMP., FAN COVER	E8	52	9	SCREW, CENTER	E6	50	11
NUT, U, 6MM	F11	71	24	PROTECTOR COMP., MUFFLER	F8	68	3	SCREW, FLAT, 5X10	G2	78	24
NUT, WING, 6MM	F5	65	11	PROTECTOR, CIRCUIT	H3	95	12		G3	79	17
				PROTECTOR, EX. PIPE	F8	68	4	SCREW, PAN, 3X12	H3	95	20
[O]				PROTECTOR, L. MUFFLER	F13	73	3	SCREW, PAN, 3X6	E13	57	24
OIL SEAL, 30X46X8	H4	96	7	PROTECTOR, MUFFLER INNER	F12	72	3	SCREW, PAN, 4X12	H3	95	21
OIL SEAL, 35X52X8	D5	33	8	PROTECTOR, MUFFLER OUTER	F12	72	2	SCREW, PAN, 4X6	E15	59	34
	D7	35	10	PROTECTOR, R. MUFFLER	F13	73	2		G15	91	27
OIL SEAL, 8X14X5	D5	33	9	PULLEY COMP., STARTER	G4	80	2	SCREW, PAN, 5X12	F2	62	38
O-RING, 14MM	D5	33	10	PULLEY, RECOIL STARTER	E5	49	3	SCREW, PAN, 5X16	G14	90	20
	G1	77	12	PULLEY, STARTER	G4	80	3	SCREW, PAN, 5X16.5	F6	66	14
	H8	100	3					SCREW, PAN, 5X32	G14	90	21
O-RING, 9.0X1.3	G3	79	4	[R]				SCREW, PAN, 5X35	G15	91	30
				RATCHET, STARTER	E5	49	4	SCREW, PAN, 5X45	G14	90	22
[P]				RECTIFIER ASSY.	H9	101	4	SCREW, PAN, 5X8	G16	92	5
PACKING	G11	87	17	RECTIFIER ASSY., REGULATOR	H3	95	26	SCREW, RECESSED, 5X25	G14	90	18
PACKING, AIR CLEANER	F1	61	24					SCREW, SPECIAL, 6X12	H3	95	16
PACKING, AIR CLEANER COVER	F6	66	4		H9	101	2	SCREW, TAPPING, 4X6	F11	71	20
PACKING, CARBURETOR	E12	56	16	RECTIFIER ASSY., SILICON	H2	94	5				
	F1	61	14		H9	101	3		F13	73	14
PACKING, CASE COVER	D6	34	2	RETAINER, EX. VALVE SPRING	E2	46	12				
	D10	38	2	RETAINER, IN. VALVE SPRING	E1	45	11	SCREW, TAPPING, 4X8	F12	72	9
PACKING, CHAIN CASE COVER	H4	96	2		E2	46	11	SCREW, TAPPING, 5X25	F11	71	22
PACKING, ELBOW	F4	64	1	RETAINER, SPRING	E5	49	8	SCREW, TAPPING, 5X8	F10	70	19
	F6	66	1	RING SET, PISTON	D13	41	1		F11	71	20
PACKING, FUEL COCK	E13	57	22		D14	42	1				
PACKING, FUEL FILLER CAP	F14	74	3		D15	43	1				
	G1	77	9	ROD ASSY., CONNECTING	D16	44	4		F13	73	12
				ROD COMP., PUSH	E2	46	18				
				ROD, CHOKE	F1	61	21				
				ROD, CHOKE CONTROL	F1	61	26	SCREW, TAPPING, 6X10	F10	70	17
PACKING, FUEL STRAINER CUP ...	G3	79	10	ROD, GOVERNOR	G12	88	2	SCREW, THROTTLE STOP	E11	55	10
	E11	55	13	ROD, PUSH	E1	45	3		E16	60	9
	G3	79	1	ROPE, RECOIL STARTER	E5	49	10	SEAL, AIR CLEANER	F7	67	8
PACKING, HEAD COVER	D2	30	7	ROTATOR, VALVE	E2	46	14	SEAL, CHOKE LEVER	F1	61	34
PACKING, INSULATOR	E12	56	17	RUBBER A, TANK MOUNTING	F16	76	5	SEAL, MUFFLER PROTECTOR	F12	72	4
	F1	61	15	RUBBER COMP., TANK MOUNTING ...	G1	77	7	SEAL, VALVE STEM	E1	45	1
PACKING, OIL FILLER CAP	D7	35	5	RUBBER, FUEL	G1	77	11	SEAT, VALVE SPRING	E2	46	13
	D10	38	5		G3	79	15	SEPARATOR, AIR CLEANER	F7	67	2
PANEL COMP., CONTROL	H1	93	4	RUBBER, SUPPORTER	F14	74	1	SHAFT, GOVERNOR ARM	D4	32	3
	H2	94	4		F16	76	1	SHAFT, P.T.O.	H4	96	5
PIN, GOVERNOR WEIGHT	D9	37	17					SHROUD	E7	51	3
	D10	38	18	RUBBER, TANK CUSHION	G3	79	14	SLIDER, GOVERNOR	D7	35	7
PIN, LOCK, 10MM	D5	33	13	RUBBER, TANK MOUNTING	G3	79	12		D10	38	7
PIN, PISTON	D16	44	3								

PART NAME INDEX

J 4

Part name	Address	Page	Ref.	Part name	Address	Page	Ref.	Part name	Address	Page	Ref.
SOLENOID ASSY.	G16	92	3	TUBE, FUEL, 4.5X400	G1	77	13				
SPACER COMP., CARBURETOR	E12	56	15	TUBE, FUEL, 4.5X430	G1	77	14				
SPACER, CONTROL LEVER	G13	89	11	TUBE, FUEL, 4.5X580	G1	77	14				
SPACER, MUFFLER COVER	F10	70	16	TUBE, FUEL, 6.3X50	G2	78	23				
SPRING, BRUSH RETURN	G10	86	10								
SPRING, CABLE RETURN	G13	89	14	[V]							
SPRING, CHOKE RETURN	G16	92	1	VALVE ASSY., SOLENOID	F1	61	16				
SPRING, COCK LEVER	E13	57	21								
SPRING, CONTROL ADJUSTING	G13	89	13	VALVE SET, FLOAT	E9	53	2				
SPRING, FRICTION	E5	49	5		E16	60	2				
SPRING, GOVERNOR	G12	88	3	VALVE, DASHPOT CHECK	F1	61	29				
SPRING, LEVER	G13	89	8	VALVE, EX.	E1	45	9				
SPRING, MANUAL CHOKE	F1	61	23	VALVE, IN.	E1	45	8				
SPRING, RATCHET	E5	49	7								
SPRING, RETURN	E15	59	32	[W]							
SPRING, STARTER RETURN	E5	49	6	WASHER COMP., HEAD COVER	D2	30	10				
SPRING, THROTTLE RETURN	G12	88	4	WASHER, 8MM	D11	39	8				
SPRING, VALVE	E1	45	10	WASHER, 8.2X17X0.8	D5	33	7				
SPRING, WEIGHT RETURN	E1	45	7	WASHER, CHOKE LEVER	F1	61	33				
STARTER ASSY., RECOIL	E4	48	1	WASHER, CONTROL LEVER	G13	89	9				
STAY ASSY., CHOKE CONTROL	E15	59	30	WASHER, DRAIN PLUG, 12MM	D5	33	12				
STAY ASSY., MANUAL CHOKE	F1	61	17		H9	101	13				
STAY COMP., SOLENOID	F1	61	18	WASHER, LOCK, 8MM	D11	39	8				
STAY, AIR CLEANER	F7	67	4	WASHER, PLAIN, 4MM	H3	95	23				
STAY, MUFFLER COVER	F10	70	14	WASHER, PLAIN, 5MM	F2	62	41				
STOPPER, CHOKE ROD	F1	61	22		F11	71	29				
STRAINER COMP., FUEL	F16	76	2	WASHER, PLAIN, 6MM	D7	35	11				
STRAP, CABLE, 118MM	H3	95	18		D10	38	11				
SUB HARNESS	E8	52	8	WASHER, PLAIN, 8MM	F12	72	13				
SUSPENSION, COUPLER	H2	94	6	WASHER, SPRING, 4MM	H3	95	24				
	H9	101	6	WASHER, SPRING, 5MM	F11	71	30				
SWITCH ASSY., COMBINATION	H2	94	10	WASHER, TANK CUSHION	G3	79	13				
	H3	95	10	WASHER, THRUST, 16.1MM	E2	46	20				
	H9	101	8	WASHER, THRUST, 2.7X8	F2	62	35				
SWITCH ASSY., ENGINE STOP	E7	51	4	WEIGHT, BALANCER	D11	39	6				
SWITCH ASSY., OIL LEVEL	D4	32	2	WEIGHT, GOVERNOR	D8	36	15				
SWITCH, THERMO	H9	101	1		D10	38	16				
[T]				WIRE, WATER COVER	G10	86	13				
TANK ASSY., FUEL	G2	78	20	WRENCH COMP., SPARK PLUG	H6	98	6				
TANK COMP., FUEL	F16	76	4	WRENCH, PLUG	H6	98	6				
	G3	79	8	WRENCH, SPARK PLUG	H6	98	6				
	H8	100	2								
TUBE, 11X105	D3	31	13	[Y]							
TUBE, 3.5X130	F2	62	47	YOKE COMP.	G10	86	9				
TUBE, 3.5X75	F2	62	46								
TUBE, AIR VENT	F3	63	50								
TUBE, BREATHER	D3	31	13								
TUBE, FASTENER, 30MM	H3	95	19								
TUBE, FUEL, 3.5X25	E15	59	36								
TUBE, FUEL, 4.5X180	G1	77	13								
TUBE, FUEL, 4.5X235	F14	74	6								
	G1	77	14								
TUBE, FUEL, 4.5X250	G1	77	13								
TUBE, FUEL, 4.5X260	F14	74	6								
TUBE, FUEL, 4.5X300	F3	63	51								
	G1	77	14								

1

FOREWORD INDEX

2

ENGINE GROUP

3

PART NUMBER INDEX

4

PART NAME INDEX



March 01, 2009



PARTS CATALOGUE NEWS

Honda Motor Co., Ltd. Service Division

PARTS CATALOGUE - CORRECTED

Printed in Japan

CODE NO.	13Z5T603
PARTS CATALOGUE NEWS	GX390UT1 GX390RT1
NEWS NO.	001

Block No.	Ref. No.	Note	Part No.	Description	Reqd. QTY		Serial No.	Parts catalogue code
					GX 390 UT1	GX 390 RT1		
E-8	1	T	13010-Z5T-003	RING SET, PISTON (STD.) (RIKEN)	1	-	-----	HA2, LKE, LXE4, LXQ4, LX2, PAE2, PA2, PXD8, QAE2, QAE6, QC2, QE, QHB4 QKA4, QME0, QNE2, QNE6, QNE8, QNR2, QNR6, QWC4, QXB7, QXB9, QXC4 QXC6, QXER, QXE4, QXE6, QXE7, QXE9, QXH9, QXS4, QXUZ, SCK4, SMC1 SMD3, SME0, SME6, SM32, SNC, STC4, SWA4, SXB7, SXB9, SXE4, SXU, VA2 VC2N, VM2, VN27, VXE2, VXE6, VXE7, VXE9, VXQ4
					1	-	1382378	LXE8, LXU, PXE8, PXU, QAA2, QAA6, QAW, QA2, QA26, QDW9, QK4, QTT QWA4, QWT2, QXC9, QXE8, QXQ4, QXU, SHQ4, SXE8, SXQ4, VKX4, VNG1 VPX4, VPX9, VSD7, VSD9, VXB7, VXB9, VXE8, VXG, VX8
					-	1		
					(1)	-	-----	HA2, LKE, LXE4, LXQ4, LX2, PAE2, PA2, PXD8, QAE2, QAE6, QC2, QE, QHB4 QKA4, QME0, QNE2, QNE6, QNE8, QNR2, QNR6, QWC4, QXB7, QXB9, QXC4 QXC6, QXER, QXE4, QXE6, QXE7, QXE9, QXH9, QXS4, QXUZ, SCK4, SMC1 SMD3, SME0, SME6, SM32, SNC, STC4, SWA4, SXB7, SXB9, SXE4, SXU, VA2 VC2N, VM2, VN27, VXE2, VXE6, VXE7, VXE9, VXQ4
		T	13011-Z5T-003	RING SET, PISTON (0.25) (RIKEN)	(1)	-	-----	HA2, LKE, LXE4, LXQ4, LX2, PAE2, PA2, PXD8, QAE2, QAE6, QC2, QE, QHB4 QKA4, QME0, QNE2, QNE6, QNE8, QNR2, QNR6, QWC4, QXB7, QXB9, QXC4 QXC6, QXER, QXE4, QXE6, QXE7, QXE9, QXH9, QXS4, QXUZ, SCK4, SMC1 SMD3, SME0, SME6, SM32, SNC, STC4, SWA4, SXB7, SXB9, SXE4, SXU, VA2 VC2N, VM2, VN27, VXE2, VXE6, VXE7, VXE9, VXQ4
					(1)	-	1382378	LXE8, LXU, PXE8, PXU, QAA2, QAA6, QAW, QA2, QA26, QDW9, QK4, QTT QWA4, QWT2, QXC9, QXE8, QXQ4, QXU, SHQ4, SXE8, SXQ4, VKX4, VNG1 VPX4, VPX9, VSD7, VSD9, VXB7, VXB9, VXE8, VXG, VX8
					-	(1)		
					(1)	-	-----	HA2, LKE, LXE4, LXQ4, LX2, PAE2, PA2, PXD8, QAE2, QAE6, QC2, QE, QHB4 QKA4, QME0, QNE2, QNE6, QNE8, QNR2, QNR6, QWC4, QXB7, QXB9, QXC4 QXC6, QXER, QXE4, QXE6, QXE7, QXE9, QXH9, QXS4, QXUZ, SCK4, SMC1 SMD3, SME0, SME6, SM32, SNC, STC4, SWA4, SXB7, SXB9, SXE4, SXU, VA2 VC2N, VM2, VN27, VXE2, VXE6, VXE7, VXE9, VXQ4
		T	13012-Z5T-003	RING SET, PISTON (0.50) (RIKEN)	(1)	-	-----	HA2, LKE, LXE4, LXQ4, LX2, PAE2, PA2, PXD8, QAE2, QAE6, QC2, QE, QHB4 QKA4, QME0, QNE2, QNE6, QNE8, QNR2, QNR6, QWC4, QXB7, QXB9, QXC4 QXC6, QXER, QXE4, QXE6, QXE7, QXE9, QXH9, QXS4, QXUZ, SCK4, SMC1 SMD3, SME0, SME6, SM32, SNC, STC4, SWA4, SXB7, SXB9, SXE4, SXU, VA2 VC2N, VM2, VN27, VXE2, VXE6, VXE7, VXE9, VXQ4
					(1)	-	-----	HA2, LKE, LXE4, LXQ4, LX2, PAE2, PA2, PXD8, QAE2, QAE6, QC2, QE, QHB4 QKA4, QME0, QNE2, QNE6, QNE8, QNR2, QNR6, QWC4, QXB7, QXB9, QXC4 QXC6, QXER, QXE4, QXE6, QXE7, QXE9, QXH9, QXS4, QXUZ, SCK4, SMC1 SMD3, SME0, SME6, SM32, SNC, STC4, SWA4, SXB7, SXB9, SXE4, SXU, VA2 VC2N, VM2, VN27, VXE2, VXE6, VXE7, VXE9, VXQ4
					-	(1)		
					(1)	-	-----	HA2, LKE, LXE4, LXQ4, LX2, PAE2, PA2, PXD8, QAE2, QAE6, QC2, QE, QHB4 QKA4, QME0, QNE2, QNE6, QNE8, QNR2, QNR6, QWC4, QXB7, QXB9, QXC4 QXC6, QXER, QXE4, QXE6, QXE7, QXE9, QXH9, QXS4, QXUZ, SCK4, SMC1 SMD3, SME0, SME6, SM32, SNC, STC4, SWA4, SXB7, SXB9, SXE4, SXU, VA2 VC2N, VM2, VN27, VXE2, VXE6, VXE7, VXE9, VXQ4

NOTE A:PART NO. CHANGE D:NEWLY PROVIDED E:PART NO.DELETION K:REQUIRED NO. CORRECTION L:APPLICATION SERIAL NO. CORRECTION
T:APPLICATION CORRECTION Z:REMARKS CHANGE

PARTS CATALOGUE NEWS

BOOKNo. : 13Z5T603

Block No.	Ref. No.	Note	Part No.	Description	Reqd. QTY		Serial No.	Parts catalogue code
					GX 390 UT1	GX 390 RT1		
					(1)	-	1382378	----- LXE8, LXU, PXE8, PXU, QAA2, QAA6, QAW, QA2, QA26, QDW9, QK4, QTT QWA4, QWT2, QXC9, QXE8, QXQ4, QXU, SHQ4, SXE8, SXQ4, VKX4, VNG1 VPX4, VPX9, VSD7, VSD9, VXB7, VXB9, VXE8, VXG, VX8
					-	(1)		
	T		13013-Z5T-003	RING SET, PISTON (0.75) (RIKEN)	(1)	-	-----	----- HA2, LKE, LXE4, LXQ4, LX2, PAE2, PA2, PXD8, QAE2, QAE6, QC2, QE, QHB4 QKA4, QME0, QNE2, QNE6, QNE8, QNR2, QNR6, QWC4, QXB7, QXB9, QXC4 QXC6, QXER, QXE4, QXE6, QXE7, QXE9, QXH9, QXS4, QXUZ, SCK4, SMC1 SMD3, SME0, SME6, SM32, SNC, STC4, SWA4, SXB7, SXB9, SXE4, SXU, VA2 VC2N, VM2, VN27, VXE2, VXE6, VXE7, VXE9, VXQ4
					(1)	-	1382378	----- LXE8, LXU, PXE8, PXU, QAA2, QAA6, QAW, QA2, QA26, QDW9, QK4, QTT QWA4, QWT2, QXC9, QXE8, QXQ4, QXU, SHQ4, SXE8, SXQ4, VKX4, VNG1 VPX4, VPX9, VSD7, VSD9, VXB7, VXB9, VXE8, VXG, VX8
					-	(1)		

NOTE A:PART NO. CHANGE D:NEWLY PROVIDED E:PART NO.DELETION K:REQUIRED NO. CORRECTION L:APPLICATION SERIAL NO. CORRECTION
T:APPLICATION CORRECTION Z:REMARKS CHANGE

March 15, 2009



PARTS CATALOGUE NEWS

Honda Motor Co., Ltd. Service Division


PARTS CATALOGUE - CORRECTED

Printed in Japan

CODE NO.	13Z5T603
PARTS CATALOGUE NEWS	GX390UT1 GX390RT1
NEWS NO.	002

Block No.	Ref. No.	Note	Part No.	Description	Reqd. QTY		Serial No.	Parts catalogue code
					GX 390 UT1	GX 390 RT1		

E-6 CRANKCASE COVER (1)

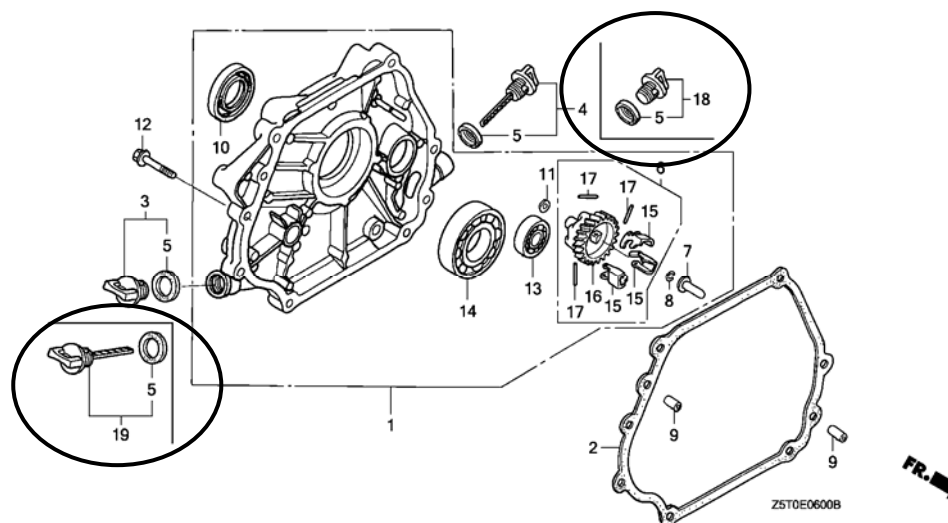

E-6	18	D	15600-ZG4-003	CAP ASSY., OIL FILLER	-	1	-----	VSD4, VS49, VTH4
	19	D	15600-735-003	CAP ASSY., OIL FILLER	-	1	-----	VKE4

NOTE A:PART NO. CHANGE D:NEWLY PROVIDED E:PART NO.DELETION K:REQUIRED NO. CORRECTION L:APPLICATION SERIAL NO. CORRECTION
T:APPLICATION CORRECTION Z:REMARKS CHANGE

April 19, 2009



PARTS CATALOGUE NEWS

Honda Motor Co., Ltd. Service Division

PARTS CATALOGUE - CORRECTED

Printed in Japan

CODE NO.	13Z5T603
PARTS CATALOGUE NEWS	GX390UT1 GX390RT1
NEWS NO.	003

Block No.	Ref. No.	Note	Part No.	Description	Reqd. QTY		Serial No.	Parts catalogue code
					GX 390 UT1	GX 390 RT1		
E-20	5	E	31630-ZE1-003	*PARTS NO. DELETION				
		T	31630-ZE1-013	COIL ASSY., CHARGE (1A)	1	1	-----	LXE4, LXE8, PXD8, PXE8, QXER, QXE4, QXE6, QXE7, QXE8, QXE9, SXE4 SXE8, VAA8, VCN2, VC2, VC2N, VDE2, VKB2, VPE5, VPE9, VSD4, VS49, VWE VXE2, VXE6, VXE7, VXE8, VXE9
E-22-20	3	E	36160-ZB4-003	*PARTS NO. DELETION				
		T	36160-ZB4-013	SOLENOID ASSY.	1	1	-----	VC2, VC2N, VD2, VWC, VWE, VXG

NOTE A:PART NO. CHANGE D:NEWLY PROVIDED E:PART NO.DELETION K:REQUIRED NO. CORRECTION L:APPLICATION SERIAL NO. CORRECTION
T:APPLICATION CORRECTION Z:REMARKS CHANGE