

GRACO®

Stroller

OWNER'S MANUAL

Model No. _____
Serial No. _____

Dear Customer,
Please fill in the model and serial numbers above from the label on the rear leg of your new stroller.



Models 7980 and 7990

Congratulations on your purchase of a Graco® stroller!

Graco is a world leader in strollers and has helped thousands of parents transport their children in comfort. We believe your new Graco® stroller is a wise choice, promising many hours of enjoyment for your baby.

Before using your stroller, please take a few minutes to read this Owner's Manual. The short time you spend reading these instructions will help you assemble and use your stroller properly.

Please save your Owner's Manual for future use.

Customer Satisfaction


Our goal is to make every product the best it can be! We are also committed to supporting our products after purchase. If you would like to speak to Graco about your product, please contact our **Customer Service Department at 1-800-345-4109**. Our knowledgeable staff will be ready to answer any questions you may have concerning parts, use or maintenance. When you call, please have the **model and serial numbers** ready so your call may be processed quickly and efficiently.

⚠ WARNING


Failure to follow these warnings and the assembly instructions could result in serious injury or death.



Never leave child unattended. Always keep your child in view.

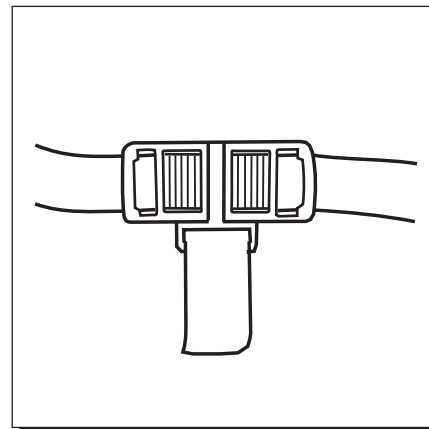


Avoid serious injury from falling or sliding out. Always use seat belt.

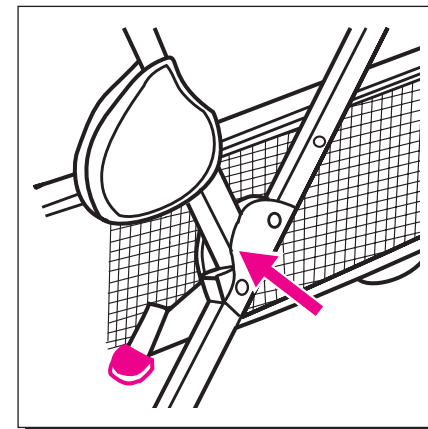


Be certain the stroller is fully erected and latched before allowing your child near the stroller.




Never place child in the stroller with head toward front of the stroller.

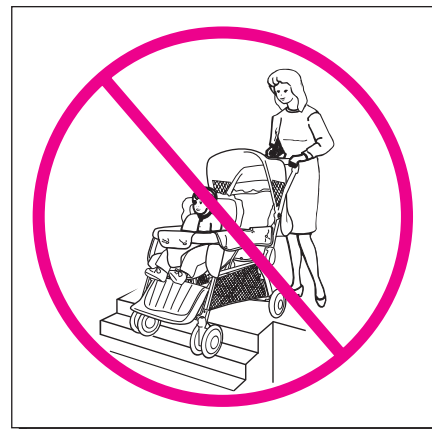

Never use stroller on stairs or escalators. You may suddenly lose control of the stroller or your child may fall out. Also, use extra care when going up or down a step or curb.

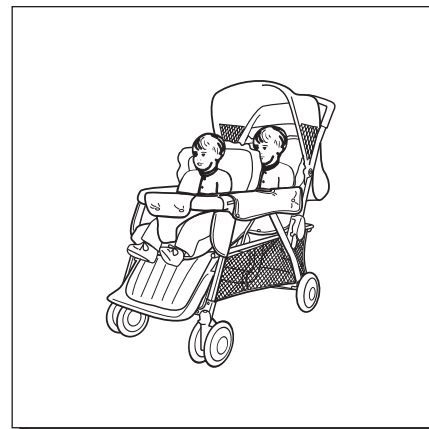

Use of the stroller with two children weighing a total of more than 80 lbs. (36.2 kg) will cause excessive wear and stress on the stroller. The weight in either seat should not exceed 40 lbs. (18.1 kg).

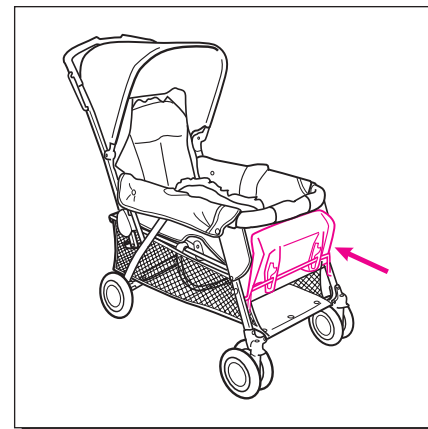

Child may slip into leg openings and strangle. Never use in a reclined carriage position unless front footrest is raised to cover the front opening and wire snapped into lower notch. For rear seat recline, snap flap in six (6) places to back of front seat.



DO NOT place purses, shopping bags, parcels and accessory items on handle or canopy. They may fall on the child or change the balance of the stroller and make it unstable.



Avoid possible tipping back. When using with only one child, always use front seat. When using with two children, always place the child in the front seat before placing the other child in the rear seat. Always remove the child from the rear seat before removing the child from the front seat.

TO PREVENT A HAZARDOUS CONDITION, do not place more than 10 lbs. (4.5 kg) in the storage basket or more than 2 lbs. (0.9 kg) in the canopy bag.

DO NOT ALLOW YOUR CHILD to stand on the basket. It may collapse and cause injury.

NEVER ALLOW YOUR STROLLER to be used as a toy.

STROLLER TO BE USED only at walking speed. Product not intended for use while jogging, skating, etc.

AVOID STRANGULATION. DO NOT place items with a string around your child's neck, suspend strings from this product, or attach strings to toys.

DISCONTINUE USING YOUR STROLLER should it become damaged or broken.


THIS PRODUCT IS NOT INTENDED FOR COMMERCIAL USE.

FOR ADDITIONAL IMPORTANT INFORMATION, please see the Helpful Hints and Care and Maintenance sections in these instructions.

PARTS LIST

CHECK that you have all the parts listed below BEFORE assembling your stroller. If any parts are missing, call Customer Service at 1-800-345-4109.

THIS PRODUCT REQUIRES ADULT ASSEMBLY.
No tools required for assembly.

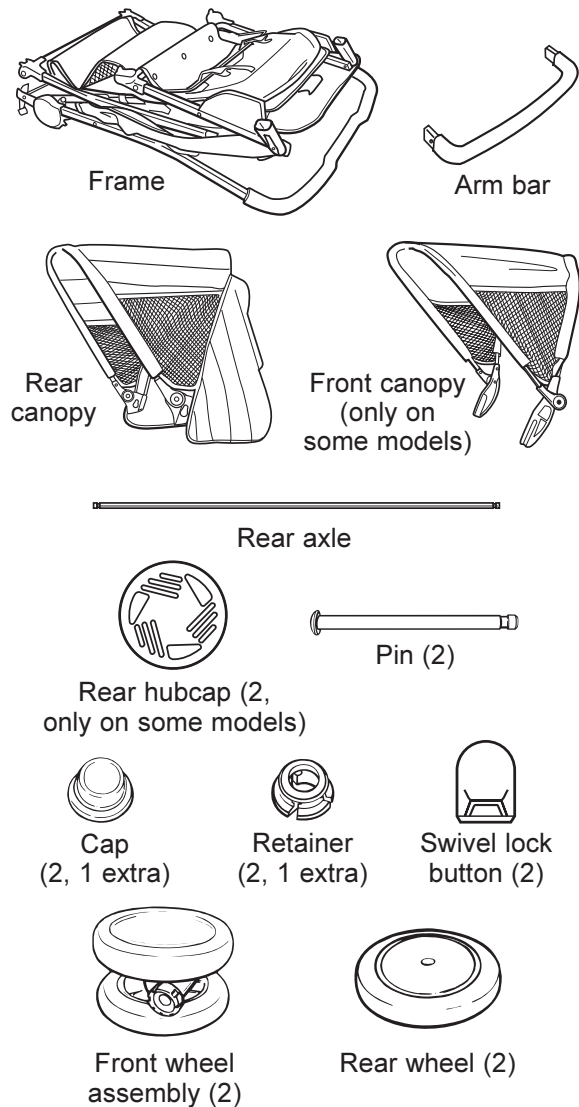


To Unpack Stroller

Step 1.


Flatten stroller carton to protect floor.

Open stroller on carton as shown until latched.

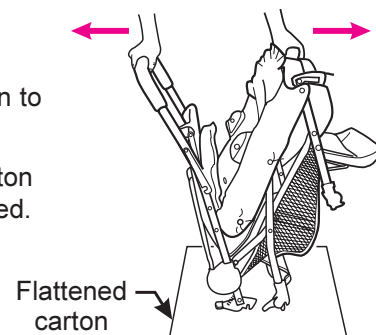

Step 2.


Be sure frame is latched as shown before continuing assembly.

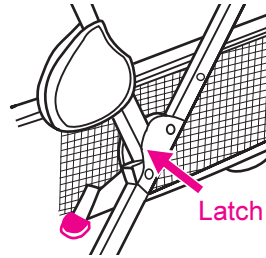

To Assemble Front Wheels


Step 1.

Snap swivel lock button onto wheel mount as shown. This must be done BEFORE pin is inserted (next step).

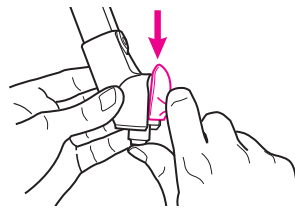

Step 2.

Insert pin through hole in wheel mount. Then push round end of a front wheel assembly up onto pin as shown until it snaps into place.

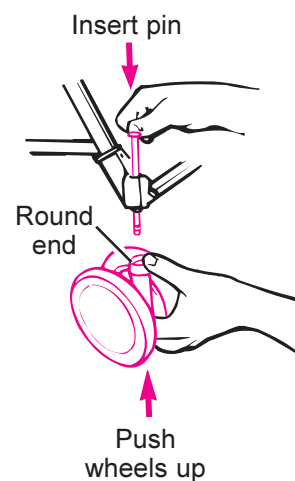

NOTE: Check wheel attachment by pulling down on the front wheel assembly.


Step 3.

Repeat above steps for the other side.

To Assemble Rear Wheels


Step 1.

Turn stroller over as shown.

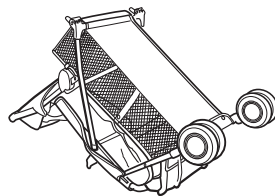

Step 2.


Unsnap the basket flap from the rear brace, and slide rear axle through the hole in one axle bracket.

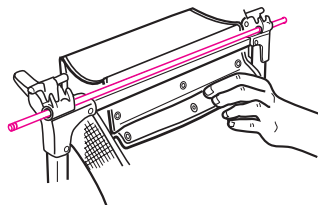

Continue to push the rear axle into the hole of the other axle bracket.

Step 3.



Snap the basket flap around both the rear axle and the rear brace.

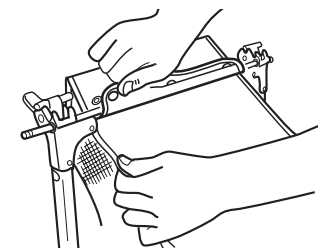

HINT: This may be easier if stroller is partially folded. See "To Fold Stroller" instructions.

Step 4.

Place one rear wheel, red retainer, cap, and hubcap (only on certain models) on one end of rear axle in order as shown below. Push red retainer onto axle BEFORE attaching white cap. Repeat on other side.

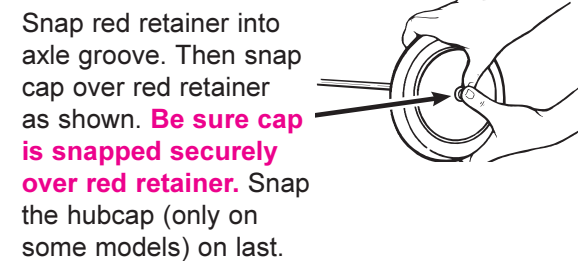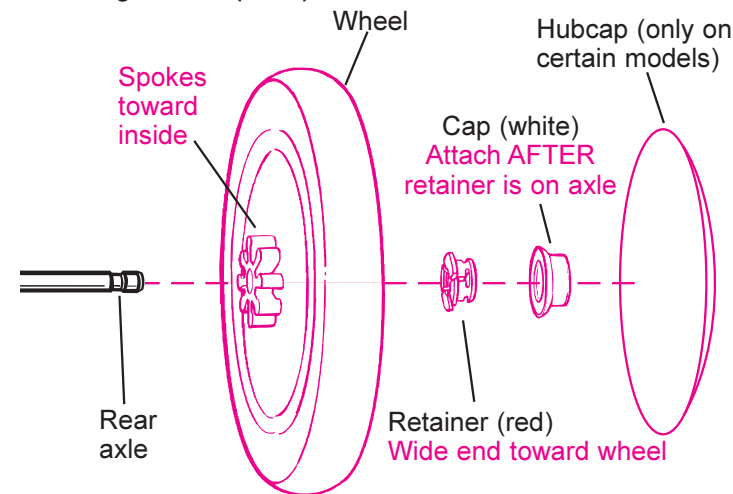


Snap red retainer into axle groove. Then snap cap over red retainer as shown. **Be sure cap is snapped securely over red retainer.** Snap the hubcap (only on some models) on last.

To Unfold Stroller


Step 1.

Release storage latch (on inside of handle on right side of stroller).

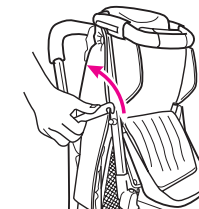

Step 2.


Unfold stroller as shown.

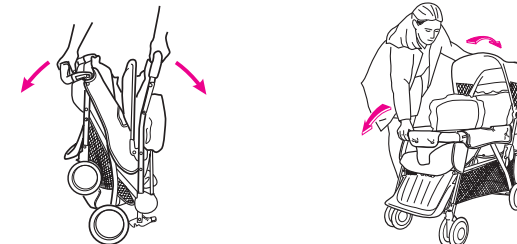

WARNING Be certain the stroller is fully erected and latched before allowing your child near the stroller.

To Raise Footrests


Lift footrest and hook wire into footrest bracket.

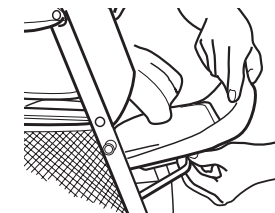

To Assemble Arm Bar

Step 1.

Push ends of bar into openings at front of stroller, until the bar locks in place.

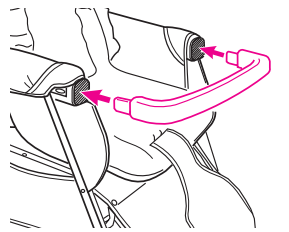


Pull on bar to be sure both sides are attached.

NOTE: It is normal to be able to wiggle bar slightly.

Step 2.


Snap fabric flap onto the bar.

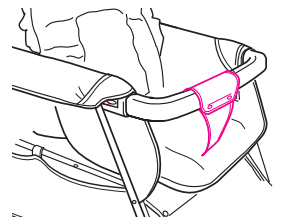


To Use Brakes

WARNING Always apply both brakes to park stroller.

Push **DOWN** to park.

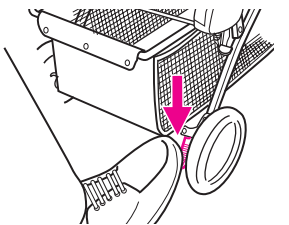


Lift **UP** to stroll.

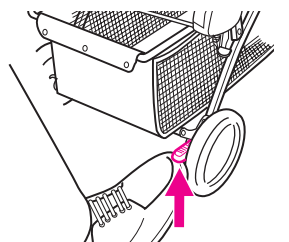

To Change to Swivel or Non-swivel Wheels

Front swivel wheels lock for use on uneven surfaces such as grass, stones or gravel.

NOTE: Before locking swivels, first push stroller forward a few feet to ensure that the wheels are correctly positioned.

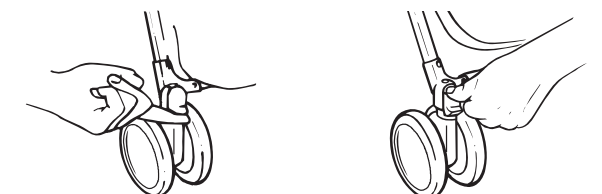


Push buttons up or down, depending on model, to lock or release swivels. Turn swivel to check that it is locked or released.

To Secure Your Child

▲WARNING Avoid serious injury from falling or sliding out. Always use seat belt.


Step 1.

Place crotch strap between child's legs and snap both side buckles to the center buckle. Adjust belt as needed to get a snug fit around your child.

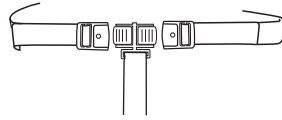

Step 2.

Push in on front of buckle to release.

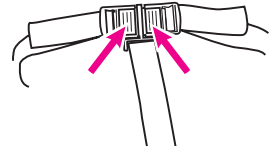


To Adjust Backs

Step 1.


Push back of seat slightly forward while squeezing lever as shown to unlock.

Do not pull on this bar!

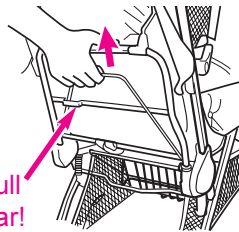

Step 2.

Adjust to desired position. Rear seat has four positions, front seat has three. You may use any combination of seat positions.

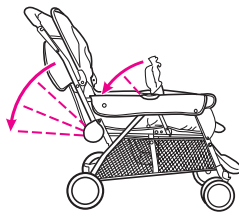


Step 3.

To return seat back to a more upright position, push forward on back until it snaps into desired position. (Front seat middle position locks for safety—unlock by squeezing lever before pushing into full upright position.)

▲WARNING Child may slip into leg openings and strangle.

NEVER use front seat in a reclined carriage position unless footrest is raised to cover the front opening and wire is snapped into lower notch.

NEVER use rear seat in a reclined carriage position unless footrest opening behind front seat has first been closed by snapping the flap in six places to the back of the front seat.

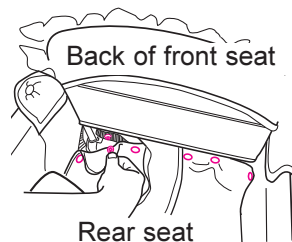


To Install Rear Canopy

Step 1.

Fully recline the rear seat. Locate small knobs on the inside of the handle.

Step 2.

Hold canopy by mounting brackets as shown. Push brackets in slightly and align holes in brackets with knobs on handle. Mount brackets onto knobs.

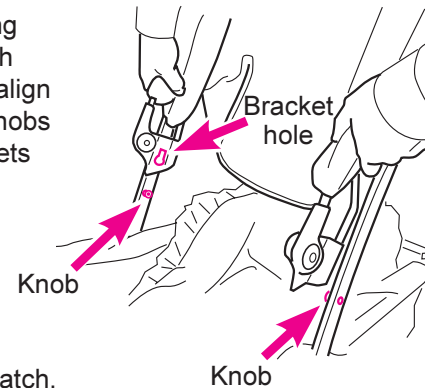

Step 3.

Slide brackets down to latch. **Be sure fabric is not caught under brackets.**

Step 4.

Snap canopy fabric to seat back.

To Remove Rear Canopy

Step 1.


Fully recline the rear seat.

Step 2.

Unsnap canopy fabric from stroller.

Step 3.

Slide both brackets up, then push brackets in slightly to remove canopy.

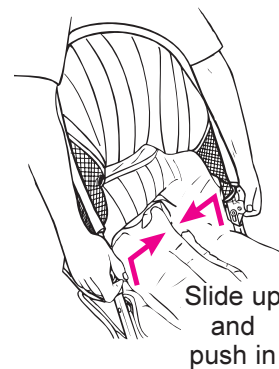

To Install Front Canopy (found only on some models)

Step 1.

Fully recline the front seat.

Step 2.

Unsnap small flaps on top of armrests.

Step 3.

Check that arrows on inside of canopy brackets face the front of the stroller.

Step 4.


Insert brackets through elastic, then through holes on armrests as shown.

Step 5.

Push both brackets down at the same time onto stroller frame until they snap into place. Brackets must fit over metal bars on inside of frame. Be sure fabric is not caught under brackets.

Step 6.


Resnap small flaps on armrests when front canopy is not in use.

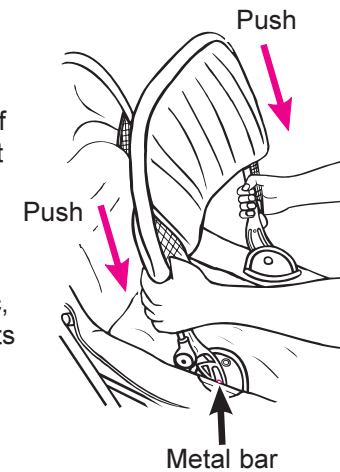

To Adjust Canopies

Push or pull canopy to desired position.


Canopy bag (on certain models) carries a maximum of 2 pounds (0.9 kg).

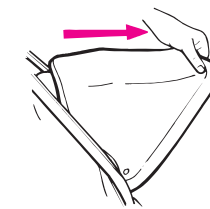

To Remove Arm Bar

Step 1.

Push in the tabs on both sides of the bar as shown. Pull the bar straight out.

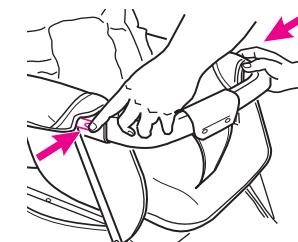

Step 2.


Turn down fabric flaps to cover openings.



Step 3.

When replacing the bar, turn back fabric flaps to expose openings, then push arm bar in until it locks in place.

Pull on bar to be sure both sides are attached.

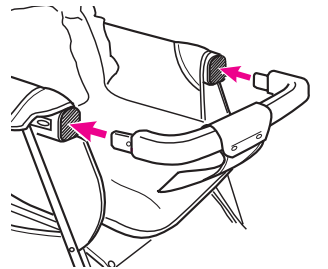


To Fold Stroller

NOTE: Before folding, (1) adjust backs to upright position; (2) fold canopy; (3) lock rear brakes; (4) align front wheels with frame by pulling stroller slightly backward.




Step 1.

Pull up on latches on sides of handle to fold as shown and push handle forward slightly.

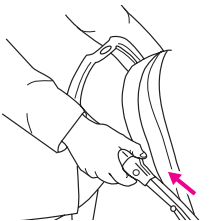

Step 2.

Push down on secondary lock on right side of stroller as shown. Continue pushing handle forward. Front wheels must align so they do not interfere with folding.

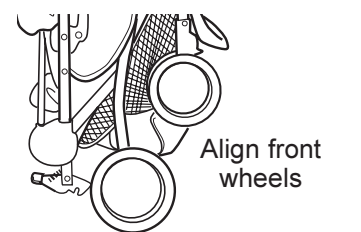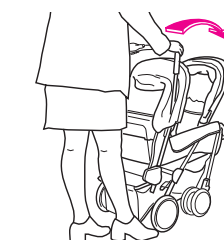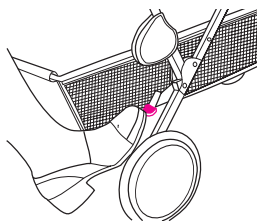

Step 3.

Lock storage latch (on inside of handle on right side of stroller).

