

Addendum: 97C, 95C Upright Lifecycle® Exercise Bike Base Operation Manual

M051-00K88-A001

Date: 12/09

The following information replaces *Section 1.2, Set Up, Check for External Power*, in the 97C, 95C, Upright Lifecycle® Exercise Bike Base Operation Manual.

Check for External Power

The Engage™ (15" LCD) Console that is serial coded "DLB" can receive both analog and digital signals. Life Fitness is not responsible for the installation of CATV service or components required for the delivery of CATV service. An external TV signal input via a 75-ohm coaxial cable must be present before TV setup can occur.

The Engage Console that is serial coded "DLB" for U.S. markets is powered by **two** external power supplies: a 36-volt DC power supply and a 12-volt DC power supply. "DLB" coded units have a Digital TV Tuner (NTSC/ATSC/QAM). **Note:** The Engage Console that is serial coded "ANN & ANP" for non-U.S. markets will continue to use a single 36-volt DC power supply. "ANN & ANP" coded units have an Analog TV Tuner (NTSC).

The 36-volt power supply is optional for the Inspire™ (7" LCD) and Achieve™ consoles. If a 17" Attachable TV is used with the Inspire or Achieve consoles, then a 12-volt DC power supply is needed for the 17" Attachable TV.

Product Configuration	External Power Supply
Engage Console ("DLB")	36 V and 12 V
Engage Console ("ANN" & "ANP")	36 V
Inspire or Achieve Console	36 V (optional)*
Inspire or Achieve Consoles with 17" Attachable TV	36 V (optional)* and 12 V

*Self-Powered


Recommended Installation of External Power Supplies:

- Piggyback both external power supplies using the included cable ties.
- Remove the protective liner from one of the provided fastener strips.
- Attach the fastener strips to the bottom of one of the power supplies.
- Remove the remaining protective liner from fastener strip.
- Secure the piggybacked power supplies to the underside of the center frame as shown.
- Plug connectors to appropriate receptacles.
- Plug Y-Cord into an AC outlet.

For external powered units, the console should immediately beep and light up. The Engage console will show a message indicating it is initializing (for up to 2 minutes). **Note:** If any of the consoles do not light up, contact Life Fitness Customer Service at 800-351-3737.

The following connection receptacles are located at the front of the Upright Lifecycle Exercise Bike:

- 12-V Power for Attachable TV or Engage Console ("DLB")
- Broadcast Supply Input Coaxial Cable
- 36-V External Power
- Fitness Networking

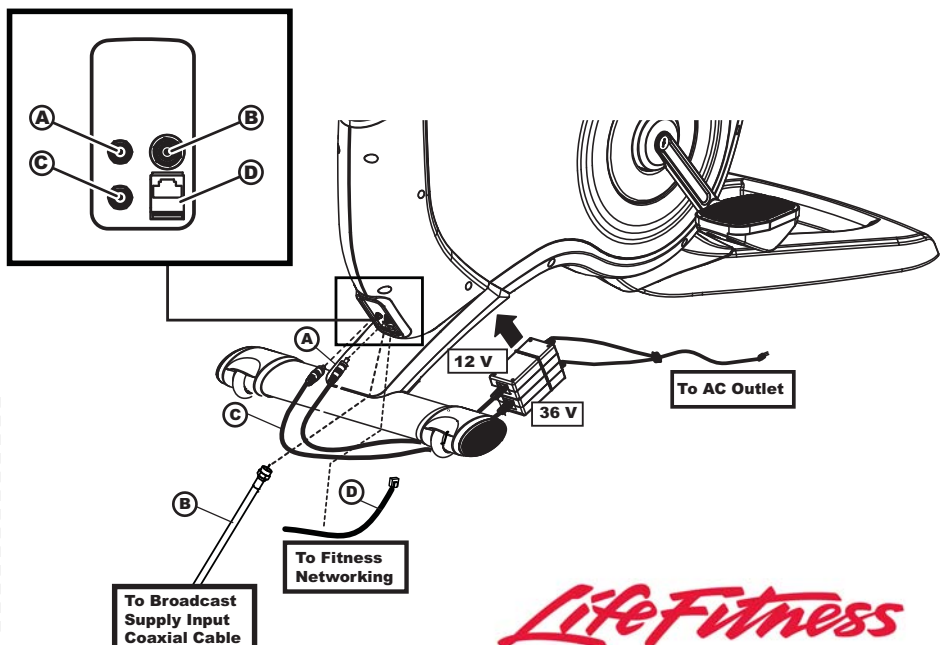

Note to the CATV Installer:

This reminder is provided to call the CATV system installer's attention to Article 820-40 of the NEC that provides guidelines for proper grounding and, in particular, specifies that the cable ground shall be connected to the grounding system of the building as close to the point of cable entry as practical.