




**3500 Watt Portable Generator  
Illustrated Parts List  
Las Partes ilustradas Listan**

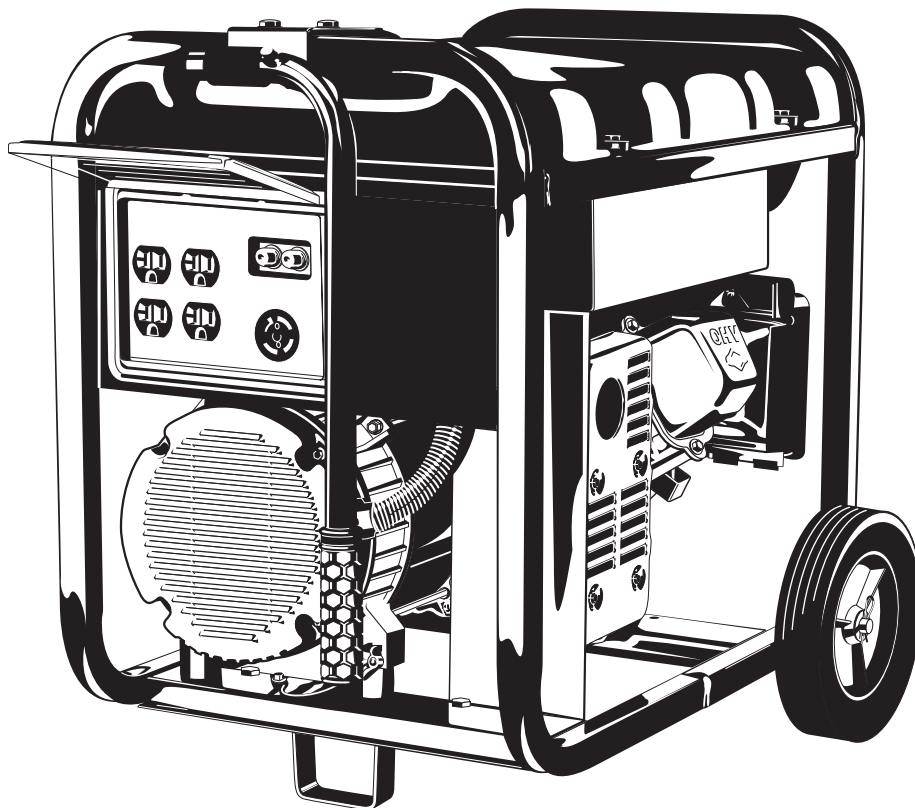

Questions? Help is just a moment away!  
Preguntas? La ayuda es justa un momento lejos!

Call: **Generator Helpline**

Llame: **Línea Directa del Generador**


**1-800-743-4115** M-F 8-5 CT

**BRIGGSandSTRATTON.COM**

**BRIGGS & STRATTON POWER PRODUCTS GROUP, LLC  
JEFFERSON, WISCONSIN, U.S.A.**



# EXPLODED VIEW - MAIN UNIT

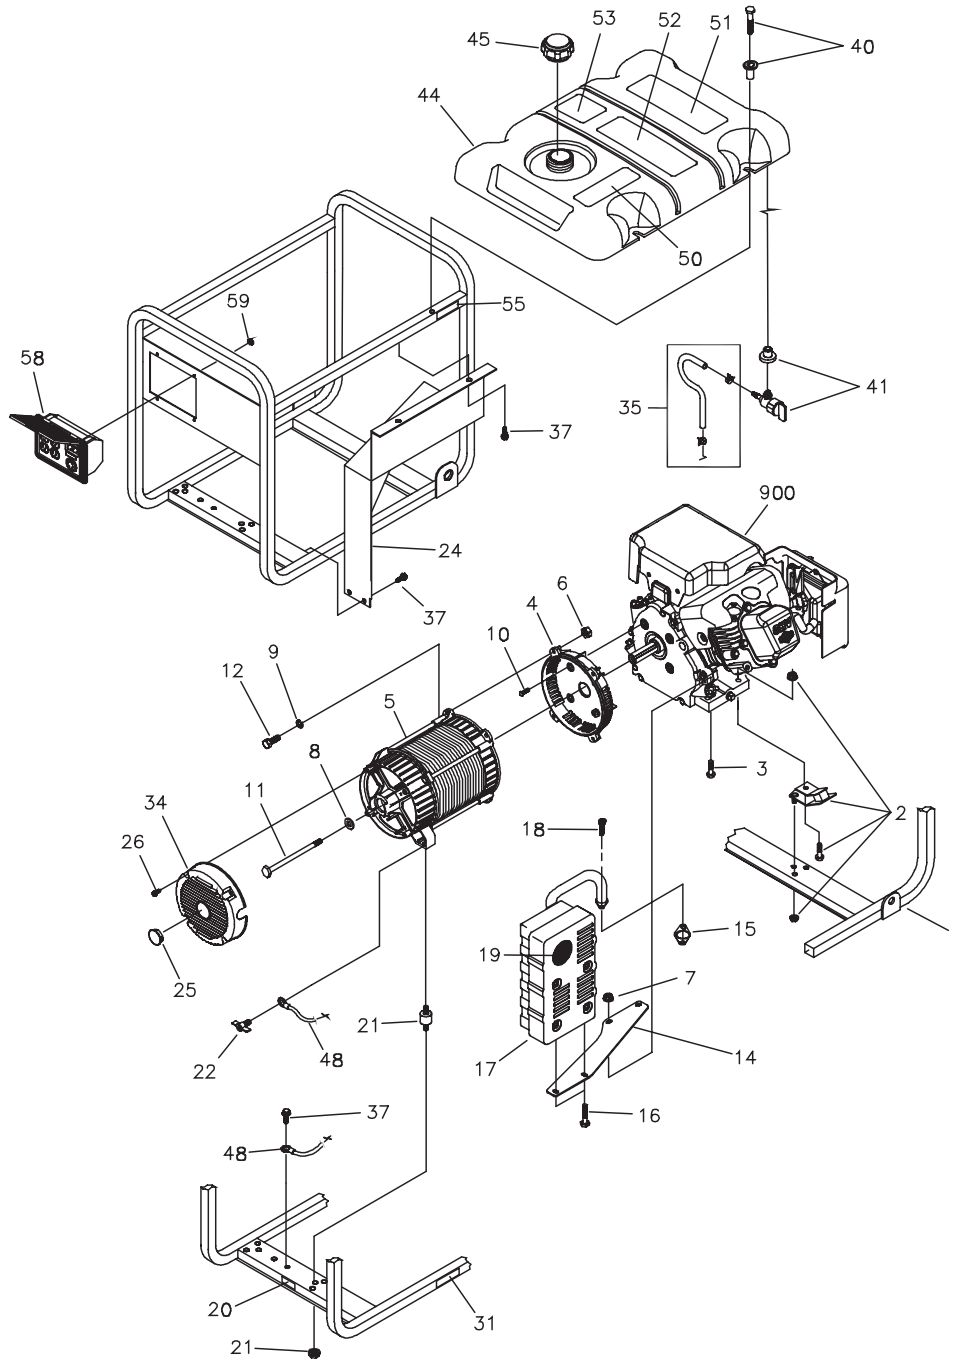

## EXPLODED VIEW - PARTS LIST

<b>Item</b>	<b>Part #</b>	<b>Description</b>	<b>Item</b>	<b>Part #</b>	<b>Description</b>
1	M194779GS	CRADLE	34	195422GS	COVER, RBC with Cap
2	194150GS	KIT, Vibration Mount	35	195207GS	KIT, Fuel Hose with Clamp
3	*	TPHMS, M8 1.25 x 35	37	B2153GS	HHCS, 12 - 14 x 7/8" Self Driller
4	186058AGS	HOUSING, Engine Adapter	40	194398GS	KIT, Fuel Tank Hardware
5	NSP	ASSY, Alternator (see page 4)	41	192980GS	KIT, Valve, Tank
6	*	NUT, Hex, M8 - 1.25	44	193645GS	ASSY., Tank, Fuel Service (includes Items 41, 50, 51, 52 & 53)
7	67989GS	NUT, M8 Flange Serrated	45	200095GS	CAP, Fuel
8	96796GS	WASHER, 8.4 x 22.2 x 3	48	195373GS	WIRE, Ground
9	*	WASHER, Lock M8	50	188333GS	DECAL, Fuel Level
10	86307GS	HHCS, 5/16-24 x 3/4, SEMS	51	194799GS	DECAL, Danger
11	24823GS	HHCS, 5/16-24 x 7-7/8"	52	189235GS	DECAL, Operating Instructions
12	*	HHCS, M8 - 1.25 x 25	53	202997GS	DECAL, CO Warning
14	191785GS	BRACKET, Muffler	55	197798GS	DECAL, Fuel Shut Off
15	697815	GASKET, Exhaust	58	191743AGS	ASSY, Control Panel
16	*	HHCS, M6 1.0 x 12 with Lock Washer	59	* (189164)	NUT, Palnut, 3/16"
17	188301GS	MUFFLER	900	§ (203492)	ENGINE
18	*	SHCS, M6 - 1.0 x 20			
19	83083GS	SCREEN, Spark Arrest			
20	B4986GS	DECAL, Ground			
22	86494GS	SCREW, Wing M6 - 1.0 x 16			
21	194153GS	KIT, Vibration Mount			
24	191790GS	SHIELD, Heat			
25	191190GS	CAP			
26	74908GS	TAPTITE, M5-0.8 x 10			
31	196830GS	DECAL, Caution Exhaust			


<b>Parts Not Illustrated</b>	
203476GS	MANUAL, Operator's
BB3061BGS	OIL BOTTLE
195576GS	KIT, Decals, Service

§ - Contact Engine Manufacturer

\* - Items without part numbers are common fasteners and are available at your local hardware store.




## EXPLODED VIEW AND PARTS LIST - ALTERNATOR

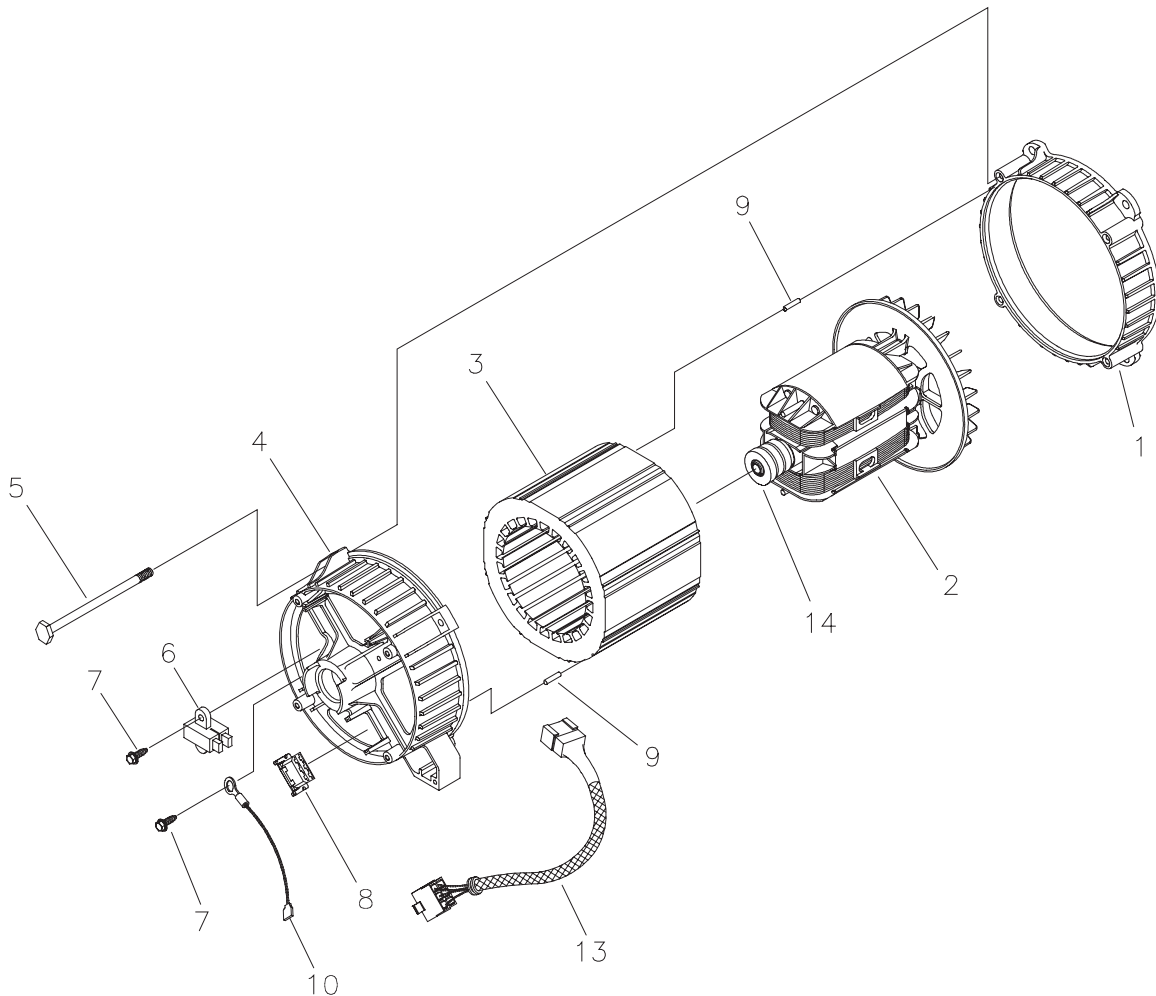

Item	Part #	Description
1	186059GS	ADAPTER, Mounting, Alternator
2	191685GS	ROTOR
3	191686AGS	STATOR
4	186060GS	RBC, with O-Ring (p/n 189197)
5	86308GS	HHCS, M6 - 1.0 x 115 SEMS
6	91825GS	ASSEMBLY, Holder, Rectifier/Brush
7	66849GS	TAPTITE, M5 - 0.8 x 16
8	22694GS	RECEPTACLE, 6 pin
9	81917GS	PIN, Roll, 4mm x 10
10	193428AGS	WIRE-A, Ground
13	194274GS	HARNESS, Wire, Power
14	65791GS	BEARING

## EXPLODED VIEW AND PARTS LIST - CONTROL PANEL

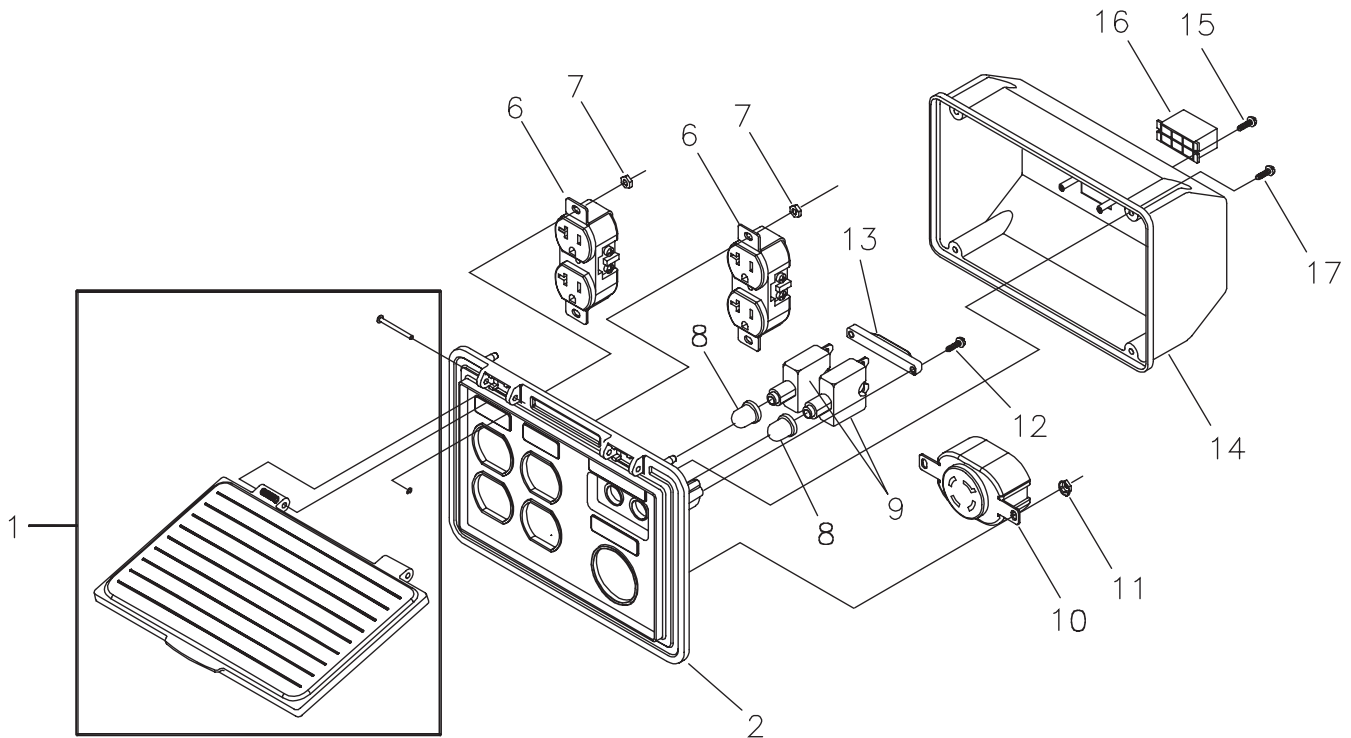


Item	Part #	Description
1	195112GS	KIT, Cover Control Panel
2	188889AGS	CONTROL PANEL, Compact
6	68759GS	OUTLET, 120V, 20A, Duplex
7	*	NUT, Palnut, Pushnut, 5/32
8	84198GS	CAP, Breaker, Circuit
9	75207DGS	BREAKER, Circuit
10	68867GS	OUTLET, 120/240V Locking, 20A
11	*	NUT, Palnut, Pushnut, 3/16
12	*	PPPHS, M3 - 0.5 x 18
13	93857GS	BAR, Retaining
14	188890GS	COVER, Back, Control Panel
15	*	SCREW, 3 x 18, Tapping
16	22694GS	HOUSING, Receptacle
17	*	SCREW, 3.5 x 14, Tapping

\* - Items without part numbers are common fasteners and are available at your local hardware store.



## EXPLODED VIEW AND PARTS LIST - WHEEL KIT

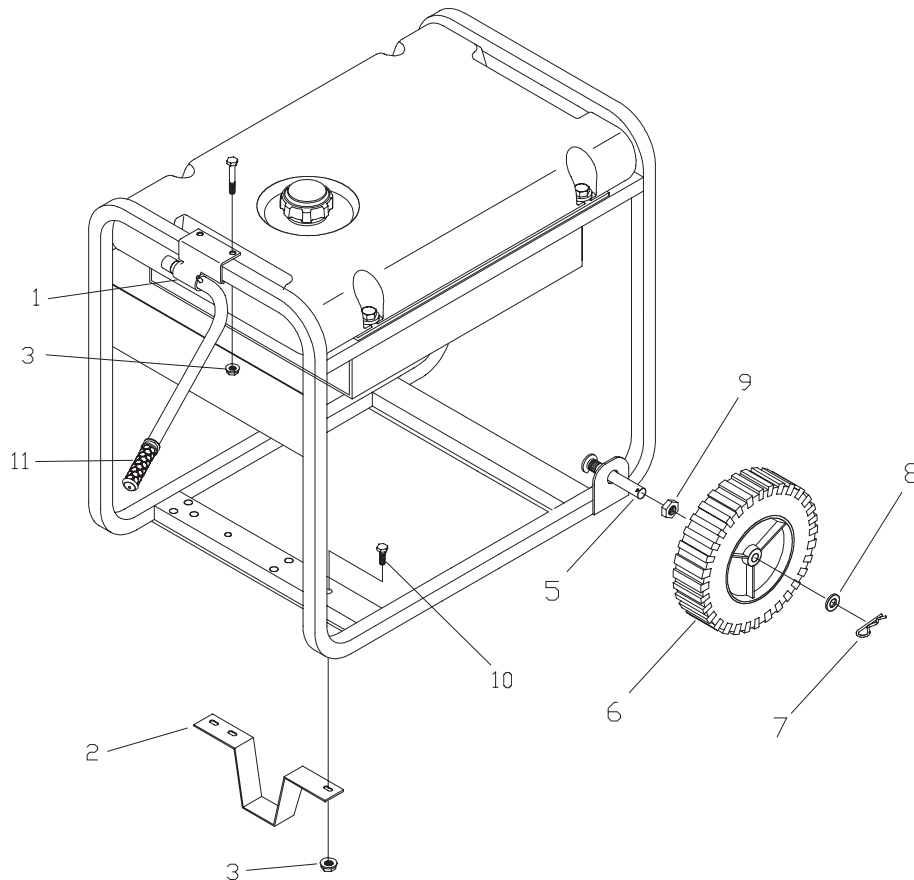

Item	Part #	Description
1	189715GS	ASSY, Handle (Includes Item 11)
2	94034GS	LEG, Mounting
3	67989GS	NUT, M8 Flange Serrated
4	*	HHCS, M8 - 1.25 x 45
5	93728GS	AXLE
6	197061GS	WHEEL
7	87005AGS	PIN
8	*	WASHER, Flat M12
9	94222QGS	NUT, 5/8 - 18 Jam Lock
10	*	HHCS, M8 - 1.25 x 20
11	189718GS	GRIP, Handle

### Parts Not Illustrated

191932GS SUBKIT, Hardware

\* - Items without part numbers are common fasteners and are available at your local hardware store.