PEDIATRIC WALKER - Sportrunner™
MARCHETTE POUR ENFANT - Sportrunner™
ANDADOR PEDIATRICO - Sportrunner™



Refer to page 2.
Se référer à la page 12.
Refiérase a la página 22.

INVACARE®

Pediatric Walker - Sportrunner™
Model Number 6210 - Small Size Frame
Model Number 6211 - Large Size Frame

The Pediatric Walker has a lifetime limited warranty

Features:

- ***Can be converted from a reverse postural (pulling) walker to a foward (pushing) walker.***
- ***Ergonomic release button helps fold walker frame easily***
- ***Removable padded backrest provides comfort and protection***

Options available:

- ***6212 - Pair of 5-inch fixed wheels (one-way rotational)***
- ***6213 - Pair of 5-inch fixed wheels (two-way rotational)***
- ***6214 - Pair of crutch tips***

SPECIFICATIONS	6210	6211
Width Inside Handgrips	14-inches	16-inches
Width Inside Base Legs	15-inches	20-inches
Depth Opened at Base	17-inches	20-inches
Depth folded	9-1/4-inches	7-inches
Height Adjustment (Min-Max)	16 - 21-inches	20-1/2 - 25-inches
Product Weight	7 lbs.	11.6 lbs.
Weight Capacity	65 lbs.	65 lbs.

SAVE THESE INSTRUCTIONS

NOTE: Check all parts for shipping damage. In case of shipping damage, DO NOT use. Contact Dealer/Carrier for further instruction.

SAFETY SUMMARY

The following recommendations are made for the safe operation of the PEDIATRIC WALKER - Sportrunner™:

GENERAL WARNING

DO NOT install or use this equipment without first reading and understanding these instructions. If you are unable to understand the Warnings, Cautions or Instructions, contact a healthcare professional, dealer or technical personnel before attempting to install this equipment - otherwise, injury or damage may occur.

Each individual should always consult with their physician or therapist to determine proper adjustment and usage.

STABILITY WARNINGS

Check to make sure crutch tips and wheels are not ripped, worn or missing. Replace BEFORE using walker.

DO NOT use crutch tips on front wheel inserts.

Short steps should be taken to assure weight is distributed evenly and directly over walker legs. These precautions will prevent uncontrollable movement of walker when pulling or pushing.

A physical/occupational therapist should assist in the placement and positioning of the hand grips for maximum support.

Care should be taken to ensure that ALL hand and height adjustments are secure, and that wheels and moving objects are in good working order before using this or any mobility aid.

All wheels MUST be in contact with the floor at ALL TIMES during use. This will ensure the walker is properly balanced.

Invacare Walkers can provide ambulatory assistance for an individual weighing up to 65 lbs. (29.48 kg.). Invacare Walkers are designed to provide support, increased stability and assistance to an individual while walking.

A physical/occupational therapist should assist in determining the appropriate orientation of the walker (pulling or pushing) for the user.

Height adjustment MUST be checked frequently with the assistance of a physical/occupational therapist to maintain proper height for the user.

SAFETY SUMMARY (continued)

FOLDING/ASSEMBLY WARNINGS

After unfolding or assembling walker, ensure that walker is securely locked in OPEN position and level to the ground BEFORE using.

DO NOT hang anything on either the left or right side frames or the left and right handle bars. This will cause side frames or handle bars to bend downward and prevent walker from locking into place when fully opened. This may also cause walker to tip, resulting in injury or damage.

INSTALLATION WARNINGS

Ensure ALL handle snap buttons fully protrude through adjustment holes of each front frame tube. This ensures that the handles are securely locked in position.

The handles should be adjusted so the walker is level.

Always test to see that the walker and attachments are properly and securely locked in place BEFORE using.

OPENING/FOLDING THE WALKER (FIGURE 1)

NOTE: Refer to INSTALLATION WARNINGS in the SAFETY SUMMARY in this instruction sheet.

1. Press the release button to unlock the lock bar.
2. Grasping the lock bar, pull until the walker is fully unfolded and an audible "click" is heard.
3. If necessary, unfold the handles by performing the following:
   A. Grasp the handle and pull towards side of the walker frame.
   B. Ensure both snap buttons fully protrude through both height adjustment holes.
   C. Repeat STEPS A-B on remaining handle.
4. Ensure both handles are even and at the correct height. Refer to ADJUSTING THE HANDLE BARS in this instruction sheet.
5. Reverse STEPS 1-3 to fold the walker.

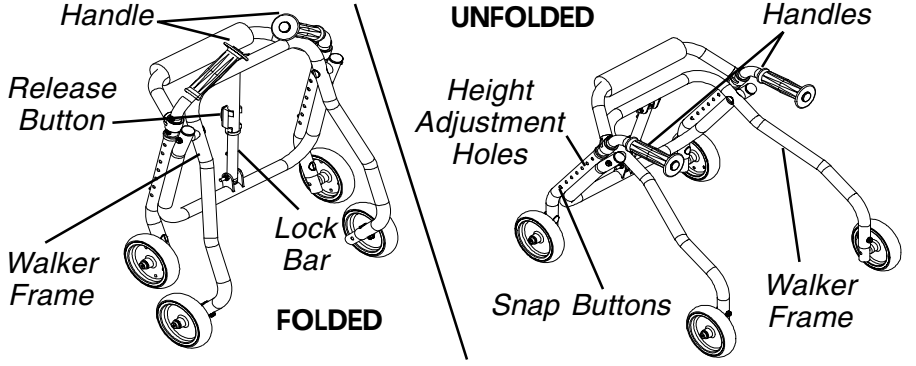


FIGURE 1 - OPENING/FOLDING THE WALKER

ADJUSTING THE HANDLE BARS (FIGURE 2)

NOTE: Refer to INSTALLATION WARNINGS in the SAFETY SUMMARY in this instruction sheet.

1. Depress both snap buttons and raise/lower the handle to the desired height.
2. Ensure both snap buttons fully protrude through one (1) of seven (7) sets of height adjustment holes in the front frame tube.
3. Repeat STEPS 1-2 on remaining handle.

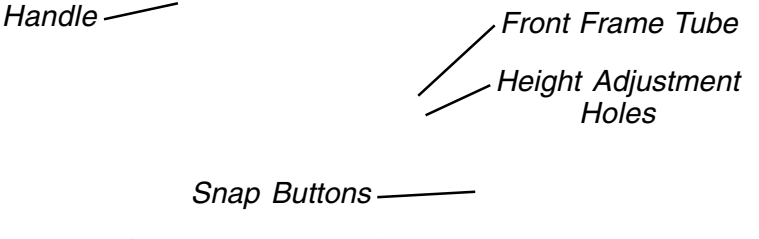


FIGURE 2 - ADJUSTING THE HANDLE BARS

WHEELS (FIGURE 3)

Replacing The Wheel

NOTE: Refer to INSTALLATION WARNINGS in the SAFETY SUMMARY in this instruction sheet.

1. Remove the set screw from the wheel insert.
2. Perform one (1) of the following:

   One-Way Wheels: Remove the existing mounting screw, washer and spacer that secure the existing one-way wheel to the wheel insert.

   Two-Way Wheel: Remove the existing mounting screw, washer, bushing and spacer that secure the existing two-way wheel to the wheel insert.
3. Remove EXISTING wheel and discard.
4. Reverse STEPS 1-2 to install the NEW wheel.

Replacing The One-Way Wheels With Two-Way Wheels

NOTE: Refer to INSTALLATION WARNINGS in the SAFETY SUMMARY in this instruction sheet.

NOTE: two way wheels are shipped assembled to the wheel insert.

1. Remove the mounting screw, washer and locknut securing the one-way wheel and EXISTING wheel insert to the tube frame.
2. Remove the one-way wheel and EXISTING wheel insert and discard.
3. Insert the NEW wheel insert with two-way wheel into the tube frame and secure with mounting screw, washer and locknut.

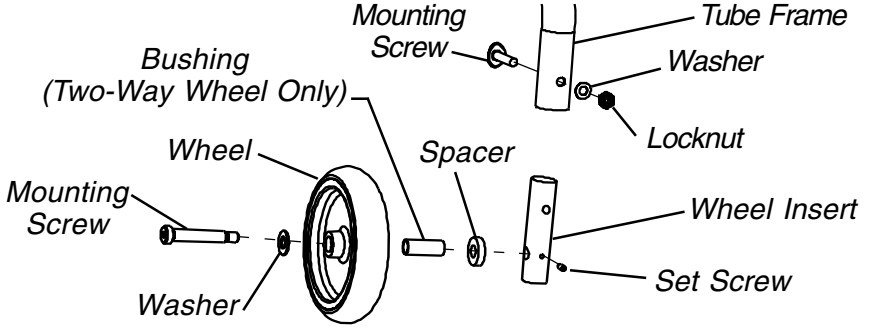


FIGURE 3 - REPLACING THE WHEELS/REPLACING THE ONE-WAY WHEELS WITH TWO-WAY WHEELS

CONVERTING THE REVERSE POSTURAL (PULLING) WALKER TO A FOWARD (PUSHING) WALKER (FIGURE 4)

NOTE: Refer to INSTALLATION WARNINGS in the SAFETY SUMMARY in this instruction sheet.

NOTE: Walker is shipped in the reverse postural (pulling) walker configuration.

NOTE: Right, Left, Front, and Rear sides are determined from using the walker in the reverse postural (pulling) configuration.

NOTE: Two (2) of the four (4) wheels provided with the walker are "one-way" wheels, which roll in only one (1) direction. This allows the walker to be used as either a reverse postural (pulling) walker, or a forward (pushing) walker.

NOTE: On a reverse postural (pulling) walker both of the one-way wheels are mounted to the rear frame tubes. On a forward (pushing) walker both one-way wheels are mounted to the front frame tubes.

NOTE: Take note of the location and orientation of the one-way wheels before removal.

NOTE: When installing the one-way wheels into the front frame tubes, their position is reversed in order to change the direction of rotation.

1. Remove the four (4) mounting screws, washers and locknuts that secure the four (4) wheel inserts to the walker frame. Remove the four (4) wheel inserts.
2. Install the right two-way wheel insert into the right rear frame tube. Secure with mounting screw, washer, and locknut.
3. Install the left two-way wheel insert into the left rear frame tube. Secure with mounting screw, washer, and locknut.
4. Install the right one-way wheel insert into the left front frame tube. Secure with mounting screw, washer and locknut.
5. Install the left one-way wheel insert into the right front frame tube. Secure with mounting screw, washer and locknut.

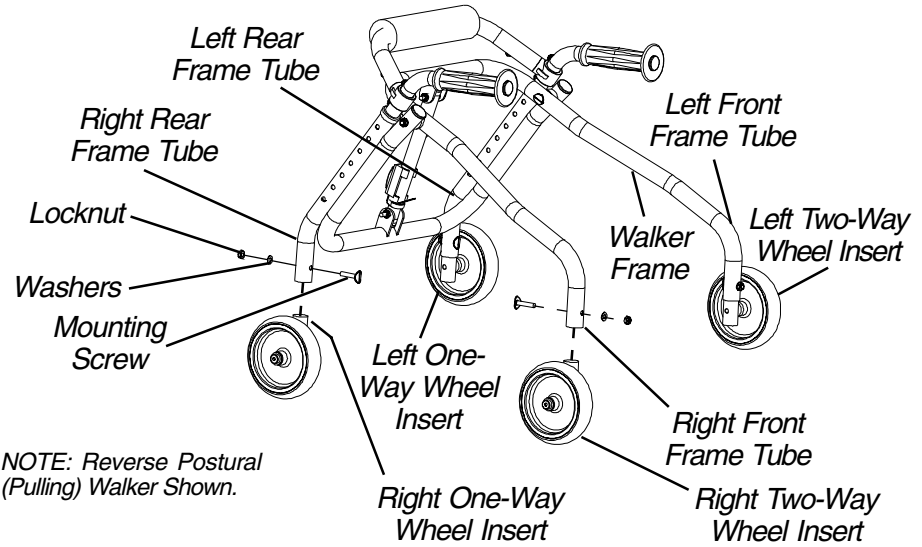


FIGURE 4 - CONVERTING THE REVERSE POSTURAL (PULLING) WALKER TO A FORWARD (PUSHING) WALKER

REPLACING THE WALKER PAD (FIGURE 5)

NOTE: Refer to INSTALLATION WARNINGS in the SAFETY SUMMARY in this instruction sheet.

1. Separate the hook and loop strips and remove the pad cover.
2. Remove the EXISTING walker pad crossmember.
3. Slide the NEW walker pad over the crossmember.
4. Reinstall the pad cover and secure with hook and loop strips.

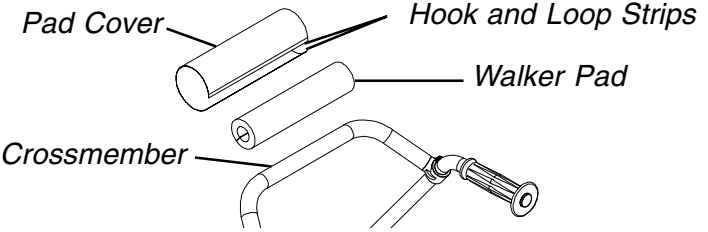


FIGURE 5 - REPLACING THE WALKER PAD

INSTALLING THE CRUTCH TIPS (FIGURE 6)

NOTE: Refer to INSTALLATION WARNINGS in the SAFETY SUMMARY in this instruction sheet.

NOTE: Rear wheels are determined from the users position.

1. Remove the rea r wheel. Refer to REPLACING THE WHEEL in this instruction sheet.
2. Slide crutch tip on to the wheel insert in the rear frame tube.
3. Repeat STEPS 1-2 on remaining rear wheel.

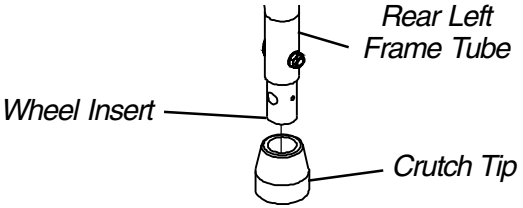


FIGURE 6 - INSTALLING THE CRUTCH TIPS

REPLACING THE GRIPS (FIGURE 7)

NOTE: Refer to INSTALLATION WARNINGS in the SAFETY SUMMARY in this instruction sheet.

1. Remove the EXISTING grip and end plug. Discard both.
2. Apply a thin coat of hair spray on the inside of the NEW grip and on to the handle.

NOTE: This application will make it easier to slide the grip onto the push handle bar.

3. Slide NEW grip onto one end of the push handle.
4. Install NEW end plug.

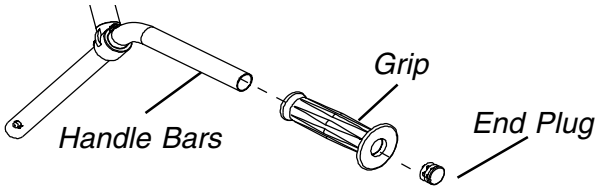


FIGURE 7 - REPLACING THE GRIPS

LIFETIME LIMITED WARRANTY

Invacare warrants this product to be free from defects in materials and workmanship

PLEASE NOTE: THE WARRANTY BELOW HAS BEEN DRAFTED TO COMPLY WITH FEDERAL LAW APPLICABLE TO PRODUCTS MANUFACTURED AFTER JULY 4, 1975.

This warranty is extended only to the original purchaser/user of our products.

This warranty gives you specific legal rights and you may also have other legal rights which vary from state to state.

Invacare warrants its product to be free from defects in material and workmanship for the lifetime of use by original purchaser. If within such warranty period any such product shall be proven to be defective, such product shall be repaired or replaced, at Invacare's option. This warranty does not include any labor or shipping charges incurred in replacement part installation or repair of any such product. Invacare's sole obligation and your exclusive remedy under this warranty shall be limited to such repair and/or replacement.

For warranty service, please contact the dealer from whom you purchased your Invacare product. In the event you do not receive satisfactory warranty service, please write directly to Invacare at the address on the back page. Provide dealer's name, address, model number, date of purchase, indicate nature of the defect and, if the product is serialized, indicate the serial number.

Invacare Corporation will use a return authorization. The defective unit or parts must be returned for warranty inspection using the serial number, when applicable, as identification within thirty (30) days of return authorization date. DO NOT return products to our factory without our prior consent. C.O.D. shipments will be refused; please prepay shipping charges.

LIMITATIONS AND EXCLUSIONS: THE WARRANTY SHALL NOT APPLY TO PROBLEMS ARISING FROM NORMAL WEAR OR FAILURE TO ADHERE TO THE ENCLOSED INSTRUCTIONS. IN ADDITION, THE FOREGOING WARRANTY SHALL NOT APPLY TO SERIAL NUMBERED PRODUCTS IF THE SERIAL NUMBER HAS BEEN REMOVED OR DEFACED; PRODUCTS SUBJECTED TO NEGLIGENCE, ACCIDENT, IMPROPER OPERATION, MAINTENANCE OR STORAGE; OR PRODUCTS MODIFIED WITHOUT INVACARE'S EXPRESS WRITTEN CONSENT (INCLUDING, BUT NOT LIMITED TO MODIFICATION THROUGH THE USE OF UNAUTHORIZED PARTS OR ATTACHMENTS, PRODUCTS DAMAGED BY REASON OF REPAIRS MADE TO ANY COMPONENT WITHOUT THE SPECIFIC CONSENT OF INVACARE; PRODUCTS DAMAGED BY CIRCUMSTANCES BEYOND INVACARE'S CONTROL; PRODUCTS REPAIRED BY ANYONE OTHER THAN AN INVACARE DEALER). SUCH EVALUATION SHALL BE SOLELY DETERMINED BY INVACARE.

THE FOREGOING WARRANTY IS EXCLUSIVE AND IN LIEU OF ALL OTHER EXPRESS WARRANTIES, IF ANY, INCLUDING THE IMPLIED WARRANTIES OF MERCHANTABILITY AND FITNESS FOR A PARTICULAR PURPOSE, AND SHALL NOT EXTEND BEYOND THE DURATION OF THE EXPRESSED WARRANTY PROVIDED HEREIN AND THE REMEDY FOR VIOLATIONS OF ANY IMPLIED WARRANTY SHALL BE LIMITED TO REPAIR OR REPLACEMENT OF THE DEFECTIVE PRODUCT PURSUANT TO THE TERMS CONTAINED HEREIN. INVACARE SHALL NOT BE LIABLE FOR ANY CONSEQUENTIAL OR INCIDENTAL DAMAGES WHATSOEVER.

THIS WARRANTY SHALL BE EXTENDED TO COMPLY WITH STATE/PROVINCIAL LAWS AND REQUIREMENTS.



Invacare Corporation • ONE INVACARE WAY • Elyria, Ohio 44036-4028 USA • (800) 333-6900

Invacare Canada, Inc. • 5970 Chedworth Way • Mississauga, Ontario L5R 3T9 Canada (800) 668-5324

Form No. 00-105 P/N 1098350 Rev. A (1)-8/00 Printed in USA