




WASHER/DRYER CONTROL PANEL PARTS

For Models: LTE5243DQ4, LTE5243DT4
(Designer White) (Biscuit)

WASHER/DRYER
LAUNDRY SYSTEM

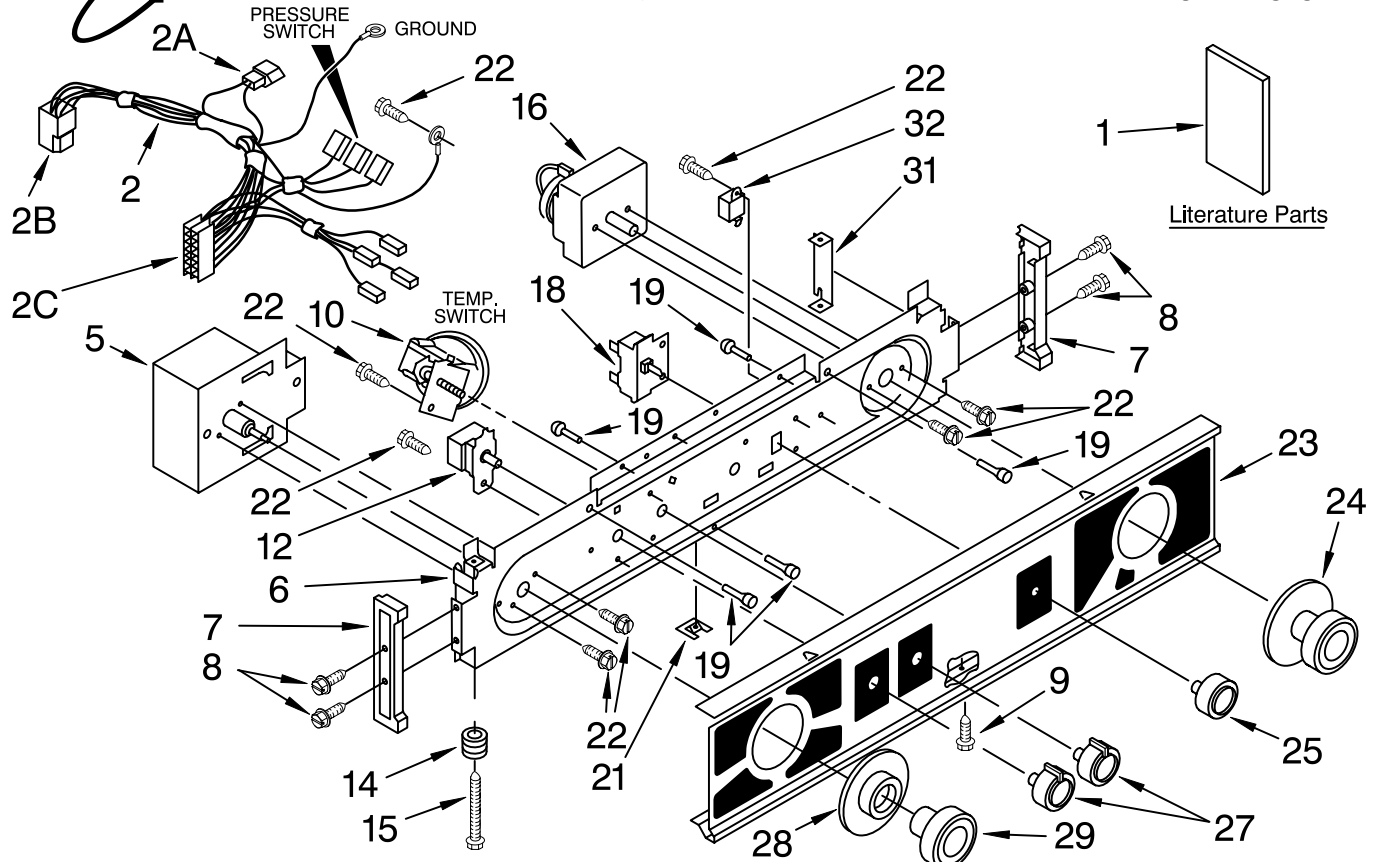


Illus. No.	Part No.	DESCRIPTION	Illus. No.	Part No.	DESCRIPTION	Illus. No.	Part No.	DESCRIPTION
1	8542748	Literature Parts Installation Instructions	5	3952499	Timer, Control (60 Hz.) (Automatic Washer)	22	3390646	Screw, (8-18 x 5/16)
	3406880	Use & Care Guide	6	8528154	Bracket, Control	23	3977194	White Panel, Control
	3954159	Energy Guide	7		End Cap, Console (L.H. & R.H.)		3977195	Biscuit
	8542754	Sheet, Cycle Feature		692993	White	24		Knob, Timer (Dryer)
	3952874	Wiring Diagram		3978584	Biscuit		3406143	White
2	3406288	Harness, Console Wiring (Automatic) (Includes Illus. 2A, 2B & 2C)	8	348689	Screw, End Cap Mounting (4)		3978872	Biscuit
2A	3350130	Plug, Terminal (2-Way) (Connects With Main Dryer Harness)	9	694091	Screw, Mounting (2)	25		Knob, Push-To-Start
2B	696073	Receptacle, Connector (Connects With Lower Automatic Harness)	10	3362987	Switch, Water Level		3406133	White
2C	3948614	Disconnect Block (Connects With Automatic Timer)	12	8054142	Switch, Water Temperature		3978871	Biscuit
			14	693151	Spring, Console Lock (2)	27		Knob, Control (2)
			15	3400860	Screw, Console Lock (2)		3950759	White
			16	3406720	Timer, Control (60 Hz.) (Dryer) (Timer Motor Not Serviceable)		3978873	Biscuit
			18	3977456	Switch, Push-To-Start	28		Dial, Timer (Washer)
			19	693152	Bumper, Console (5)		3950762	White
			21	694037	Clip, Console		3978870	Biscuit
						29		Knob, Timer (Washer)
							3951026	White
							3978869	Biscuit
						31	692983	Lock, Console (2)
						32	694419	Buzzer

FOR ORDERING INFORMATION REFER TO PARTS PRICE LIST

DRYER FRONT PANEL AND DOOR PARTS

For Models: LTE5243DQ4, LTE5243DT4
(Designer White) (Biscuit)

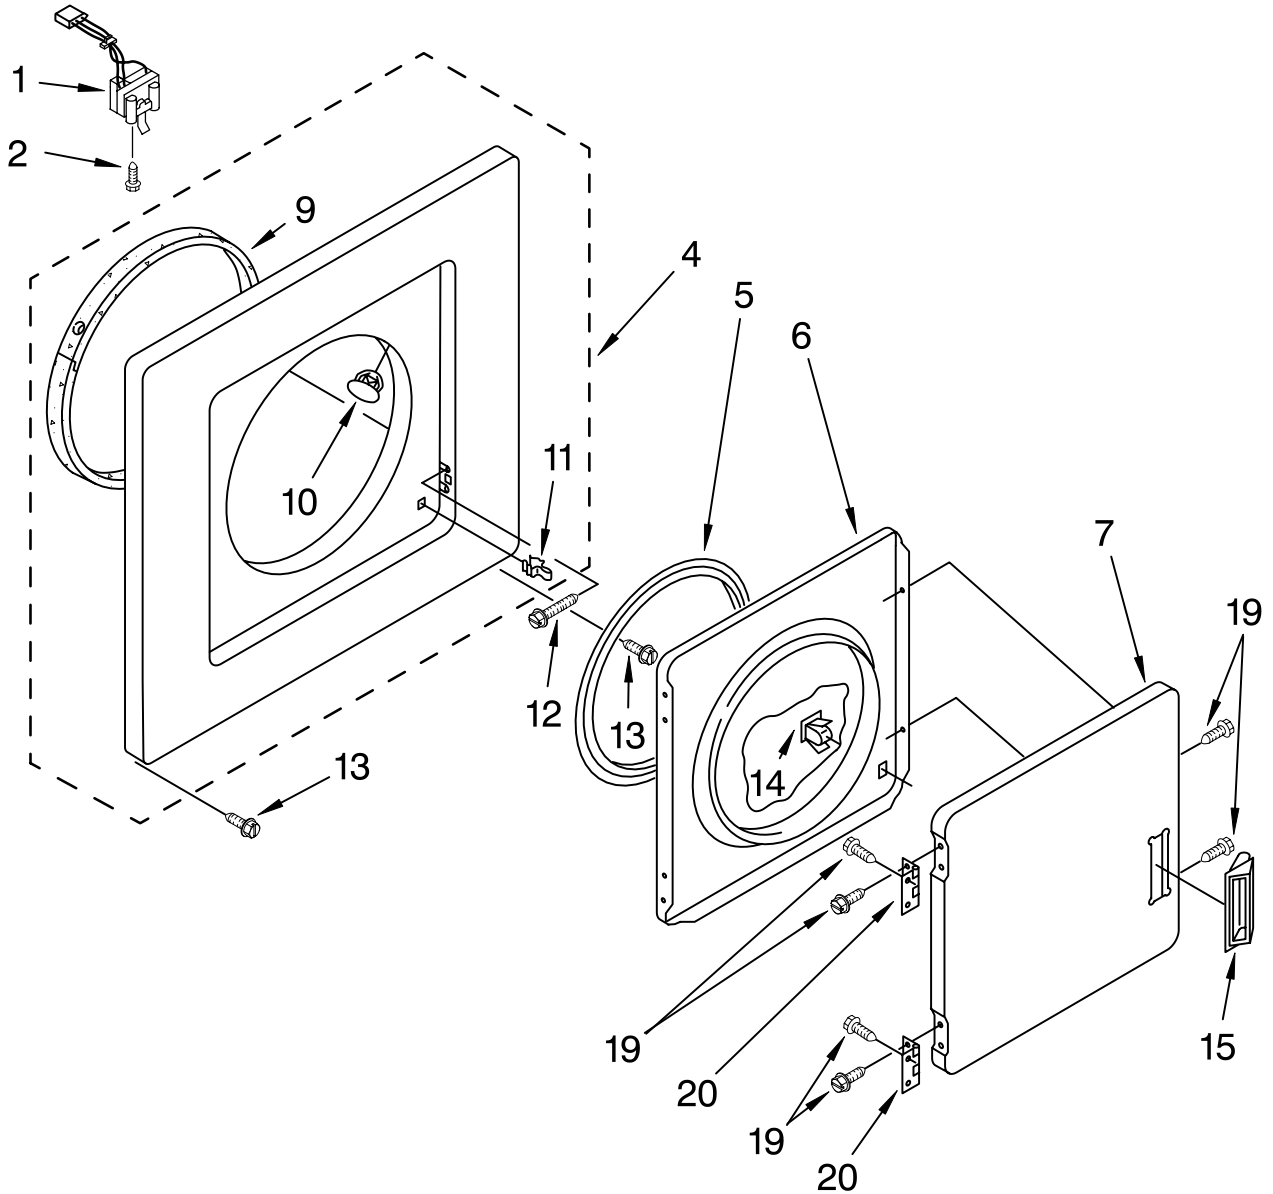


Illus. No.	Part No.	DESCRIPTION	Illus. No.	Part No.	DESCRIPTION	Illus. No.	Part No.	DESCRIPTION
1	3406108	Door Switch	10	685203	Clip, Felt Pad (2)	14	3389441	Catch, Door
2	697773	Screw, 6-20 x 7/8	11	696144	Strike, Panel	15	686711	White
4	692619	Panel, Front White	12	3390663	Screw, Door Switch Mounting (2)	19	3978592	Biscuit
5	3978587	Biscuit	13	343641	Screw, 10-16 x 1/2 (2) (Front Panel To Side Panel)	19	694091	Screw, Door Mount To
6	3390734	Seal, Door				20	348023	Hinge & Pin, Door (2)
7	695656	Door, Rear						
	348205	White						
	3978598	Biscuit						
9	8066123	Bearing & Seal						

FOR ORDERING INFORMATION REFER TO PARTS PRICE LIST

DRYER CABINET AND MOTOR PARTS

For Models: LTE5243DQ4, LTE5243DT4
(Designer White) (Biscuit)

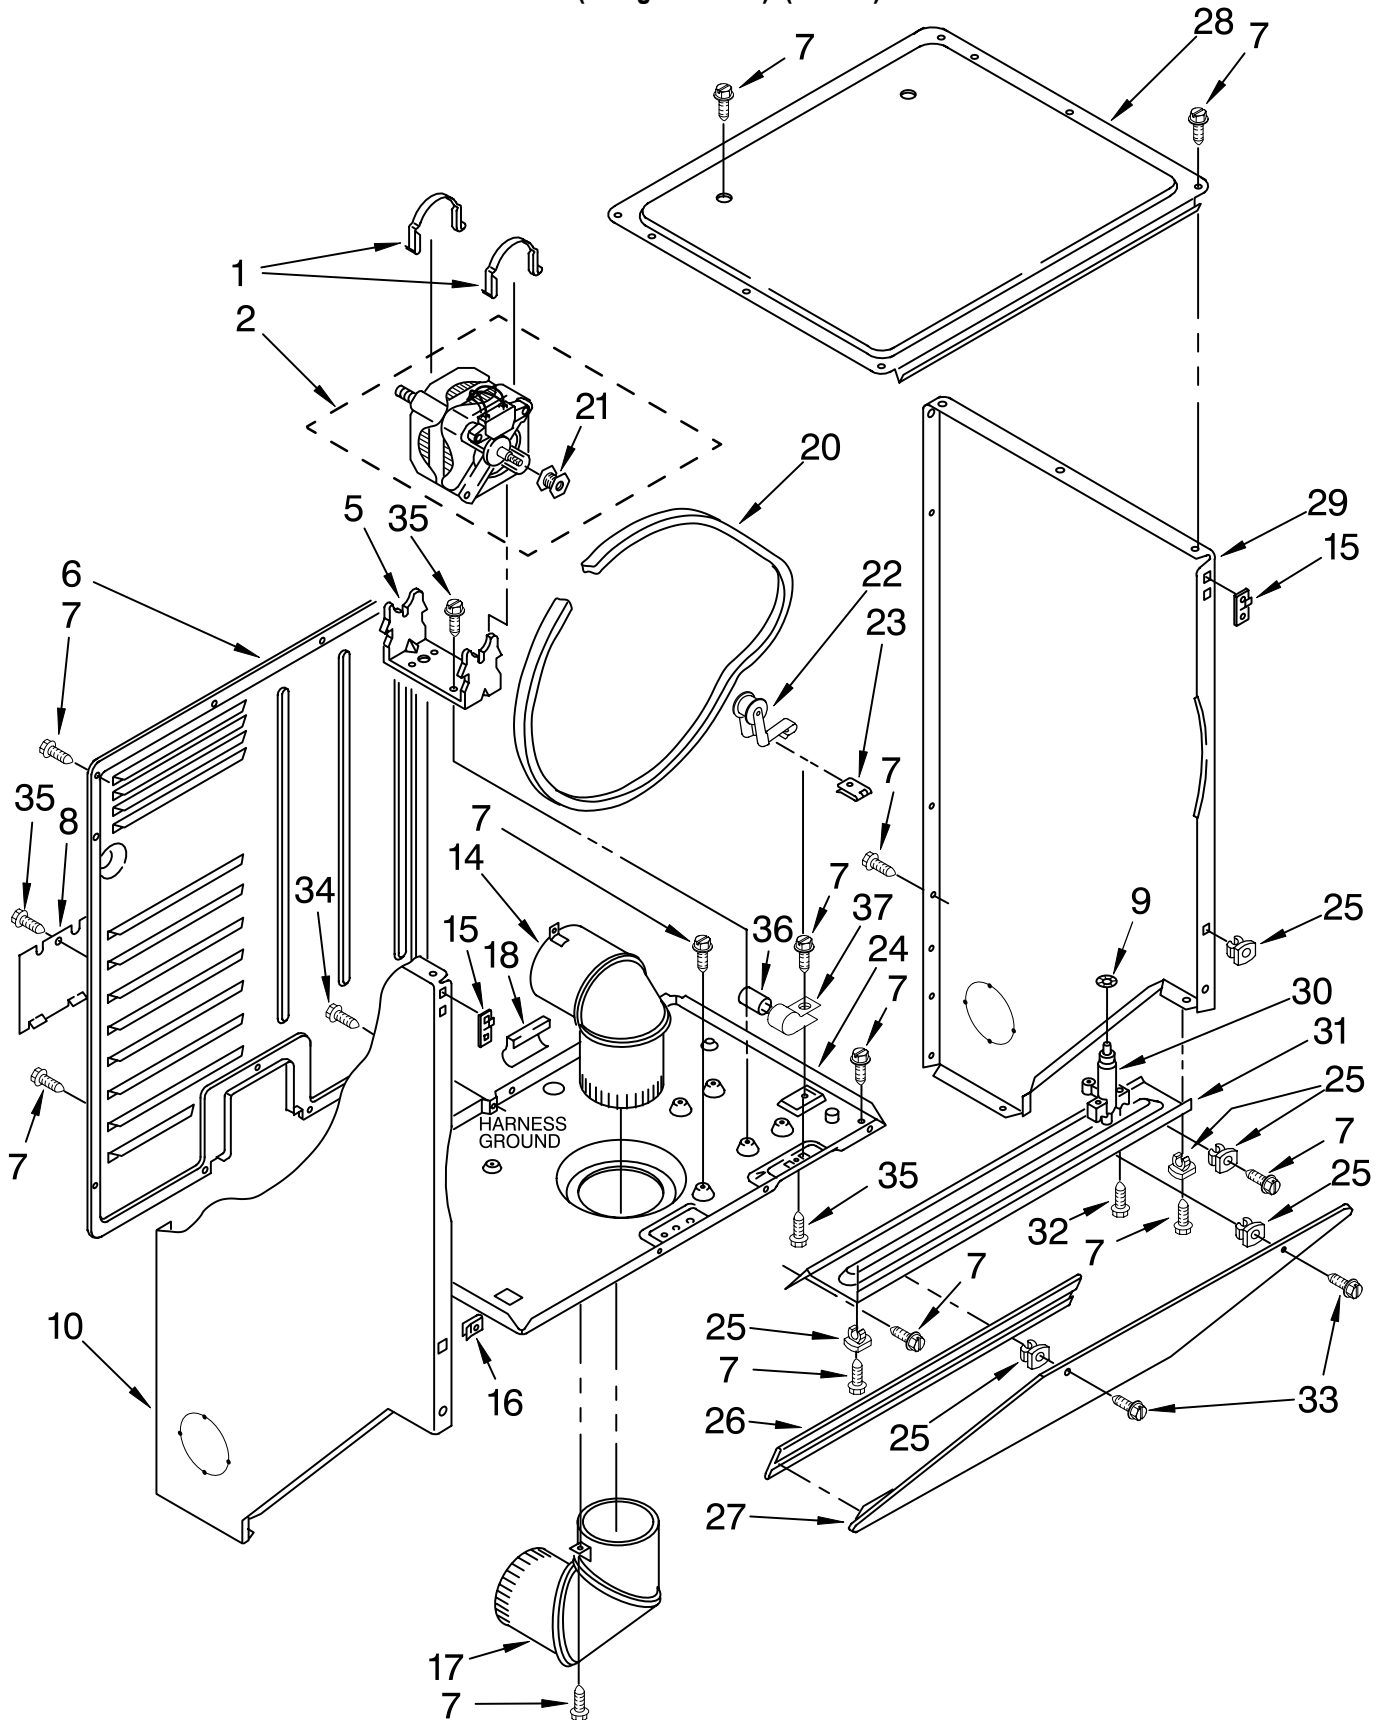

FOR ORDERING INFORMATION REFER TO PARTS PRICE LIST

DRYER CABINET AND MOTOR PARTS


For Models: LTE5243DQ4, LTE5243DT4
(Designer White) (Biscuit)

Illus. No.	Part No.	DESCRIPTION
1	660658	Clamp, Motor Mounting (2)
2	8538265	Motor, Main Drive (60 Hz.)
5	696541	Bracket, Motor
6	3390405	Panel, Rear
7	343641	Screw, 10-16 x 1/2
8	3394228	Cover, Terminal Block
9	90296	Clip
10		Panel, Side (L.H.)
	3402293	White
	3978589	Biscuit
14	3399602	Elbow, Upper
15	3394083	Clip, Front Panel (2)
16	98234	Clip, Ground
17	3399603	Elbow, Lower
18	686770	Support, Protector
20	8066064	Belt, Drive
21	8066051	Pulley, Motor (60 Hz.)
22	691366	Idler & Pulley Assembly
23	692771	Nut, Idler Bracket To Base
24	3399632	Base, Dryer
25	692400	Nut, Push-In
26	692926	Cove, Transition Panel (Black)
27		Panel, Transition
	692933	White
	3978591	Biscuit
28	692641	Top, Dryer
29		Panel, Side (R.H.)
	3402287	White
	3978590	Biscuit
30	693145	Latch, Lid
31		Closure, Control Area
	692781	White
	3978599	Biscuit
32	354975	Screw & Washer (3) (Lid Latch Mounting)
33	693304	Screw & Washer (2) (Transition Panel To Closure)
34	697776	Screw, Ground (10-32 x 5/8)
35	3390631	Screw, 10-16 x 3/8
36	661606	Capacitor, Motor Start (Automatic Washer)
37	357030	Clamp, Capacitor

FOR ORDERING INFORMATION REFER TO PARTS PRICE LIST

DRYER BULKHEAD PARTS

For Models: LTE5243DQ4, LTE5243DT4
(Designer White) (Biscuit)

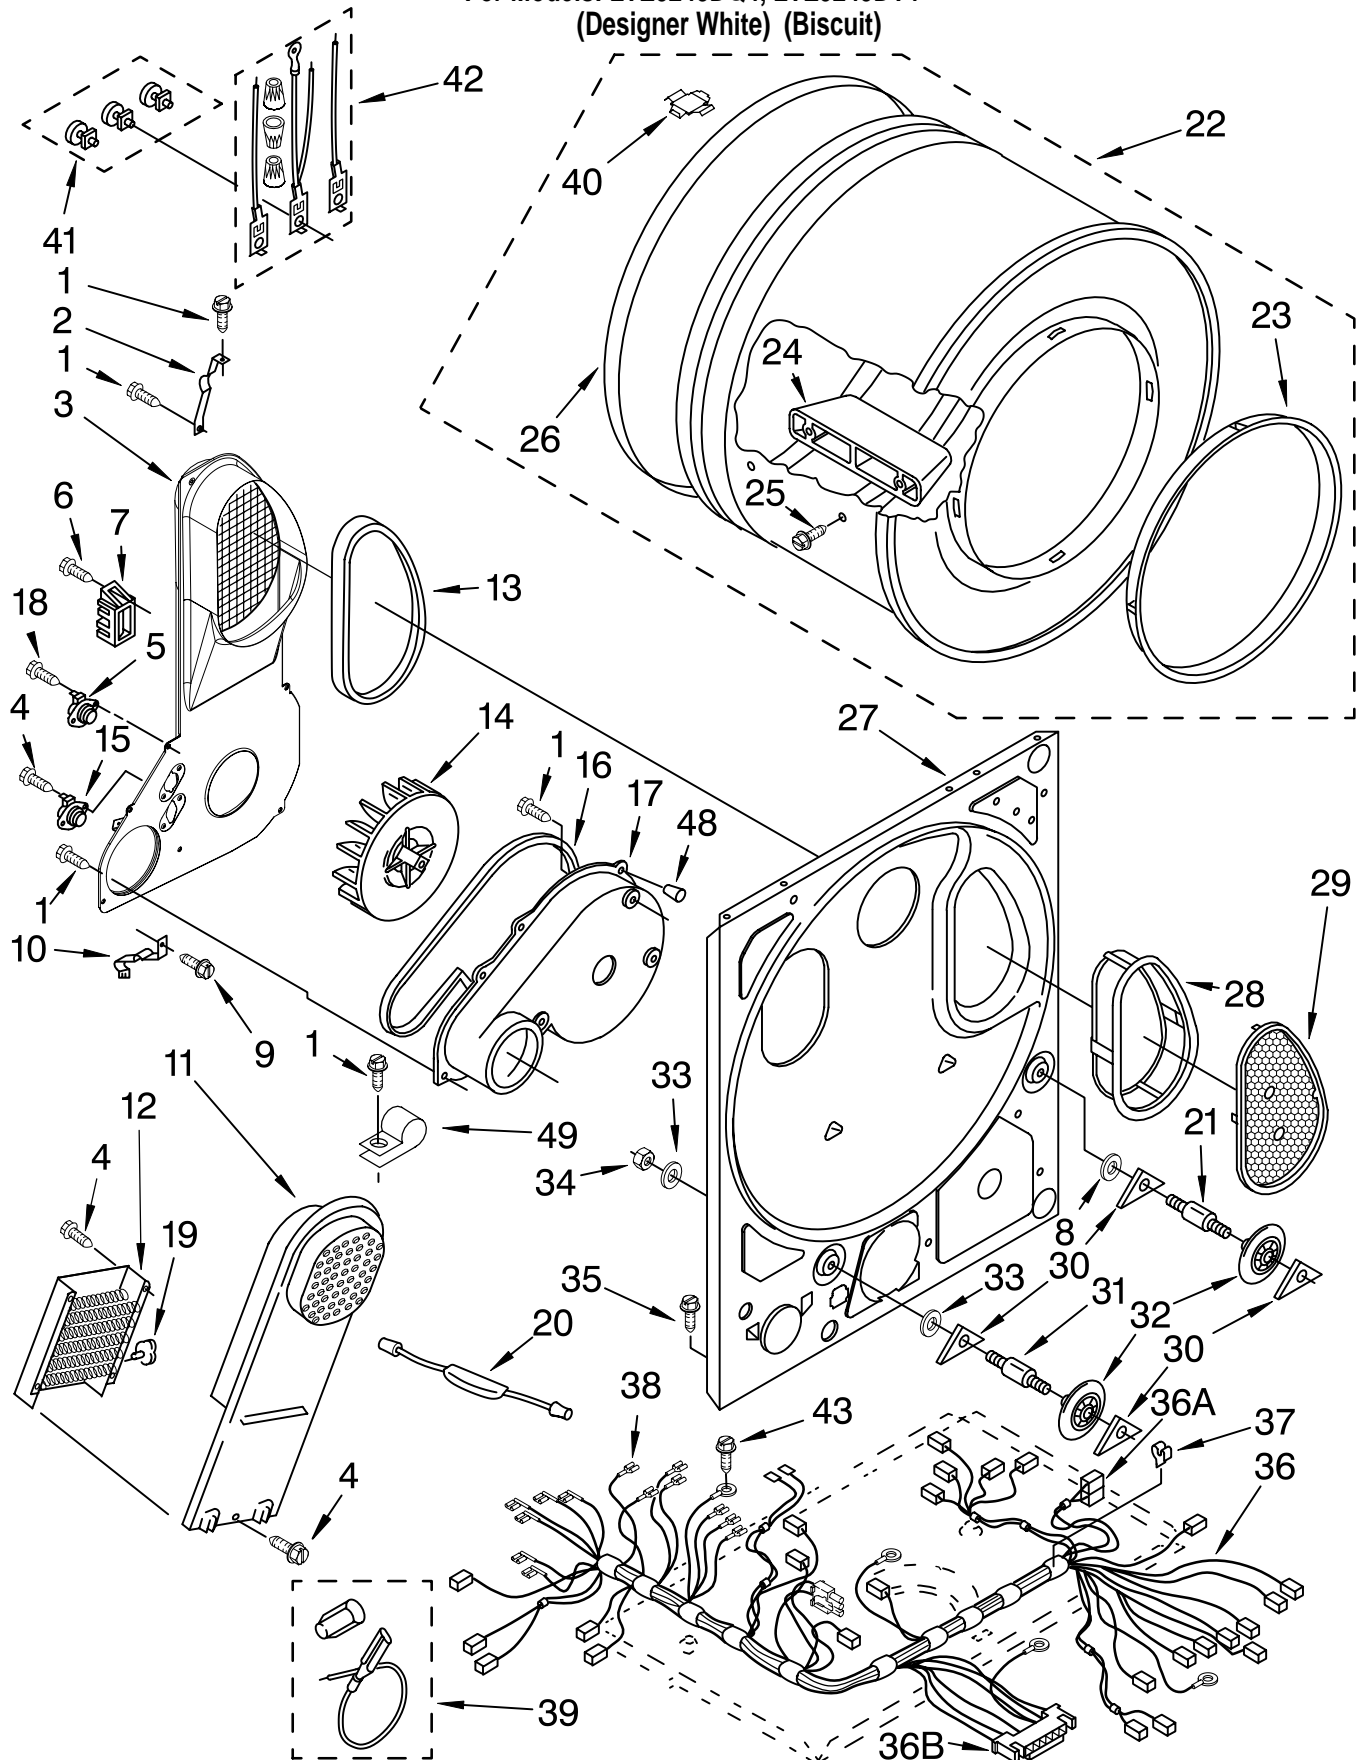

FOR ORDERING INFORMATION REFER TO PARTS PRICE LIST

DRYER BULKHEAD PARTS


For Models: LTE5243DQ4, LTE5243DT4
(Designer White) (Biscuit)

Illus. No.	Part No.	DESCRIPTION	Illus. No.	Part No.	DESCRIPTION	Illus. No.	Part No.	DESCRIPTION
1	343641	Screw, 10-16 x 1/2	20	3406652	Resistor Assembly	36A	717252	Receptacle, Terminal (2-Way) (Connects With Door Switch Harness)
2	3395396	Clip, Air Duct To Bulkhead	21	3399507	Shaft, Drum Roller (R.H.)			
3	8566186	Air Duct & Bracket	22	695943	Drum, Dryer	36B	3395683	Receptacle, Multi-Terminal (Connects With Motor)(Dryer)
4	90767	Screw, 8-18 x 3/8	23	3394508	Ring, Bearing			
5	3398128	Thermostat, Internal Bias	24	685207	Baffle, Drum (3)			
6	3393008	Screw, Terminal Block To Bracket (2)	25	97787	Screw, Baffle Mounting (6) (11-16 x 3/4)			
7	3397659	Block, Terminal	26	345648	Seal, Drum Rear	37	693141	Clip, Wiring Harness (3)
8	3388703	Washer	27	695931	Bulkhead	38	94614	Terminal
9	489463	Screw, 8-18 x 5/8	28	8531964	Lint Screen	39	279457	Wire Kit (For Heater Element Wiring Harness Repair)
10	3398161	Clip, Heater Box To Bulkhead	29	8531967	Cover, Lint Screen Outlet			
11	3401380	Heater Box	30	690997	Tri-Ring (4)	40	8066086	Drum,Hole Plug
12	3403586	Element, Heater	31	3399506	Shaft, Drum Roller (L.H.)	41	279393	Screw Kit (For Terminal Block)
13	339956	Seal, Air Duct To Bulkhead	32	3397588	Roller, Support (2)			
14	696426	Wheel, Blower	33	348197	Washer, Support (4)	42	279318	Terminal, Tinned & Brass (3) (Includes Illus. 41)
15	3403607	Thermal Limiter 195°F (91C)	34	3359452	Nut, 3/8-16 (2)			
16	8066094	Seal, Fan Scroll	35	3390631	Screw, 10-16 x 3/8	43	697776	Screw, Ground (2) (10-32 x 5/8)
17	696418	Fan Scroll	36	3406941	Harness, Main Dryer Wiring (Includes Nos.36A, 36B)	48	359702	Cap, Screw
18	3390647	Screw, 8-18 x 1/2				49	255563	Clip, Strain Relief
19	3404154	Thermostat, Heater Box (200°F)						

FOR ORDERING INFORMATION REFER TO PARTS PRICE LIST

DRYER SUPPORT AND WASHER PARTS

For Models: LTE5243DQ4, LTE5243DT4
(Designer White) (Biscuit)

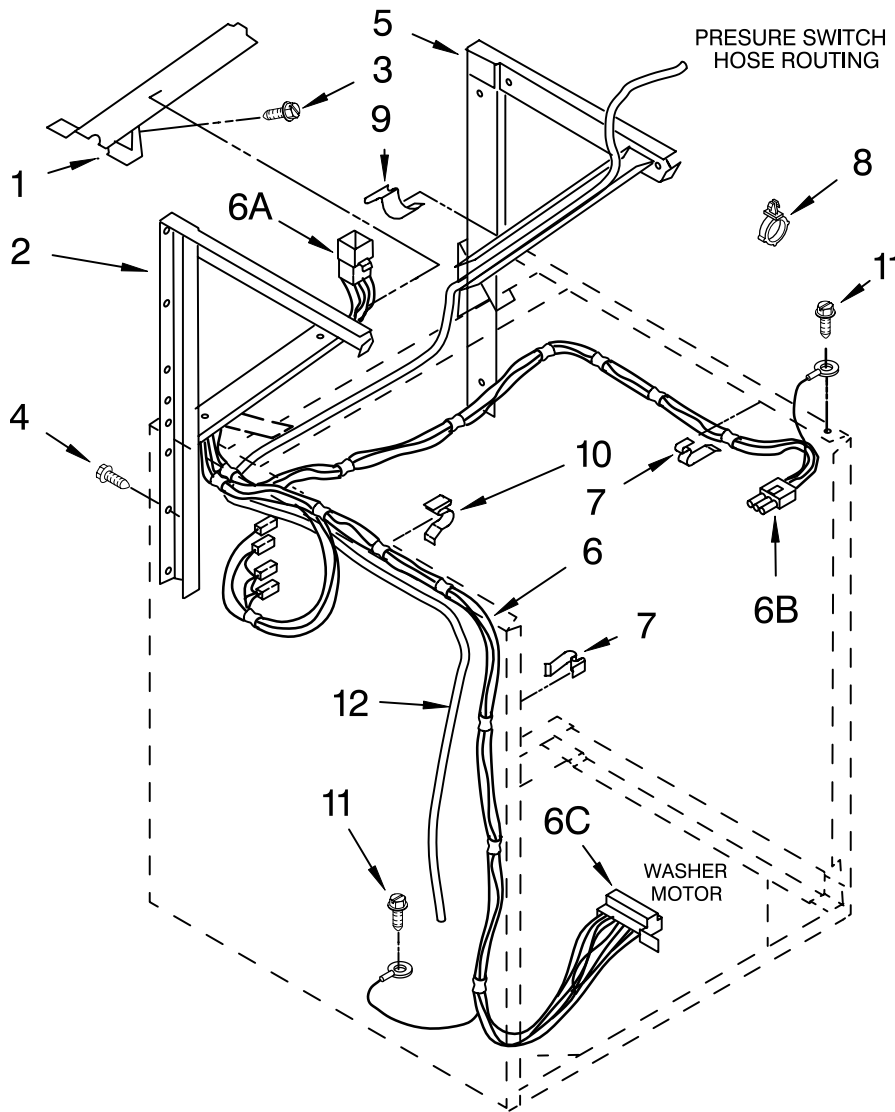


Illus. No.	Part No.	DESCRIPTION
1	694304	Cover, Channel
2	692647	Support, Dryer (L.H.)
3	343641	Screw, 10-16 x 1/2
4	3400000	Screw, 10-24 x 3/8 (8) (Washer Cabinet To Dryer Supports)
5	692646	Support, Dryer (R.H.)
6	3954108	Harness, Lower (Automatic) (Includes Illus. 6A, 6B & 6C)
6A	696074	Plug, Terminal (12-Way) (Connects With Automatic Console Harness)
6B	62889	Plug, Terminal (3-Way) (Connects With Automatic Lid Switch Harness)
6C	62505	Block, Disconnect (Connects With Automatic Washer Motor)
7	3347812	Clip, Wiring Harness (4)
8	3352501	Clip
9	90016	Clip, Pressure Switch Hose (2)
10	693141	Clip, Harness And Hose
11	3351614	Screw, 10-24 x 3/8
12	8066080	Hose, Pressure Switch

FOR ORDERING INFORMATION REFER TO PARTS PRICE LIST

WASHER TOP AND LID PARTS

For Models: LTE5243DQ4, LTE5243DT4
(Designer White) (Biscuit)

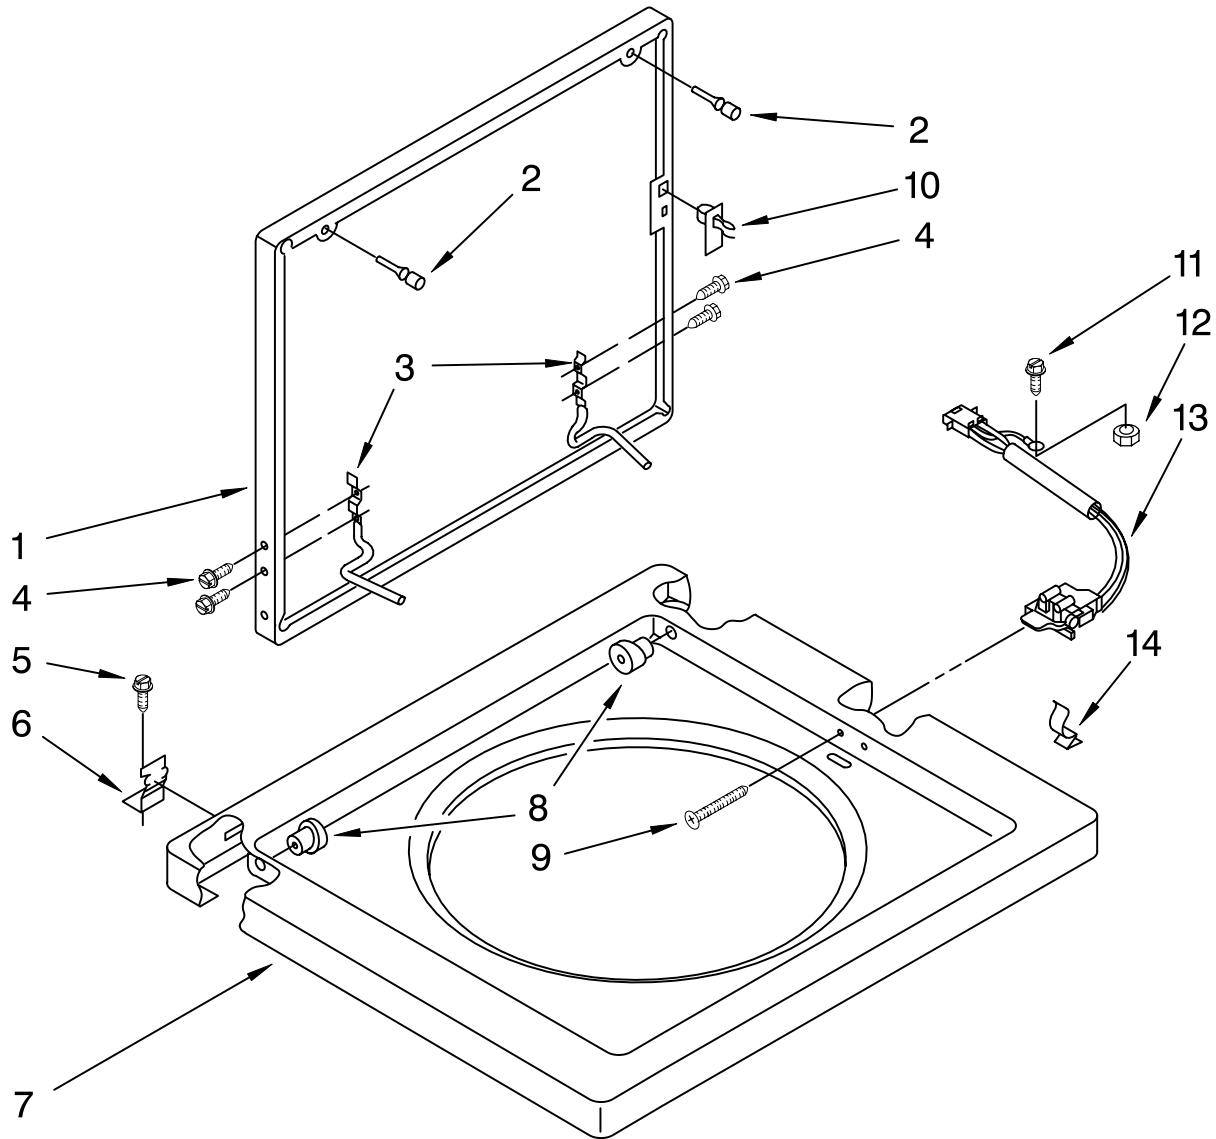

Illus. No.	Part No.	DESCRIPTION
1	3398843	Lid White
	3398847	Biscuit
2	384475	Bumper, Lid (2)
3	91770	Hinge, Lid (2)
4	3351355	Screw, Lid Hinge Mounting (4)
5	343641	Screw, 10-16 x 1/2

Illus. No.	Part No.	DESCRIPTION
6	692985	Clip, Spring (2) (Top To Cabinet)
7	384693	White Top
	3978593	Biscuit
8	21258	Bearing, Lid Hinge (2)
9	3356311	Screw & Washer, Lid Switch Shield (2)


Illus. No.	Part No.	DESCRIPTION
10	358684	Strike, Lid Switch
11	3400030	Screw, Ground (10-24 x 1/2)
12	8533959	Nut, Ground Screw (10-24)
13	3355806	Switch, Lid
14	90016	Clip, Harness Routing

FOR ORDERING INFORMATION REFER TO PARTS PRICE LIST

WASHER CABINET PARTS

For Models: LTE5243DQ4, LTE5243DT4

(Designer White) (Biscuit)

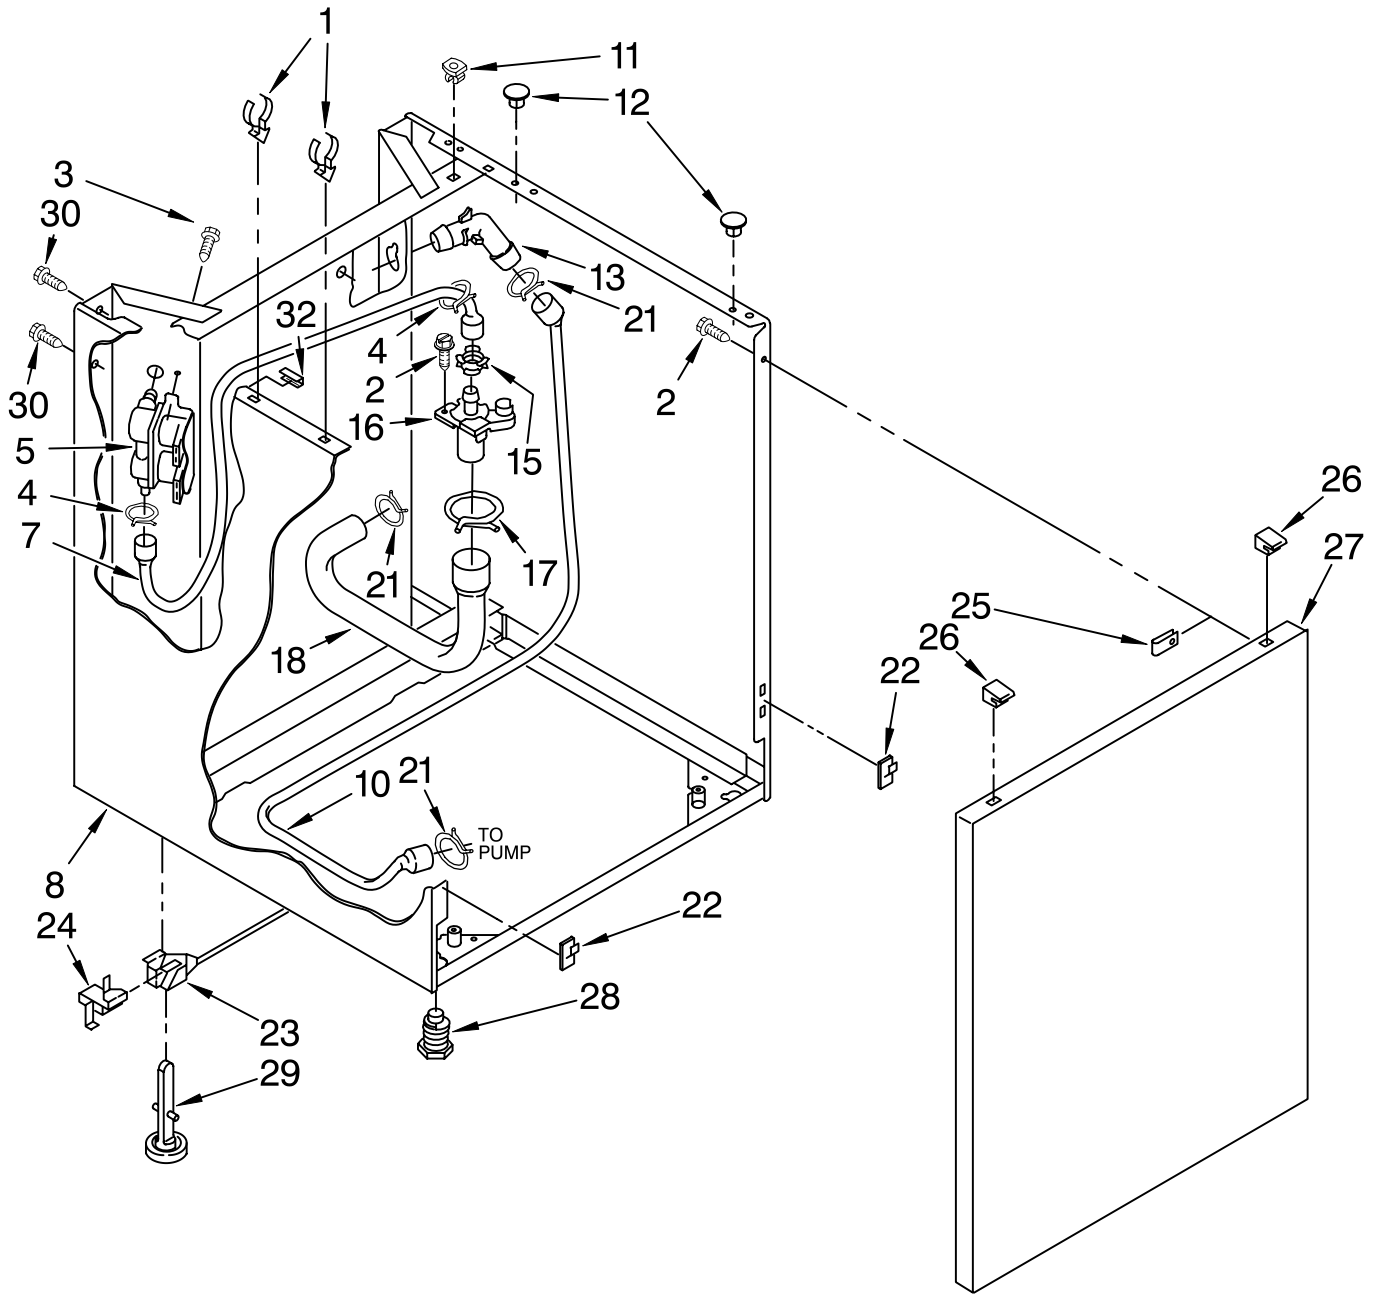

FOR ORDERING INFORMATION REFER TO PARTS PRICE LIST

WASHER CABINET PARTS

For Models: LTE5243DQ4, LTE5243DT4
(Designer White) (Biscuit)


Illus. No.	Part No.	DESCRIPTION
1	356746	Clip, Condenser
2	343641	Screw, 10-16 x 1/2
3	9740848	Screw, Mixing Valve Mounting (8-18 x 1/2)
4	370451	Clamp, Hose
5	3952163	Valve, Water Mixing
7	692699	Hose, Water Inlet (Siphon Break To Mixing Valve)
8		Cabinet
	696013	White
	3978594	Biscuit
10	696710	Hose, Drain
11	692400	Nut, Push-In (2)
12	660975	Plug, Top To Cabinet
13	8557915	Connector, Hose
15	356471	Cap, Siphon Break
16	356363	Siphon Break
17	272861	Clamp, Hose
18	696394	Hose, Water Inlet (Siphon Break To Tub Ring)
21	660628	Clamp, Hose
22	3394083	Clip, Front Panel (2)
23	358652	Link, Leveling
24	359364	Clip, Leveling Mechanism (2)
25	98234	Clip, Ground
26	345670	Lock, Top (2)
27		Panel, Front
	692628	White
	3978596	Biscuit
28	367594	Foot, Front (2)
29	358594	Foot, Rear (2)
30	3400000	Screw, 10-24 x 3/8 (Washer Cabinet To Dryer Supports)
32	3390046	Protector, Edge

BRAKE, CLUTCH, GEARCASE, MOTOR AND PUMP PARTS

For Models: LTE5243DQ4, LTE5243DT4
(Designer White) (Biscuit)

Illus. No.	Part No.	DESCRIPTION
1	387948	Brake And Drive Tube (Complete) (Refer To Page 16 For Further Breakdown)
2	63292	Washer, Spin Tube Thrust
3	62697	Ring, Spin Tube Support
4	63283	Ring, Retainer
5	3951312	Clutch (Complete)
6	3951308	Band And Lining (Includes Illus. 7 & 8)
7	3946846	Spring, Clutch
8	62646	Cap, Clutch Spring (2)
9	3360630	Gearcase (Complete)(Refer To Page 15 For Further Breakdown)

Illus. No.	Part No.	DESCRIPTION
10	3357334	Screw, (3) (Gearcase To Tub Support)
11	62611	Plate, Motor Mount To Gearcase
13	3364003	Coupling, Motor & Isolating
14	661600	Motor, Main Drive
16	3946532	Plate, Motor
18	3363394	Pump, Complete
19	8546127	Retainer, Pump
20	62850	Switch, Main Drive Motor
21	62691	Grommet, Motor (4)
22	3349637	Retainer, Motor (2)
23	3350013	Foam
24	3387485	Screw, 10-16 x 5/8
25	3355454	Clip (Anti-Rattle)

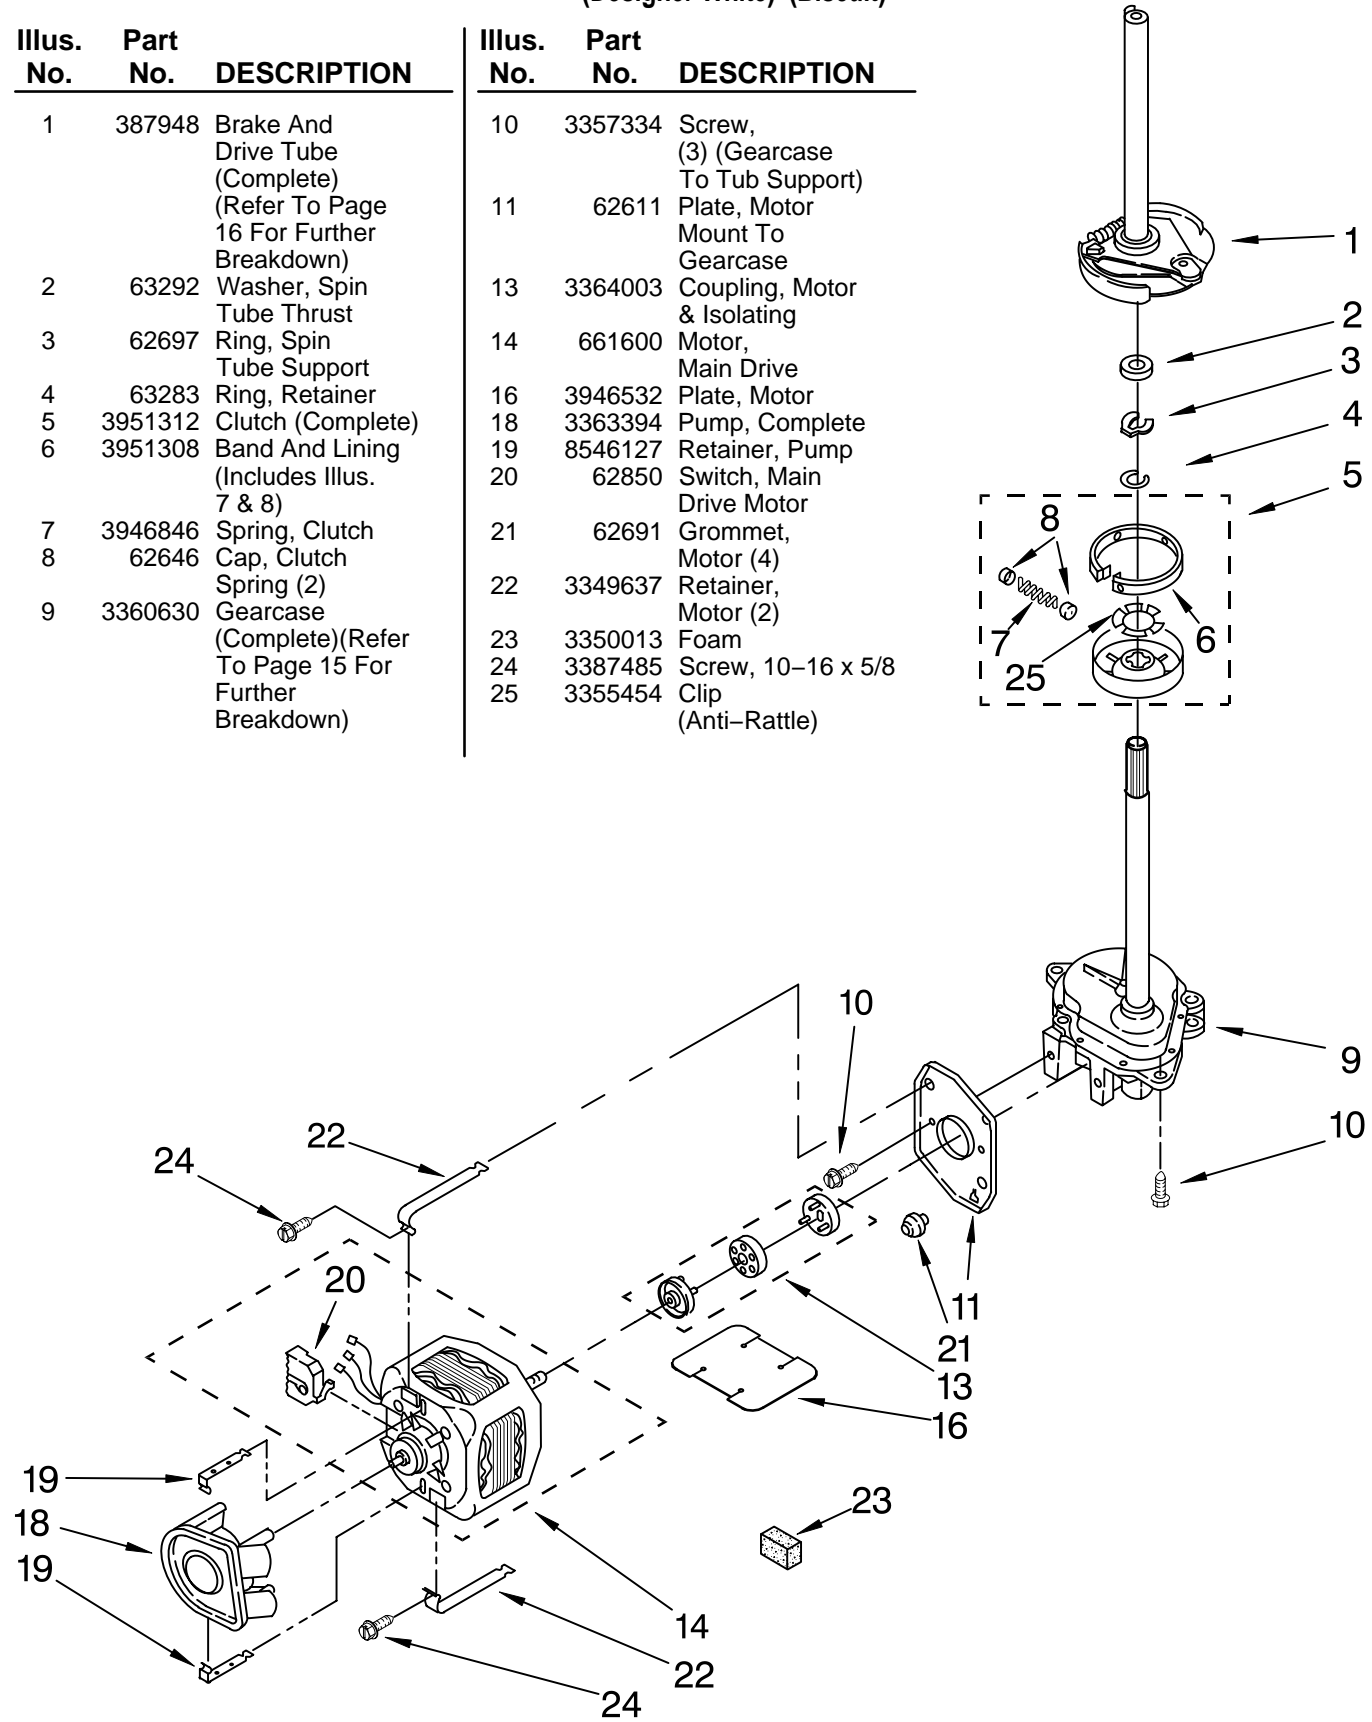


FOR ORDERING INFORMATION REFER TO PARTS PRICE LIST

MACHINE BASE PARTS

For Models: LTE5243DQ4, LTE5243DT4

(Designer White) (Biscuit)

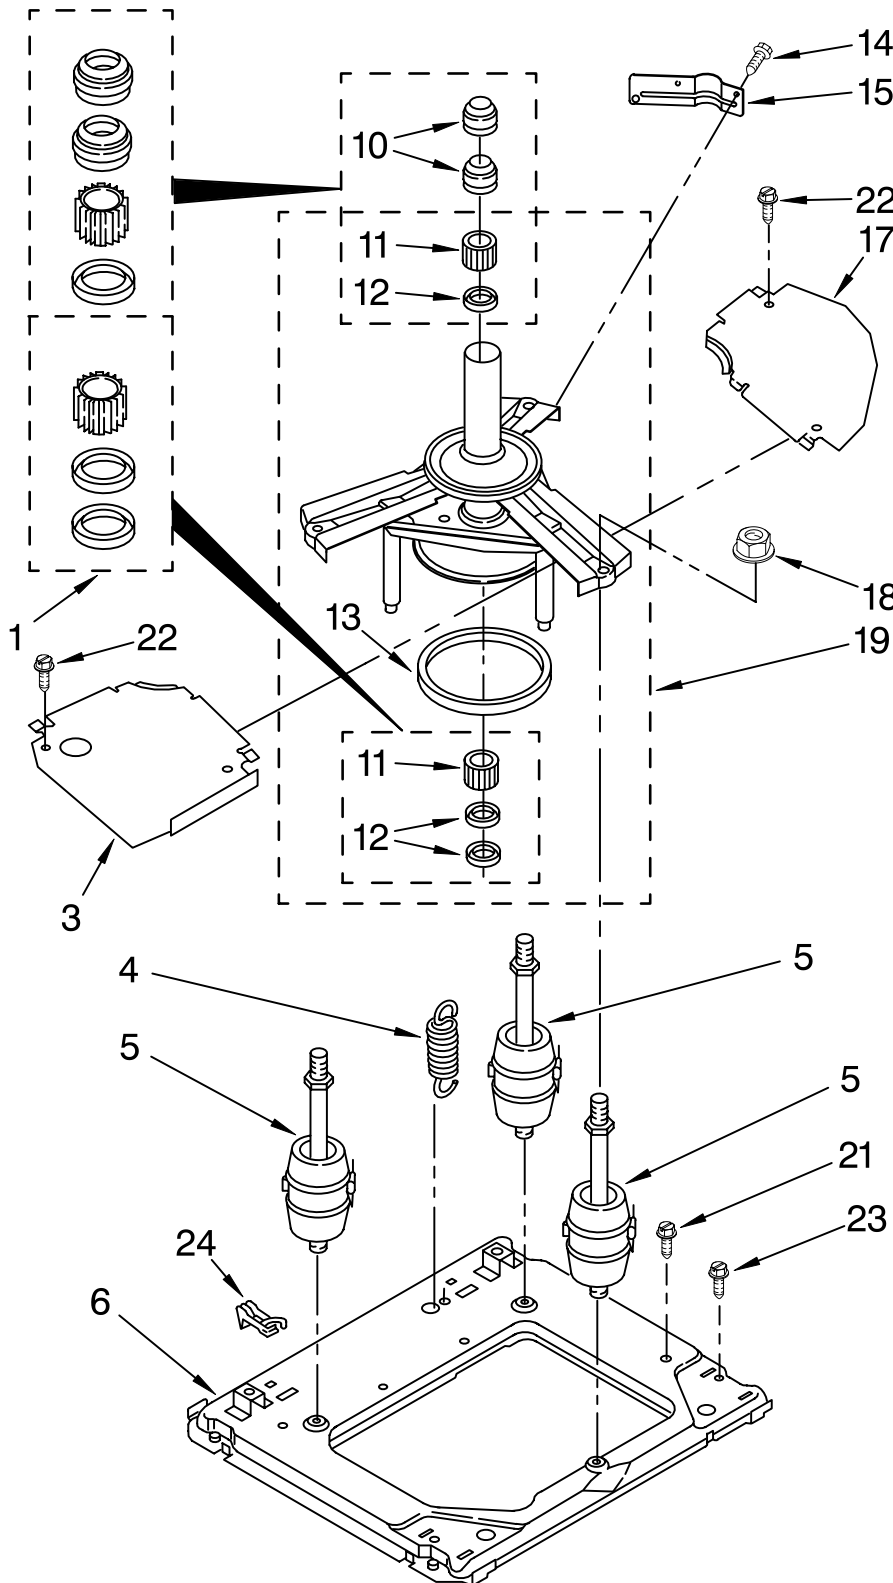


Illus. No.	Part No.	DESCRIPTION
1	285203	Centerpost Bearing Kit (Incls. Illus. 10, 11, & 12)
3	64137	Shield, Tub
4	388492	Spring, Counterweight
5	3406201	Suspension Assembly (3)
6	63755	Base
10	356934	Seal, Centerpost
11	3347047	Bearing, Centerpost (2)
12	357409	Seal, Centerpost
13	63134	Ring, Sound Deadening
14	343641	Screw, 10-16 x 1/2
15	63636	Bracket, Counterweight Spring
17	63637	Shield, Tub
18	3351021	Nut, 1/2 - 13 (3)
19	63740	Tub Support and Drum
21	3351614	Screw, 10-24 x 3/8
22	90767	Screw, 8-18 x 3/8
23	386011	Screw & Washer (Base To Cabinet)
24	696044	Block, Restraint

FOR ORDERING INFORMATION REFER TO PARTS PRICE LIST

WATER SYSTEM PARTS


For Models: LTE5243DQ4, LTE5243DT4
(Designer White) (Biscuit)

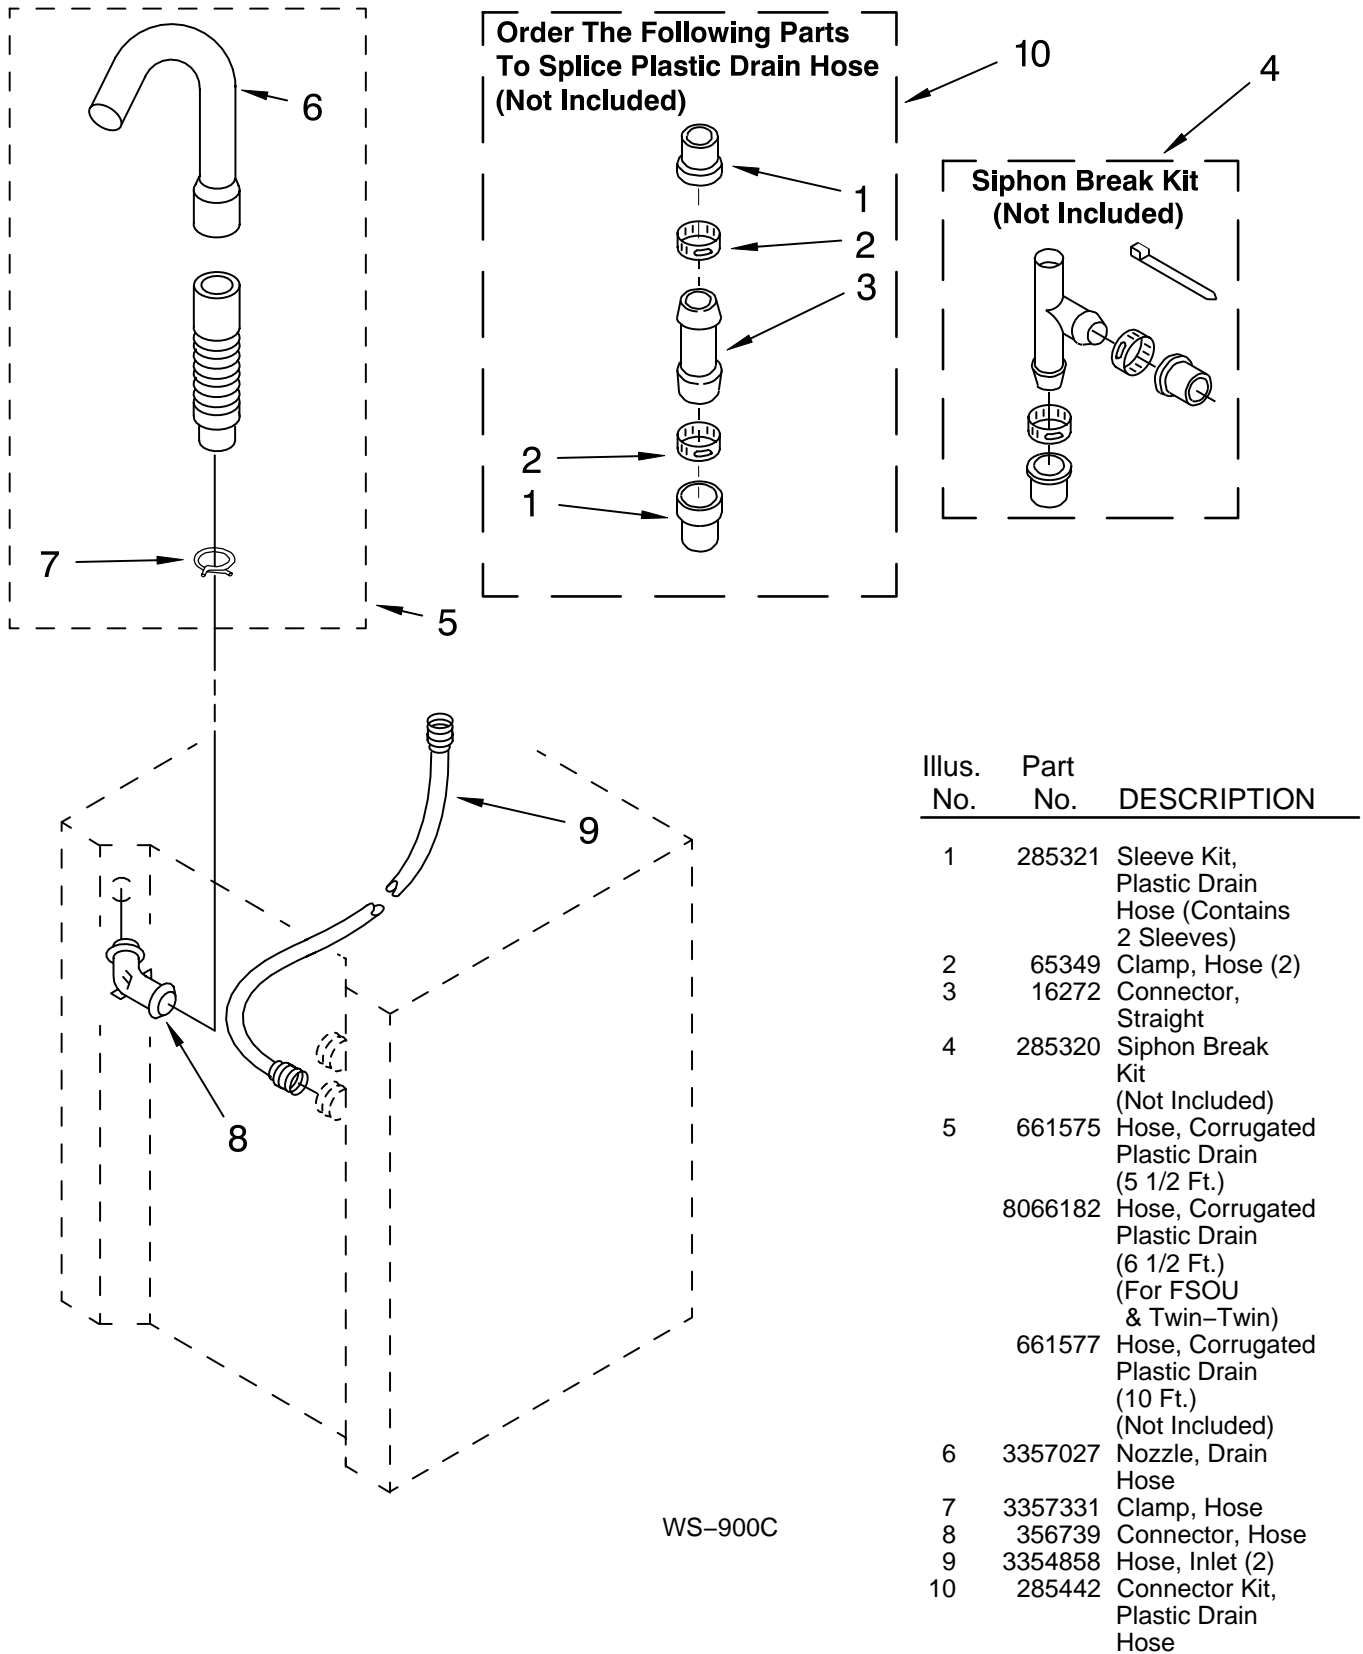

FOR ORDERING INFORMATION REFER TO PARTS PRICE LIST

GEARCASE PARTS

For Models: LTE5243DQ4, LTE5243DT4
(Designer White) (Biscuit)

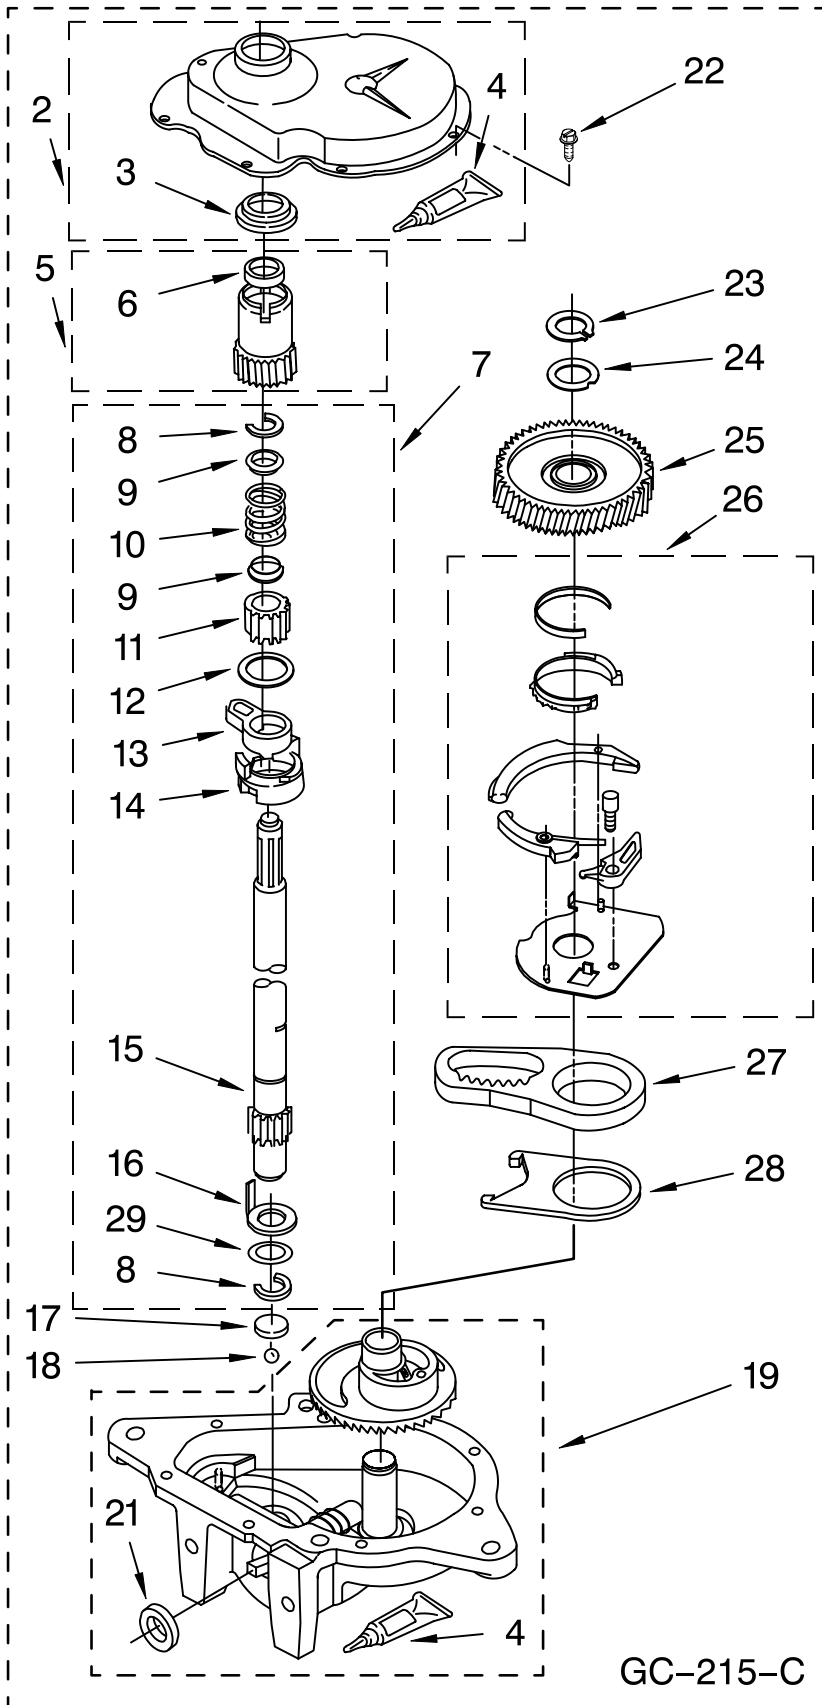

Illus. No.	Part No.	DESCRIPTION
1	3360630	Gearcase (Complete)
2	285202	Cover, Gearcase
3	3349985	Seal, Gearcase Cover
4	285195	Sealer, Gasket (.20 Fl. Oz.) (6 ml)
5	63320	Pinion, Spin (Includes Illus. 25)
6	356427	Seal, Spin Pinion
7	389387	Shaft, Agitator (Complete)
8	90369	Ring, Retaining (2)
9	62677	Retainer, Spring
10	62676	Spring, Agitate
11	63273	Gear, Agitate (Includes 15 and 29)
12	62619	Washer, Agitate Gear
13	62580	Cam Follower (Includes 14)
14	62581	Cam, Agitate (Includes 13)
15	285509	Shaft, Agitator (Includes 11 and 29)
16	62618	Washer, Cam Thrust
17	16018	Bearing, Thrust
18	85529	Ball, Bearing
19	389230	Bottom and Pinion, Gearcase
21	285352	Seal, Thrust Plug
22	3351614	Screw, Gearcase Cover, Mounting (8) (10-24 x 3/8)
23	3362552	Ring, Retaining
24	285735	Washer Kit, Thrust
25	62570	Gear, Spin
26	388253	Neutral Assembly
27	3349296	Rack, Connecting
28	62621	Actuator, Shift
29	388815	Washer, Intermediate


GC-215-C

FOR ORDERING INFORMATION REFER TO PARTS PRICE LIST

BRAKE AND DRIVE TUBE PARTS

For Models: LTE5243DQ4, LTE5243DT4

(Designer White) (Biscuit)

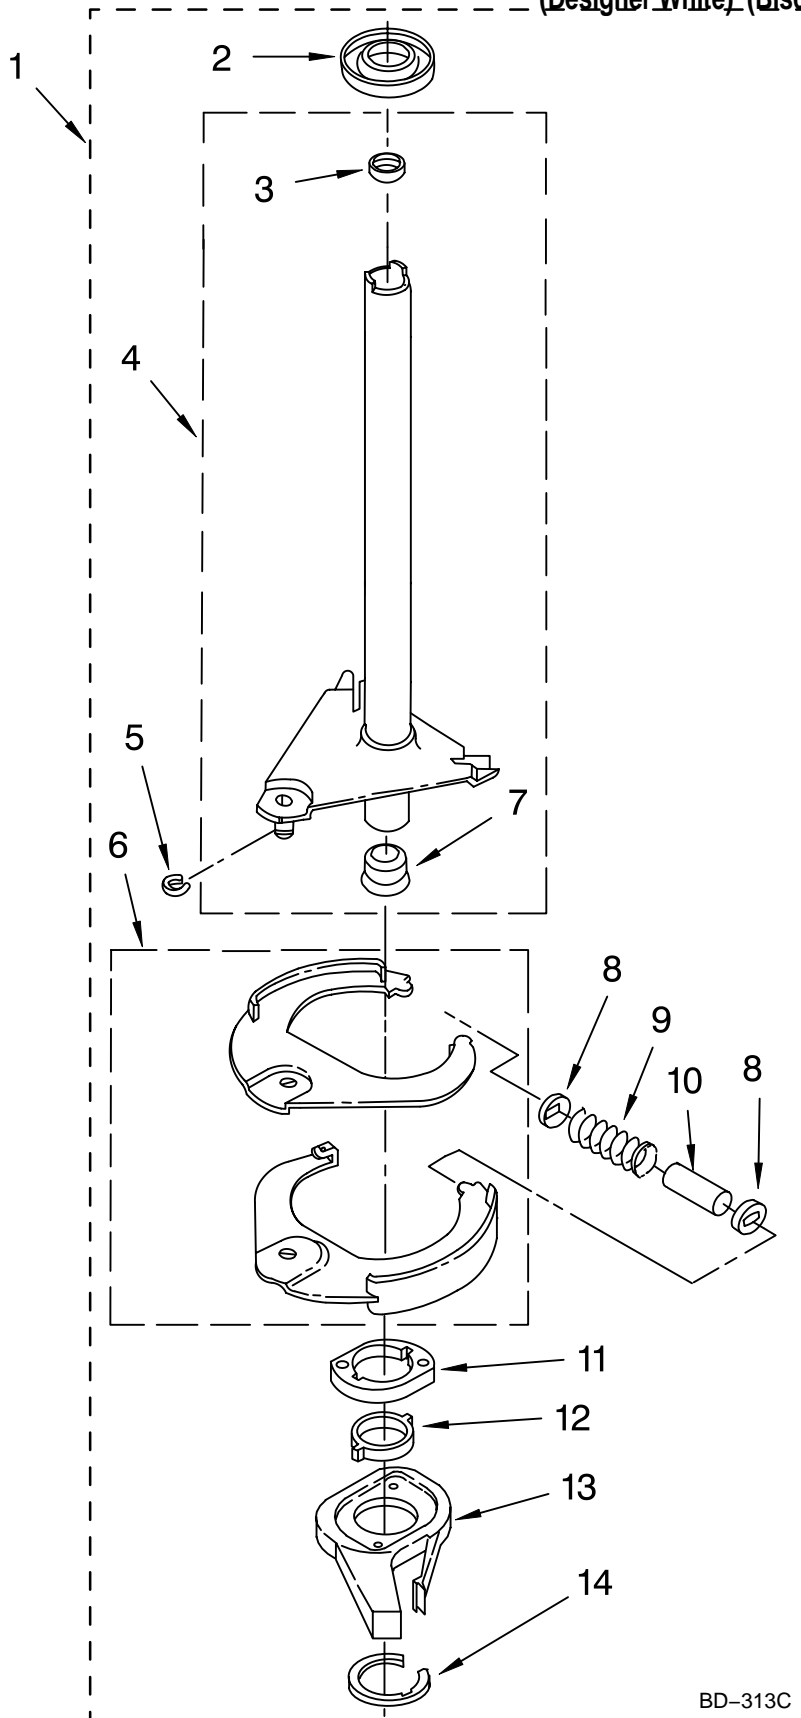

Illus. No.	Part No.	DESCRIPTION
1	387948	Brake And Drive Tube (Complete)
2	62658	Ring, Thrust
3	356427	Seal, Drive Tube
4	64027	Tube, Basket Drive (Includes Illus. 3, 4, 5 & 9)
5	64035	Ring, Retaining
6	64232	Shoe, Brake (2)
7	62703	"T" Bearing, Spin Tube
8	3353956	Cap, Brake Spring (2)
9	63748	Spring, Brake
10	3355360	Sleeve, Brake Spring
11	661516	Cam, Brake Release
12	63022	Sleeve, Cam
13	64194	Driver, Brake Cam
14	90368	Ring, Retaining


FOLLOWING PARTS NOT ILLUSTRATED

285208 Lubricant
(Use Only In Brake Shoe Assembly On Roller & Pin)

FOR ORDERING INFORMATION REFER TO PARTS PRICE LIST

PRODUCT ACCESSORY PARTS

For Models: LTE5243DQ4, LTE5243DT4
(Designer White) (Biscuit)

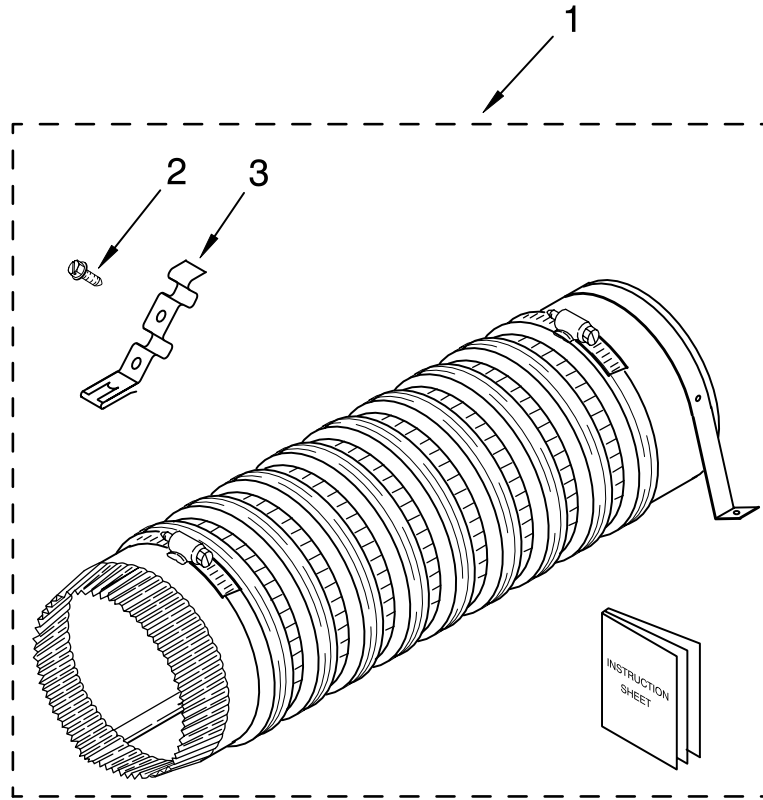


Illus. No.	Part No.	DESCRIPTION
1	279823	Side Exhaust Extension Kit (Complete)
2	488729	Screw, 8-18 x 1/2
3	3395536	Clip

FOR ORDERING INFORMATION REFER TO PARTS PRICE LIST

MISCELLANEOUS PARTS

For Models: LTE5243DQ4, LTE5243DT4
(Designer White) (Biscuit)

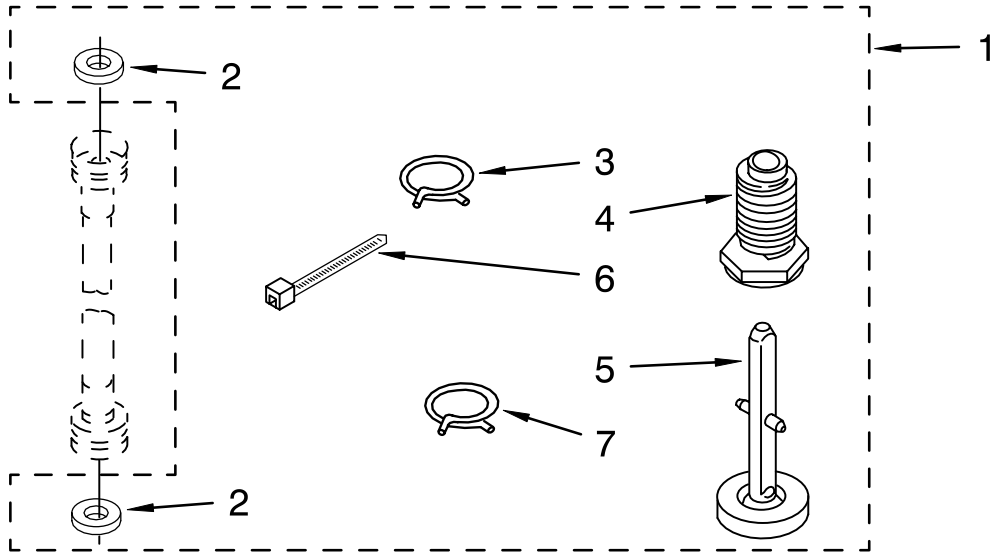

Illus. No.	Part No.	DESCRIPTION
1	3359934	Miscellaneous Parts Bag
2	16123	Washer, Inlet Hose (4)
3	370445	Clamp, Hose
4	367594	Foot, Front (2)
5	358594	Foot, Rear (2)
6	3347869	Tie, Cable
7	3357331	Clamp, Hose (Upper Drain)

FOR ORDERING INFORMATION REFER TO PARTS PRICE LIST

OPTIONAL PARTS (NOT INCLUDED)

For Models: LTE5243DQ4, LTE5243DT4
(Designer White) (Biscuit)

Illus. No.	Part No.	DESCRIPTION
-------------------	-----------------	--------------------

PAINT, TOUCH-UP (1/2oz.)

72017 White
4392899 Biscuit

PAINT, PRESSURIZED SPRAY (12 oz.)

350938 Primer, Gray
350930 White
4392901 Biscuit

PAINT, BULK (1 qt.)

799344 White (Uncut)
4392900 Biscuit (Uncut)

ACCESSORY PARTS

685463 Kit, Grounding
Plug, Dryer
Side Panel
692790 White
3977784 Biscuit

OIL

350572 Oil, Gearcase
(16 Oz.)

LUBRICANT

285208 Lubricant (Use
Only in Brake
Shoe Assembly
On Roller and
Pin)

SEALER

285195 Sealer, Gasket
(.20 Fl. Oz.)
(6 ml)

FOR ORDERING INFORMATION REFER TO PARTS PRICE LIST