






A collection of unique disco lights

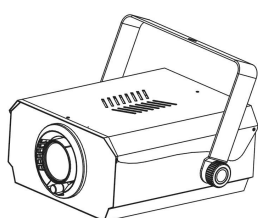


WT-KLD
WT-LGP

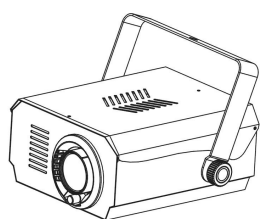


WT-CUB
WT-FST
WT-GBF

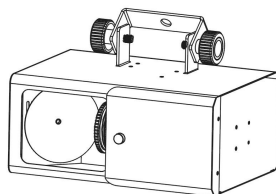

WT-HLC
WT-FAN
WT-OBT

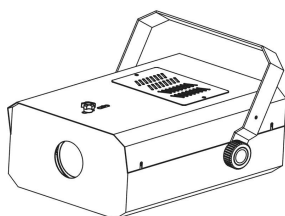

WT-WAV
WT-IFO

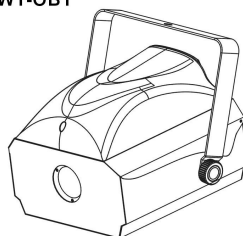

WT-OIL
WT-OIL 150
WT-OIL 250

MANUEL D'UTILISATION WILD TECH

Sommaire

- 1. CONSIGNES GENERALES**
- 2. CONSIGNES DE SECURITE**
- 3. WT-KLD / KALEIDO**
 - 3.1. Changer la lampe
 - 3.2. Angle de projection
- 4. WT-LGP / LOGO PROJECTOR**

Changer la lampe
Changer le gobo
Angle de projection
- 5. WT-CUB / CUBIST**

Changer la lampe
Angle de projection
- 6. WT-FST / FIESTA**

Changer la lampe
Angle de projection
- 7. WT-OIL, WT-OIL 150, WT-OIL 250 / OIL, OIL CDM 150, OIL MSD 250**

Changer la lampe
Changer la roue à huile
Angle de projection
- 8. WT-HLC / HALLUCINATION – WT-FAN / FASCINATION – WT-OBT / ORBITER**

Changer les gobos rotatifs / Changer la lampe
Angle de projection
- 9. WT-WAV / WATER WAVE – WT-INF / INFERNO**

Changer la lampe
Angle de projection
- 10. GUIDE DE DEPANNAGE**
- 11. CA-16 – CA-416**
 - 11.1 Installation et connexion
- 12. ENTRETIEN DE L'APPAREIL**

1. CONSIGNES GENERALES

Lire attentivement les consignes ci-après. Elles contiennent des informations importantes sur la sécurité de l'installation ainsi que sur l'utilisation et la maintenance de l'équipement.

- Conserver le présent manuel avec l'équipement pour référence ultérieure. En cas de vente de l'équipement à un autre utilisateur, il est important que le présent manuel soit joint à l'équipement afin que le nouvel utilisateur dispose des informations nécessaires à son utilisation et puisse prendre connaissance des mises en garde relatives à la sécurité.
- Avant le démarrage initial, déballer et vérifier soigneusement tous les éléments pour s'assurer qu'ils n'ont subi aucune détérioration pendant le transport.
- Il est important de relier le connecteur Jaune/Vert à la terre pour éviter tout risque de choc électrique.
- Cet appareil est destiné à un usage intérieur uniquement, et doit être placé dans un endroit sec, bien ventilé, à au moins 50 cm des murs. Vérifier que les ventilateurs et les ouies d'aération sont bien dégagés.
- Déconnecter l'appareil du secteur avant de remplacer lampes et fusibles.
- Remplacer la lampe et le fusible par un ou une de même type.
- L'appareil doit être placé loin de tout matériau inflammable lors de son utilisation.
- Utiliser des câbles sains pour les branchements de l'appareil. Ne manipuler l'appareil que par sa base.
- La température ambiante maximum est de 40 °C. Ne pas utiliser l'appareil dans des endroits où la température y est supérieure.
- La température de surface de l'appareil peut atteindre 85 °C. ne pas le toucher à main nue pendant l'utilisation. Eteindre l'appareil et attendre au moins 15 min avant de remplacer la lampe ou d'effectuer une réparation.
- En cas de graves problèmes de fonctionnement, cesser d'utiliser l'appareil immédiatement. Ne jamais tenter de le réparer soi-même. Les réparations effectuées par du personnel non qualifié peuvent entraîner de graves détériorations ou défauts de fonctionnement. Contacter le service après-vente le plus proche. Toujours utiliser des pièces de rechange d'origine.
- Ne jamais connecter l'appareil à un bloc de puissance (même graduable).
- La haute tension provoque des risques d'électrocution. Ne jamais toucher les fils pendant l'utilisation.

2. CONSIGNES DE SECURITE

- Pour éviter tout risque de choc électrique ou d'incendie, ne pas exposer l'appareil à la pluie ou à l'humidité.
- Ne pas toucher la lampe à mains nues, la lampe est très chaude après l'utilisation.
- Ne pas ouvrir l'appareil dans les 5 minutes après l'utilisation, risque d'explosion de lampe.
- Ne pas mettre en marche l'appareil sans lampe ou s'il est endommagé.
- La carrosserie, les lentilles ou les filtres ultra violet doivent être remplacés s'ils semblent endommagés.
- Ne jamais fixer des yeux la lumière en direct.

ATTENTION :


- Il n'y a pas de pièces détachées à l'intérieur de l'appareil. Ne pas ouvrir ou réparer l'appareil par vous-même. Dans le cas où l'appareil nécessite une maintenance, contacter le revendeur le plus proche.

MONTAGE DE L'APPAREIL :

- L'appareil doit être installé sur l'étrier de fixation à l'aide des vis fournies.
- Toujours s'assurer que l'appareil est fermement fixé pour éviter toute vibration ou tout risque que l'appareil tombe lors de l'utilisation.
- Toujours s'assurer que la structure à laquelle l'appareil est fixé soit capable de supporter au moins 10 fois le poids de l'appareil.
- Toujours utiliser un câble de sécurité lors de l'installation, capable de supporter au moins 12 fois le poids de l'appareil.
- L'installation doit être effectuée par un personnel qualifié et doit être hors d'atteinte de qui que se soit.

3. WT-KLD / KALEIDO


- Projection de gobos avec effet kaléidoscope.
- Programmes internes, fonctionne en mode automatique et musical. Fonction LINK pour light show synchronisé.
- Fonction LINK en utilisant un câble stéréo Jack 3,5 mm (non fourni).
- Optique haute définition.
- Roue gobos couleur
- Focus réglable manuellement et ventilation forcée.
- Tension : 230 V 50 Hz
- Fusible : 20 mm, 250V T6,5A / 250V T5A
- Lampe : ELC 24 V 250 W
- Dimensions : 306 x 263 x 140
- Poids : 8 kg
- Télécommande Réf. CA-8 en option :

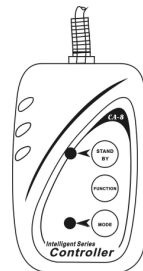

STAND BY	BLACK OUT (obturation)		
FONCTION	Vitesse de la roue gobo/couleur : Effet Kaléidoscope RAPIDE ET LENT	Vitesse de la roue gobo/couleur : Effet Kaléidoscope RAPIDE ET LENT	a) contrôle la vitesse et le sens de rotation de la roue gobo/couleur. b) contrôle la vitesse et le sens de rotation de l'effet kaléidoscope
MODE	MUSICAL LED éteinte	AUTOMATIQUE LED allumée	STATIQUE LED clignotante


3.1 Changer la lampe

- Toujours débrancher l'appareil et ne jamais manipuler la lampe quand elle est chaude.
- Ne pas toucher l'ampoule à main nue. Si c'est le cas, nettoyer l'ampoule avec de l'alcool dénaturé et un linge propre avant de l'installer.

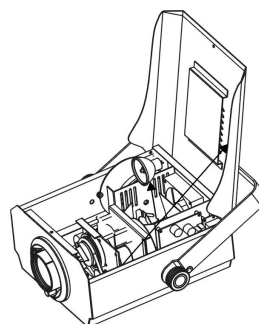

Tirer la douille de lampe et non les fils


3.2 Angle de projection

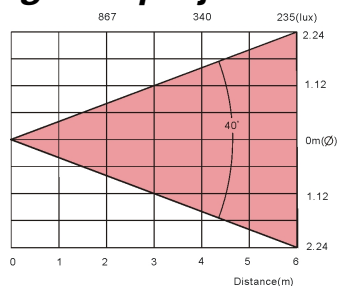

Le projecteur devrait au mieux être placé à 5 m du mur, à cette distance l'effet lumineux couvre une aire de 3,7 m x 3,7 m.


4. WT-LGP / LOGO PROJECTOR

- Le LOGO PROJECTOR (gobo rotatif) est spécialement conçu pour valoriser l'événement que vous animez.
- Livré avec 7 gobos taille D (53,3 cm) : WELCOME, CONGRATULATIONS, HAPPY BIRTHDAY, HAPPY NEW YEAR, HAPY HALLOWEEN, MERY CHRISTMAS. Les gobos sont interchangeable.
- Contrôle de la vitesse et du sens de rotation du gobo.
- Télécommande manuelle Réf. CA-5 en option.
- Focus réglable manuellement et ventilation forcée.
- Tension : 230V / 50 Hz
- Fusible : 20 mm, 250V T6,3A / 250V T5A
- Lampe : EHJ 24V / 250W
- Dimensions : 306 x 263 x 140
- Poids : 8,2 kg




4.1 Changer la lampe

- Toujours débrancher l'appareil et ne jamais manipuler la lampe quand elle est chaude.
- Ne pas toucher l'ampoule à main nue. Si c'est le cas, nettoyer l'ampoule avec de l'alcool dénaturé et un linge propre avant de l'installer.

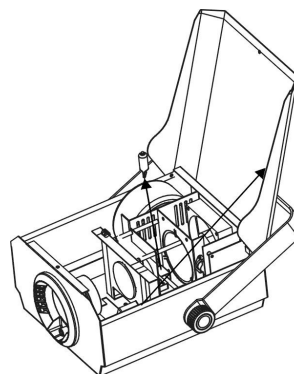

Tirer la douille de lampe
et non les fils


4.2 Changer le gobo

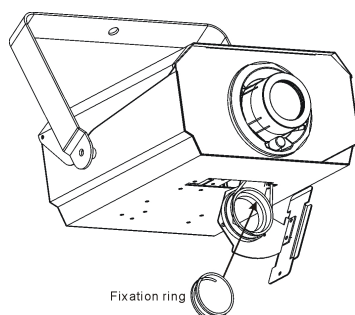

Liste des gobos :




4.3 Angle de projection

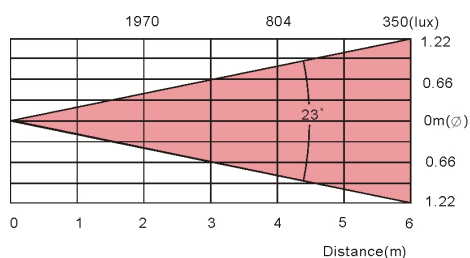

Le projecteur devrait au mieux être placé à 5 m du mur, à cette distance l'effet lumineux couvre une aire de 2,1 m x 2,1 m.

5. WT-CUB / CUBIST


- Appareil spécialement conçu pour la projection d'effet. Un superbe effet d'optique, offrant de merveilleux effets lumineux. Objectif haute définition réglable (focus réglable). Roue de 12 effets 3D.
- Programmes internes, fonctionne en mode automatique ou musical.
- Focus réglable manuellement et ventilation forcée.
- Idéal pour discos, pubs, événements...
- Tension : 230V / 50 Hz
- Fusible : 20 mm, 250V T6,3A / 250V T5A
- Lampe : ELC 24V / 250W
- Dimensions : 306 x 263 x 140 mm
- Poids : 8,2 kg
- Télécommande Réf. CA-8 en option:

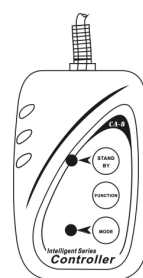

STAND BY	BLACK OUT (obturation)		
FONCTION	Roue gobo et réflecteur interne activés par le son	Sélection du gobo : (réflecteur interne activé par le son)	Sélection du gobo : (réflecteur interne – statique)
MODE	MUSICAL LED éteinte	AUTOMATIQUE LED allumée	STATIQUE LED clignotante


5.1 Changer la lampe

- Toujours débrancher l'appareil et ne jamais manipuler la lampe quand elle est chaude.
- Ne pas toucher l'ampoule à main nue. Si c'est le cas, nettoyer l'ampoule avec de l'alcool dénaturé et un linge propre avant de l'installer.

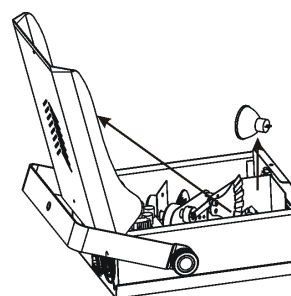

Tirer la douille de lampe et non les fils

5.2 Angle de projection

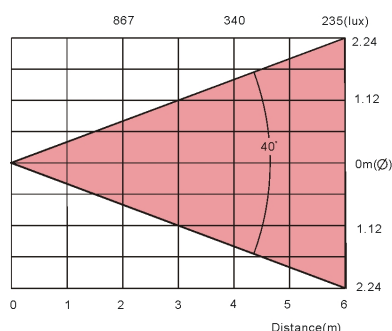


Le projecteur devrait au mieux être placé à 5 m du mur, à cette distance l'effet lumineux couvre une aire de 3,7 m x 3,7 m.

6. WT-FST / FIESTA – WT-GBF / GOBO FLOWER

- Un superbe effet de projection pour marquer vos événements.
- Fourni avec 9 gobos sélectionnés spécialement pour vos événements tels que : MERRY CHRISTMAS, HAPPY HALLOWEEN, HAPPY ANNIVERSARY, WEDDING, HAPPY HOLIDAY, ENGAGEMENT, CONGRATULATIONS, VALENTINE et HALLOWEEN.
- Switch de sélection pour le réflecteur interne. Mode de fonctionnement statique, automatique ou musical.
- Possibilité de choisir un réflecteur coloré activé par le son, statique ou rotation automatique.
- Tension : 230V / 50 Hz
- Fusible : 20 mm, 250V T6,3A / 250V T5A
- Lampe : ELC 24V / 250W
- Dimensions : 306 x 263 x 140 mm
- Poids : 8 kg

6.1 Changer la lampe


- Toujours débrancher l'appareil et ne jamais manipuler la lampe quand elle est chaude.
- Ne pas toucher l'ampoule à main nue. Si c'est le cas, nettoyer l'ampoule avec de l'alcool dénaturé et un linge propre avant de l'installer.

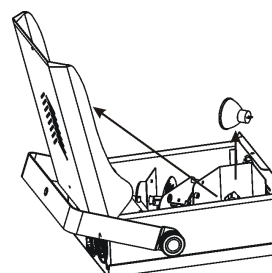


Tirer la douille de lampe et non les fils

6.2 Angle de projection

WT-FST

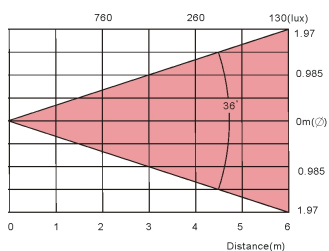

WT-GBF

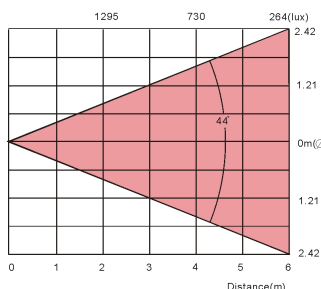

Le projecteur FST devrait au mieux être placé à 5 m du mur, à cette distance l'effet lumineux couvre une aire de 3,3 m x 3,3 m.


Le projecteur GBF devrait au mieux être placé à 5 m du mur, à cette distance l'effet lumineux couvre une aire de 4m x 4m.

7. **WT- OIL / OIL, OIL 150, OIL 250**

- Un effet bain d'huile, équipé d'une roue à huile, créant des effets psychédéliques.
- Formes multi couleurs en changement permanent, idéal pour la création de fonds lumineux.
- Contrôle de la vitesse de rotation de la roue à huile.
- Parfait pour les clubs, les pubs, les bars et les événements...
- Tension : 230V / 50 Hz
- Fusible : 20 mm, 250V T6,3A / 250V T5A
- Lampe : Arc court 150 W, type CDM 150W – Culot G12
EHJ 24V / 250 W
MSD 250 W – GY 9.5
- Dimensions : 306 x 263 x 140 mm
- Poids : 9,2 kg


7.1 **Changer la lampe**

- Toujours débrancher l'appareil et ne jamais manipuler la lampe quand elle est chaude.
- Ne pas toucher l'ampoule à main nue. Si c'est le cas, nettoyer l'ampoule avec de l'alcool dénaturé et un linge propre avant de l'installer.
- Débrancher le courant immédiatement si le moteur se casse ou si l'effet lumineux ne tourne plus, afin d'éviter d'endommager la roue à huile.

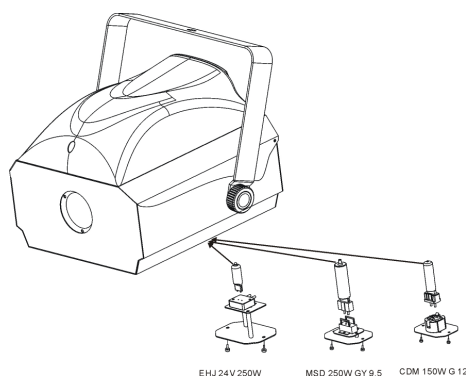


Tirer la douille de lampe
et non les fils

7.2 **Changer la roue à huile**

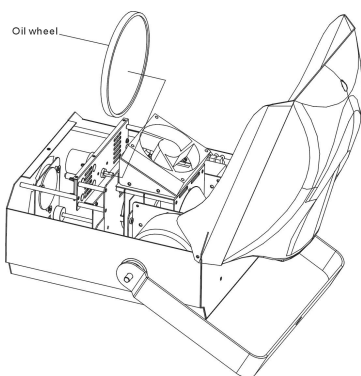

Bien débrancher le courant avant de changer la roue à huile. Dévisser les vis du moteur de la roue à huile. Si la vis n'est pas en face lors de l'ouverture du capot, rallumer le courant de façon à ce que la vis se remette en bonne position. Ne pas pousser la roue à huile avec les mains si elle n'est pas de face.

7.3 Angle de projection

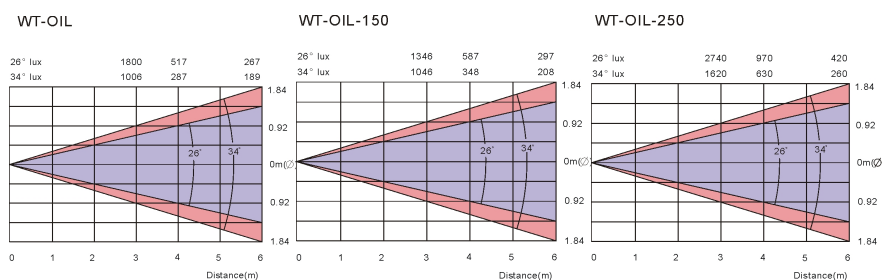

Le projecteur devrait au mieux être placé à 5 m du mur, à cette distance l'effet lumineux couvre une aire de 2,3 m x 2,3 m (mini) à 3,1 m x 3,1 m.

8. WT-HLC / HALLUCINATION – WT-FAN / FASCINATION – WT-OBT / ORBITER

- Tension : 230V / 50 Hz
- Fusible : 20 mm, 250V T6,3A / 250V T5A
- Lampe : ELC 24V 250W
- Dimensions : 270 x 192 x 120 mm
- Poids : 5,3 kg

* HALLUCINATION :

Effet rampant à rotation lente multi couleur.

Bouton de sélection entre le mode musical, continu, et fonction statique.

Focus réglable manuellement, ventilation forcée, trappe d'accès pour changer la lampe.

Parfait pour Clubs, bars, événements, karaokés...

* FASCINATION :

Effet rampant à fondu de gobo, à rotation lente multi couleur.

Bouton de sélection entre le mode musical, continu, et fonction statique.

Focus réglable manuellement, ventilation forcée.

Parfait pour clubs, pubs, bars, événements, DJ mobile...

* ORBITER :


Effet à gobos rampants.

Bouton de sélection entre le mode musical, continu, et fonction statique.

Focus réglable manuellement, ventilation forcée.

Parfait pour clubs, pubs, bars, événements, DJ mobile...

8.1 Changer les gobos rotatifs / Changer la lampe

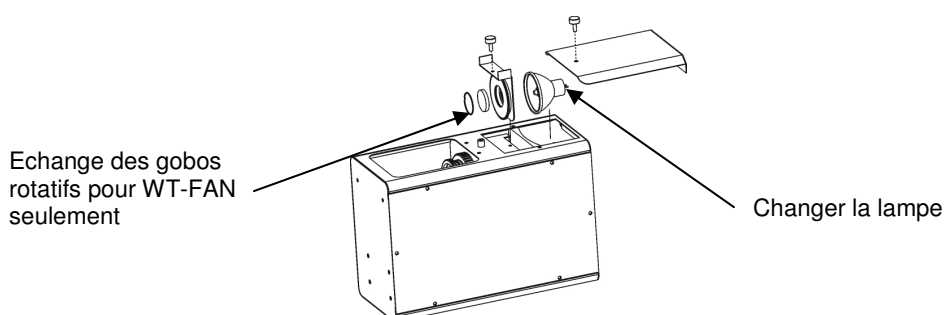

8.2 Angle de projection

WT- HLC :

Distance : 5 m, arrive area : 8,5 m x 5 m

Distance 5 m, luminance: 50 lux

WT-FAN:

Distance : 5 m, arrive area : 9 m x 5 m

Distance 5 m, luminance: 80 lux

WT-OBT:

Distance : 5 m, arrive area : 9 m x 5,2 m

Distance 5 m, luminance: 70 lux

Le projecteur HLC devrait au mieux être placé à 5 m du mur, à cette distance l'effet lumineux couvre une aire de 8,5 m x 5 m.

Le projecteur FAN devrait au mieux être placé à 5 m du mur, à cette distance l'effet lumineux couvre une aire de 9 m x 5 m.

Le projecteur OBT devrait au mieux être placé à 5 m du mur, à cette distance l'effet lumineux couvre une aire de 9 m x 5,2 m.

9. WT-WAV / WATER WAVE – WT-INF / INFERNO

- Tension : 230V / 50 Hz
- Fusible : 20 mm, 250V T6,3A / 250V T5A
- Lampe : ELC 24V 250W
- Dimensions : 270 x 192 x 120 mm

* WATER WAVE :

Puissant faisceau de 250 W, idéal pour la création de fonds lumineux.

Equipé de deux roues d'effets et d'une roue couleur dichroïque indépendante, recréant un effet de vague pour tout endroit nécessitant un décor spécial.

Focus réglable manuellement, ventilation forcée, trappe d'accès pour changer la lampe.

Parfait pour Clubs, bars, événements, karaokés...

Poids : 7,2 kg

* INFERNO :

Projecteur effet flamme.


Idéal pour la création d'atmosphère de fonds lumineux.

Focus réglable manuellement, trappe d'accès pour changer la lampe.

Poids : 7 kg


9.1 Changer la lampe

- Toujours débrancher l'appareil et ne jamais manipuler la lampe quand elle est chaude.
- Ne pas toucher l'ampoule à main nue. Si c'est le cas, nettoyer l'ampoule avec de l'alcool dénaturé et un linge propre avant de l'installer.

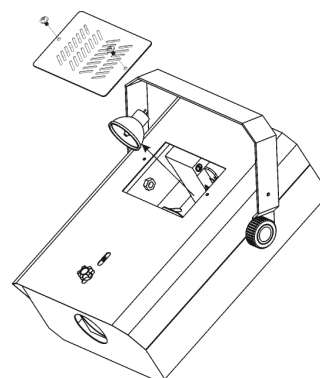


9.2 Angle de projection

WT-WAV

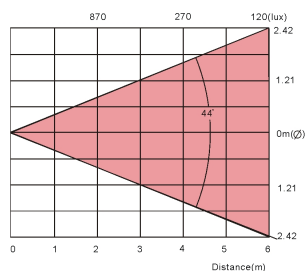

WT-IFO

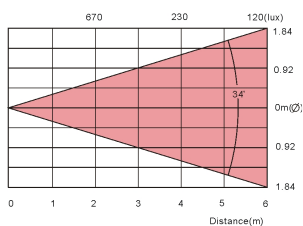

Le projecteur WAV devrait au mieux être placé à 5 m du mur, à cette distance l'effet lumineux couvre une aire de 4 m x 4 m.

Le projecteur INF devrait au mieux être placé à 5 m du mur, à cette distance l'effet lumineux couvre une aire de 3.1 m x 3.1 m.

ATTENTION :

- Pour éviter tout risque de choc électrique, tenir l'appareil éloigné de la pluie et de l'humidité.
- Ne jamais toucher la lampe à main nue, elle est très chaude après l'utilisation.
- Ne pas ouvrir l'appareil dans les 5 min après l'utilisation, risque d'explosion de la lampe trop chaude.
- Ne pas mettre en marche l'appareil s'il n'y a pas de lampe, et si l'appareil est endommagé.
- Ne jamais fixer l'appareil des yeux lorsque la lampe est allumée.

PRECAUTION :

- Il n'y a pas de pièces détachées à l'intérieur de l'appareil. Ne pas ouvrir l'appareil et ne pas tenter de le réparer soi-même. Dans le cas où l'appareil nécessiterait une réparation, s'adresser au revendeur le plus proche.

10. GUIDE DE DEPANNAGE

Problème	Cause(s) Probable	Suggestions
Pas d'effet lumineux	Pas de courant à l'alimentation	Vérifier les connexions d'alimentation
	Fusible fondu	Si le courant passé mais qu'il n'y a pas d'effet lumineux, vérifier le fusible et le changer si besoin
	Lampe grillée	Installer une nouvelle lampe
	Appareil en surchauffe	Laisser l'appareil refroidir et améliorer le passage de l'air autour de l'appareil
Aucune activité	Volume trop bas pour activer le contrôle des circuits	Augmenter le volume
	Dérèglement électrique	S'adresser à un technicien de maintenance

11. CA-16 / CA-416

* CA-16 :


- Contrôleur 16 canaux avec 16 boutons et indicateurs, très facile d'utilisation.
- Le contrôleur WILD TECH fonctionne avec le Patch CA-416 pour contrôle ON/OFF.
- Sortie 16 canaux DMX
- Tension : DC 9 V 500 mA minimum
- Dimensions : 482 x 63 x 44 mm
- Poids : 1 kg

* CA-416 :

- Switch pack 4 canaux avec entrée/sortie DMX
- Dip switch pour le réglage de l'adresse DMX
- Entrée principale : AC 230V $\pm$ 10% avec 1 support de fusible de 15A maximum
- Sortie : 6,3 A par canal pour chaque prise.
- 4 LED indiquent les sorties sur la face avant et la face arrière
- Témoin de marche sur la face avant et la face arrière
- Tension : DC 9 V 500 mA minimum
- Fusible : 6,3 A par canal maximum, pour une utilisation totale de 15 A
- Dimensions : 480 x 100 x 88 mm
- Poids : 2,4 kg

11.1 Installation et connexion

- * Se référer au schéma ci-dessous pour connecter la CA-16 et la CA-416 aux produits WILD TECH.
- * Régler l'adresse DMX de la CA-416 à 1, 5, 9, 13 comme indiqué sur le schéma dipswitch suivant.
- * Presser sur les boutons 1-16 de la CA-16 pour contrôler la mise en marche des lumières.
- * Relier la CA-16 et la CA-416 par un câble DMX XLR/XLR.

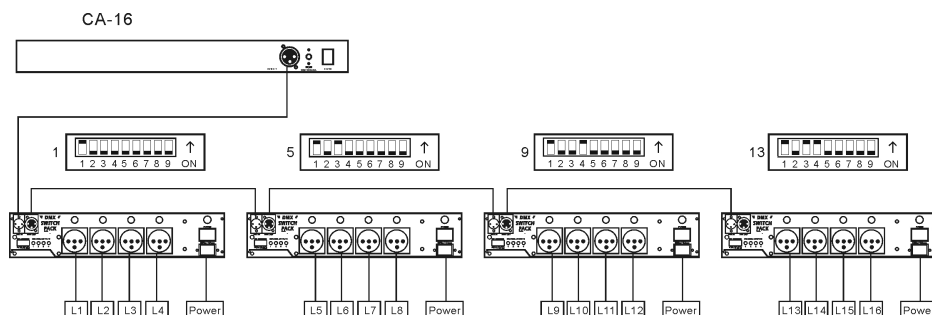


12. ENTRETIEN DE L'APPAREIL

Le nettoyage des lentilles internes et externes ainsi que des miroirs doit être effectué régulièrement afin d'optimiser la projection de la lumière. La fréquence de nettoyage dépend de l'environnement dans lequel l'appareil fonctionne : humidité, fumée, poussière...


- Nettoyer avec un linge propre en utilisant un liquide à vitre standard
- Toujours sécher les parties nettoyées avec soin.
- Nettoyer les lentilles externes au moins tous les 20 jours. Nettoyer les lentilles internes au moins 1 fois tous les mois ou tous les 2 mois.




A collection of unique disco lights

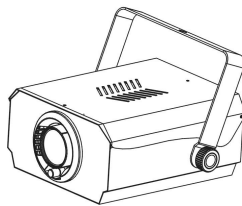


WT-KLD
WT-LGP

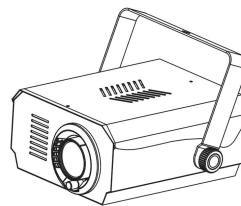


WT-CUB
WT-FST
WT-GBF

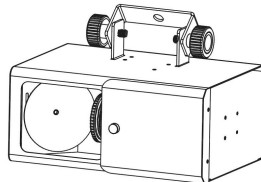

WT-HLC
WT-FAN
WT-OBT

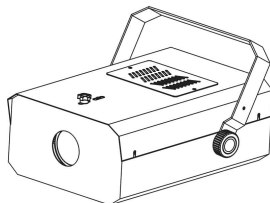

WT-WAV
WT-IFO

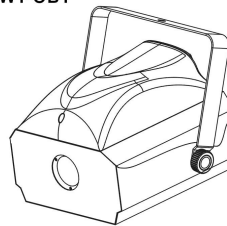

WT-OIL
WT-OIL 150
WT-OIL 250

User Guide

Professional Entertainment Technology

TABLE OF CONTENTS

1. Introduction
2. Safety Instruction
3. WT-KLD
 - 3.1 Change lamp
 - 3.2 Beam angle
4. WT-LGP
 - 4.1 Change lamp
 - 4.2 Inserting/ Exchanging rotating gobos
 - 4.3 Beam angle
5. WT-CUB
 - 5.1 Change lamp
 - 5.2 Beam angle
6. WT-FST/ WT-GBF
 - 6.1 Change lamp
 - 6.2 Beam angle
7. WT-OIL/ WT-OIL 150/ WT-OIL 250
 - 7.1 Change lamp
 - 7.2 Change oil wheel
 - 7.3 Beam angle
8. WT-HLC/ WT-FAN/ WT-OBT
 - 8.1 Exchanging rotating gobos/ Change lamp
 - 8.2 Beam angle
9. WT-WAV/ WT-IFO
 - 9.1 Change lamp
 - 9.2 Beam angle
10. Troubleshooting
11. CA-16/ CA-416
 - 11.1 Install & Connection
12. Fixture Cleaning

1. Introduction

Thank you for purchasing Wild Tech products. To familiarize yourself with the unit and for your own safety, please carefully read the instructions which include important information about installation, operation, and maintenance.

Hereunder is a brief introduction of what is “Wild Tech”:

Every single species that survives in the wild is equipped with a particular technique..... As does Acme's Wild Tech. Why not show off!

Wild tech is a collection of unique, gorgeous disco lights that comes with flawless engineering to create impressive, amazing effects. Offering a comprehensive range of effect possibilities, Wild Tech starts from the introduction of Kaleido, Cubist, Hallucination, Inferno to Logo Projector, covering DJs' various needs in lighting effects.

By combining the latest technology and innovative ideas, Wild Tech features excellent optics, special designed gobo and effect wheels, bright and powerful light output, perfect for discotheques, clubs, pubs, mobile DJs, and home parties. A considerate design of Wild Tech DMX controller CA-16 and a DMX Switch Pack CA-416 are added for the control of power on/off. Wild Tech is both affordable and very easy to use.

Remaining cool all night, Wild Tech brings you endless effects with boundless energies. Come experience Wild Tech and go wild.

2. Safety Instruction



Please read carefully the instruction, which includes important information about the installation, usage and maintenance.

User Guide for future consultation. If you sell the unit to another user, be sure that they also receive this instruction booklet.

- ◆ Please keep this
- ◆ User Guide for future consultation. If you sell the unit to another user, be sure that they also receive this instruction booklet.
- ◆ Unpack and check carefully there is no transportation damage before using the unit.
- ◆ Before operating, ensure that the voltage and frequency of power supply match the power requirements of the unit.
- ◆ It's important to ground the yellow/green conductor to earth in order to avoid electric shock.
- ◆ The unit is for indoor use only. Use only in a dry location.
- ◆ The unit must be installed in a location with adequate ventilation, at least 50cm from adjacent surfaces. Be sure that no ventilation slots are blocked.
- ◆ Disconnect mains power before fuse/lamp replacement or servicing.
- ◆ Replace fuse/lamp only with the same type.
- ◆ Make sure there is no flammable materials close to the unit while operating as it is fire hazard.
- ◆ Use safety cable when fixes this unit.
- ◆ Maximum ambient temperature is TA: 40°C. Don't operate it where the temperature is higher than this.
- ◆ Unit surface temperature may reach up to 85°C. Don't touch the housing bare-hand during its operation. Turn off the power and allow about 15 minutes for the unit to cool down before replacing bulb or serving.
- ◆ In the event of serious operating problem, stop using the unit immediately. Never try to repair the unit by yourself. Repairs carried out by unskilled people can lead to damage or malfunction. Please contact the nearest authorized technical assistance center. Always use the same type spare parts.
- ◆ Don't connect the device to any dimmer pack or power pack.
- ◆ Do not touch any wire during operation as high voltage might be causing electric shock.

Warning

- ◆ To prevent or reduce the risk of electrical shock or fire, do not expose the unit to rain or moisture.
- ◆ Never touch bulb with bare fingers as it is very hot after using.
- ◆ Hot lamp explosion hazard. Do not open the unit within five minutes after switching off.
- ◆ Do not start on the unit without bulb enclosure or housing are damaged.
- ◆ The housing, the lenses, or the ultraviolet filter must be replaced if they are visibly damaged.
- ◆ Do not look directly at the light while the bulb is on.

Caution

There are no user serviceable parts inside the unit. Do not open the housing or attempt any repairs yourself. In the unlikely event your unit may require service, please contact your nearest dealer.

Rigging the fixtures


The unit should be mounted via its screw holes on the bracket. Always ensure that the unit is firmly fixed to avoid vibration and slipping while operating. Always ensure that the structure to which you are attaching the unit is secure and is able to support a weight of 10 times of the unit's weight. Also always use a safety cable that can hold 12 times of the weight of the unit when installing the fixture.

The installation must be carried out by qualified service people only. The device should be installed out of reach of people and outside areas where persons may walk by or be seated.

3. WT- KLD

Kaleido is a unique 250W kaleidoscopic effect that projects a swarm of swirling patterns. Comes with great built-in programs with auto movement or sound activation. It's linkable, performing synchronized light show, perfect for discos, clubs, bars, and parties.

- Precise optics with special gobo / color wheel.
- Linkable by using stereo cable with 3.5mm stereo jack (optional)
- Focus adjustable and fan cooled.
- Optional easy controller CA-8 for many lighting shows .

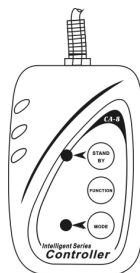

Stand by	Blackout the unit		
Function	Speed of gobo wheel and mirrored-tunnel: Fast and slow	Speed of gobo wheel and mirrored-tunnel: Fast and slow	a.) Adjust gobo wheel rotating direction and speed. b.) <i>Adjust mirrored-tunnel rotating direction and speed.</i>
Mode	Sound (LED off)	Auto (LED on)	Latch (LED blinking)


Specification:

- Voltage: AC 120V~60Hz 230V/240V/250V~50Hz/60Hz
- Fuse: 20mm glass 250V T6.3A / 20mm glass 250V T5A
- Bulb: ELC 24V 250W
- Dimension: 306 x 263 x 140 mm
- Weight: 8 kgs


3.1 Change lamp

- Always switch off the mains supply and never handle the lamp or luminaire when it is hot.
- Do not touch the bulb with bare hands. If this does happen, clean the lamp with denatured alcohol and wipe with a lint free cloth before installing.

Pull the socket off the lamp.
Do not pull the wires.

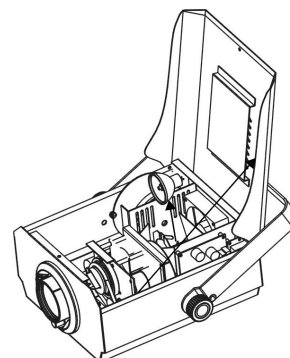

3.2 Beam angle

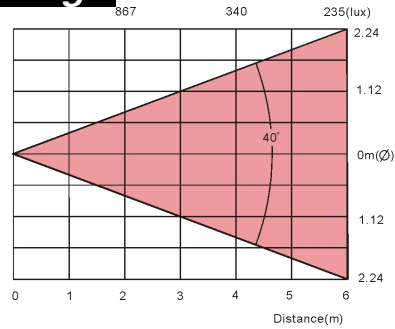

The Projector is best to be placed 5 meters from wall, and from this distance the light effect will cover an area of 3.7 m x 3.7 m.

4. WT-LGP

Logo Projector is a powerful tool creating a long lasting visual effect. It comes with 7 D size gobos and an interchangeable slot for custom made gobos. With speed and direction adjustable function, the Logo projector is perfect for discos, restaurants, department stores, etc.

- Adjustable gobo rotation direction and speed.
- With an optional CA-5 easy controller for the on/off control.
- Focus adjustable and fan cooled.


Specification:

- Voltage: AC 120V~60Hz 230V/240V/250V~50Hz/60Hz
- Fuse: 20mm glass 250V T6.3A / 20mm glass 250V T5A
- Bulb: EHJ 24V 250W
- Dimension: 306 x 263 x 140 mm
- Weight: 8.2 kgs

4.1 Change lamp


- Always switch off the mains supply and never handle the lamp or luminaire when it is hot.
- Do not touch the bulb with bare hands. If this does happen, clean the lamp with denatured alcohol and wipe with a lint free cloth before installing.

Pull the socket off the lamp.
Do not pull the wires.

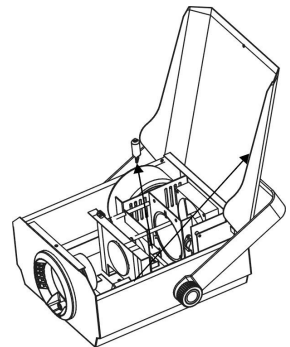


4.2 Inserting/Exchanging rotating gobos

Gobo list:

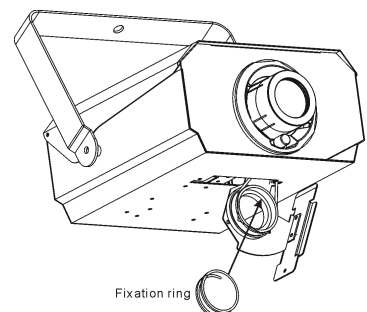

4.3 Beam angle

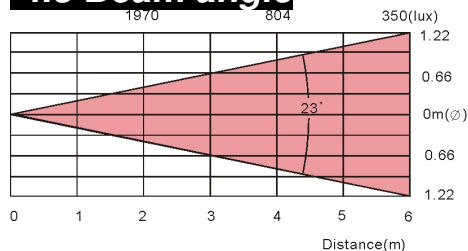

The Projector is best to be placed 5 meters from wall, and from this distance the light effect will cover an area of 2.1 m x 2.1 m.

5. WT-CUB

Cubist is a great 3D high precision optical effect with 12 patterns, delivering amazing lighting shows. Comes with great built-in programs with auto movement or sound activation, ideal for discos, pubs, parties, etc.

- Focus adjustable and fan cooled.
- Optional easy controller CA-8 for many lighting shows .


Stand by	Blackout the unit		
Function	Gobo wheel and inner dish activated by music	Select Gobo (Inner dish activated by music)	Select Gobo (Inner dish – static)
Mode	Sound (LED off)	Next (LED on)	Latch (LED blinking)

Specification:

- Voltage: AC 120V~60Hz 230V/240V/250V~50Hz/60Hz
- Fuse: 20mm glass 250V T6.3A / 20mm glass 250V T5A
- Bulb: ELC 24V 250W
- Dimension: 306 x 263 x 140 mm
- Weight: 8.2 kgs


5.1 Change lamp

- Always switch off the mains supply and never handle the lamp or luminaire when it is hot.
- Do not touch the bulb with bare hands. If this does happen, clean the lamp with denatured alcohol and wipe with a lint free cloth before installing.

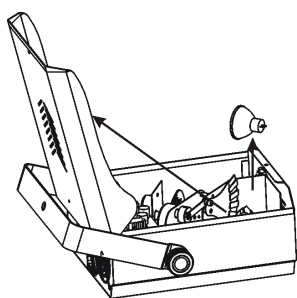

Pull the socket off the lamp.
Do not pull the wires.

5.2 Beam angle

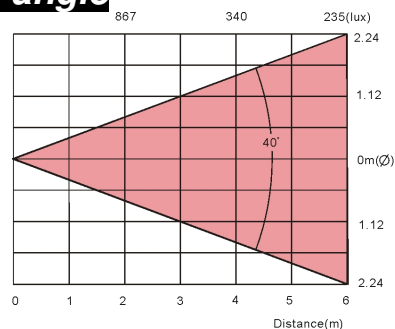

The Projector is best to be placed 5 meters from wall, and from this distance the light effect will cover an area of 3.7 m x 3.7 m.

6. WT- FST/ WT- GBF

WT-FST

Fiesta is a high output special event projector, equipped with 12 event gobos. It offers the choice of stop, continuous or sound activation, satisfying all applications. The unit is perfect for discos, clubs, bars, and parties.

WT-GBF

With 12 gobos/ colors, precise optics, and 250W powerful output, the Gobo Flower is perfect for discos, clubs, bars, and parties.

- Fan cooled and thermal switch for overheat protection.


Specification:

- Voltage: AC 120V~60Hz 230V/240V/250V~50Hz/60Hz
- Fuse: 20mm glass 250V T6.3A / 20mm glass 250V T5A
- Bulb: ELC 24V 250W
- Dimension: 306 x 263 x 140 mm
- Weight: 8 kgs

6.1 Change lamp


- Always switch off the mains supply and never handle the lamp or luminaire when it is hot.
- Do not touch the bulb with bare hands. If this does happen, clean the lamp with denatured alcohol and wipe with a lint free cloth before installing.

Pull the socket off the lamp.
Do not pull the wires.

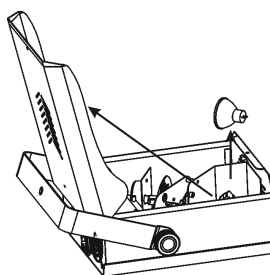


6.2 Beam angle

WT-FST

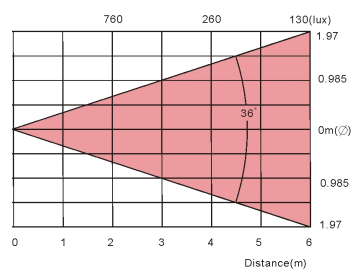

WT-GBF

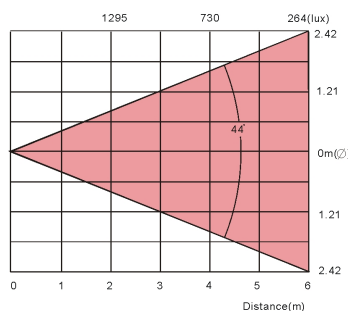

WT-FST is best to be placed 5 meters from wall, and from this distance the light effect will cover an area of 3.3 m x 3.3 m.
 The Projector is best to be placed 5 meters from wall, and from this distance the light effect will cover an area of 4 m x 4 m.

7. WT-OIL/ WT-OIL 150/ WT-OIL 250

Oil light is an awesome effects projector, equipped with an oil wheel to project psychedelic effects. The colorful and ever-changing-shape effects are ideal for background projection. Perfect for discos, clubs, bars, and parties.


- Adjustable oil wheel speed .
- Zoom function and focus adjustable.

Specification:


- Voltage: AC 120V~60Hz 230V/240V/250V~50Hz/60Hz
- Fuse: 20mm glass 250V T6.3A / 20mm glass 250V T5A
- Bulb: EHJ 24V 250W / CDM 150W G12 / MSD 250W GY 9.5
- Dimension: 306 x 263 x 140 mm
- Weight: 9.2 kgs

7.1 Change lamp

- Always switch off the mains supply and never handle the lamp or luminaire when it is hot.
- Do not touch the bulb with bare hands. If this does happen, clean the lamp with denatured alcohol and wipe with a lint free cloth before installing.
- Turn off the mains power immediately in case the motor broken or the lighting effect stops rotating to avoid the risk of oil wheel breaking.

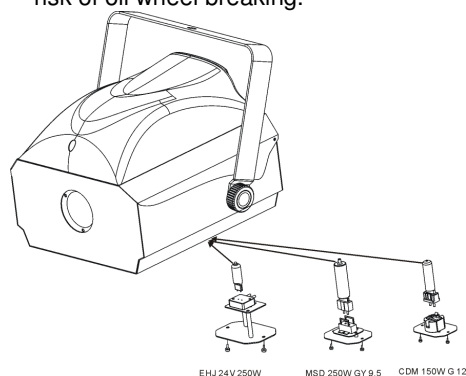

Change lamp
 Pull the socket off the lamp.
 Do not pull the wires.

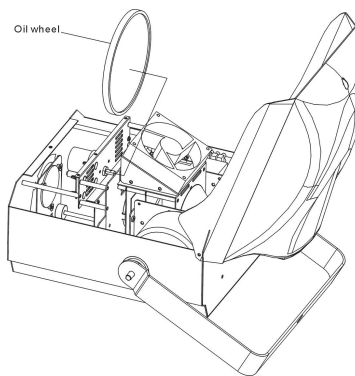


Change oil wheel

7.2 Change oil wheel

Be sure to turn off mains power before changing Oil Wheel. Unscrew the screw on the oil wheel motor to change the oil wheel. If the position of the screw doesn't face you when you open the cover, power on the unit again to turn the position of screw. Don't push the Oil wheel by hand when the screw doesn't face you.

7. Beam angle

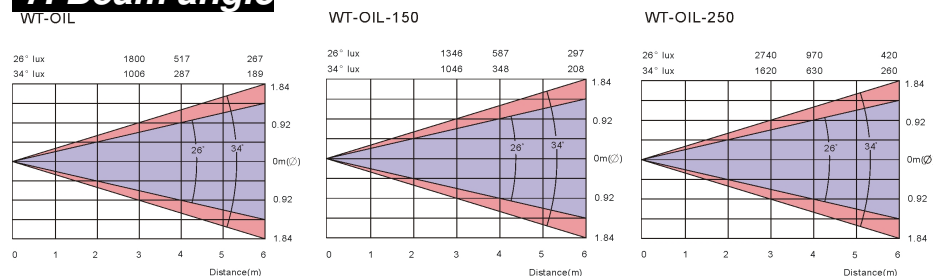

The Projector is best to be placed 5 meters from wall, and from this distance the light effect will cover an area from 2.3 m x 2.3 m (min.) to 3.1 m x 3.1 m.

8. WT- HLC/ WT- FAN/ WT- OBT

WT- HLC

Hallucination is a powerful 250W effect lights, featuring a slow rotating effects wheel and a static effect glass. It projects a beam through effect glasses onto a multi-colored dichroic dish, creating a hallucinatory effect.

Add a selector switch to select between auto, sound activation, or static function. This fixture is perfect for clubs, pubs, bars, parties, and mobile DJs.

- Focus adjustable, fan cooled, and easy lamp access door.

WT- FAN

Fascination is a powerful 250W background creation effect which projects a beam through a replaceable, rotating glass effect wheel onto a multi-colored dichroic dish, creating an ever changing atmosphere.

Add a selector switch to select between auto, sound activation, or static function. This fixture is perfect for clubs, pubs, bars, parties, and mobile DJs.

- Focus adjustable, and fan cooled.

WT- OBT


Orbiter is a powerful 250W effect lights, featuring a gobo wheel and multi-colored dichroic dish that rotates back and forth, creating dynamic swiveling effects. Add a selector switch to select between auto, sound activation, or static function. This fixture is perfect for clubs, pubs, bars, parties, and mobile DJs.

- Focus adjustable, and fan cooled.

Specification:

- Voltage: AC 120V~60Hz 230V/240V/250V~50Hz/60Hz
- Fuse: 20mm glass 250V T6.3A / 20mm glass 250V T5A
- Bulb: ELC 24V 250W
- Dimension: 270 x 192 x 120 mm
- Weight: 5.3 kgs

8. 1 Exchanging rotating gobos/ Change lamp

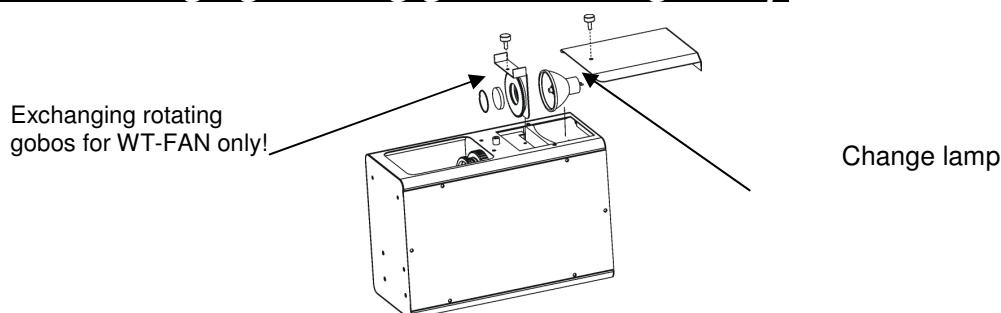

8. 2 Beam angle

WT-HLC

WT-FAN

WT-OBT

Distance: 5 m, arrive area: 8.5 mX5 m
Distance: 5 m, luminance: 50 lux

Distance: 5 m, arrive area: 9 mX5 m
Distance: 5 m, luminance: 80 lux

Distance: 5 m, arrive area: 9 mX5.2 m
Distance: 5 m, luminance: 70 lux

WT-HLC is best to be placed 5 meters from wall, and from this distance the light effect will cover an area of 8.5 m x 5 m.

WT-FAN is best to be placed 5 meters from wall, and from this distance the light effect will cover an area of 9 m x 5 m.

WT-OBT is best to be placed 5 meters from wall, and from this distance the light effect will cover an area of 9 m x 5.2 m.

9. WT- WAV / WT- IFO

WT- WAV

Water Wave is a flowing water effect with a powerful 250W light output which is ideal for background back ground projection. This unit is perfect for clubs, bars, parties, karaoke, etc.

- Equipped with 2 effect wheels and 1 independent dichroic color wheel, making the water waving at any place where needs special atmosphere.
- Focus adjustable, fan cooled, and easy lamp access door.

WT- IFO

Inferno is a unique projector creating flame effects to produce a blazing inferno. It's a great effect to set any venue on fire, perfect for clubs, pubs, bars, parties, etc.


- Focus adjustable and easy lamp access door.

Specification:

- Voltage: AC 120V~60Hz 230V/240V/250V~50Hz/60Hz
- Fuse: 20mm glass 250V T6.3A / 20mm glass 250V T5A
- Bulb: ELC 24V 250W
- Dimension: 270 x 192 x 120 mm
- Weight:: 7.2 kgs(WT-WAV) / 7 kgs(WT-IFO)


9.1 Change lamp

- Always switch off the mains supply and never handle the lamp or luminaire when it is hot.
- Do not touch the bulb with bare hands. If this does happen, clean the lamp with denatured alcohol and wipe with a lint free cloth before installing.
- Pull the socket off the lamp. Do not pull the wires.

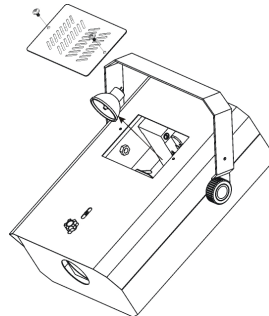


9.2 Beam angle

WT-WAV

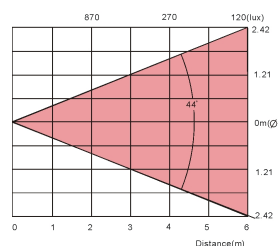

WT-IFO

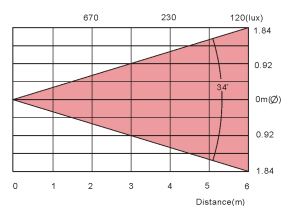

WT-WAV is best to be placed 5 meters from wall, and from this distance the light effect will cover the area of 4 m x 4 m.

WT-IFO is best to be placed 5 meters from wall, and from this distance the light effect will cover an area of 3.1 m x 3.1 m.

10. CA-16/ CA-416

CA-16


- Power input: DC 9V 500mA Min.
- 16-Channels controller with 16 buttons and indicators,very easy to use.
- The Wild Tech controller can perfectly work with CA-416 for best control of 16-channel power on/off.
- 16 channels DMX output.
- Dimension: 482 x 63 x 44 mm
- Weight: 1 kgs

CA-416

- Power supply: DC 9V 500mA Min.
- Bulb: 6.3A per channel(Max.).total 15A.
- 4-Channel switch pack with DMX input/output.
- Dip switches for DMX address setting.
- Main input: AC 120V/230V +/- 10% with Maximum 15A fuse holder.
- Output: 6.3A per channels for each socket.
- 4 LEDs indicate the outputs on both the front and back panels.
- 1 Power indicator on the back panel.
- Dimension: 480 x 100 x 88 mm
- Weight: 2.4 kgs

10.1 Install & Connection

1. Please refer to the diagram below for connecting CA-16, CA-416 and Wild Tech lights.
2. Set the CA-416 DMX address as 1,5,9,13 refer to the following dipswitch diagram.
3. Press the 1-16 buttons of CA-16 to control the lights power on/off.

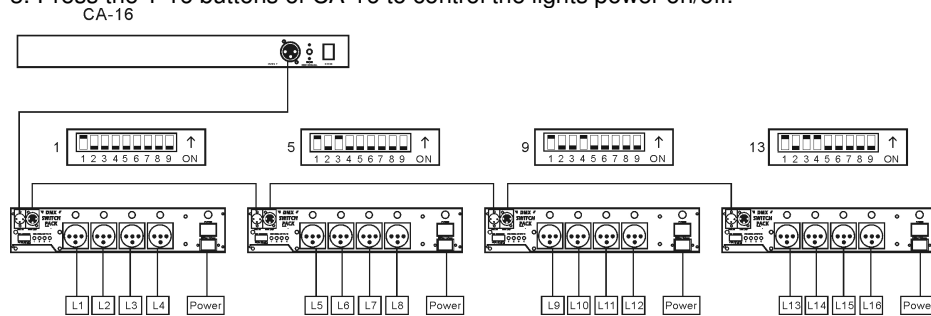

11. Troubleshooting

Problem	Probable cause(s)	Suggested remedy
No light	No power to the fixture	Check power connections
	Blown fuse	If power is applied but does not light, please check and replace fuse if necessary.
	Burned out lamp	Install new lamp.
	Fixture too hot	Allow to cool down. Improve air flow around the unit.
No action	Sound too low to activate control circuit	Increase volume.
	Electrical malfunction	Refer to service technician.

12. Fixture Cleaning

The cleaning of internal and external optical lenses and/or mirrors must be carried out periodically to optimize light output. Cleaning frequency depends on the environment in which the fixture operates: damp, smoky or particularly dirty surrounding can cause greater accumulation of dirt on the unit's optics.

- Clean with soft cloth using normal glass cleaning fluid.
- Always dry the parts carefully.
- Clean the external optics at least every 20 days. Clean the internal optics at least every 30/60 days.

EC Declaration of Conformity

We declare that our products (lighting equipments) comply with the following specification and bears CE mark in accordance with the provision of the Electromagnetic Compatibility (EMC) Directive 89/336/EEC.

EN55014-2: 1997 A1:2001, EN61000-4-2: 1995; EN61000-4-3:2002;
EN61000-4-4: 1995; EN61000-4-5: 1995, EN61000-4-6:1996,
EN61000-4-11: 1994.

&

Harmonized Standard

EN60598-1: 2000+ALL:2000+A12:2002
Safety of household and similar electrical appliances
Part 1 : General requirements

Innovation , Quality , Performance