



INSTALLATION INSTRUCTIONS AND OWNER'S MANUAL

The *White Mountain* Log Collection



LOG SET FOR UNVENTED GAS LOG HEATER OR VENTED DECORATIVE APPLIANCE MODELS

LS-18FAC-1	LS-18FAO-1	LS-18FAS-1
LS-24FAC-1	LS-24FAO-1	LS-24FAS-1
LS-30FAC-1	LS-30FAO-1	LS-30FAS-1



**EFFECTIVE DATE
SEPTEMBER, 2003**

WARNINGS

If the information in this manual is not followed exactly, a fire or explosion may result causing property damage, personal injury or loss of life.

- Do not store or use gasoline or other flammable vapors and liquids in the vicinity of this or any other appliance.

WHAT TO DO IF YOU SMELL GAS

- Do not try to light any appliance.
- Do not touch any electrical switch; do not use any phone in your building.
- Immediately call your gas supplier from neighbor's phone. Follow the gas supplier's instructions.
- If you cannot reach your gas supplier, call the fire department.
- Installation and service must be performed by a qualified installer, service agency or the gas supplier.

Installer: Please leave these instructions with the consumer.

Consumer: Please retain these instructions for future use.

Log sets comply with ANSI Z21.11.2 Unvented Heaters and also comply with ANSI Z21.60 Decorative Vented Appliances for Solid Fuel Burning Fireplaces. State or local codes may only allow operation of log sets in a vented configuration. Check your state or local codes.

WARNING: If not installed, operated and maintained in accordance with the manufacturer's instructions, this product could expose you to substances in fuel or from fuel combustion which can cause death or serious illness.

TABLE OF CONTENTS

Section	Page
Important Installation Guidelines	3
General Information	3
Log Placement	4
LS-18FA(C,O,S)-1 Photos	5
LS-24FA(C,O,S)-1 Photos	6
LS-30FA(C,O,S)-1 Photos	7
Parts List & Parts View	8
How to Order Repair Parts	8

IMPORTANT INSTALLATION GUIDELINES

Proper Log Placement

Log placement is critical to proper burner performance. Logs must be correctly positioned onto the burner. The photos in this manual show the proper pinned position for logs on this set. Owners need to be shown proper log placement and instructed not to move the logs.

Logs must fit firmly onto the burner when positioned as shown in the photos. Misformed logs or logs with sloppy pin holes must be replaced.

Proper Placement of Rock Wool and Decorative Lava Rock

Rock wool can be added to burners for a glowing ember effect. It must be positioned only on the front portion of the burner. The photos in this manual show the proper placement of rock wool.

Decorative lava rock or small wood pieces should never be placed on the burner. These items are only for placement on the floor of the fireplace or firebox.

Proper Primary Airflow into Burner

For proper burner operation and flame appearance, the flow of primary air into the venturi tube, located on the rear of the burner, must not be reduced. This flow of air is reduced if dirt, lint or other obstructions build-up around or inside the venturi. Any obstruction in the venturi tube area must be removed. The flow of air into the venturi is also reduced if the gas orifice isn't centered in the venturi inlet and/or is not aligned with the venturi. Any misalignment of the burner orifice may be corrected by bending the shutter cap holding the orifice to the inlet of the venturi tube.

Ceiling Fans, Portable Fans or Logs Installed Near Cold Air Returns

Ceiling fans or oscillating floor type fans need to be monitored during the operation of vent-free logs. If the air blows directly into the flame causing it to impinge on the log set, or firebox, it should be turned off or redirected. Ceiling fans could be reversed to possibly eliminate flame impingement, and the floor fan could be redirected. Upon installation, be aware of any cold air returns or vents in the proximity of the log set. Any draft created around a vent-free log set can cause the flame to impinge on the log and create a sooting situation.

WARNING: Do not allow fans to blow directly into the fireplace. Avoid any drafts that alter burner flame patterns.

WARNING: Do not use a blower insert, heat exchanger insert or other accessory not approved for use with this heater.

Candles

Avoid the use of scented or decorative candles while the log set is in operation. Candles produce a residue in the air that creates a soot like substance. Burning candles while the log set is operating magnifies the problem. It should be noted that candles, in general, produce soot. The amount of time burned and the quantity of candles burned will determine the amount of soot produced and deposited.

Make Owners Aware of Proper Log Set Operation

Properly installed and properly maintained log sets do not deposit soot on the logs. If users see soot appear on a log, call for service. Do not continue to operate the log set.

Sunken Fireplace

If installing this unit into a sunken fireplace, you must raise the floor to insure adequate airflow and guard against sooting. Raise fireplace floor using a non-combustible material, which is secure.

Glass Doors

Make sure that glass doors are open during all operations of the logset. The opening of the glass door frame should be the dimension used for the minimum front opening of the firebox.

Woodburning Fireplaces

The interior of the firebox and the chimney should be cleaned and free of all creosote before installing a gas burning log set. Creosote will soften when heated and can drop on the logset causing odors and possibly sooting.

WARNING: Before installing in a solid-fuel burning fireplace, the chimney flue and firebox must be cleaned of soot, creosote, ashes and loose paint by a qualified chimney cleaner.

GENERAL INFORMATION

Qualified Installing Agency

Installation and replacement of gas piping, gas utilization equipment or accessories and repair and servicing of equipment shall be performed only by a qualified agency. The term "qualified agency" means any individual, firm, corporation, or company that either in person or through a representative is engaged in and is responsible for (a) the installation, testing, or replacement of gas piping or (b) the connection, installation, testing, repair, or servicing of equipment; that is experienced in such work; that is familiar with all precautions required, and that has complied with all the requirements of the authority having jurisdiction.

The installation must conform with local codes or, in the absence of local codes, with the *National Fuel Gas Code, ANSI Z223.1/NFPA54*.*

*Available from the American National Standards Institute, Inc. 11 West 42nd St., New York, N.Y. 10018.

15997-0-0903

State of Massachusetts: The installation must be made by a licensed plumber or gas fitter in the Commonwealth of Massachusetts.

In the Commonwealth of Massachusetts vent free products are not approved.

State of Massachusetts requirement for installation of vented decorative appliance in a vented fireplace is the following:

A vented decorative gas appliance must be installed in a vented fireplace only in the state of Massachusetts. The vent damper must be removed or welded permanently open.

LOG PLACEMENT

Before you begin: Do not, handle these logs with your bare hands! Always wear gloves to prevent skin irritation. After handling logs, wash your hands gently with soap and water.

All Logs

The positioning of the logs is critical to the safe and clean operation of this heater. Sooting and other problems may result if the logs are not properly and firmly positioned in the appliance.


Refer to Figure 1 for the following warning.

Warning: Failure to position the parts in accordance with this diagram or failure to use only parts specifically approved with this appliance may result in property damage or personal injury.

PROPER INSTALLATION SEQUENCE:

LS-(18, 24, 30)FA(C,O,S) (Figure 1)

1. Place back left (#1) log onto left, rear pin on rear log support.
2. Place back right (#2) log onto right, rear pin on rear log support.
3. Place front left (#3) log onto two (2) left, front pins on burner pan.
4. Place front right (#4) log onto two (2) right, front pins on burner pan.
5. Place front (#5) log in front of burner pan.
6. Compare the completed log installation with the appropriate photo from pages 5 through 7. Review previous steps to make any necessary adjustments.
7. Log placement is completed.

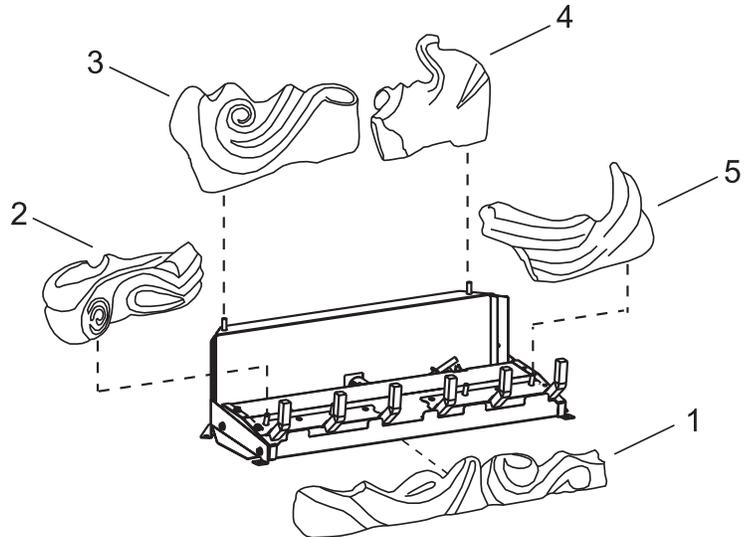

Log Placement
LS-(18, 24, 30)FA(C,O,S) Logs

Figure 1

Apply loose material (glowing embers) per appropriate Installation Instructions and Owner's Manual. Replacement of loose material (glowing embers) must be purchased from Empire Comfort Systems, Inc. Application of excess loose material (glowing embers) may adversely affect performance of the heater. **WARNING:** All previously applied loose material must be removed prior to reapplication.

Replacement Loose Material (glowing embers) Part Number

LS-18FA(C, O, S)	15999
LS-24FA(C, O, S)	15970
LS-30FA(C, O, S)	15970

Attention: Use the following procedure to connect ON/OFF switch or remote receiver to VFSR burner assembly.

Remove ON/OFF switch from switch log assembly. Install ON/OFF switch into switch bracket. Connect the 2-1/4" terminals onto the TH and TH/TP terminals on valve. Place switch bracket to **right** of the gas valve and burner assembly. When connecting to remote receiver, cut off 1/4" terminals from wires attached to ON/OFF switch. Strip wires back about 1/4". Connect stripped ends into remote receiver.

Attention: Do not use Figure 1 to order replacement logs. Refer to Page 8 Parts List and Parts View to order logs for your appropriate model number.

The following WARNING applies when log set is installed onto an unvented gas burner assembly.

WARNING: This appliance is equipped for (natural or propane) gas. Field conversion is not permitted.

LS-18FA(C,O,S)-1 PHOTOS

Do not cover any large rear ports with loose material (glowing embers).

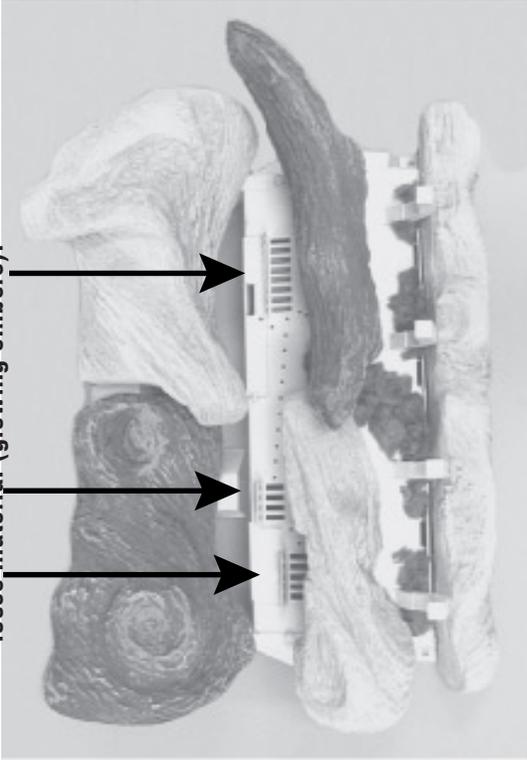


Photo 2



Photo 4



Photo 1



Photo 3

LS-24FA(C,O,S)-1 PHOTOS

Do not cover any large rear ports with loose material (glowing embers).

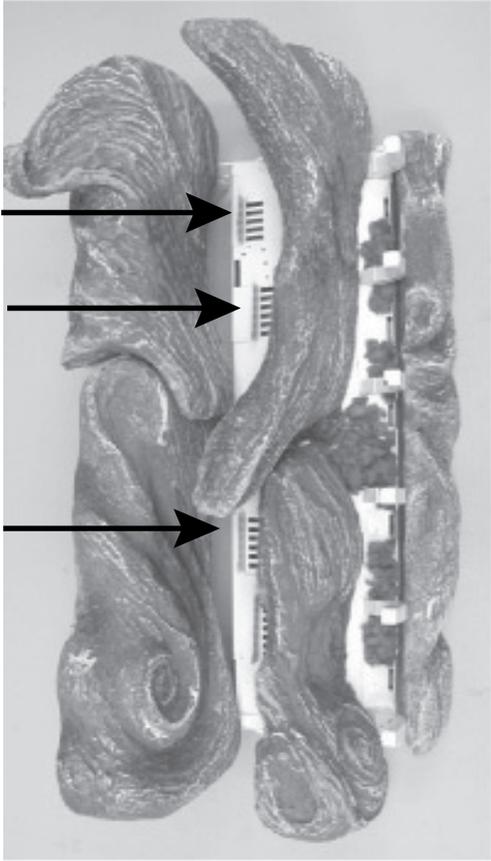


Photo 2



Photo 4



Photo 1



Photo 3

LS-30FA(C,O,S)-1 PHOTOS

Do not cover any large rear ports with loose material (glowing embers).

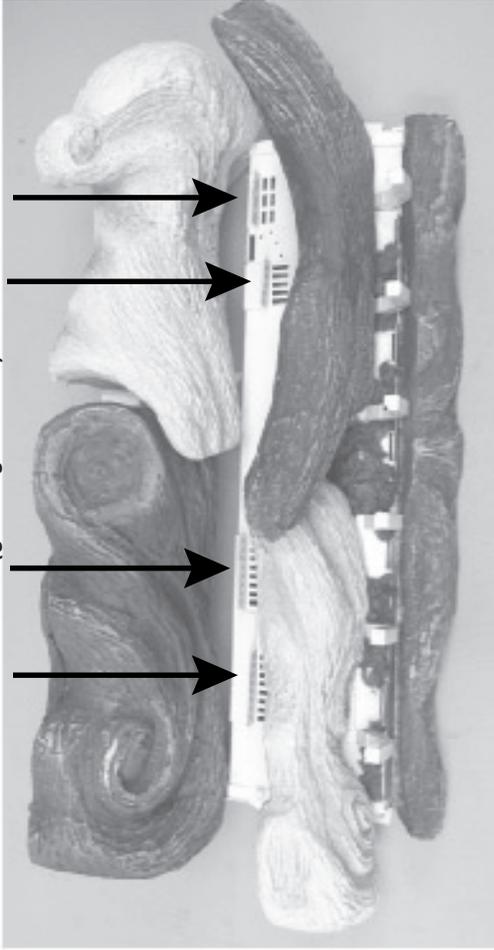


Photo 2



Photo 4



Photo 1


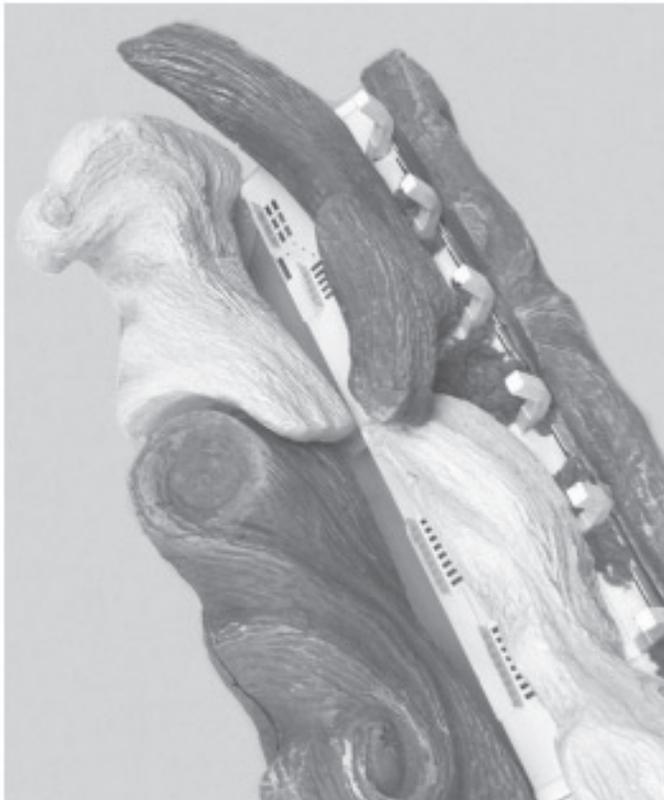


Photo 3

PARTS LIST & PARTS VIEW

Attention: When ordering parts, it is very important that **part number** and **description** of part coincide.

Index No.	Part Number	Description	Index No.	Part Number	Description
FLAME ART LOGS					
1	R-5962	18" FRONT-SUMMER SAND	4	R-5995	30" BACK RIGHT-SUMMER SAND
1	R-5968	18" FRONT-OCEAN BREEZE	4	R-6001	30" BACK RIGHT-OCEAN BREEZE
1	R-5974	18" FRONT-CORAL JEWEL	4	R-6007	30" BACK RIGHT-CORAL JEWEL
1	R-5980	24" FRONT-SUMMER SAND	5	R-5958	18" BACK LEFT-SUMMER SAND
1	R-5986	24" FRONT-OCEAN BREEZE	5	R-5964	18" BACK LEFT-OCEAN BREEZE
1	R-5992	24" FRONT-CORAL JEWEL	5	R-5970	18" BACK LEFT-CORAL JEWEL
1	R-5998	30" FRONT-SUMMER SAND	5	R-5976	24" BACK LEFT-SUMMER SAND
1	R-6004	30" FRONT-OCEAN BREEZE	5	R-5982	24" BACK LEFT-OCEAN BREEZE
1	R-6010	30" FRONT-CORAL JEWEL	5	R-5988	24" BACK LEFT-CORAL JEWEL
2	R-5961	18" MIDDLE RIGHT-SUMMER SAND	5	R-5994	30" BACK LEFT-SUMMER SAND
2	R-5967	18" MIDDLE RIGHT-OCEAN BREEZE	5	R-6000	30" BACK LEFT-OCEAN BREEZE
2	R-5973	18" MIDDLE RIGHT-CORAL JEWEL	5	R-6006	30" BACK LEFT-CORAL JEWEL
2	R-5979	24" MIDDLE RIGHT-SUMMER SAND	NS	11455	SWITCH BRACKET
2	R-5985	24" MIDDLE RIGHT-OCEAN BREEZE			
2	R-5991	24" MIDDLE RIGHT-CORAL JEWEL			
2	R-5997	30" MIDDLE RIGHT-SMMER SAND			
2	R-6003	30" MIDDLE RIGHT-OCEAN BREEZE			
2	R-6009	30" MIDDLE RIGHT-CORAL JEWEL			
3	R-5960	18" MIDDLE LEFT-SUMMER SAND			
3	R-5966	18" MIDDLE LEFT-OCEAN BREEZE			
3	R-5972	18" MIDDLE LEFT-CORAL JEWEL			
3	R-5978	24" MIDDLE LEFT-SUMMER SAND			
3	R-5984	24" MIDDLE LEFT-OCEAN BREEZE			
3	R-5990	24" MIDDLE LEFT-CORAL JEWEL			
3	R-5996	30" MIDDLE LEFT-SUMMER SAND			
3	R-6002	30" MIDDLE LEFT-OCEAN BREEZE			
3	R-6008	30" MIDDLE LEFT-CORAL JEWEL			
4	R-5959	18" BACK RIGHT-SUMMER SAND			
4	R-5965	18" BACK RIGHT-OCEAN BREEZE			
4	R-5971	18" BACK RIGHT-CORAL JEWEL			
4	R-5977	24" BACK RIGHT-SUMMER SAND			
4	R-5983	24" BACK RIGHT-OCEAN BREEZE			
4	R-5989	24" BACK RIGHT-CORAL JEWEL			

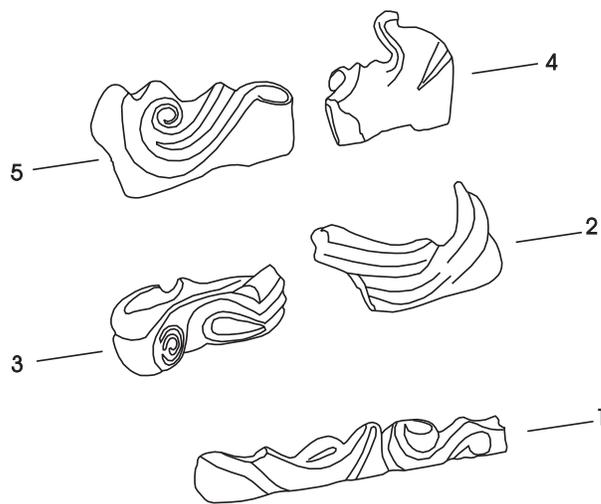

USE ONLY MANUFACTURER'S REPLACEMENT PARTS. USE OF ANY OTHER PARTS COULD CAUSE INJURY OR DEATH.

HOW TO ORDER REPAIR PARTS

Parts can be ordered **only** through your **service person or dealer**. For best results, the **service person or dealer** should order parts through the distributor. Parts can be shipped directly to the **service person/dealer**.

All parts listed in the Parts List have a Part Number. When ordering parts, first obtain the Model Number from the name plate on your equipment. Then determine the Part Number (**not** the Index Number) and the Description of each part from the following appropriate illustration and list. Be sure to give all this information . . .

Appliance Model Number _____ Part Description _____
 Appliance Serial Number _____ Part Number _____
 Type of Gas (Propane or Natural) _____

Do not order bolts, screws, washers or nuts. They are standard hardware items and can be purchased at any local hardware store.

Shipments contingent upon strikes, fires and all causes beyond our control.



Empire Comfort Systems, Inc.
 Nine Eighteen Freeburg Ave.
 Belleville, Illinois 62220-2623

PH: 1-618-233-7420
 PH: 1-800-851-3153
 FAX: 1-618-233-7097
 FAX: 1-800-443-8648
 E-MAIL: info@empirecomfort.com
 WEB SITE: www.empirecomfort.com