



Philips Domestic Appliances and Personal Care

Service Manual

PRODUCT INFORMATION

Features

- Colour classic green
- Careeza soleplate
- Tank capacity (300 ml)
- Steam rate (30 g/min)
- Shot of steam (75 g/min)
- Vertical steam
- Integrated cord winder
- Cord length : 2 m.

Safety Information

- This product meets the requirements regarding interference suppression on radio and TV.
- After the product has been repaired, it should function properly and has to meet the safety requirements and legal regulations as officially laid down at this moment.

TECHNICAL INFORMATION

Voltage	: 220 - 240 V
Frequency	: 50 - 60 Hz
Power consumption	: 1800 W

Water advice

Suitable for tap water use. However if the tap water in your area is very hard, we advise you to mix it with a equal portion of distilled water or to use distilled water only.

Cleaning of the Iron

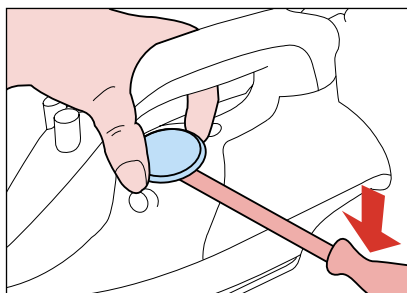
Use only the Calc clean button for cleaning of the Iron. Never use vinegar, starch or chemically descaled water.

Soleplate

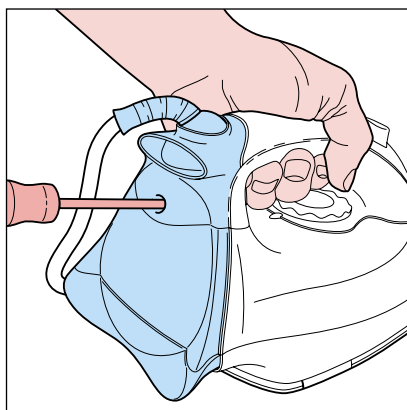
Careeza is a multi layer chemical substance that gives an excellent gliding over various fabrics and better care for the garments.

Vertical Steam

When the iron is kept in a vertical position, the shot of steam (S.O.S) button can be used to iron hanging fabrics such as curtains.

DIAL 1**BACKPLATE 2****CORD SET 3****SWIVEL 4**

Remove Screw A (1x)



Remove BACKPLATE 2

Remove Screw B (2x) cord clamping

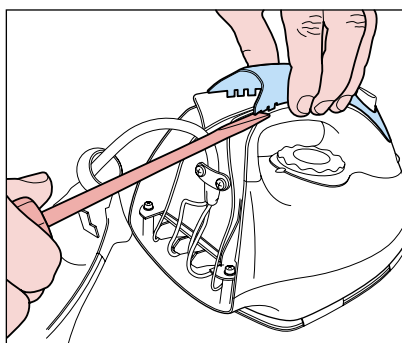
INLAY 5**LAMP ASSY 6****FILLING DOOR 7****STEAM SLIDER 8****LAMP COVER 9****SOS KNOB 10****SPRAY KNOB 11****TANK SEAL 12**

remove Screw A (1x)

remove BACKPLATE 2

remove Screw B (2x) cord clamping

remove INLAY 5

**DOSING UNIT 13**

remove Screw A (1x)

remove BACKPLATE 2

remove Screw B (2x) cord clamping

remove INLAY 5

remove Screw C (2x)

remove Screw D (2x)

remove DOSING UNIT 13

HANDLE 14**RATTLE SPRING 15****PUMP 16**

remove Screw A (1x)

remove BACKPLATE 2

remove Screw B (2x) cord clamping

remove INLAY 5

remove Screw C (2x)

remove Screw D (2x)

remove DOSING UNIT 13

remove Screw E (2x)

remove HANDLE 14

TANK 17**THERMOSTAT BUSH 18**

remove Screw A (1x)

remove BACKPLATE 2

remove Screw B (2x) cord clamping

remove INLAY 5

remove Screw C (2x)

remove Screw D (2x)

remove DOSING UNIT 13

remove Screw E (2x)

remove HANDLE 14

remove Screw F (2x)

remove TANK 17

SHIELD 19

remove Screw A (1x)

remove BACKPLATE 2

remove Screw B (2x) cord clamping

remove INLAY 5

remove Screw C (2x)

remove Screw D (2x)

remove DOSING UNIT 13

remove Screw E (2x)

remove HANDLE 14

remove Screw F (2x)

remove TANK 17

remove Screw G (1x)

remove SHIELD 19

COVER 20**SOS SEAL 21****DOSING SEAL 22****SOLEPLATE ASSY 23**

remove Screw A (1x)

remove BACKPLATE 2

remove Screw B (2x) cord clamping

remove INLAY 5

remove Screw C (2x)

remove Screw D (2x)

remove DOSING UNIT 13

remove Screw E (2x)

remove HANDLE 14

remove Screw F (2x)

remove TANK 17

remove Screw G (1x)

remove SHIELD 19

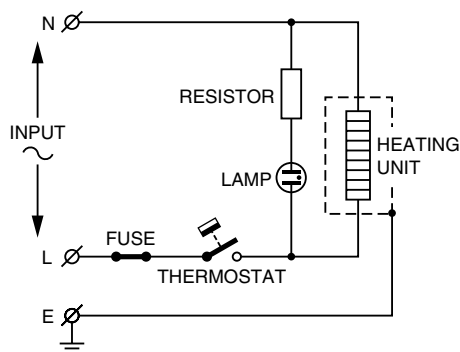
remove Screw H (2x)

remove COVER 20

Pos	Service code	Description
1	4239 021 11880	Dial (Ger/Swe)
2	4239 022 53130	Backplate
3	4239 000 07970	Cordset (Europe)
	4322 000 08380	Cordset (UK)
	4239 000 08670	Cordset (Australia)
4	4239 025 92070	Swivel
5	4239 021 07280	Inlay
6	4239 021 03140	Lamp assy
7	4239 021 07210	Filling door assy
8	4239 026 08120	Steam slider
9	4239 026 08280	Lamp cover
10	4239 026 10010	SOS knob
11	4239 026 10060	Spray knob
12	4239 015 54400	Tank seal
13	4239 021 08510	Dosing unit
14	4239 026 08050	Handle
15	4239 026 08840	Rattle spring
16	4239 020 90560	Pump
17	4239 022 53211	Tank Assy (non Drip Stop)
18	4239 015 98410B	Thermostat bush
19	4239 010 07850	Heat shield
20	4239 026 09750	Cover (non Drip Stop)
21	4239 015 51450	SOS seal
22	4239 015 55430	Dosing seal
23	4239 022 53180	Soleplate assy 230 V / 1800 W
24	4239 026 01220	Lamp holder

Note:

When replacing either Dosing seal (22) or Heat shield (19), both parts have to be replaced together.

**REPAIR INSTRUCTIONS**

- Due to high voltage of the iron, **ONLY** the specified cordsets must be used.
- For standardisation reasons :
Type plate : No information about the typenumber and voltage have been stamped onto the typeplate.
When replacing the typeplate, engrave at least typenumber onto the typeplate with a sharp object.
- Thermostat, fitted to the soleplate 23 has already been adjusted by the supplier and secured by glue. To avoid mal-function of the iron, **NEVER** re-adjust the thermostat.

NOTE :

The thermostat can only be ordered together with the soleplate assembly 23.

OPTIONAL (accessories)

- No specific issues

