ZG01 CO2 Module

User Manual

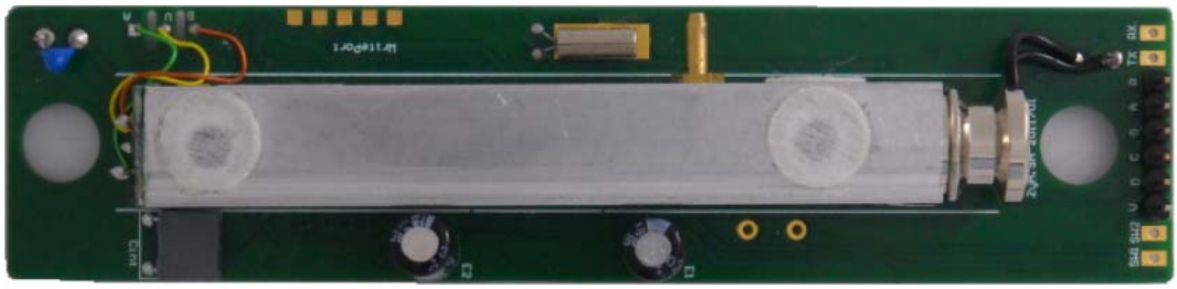

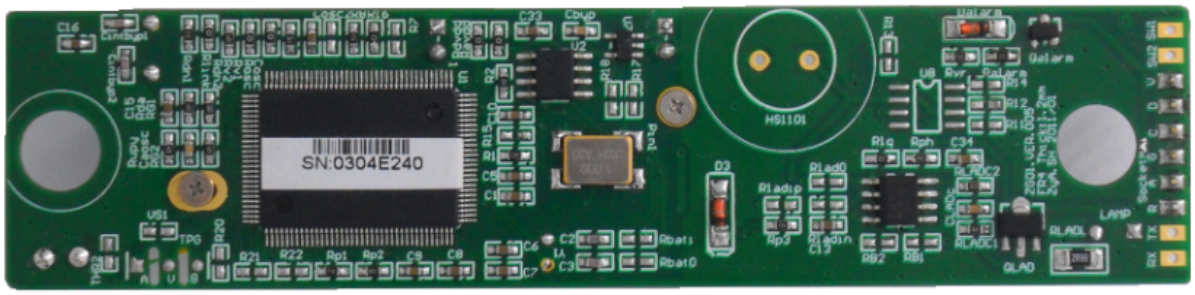

Contents

1 General Description

This document describes the user guide of ZG0 Series (ZG01).

Copyright:
All right reserved. Reproduction in any manner, in whole or in part is straightly prohibited without written permission of ZyAura.com. This information contained in this document is subject to change without notice.

Limited Warranty:
This data sheet contains information specific to products manufactured at the time of its publication, Contents herein do not constitute a warranty.

Trademark Acknowledgements:
All trademarks are the property of their respective owners.

2 Features of Design

ZyAura, a world class leader and supplier of IR sensor technology and temperature measurement devices, is pleased to introduce a new CO2 monitor for use in scientific, commercial, and consumer applications. The ZG01 is a new and low-cost carbon dioxide monitor implementing IR-SoC technology; it can accurately detect carbon dioxide levels between 0 to 3000 ppm. This gas monitor is suitably fit for applications in Indoor Air Quality (IAQ), HVAC, safety, and other industries.

3 Specification

Measurement Method	Dual Beam NDIR (Non-dispersive-Infrared)
Sample Method	Diffusion or flow through (50~200ml/min)
Measurement Range	0~3000ppm/0.3%
Operating TempRange	32 to 122° F (0-50°C) 0-95% RH,non-condensing
Storage Range	-20~60°C,95%RH
Temperature Dependence	Typ.±0.2% of reading per °C or ±2 ppm per °C, whichever is greater, referenced to 25°C
■Accuracy	
CO2 Accuracy	+/-50ppm or 5% of reading
Ambient Temperature Accuracy	±2°F (±1°C) When the fan blows to the device directly, the accuracy of temperature is + / -1.5 °C.
Temp Response Time	20-30 minutes (case must equilibrate with environment)
Pressure Dependence	0.13% of reading per mm Hg
Repeatability	20ppm
Resolution	1ppm
■Outputs	
Output Interface	6pin Vertical Connector, Space=2.54mm
Digital Output	CO2 & Tamb in ZyAura Protocol
OC (Open Collector)Output	Fixed setpoint, factory set at 1000 ppm, 50 ppm hysteresis
■Power Supply	
AC/DC Supply	5VDC supply (+/-5%),Ripple and Noise (mVp-p) 200
■Warm Up & Response	
Response Time #R1 (63% Rise Time)	About 2min
Warm Up Time(CO2)	<60 sec
Update Period	7 sec
Warm Up Time(Ambient Temp)	20~30min
Dimension	119x28x13.2mm (4.68x1.10x0.52 inch)
Weight	49g (1.73 oz)without attachment

Pin Assignment of ZG01

Warning: The Dimension in this drawing is for reference only.

V: Vdd **G**: GND

D: Data (Serial Data) **C**: Clock (Serial Clock)

A: Open collector output **R:** Reset

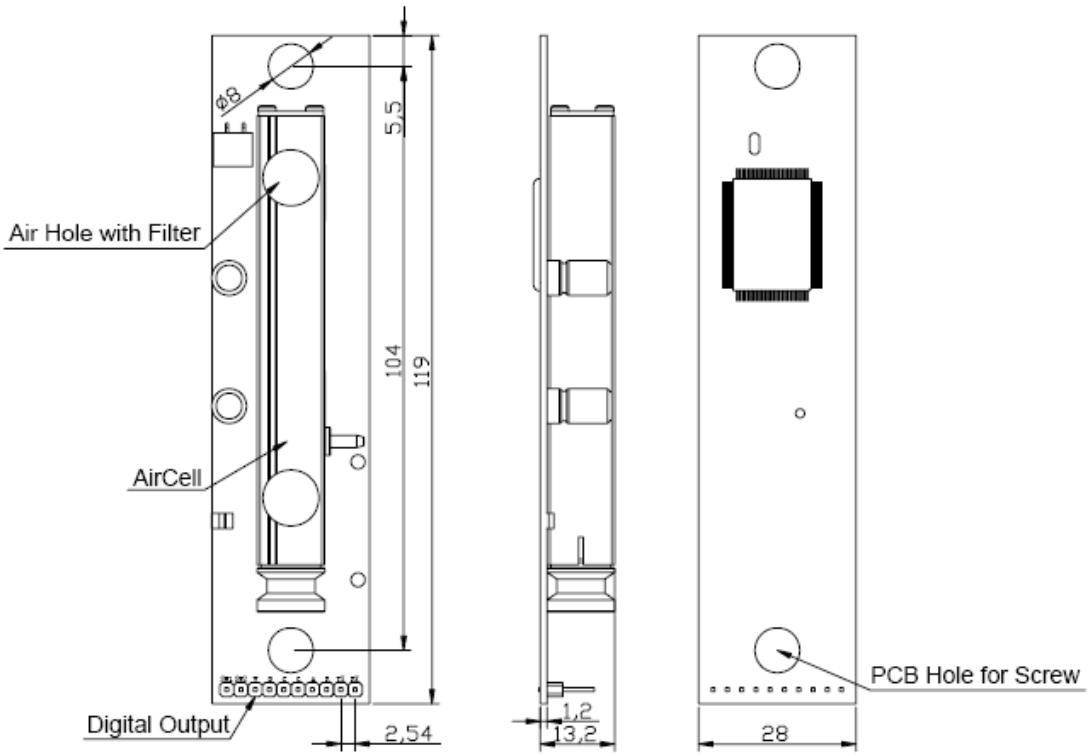

Fig1. The Module External Drawing

4 Serial Output

4.1 Typical Diagram

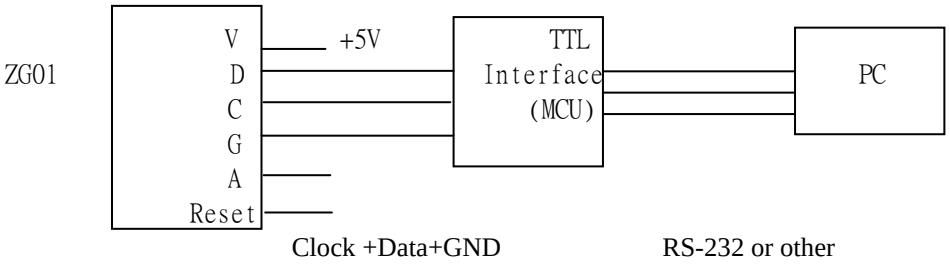

Fig2. Typical Diagram

ZG01 to TTL Interface (MCU)
V: Vcc
D: Data
C: Clock (2KHz)
G: GND
A: Open Collector
Reset: Restart the device

The voltage specifications of timing SPIr:
SPIr of ZG01 can compatible with 3.3Vdc CMOS，
Data, Clock，Reset Pin
ViH>=2.0Vdc, ViL<=0.8Vdc,
VoH>=2.4Vdc (Rload<0.5mA), VoL <= 0.8Vdc (Rload<0.5mA)

Clock Pin is high when there is no data out, the time out is >2ms.

1) The function of resetting the pin is that: when user's MCU cannot receive data of ZG01 normally, then user can restart ZG01 by controlling Reset Pin's electrical level to receive the data again.

2)Reset Pin: Pulling low level until 100ms（<0.8Vdc）, then pull high level（>2.0Vdc）,user can restart ZG01.

4.2 Timing of SPIr

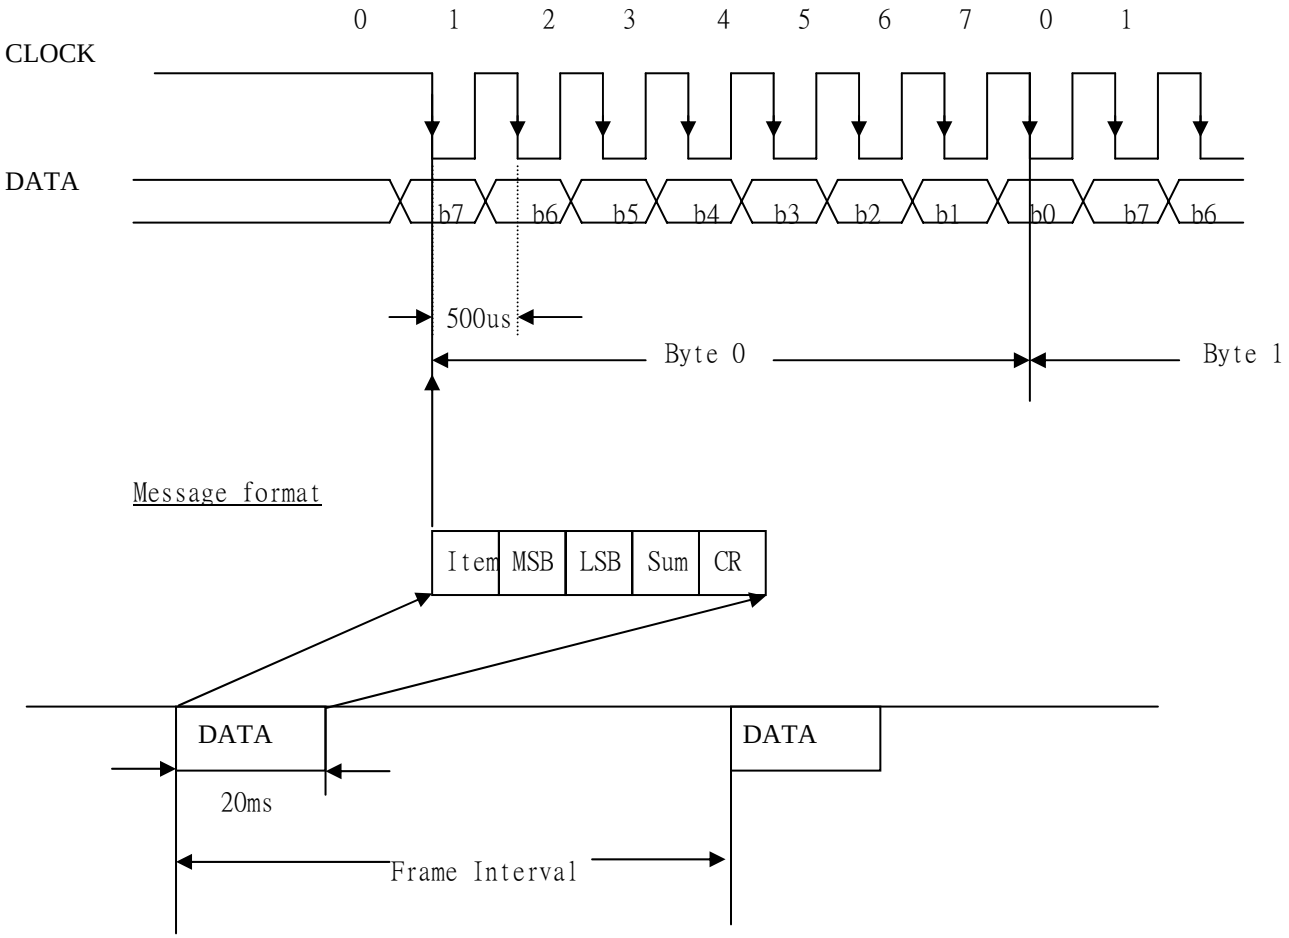

Fig3. Timing of SPI

4.2.1 Format of Message

Item	MSB	LSB	Sum	CR

Item "B" (42h): Tobj (Temperature of Obj)
MSB 8 bit Data Msb
LSB 8 bit Data Lsb
Sum Item+MSB+LSB=SUM
CR 0Dh, End of the message

There are 2 kinds of SPIr output format: Hex or BCD (default) format
Below is Hex format output:

Co2 Output:

50	02	58	AA	0D

Item 50h→ "P" the item code of CO2 concentration
Data MSB 02h
LSB 58h
Real CO2 concentration 600ppm
Sum CheckSum 50h+02h+58h=AAH (Only Low Byte)
HexToDec (0258H) =600
CR 0Dh →'Carriage Return' means End of Message

Temp Output:

42	12	82	D6	0D

Item 50h→ "B" the item code of Temp concentration
Data MSB 12h
LSB 82h
Real Temp value is 23℃
HexToDec (1282H) =4738; 4738/16-273.15=23
Sum CheckSum 42h+12h+82h=D6H (Only Low Byte)
CR 0Dh → 'Carriage Return' means End of Message

Below is BCD format output:

42	25	50	B7	0D

Item 42h→ "B" the item code of Object temperature
Data MSB 25h
LSB 50h
Real Ambient Temperature Value: 25.50degC
Sum CheckSum 42h+25h+50h=B7H (Only Low Byte)
CR 0Dh →'Carriage Return' means End of Message

50	06	54	AA	0D

Item 50h→ "P" the item code of CO2 concentration
Data MSB 06h
LSB 54h
Real CO2 concentration 654ppm
Sum CheckSum 50h+06h+54h=AAH (Only Low Byte)
CR 0Dh →'Carriage Return' means End of Message

5 Interface Demo Board: ZGhub

General Description:

ZGhub is an Interface box with LCD, for ZG0m series.
This Box can work as an interface between the CO2 monitor module and PC. See Fig.5
"ZGhub" has a 2-column character type LCD Display, it can also work without the PC.
The Hub will show CO2 & Tamb (data from the ZG0m) continuously.

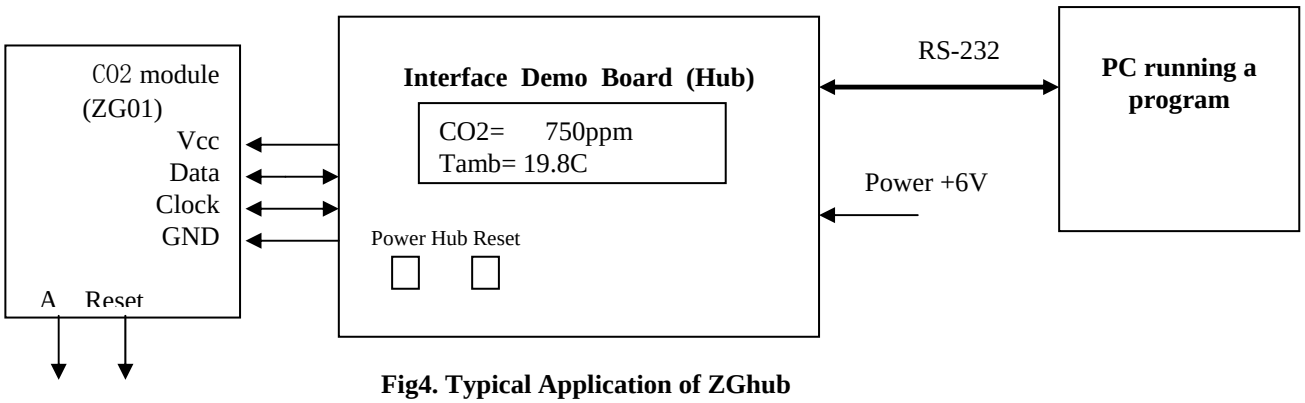

Fig4. Typical Application of ZGhub

Model No: ZGhub

Fig5.Zghub

OC (Pin A) is an alarm level, When CO2>alarm level, OC pin will be pulled at low level. When CO2<(alarm level-hysteresis level)， OC pin will at the level of suspended.

Notes：
By OC (Pin A) Control terminal current IC<0.2A, Vce<24VDC
Reset Pin/ Hardware Reset

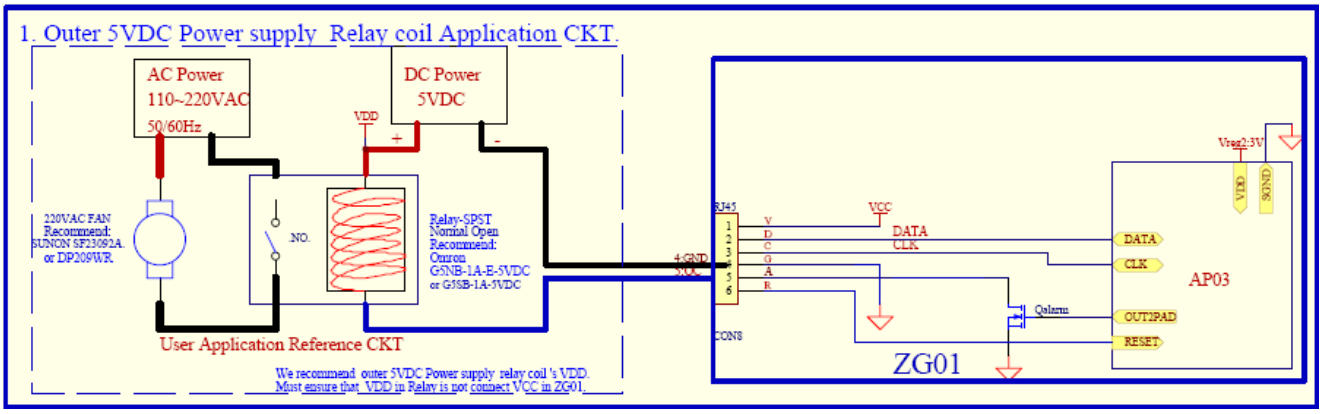

Fig6.The recommended circuit of OC controller

Please note：

1) **When ZGhub is connected with ZG01, please confirm the connection sequence of pin and pin before connect to power, otherwise it may damage ZG01.**
2) **ZG01 sample is with LCD display, it is convenient for debug, but actual mass production is without it.**
3) **ZG01 on the Demonstrates drawing is be powered by HUB.**

6 ZGview: Interface Program for PC

Program: ZGview

A Free version for demonstration can be downloading at http://www.zyaura.com/support/default.asp

- Running under Window operating system
- Must be used accompanied with ZGhub
- This program will show the curve of :
  CO2 (ppm); Tamb (degC) continuously
- Modification of the setting ,such as Alarm Level

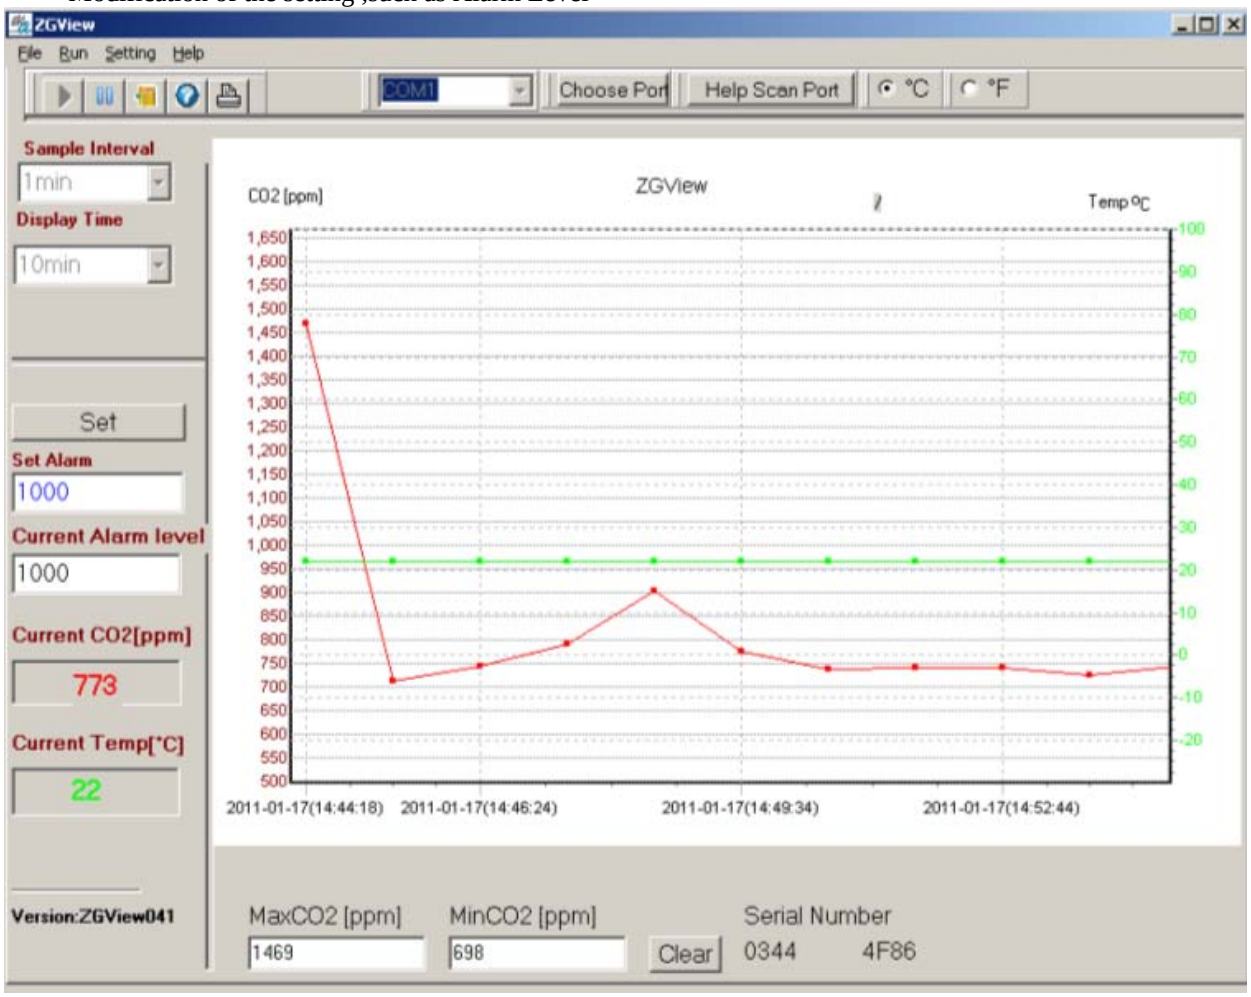

Fig7.ZGview Window

Warning: This ver. User manual is the temporary one; please refer to the www.ZyAura.com for updated version.