


GIORGIO

SERVICE MANUAL

GIORGIO Air Vented Dryer


**0707 449 25300 - VD8MS
LEBANON**

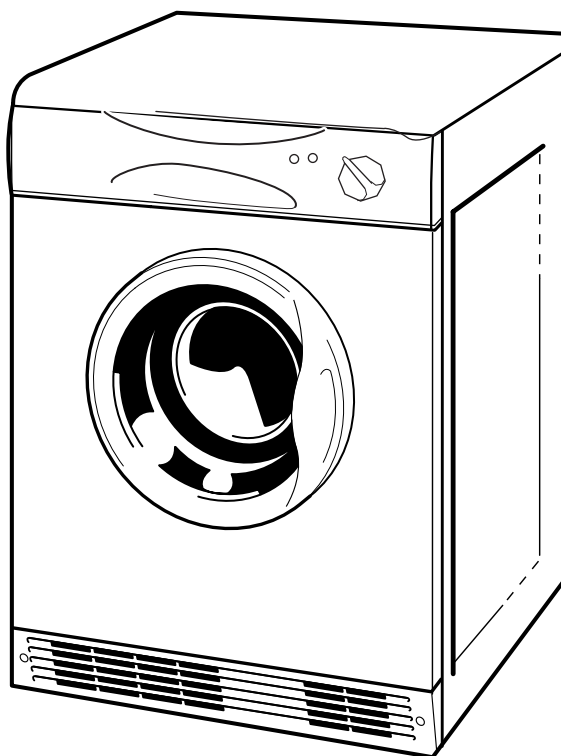


Wiring Diagram
Exploded Views
Parts List

August 2010


Giorgio Air Vented Dryer - Exploded View 1

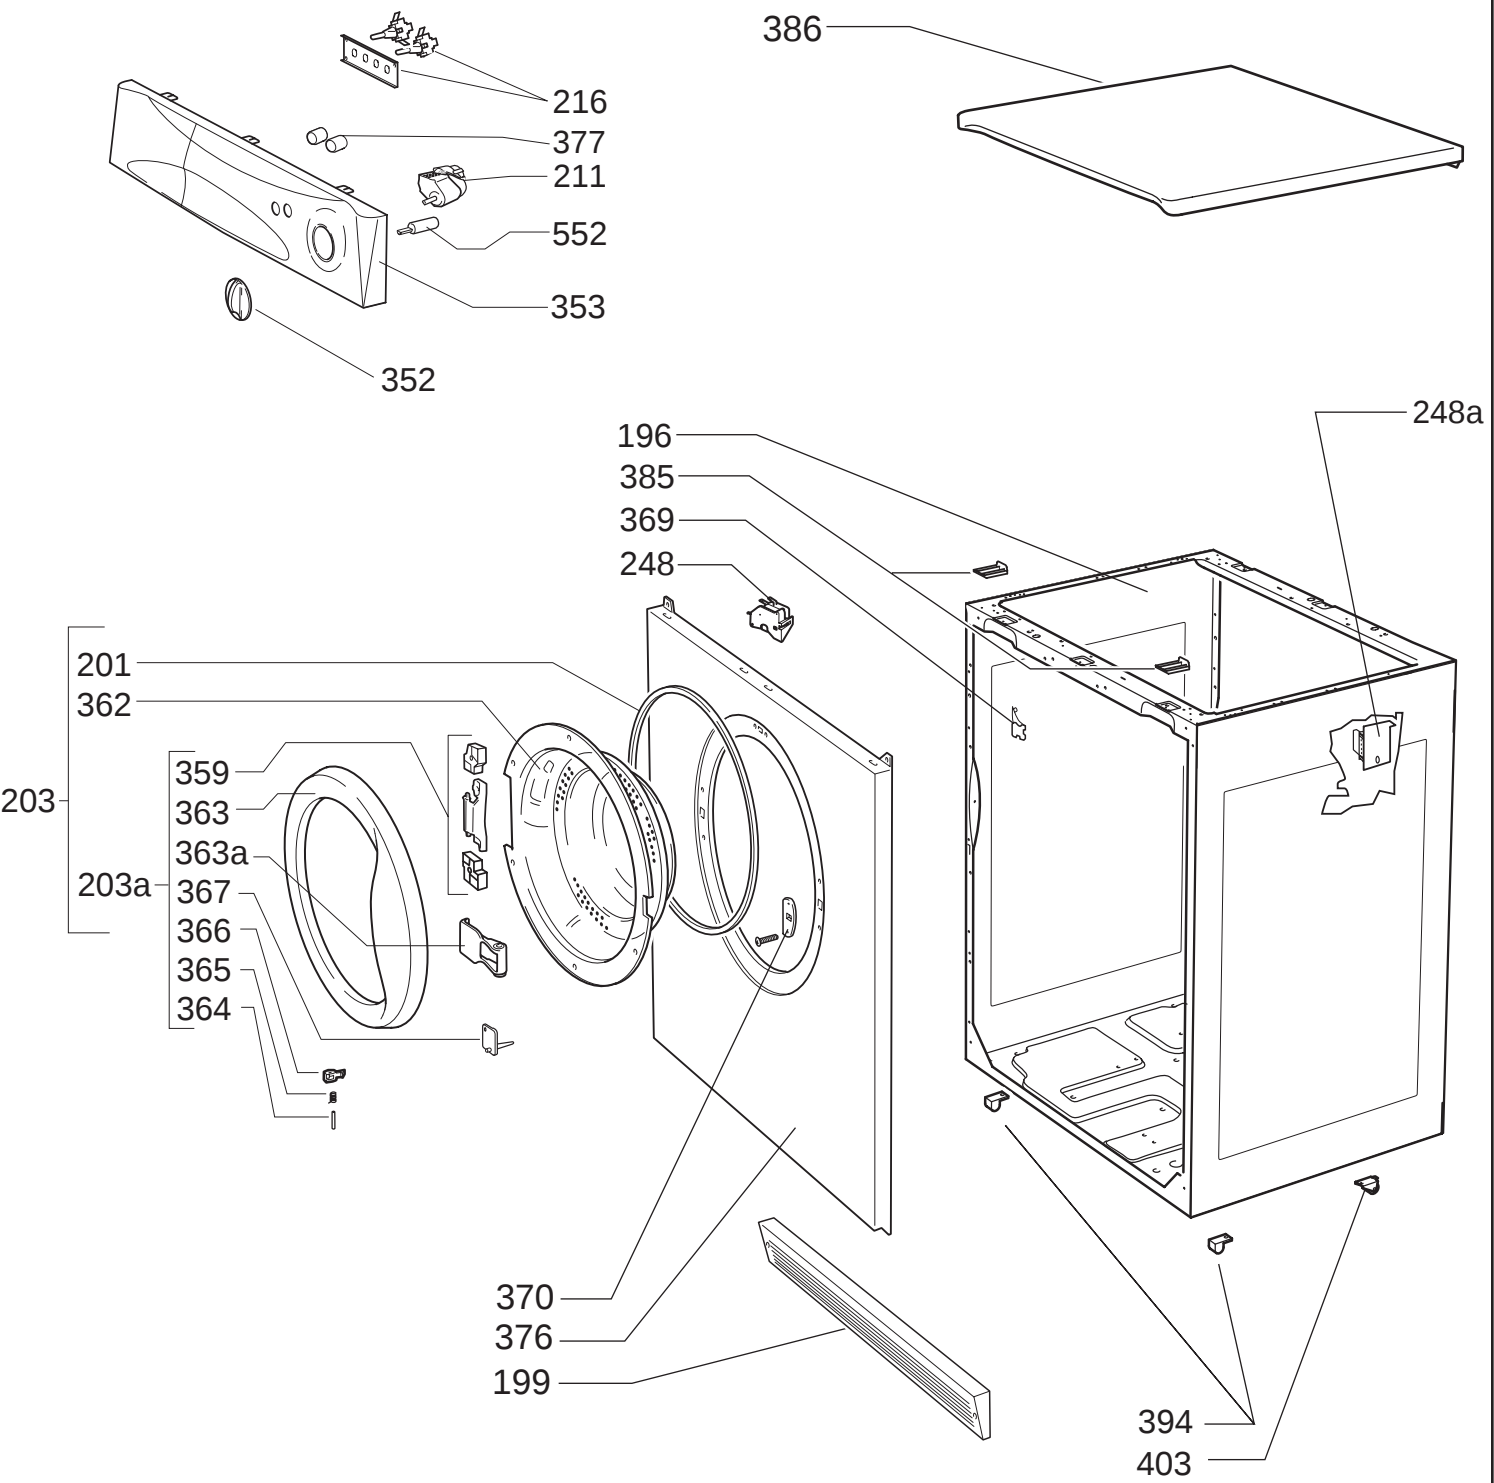


Giorgio Air Vented Dryer - Exploded View 2

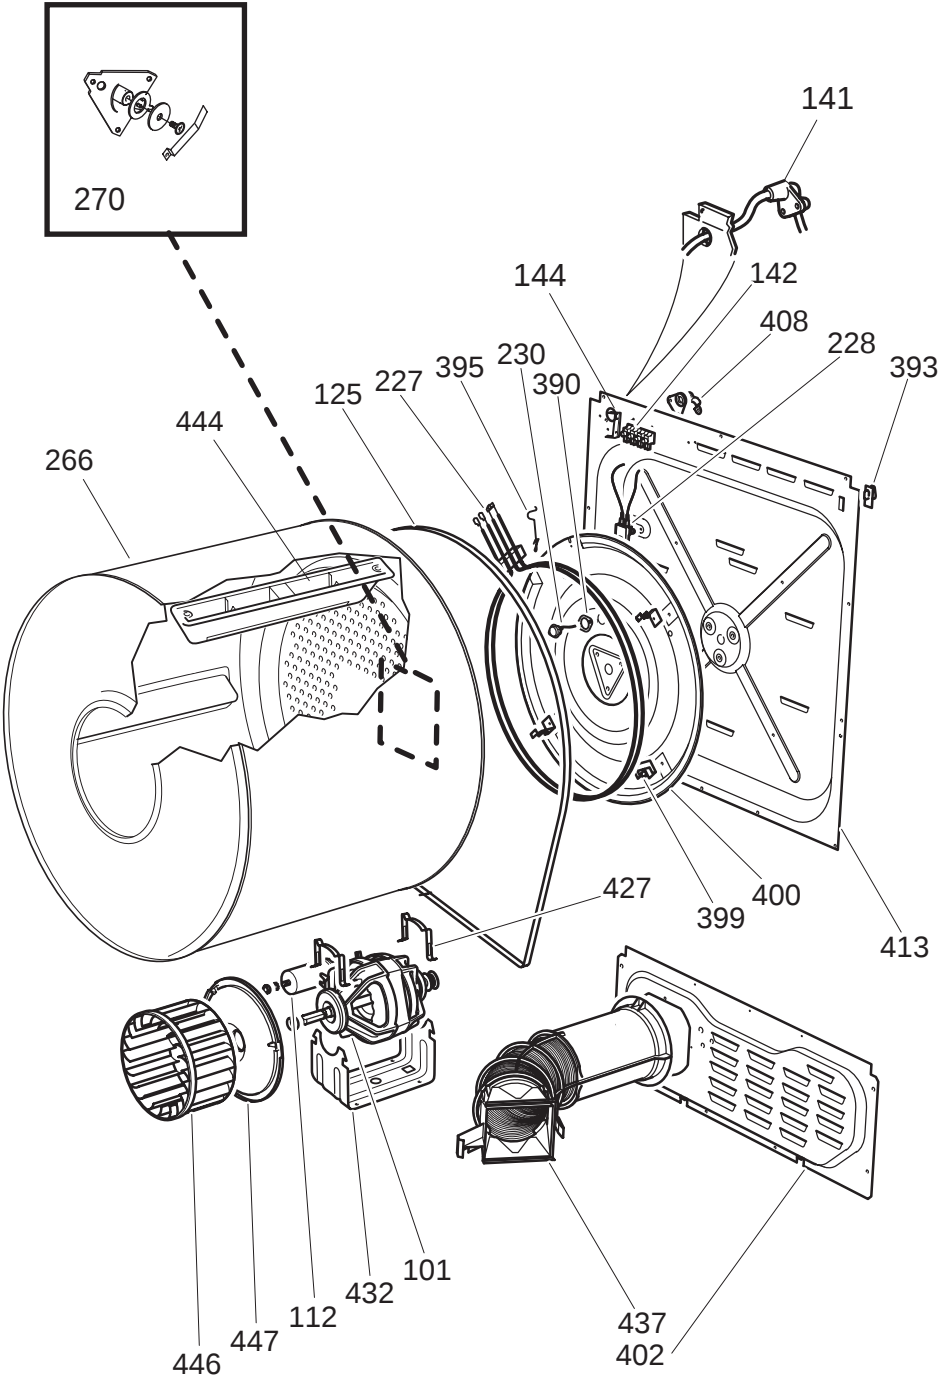

Giorgio Air Vented Dryer - Exploded View 3

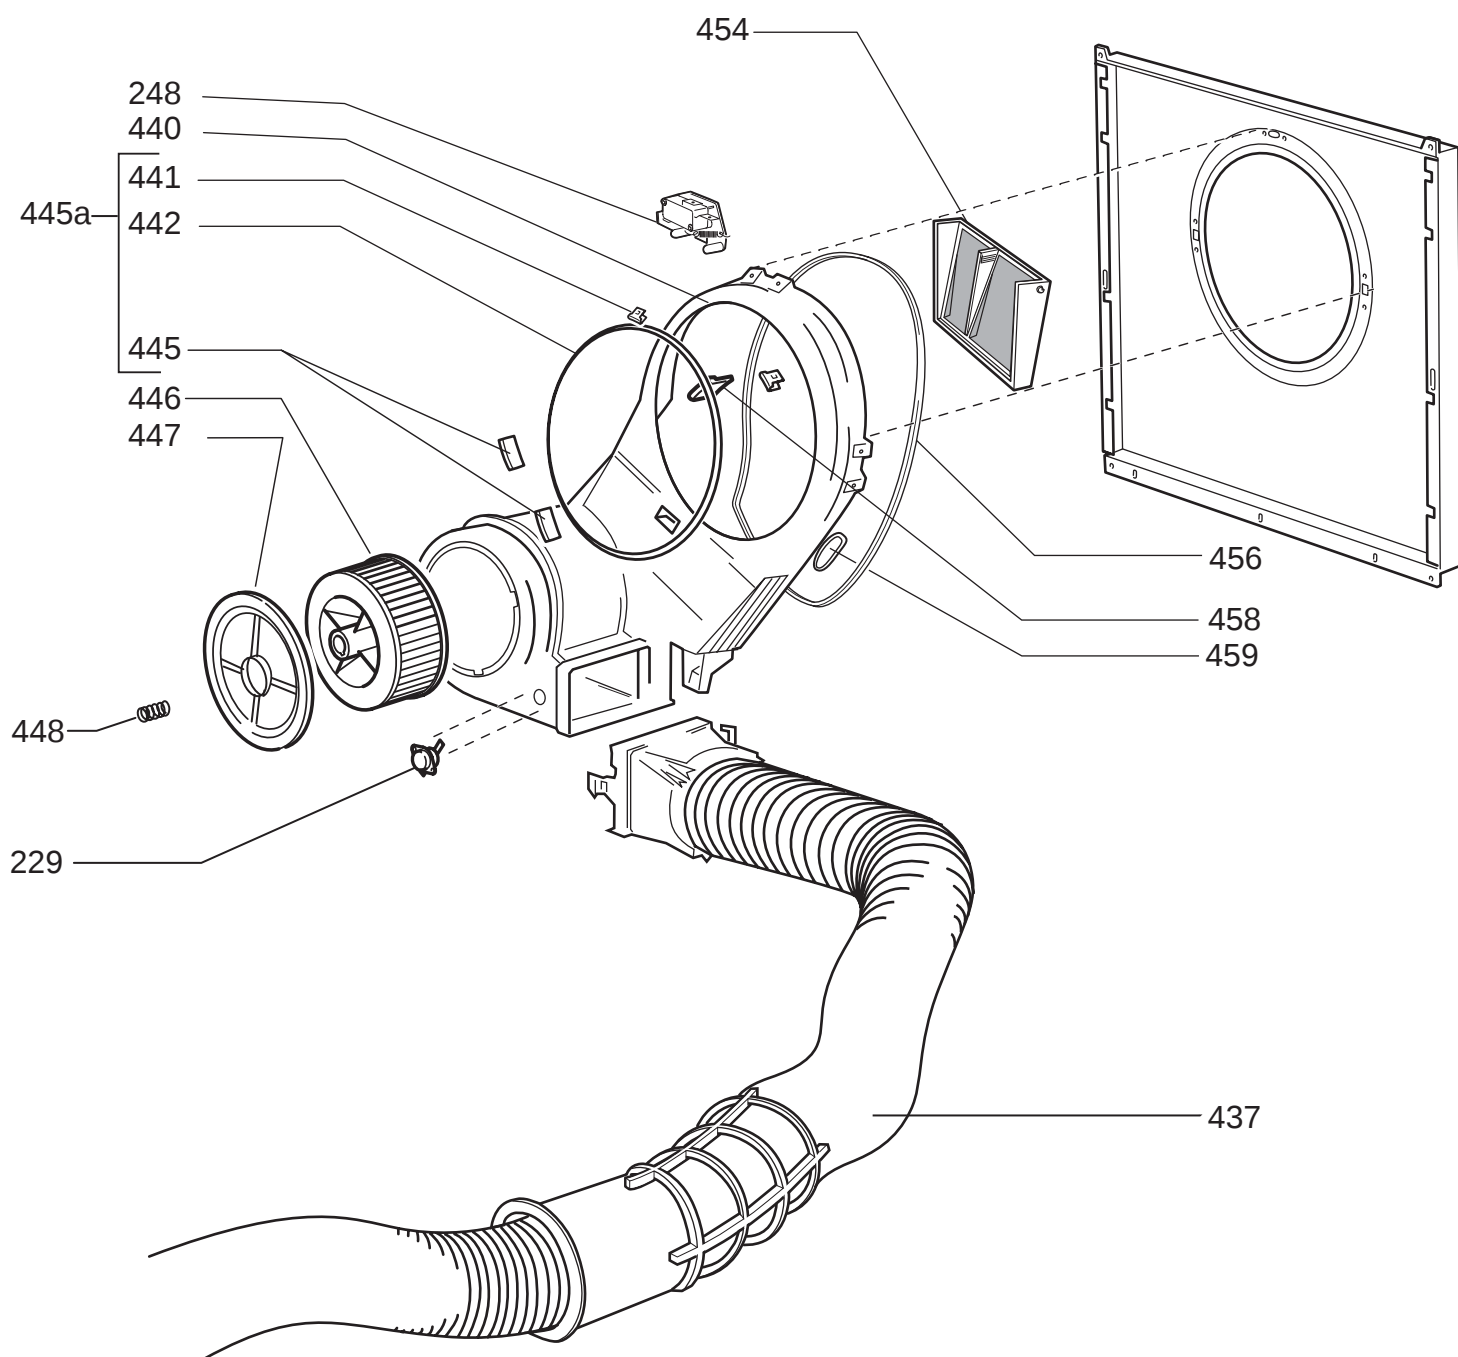

WIRING DIAGRAM

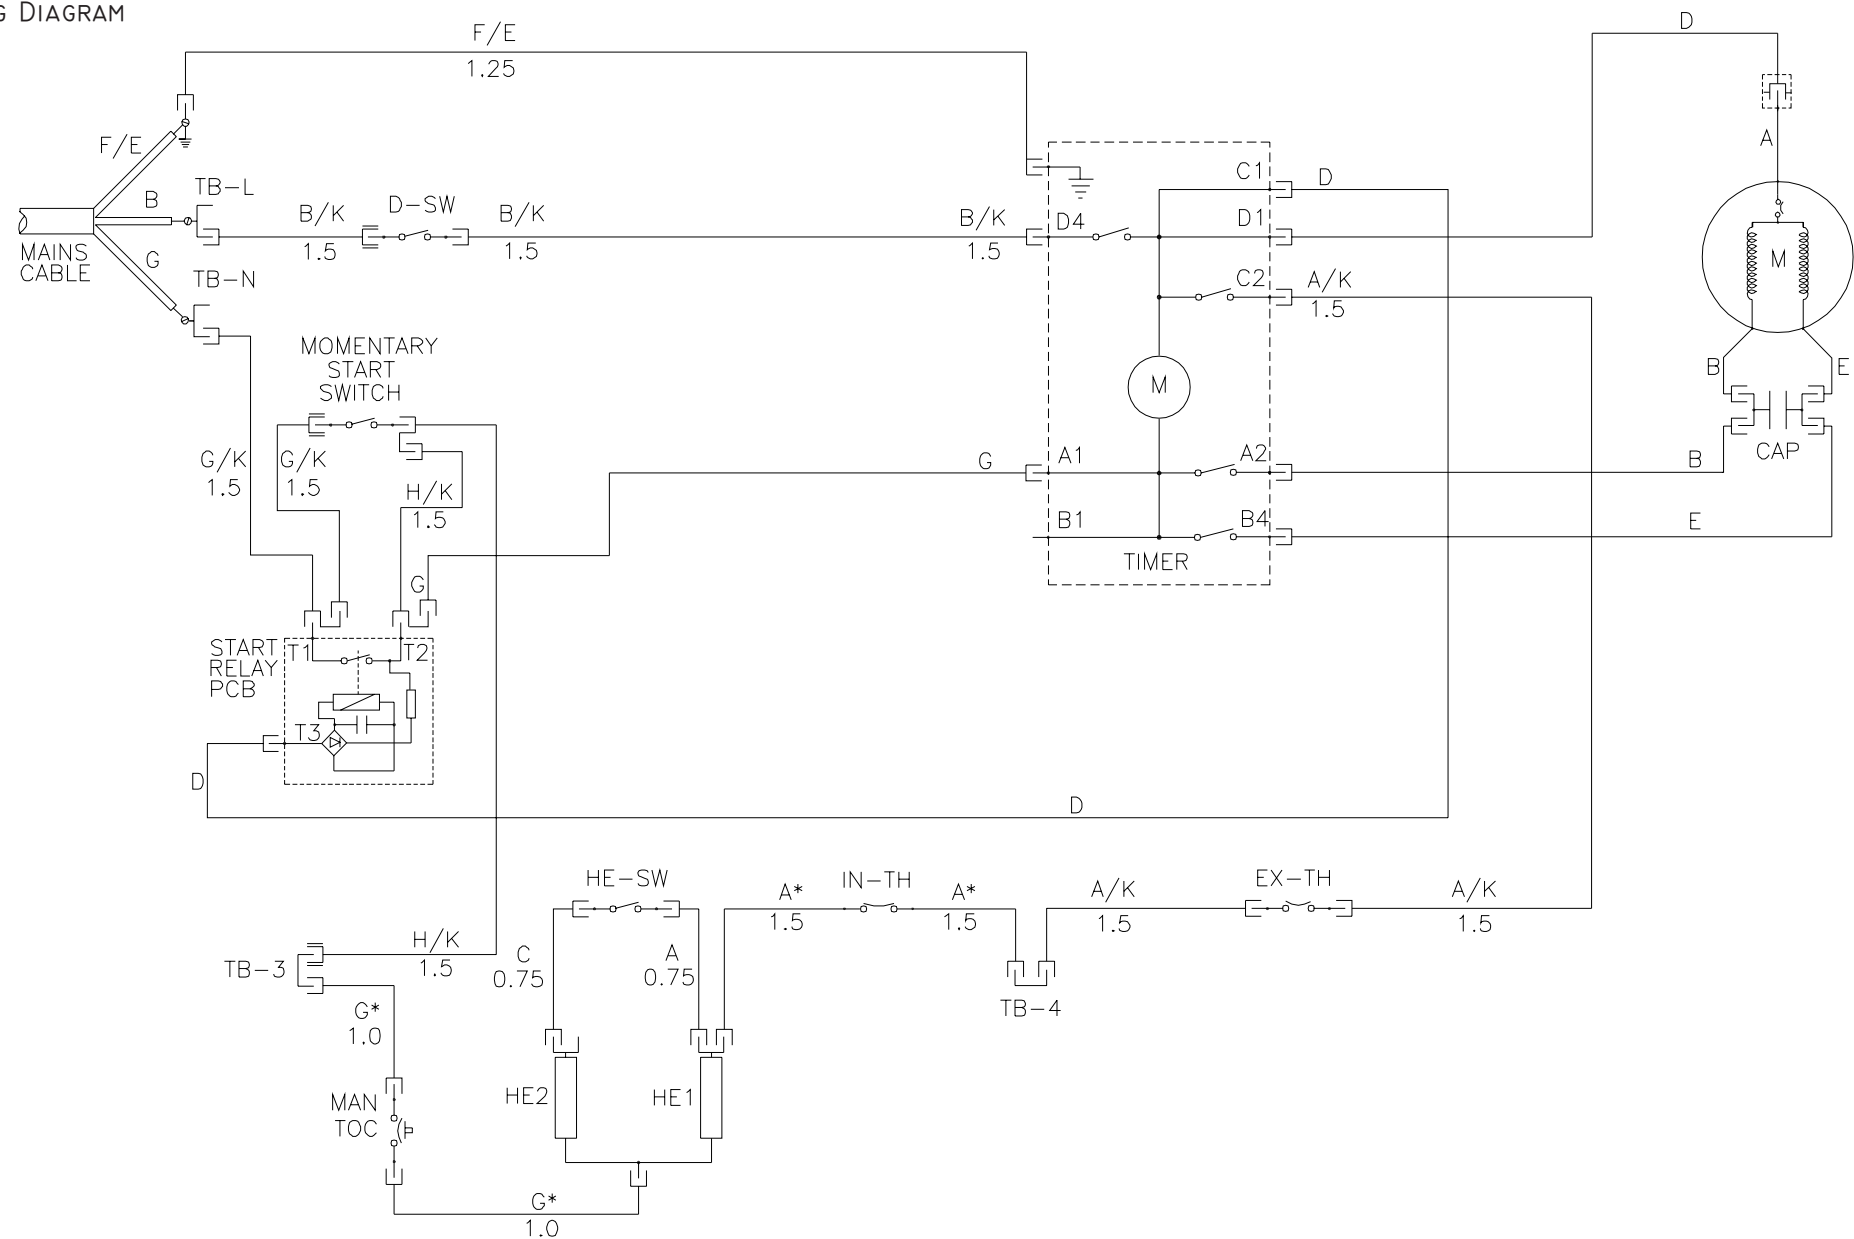

NOTES

1. ALL INTERNAL WIRING TO BE 0.5MM SQUARED, MULTI-STRAND, PVC INSULATED COPPER WIRE, UNLESS INDICATED OTHERWISE
2. WIRES MARKED THUS * TO BE SILICONE RUBBER INSULATED.

WIRE COLOUR CODE

- A – BLACK
- B – BROWN
- C – RED
- D – ORANGE
- E – YELLOW
- F – GREEN
- G – BLUE
- H – VIOLET
- K – WHITE
- N/A – PINK

COMPONENT CODE

- TB – TERMINAL BLOCK
- D-SW – DOOR SWITCH
- M – MOTOR
- EX-TH – EXHAUST THERMOSTAT
- IN-TH – INLET THERMOSTAT
- HE – HEATER
- HE-SW – HEAT SWITCH
- MAN TOC – MANUAL RESET HEATER CUT-OUT
- CAP – CAPACITOR

Item	Description	Code	Expl.View
101	Motor & 8µf Capacitor Assembly	4213 092 25611	2
112	8µf Capacitor	4213 092 08091	2
125	Drive Belt	4213 092 18601	2
141	Mains Cable & Plug	4213 076 35123	2
142	Terminal Block	4213 078 44613	2
144	Earth Tab Assembly	4213 092 41181	2
196	Cabinet Assembly	4213 092 36261	1
199	Plinth Assembly	4213 092 38091	1
201	Door Seal	4213 077 08344	1
203	Full Door Assembly	4213 092 38201	1
203a	Door Frame Assembly	4213 092 38211	1
211	Timer T600	4213 078 57551	1
216	Switch & Bracket Assembly	4213 092 51831	1
227	Heating Element	4213 092 17661	2
228	Heat TOC	4213 078 50161	2
229	Thermostat	4213 078 48373	3
230	Thermostat (inlet)	4213 078 56261	2
248	Door Micro-Switch Assembly	4213 092 05251	1 & 3
248a	Door Interlock Relay Board	4213 092 51871	1
266	Drum Assembly	4213 092 05531	2
270	Drum Shaft/Bearing Kit	4213 092 05591	2
352	Timer Knob Assembly	4213 092 52821	1
353	Control Panel Assembly	4213 092 55721	1
359	Door Hinge Assembly	4213 092 26071	1
362	Window	4213 077 44095	1
363	Door Frame	4213 077 84071	1
363a	Door Handle	4213 077 82861	1
364	Latch Pivot	4213 075 13013	1
365	Latch Spring	4213 075 70833	1
366	Door Latch	4213 077 53413	1
367	Switch Strike	4213 077 83571	1
369	Loom Clip	4213 075 70941	1
370	Latch Guide	4213 077 40993	1
376	Front Panel Assembly	4213 092 36301	1
377	Button	4213 177 03571	1
385	Top Cover Bracket	4213 077 53902	1
386	Top Cover Assembly	4213 092 53171	1
390	Gasket	4213 074 50862	2
393	Flex Support Clip	4213 077 40982	2
394	Foot	4213 077 39833	1
395	Heater Wires Clip	4213 075 70971	2
399	Heater Support	4213 080 06619	2
400	Heater Plate	4213 080 14551	2
402	Access Panel	4213 080 06558	2
403	Roller Assembly	4213 092 35651	1
408	Cable Clamp	4213 077 47303	2
413	Back Panel	4213 092 37601	2
427	Motor Spring Clip	4213 078 45362	2
432	Motor Mount Bracket	4213 080 0675A	2
437	Vent Hose Assembly	0312 002 01000	2 & 3
440	Banjo Assembly	4213 092 17811	3
441	Front Bearing (short)	4213 077 40952	3
442	Front Seal	4213 077 40942	3
444	Lifter	4213 077 41009	2

Giorgio - Parts List

445	Front Bearing (long)	4213 077 40962	3
445a	Bearings & Brush Seal Kit Assy	4213 092 21171	3
446	Fan	4213 077 40896	2 & 3
447	Access Cover Assembly	4213 092 18081	2 & 3
448	Spring Clip (Fan)	4213 075 71162	3
454	Filter	4213 092 17821	3
456	Banjo Seal	4213 077 07992	3
458	Banjo Insert No 2	4213 077 53502	3
459	Banjo Insert No 1	4213 077 53492	3
552	Timer Shaft Extension	4213 077 92121	1

Not shown on exploded views

User Instruction Booklet - GB	4213 194 04101
User Instruction Booklet - AR	4213 194 04111