


1. PRODUCT OVERVIEW

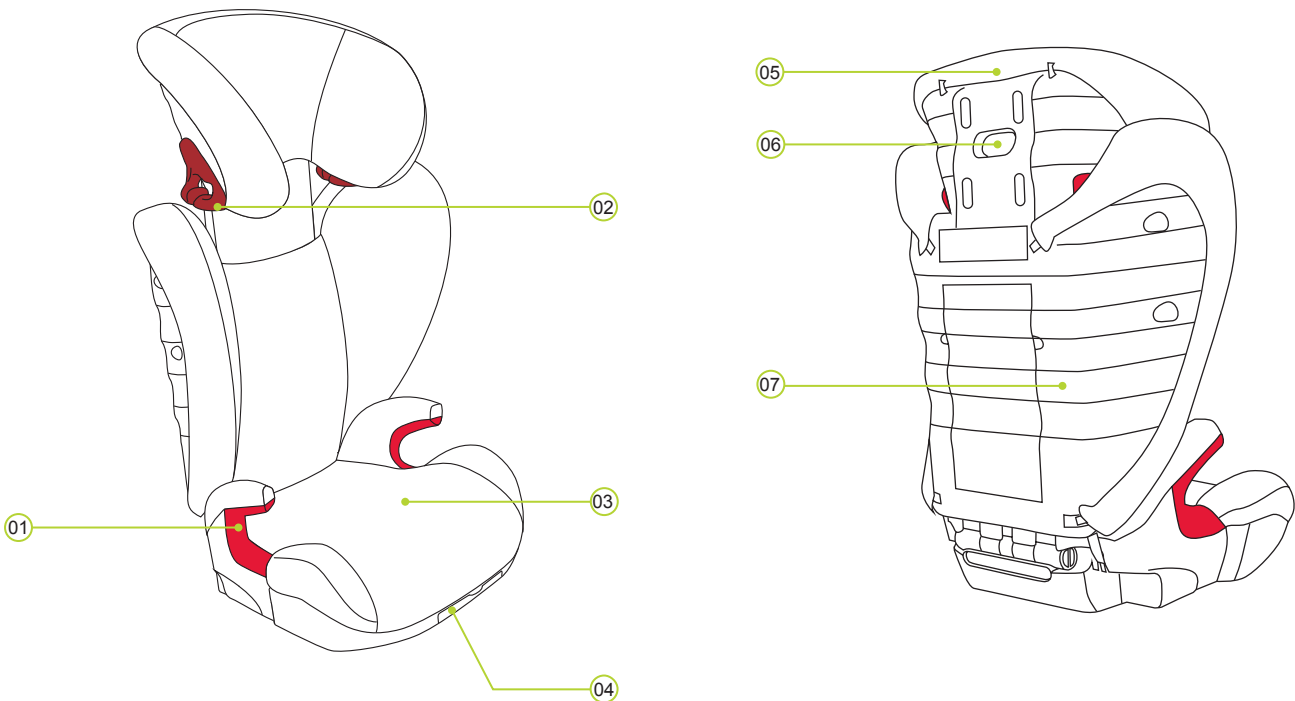

- 01 Belt guide (bright red)

02 Belt holder

03 Seat cushion

04 Compartment for user manual
- 05 Headrest

06 Headrest adjustment handle

07 Backrest

4. USE IN THE VEHICLE


Please observe the instructions for using children’s restraining systems in the operating instructions of your vehicle. The seat can be used in vehicles with a 3-point belt. Please find the information on the seats approved for child safety seats of the weight classes 15 to 36 kg in the operating instructions of your vehicle. The KID II is approved for one method of installation:

Symbol	Installation type	Approval type
	with the vehicle’s 3-point seatbelt	universal

a) This means that the child safety seat may only be used in vehicles that are listed in the vehicle type list enclosed. This type list is consistently kept up to date. The latest version can be obtained from us or from [www.britax.eu](http://www.britax.eu) / [www.roemer.eu](http://www.roemer.eu).

You can use your child safety seat as follows:

In the direction of travel	yes
against the direction of travel	no <sup>1)</sup>
with 2-point belt	no
with 3-point belt <sup>2)</sup>	yes
on front passenger seat	yes <sup>3)</sup>
on outer rear seat	yes
on centre rear seat (with 3-point belt)	yes <sup>4)</sup>

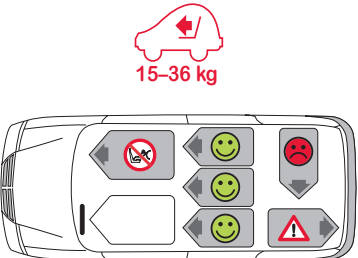


- 1) Use is permitted on a rearward-facing vehicle seat (e.g. in a van or minibus) only if the vehicle seat is also approved for use by adults. The seat may not be in the area of effect of an airbag.
- 2) The safety belt must be approved to ECE R 16 or a comparable standard (see test label on belt with an “E” or “e” in a circle).
- 3) If there is a front airbag: Slide the vehicle seat a long way back and refer to any instructions in vehicle owner’s manual.
- 4) Cannot be used if the vehicle seat is equipped with only a 2-point belt.

5. CARE AND MAINTENANCE

Please ensure that you only use the original BRITAX RÖMER replacement seat covers, as the seat cover is an integral part of the child safety seat and fulfils important functions to ensure the smooth operation of the system. Replacement seat covers are available from your dealer or from an ADAC office.

- The cover can be removed and washed with a mild detergent in the delicates programme of the washing machine (30 °C). Please observe the instructions on the washing label of the cover.
- The plastic parts can be cleaned using soapy water. Do not use any caustic cleaning agents (such as solvents).

**⚠ DANGER!** The child seat must not be used without the seat cover.

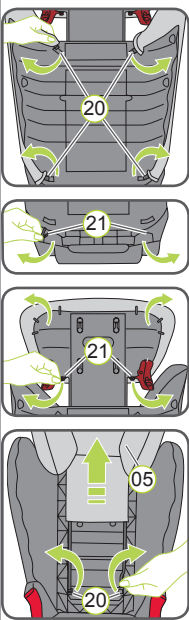

- Removing the seat cover**
1. Moving the headrest of the vehicle seat into the top position.

2. Unhook the cover hooks 20 on the rear of the backrest 07.

3. Remove the upper part of the cover.

4. Unhook the cover loops 21 at the bottom on the rear of the backrest 07.

5. Pull off the cover from the seat cushion 03.

- Removing the headrest cover**
6. Unhook the cover loops 21 on the back of the headrest 05.

7. Unhook the cover hooks 20 on the front of the backrest 07.

8. Pull off the cover of the headrest 05.
- The cover can now be washed. Please observe the instructions on the washing label of the cover.



**Re-fitting the cover**  
Proceed in reverse order to put on the cover.

2. INTRODUCTION

Thank you for choosing KID II to keep your child safe through a new stage of their life.

**In order to protect your child correctly, the KID II must always be used and installed as described in these instructions.**

If you have any further questions regarding its use, please feel free to contact us:

**BRITAX RÖMER**  
Kindersicherheit GmbH  
Blaubeurer Straße 71  
D-89077 Ulm  
Germany  
**BRITAX EXCELSIOR LIMITED**  
1 Churchill Way West  
Andover  
Hampshire SP10 3UW  
United Kingdom

T.: +49 (0) 731 9345-199/-299

F.: +49 (0) 731 9345-210

E.: [service.de@britax.com](mailto:service.de@britax.com)  
[www.britax.eu](http://www.britax.eu)

T.: +44 (0) 1264 333343

F.: +44 (0) 1264 334146

E.: [service.uk@britax.com](mailto:service.uk@britax.com)  
[www.britax.eu](http://www.britax.eu)

These instructions use the following symbols stated below:


Symbol	Keyword	Explanation
	<b>DANGER!</b>	Risk of severe personal injury
	<b>WARNING!</b>	Risk of minor personal injury
	<b>CAUTION!</b>	Risk of material damage
	<b>TIP:</b>	Useful notes

Instructions that follow a set sequence are numbered.  
Example:

1. Press the button...

**Belt guide colours**

For better differentiation, the two vehicle seat belts are highlighted in different colours. The diagonal seat belt 18 in dark red and the lap belt 17 in bright red. The colour of the belt guides on the child safety seat follows the same colour scheme.

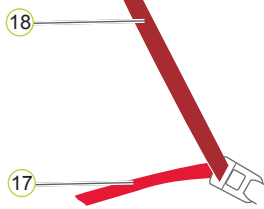


3. Certification

BRITAX RÖMER Child safety seat	Testing and certification In accordance with ECE* R 44/04	
	Group	Body weight
KID II	II+III	15 to 36 kg

\*ECE = European Standard for Child Safety Equipment

The child safety seat has been designed, tested and certified according to the requirements of the European Standard for Child Safety Equipment (ECE R 44/03). The seal of approval E (in a circle) and the approval number are located on the orange approval label (sticker on the child safety seat).

- DANGER!** This approval will be invalidated if you make any modifications to the child safety seat. Only the manufacturer is permitted to make modifications to the child safety seat.
- WARNING!** Use the KID II exclusively for securing your child in your vehicle. It is in no way suitable as a seat or toy in the home.
- DANGER!** Never secure your child or the child safety seat with a 2-point belt. If you secure your child in the child seat with only a 2-point belt, then in the event of an accident this may cause serious injuries to your child, possibly resulting in death.

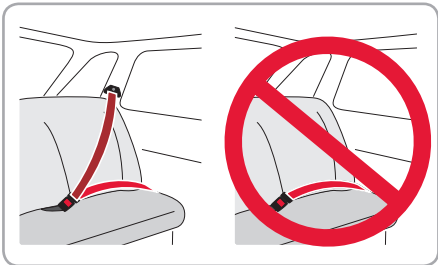

15 to 36 kg  
(~4 to 12 years  
of age)



KID II  
User instructions

[www.britax.eu](http://www.britax.eu)



7. SAFETY NOTES

**⚠ Please take the time to read these instructions carefully and keep them to hand in the intended storage compartment 04 on the child safety seat at all times! The instructions must be with the child safety seat if the latter is passed on to a third party.**

- ⚠ DANGER! For the protection of your child:**
- In the event of an accident with a collision speed of more than 10 km/h, the child safety seat may be damaged without the damage becoming immediately visible. In this case the child safety seat must be replaced. Please dispose of it properly.
  - As a rule, have your child safety seat checked if it was damaged (e.g if it falls on the ground).
  - Regularly check all important parts for damage. Ensure that all mechanical parts, in particular, are fully functional.
  - Never lubricate or oil parts of the child seat.
  - Never leave your child unattended in the child seat in the vehicle.
  - Only allow your child to enter and exit the vehicle on the pavement side.
  - Protect the child safety seat from intensive direct sunlight when it is not in use. The child safety seat can get very hot in direct sunshine. Child skin is sensitive and could thereby be harmed.
  - The more snugly the belt fits over your child's body, the better they will be protected. Therefore avoid putting thick clothes on your child under the belt.
  - Take regular breaks on long journeys in order to give your child the opportunity to play around.
  - Use on the rear seat: Move the front seat forward far enough that you child's feet cannot hit the backrest of the front seat (to prevent risk of injury).



- ⚠ DANGER! For the protection of all vehicle occupants:**  
In the case of an emergency stop or an accident, unsecured persons or objects may cause injury to other vehicle occupants. Please always check that...
- the backrests of the vehicle seats are locked (i.e. that any foldable rear seat bench latch is engaged).
  - all heavy or sharp-edged objects in the vehicle (e.g. on the parcel shelf) are secured.
  - all persons in the vehicle have their seatbelts fastened.
  - the child safety seat is always secured when it is in the vehicle, even if no child is being transported.

- ⚠ WARNING! For your protection when handling the child seat:**
- Never use the child safety seat free-standing, not even for test sitting.
  - When swivelling up the backrest 07, nothing must come between the backrest 07 and the seat cushion 03. You or your child could pinch your fingers, injuring them.
  - To avoid damage, ensure that the child safety seat is not jammed in between hard objects (car door, seat rails, etc.).
  - Keep the child safety seat in a safe place when it is not in use. Do not place any heavy objects on the seat and do not store it directly next to sources of heat or in direct sunlight.

- ⚠ CAUTION! To protect your vehicle:**
- Certain car seat covers made from more sensitive materials (e.g. velour, leather, etc.) may sustain signs of wear and tear when using child safety seats. For optimum protection of your car seat covers, we recommend using the BRITAX RÖMER car seat protector from our range of accessories.

8. ADJUSTING THE HEADREST

A correctly set headrest 05 ensures that the diagonal seat belt section 18 is optimally positioned, and gives your child optimum protection. The headrest 05 must be adjusted so that there is a space two fingers wide between the headrest 05 and your child's shoulders.

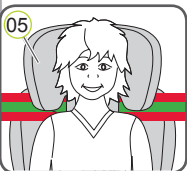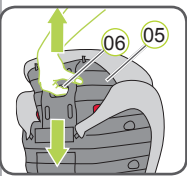


- To adjust the height of the headrest to fit your child:**
1. Grip the adjustment handle 06 on the back of the headrest 05 and pull it upwards. This unlocks the headrest.
  2. You can now move the unlocked headrest 05 to the desired height. As soon as you release the adjustment handle 06, the headrest 05 will lock into place.
  3. Place the child safety seat on the vehicle seat.
  4. Have your child sit down in the child safety seat and check the height. Repeat the procedure until the headrest 05 has the correct height.

9. INSTALLATION



With 3-point belt

The KID II is not installed permanently in the vehicle. It is simply secured together with your child using the vehicle's 3-point seatbelt.

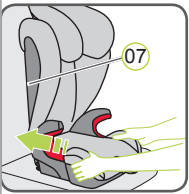

1. Carry out the steps in Section 8 "ADJUSTING THE HEADREST".
  2. Place the child seat on the vehicle seat. Ensure that the backrest 07 is flush with the backrest of the vehicle seat.
- ⓘ Tip!** If the headrest of the vehicle seat gets in the way, turn it the other way.
3. Carry out the steps in Section 10 „SECURING YOUR CHILD“.


10. SECURING YOUR CHILD

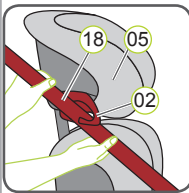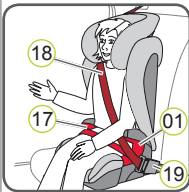


1. Have your child sit down in the child seat.
  2. Pull out the vehicle belt and guide it in front of your child to the vehicle seat buckle 19.
- ⚠ DANGER!** Ensure the vehicle belt is not twisted, as otherwise the full protective effect of the retaining system is not ensured.
3. Engage the buckle tongue in the vehicle seat buckle 19 with a CLICK!
4. Place the diagonal seat belt section 18 and lap belt section 17 on the side of the vehicle seatbelt buckle 19 into the light red belt guide 01 of the seat cushion.
- ⚠ DANGER!** The vehicle seatbelt buckle 19 must not be positioned between the light red belt guide 01 and the armrest.
5. Also place the lap belt section 17 on the other side of the seat cushion in the light red belt guide 01.
- ⚠ DANGER!** The lap belt section 17 must lie as low as possible over your child's hips on both sides.

6. Guide the diagonal seat belt section 18 into the dark red belt holder 02 of the headrest 05 until it lies completely in the belt holder 02 and is not twisted.
- ⓘ Tip!** If the backrest 16 conceals the belt holder 02, you can adjust the headrest 05 upwards. The diagonal seat belt section 18 can now be easily inserted. Now return the headrest 05 to the proper height.

7. Make sure that the diagonal belt 18 runs over your child's shoulder, and not in front of his or her neck.
- ⓘ Tip!** You can still adjust the height of the headrest 05 again here in the vehicle.

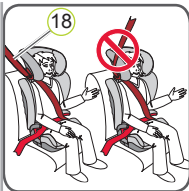

- ⚠ DANGER!** The diagonal seat belt section 18 must run diagonally backward. You can adjust the course of the belt with your vehicle's adjustable belt deflector.
- ⚠ DANGER!** The diagonal belt 18 must never be directed forwards to the belt deflector on the vehicle. In this case, use the child safety seat on the back seat only.

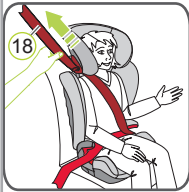

8. Tighten the vehicle seat belt by pulling on the diagonal seat belt section 18.

- ⚠ For the safety of your child, before every journey in the car check that...**
- ▶ the child safety seat is securely fastened;
  - ▶ the lap belt 17 runs in the bright red belt guides on both sides of the seat cushion 01,
  - ▶ the diagonal seat belt section 18 on the side of the vehicle seatbelt buckle 19 also runs through the light red belt guide 01 of the seat cushion,
  - ▶ the diagonal seat belt section 18 runs through the dark red belt holder 02 of the headrest,
  - ▶ the diagonal seat belt section 18 runs diagonally backward,
  - ▶ the straps are tight and **not** twisted,
  - ▶ the seatbelt buckle 19 must not be positioned on the red belt guide 01 in the seat cushion.
- ⚠ DANGER!** If your child tries to open the vehicle belt buckle 19, stop the vehicle as soon as safely possible. Check whether the child safety seat is correctly fastened and ensure that your child is correctly secured. Explain to your child the dangers associated with his actions.

**UNFASTENING YOUR CHILD AND REMOVAL:**  
To unfasten your child or to remove the child safety seat, observe the steps in Section 6 „REMOVAL“ [PAGE I]

If you have any further questions regarding its use, please feel free to contact us:

<b>BRITAX RÖMER</b> Kindersicherheit GmbH Blaubeurer Straße 71 D-89077 Ulm Germany	T.: +49 (0) 731 9345-199/-299 F.: +49 (0) 731 9345-210 E.: service.de@britax.com www.britax.eu
<b>BRITAX EXCELSIOR LIMITED</b> 1 Churchill Way West Andover Hampshire SP10 3UW United Kingdom	T.: +44 (0) 1264 333343 F.: +44 (0) 1264 334146 E.: service.uk@britax.com www.britax.eu