

# Clarke®



## STAINLESS STEEL GAS BARBECUE

MODEL NO: SSBBQ4

PART NO: 6925310

## USER GUIDE

---

## INTRODUCTION

---

Thank you for purchasing this CLARKE product.

Before attempting to use this product, please read this manual thoroughly and follow the instructions carefully. In doing so you will ensure the safety of yourself and that of others around you, and you can look forward to your purchase giving you long and satisfactory service.

---

## GUARANTEE

---

This product is guaranteed against faulty manufacture for a period of 12 months from the date of purchase. Please keep your receipt which will be required as proof of purchase.

This guarantee is invalid if the product is found to have been abused or tampered with in any way, or not used for the purpose for which it was intended.

Faulty goods should be returned to their place of purchase, no product can be returned to us without prior permission.

This guarantee does not effect your statutory rights.

---

## SPECIFICATION

---

<b>MODEL NUMBER</b>	SSBBQ4
<b>PART NUMBER</b>	6925310
<b>HEAT OUTPUT :</b>	Grill                      4 x 3.6 kw      262g per hr    (Propane) Side Burner      1 x 3.5 kw      255g per hr    (Propane)
<b>OPERATING PRESSURE</b>	37 mbar
<b>APPLIANCE CATEGORY</b>	13+
<b>DIMENSIONS (LxWxH)</b>	1450 x 725 x 1230 mm
<b>WEIGHT</b>	45.2 kg

---

## STORAGE

---

Your gas bottle must be stored outdoors in a well-ventilated area and must be disconnected from your barbecue when not being used. Ensure that you are outdoors and away from any sources of ignition before attempting to disconnect your gas bottle from your barbecue.

When using your barbecue after a period of storage, check for gas leaks and for any obstructions in the burner etc. before using. Also follow the cleaning instructions to ensure the barbecue is safe. If the barbecue is stored outdoors check that the barbecue is free from any obstruction (insects etc.) as this may affect the flow of air.

NEVER STORE THE GAS BOTTLE INSIDE THE COMPARTMENT.


The barbeque must be protected from the elements over the winter months to ensure the finish is not dulled.

## WARNING AND SAFETY POINTS

Please read the following points before using your barbecue.

1. Please follow all assembly instructions in this manual; failure to follow these instructions may result in serious bodily injury and/or property damage.
2. This barbecue will become very hot when in use; care is to be taken especially when pets, children or elderly people are present.
3. Do not use or store any flammable liquids or vapours in the vicinity when operating the barbecue.
4. In the event of a gas leak, shut off the gas to the barbecue, extinguish any open flames and open the lid, if the leak continues check for damage, poor connection etc.
5. Do not use a naked flame to check for gas leaks.
6. Do not operate the barbecue if there is a gas leak.
7. Do not attempt to disconnect any gas fitting if your barbecue is being used, this includes the Gas Hose and Regulator.
8. The barbecue should be cleaned on a regular basis. Take care not to enlarge burner ports or any openings when cleaning the burner or valves.
9. Do not use this barbecue in an enclosed area.
10. We recommend keeping the barbecue at least 1.0 meter clear of any combustible materials.
11. We would recommend that this barbecue should be serviced at least once a year by a competent engineer. Do not attempt to service this appliance yourself.
12. Do not attempt to modify or make any adjustment of the main controls on this barbecue, i.e. gas taps, injectors, valve etc.
13. Stand your barbecue on a safe, level surface, away from inflammable items such as wooden fences or overhanging trees.
14. Never use your barbecue indoors.
15. Once alight, do not move your barbecue or leave it unattended.
16. Keep children and pets at a safe distance from the barbecue.
17. Keep a fire extinguisher handy.
18. Remember that hot fat may drip out from the bottom of the barbecue. Make sure the hose is clear of any fat.
19. The barbecue will become hot when in use, so wear oven gloves to handle the lid etc.
20. Ensure that the barbecue has completely cooled down before storing.
21. Never light a barbecue with petrol or similar liquids.
22. Always turn off the gas supply after use.
23. Do not store the LPG bottle inside the barbeque.

## PARTS LIST

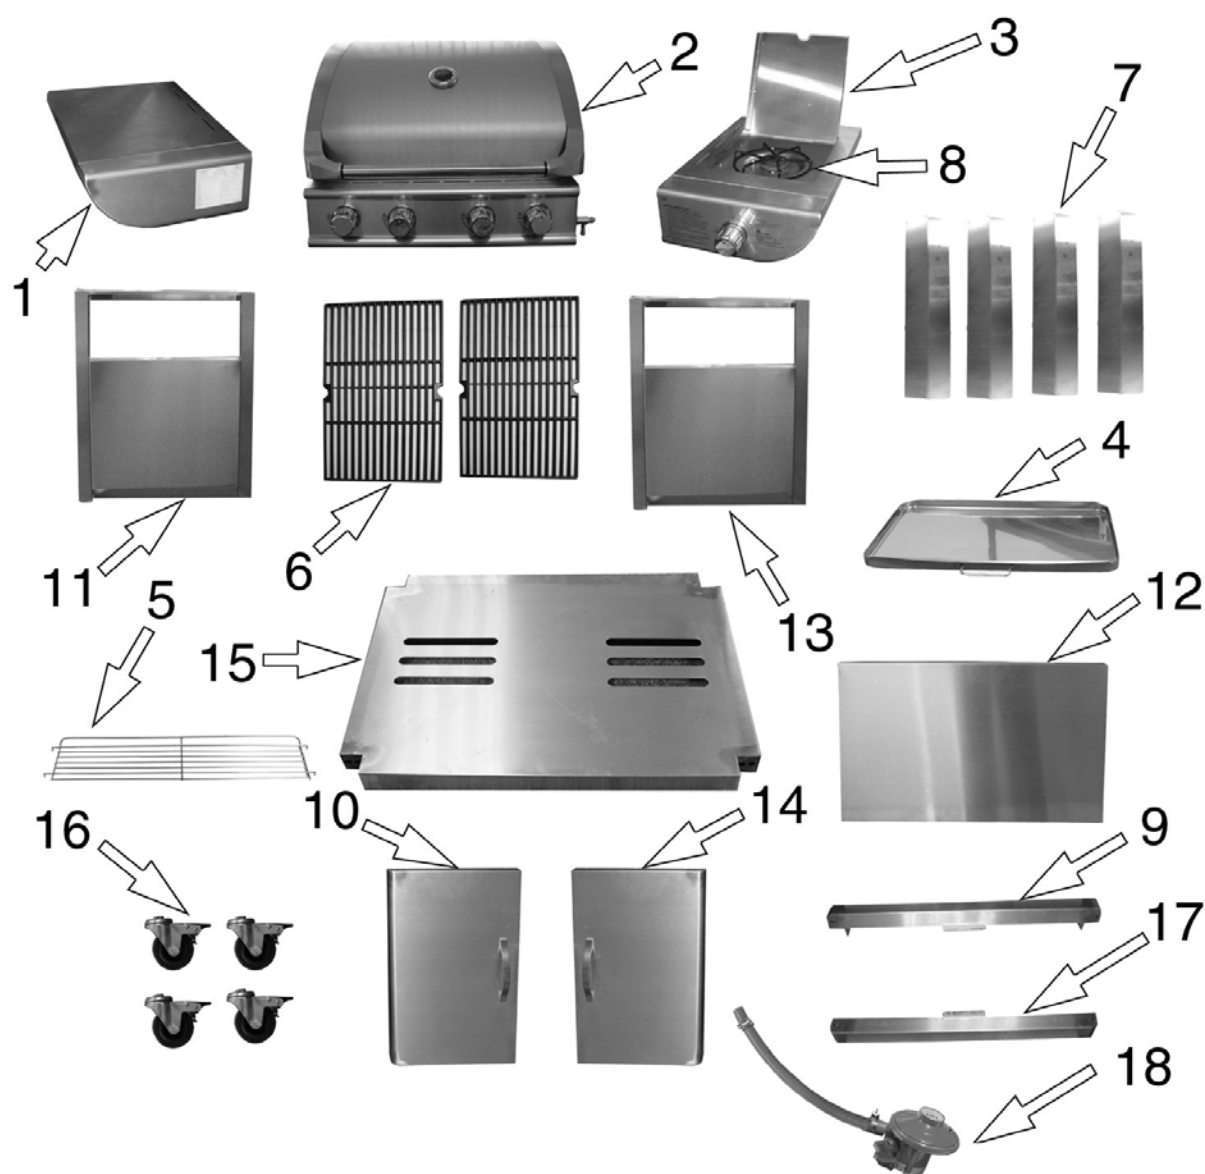


NO	DESCRIPTION	PART NUMBER	NO	DESCRIPTION	PART NUMBER
1	Left Side Table	ELBBQ4SS01	12	Rear Panel	ELBBQ4SS12
2	Grill Body	ELBBQ4SS02	13	Right Side Panel	ELBBQ4SS13
3	Side Burner Table	ELBBQ4SS03	14	Right Door	ELBBQ4SS14
4	Drip Tray	ELBBQ4SS04	15	Base	ELBBQ4SS15
5	Warming Rack	ELBBQ4SS05	16	Castors	ELBBQ4SS16
6	Cooking Grills	ELBBQ4SS06	17	Bottom Door Bracket	ELBBQ4SS17
7	Heat Distribution Plates	ELBBQ4SS07	18	Clip on Regulator + Hose	ELBBQ4SS18
8	Side Burner Grate	ELBBQ4SS08	Fixings pack (not shown) inc: A M6x50 Bolts B M6x12 Bolts C Washers D AA Battery		ELBBQ4SSFP
9	Top Door Bracket	ELBBQ4SS09			
10	Left Door	ELBBQ4SS10			
11	Left Side Panel	ELBBQ4SS11			


# ASSEMBLY

## TIPS


- Remove all parts from the boxes and check if anything is missing according to the "Parts List" on page 4.
- To assemble your barbecue you will need: a screwdriver, pliers and an adjustable wrench.
- Assemble all nuts and bolts loosely at first. Tighten all connections once fully assembled. This increases the stability of your barbecue.

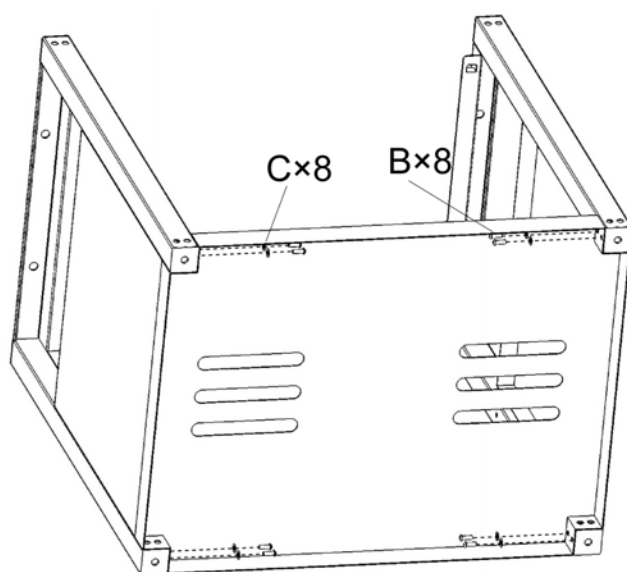


1. Connect Left Side Panel (11) and Right Side Panel (13) to the Base (15) as shown and secure using 8 x M6x12 Bolts (B) and 4 x Washers (C).

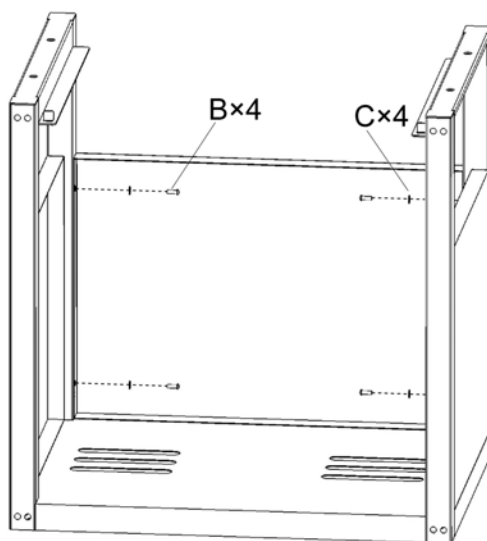


2. Secure the Rear Panel (12) to the side panels and secure using 4 x M6x12 Bolts (B) and 4 x Washers (C).

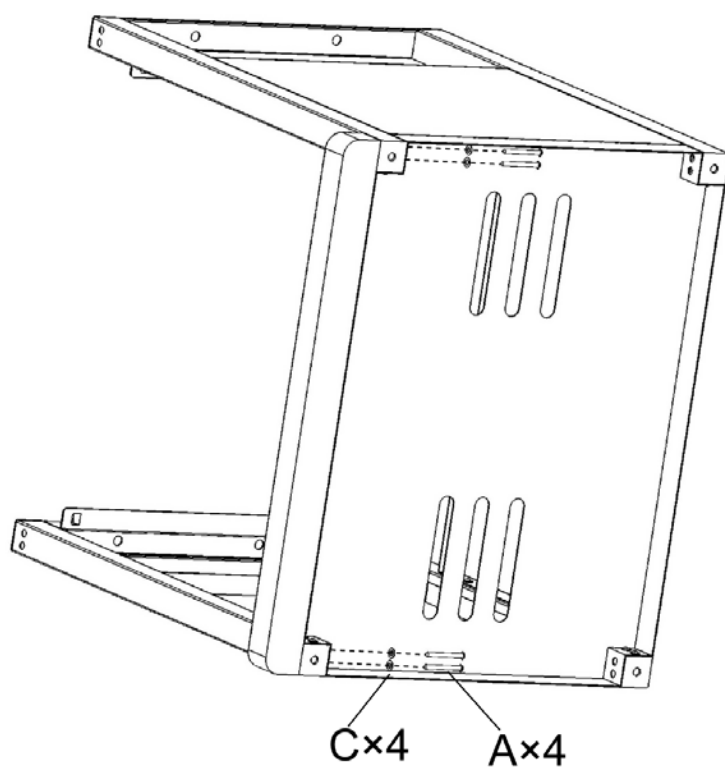


3. Fit the Bottom Door Bracket (17) into position and secure in place using 4 x M6x50 Bolts (A) and 4 Washers (C).

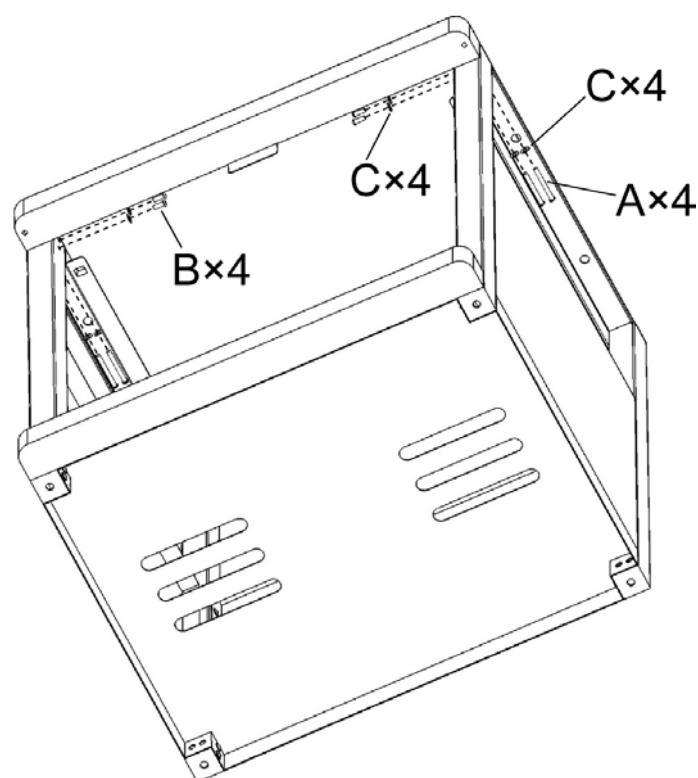


4. Fit the Upper Door Bracket (9) into position and secure using 4 x M6x50 Bolts (A), 4 x M6x12 Bolts (B) and 8 x Washers (C).

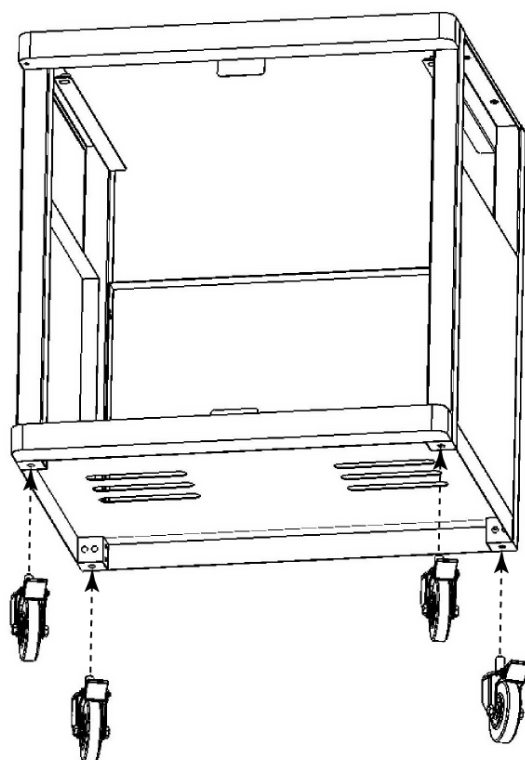


5. Push the Castors (16) into position.

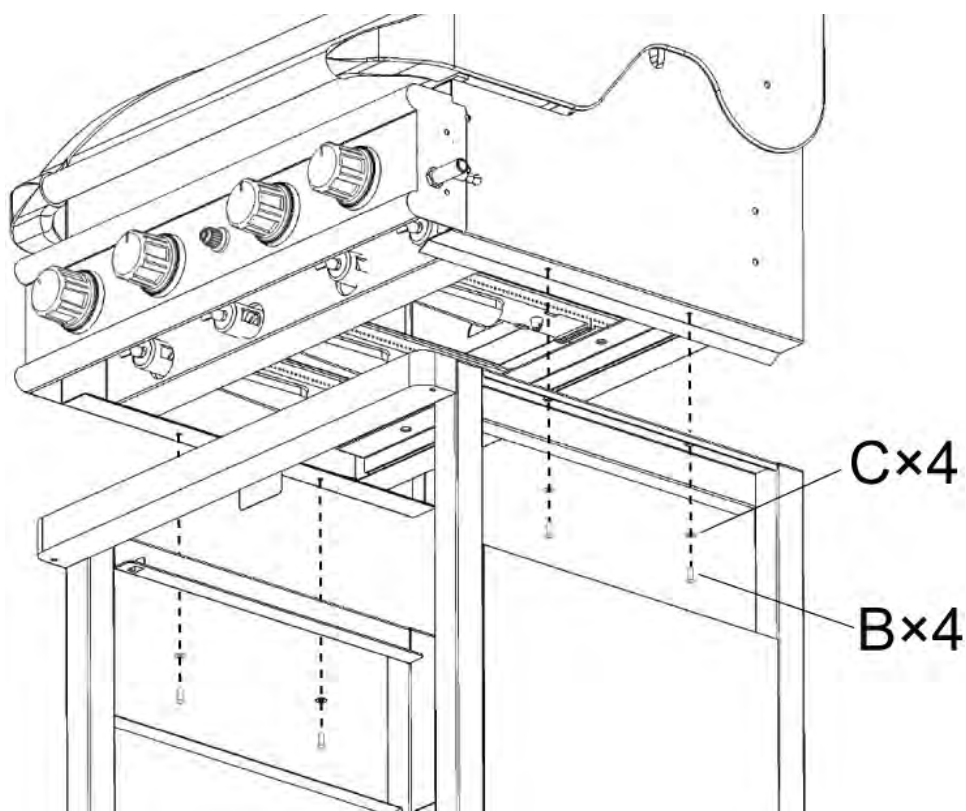

6. Get someone to help lift and position the Grill Body (2) as shown above and secure using 4 x M6x12 Bolts (B) and 4 x Washers (C).

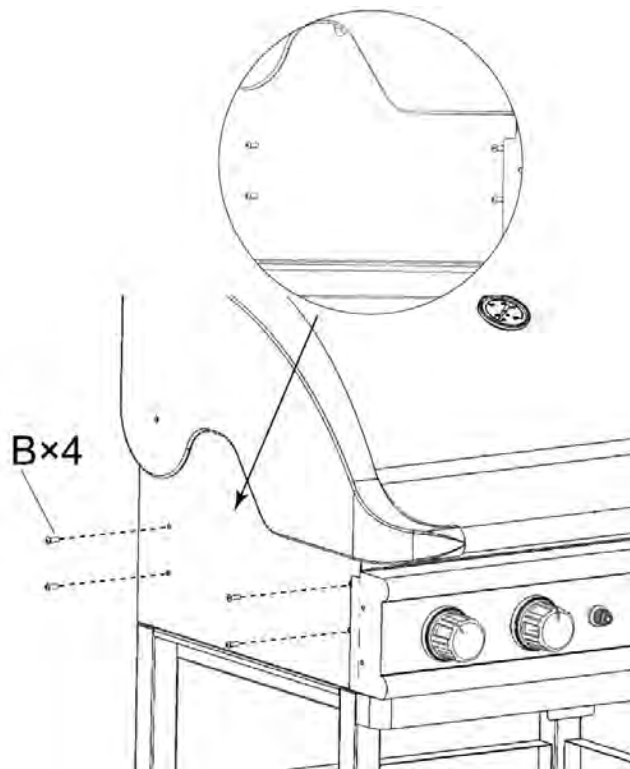


7. Insert 4 x M6x12 Bolts (B) into the left side of the Grill Body as shown.
  - Do not insert them fully.

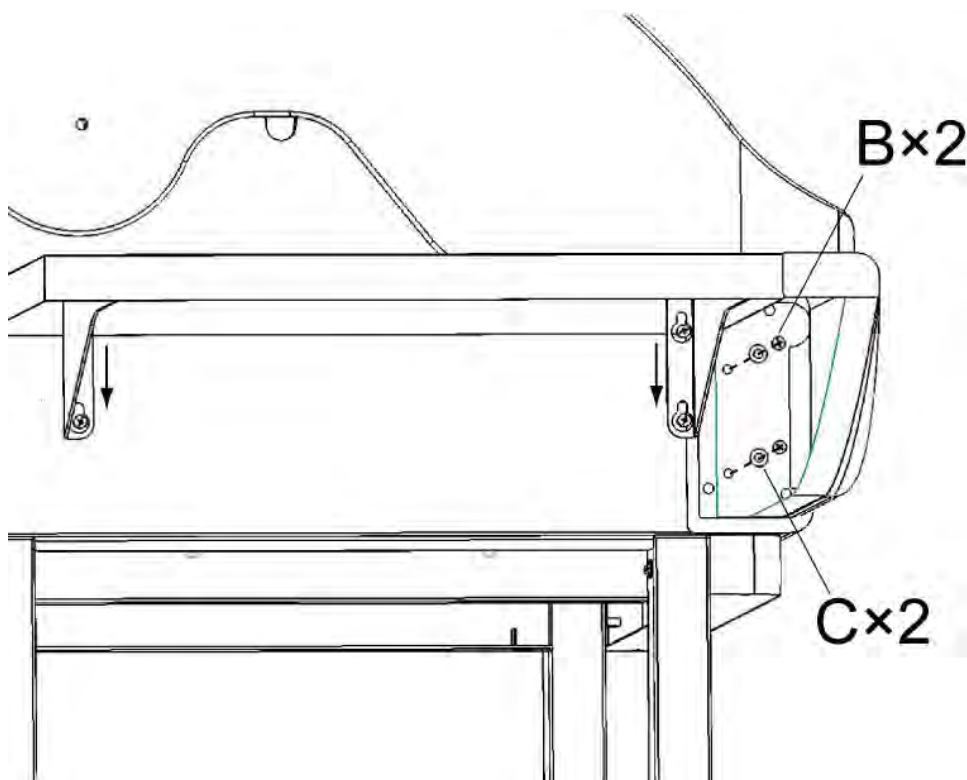


8. Slide the Left Side Table (1) over the bolts and push down to lock into place.
9. Insert 2 x M6x12 Bolts (B) and 2 x washer (C) as shown and tighten all the bolts.




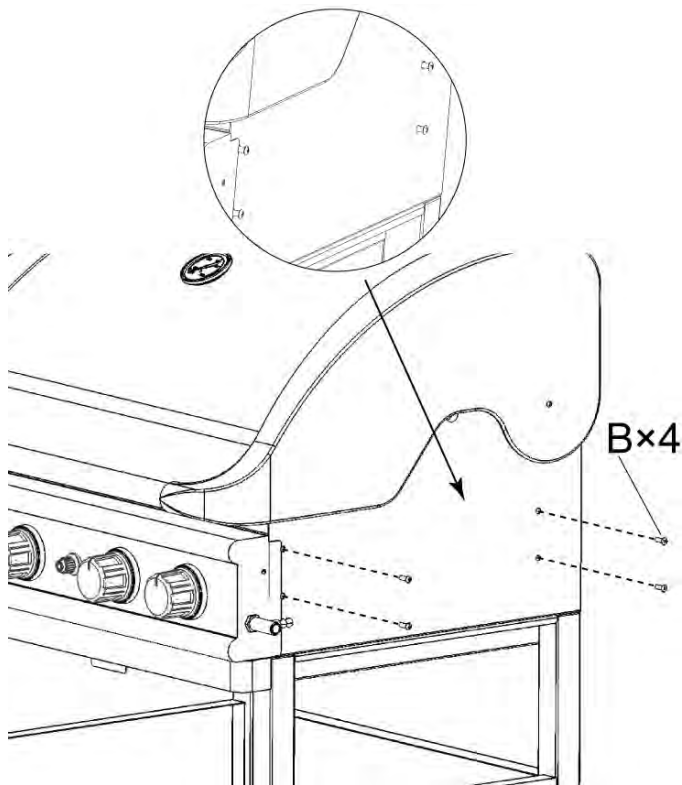


10. Insert 4 x M6x12 Bolts (B) into the right side of the Grill Body as shown.
- Do not insert them fully.

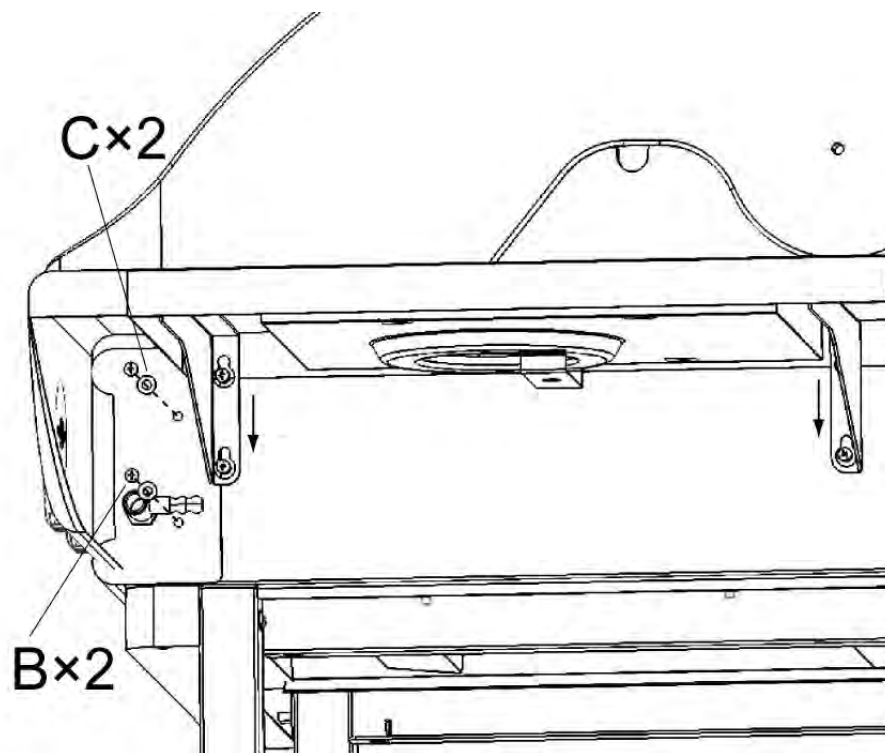


11. Slide the Side Burner Table (3) over the bolts and push down to lock into place.
12. Insert 2 x M6x12 Bolts (B) and 2 x washer (C) as shown and tighten all the bolts.

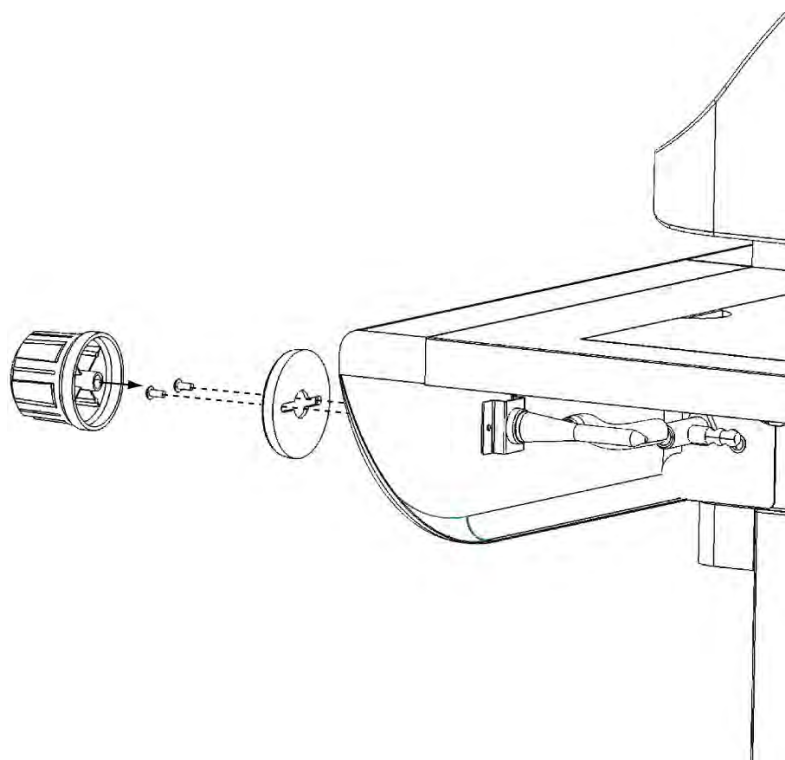


13. Fit the control knob to the side burner table as shown and secure using the two screws supplied.

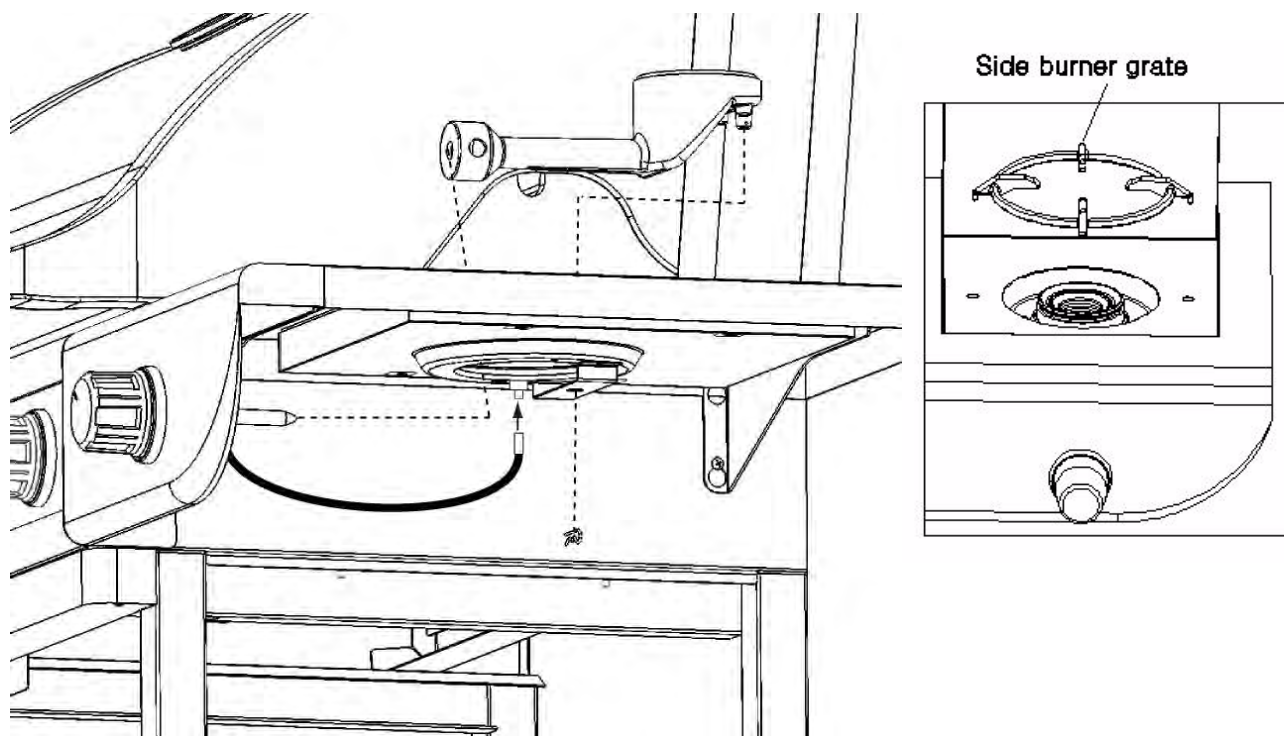


14. Connect the side burner valve and secure using 2 screws,
15. Fit the Spark Electrode.
16. Place the Side burner Grate (8) into position.

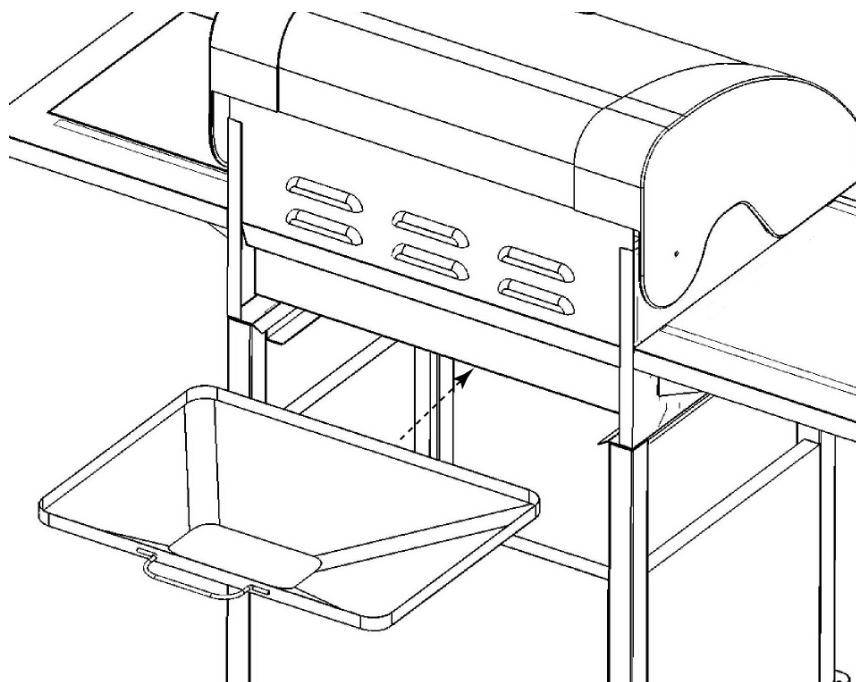


17. Slide the Drip Tray (4) into position as shown above.

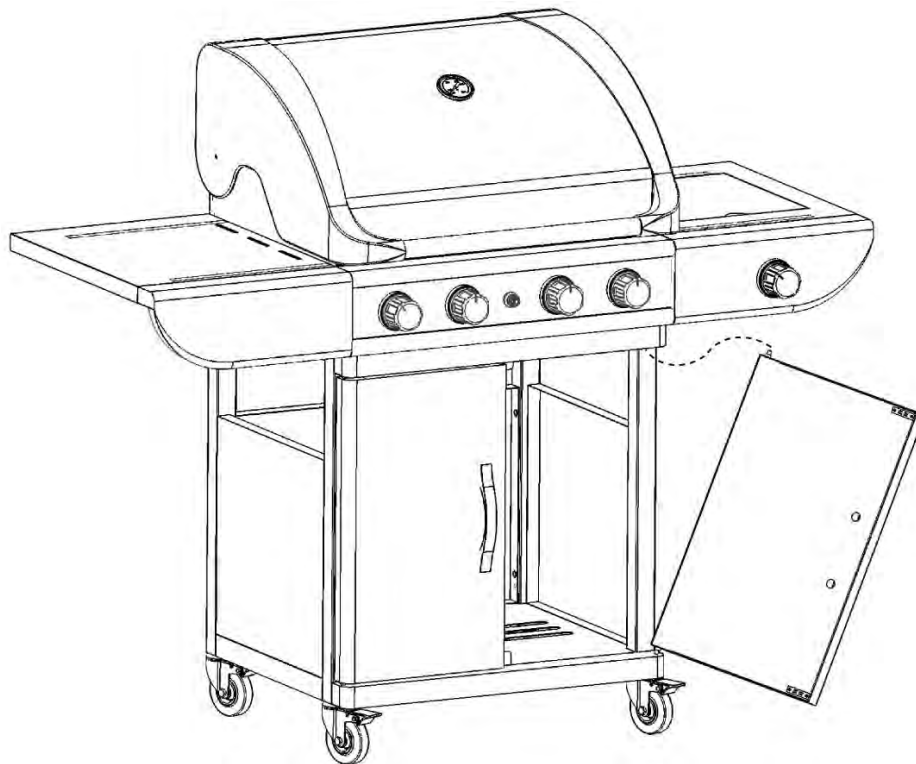

18. Fit the Doors (10 & 14) into position as shown.

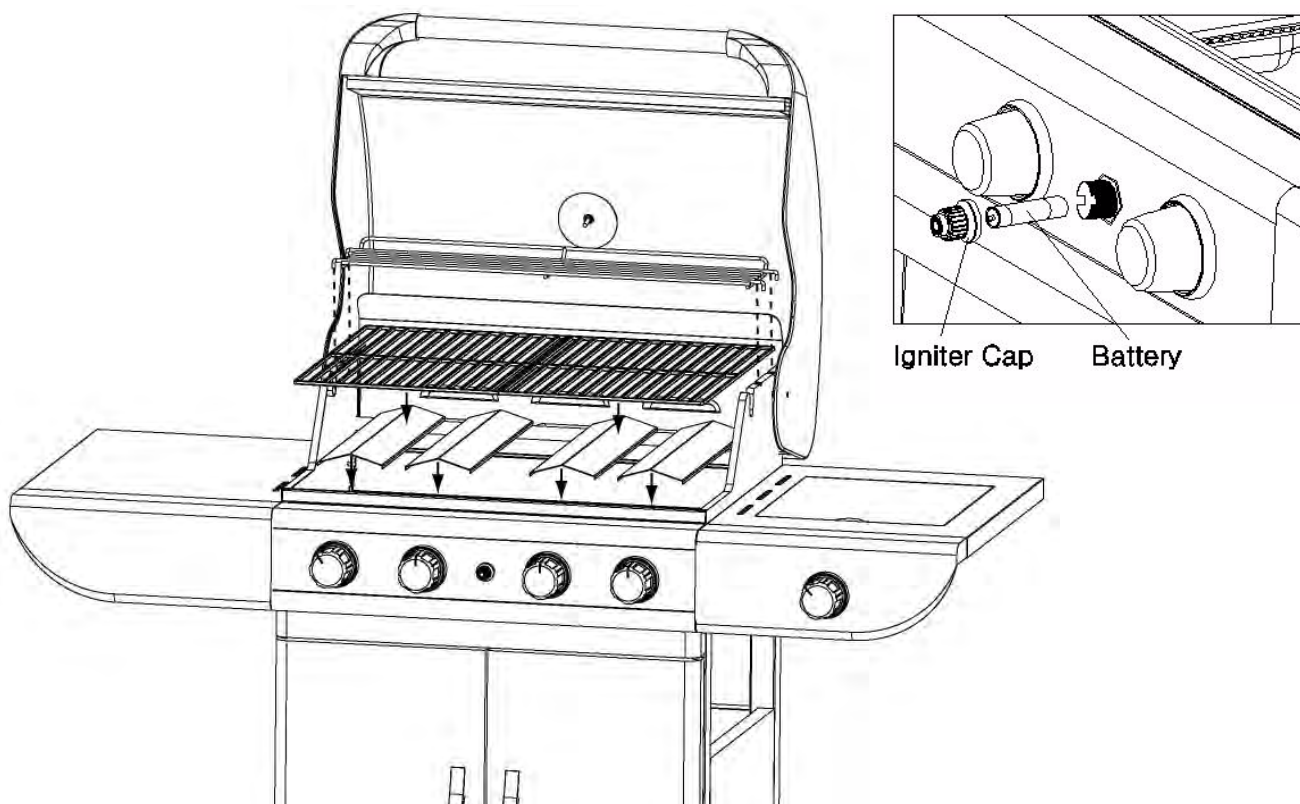

19. Place the Heat Distribution Plates (7), Cooking Grills (6) and Warming Rack (5) into position.

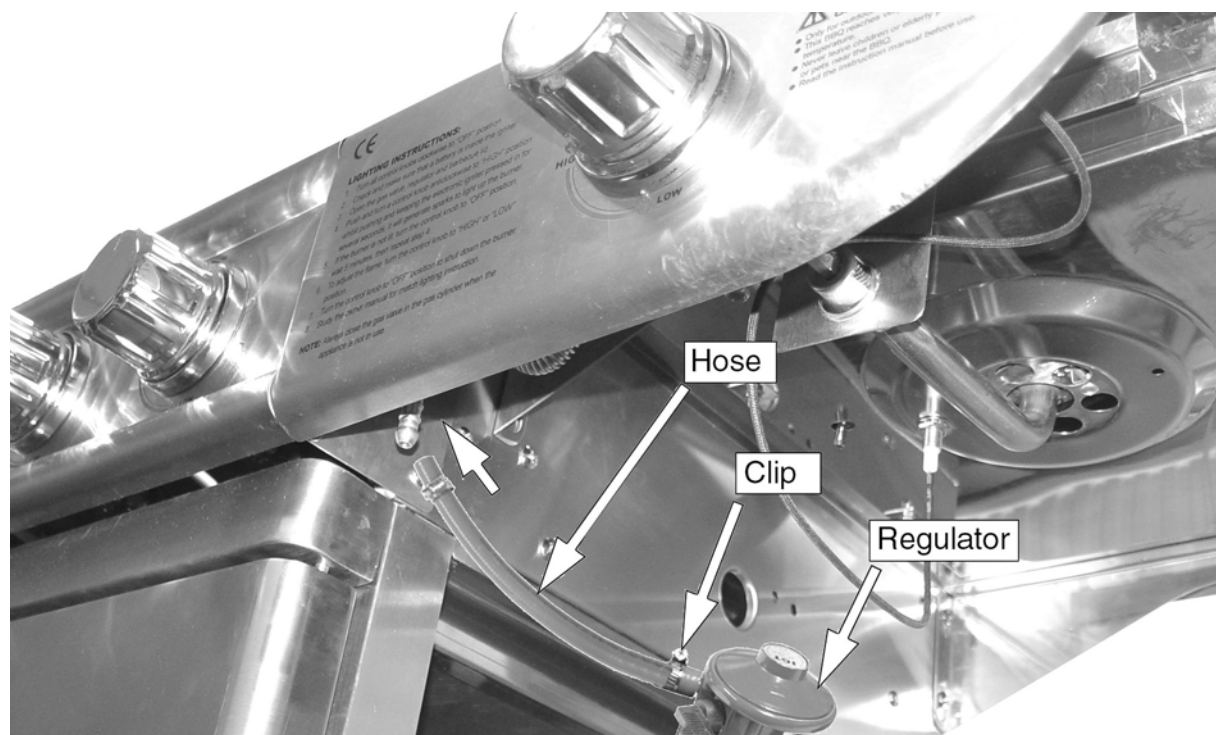

20. Connect one end of the hose to the gas port on the BBQ and secure using one of the clips shown.
21. Connect the regulator to the other end of the hose and secure using the second clip.

---

## BEFORE USE

---

### CONNECTING THE GAS BOTTLE

You will need to purchase a LPG (Liquid Propane Gas) bottle to operate this barbecue. This can be obtained from your nearest gas retailer.



**WARNING: NEVER LEAVE THE REGULATOR ATTACHED TO THE GAS BOTTLE IF DISCONNECTED FROM THE GAS HOSE.**

---

1. When changing your gas bottle, ensure that there are no sources of ignition close by i.e. fires, cigarettes, naked flame etc. Make sure that the barbecue is switched off.
2. Make sure the regulator switch is in the off position (3 o'clock position) – there will be an audible 'click'.
3. Push the regulator down onto the cylinder valve and press downwards firmly until you hear the regulator 'click' into place.
4. Position the gas bottle at the side of your barbecue, not underneath.
  - The bottle must be kept away from heat.
  - NEVER STORE THE GAS BOTTLE INSIDE THE COMPARTMENT.
  - Ensure that the hose is free from any kinks or bends which will affect the gas flow.
  - The hose must not have undue tension and must not touch any part of the barbecue which may be hot.
5. Check for leaks (see below)

### DISCONNECTING THE GAS BOTTLE

1. Turn the regulator switch clockwise to the off position.
2. Press the button beneath the regulator switch to remove the regulator from the gas bottle.

### GAS LEAK TEST



**WARNING: NEVER USE A NAKED FLAME TO DO THE LEAK TEST.**

---

Always do a gas leak test before you use the barbecue. Test for leaks on all connections as follows:

1. Connect the LPG bottle to the barbecue and close all the valves by turning the control knobs to "OFF" position.
2. Put soapy water on all of the gas connections.
3. Open the gas valve on the LPG bottle.
4. Set the regulator switch to the on position (straight up).
  - If bubbles are seen, tighten the connection, if the bubbles are still seen, go to your retailer for help. Never use a barbecue that is leaking gas.
5. Clear all soapy water on the connections after testing using a wet towel.
  - This MUST be done when first connecting the barbecue and every time the gas bottle is changed.

# LIGHTING THE BBQ



**WARNING: READ ALL SAFETY INFORMATION IN THIS MANUAL BEFORE LIGHTING THE BARBECUE.**

1. Turn all control knobs clockwise to the OFF position.
2. Open the gas valve on the LPG bottle.
3. Set the regulator switch to the on position (straight up).
4. Lift open the barbecue lid.
5. Push and turn a control knob anticlockwise to "HIGH" position, whilst pushing and keeping the electronic igniter pressed in for several seconds, it will generate sparks to light up the burner.
6. If the burner does not light, turn the control knob to the OFF position and wait 5 minutes, then repeat Step 5.
7. To adjust the flame, turn the control knob to LOW or HIGH position.
8. Turn the control knobs to the OFF position to shut down the burner.
9. The side burner control works in the same way.

## NOTE:

- The lid must always be open when lighting the burner.
- Use oven gloves and sturdy, long handled barbecue tools when cooking on the grill.
- Be prepared if an accident or fire should occur. Know where your First Aid kit and fire extinguishers are and how to use them correctly.
- Keep any electrical cables and the gas supply hose away from any hot surfaces.
- The gas bottle should only be changed by a competent person.

## ENERGY SAVING TIPS

- Turn the gas off as soon as you have finished cooking.
- Preheat the barbecue for 5 to 10 minutes only.
- Do not use a higher setting than required.
- Do not cook with the lid down using the maximum heat settings.

## CLEANING INSTRUCTIONS

Your barbecue is easy to clean with minimum effort, just follow these helpful tips:

1. Turn the burner on to maximum for 5 to 10 minutes. Grease will be burned off from your grill as well as your Flame Diffuser Plates.
2. Grills should be cleaned periodically by soaking and washing in soapy water. Use a wire brush, steel wool or a scouring pad to remove stubborn spots.
3. The interior surfaces of the grill body should also be washed with hot soapy water.
4. Regularly clean the Drip Tray (4) of excess oil or fat.
5. Periodically check each burner to see that it is free from insects and spiders which may block the gas system.
6. Clean each burner very carefully, checking to see it is free of obstructions. We recommend that you use a pipe cleaner to clean the burner gas holes.

# DECLARATION OF CONFORMITY



**Clarke<sup>®</sup>**  
**INTERNATIONAL**

Hemnall Street, Epping, Essex CM16 4LG

## DECLARATION OF CONFORMITY

**This is an important document and should be retained.**

**We hereby declare that this product(s) complies with the following directive(s):**

*90/396/EEC Appliances Burning Gaseous Fuels, amended by 93/68/EEC*

**The following standards have been applied to the product(s):**

*BSEN 484:1997, EN498:1997*

The technical documentation required to demonstrate that the product(s) meet(s) the requirement(s) of the aforementioned directive(s) has been compiled and is available for inspection by the relevant enforcement authorities.

The CE mark was first applied in: 2010

<b>Product Description:</b>	Gas BBQ's (for outside use)
<b>Model number(s):</b>	BBQ3, BBQ4, SSBBQ4
<b>Serial / batch Number:</b>	N/A
<b>Date of Issue:</b>	23/12/10

**Signed:**



**J.A. Clarke**  
**Director**



# A SELECTION FROM THE VAST RANGE OF

# Clarke®

## QUALITY PRODUCTS

### AIR COMPRESSORS

From DIY to industrial, Plus air tools, spray guns and accessories.

### GENERATORS

Prime duty or emergency standby for business, home and leisure.

### POWER WASHERS

Hot and cold, electric and engine driven - we have what you need

### WELDERS

Mig, Arc, Tig and Spot. From DIY to auto/industrial.

### METALWORKING

Drills, grinders and saws for DIY and professional use.

### WOODWORKING

Saws, sanders, lathes, mortisers and dust extraction.

### HYDRAULICS

Cranes, body repair kits, transmission jacks for all types of workshop use.

### WATER PUMPS

Submersible, electric and engine driven for DIY, agriculture and industry.

### POWER TOOLS

Angle grinders, cordless drill sets, saws and sanders.

### STARTERS/CHARGERS

All sizes for car and commercial use.



**PARTS & SERVICE: 0208 988 7400**

**E-mail: [Parts@clarkeinternational.com](mailto:Parts@clarkeinternational.com) or [Service@clarkeinternational.com](mailto:Service@clarkeinternational.com)**

**SALES: UK 01992 565333 or Export 00 44 (0)1992 565335**

**Clarke® INTERNATIONAL** Hemnall Street, Epping, Essex CM16 4LG  
**[www.clarkeinternational.com](http://www.clarkeinternational.com)**