



Magellan® CrossoverGPS™

Reference Manual



Instructions for Operating the Magellan CrossoverGPS

IMPORTANT SAFETY WARNINGS

The Magellan CrossoverGPS is a vehicle-navigation aid designed to assist you in arriving at your selected destinations. When using the Magellan CrossoverGPS, these safety rules must be followed to prevent accidents that can result in injury or death to yourself or others:

- Some countries prohibit mounting any item to your windscreen. Please check the applicable regulations in your country as regards windscreen mounting. Go to www.magellanGPS.com for alternate mounting solutions. An adhesive disk is supplied with the Magellan CrossoverGPS for use as an alternative mounting solution to the dashboard.
- When driving, the need to view the display is minimal. Voice prompts will guide you to your destination. The driver should enter data or programme the Magellan CrossoverGPS only when the vehicle is stationary. Only a vehicle passenger should enter data or programme the Magellan CrossoverGPS while the vehicle is moving.
- It is your responsibility to comply with all traffic laws.
- Every attempt is made to ensure that the database is accurate. However, roadways, points of interest (POIs), and business and service locations may change over time. The database does not include, analyse, process, consider, or reflect any of the following: legal restrictions (such as vehicular type, weight, height, width, load and speed restrictions); road slope or grade; bridge height, width, weight, or other limits; population density; neighbourhood quality or safety; availability or proximity of police, emergency rescue, medical or other assistance; construction work zones or hazards; road or lane closures; road, traffic, or traffic facilities' safety or condition; weather conditions; pavement characteristics or conditions; special events; traffic congestion. It is your responsibility to disregard any unsafe, hazardous, or illegal route suggestions.
- Keep the Magellan CrossoverGPS safe from extreme temperature conditions. For example, do not leave it exposed to direct sunlight for an extended period of time.
- Take care when mounting the Magellan CrossoverGPS in your vehicle, whether using the windscreen mount or other mount or accessories, that it does not obstruct the driver's view of the road, interfere with the operation of the vehicle's safety devices such as air bags, or present a hazard to occupants of the vehicle should the Magellan CrossoverGPS be dislodged while driving. You assume the risks associated with damage to your vehicle or vehicle occupants as the result of your choices in mounting the Magellan CrossoverGPS.
- Laws in some countries prohibit wearing stereo headphones while operating a motor vehicle. Please check the applicable laws in the country you are driving.
- Proceed with caution when listening to music for prolonged periods of time through headphones, as this may lead to hearing loss.
- The battery in the Magellan CrossoverGPS is rechargeable and should not be removed. In the event that it should need to be replaced, please contact Magellan Technical Support.

About Charging the Magellan CrossoverGPS

- Only use the AC adapter (Phihong: PSC2200R-050) approved for your Magellan CrossoverGPS. Use of another type of AC adapter can result in malfunction and/or possible fire hazard due to battery overheating.
- Only use the car charger approved for/supplied with your Magellan CrossoverGPS. Use of another type of car charger will result in malfunctioning and/or may be hazardous.
- The Magellan CrossoverGPS is intended to be supplied with a LISTED Power Unit marked with "LPS", "Limited Power Source" and output rated + 5 V dc/2.0 A".
- Use the USB cable approved for/supplied with your Magellan CrossoverGPS.
- For safety reasons, the battery in your Magellan CrossoverGPS will stop charging when the ambient temperature is below 0°C (32°F) or above 45°C (113°F).

IMPORTANT SAFETY WARNINGS

About the AC Adapter

- Do not use the adapter in a high moisture environment. Never touch the adapter when your hands or feet are wet.
- Allow adequate ventilation around the adapter when using it to operate the device or charging the battery. Do not cover the AC adapter with paper or other objects that will reduce cooling. Do not use the AC adapter while it is inside a carrying case.
- Connect the adapter to a suitable power source. The voltage and grounding requirements are found on the product case and/or packaging.
- Do not use the adapter if the cord becomes damaged.
- Do not attempt to service the Magellan CrossoverGPS. There are no serviceable parts inside. Replace the Magellan CrossoverGPS if it is damaged or exposed to excess moisture.

About the Battery

- Do not attempt to replace the battery. Please contact Magellan Technical Support for issues related to the battery.
- Use the charger approved for your Magellan CrossoverGPS.

IMPORTANT SAFETY WARNINGS

Federal Communication Commission Interference Statement

This equipment has been tested and found to comply with the limits for class B digital devices, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and if not properly installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by taking one of the following steps:

- Reorient or relocate the receiving aerial.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference and (2) this device must accept any interference received, including interference that may cause undesired operation.

FCC Caution: Any changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate this equipment.


IMPORTANT NOTE:

FCC Radiation Exposure Statement:

This equipment complies with FCC radiation exposure limits established for an uncontrolled environment. End users must follow the specific operating instructions for satisfying RF exposure compliance.

This transmitter must not be placed next to or operated in conjunction with any other aerial or transmitter.

In order to maintain compliance with FCC regulations, shielded cables must be used with this equipment. Operation with non-approved equipment or unshielded cables is likely to result in interference to radio and TV reception. The user should note that any changes or modifications made to the equipment not expressly approved by the manufacturer could void the user's authority to operate this equipment.

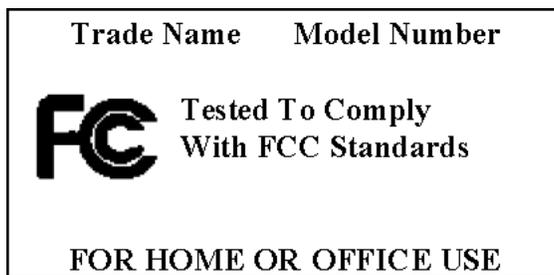

The Magellan CrossoverGPS must be installed and operated at a distance of at least 8 inches (20 cm) from the user.

IMPORTANT SAFETY WARNINGS

IC statement

Operation is subject to the following two conditions:

1. This device may not cause interference and
2. This device must accept any interference, including interference that may cause undesired operation of the device.

IMPORTANT NOTE:

IC Radiation Exposure Statement:

This equipment complies with IC radiation exposure limits established for an uncontrolled environment. End users must follow the specific operating instructions for satisfying RF exposure compliance.

This transmitter must not be placed next to or operated in conjunction with any other aerial or transmitter.

© 2007 Magellan Navigation, Inc. All rights reserved. The Magellan Logo, Magellan, Magellan CrossoverGPS, Turn it on and go, TrueView, QuickSpell, SmartDetour, and SmartVolume are trademarks of Thales. No part of this user manual may be reproduced or transmitted in any form or by any means, electronic or mechanical, including photocopying and recording, for any purpose other than the purchaser's personal use, without the prior written permission of Magellan Navigation, Inc.

631409-18 A

Magellan CrossoverGPS	1
What the Magellan CrossoverGPS can do for you... ..	1
Magellan CrossoverGPS Reference Manual	2
Magellan CrossoverGPS	2
Magellan CrossoverGPS Right Side View	3
Magellan CrossoverGPS Left Side View	3
Magellan CrossoverGPS Application Menu Screen	4
Accessing the Enhanced POI Menu	5
Satellite Status	5
Magellan CrossoverGPS Vehicle Navigation Screens	6
Map Screen	6
Main Menu Screens	7
Main Menu - Active Route	7
Main Menu - No Active Route	9
Locate Screen	10
List of Directions	10
Creating Routes	11
Overview	11
Creating a route to a street address	11
Creating a route using POIs	12
Creating a route to a POI by name	12
Creating a route to a nearest POI	13
Creating a route to a POI near an upcoming motorway exit	13
Creating a route to go home	14
Setting the home address	14
Changing the home address	15
Create a route to the home address	15
Using the address book	15
Creating a route to a previous destination	15
Adding a previous destination to your address book	16
Creating a route to a favourite destination	16
Creating a route to an address in the address book	16
Editing an address in the address book	17
Deleting an address from the address book	17
Creating a new address	18
Creating a route to a Junction	18
Magellan CrossoverGPS Enhanced POIs	20
Overview	20
Speed Camera POIs	20
Accessing the Enhanced POI Menu	20

Loading an Enhanced POI file	20
Displaying/Selecting Categories	20
Setting Alarms	21
Setting Alert Parameters	21
Creating a Route Using Enhanced POIs	21
Saving a POI to your Address Book from Enhanced POIs	21
Using the Trip Planner	23
Overview	23
Creating a multiple destination trip	23
Activating a multiple destination trip	23
Editing a multiple destination trip	24
Deleting a multiple destination trip	25
Renaming a multiple destination trip	25
Marine Navigation	26
Loading MapSend BlueNav Charts	26
Changing Regions	26
Special Terminology	27
Waypoints	27
Track	27
Backtrack	27
Goto	27
Trip	27
Map Screen Overview	28
Creating a Waypoint from the Map Screen	29
Creating a Waypoint from the Compass Screen	29
Creating a Waypoint from the Marine Navigation Menu	29
Setting your Port	30
Going to your Port	30
Creating a Goto trip from the Map Screen	30
Creating a Goto trip from the Marine Navigation Menu	31
Creating a multiple destination trip	31
Activating a multiple destination trip	32
Track Tools	32
Bow View	33
Accessing the Bow View	33
Outdoor Navigation	34
Loading MapSend Topo Charts	34
Changing Regions	34
Special Terminology	35
Waypoints	35
Track	35
Backtrack	35

Goto	35
Trip	35
Map Screen Overview	36
Creating a Waypoint from the Map Screen	37
Creating a Waypoint from the Compass Screen	37
Creating a Waypoint from the Outdoor Navigation Menu	37
Setting your Base Camp	38
Going to your Base Camp	38
Creating a Goto trip from the Map Screen	38
Creating a Goto trip from the Outdoor Navigation Menu	39
Creating a multiple destination trip	39
Activating a multiple destination trip	40
Track Tools	40
Nav Road View	41
Accessing the Nav Road View	41

Setting User Options42

Overview	42
POI Selection	42
Address Book Options (Waypoint Options for Marine and Outdoor use)	42
Active Track Options (Marine and Outdoor use only)	42
Map Options	43
Map Colours (Vehicle Navigation only)	43
Route Preferences (Vehicle Navigation only)	43
Detour Options (Vehicle Navigation only)	44
Simulator Mode (Vehicle Navigation only)	44
Menu Colours	44
Tone Options	45
Navigation Instruction (Vehicle Navigation only)	45
GPS Options	45
Backup and Restore (Vehicle Navigation only)	45
Export Data/Import Data (Marine and Outdoor Navigation only)	45

System Settings46

Overview	46
Volume	46
Brightness	46
Power	46
Language	46
Time Zone	46
Unit of Measurement	47
Page 2	47
Product Information	47
Diagnosis	47
Additional Items	47

Battery Life	47
Contact Us	47
Magellan CrossoverGPS PC Tools Installation	48
Installing the Software	48
Magellan CrossoverGPS POI Manager	49
Latitude	49
Longitude	49
Altitude	50
Opening a POI File	50
Creating a New POI File	51
Adding Individual POIs	51
Importing a Data File	53
Magellan CrossoverGPS Music Manager	54
Magellan CrossoverGPS Photo Manager	55
Music Player	56
Single Song Play	56
Multiple Song Play	57
Play	57
Create	57
Modify	57
Delete	58
Rename	58
Play Mode	58
List Songs	58
Equaliser	59
Help	59
Photo Viewer	60
View Single Photo	60
Previous Image	60
Zoom	61
Slideshow	61
Pan	61
Rotate Image	61
Next Image	61
ESC	61
Manage Photos	62
List View	62

Thumbnail	62
Rename	62
Properties	62
Tools	62
Preferences	62
Delete Files	62
About	62

Magellan CrossoverGPS

Thank you for purchasing the Magellan CrossoverGPS. The Magellan CrossoverGPS will be your perfect driving, hiking and boating companion for all your trips, from a trip to the grocery store or a week's holiday.

What the Magellan CrossoverGPS can do for you...


- Provide turn-by-turn driving instructions to any address in the selected country.
- Contains an address book that you can save addresses to that you often need to route to. You can even mark an address as a favourite to make it easier to find.
- Comes preloaded with an extensive, easily accessible points of interest (POI) database that can be used to quickly find a restaurant, petrol station, bank or other popular destinations.
- The Magellan CrossoverGPS includes a SmartDetour™ tool that will automatically ask you if you want to detour around unrelenting traffic jams.
- Provides alerts to notify you of approaching speed traps.
- Includes a trip planner that provides you with the ability to create a trip with multiple destinations.
- A trip computer that provides a record of your trip that can be saved.
- You can even route to an intersection when you are unsure of the exact address but you are familiar with the junctions.
- Hikers can use the Magellan CrossoverGPS to plan their hike or return to camp.
- Boaters will be able to set fishing hotspots that they can return to on their next trip.
- Small and portable, the Magellan CrossoverGPS fits into your pocket and is ready to go with you anywhere.

The interface of the Magellan CrossoverGPS is smart and easy-to-use. Every feature is just a tap away with the Magellan CrossoverGPS touchscreen.

Magellan CrossoverGPS Reference Manual

It is not necessary to read this entire document to begin using the Magellan CrossoverGPS. Most users will find that they can use the Magellan CrossoverGPS straight out of the box and just refer to this manual on those rare occasions when a little help on a feature is required.


Magellan CrossoverGPS

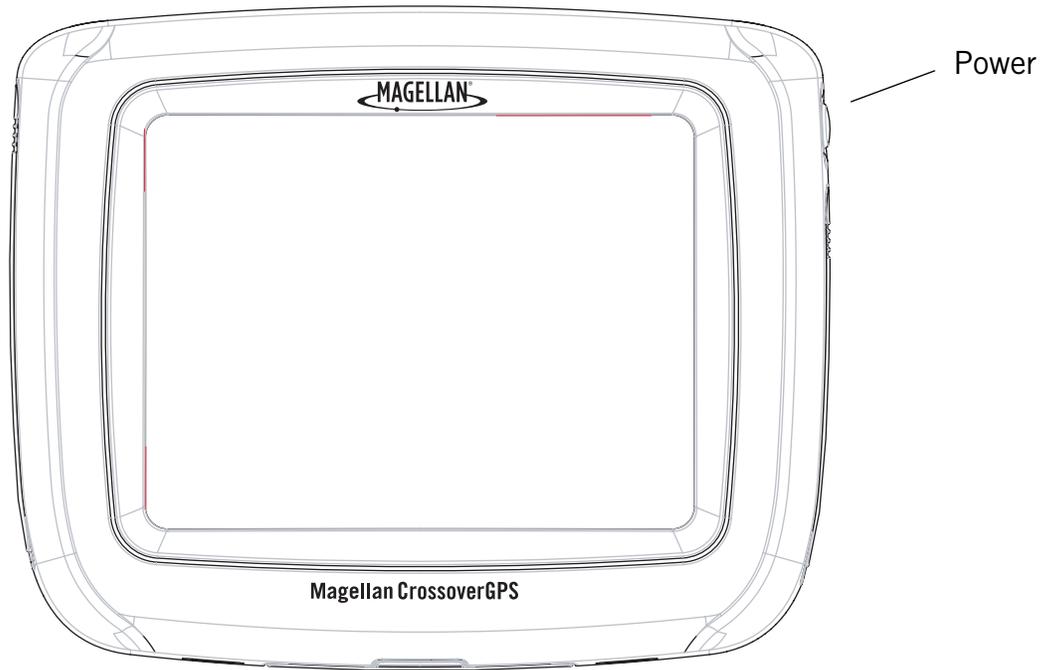

The Magellan CrossoverGPS uses a touchscreen display for all user inputs. The only readily accessible button that is normally used is the power button located on the right side of the unit. You will need to press and hold the power button down for a few seconds to turn the Magellan CrossoverGPS on. This function prevents the unit from accidentally switching on. [Note: The reset button must be on (in the up 'I' position) before the Magellan CrossoverGPS can be turned on.]

All connections to the Magellan CrossoverGPS are located on the left and right sides of the unit, protected by a rubber covering to keep out moisture. When you need to access the connectors, simply lift the protective cover from the bottom.

Magellan CrossoverGPS Right Side View

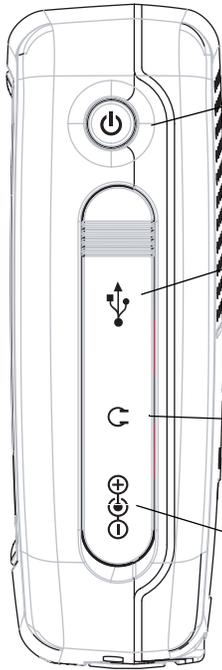

Power - Press and hold to turn the power on or off. (Note: The reset switch MUST be in the up 'I' position).

USB Connection - (under protective cover) Used for connecting to a personal computer to upgrade the firmware or to upload music files, photos and custom POIs.

Headphone Connector - (under protective cover) Please check local laws for use of headphones while driving.

External Power Input - (under protective cover) Connects power to the Magellan CrossoverGPS from a cigarette lighter adapter or an approved AC adapter.

Magellan CrossoverGPS Left Side View



SD Card Slot - (under protective cover) Contains an SD card with a detailed map for your country and any files you may have transferred from a PC. Additional SD cards with street maps from other countries, topo maps or marine charts are available from www.magellanGPS.com

Reset - (under protective cover) You may be required to reset the unit should the Magellan CrossoverGPS cease functioning or during firmware updates. (The Magellan CrossoverGPS will operate only if the reset switch is in the up 'I' position).

Hold Button - (under protective cover) Used to turn off the touchscreen portion of the display and switches the receiver into power saving mode. Primarily used for outdoor use where the Magellan CrossoverGPS might be in a pocket or backpack.

Magellan CrossoverGPS Application Menu Screen

The Application Menu is the first screen displayed after you go through the initial setup and is the starting point for all of the Magellan CrossoverGPS built-in applications. You can access this menu by selecting the Exit icon found on the individual application's main menu.



Application Menu



	<p>Accesses the Vehicle Navigation application. Uses street maps preloaded on SD-Cards to guide you to a street address or POI with turn-by-turn driving instructions.</p>		<p>Accesses the Marine Navigation application. This application provides you with the tools you need for boating and fishing. No detailed marine information is preloaded in the Magellan CrossoverGPS. Detailed marine charts can be added using optional MapSend BlueNav charts available at www.magellanGPS.com.</p>
	<p>Accesses the Outdoor Navigation application. This application provides you with the tools you need for hiking and camping. The Magellan CrossoverGPS has a built-in basemap for all your outdoor activities. Detailed topographic information can be added using optional MapSend Topographic maps available at www.magellanGPS.com.</p>		<p>Accesses System Configuration. Used to adjust the language, volume, brightness, and other system settings.</p>
	<p>Accesses the built-in Music Player application where you can listen to songs that you can store on a SD Card.</p>		<p>Accesses the built-in Photo Viewer application where you can view photos that you can store on an SD Card.</p>

Accessing the Enhanced POI Menu

The Application Menu can be accessed from any of the applications by tapping the Exit icon found on the individual application's main menu.



Sample Marine Navigation Menu showing the Exit button highlighted.

Please note that the System Settings menu does not display an Exit button. To access the Application Menu from System Settings, press the 'X' in the upper right-hand corner.


Satellite Status

All of the navigation screens display a bar graph of the satellite status in the upper right-hand corner. When the bars are green, the Magellan CrossoverGPS is receiving GPS signals and is calculating a position fix, defining your location.



When the bars are yellow, the Magellan CrossoverGPS is receiving a satellite signal but has not been able to calculate your location yet. A red X through the icon indicates that the Magellan CrossoverGPS is unable to receive GPS satellite signals.


Selecting the Satellite Status icon displays the Satellite Status screen providing more information about the satellites and the signals being received.

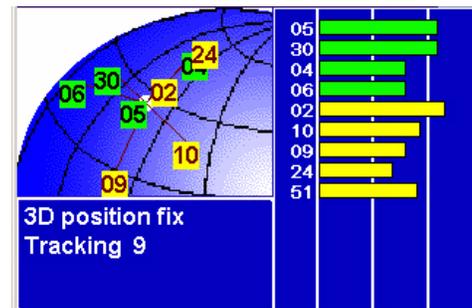

Magellan CrossoverGPS Vehicle Navigation Screens

Map Screen

The Map Screen is the most commonly used screen on the Magellan CrossoverGPS. Whether you are getting directions or just driving around town, the Map screen will give you the peace of mind of knowing where you are.

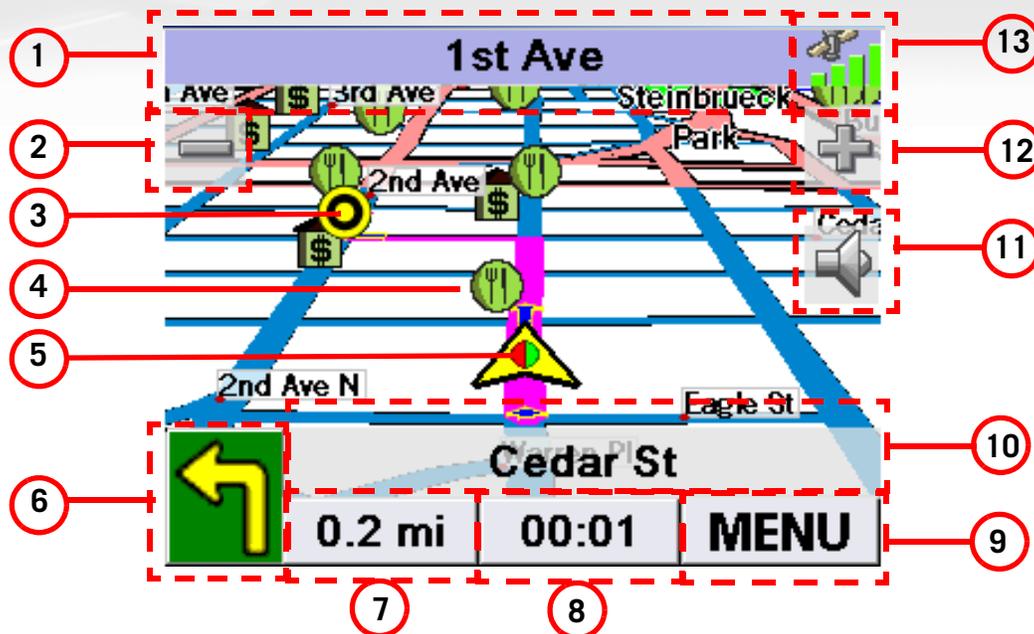


1	Current Street Name	Name of street you are currently on.	When selected, displays the Locate screen
2	Zoom out		When selected, zooms out the map display.
3	Destination Icon	Provides a visual indication of your destination.	
4	POI Icon	The sample indicated is the icon for a restaurant.	When selected, it offers you the option of setting a trip to that POI.
5	Location Icon	Provides a visual indication of your current position.	When selected, displays that you are heading in a N, NE, NW, or W direction.
6	Next Manoeuvre	Indicates what type of manoeuvre you will need to perform when directed.	When selected, repeats the last verbal instruction.
7	Distance to Next Manoeuvre	Displays the calculated distance to your next manoeuvre in the chosen unit of measurement.	When selected, displays the total remaining distance of the trip.

8	Time to Next Manoeuvre	Displays the calculated time to your next manoeuvre.	Selecting this button toggles the field between time to next manoeuvre and remaining distance of the trip.
9	Menu Button		When selected, brings up the main Vehicle Navigation menu.
10	Next Manoeuvre Street Name	Displays the name of the street for the next manoeuvre.	When selected, displays the manoeuvre list screen.
11	Mute		Selecting this button will mute the speaker.
12	Zoom In		When selected, zooms in the map display.
13	Satellite Status	Displays a bar graph indicating satellite signal strength.	When selected displays the Satellite Status screen.

Main Menu Screens


The Main Menu has two modes: active route and normal. When a route is active the Main Menu provides functions that pertain to the route. With no active route, the Main Menu provides access to functions that are used to create a route.

Main Menu - Active Route

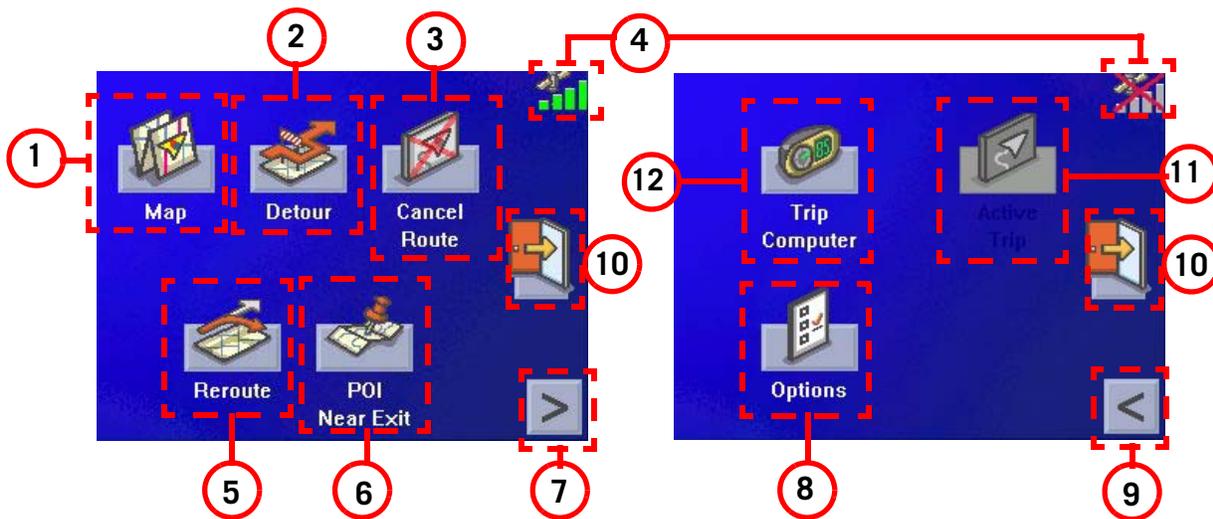

①	Map Button	Used to access the Map Screen	
②	Detour Button	Detour gives you the option of re-routing the trip around traffic problems ahead of you.	
③	Cancel Route Button	Cancels the route you are travelling on.	
④	Satellite Status	Displays a bar graph indicating satellite signal strength.	When selected displays the Satellite Status screen.
⑤	Re-route Button.	Provides a way to re-calculate the route you are on. Useful when you have veered off the route and need it to be re-calculated.	The Magellan CrossoverGPS performs automatic re-routing. This button can be used to speed up the re-routing process.
⑥	POI Near Exit Button	This function provides you with access to a listing of common POI categories that are near upcoming motorway exits. (can only be used while travelling on a motorway.)	
⑦	Menu Page 2	Accesses the second page of the route main menu.	
⑧	Options Button	Accesses the options menu.	
⑨	Menu Page 1	Accesses the first page of the route main menu.	
⑩	Application Menu	Accesses the Application Menu for additional applications and system settings.	
⑪	Active Trip Button	Functional only when travelling on a multi-destination trip. Provides access to tools to modify the trip you are on.	
⑫	Trip Computer	Accesses the trip computer feature providing information about the trip that can be saved.	

Main Menu - No Active Route

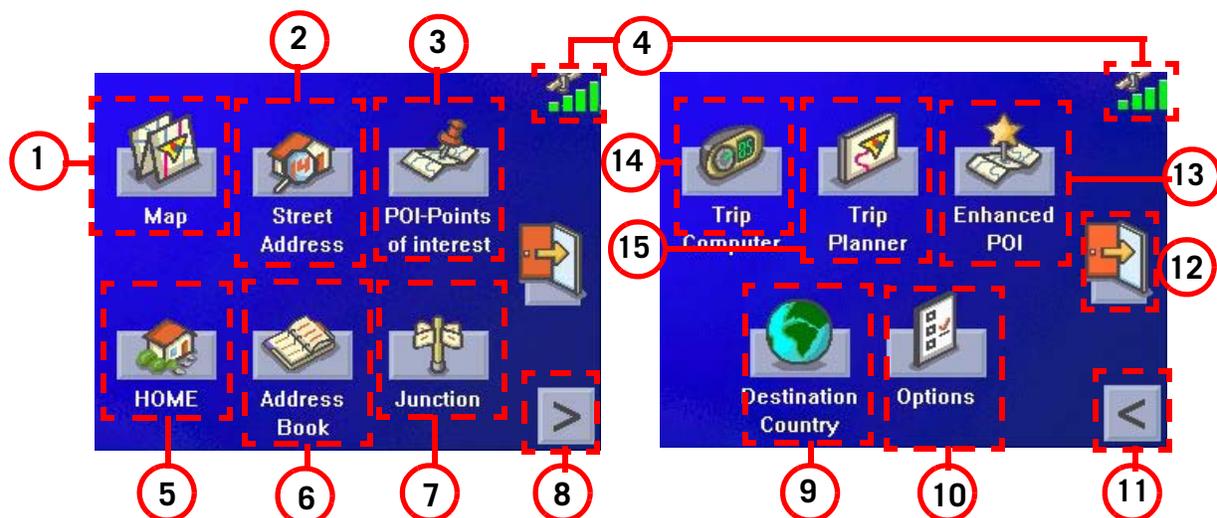


1	Map Button	Used to access the Map Screen	
2	Street Address Button	Create a trip using a street address as the destination.	
3	POI-Points of Interest Button	Create a trip using a point of interest from the POI database as the destination.	
4	Satellite Status	Displays a bar graph indicating satellite signal strength.	When selected displays the Satellite Status screen.
5	Home Button	Save your home address in the Magellan CrossoverGPS and easily create a trip with your home as the destination.	
6	Address Book Button	Access addresses saved to the address book. Can also be used to re-route to a previous destination.	
7	Junction Button	Create a route to the home address.	
8	Menu Page 2	Accesses the second page of the route main menu.	
9	Destination country button	Used to access country detailed maps loaded in the Magellan CrossoverGPS. This button can be selected only if several countries are loaded on your SD Card.	When several countries are loaded on your SD Card, always make sure the appropriate country is first selected when you search for an address or a POI.
10	Options Button	Accesses the options menu.	
11	Menu Page 1	Accesses the first page of the route main menu.	

12	Application Menu	Accesses the Application Menu for additional applications and system settings.	
13	Enhanced POIs	Used to access personal POIs created with the PC Tools or speed trap POIs found on your region SD card.	
14	Trip Planner	Used to create a multi-destination trip that can be routed to or saved.	
15	Trip Computer	Accesses the trip computer feature providing information about previous trips that can be saved.	

Locate Screen (Select the top bar on the Map screen)

The Current Location screen displays information about your present position and provides a way to save your present position in your address book.

The left side of the screen indicates your heading, an address for your present position (if able to calculate), the next and previous street, as well as the latitude/longitude of your present position.

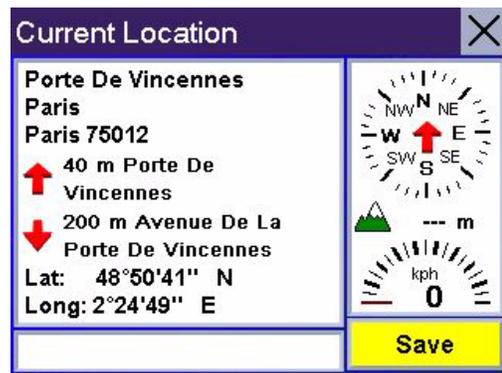


The right side of the screen shows a compass, the elevation (if able to calculate) and the speed at which you are travelling.

Use the **Save** button to store your current position into your address book. Select "X" in the top right-hand corner to return to the Map screen.

List of Directions (Select the next manoeuvre bar on the Map screen)

The List of Directions screen displays all of the manoeuvres remaining before reaching your destination.

Select one of the manoeuvres in the list to exclude that manoeuvre from the route. The manoeuvre will be excluded and the route recalculated.

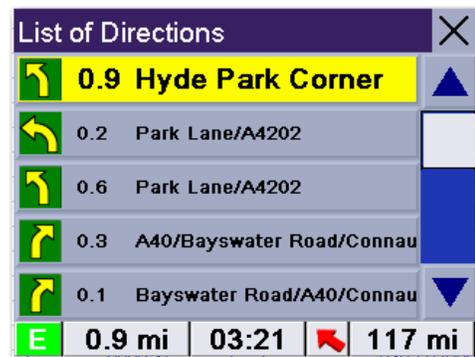

The bottom of the screen displays the heading, distance to next manoeuvre, time to next manoeuvre and distance for the entire route.

Select "X" in the top right-hand corner to return to the Map screen.

Creating Routes

Overview

Creating a route involves selecting a destination and choosing how you would like the route calculated. Once this is done, the Magellan CrossoverGPS will calculate the route using the guidelines you provide and displays the Map screen with information guiding you to your destination.

Detailed map routing: The Magellan CrossoverGPS can only provide routing information for detailed maps that are loaded on the SD Card. The detailed maps loaded on your SD Card can cover one or several countries. It is not possible to be guided from and to an address that doesn't belong to the detailed maps that are loaded on your SD Card.

When your SD card is loaded with detailed maps for several countries, you must make sure that the appropriate Country of Destination has been selected before you start searching for an address or a POI.

Creating a route to a street address

1. From the Main Menu, select **Street Address**.
2. Select **Search By Town**, **Search by Postcode** or **Previous Towns**.
3. Input the information as requested depending upon your selection in step 2.

If using Search By Town: Spell the town name and select the town from the list, spell the name of the street and select from the available street list, then enter the address number for the street. (If the address you want to enter does not fall within the acceptable range displayed, enter the closest possible address.)

If using Search by Postcode: Enter the postcode for the address and select the town from the list of available towns. Spell the name of the street and select from the available street list, then enter the address number for the street (it must fall within the street number range displayed at the top of the screen).



Using the keypad to enter information. The keyboard will display only those letters that spell an item in the database. This provides a quick and easy tool to enter town and street information.

Use the "123" button to enter numbers and the "& ? / -" button to access symbols.

If using Previous Towns: Select a town from the list of previously used towns. Spell the name of the street and select from the available street list, then enter the address number for the street (it must fall within the street number range displayed at the top of the screen).

4. Select the method to be used to calculate the route.

NOTE: All the street names are indexed using the main significant words in their names (i.e. not the prefixes or articles). However, there are some exceptions where you may encounter problems trying to find a street by typing only the significant word in its name. If this is the case, try typing the prefix or article of the street name first.

Creating a route using POIs

POIs (points of interest) have been preloaded into the Magellan CrossoverGPS for commonly used categories such as hotels, restaurants, petrol stations, etc. Following the steps provided you will be able to create a route to any of these destinations.

Creating a route to a POI by name

1. From the Main Menu, select **POI-Points of Interest**.
2. Select the POI category and, if displayed, the subcategory.
3. Select **Spell Name**.
4. Spell out the POI name. You do not need to spell out the complete name. However, the more letters you enter, the narrower the search will be.
5. Select **Current Position, Address or Town Centre**.



Scroll down the list of available categories to select the one you are looking for. Select 'Other' for additional categories.

The most common will be **Current Position** or **Town Centre**. In this case you could be looking for any particular brand of petrol station nearest to where you are or perhaps nearest to the centre of a town you are planning on going to.

If you select Town centre or address, you will need to input the name and select from the list of available items before continuing.

6. Select the POI from the list of POIs that you are looking for.

7. Once the POI has been selected from the available list, select the routing method you want to use and the Magellan CrossoverGPS will begin calculating the route.

Creating a route to a nearest POI

1. From the Main Menu, select **POI-Points of Interest**.
2. Select the POI category and, if displayed, the subcategory.
3. Select **Near**.
4. Select **Current Position, Address** or **Town Centre**.

The most common will be **Current Position**. In this case you could be looking for the nearest petrol station to your current position.

5. A list of POIs for the selected category and nearest to the criteria you chose in step 4 will be presented. Select the POI you wish to route to.
6. Once the POI has been selected from the available list, select the routing method you want to use and the Magellan CrossoverGPS will begin calculating the route.



This is a sample list of POIs that meet the set criteria. The address and phone number is displayed to help you select the right POI. The red arrow indicates the approximate direction of the POI from your current position.

Creating a route to a POI near an upcoming motorway exit

This feature only works if you are travelling on a motorway. If you try to access it while not on a motorway, an alert is displayed indicating that it is not available.

1. From the Main Menu, select **POI-Points of Interest**.
2. Select **POI Near the Exit** at the top of the list. Note that this is available if you are currently travelling on a motorway.
3. Select the exit to display all four of the POI categories for this exit or select a category icon to display the POIs under that category only for this exit.
4. Select a POI from the list of available POIs.
5. Once the POI has been selected, select the routing method you wish to use and the Magellan CrossoverGPS will begin calculating the route.

This function is available whether a route is active or whether you are travelling without a selected destination. Please note that if you are travelling with an active destination, selecting a POI this way will cancel the route and create a new one. You will then need to redo the route, using Previous Destinations in the address book, to complete the original route.

Note: When a route is active a **POI near Exit** button is also available from the Main menu.

Creating a route to go home

Setting the home address

1. From the Main Menu, press on **Home**.
2. If you have not entered a home address previously, select **Yes** to enter your home address.
3. Select **Search By Town**, **Search by Postcode** or **Previous Towns**.
4. Input the information as requested depending upon your selection in step 3.

If using Search By Town: Spell the town name and select the town from the list, spell the name of the street and select from the available street list, then enter the address number for the street (it must fall within the street number range displayed at the top of the screen).

If using Search by Postcode: Enter the postcode for the address and select the town from the list of available towns. Spell the name of the street and select from the available street list, then enter the address number for the street (it must fall within the street number range displayed at the top of the screen).

If using Previous Towns: Select a town from the list of previously used towns. Spell the name of the street and select from the available street list, then enter the address number for the street (it must fall within the street number range displayed at the top of the screen).

5. Select **Save** to store the home address.

Changing the home address

1. From the Main Menu, press on **Home**.
2. Select **Change** to change your home address.
3. Confirm the change by selecting **Yes**.
4. Select **Search By Town**, **Search by Postcode** or **Previous Towns**.
5. Input the information as requested depending upon your selection in step 4.

If using Search By Town: Spell the town name and select the town from the list, spell the name of the street and select from the available street list, then enter the address number for the street (it must fall within the street number range displayed at the top of the screen).

If using Search by Postcode: Enter the postcode for the address and select the town from the list of available towns. Spell the name of the street and select from the available street list, then enter the address number for the street (it must fall within the street number range displayed at the top of the screen).

If using Previous Towns: Select a town from the list of previously used towns. Spell the name of the street and select from the available street list, then enter the address number for the street (it must fall within the street number range displayed at the top of the screen).

6. Select **Save** to store the home address.

Create a route to the home address

1. From the Main Menu, press on **Home**.
2. Select **Route**.
3. Select the routing method you want to use and the Magellan CrossoverGPS will begin calculating the route home.

Using the address book

Creating a route to a previous destination

1. From the Main Menu, press on **Address Book**.
2. Select **Previous Destinations**.
3. Select the desired destination from the list of previous destinations.

4. Select **Route**.
5. Select the desired Route Method.

Adding a previous destination to your address book

1. From the Main Menu, press on **Address Book**.
2. Select **Previous Destinations**.
3. Select the desired destination from the list of previous destinations.
4. Select **Edit**.
5. (Optional) Edit the name of the address by selecting the top line of the address.
6. (Optional) Select the Favourite check box to add this address to your list of favourite addresses.
7. Select **Save**.
8. Select **Route** to begin routing to the destination or select 'X' multiple times to exit and return to the Main Menu.

Creating a route to a favourite destination

1. From the Main Menu, press on **Address Book**.
2. Select **Favourites**.
3. Select the desired destination from the list of favourite destinations.
4. Select **Route**. (You also have the option of editing or deleting this destination.)
5. Select the desired Route Method.

Creating a route to an address in the address book

1. From the Main Menu, press on **Address Book**.
2. Select **List Addresses**.
3. Select **List All** or **Search Address Book**.


If you perform a search, you will be asked to enter the first few characters in the address name.
4. Select the desired address from the list of addresses in your address book.
5. Select **Route**. (You also have the option of editing or deleting this address.)
6. Select the desired Route Method.

Editing an address in the address book

1. From the Main Menu, press on **Address Book**.
2. Select **List Addresses**.
3. Select **List All** or **Search Address Book**.

If you perform a search, you will be asked to enter the first few characters in the address name.

4. Select the desired address from the list of addresses in your address book.
5. Select **Edit**.
6. Select the top line to change the name or the bottom line to change the address information. Use the keyboard to enter the new text.
7. Select the Favourite check box if you want to add this address to your favourites list.
8. Select Save to store the changes in your address book.
9. Select "X" in the top right-hand corner a few times to return to the Main Menu if you have finished.

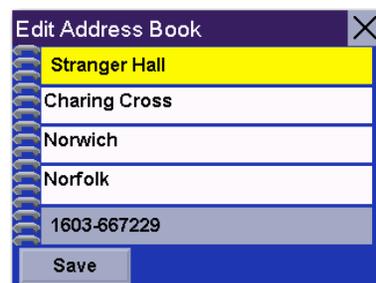

You can change the name or add information (phone number, etc.) by pressing on the top or bottom line and use the keyboard to enter new text.

Deleting an address from the address book

1. From the Main Menu, press on **Address Book**.
2. Select **List Addresses**.
3. Select **List All** or **Search Address Book**.

If you perform a search, you will be asked to enter the first few characters in the address name.

4. Select the desired address from the list of addresses in your address book.
5. Select **Delete**.
6. Confirm the deletion by pressing on **Yes**.
7. Select "X" in the top right-hand corner a few times to return to the Main Menu if you have finished.

Creating a new address

1. From the Main Menu, press on **Address Book**.
2. Select **Create New Entry**.
3. Select **Select on Map, Select Address, Points of Interest** or **Town Centre**.

Select Map: The Map screen is displayed. Use your finger or stylus to pan the crosshair cursor around the map. When the crosshair cursor is over the point on the map you want, press on the crosshair cursor.

Select Address: Follow the instructions for selecting an address, either by town, postcode or previous towns.

Points of Interest: Follow the instructions previously mentioned in selecting a POI.

Town Centre: Select a town centre by name or proximity to your current position or to any other address.

4. The Edit Address Book screen is displayed. Edit the name or information line if desired. If this address is to be added to your favourites list, press on the Favourites check box.
5. Select **Save**.

Creating a route to a Junction

1. From the Main Menu, press on **Junction**.
2. Select **Search By Town, Search by Postcode** or **Previous Towns**.
3. Input the information as requested depending upon your selection in step 3.

If using Search By Town: Spell the town name and select the town from the list, spell the name of the street and select from the available street list, then enter the address number for the street (it must fall within the street number range displayed at the top of the screen).

If using Search by Postcode: Enter the postcode for the address and select the town from the list of available towns. Spell the name of the street and select from the available street list, then enter the address number for the street (it must fall within the street number range displayed at the top of the screen).

If using Previous Towns: Select a town from the list of previously used towns. Spell the name of the street and select from the available street list, then enter the address number for the street (it must fall within the street number range displayed at the top of the screen).

4. Once the town has been selected, enter the name of the first street. When given the list of streets, select the desired one from the list of available streets.
5. Enter the name of the second street. When given the list of streets, select the desired one from the list of available streets.
6. Select the desired Route Method.

Magellan CrossoverGPS Enhanced POIs

Overview

Personal POIs can be created using the Magellan CrossoverGPS PC Tools and loaded onto the SD card in your Magellan CrossoverGPS. The Enhanced POI option provides a way of loading these POIs into the receiver and can then be used to create a route or trip.

Speed Camera POIs

The Magellan CrossoverGPS comes with Speed Camera POIs for France, Germany, and the rest of Europe loaded as three enhanced POI files on the SD card. To view the Speed Camera icons on your map you will need to select the appropriate Speed Camera POI file for the country you are travelling in. Follow the instructions for Loading an Enhanced POI file and select the desired speed camera file.

Accessing the Enhanced POI Menu

1. From the Main Menu, select  to go to page 2 of the Main Menu.
2. Select the **Enhanced POI** icon.

Loading an Enhanced POI file

1. Install an SD card with POIs you've created using the Magellan PC Toolkit. (Make sure that the POIs you create using Magellan PC Tools have been uploaded to the SD card supplied with your Magellan CrossoverGPS.) POI files for speed traps are already preloaded on the SD Card supplied with your Magellan CrossoverGPS.
2. Access the Enhanced POI menu.
3. Select **Change My POI file**.
4. Select **Select a POI File**.
5. Select the desired POI file from the list of POI files available.

Displaying/Selecting Categories

1. Load a POI file as described in 'Loading an Enhanced POI file'.
2. Select **Display Categories**.
3. Select categories you want displayed or not displayed when selecting a POI to route to. ('X' will be shown.)

Setting Alarms

1. Load a POI file as described in 'Loading an Enhanced POI file'.
2. Select **Set Alarms**.
3. Select those categories you want to be alerted to when approaching. (See Setting Alert Parameters.)

Setting Alert Parameters

1. Load a POI file as described in 'Loading an Enhanced POI file'.
2. Select **Alert Parameters**.
3. Select the category you want to set the parameters for.
4. Select the Detection angle by selecting the detection angle button and entering a new angle [default is 45 degrees]. (This is the area in front of you that will be used to see if one of your POIs is upcoming.)
5. Set the distance for the first and last warning by pressing on their respective buttons and entering the desired distance.
6. Select **Save** when complete.

Creating a Route Using Enhanced POIs

1. When an enhanced POI file has been loaded, access the Enhanced POI menu.
2. Select **Select category**.
3. Select the POI category.
4. Select **Nearest** (closest to your present position) or **Spell POI Name**.
5. If you selected Nearest, select the destination from the Select POI list.
If you selected Spell POI Name, enter the first few letters for the desired POI and press OK. Select the POI from the list.
6. Select **Route**.
7. Select routing method.

Saving a POI to your Address Book from Enhanced POIs

1. When an enhanced POI file has been loaded, access the Enhanced POI menu.
2. Select **Select category**.
3. Select the POI category.
4. Select **Nearest** (closest to your present position) or **Spell POI Name**.

5. If you selected Nearest, select the destination from the Select POI list.
If you selected Spell POI Name, enter the first few letters for the desired POI and press OK. Select the POI from the list.
6. Select **Save**.
7. Edit the POI as needed by pressing on the desired field and entering the information.
8. Add the POI to your favourites list if desired by checking the Favourite checkbox.
9. Select **Save**.
10. You can now route to this POI by selecting **Route** or return to the main menu by selecting **Cancel**.

Using the Trip Planner

Overview

Normal routes are calculated from your present position to a single destination. It is sometimes beneficial to have a trip that routes to multiple destinations. The Trip Planner allows you to create and save multiple destination trips.

Creating a multiple destination trip

1. From the Main Menu, select  to go to page 2 of the Menu.
2. Select **Trip Planner**.
3. Select **New**.
4. Use the keyboard to enter a name for the trip. Select **OK** when done.
5. Select **Add** from the list of available options.
6. Using the instructions found in *Creating a Route*, enter the first destination in the trip or select it from the map using the Map button.
7. Once the address has been selected, select **Save** on the Add address to Trip screen.
8. The first destination has been added to the trip. To add more destinations, select the destination in the Trip List and select **Add**. Using the instructions found in *Creating a Route*, add the second destination to the list.
9. Continue adding destinations by pressing on the last listed destination and selecting **Add** until you have entered all of the desired destinations for your trip.
10. With the trip complete, select **Save**.

Activating a multiple destination trip

1. From the Main Menu, select  to go to page 2 of the Menu.
2. Select **Trip Planner**.
3. Select **Guide Me**.
4. Select the Trip to be activated from the list of saved trips.

5. A list of the individual destinations is displayed. Select the first destination on the list to activate the trip.
6. Select the routing method to calculate the trip.



You can also pick which destination to begin the trip on, skipping over destinations prior to it, by selecting the first destination you want to go to. In this example, selecting 'Kensington Palace' will go to all four destinations in the trip. If you select 'Baden Powell House' the trip would be to 'Baden Powell House' and then to the 'Stranger Hall', skipping 'Kensington Palace' and the 'Royal College of Music'.

Editing a multiple destination trip

1. From the Main Menu, select  to go to page 2 of the Menu.
2. Select **Trip Planner**.
3. Select **Edit**.
4. Select the Trip to be edited from the list of saved trips.
5. Select the destination from the list of available destinations that is to be edited.
6. Select the action required from the list of available actions. You can select **Add**, **Move Up**, **Move Down**, **Delete** or **Cancel**.

Add: Using the standard methods of selecting a destination, a new destination can be selected and added to the trip after the destination selected in step 5.

Move Up: Moves the destination selected up one level in the trip list.

Move Down: Moves the destination selected down one level in the trip list.

Delete: Removes the destination selected from the trip list.

Cancel: Makes no changes and returns to the trip list.

7. When the trip edits are complete, select **Save**.

Deleting a multiple destination trip

1. From the Main Menu, select  to go to page 2 of the Menu.
2. Select **Trip Planner**.
3. Select **Delete, Rename**.
4. Select **Delete**.
5. Select the Trip to be deleted from the list of saved trips.
6. Confirm the deletion by pressing on **Yes**.


Renaming a multiple destination trip

1. From the Main Menu, select  to go to page 2 of the Menu.
2. Select **Trip Planner**.
3. Select **Delete, Rename**.
4. Select **Rename**.
5. Select the Trip to be deleted from the list of saved trips.
6. Using the keypad, enter a new name for the trip. Select **OK** when done.

Marine Navigation

The Marine application provides a basic form of navigation for marine use. Without loading any external maps (Magellan BlueNav) you can create a track, add waypoints, navigate to a saved waypoint and perform a backtrack (following your track back to your point of origin).

If you have loaded any of the Magellan BlueNav charts you will have additional marine navigational information that can enhance your marine trip.

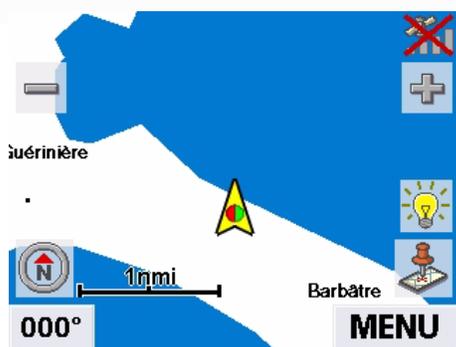

Map view without BlueNav map loaded



Map view with BlueNav map loaded

Magellan BlueNav charts are available from Magellan at <http://www.magellangps.com/products/software.asp>. The Magellan CrossoverGPS is compatible with MapSend BlueNav Local Charts and any of the eXplorist MapSend BlueNav XL3 Charts. (Meridian MapSend BlueNav XL3 charts will not work in the Magellan CrossoverGPS.)

Loading MapSend BlueNav Charts

1. Install the SD card with the BlueNav Chart into the SD card slot on the left side of the Magellan CrossoverGPS.
2. If the unit is on or after you turn it on, a message will be displayed indicating that maps have been found on the SD card.
3. Tap Yes.
4. Select the map you want to load.

Changing Regions

1. Access the Marine Navigation application. (From the Map screen, tap the MENU button.) NOTE: If you have an active trip or goto you will need to cancel it before being able to select a region from the SD card.
2. Tap the Right Arrow in the bottom right-hand corner to access page 2 of the menu.
3. Select *Select Region*.

4. Tap Yes.
5. Select the map you want to load.

Special Terminology

Waypoints

A waypoint is similar to an address. An address uses the street name and number, the city, and the state to define its location, whereas a waypoint uses imaginary lines drawn on the globe (latitude and longitude) to pinpoint its location. They function in the same way, but are defined differently.

Track

Track is a record of your travels. As you move across the water the Magellan CrossoverGPS drops and records electronic breadcrumbs that represent your movement. When you look at the map screen you will notice a dotted line showing you a history of how you travelled. This dotted line is your track. Track is primarily used to create a backtrack trip that returns you to your starting point.

Backtrack

As explained above, the Magellan CrossoverGPS records your track while you are moving. You can then create a trip (called backtrack) that follows this track back to where you started.


Goto

A goto is a trip that tries to go in a straight line from your present position to a waypoint or a point you have selected on the map.

Trip

A trip is a route with a single destination or with multiple legs and destinations. Suppose you want to leave the port and go to the bait boat. After getting your bait you want to travel to the fishing hotspot you saved from your last trip. This would be a trip with two destinations (or two legs). You would use the Magellan CrossoverGPS to create a trip that goes from your port waypoint, to the bait boat waypoint, and finally to the hotspot waypoint.

Map Screen Overview

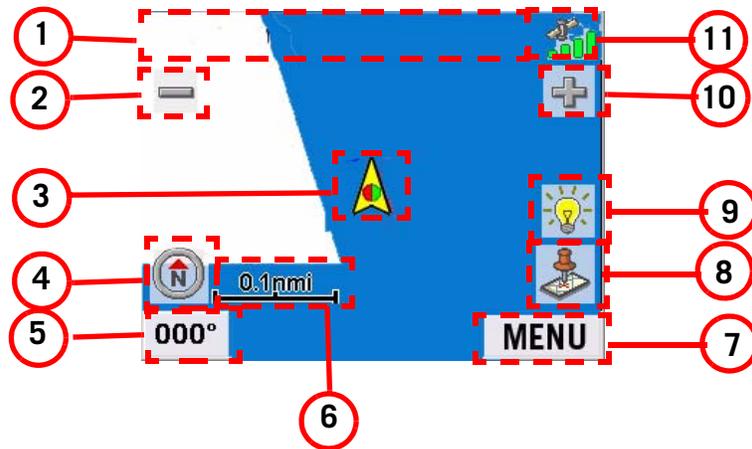

①	Information Bar	Displays information for the cursor position while panning around the map.	
②	Zoom out		When selected, zooms out the map display.
③	Position Icon	Provides a visual indication of your current position.	Icon points in the direction you are travelling
④	North indicator	Arrow points towards North.	When selected, displays the Locate screen.
⑤	Data field	Displays navigation data selected.	Tap and hold down for 3 seconds. A list of possible data types is displayed. Tap on the data type you wish to display.
⑥	Map Scale	Displays the current distance scale for the map.	
⑦	MENU Button		Tap to display the Marine Navigation menu.
⑧	Create Waypoint		Tap to save your current position or the cursor position as a waypoint. If cursor position, you can also create a goto trip to that waypoint.
⑨	Brightness		When tapped displays a slider bar that can be used to adjust the display brightness.
⑩	Zoom In		When selected, zooms in the map display.
⑪	Satellite Status	Displays a bar graph indicating satellite signal strength.	When selected displays the Satellite Status screen.

Creating a Waypoint from the Map Screen

1. Tap  .
2. Tap on any of the fields to edit the name, lat/lon, altitude or information.
3. Tap *Favourite* to include this waypoint in your Favourites list.
4. Select *Save*.
5. A waypoint is created and indicated by an 'x' on the map.

Creating a Waypoint from the Compass Screen

1. Tap  .
2. Tap  .
3. Tap on any of the fields to edit the name, lat/lon, altitude or information.
4. Tap *Favourite* to include this waypoint in your Favourites list.
5. Select *Save*.
6. A waypoint is created and indicated by an 'x' on the map.

Creating a Waypoint from the Marine Navigation Menu

1. Tap  .
2. Select *Create New Entry*.
3. Select *Select on Map* to visually place the waypoint or *Enter Lat/Lon* to type in the latitude and longitude for the waypoint.
4. Use the method selected to locate or enter the waypoint position.
5. Tap on any of the fields to edit the name, lat/lon, altitude or information.
6. Tap *Favourite* if you want to include this waypoint in your Favourites list.
7. Select *Save*.
8. A waypoint is created and indicated by an 'x' on the map.

Setting your Port

1. Tap  .
2. Select *Change Port*.
Note: If this is the first time you have accessed the Port function you will be asked to either select the port from the map or enter its latitude and longitude.
3. Select *Select on Map* to visually place your port on the map or *Enter Lat/Lon* to type in the latitude and longitude for your port.
4. Use the method selected to locate or enter the port's position.
5. Tap on any of the fields to edit the name, lat/lon, altitude or information.
6. Tap *Favourite* to include this waypoint in your Favourites list.
7. Select *Save*.

Going to your Port

1. Tap  .
2. Select *Go to Port*.
3. The Map screen is displayed with a Goto trip line displayed. Navigate along this line to return to your port.

Creating a Goto trip from the Map Screen

1. Pan the cursor along the map to the location you want to go to.
2. Tap  .
3. Tap *Go To*.
4. The Map screen is displayed with a Goto trip line displayed. Navigate along this line to go to your destination waypoint.

Creating a Goto trip from the Marine Navigation Menu

1. Tap  .
2. Select *List Waypoints* or *Favourites*.
3. If *List Waypoints* is selected, select *List Waypoints* again or use the search feature to find the desired waypoint.
4. Select the waypoint name from the list of waypoints.
5. Tap *Go To*.
6. The Map screen is displayed with a Goto trip line displayed. Navigate along this line to go to your destination waypoint.

Creating a multiple destination trip

1. From the Marine Navigation menu, tap  .
2. Select *New*.
3. Using the keypad, enter a new name for the trip.
4. Tap on *Add*.
5. Select the first waypoint in the trip from *Previous Destinations*, *Favourites*, *List Waypoints* or *Create New Entry*.
6. When the Waypoint Details screen is displayed, tap *Save*.
7. The list of waypoint destinations is displayed. Select the last waypoint in the list for a list of options.
8. Tap *Add* and repeat steps 5 to 8 until the entire trip has been entered.
9. Select *Save*.
10. The trip is saved and the Trip Planner menu screen is displayed.

Activating a multiple destination trip

1. From the Marine Navigation menu, tap  .
2. Select *Guide Me*.
3. Select the name of the saved trip you want to use.
4. A list of the waypoints in the trip is displayed. Select the first destination on the list to activate the trip.
5. The map is displayed and the trip is highlighted with a pink line.


Track Tools

1. From the Marine Navigation menu, tap  .
 - Select *Start* or *Stop* to turn tracking on or off.
 - Select *Reset* to clear the active track.
 - Tap *Back Track* to create a trip that follows your active track.
 - Select *Save As...* to save your active track.
 - Tap *To Trip* to save your active track as a trip that can be used again later.
 - Tap *View on Map* to see the entire active track displayed on the map.
 - Tap *Colour* to change the Colour of the track line displayed on the map.
 - *Show on Map* visibly displays the track on the map while navigating.

Bow View

With an active trip you can use the Bow View to help navigate to your destination.

The three data fields at the bottom of the display are customisable. Tap and hold down the data field for 3 seconds. A popup menu will appear with a list of available data types.

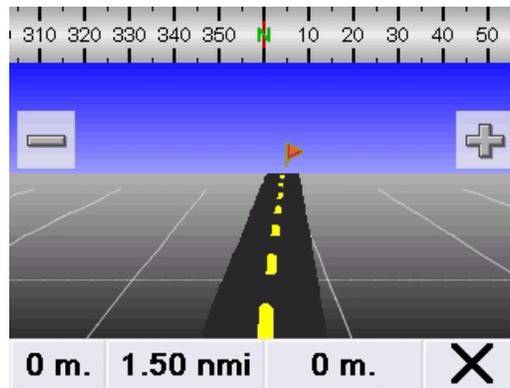

When your destination is behind you or to your left or right, a red arrow indicates the correct direction you need to head in, in order to reach your destination.

Accessing the Bow View

1. From the Marine Navigation menu, tap  .

Select "X" in the bottom right-hand corner to return to the Map screen.

Outdoor Navigation

The Outdoor application provides a basic form of navigation for hiking and camping. Without loading any external maps (Magellan MapSend Topo) you can create a track, add waypoints, navigate to a saved waypoint and perform a backtrack (following your track back to your point of origin). The Magellan CrossoverGPS has a built in basemap for all your outdoor activities.



Map view with the outdoor basemap (i.e. without a MapSend Topo map loaded.)



Map view with a detailed MapSend Topo map loaded.

Magellan MapSend Topo maps are available from Magellan at <http://www.magellangps.com/products/software.asp>. The Magellan CrossoverGPS is compatible with MapSend Topo maps that are preloaded on SD cards. (MapSend Topo products sold on a CD-ROM or DVD are NOT compatible with the Magellan CrossoverGPS.)

Loading MapSend Topo Charts

1. Install the SD card with the MapSend Topo Chart into the SD card slot on the left side of the Magellan CrossoverGPS.
2. If the unit is on or after you turn it on, a message will be displayed that maps have been found on the SD card.
3. Tap Yes.
4. Select the map you want to load.

Changing Regions

1. Accesses the Outdoor Navigation application. (From the Map screen, tap the MENU button.) NOTE: If you have an active trip you will need to cancel it before being able to select a region from the SD card.
2. Tap the Right Arrow in the bottom right-hand corner to access page 2 of the menu.

3. Select *Select Region*.
4. Tap *Yes*.
5. Select the map you want to load.

Special Terminology

Waypoints

A waypoint is similar to an address. An address uses the street name and number, the city, and the state to define its location, whereas a waypoint uses imaginary lines drawn on the globe (latitude and longitude) to pinpoint its location. They function in the same way, but are defined differently.

Track

Track is a record of your travels. As you move across the land the Magellan CrossoverGPS drops and records electronic breadcrumbs that represent your movement. When you look at the map screen you will notice a dotted line showing you a history of how you travelled. This dotted line is your track. Track is primarily used to create a backtrack trip that returns you to your starting point.

Backtrack

As explained above, the Magellan CrossoverGPS records your track while you are moving. You can then create a trip (called backtrack) that follows this track back to where you started.


Goto

A goto is a trip that tries to go in a straight line from your present position to a waypoint or a point you have selected on the map.

Trip

A trip is a route with a single destination or with multiple legs and destinations. Suppose you want to leave your basecamp and go to the bridge. From the bridge, you want to hike to a scenic spot you found during your last hike. This would be a trip with two destinations (or two legs). You would use the Magellan CrossoverGPS to create a trip that goes from your basecamp waypoint, to the bridge waypoint, and finally to the scenic waypoint.

Map Screen Overview

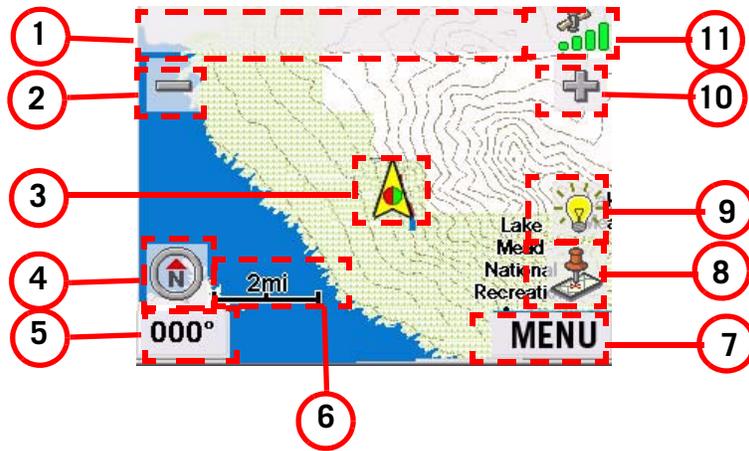

1	Information Bar	Displays information for the cursor position while panning around the map.	
2	Zoom out		When selected, zooms out the map display.
3	Position Icon	Provides visual indication of your current position.	Icon points in the direction you are travelling
4	North indicator	Arrow points towards North.	When selected, displays the Locate screen.
5	Data field	Displays navigation data selected.	Tap and hold down for 3 seconds. A list of possible data types is displayed. Tap on the data type you wish to display.
6	Map Scale	Displays the current distance scale for the map.	
7	MENU Button		Tap to display the Outdoor Navigation menu.
8	Create Waypoint		Tap to save your current position or the cursor position as a waypoint. If cursor position, you can also create a goto Trip to that waypoint.
9	Brightness		When tapped displays a slider bar that can be used to adjust the display brightness.
10	Zoom In		When selected, zooms in the map display.
11	Satellite Status	Displays a bar graph indicating satellite signal strength.	When selected displays the Satellite Status screen.

Creating a Waypoint from the Map Screen

1. Tap  .
2. Tap on any of the fields to edit the name, lat/lon, altitude or information.
3. Tap *Favourite* to include this waypoint in your Favourites list.
4. Select *Save*.
5. A waypoint is created and indicated by an 'x' on the map.

Creating a Waypoint from the Compass Screen

1. Tap  .
2. Tap  .
3. Tap on any of the fields to edit the name, lat/lon, altitude or information.
4. Tap *Favourite* to include this waypoint in your Favourites list.
5. Select *Save*.
6. A waypoint is created and indicated by an 'x' on the map.

Creating a Waypoint from the Outdoor Navigation Menu

1. Tap  .
2. Select *Create New Entry*.
3. Select *Select on Map* to visually place the waypoint or *Enter Lat/Lon* to type in the latitude and longitude for the waypoint.
4. Use the method selected to locate or enter the waypoint position.
5. Tap on any of the fields to edit the name, lat/lon, altitude or information.
6. Tap *Favourite* to include this waypoint in your Favourites list.
7. Select *Save*.
8. A waypoint is created and indicated by an 'x' on the map.

Setting your Base Camp

1. Tap  .
2. Select *Change Basecamp*.
Note: If this is the first time you have accessed the Base Camp function you will be asked to either select the Base Camp from the map or enter its latitude and longitude.
3. Select *Select on Map* to visually place your base camp on the map or *Enter Lat/Lon* to type in the latitude and longitude for your camp.
4. Use the method selected to locate or enter the base camp's position.
5. Tap on any of the fields to edit the name, lat/lon, altitude or information.
6. Tap *Favourite* to include this waypoint in your Favourites list.
7. Select *Save*.

Going to your Base Camp

1. Tap  .
2. Select *Goto Basecamp*.
3. The Map screen is displayed with a Goto trip line displayed. Navigate along this line to return to your basecamp.

Creating a Goto trip from the Map Screen

1. Pan the cursor along the map to the location you want to go to.
2. Tap  .
3. Tap *Go To*.
4. The Map screen is displayed with a Goto trip line displayed. Navigate along this line to go to your destination waypoint.

Creating a Goto trip from the Outdoor Navigation Menu

1. Tap  .
2. Select *List Waypoints* or *Favourites*.
3. If *List Waypoints* is selected, select *List Waypoints* again or use the search feature to find the desired waypoint.
4. Select the waypoint name from the list of waypoints.
5. Tap *Go To*.
6. The Map screen is displayed with a Goto trip line displayed. Navigate along this line to go to your destination waypoint.

Creating a multiple destination trip

1. From the Outdoor Navigation menu, tap  .
2. Select *New*.
3. Using the keypad, enter a new name for the trip.
4. Tap on *Add*.
5. Select the first waypoint in the trip from *Previous Destinations*, *Favourites*, *List Waypoints* or *Create New Entry*.
6. When the Waypoint Details screen is displayed, tap *Save*.
7. The list of waypoint destinations is displayed. Select the last waypoint in the list for a list of options.
8. Tap *Add* and repeat steps 5 to 8 until the entire trip has been entered.
9. Select *Save*.
10. The trip is saved and the Trip Planner menu screen is displayed.

Activating a multiple destination trip

1. From the Outdoor Navigation menu, tap  .
2. Select *Guide Me*.
3. Select the name of the saved trip you want to use.
4. A list of the waypoints in the trip is displayed. Select the first waypoint in the list to navigate the entire trip.
5. The map is displayed and the trip is highlighted with a pink line.

Track Tools

1. From the Outdoor Navigation menu, tap  .
 - Select *Start* or *Stop* to turn tracking on or off.
 - Select *Reset* to clear the active track.
 - Tap *Back Track* to create a trip that follows your active track.
 - Select *Save As...* to save your active track.
 - Tap *To Trip* to save your active track as a trip that can be used again later.
 - Tap *View on Map* to see the entire active track displayed on the map.
 - Tap *Colour* to change the colour of the track line displayed on the map.
 - *Show on Map* visibly displays the track on the map while navigating.

Nav Road View

With an active trip you can use the Nav Road View to help navigate to your destination.



Follow the road to route to your destination.

The three data fields at the bottom of the display are customisable. Tap and hold down the data field for 3 seconds. A popup menu will appear with a list of available data types.

Accessing the Nav Road View

1. From the Outdoor Navigation menu, tap



Select "X" in the bottom right-hand corner to exit Nav Road View.

Setting User Options

Overview

Portions of the Magellan CrossoverGPS can be customised to your needs. To access the User Options menu, select **Options** from page 2 of the Main Menu and select the option you want to change.

POI Selection

In POI Selection you can select which POI icons you wish to display on the Map screen

Check the POI category name to select or deselect it. POIs with an “X” will be displayed on the screen. Use ‘Mark All’ or ‘Clear All’ for global selections.

NOTE - Marine and Outdoor use: When you have added maps using Magellan BlueNav or Magellan MapSend Topo the POI category list will be created from the categories supplied on the optional maps. With no accessory map installed, the POI list will be empty for marine use and will contain the vehicle navigation POI list for outdoor use.

Address Book Options (Waypoint Options for Marine and Outdoor use)

This option provides a way to quickly clear addresses from your address book.

Clear Addresses clears all of the addresses in your address book.

Clear Favourites clears the addresses marked as favourites from your address book.

Clear Previous clears the previous destinations list.

Active Track Options (Marine and Outdoor use only)

Track is a recording of your journey on land or water. Active Track Options sets some of the parameters for the active track.

Continue Track on Application Start: You can set the track to continue from the last track point set automatically (Yes), have a new track started and the old track deleted every time you start (Reset), or set it to ask you if you want to continue the track every time you start the outdoor/marine application (Ask).

When track is full: When the track memory is full you can set the Magellan CrossoverGPS to keep adding new track points to the end of the track and delete

track points from the start of the track (Cycle), clear out the track log and start a new one (Reset), or pop up an alert asking you what you want to do at the time the track log is full (Ask).

Track filtering preset: [Advanced users] Sets the interval that track points are collected during the trip. If you are unsure, leave this option as 'Detailed smart algorithm'.

Map Options

Provides access to customising how the Map screen functions.

3D/2D: Changes the display of the map to 3D (forward looking display) or 2D (overhead display). [Vehicle Navigation only]

Heading Up/North Up: Sets the top of the map display to either the direction you are heading or North. Note that 'North Up' is only available when the map is set to 2D mode.

TrueView: As you approach a manoeuvre, the map screen changes to a TrueView display and then back to the map display just prior to the manoeuvre. This is the default setting. You can turn this feature off by unchecking 'Auto TrueView'. TrueView can also be selected to view Split TrueView (default where half the display is the map and the other half an arrow indicating the manoeuvre requirements) or a Single TrueView (only the arrow is displayed). [Vehicle Navigation only]

Map Colours (Vehicle Navigation only)

You can choose from nine different combinations of colours for the map display.

Auto Night Mode: Changes the colours of the display to the one chosen for 'Night Screen' during evening hours. With Auto Night Mode off, only the Day Screen colours are used.

Day Screen/Night Screen: Select these buttons to go to the map colour selection screen. Select the desired colour from the list on the left.

Route Preferences (Vehicle Navigation only)

You can turn automatic re-routing on or off. With automatic re-routing on, the receiver will automatically recalculate the route whenever you leave the planned route.

Automatic Re-Routing: When checked, automatic re-routing is on.

Detour Options (Vehicle Navigation only)

The Magellan CrossoverGPS detects when you are on a route and moving slowly or not moving at all on a motorway. It then provides you with the option of detouring around the problem area. It can alert you visually on the map by displaying the detour icon or you can set it not to alert you so you can select detour from the main menu yourself.

3 mi/5 mi/10 mi or Custom: This setting determines the distance that the detour will take you around. (If you are stationary on a motorway and select detour, the Magellan CrossoverGPS will calculate the detour and try to get you back on the original route in the distance specified.)

Enable automatic detour: This defines if the detour icon will be shown on the map when the Magellan CrossoverGPS determines that a detour should be used.

Alert After: This sets the duration when you are stationary or moving slowly on the motorway before a detour icon is displayed.

Example: Settings of '3 mi', 'Enable automatic detour' on, and 'Alert After' set to 1 min. You are being routed on a motorway and have been moving at 10 mph due to a traffic jam ahead. After 1 minute of moving slowly, the detour icon will be displayed on the left side of the map indicating that a detour should be used. If you want to activate the detour, press on MENU and select 'Detour'. Press 'Route' and the Magellan CrossoverGPS will calculate a new route, detouring around the next 3 miles.

Simulator Mode (Vehicle Navigation only)

This option provides a way to set the Magellan CrossoverGPS into simulation mode. In simulation mode you can create a route and observe the Magellan CrossoverGPS in action as it simulates travelling along the route.

Simulation: Check "Propose simulator mode when calculating a route." to turn the simulator on. When on, you will be asked each time you create a route if you want it to be simulated.

Menu Colours

The Magellan CrossoverGPS has four colour schemes built in; Default, Pastel, Forest and Desert.

Menu Colours: Select the desired colour theme.

Tone Options

The Magellan CrossoverGPS uses an alert tone to indicate that a manoeuvre is upcoming or has been completed. You can select the type of alert tone to be used.

Tone Options: Select Bell, Chime or Beep.

Navigation Instruction (Vehicle Navigation only)

You can select what will be announced while routing. You may turn ‘Announce street name’ on (checked) or off and you may turn ‘Announce exit ramp name’ on (checked) or off.

GPS Options

You can check the status of the GPS signals or set a starting location for the GPS receiver.

GPS Status: Displays high-level information about the satellite and the signal it is transmitting.

Set GPS Position: This is only useful if you have travelled a great distance with the Magellan CrossoverGPS off and it is having problems getting GPS signals. You will be prompted to enter an address for your present location that the Magellan CrossoverGPS can base its satellite search from. (It is extremely unlikely that you will ever need to use this option unless instructed to do so by a service technician if you are experiencing difficulties.)

Backup and Restore (Vehicle Navigation only)

Backup and Restore will save (backup) all of your address, trips, and option settings to an SD card installed in the Magellan CrossoverGPS. You can then upload (restore) this information in the future should you lose the information or accidentally clear the addresses.

Export Data/Import Data (Marine and Outdoor Navigation only)

Export and Import Data brings up a menu that enables you to save or load waypoints, trips or tracks to an optional SD card. You can also backup and restore all of you data to an optional SD card.

System Settings

Overview

System settings provides access to a number of global settings for the Magellan CrossoverGPS. The following is a listing of the accessible settings. From the Main Menu screen, select the Application Menu icon and then the System icon.

Volume

A slider bar is displayed that can be selected to raise or lower the volume of alerts. Selecting the speaker icon (above the slider) will mute or unmute the speaker.

Brightness

At the top of the display is a slider bar that can be selected to increase or decrease the brightness of the display.

'On-battery dimming (80%)' should be checked if you want the display dimmed while operating on the internal battery only. This will lengthen the usable battery life between battery charging.

Power

This setting tells the Magellan CrossoverGPS how long it should stay on while there is no noticeable activity. (Noticeable activity would include button presses and the location of the Magellan CrossoverGPS not changing.)

Language

Changes the language used for voice alerts as well as menu items in to one of eleven languages. Please note that voice alerts are available only in English and French.

Time Zone

Use the '+' and '-' buttons to change the time zone to your local area. Check the Daylight Savings box if you want the time automatically changed for daylight savings.

Unit of Measurement

You can set distances to be displayed as Miles/Feet or Kilometres/Metres.

Page 2 (tap)

Product Information

Provides detailed information about the software and firmware installed in the Magellan CrossoverGPS. Also shown is the unique serial number for the receiver.

Diagnosis

Provides a way to diagnose the audio, touchscreen or video portions of the Magellan CrossoverGPS.

Additional Items

Battery Life

A battery charge indicator is shown at the bottom of the display. When the Magellan CrossoverGPS is charging, the green bars will sequence from left to right. Remove the power cable and the green lights will display the approximate battery charge.

Contact Us

Press the question mark in the bottom left corner and then “Contact Us” to display a screen providing information for contacting Magellan about your Magellan CrossoverGPS.

Magellan CrossoverGPS PC Tools Installation


The Magellan CrossoverGPS Tools application enables you to create custom POIs and load them onto your Magellan CrossoverGPS. It also provides tools for uploading music files and photos onto your SD Card.

Installing the Software


1. Insert the Magellan CrossoverGPS Tools PC Application CD into your PC's CD drive.
2. The setup application will begin automatically. If it doesn't, browse your computer's CD drive and double-click on the setup.exe file.
3. Select a default language for the Application.



4. The Welcome screen will appear to begin the installation process.
5. Choose a destination for the application. Select **Next** to use the default location, or select **Browse** to choose a custom destination.
6. Next, choose a Programme Folder in which to place the application icons.
7. The Magellan CrossoverGPS Tools software will be installed. After it has finished installing, a dialogue box pertaining to Microsoft Digital Signatures may appear, select **OK**.

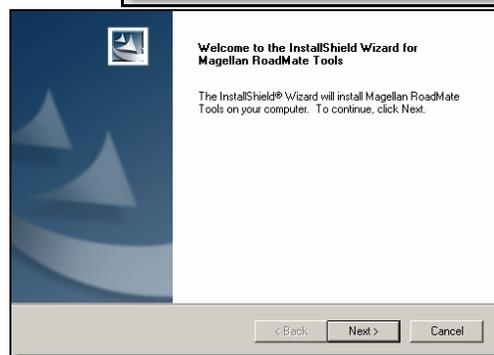

8. When it has finished, you can allow the installer to launch the application automatically, or deselect to exit without launching the application. Select **Finish**.

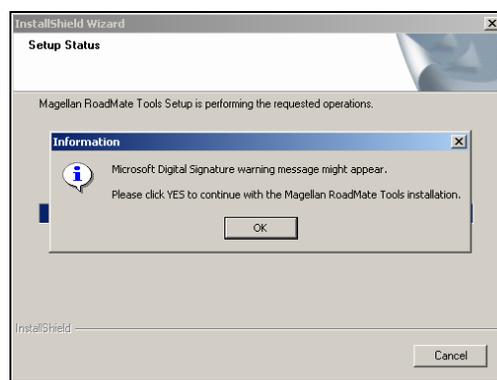


Magellan CrossoverGPS POI Manager

The Magellan CrossoverGPS POI Manager enables you to transfer custom points of interest files from your computer to your Magellan CrossoverGPS.

Before adding any custom POIs to the Magellan CrossoverGPS, you should understand how the POI Manager plots POIs.


Latitude

Latitude can be expressed by dividing Earth into horizontal segments totalling 180 degrees. Starting at the Equator, or zero degrees Latitude, lines (or Parallels) are drawn in 10-degree increments 90 degrees to the north and 90 degrees to the south. If your location is below the Equator, you are at a South Latitude.

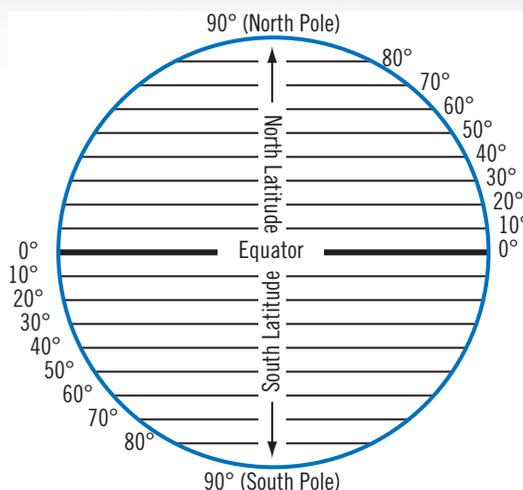

Longitude

Conversely, longitude lines can be expressed by dividing Earth into vertical segments totalling 360 degrees. Starting at the Prime Meridian (which is The Royal Observatory in Greenwich, England), or zero degrees Longitude, lines are drawn in 10-degree increments 180 degrees to the West and 180 degrees to the East. If your location is on the western hemisphere, you are at a West Longitude.

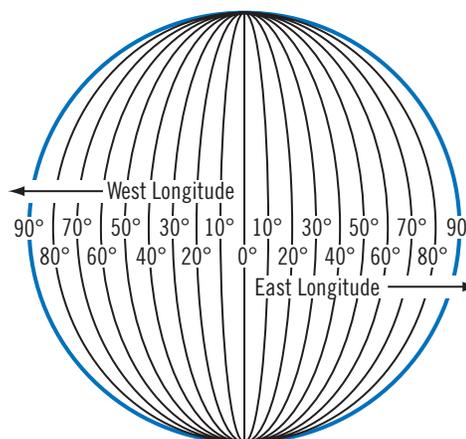


Additionally, to narrow down your location further, each 10-degree segment is divided into 60 smaller segments called minutes and, further still, each minute is divided into 60 segments called seconds.

To express this in coordinates, the city of Paris is located at 48° (degrees) 51' (minutes) and 00 (seconds) North of the Equator, and 2° (degrees) 20' (minutes) and 00 (seconds) East of the Prime Meridian.

Altitude

Each location can also have an Altitude. Altitude is expressed by how far the point is above or below the level of the ocean, or Sea Level.

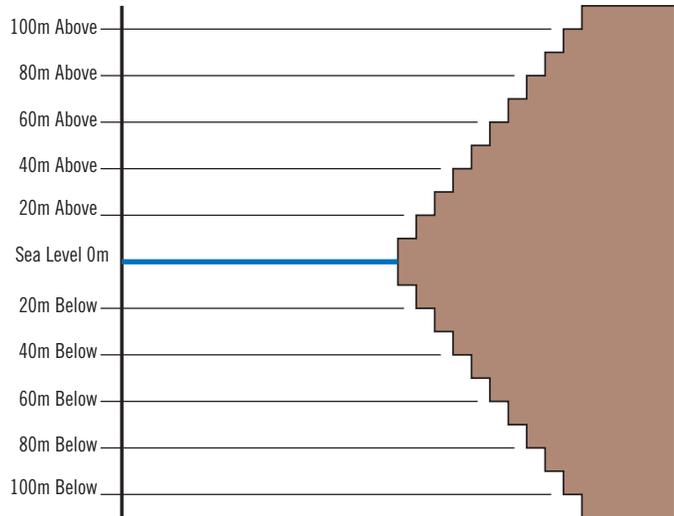

Turn on your Magellan CrossoverGPS by pressing and holding the Power button for approximately 2-3 seconds, or 10 seconds if not in sleep mode. When the Warning screen appears, insert the small end of the USB cable into the USB port on your Magellan CrossoverGPS and the large end into an available USB port on your computer.

Launch the Magellan CrossoverGPS Tools application. From the Magellan CrossoverGPS Tools screen, click on **POI**.




The left side of the window shows the contents of your computer and the right side of the window shows the contents of the Magellan CrossoverGPS.

Opening a POI File

When you start the POI Manager the contents of your “My POIs” folder will be displayed. This is the default location for storing custom POI files.

Locate the POI files you wish to load. When you have selected a file, the Copy To Unit arrow will turn green. Click on the arrow to copy the file to your Magellan CrossoverGPS.

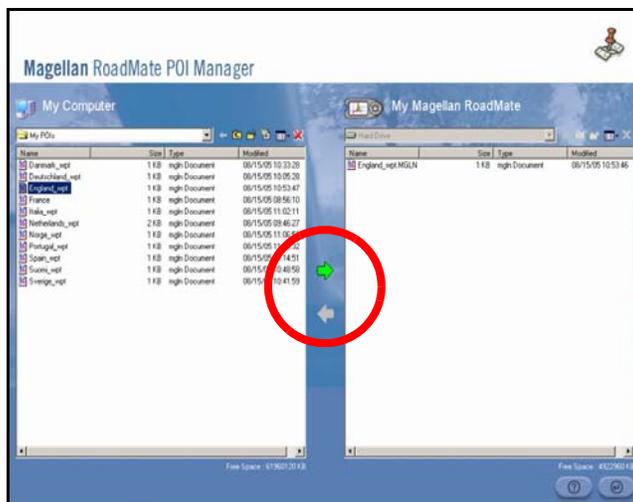


When you have finished copying files, remove the USB cable from the Magellan CrossoverGPS.

Creating a New POI File

There are two ways to create a POI file. You can either add POIs individually, or you can import a character delimited file containing the information required to plot the POIs. To plot a POI, each item must have a name, longitude, and latitude. Longitude and latitude must be in decimal format.

Adding Individual POIs

Click on the **New POI File** Button to launch the POI Editor.

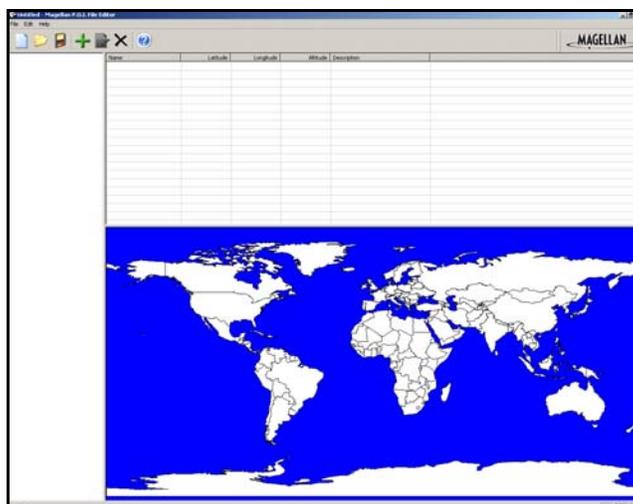


Click on the **Add** button  .

Enter the Name, the Latitude, and the Longitude. The Altitude and Description fields are optional.


Select the Category field and select **New**. A dialogue box will appear asking you to confirm your selection. Enter the Name and assign an Image (icon) for the POI. The Description field is optional.

The Alert feature is an audible alarm that lets you know when you are within a certain distance from the POI. You can set an initial reminder (Distance 1), a secondary reminder (Distance 2).

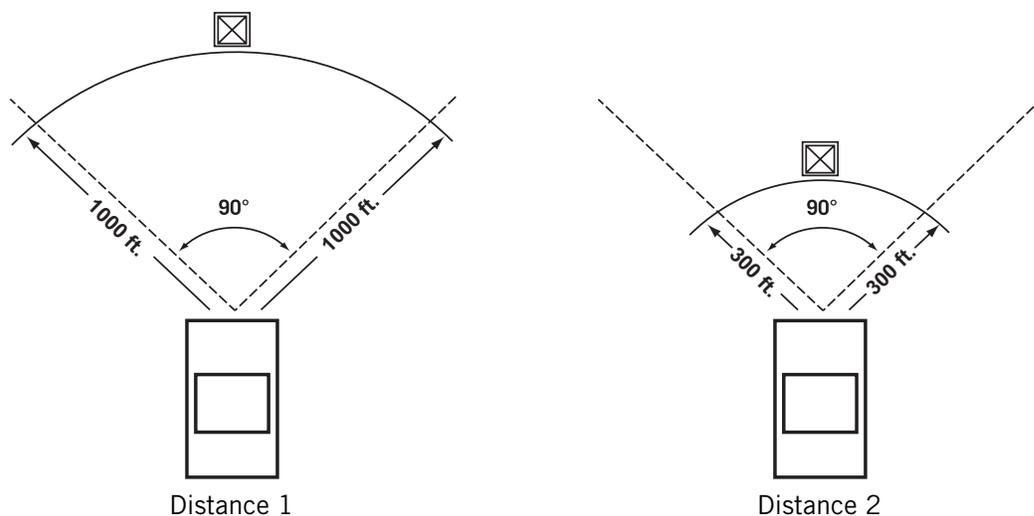

Select your preferred unit of measurement (Metres or Feet).

The Detection angle sets the range of alert in degrees from the POI.

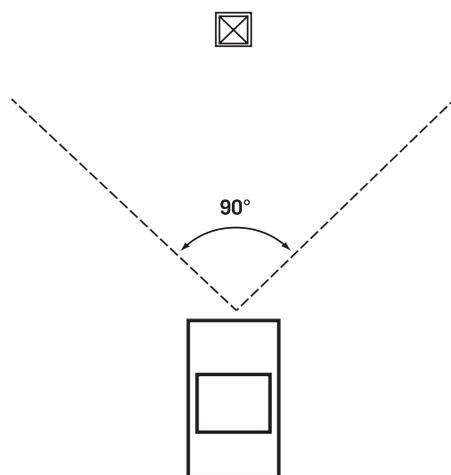

Select Activate alert for this category to enable the alert settings.

When you have finished, select **OK**.

Importing a Data File

The POI Manager software supports ASCII file format (.ASC,.CSV,.TXT); GPS Exchange file format (.GPS,.XML); Magellan Waypoint file format (.WPT,.RTE); and Garmin PCX5 Waypoint file format (.WPT,.RTE).

Click on the **Open** button  .

Select the file you wish to import and click **Open**.

Start by choosing the line in the data file to which you wish to start importing data. If your data file has a header row, this row will generate an error so you should start at line two or below.

Next, choose how the data is separated and click on **Next**.

You now need to define the data columns. Click on the pull down menu and assign a field name to the appropriate column. Click on **Finish**.

Click on The **Save POI file** button. Assign a name to your file and click on **Save**.

Close the POI File Editor. Select the POI file you have just created and click on the transfer button (right arrow) to upload the file to your Magellan CrossoverGPS.

Magellan CrossoverGPS Music Manager

The Magellan CrossoverGPS Music Manager enables you to transfer song files in MP3 or WMA format from your computer to the SD memory card installed in your Magellan CrossoverGPS. The amount of music you can load depends on the size of the memory available on your installed SD card. You can also choose to transfer your music files to a new, optional SD card but the detailed map and speed trap POIs will be unavailable.

Insert the memory card into the memory card slot. Turn on your Magellan CrossoverGPS by pressing and holding the Power button down for approximately 2-3 seconds if in sleep mode. (Ten seconds if not in sleep mode.) When the Warning screen appears, insert the small end of the USB cable into the USB port on your Magellan CrossoverGPS and the large end into an available USB port on your computer.


Launch the Magellan CrossoverGPS Tools application. From the Magellan CrossoverGPS Tools screen, click on **Music**.

The left side of the window shows the contents of your computer and the right side of the window shows the contents of the memory card installed in your Magellan CrossoverGPS.

Locate the song files you wish to load. When you have selected a file, the **Transfer** arrow will turn green. Click on the **Transfer** arrow to copy the file(s) to the memory card.

In the same way, if you have loaded song files onto a memory card from another computer, you can copy the files from the memory card to your computer.

When you have finished copying files, remove the USB cable from the Magellan CrossoverGPS.

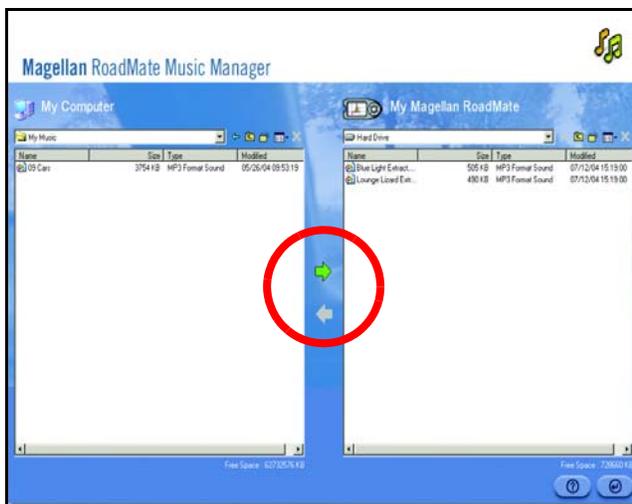

Magellan CrossoverGPS Photo Manager

The Magellan CrossoverGPS Photo Manager enables you to transfer image files in multiple formats from your computer to an optional SD memory card installed in your Magellan CrossoverGPS. The number of images you can load depends on the size of the memory available on your installed SD card. You can also choose to transfer your music files to a new, optional SD card but the detailed map and speed trap POIs will be unavailable.


Insert the memory card into the memory card slot. Turn on your Magellan CrossoverGPS by pressing and holding the Power button down for approximately 2-3 seconds (Ten seconds if the Magellan CrossoverGPS is not in sleep mode.) When the Warning screen appears, insert the small end of the USB cable into the USB port on your Magellan CrossoverGPS and the large end into an available USB port on your computer.

Launch the Magellan CrossoverGPS Tools application. From the Magellan CrossoverGPS Tools screen, click on **Photo**.

The left side of the window shows the contents of your computer and the right side of the window shows the contents of the memory card installed in your Magellan CrossoverGPS.

Locate the image files you wish to load. When you have selected a file, the **Transfer** arrow will turn green. Click on the **Transfer** arrow to copy the file(s) to the memory card. In the same way, if you have loaded song files onto a memory card from another computer, you can copy the files from the memory card to your computer.

When you have finished copying files, remove the USB cable from the Magellan CrossoverGPS.

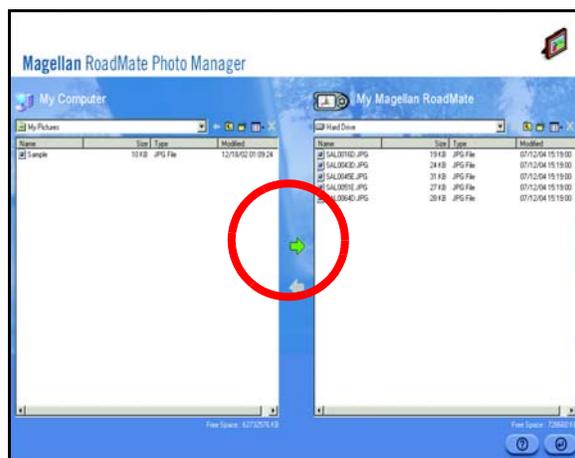

Music Player

The Magellan CrossoverGPS Music Player enables you to play music files in MP3, or WMA format, stored on an SD memory card installed in your Magellan CrossoverGPS. If you have not already done so, you must install the Magellan CrossoverGPS Tools application and transfer files onto the card using the Magellan CrossoverGPS Music Manager.

Note: You must use the Magellan CrossoverGPS PC Toolkit to load music files onto the SD Card.

Select the **Application MENU** button on the Magellan CrossoverGPS and select the Music



The Music Player control pad will appear.



Single Song Play



Use the Navigation key or the Down arrow  to select the song file you wish to play and press **OK**.



The song will begin playing automatically.

At the top of the screen the name of the song, the artist (if available), the selected play mode, the elapsed time, and the song duration is displayed .

Press the **Play/Pause** button to suspend song play. To resume song play, press the **Play/Pause** button again.



Press the **Stop** button to stop song play. Once a song has been stopped, pressing the **Play/Pause** button will start the song from the beginning.

Multiple Song Play

Multiple song play enables you to create a “playlist”. A playlist consists of one or more songs in a group that can be played continuously.

Select **Playlist** 

The Playlist menu will appear. To exit the playlist menu, select **ESC**.



Play

To hear a previously created playlist, select **Play**.

Use the Up or Down arrow to select the desired playlist.

Select **OK**.

The songs will begin playing automatically in order.

Create

To make a new playlist, select **Create**.

Use the backspace key (<-) to erase the default name and the keypad to enter a new name for your playlist. When you have finished, select **OK**.

The next screen to appear shows the song files stored on the memory card on the left side, and the playlist on the right side.

Use the arrow buttons on the left side of the screen to highlight the Music folder and then, select **List Files**.

Use the arrow buttons to highlight the song files you wish to add to the playlist. Select **Add to Playlist** (right arrow) to add the highlighted song to the playlist.

Continue adding files to the playlist. When you have finished, select **OK**.

Modify

Modify enables you to add or remove songs from the selected playlist. Select **Edit**.

To remove a song from the playlist, use the arrow keys on the right side of the screen to highlight the desired song and then select **Remove From Playlist** (left arrow).

Use the arrow buttons on the left side of the screen to highlight the song files you wish to add to the playlist. Select **Add to Playlist** (right arrow) to add the highlighted song to the playlist.

Continue adding files to the playlist. When you have finished, select **OK**.

Delete

To remove a playlist, select **Delete**.

Select the playlist you wish to delete and select **OK**.

A dialogue box will appear asking you to confirm your selection. Select **Yes** to delete the playlist.

Rename

If you want to change the name of a playlist, select **Rename**.

Select the playlist you wish to rename and then, select **OK**.

Use the backspace key (<-) to erase the name and the keypad to enter a new name for your playlist. When you have finished, select **OK**.

Play Mode

While in single song play, select **Play Mode** for song play options.

Repeat All - Repeats all the songs in the current playlist starting at the beginning of the order. This feature only works if there are two or more songs in the playlist.

Repeat - repeats the song that is currently playing.



Preview - Plays the first five seconds of each song in the current playlist.

Normal - Plays all songs in the current playlist in order.

Random - Plays the songs in the current playlist in random order.

List Songs

Select **List Songs** to view the current playlist.

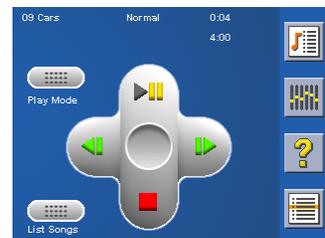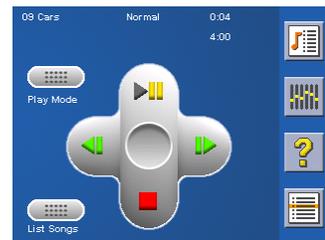

Equaliser

The Equaliser provides advanced sound options so you can customise the quality of the playback. The equaliser will only be available for MP3 format sound files. Select an equaliser preset from the following pre-configured options: Default (flat), Jazz, Classical, Rock, Techno, Dance Hall, Live, Full Bass, Full Treble, and Full Bass & Treble. You are not however able to manually set the equaliser.

Select the **Equaliser**  .

Select the equaliser preset by pressing the button at the top of the screen  .

When you are satisfied with your selection, select **OK**. To exit without setting the equaliser, select **ESC**.

Help

Select **Help**  for descriptions of the Music Player buttons.

Photo Viewer


The Magellan CrossoverGPS Photo Viewer enables you to view image files in JPG and BMP format, stored on an SD memory card installed in your Magellan CrossoverGPS. If you have not already done so, you must install the Magellan CrossoverGPS Tools application and transfer files onto the card using the Magellan CrossoverGPS Photo Manager.

Select the **Application MENU** button on the Magellan CrossoverGPS.

Select the **Photo Viewer**



The Photo Viewer screen will appear. The Photo viewer will show the contents of the SD or MMC card installed in your Magellan CrossoverGPS.

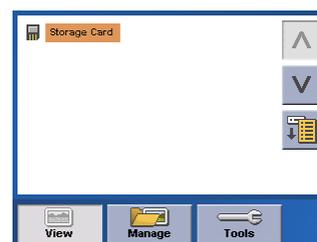

View Single Photo


The next screen to appear shows the file structure of the memory card.

Select **List Files**



Use the Navigation key or the Down arrow  to highlight the photo you wish to view and select **View**.

While viewing the image, double-clicking on the image (i.e. pressing twice on the screen) will show the image in full screen view. You can then cycle through the images by pressing on the left or right arrow.

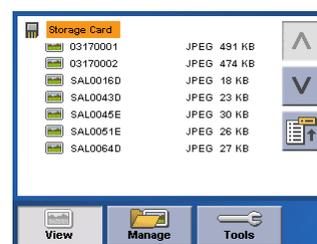

Previous Image (left arrow)



Press the right arrow button to view the previous image in the folder. This button is greyed out (not functional) when viewing the first image in the folder.

Zoom

Press the Zoom button to reduce or enlarge the current photo. The top of the zoom menu shows the current zoom level. Select another zoom level from the list of presets. Select Best Fit to adjust the zoom to fit within the display boundaries; select Actual Size to display the image at 100%; select 25% to 150% to reduce or enlarge the image to the preset level.

Slideshow

Press the Slideshow button to browse through all the photos in the Pictures folder automatically.

Pan

If you enlarge an image beyond the screen boundaries, press the Pan button to enable image scrolling. While enabled, you can drag the image in any direction to view other areas of the image. Press the Pan button again to disable Pan mode.

Rotate Image

Press the Rotate Image button to rotate the image 90° counterclockwise, 90° clockwise, or 180°.

Next Image (right arrow)

Press the right arrow button to view the next image in the folder. This button is greyed out (not functional) when viewing the last image in the folder.

ESC

Press **ESC** to return to the folder list.

Manage Photos

List View

Press List view to show the files in a hierarchical list view.

Thumbnail

Press Thumbnail to show the files as thumbnails.

Rename

To change the name of the selected file or folder, press Rename.

Use the backspace key (<-) to erase the name; and the keypad to enter a new name for your file. When you have finished, select OK.

Properties

To view information on the selected file or folder, press **Properties**. A thumbnail of the image will be displayed along with the width and height in pixels, the size, and the format (image type). When viewing the properties for folders, width, height, and format are not shown. Size shown is the combined size of all images in the selected folder.

When you are finished viewing the properties, select **OK**.

Tools

Preferences

General - In General preferences, you can set the default file view to either thumbnail or file list view.

Slideshow - The slideshow preferences enable you to set the view properties, the sequence of photos, the transition between photos, and the duration between photos.

Background - The background preferences enable you to set the colour of the background behind the photo being viewed.



Delete Files

Use the arrow keys to select the file or folder you wish to delete. Press the **Delete** button (trash can).

A dialogue box will appear asking you to confirm your selection. Select **Yes** to delete the file.

About

This option will display the current version of the Photo Viewer software.

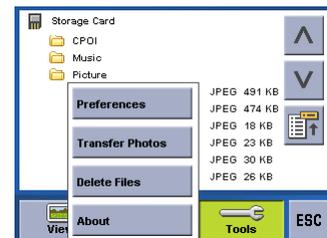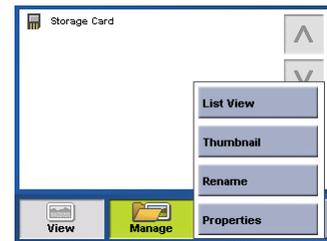

Information

Registration

Please ensure that you register your Magellan CrossoverGPS at www.magellanGPS.com. By registering you will be informed of the latest product updates.

Technical Support

Visit the support section of our website at www.magellanGPS.com for technical information about your Magellan CrossoverGPS and Frequently Asked Questions.