



Silhouette II™ Owner's Manual

READ AND SAVE THESE INSTRUCTIONS!

Safety and the proper operation of your Casablanca fan both require a thorough knowledge of the product and proper installation; therefore, before attempting to install and operate your Casablanca fan, read this owner's manual completely and carefully. Retain this manual for future reference.

Caution: To avoid possible electrical shock, make certain that electricity is turned off at the circuit breaker or fuse box before attempting any installation procedure.

CONTENTS

INTRODUCTION	2
Before You Start	2
Safe Use	2
MOUNTING RECOMMENDATIONS	3
General Guidelines	3
Getting Started	3
CEILING MEDALLION PREPARATION AND INSTALLATION	4
Ceiling Medallion Bracket Installation	4
MOTOR INSTALLATION	5
Motor Housing Installation	5
Medallion Plate Installation	6
BLADE PREPARATION AND INSTALLATION	6
LIGHT FIXTURE INSTALLATION	7
VERSA•TOUCH2™ CONTROL INSTALLATION	8
Control Bracket Installation	8
Changing Transmitter Frequency Setting	9
Remote Operation	9
TROUBLESHOOTING TIPS	10
CARE RECOMMENDATIONS	11
AUTHORIZED SERVICE CENTERS	12
PRODUCT SPECIFICATIONS	14

INTRODUCTION BEFORE YOU START


- **CAUTION: RISK OF ELECTRICAL SHOCK!** All wiring must be performed in accordance with national and local electrical codes. If you are unfamiliar with the wiring codes, you should use a qualified electrician. To avoid overheating and possible damage to other equipment, do not install control to a receptacle, fluorescent light fixture, motor operated appliance, or transformer-supplied appliance.
- This fan is designed to be installed on an existing electrical outlet box. The outlet box must be UL Listed for ceiling fan installations, if it is not, a new box must be installed. Casablanca extension poles are available for sloped or high ceiling installations.
- This ceiling fan requires a grounded electrical supply of 120 VAC, 60 Hz and a minimum 15 amp circuit. The maximum current requirement for the fan with light fixture is 3.8 amps. The fan uses about 1 amp or 100 watts. Maximum light current is about 1 amp or 100 watts of lighting.
- Where wire nuts are employed, be sure all bare wires are within the connectors. When installing the canopy hatch, make sure all wires are within the canopy and that no wires are being pinched.

**For best performance and for your warranty to be valid,
use only genuine Casablanca blades, light fixtures, and accessories.**



SAFE USE

- The blades in each pack are matched for equal weight to assure smooth fan operation. If more than one fan is being installed, be careful not to mix blades from different cartons.
- Inspect the contents of your carton for possible shipping or handling damage and report any such damage directly to your authorized Casablanca dealer.
- It is always a good idea to have an assistant to help with the installation.
- When cleaning, painting, or working near your fan, be very careful of the fan and blades. Always turn the power OFF to the ceiling fan before servicing it, working on it, or replacing lightbulbs.
- Never insert anything into the path of the fan blades while the fan is in operation.
- Never install a fan over a pool or spa.
- Never operate a fan that has been damaged in any way. Contact Casablanca Fan Company by calling 1-888-227-2178, or contact your local authorized Casablanca dealer for assistance in obtaining service.

Fuse Box
(Remove fuse for the
circuit you will be
working on)

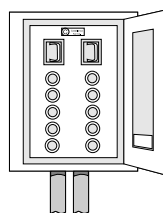

Circuit Breaker
(Trip breaker for the
circuit you will be
working on)

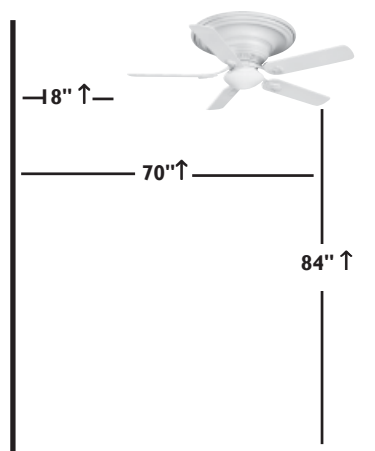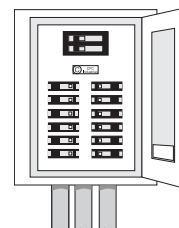




MOUNTING RECOMMENDATIONS GENERAL GUIDELINES

Before mounting your Casablanca fan, read the following helpful recommendations. The location of the fan, air circulation, and fan size are all important factors to consider before installation.

Location

Ceiling fans have practical uses in almost every room in your home. We suggest you follow these mounting recommendations as you decide where to install your Casablanca fan.

- This fan is not suitable for installation on a sloped ceiling.
- For safety reasons, the fan blades must be a minimum of 7' above the floor.
- Do not locate the fan in a doorway or above a swinging door.
- In any installation, the tips of the blades must be at least 18" from the wall in order to provide sufficient clearance for the blades.
- In bedrooms, fans work best when mounted above the foot of the bed.
- In low ceiling locations, our optional Low Ceiling Adaptor (LCA—available at extra cost) can be used to gain 3½" on certain fan models.
- Over pool tables, be sure to provide plenty of clearance to avoid damage from pool cues.
- In kitchens be sure to allow for open cupboard doors to clear the fan blades.
- Do not install a fan close to, or over, a pool or spa. High humidity combined with corrosive gases will destroy the finish and warp the blades.

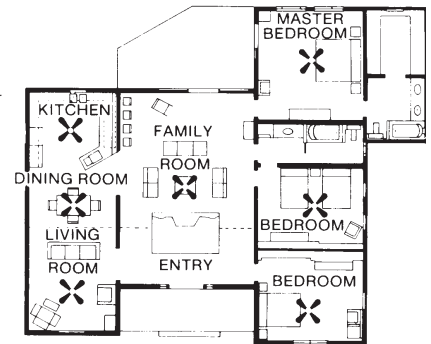

Fan Size

Variable fan speed capability permits the use of a full-size 52" fan even in smaller rooms. For very large rooms, two fans may be needed.

GETTING STARTED

Using Existing Ceiling Fixture Outlet Box

After turning the power OFF at its source (either circuit breaker or fuse box), lower the old fixture and disconnect the wiring. Check the ceiling fixture outlet box to be sure that it is marked "Approved for Ceiling Fan Mounting." If it is not, a new box must be installed.

Installing a New Ceiling Fixture Outlet Box

If you do not have an existing fixture located where you wish to place your Casablanca fan, an approved ceiling fixture outlet box must be installed and wired.

WARNING!

To reduce the risk of fire, electrical shock, or personal injury, mount to outlet box marked "Acceptable for Ceiling Fan Support" using the mounting hardware provided with the outlet box.

CEILING MEDALLION PREPARATION AND INSTALLATION

CEILING MEDALLION HARDWARE (not to scale)



Ceiling Medallion Bracket



Motor Assembly



Motor Housing



Medallion Plate



**Screw Pack A:
Adjuster Screws (4)**



**Screw Pack B:
Motor Housing Screws (3)**




**Screw Pack C:
3" x 10-32"
roundhead screws (2)
1 1/2" x 8-32"
roundhead screws (2),
washers (4),
nuts (4)**

Step 1a: Lay ceiling medallion bracket on flat surface, flat side down. Insert four adjuster screws (Pack A) in outer screwholes as shown and hand-twist two full turns.

Step 1b. Insert motor housing screws (Pack B) into three screwholes as shown in picture and hand-twist two full turns.

Step 1c. Turn ceiling medallion bracket over and raise flat side to ceiling.

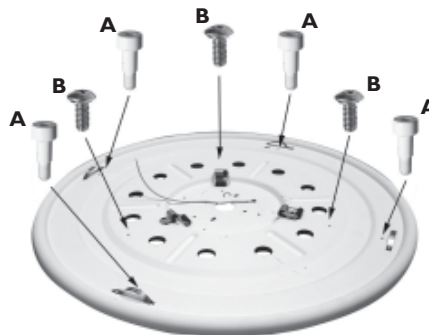

CEILING MEDALLION BRACKET INSTALLATION

Step 2a. Remove the knockout plug in the center of the outlet box.

Step 2b. Route the outlet box wires through the center hole of the ceiling medallion bracket. Attach the ceiling medallion bracket to the outlet box with the screws provided (Pack C), ensuring that the outlet box wires are not pinched by the washer.

CAUTION:

To reduce the risk of personal injury, use only the mounting hardware provided with the approved outlet box to install the ceiling medallion bracket.

WARNING!

Support directly to building structure only.





MOTOR INSTALLATION

NOTE: You will need an assistant to help hold up the ceiling medallion bracket and motor in steps 3 and 4.

Step 3a. Remove the paper shield from the motor.

Step 3b. Attach one of the hooks on the outside of the motor onto one of the loops hanging from the ceiling medallion bracket.


Step 3c. Attach the fan wires to the ceiling medallion bracket wiring by placing the bare end of the wires side by side and then securing with a wire nut (Pack C). Test that the connection is secure by pulling on the wire nut. Connect in this order:

- GREEN leads from ceiling medallion bracket to GROUND conductor of power source. Secure with wire nut.
- WHITE wire from fan to white NEUTRAL wire in ceiling medallion bracket. Secure with wire nut.
- BLACK power wire from fan to BLACK power wire in ceiling medallion bracket. Secure with wire nut.

NOTE: If the color of your ceiling wires differs from that described, consult an electrician.

Step 3d. Trim excess motor wires to six inches and tuck inside.

Step 3e. Attach other two hooks.

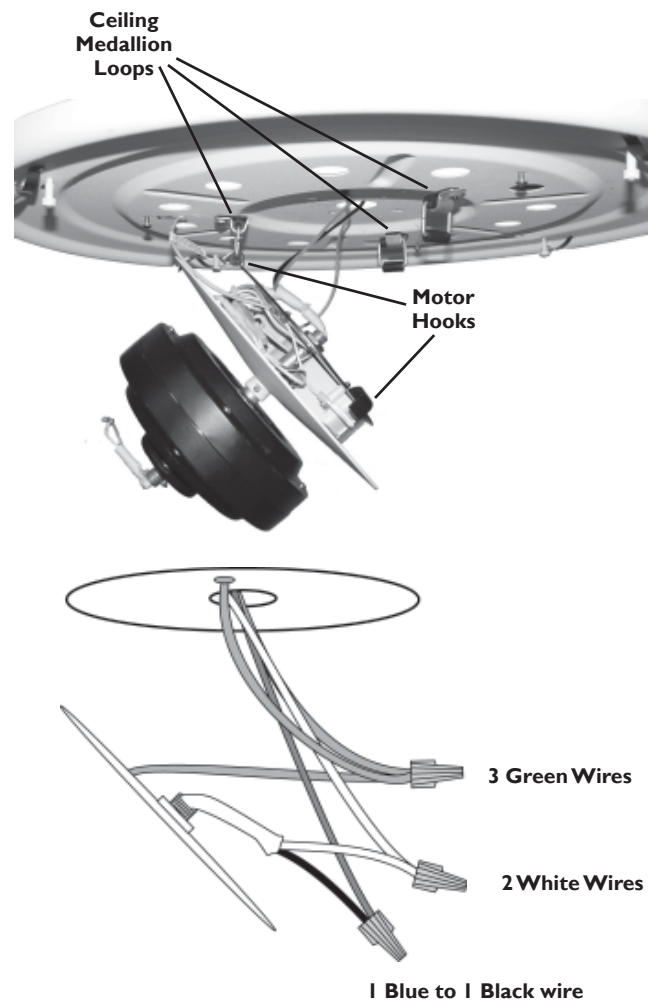

MOTOR HOUSING INSTALLATION



Step 4. Align the three motor housing (B) screws into the keyholes on the motor housing and twist until secure. Tighten screws using the Phillips-head screwdriver.

NOTE: When aligning the screws, center the motor housing so that there is an even amount of space all around the motor.



MEDALLION PLATE INSTALLATION

Step 5. Raise the medallion plate to the ceiling medallion bracket and fit the four keyholes into the adjuster (A) screws. To align, insert an alignment tab onto each of the four adjustment screws with the printed side facing up. Align the raised dots with the alignment tabs. Twist the medallion plate clockwise until locked into place. Pull out the four tabs.

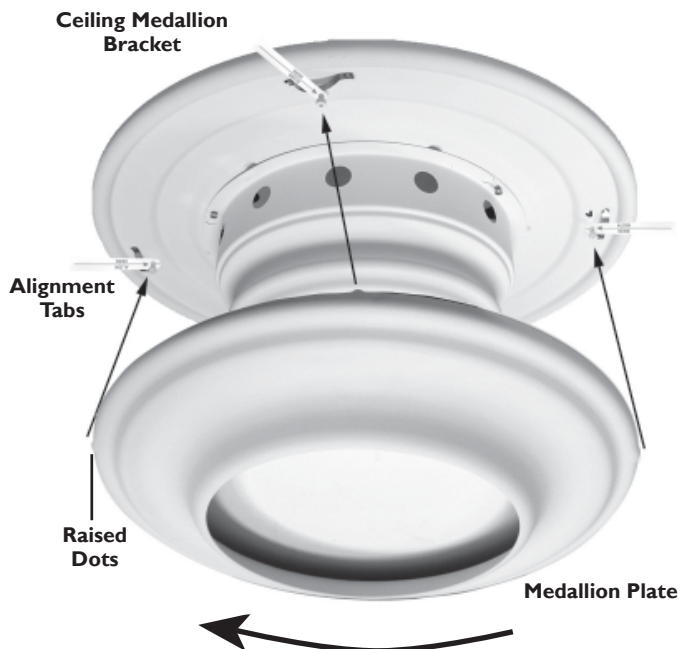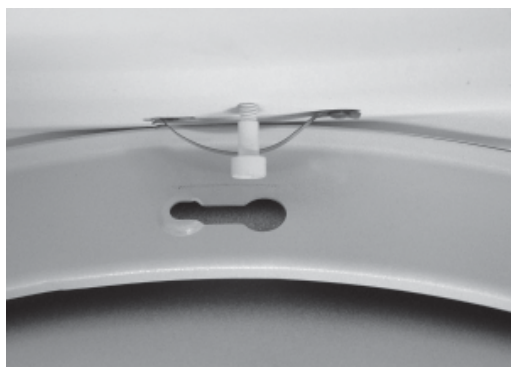

BLADE PREPARATION AND INSTALLATION

BLADE HARDWARE (not to scale)



Blades (5)



Blade Irons (5)



Blade Medallions (5)




**Screw Pack D
Blade Screws (21)**



**Screw Pack E
Blade Iron Screws (11)**

Step 6a. Sandwich a blade between a blade medallion and blade iron. Thread four blade screws (Pack D) through the screwholes and tighten using the provided screwdriver. Repeat for each blade.

Step 6b. Attach each blade/blade iron assembly to the motor by threading two blade iron screws (Pack E) through the matching holes in the blade iron and the motor. Using the Phillips screwdriver, tighten the screws loosely. After all five blade assemblies have been installed, tighten the screws securing with the screwdriver.

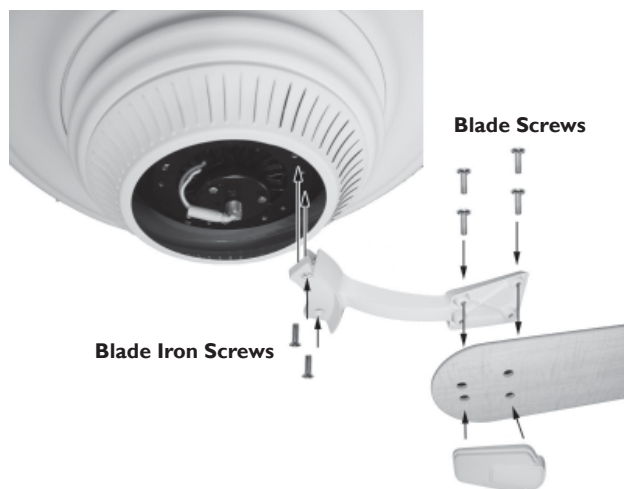



LIGHT FIXTURE INSTALLATION

LIGHT FIXTURE HARDWARE (not to scale)



Step 7a. Insert three switch housing screws (Pack F) into the screwholes in the center of the motor.

Step 7b. Hold the switch housing up to the motor. Feed the wires through the center hole and align the switch housing screws (F) with the keyholes. Twist the switch housing clockwise.

Step 7c. Tighten all three screws using the screwdriver.

Step 7d. Remove the ceramic wire nuts from the wires on the socket plate and set aside for use in the next two steps.

Step 7e. Attach the **WHITE** wire on the socket plate to the **WHITE** wire on the switch housing. Secure with a ceramic wire nut.



Step 7f. Attach the **BLACK** wire on the socket plate to the **BLUE** wire on the switch housing. Secure with a ceramic wire nut.

Step 7g. Align the three holes on the socket plate with the screwholes on the switch housing. Insert three socket plate screws (Pack G) and tighten until secure using the screwdriver.

Step 7h. Remove the lightbulb shield from the socket plate. Insert one end of the halogen bulb into the socket. Push the end of the socket, then insert the other side of the halogen bulb into the socket. Re-insert lightbulb shield.


Step 7i. Position the indentations in the outer rim of the glass shade so that they line up with the tabs on the inside surface of the fan light fixture rim.

Step 7j. Carefully lift the glass shade up inside the light fixture as far as it will go. Rotate the shade in a clockwise direction until it is held tightly in place by the three tabs.

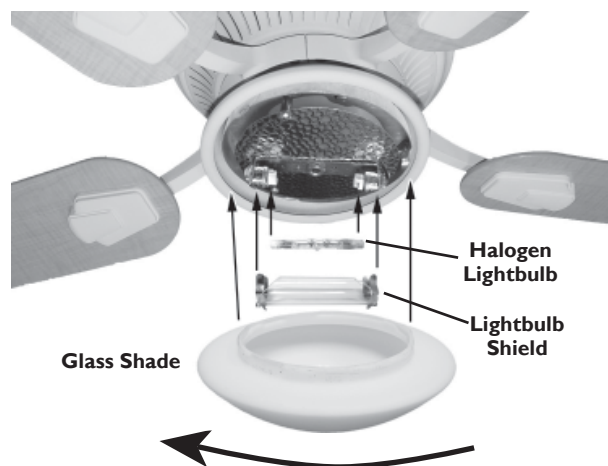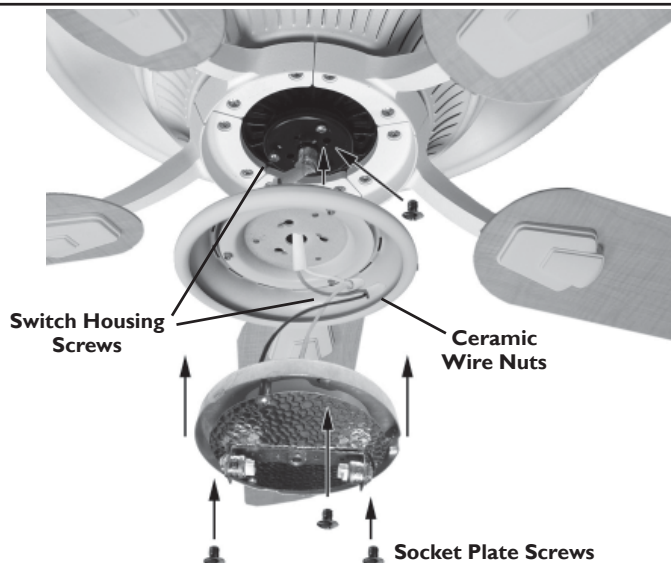

CAUTION:

The halogen bulb is very delicate and should not be handled with bare hands. After removing it from the box, grasp it gently by the plastic covering or a soft cloth.

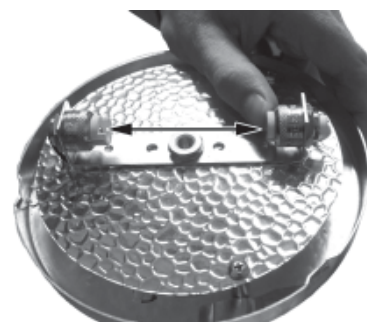



VERSA•TOUCH2™ CONTROL INSTALLATION

VERSA•TOUCH2™ HARDWARE (not to scale)



**W-72
Control**



**W-72
Control Holder**



12v Battery



**Drywall Anchor
6-32 (2)**



**Wood
Screw
1" (2)**



**Screw
6-32 X 3/8" (2)**




**Screw
6-32 X 1" (2)**

CONTROL BRACKET INSTALLATION

SAFETY FIRST: To reduce the risk of electrical shock, this fan must be installed with an isolating wall control/switch. **CAUTION!** Do not use with wall dimmer.

Step 8. Follow instructions for the type of transmitter control bracket you will be using.

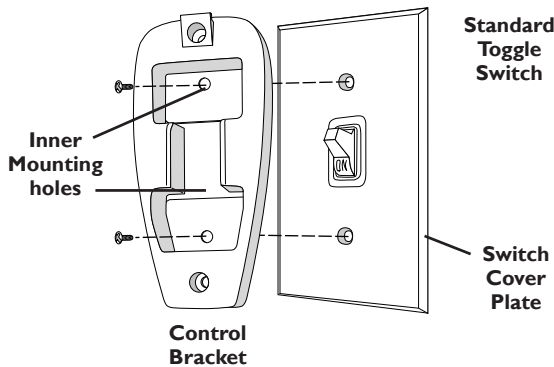


Standard Light Switch

Step A. Remove the two screws holding the switch cover plate. Do not remove the cover plate.

Step B. Orient the control bracket as shown and line up the two inner mounting holes with those on the switch.

Step C. Insert and tighten the screws using the provided screwdriver.

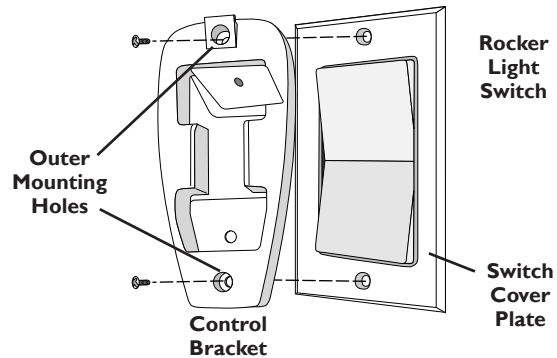

Rocker Light Switch

Step A. Break off the two tabs by pushing outward.

Step B. Remove the two screws holding the switch cover plate. Do not remove the cover plate.

Step C. Orient the control bracket as shown and line up the two inner mounting holes with those on the switch.


Step D. Insert and tighten the screws using the provided screwdriver.

Wall Installation

Step A. Locate a 2x4 wall stud in a convenient location.

Step B. Orient the control bracket as shown over the 2x4 stud.

Step C. Insert the 1" wood screws in either the inner or outer mounting holes and tighten using the provided screwdriver.

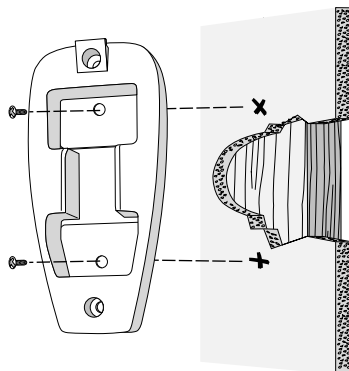

NOTE: The wall anchors and 6-32 x 1" screws may be used in situations where mounting to a stud is not possible. Use the inner mounting holes. After securing the anchor, discard the anchor's pointed screws and use the 6-32 decor ovalhead screws supplied.

**Anchor
Panhead
Screw**



Drywall Anchor



**Wood
Screw 1"**



**Decor Ovalhead Screw
6-32 X 1"**



REMOTE OPERATION

Fan Control

To start the fan. Press the selected speed button to run the fan at the desired speed.

LOW=Low speed **MED**=Medium speed **HIGH**=High speed

To turn off the fan, press the **FAN OFF** button.

Airflow Direction


To reverse the airflow, press the **REVERSE** button. **REVERSE** operates at any speed whether the fan is on or off. The fan returns to its set speed after reversing.

Light Control

Turn the light on or off independently from the fan by pressing the **LIGHT** button. If you press the button for more than 0.7 seconds, it becomes a dimmer. The light varies from "bright" to "dim" over approximately 8 seconds. If you continue to hold the **LIGHT** button, this sequence will reverse when the light reaches its brightest or dimmest level. Release the button when the desired level is reached.

Auto Resume

Quick (pressing less than 0.7 seconds) on/off operation of the **LIGHT** button maintains the desired brightness level set previously.

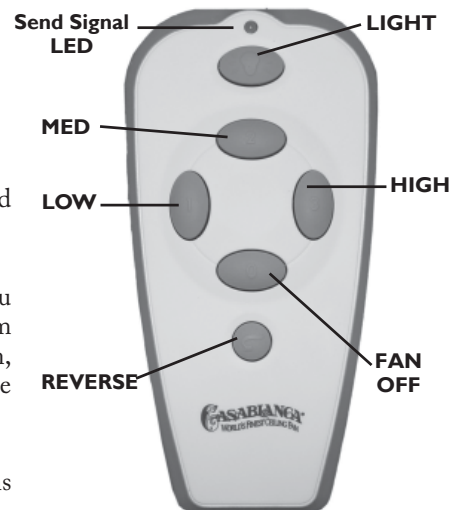

CHANGING TRANSMITTER FREQUENCY SETTING

Note: All fans leave the factory set to "00000."

You will only have to change the dip switch settings in the remote if you are using more than one fan in the same area and want to control them separately.

Step 1. At the circuit breaker or fuse box, turn the power off for the fan you want to change.

Step 2. Open the battery door of the Versa•Touch control and remove the batteries.




Step 3. Change the dip switch settings, assuring that they are different from the previously installed Versa•Touch fan.

Step 4. Re-install the batteries and the battery door on the control.

Step 5. At the circuit breaker or fuse box, turn the power back on for the fan whose frequency you are changing.

Step 6. Within 20 seconds of restoring power, push the **HIGH**, **MED**, and **LOW** buttons (in that order).

Note: You may want to label your controls to assure you do not mix them up.

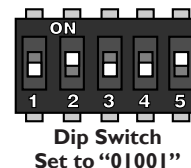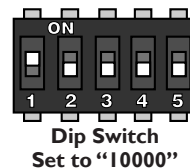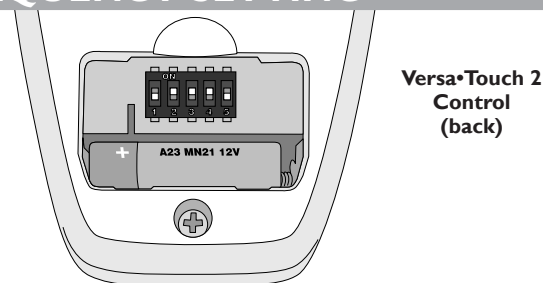

WARNING!

Do not turn the power off at the circuit breaker, then back on, for the previously installed Versa•Touch2 fan(s), as you may inadvertently change the frequency settings for it as well.


If the fan is not functioning after installation:

Step 1. Check to make sure that batteries are installed correctly in the control.


Step 2. Turn the power off to the fan (from the circuit breaker) for at least 5 seconds.

Step 3. Turn the power back on (at the circuit breaker) and push the **HIGH**, **MED**, and **LOW** buttons—in that order—within 20 seconds.

Step 4. The fan should now function properly.

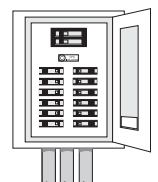

Circuit Breaker or Fuse Box

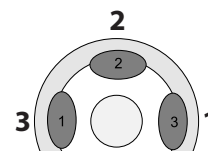

Press in this order to set new frequency:

1. HIGH 2. MED 3. LOW

TROUBLESHOOTING TIPS

Please refer to this troubleshooting guide before requesting service or contacting your dealer for assistance.

PROBLEM	POSSIBLE REMEDIES
Fan will not start	<ul style="list-style-type: none"> • Check the main circuit fuses, circuit breakers, and wall switch position. Check all wire connections. Make sure the power is turned off during this inspection. • The 9-pin connector is not making good contact. Check the 9-pin connector in the receiver mounted in the switch housing (see receiver diagram on page 11). • The battery is weak. Install a fresh battery. • The fan receiver is defective. Replace fan receiver. • Check the frequency setting: Turn the power off at the circuit breaker, only for the fan that is not functioning. Check that the jumper switches match in both the receiver and the transmitter.
Fan wobbles or shakes excessively	<ul style="list-style-type: none"> • Be sure the canopy pin is set properly into the slot on the ball. • Check that the bladeholders have not been bent during installation and the blades are balanced. • The hanger bracket and/or ceiling outlet are attached too loosely. Make sure the hanger bracket is attached tightly to the ceiling outlet box and the downrod assembly is secured firmly. • The downrod is attached to downrod base too loosely. Make sure all the screws are securely tightened.
Fan is noisy during operation	<ul style="list-style-type: none"> • Check and tighten the light fixture retaining screws, glass shade screws, and/or lightbulb(s). • Tighten the canopy screws and mounting plate assembly. Make sure the wire nuts inside the canopy and switch housing are not touching the metal parts and that they have not fallen off the wire splices. Tighten as necessary. • Tighten the blade holders to the flywheel (or direct drive motor) and the blades to the bladeholder screws. • Make sure all screws in the motor housing are snug but not overly tight.
Fan does not run on low speed	<ul style="list-style-type: none"> • If fan is new, it may need to be “broken in.” Run at high speed for several days.
Battery life is short	<ul style="list-style-type: none"> • Replace with alkaline batteries.
Light works, but fan does not work	<ul style="list-style-type: none"> • The fan wires are not connected properly. Follow the instructions in Step 3c.
Fan and light run only on full speed	<ul style="list-style-type: none"> • The fan receiver is defective. Replace fan receiver.
Fan is missing one speed	<ul style="list-style-type: none"> • The fan receiver is defective. Replace fan receiver.
Fan does not change speed, but light works	<ul style="list-style-type: none"> • The fan receiver is defective. Replace fan receiver.
Reverse does not work	<ul style="list-style-type: none"> • The fan receiver is defective. Replace fan receiver.
Fan starts working by itself	<ul style="list-style-type: none"> • There is frequency interference. Change frequency as described on Page 9.
Fan operates only when transmitter is close	<ul style="list-style-type: none"> • Check that antenna wire is not touching metal plate.
Fan works, but light does not dim	<ul style="list-style-type: none"> • The fan receiver is defective. Replace fan receiver.
Fan works, but light does not work	<ul style="list-style-type: none"> • The fan receiver is defective. Replace fan receiver. • The light socket is broken. Replace socket. • A lightbulb is defective. Replace lightbulb.



CARE RECOMMENDATIONS

Fan Finishes

- For cleaning, a soft brush or lint-free cloth should be used to prevent scratching the finish.
- A vacuum cleaner brush nozzle can remove heavier dust.
- Surface smudges or an accumulation of dirt and dust can be removed easily by using a mild detergent and slightly dampened soft cloth. An antistatic agent may be used, but *never use abrasive cleaning agents* as these will damage the finish.

Blades

- Wood-finish blades should be cleaned with a furniture polishing cloth. Occasionally, a light coat of furniture polish may be applied for added protection and beauty.
- For painted and high-gloss blades, surface smudges or an accumulation of dirt and dust can be removed easily by using a mild detergent and slightly dampened soft cloth. An antistatic agent may be used, but *never use abrasive cleaning agents* as these will damage the finish.

No Need for Lubrication

- *Never lubricate this fan!* The precision motor at the heart of your Casablanca fan features sealed bearings that are lubricated for life.
- Do not attempt to oil the motor.

Changing Lightbulbs

- Be sure to turn the power to OFF at the wall switch or circuit breaker before changing lightbulbs.
- Replace bulbs with the same type as you removed from the light fixture.
- The maximum wattage rating for this fan's light kit is 100 watts.

For questions or to locate the nearest Casablanca Authorized Service Center call toll free: 1-888-227-2178
or visit us on the web at: www.casablancafanco.com

This device complies with Part 15 of the FCC rules. Operation is subject to the following two conditions:

1. This device may not cause harmful interference.
2. This device must accept any interference received, including interference that may cause undesired operation.

This equipment has been tested and found to comply with the limits for a class B digital device, pursuant to Part 15 of the FCC rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses, and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communication. However, there is no guarantee that the interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

NOTE: Any changes or modifications to the transmitter or receiver not expressly approved by Casablanca Fan Company may void one's authority to operate this remote control.

AUTHORIZED SERVICE CENTERS

STATE/CITY	ZIP	SERVICE CENTER NAME	PHONE	TYPE
ALABAMA				
MOBILE	36618	AZALEA CITY SERVICE CENTER	251-341-0663	
TUSCALOOSA	35405	LTG. & APPL./LIGHTING PLUS	205-345-8900	
HUNTSVILLE	35816	SOUTHERN HOME & HEARTH INC.	256-534-1715	
ALASKA				
ANCHORAGE	99518	PRIMARY ELECTRIC INC.	907-563-7988	
ARIZONA				
TUCSON	85735	DESERT BREEZE FAN & ELEC.	520-623-4646	
PHOENIX	85019	FAN-TASTIC ELECTRIC	602-866-1090	
GREEN VALLEY	85614	GOBLE ELECTRIC	520-625-4938	
SEDONA	86336	OAK CREEK AUDIO	928-282-5625	
PRESOTT	86305	MARC PARENT/ELECTRICAL ETC.	928-778-5935	
LAKE HAVASU CITY	86403	SOUND BANK ELECTRONICS	928-855-1129	ISO
SCOTTSDALE	85254	VANDERVOORT ELECTRIC INC.	602-996-9637	
GLENDAL	85308	BEA'S LAMPS & FANS	602-978-0004	ISO
PHOENIX	85032	THE BRASSWINDS SHOPPE	602-482-1881	
YUMA	85364	CURLEY'S LITEHOUSE	520-782-4353	
MESA	85210	LOUD INC. DBA FANS PLUS	480-827-9302	
MESA	85204	GALLERY OF FANS	480-962-0477	
TUCSON	85716	ILLUMINATIONS ON BROADWAY LLC	520-325-3031	OWTS
YOUNGTOWN	85363	QUALITY HOME FAN DOCTOR	602-274-6649	
TUCSON	85711	SUN LIGHTING CO.	520-322-4303	OWTS
ARKANSAS				
LITTLE ROCK	72212	THE RANDY HALL CO. INC.	501-227-9915	
CALIFORNIA				
SANTA ROSA	95404	ASEF'S APPLIANCE SERVICE	707-575-3737	
GRASS VALLEY	95945	ACCENT LIGHTING	530-477-5483	ISO
JAMESTOWN	95327	DASILVA'S LAMP & CEILING	209-984-4035	
SANTA MARIA	93455	EVER-READY ELECTRIC	805-934-7091	
AUBURN	95603	THE FAN DOCTOR	530-823-8768	
SAN DIEGO	92115	JOHN SHEPARD'S ELECT. SERV.	619-460-4132	
FRESNO	93704	LARRY MC COLLUM	559-438-5764	
NEWHALL/SANTA CLARITA	91321	DAN MARTIN	805-252-5769	
ATASCADERO	93422	MC NAMARA ELECTRIC INC.	805-466-1854	ISO/OWTS,
CLOVIS	93612	OMEGA SERVICE INC.	559-299-0495	ISO
SIMI VALLEY	93065	PURCOM SYSTEMS	805-583-8171	
CORONA	92881	JERRY F. PRYOR	909-279-7775	ISO
BAKERSFIELD	93309	RB ELECTRIC & LTG.	805-831-2438	15-MILE RADIUS
SAN MARCOS	92069	RD ELECTRICAL CONTR.	760-727-1215	
STOCKTON	95205	RISDO ELECTRIC INC.	209-466-0781	
MOORPARK	93021	R.J. SIEG ELECT. CO.	800-799-0808	
SHINGLE SPRINGS	95682	JOHN ROZOWSKI CONST.	530-677-3850	
CATHEDRAL CITY	92234	R & R SERVICE	760-324-2942	
PLEASANTON	94588	S & L LIGHTING SERVICES	925-895-3762	
RIVERSIDE	92505	VERNE SMITH	951-687-9552	
TEMECULA	92592	TAB ELECTRIC	951-303-0850	
SO. LAKE TAHOE	96150	TAHOE POOL SERVICE	530-541-4958	
CANYON LAKE	92587	VILLAGE LIGHTS	951-244-2910	ISO
VALENCIA	91354	FANTASTIC FAN SERVICE	800-800-3871	
SAN JOSE	95123	SAL ZAMORA'S FAN REPAIR	510-742-5560	
SACRAMENTO	95819	A & A LIGHT FIXTURES	916-452-7641	ISO
TULARE	93274	ANCHOR LIGHTING	209-688-0696	OWTS
FRESNO	93710	ENERGY HOUSE	559-432-1500	ISO
SAN MARCOS	92069	FAN DIEGO #1	760-743-3267	ISO
SAN DIEGO	92111	FANDIEGO	619-292-9244	ISO
RANCHO MIRAGE	92270	FANDIEGO INC.	760-779-9916	ISO
MURRIETA	92562	FANDIEGO #4	951-600-7867	ISO/OWTS
BAKERSFIELD	93306	HILLCREST LTG-GALPIN INT	805-324-9966	
SAN FRANCISCO	94109	HOUSE OF FANS INC.	415-885-1947	ISO
TARZANA	91356	HYE LIGHTING CO.	818-345-5544	ISO/OWTS
CHICO	95928	J&J LIGHTING INC.	530-342-1815	ISO
FRESNO	93711	JAMES & CO LTG.	209-486-7900	ISO/OWTS
MANTECA	95336	MANTECA LIGHTING	209-823-1999	ISO
MISSION VIEJO	92691	MOORE'S MISSION	714-859-7090	HOME/ISO/OWTS
REDDING	96002	NORTH VALLEY LIGHTING	530-221-6277	ISO/OWTS
CERRITOS	90703	COMFORTS OF HOME	562-865-6666	
MODESTO	95350	PHILLIPS ELECTRIC CO.	209-524-6287	OWTS
SAN RAFAEL	94901	RAFFLES	415-456-6660	ISO
SANTA CRUZ	95062	RIVERSIDE LIGHTING	831-423-7411	ISO
HUNTINGTON BEACH	92647	THE TRADING POST	714-848-4353	OWTS
SAUGUS	91350	VALLEY BREEZE FAN CO	800-339-3267	
COLORADO				
LONGMONT	80504	L.A. ENTERPRISES	800-299-0222	
DENVER	80229	M.D. ELECTRIC	303-288-7988	

STATE/CITY	ZIP	SERVICE CENTER NAME	PHONE	TYPE
LOVELAND				
COLORADO SPRINGS	80903	FIRESIDE LIGHTING INC.	970-669-3540	OWTS
FORT COLLINS	80525	HOME LIGHTING INC.	719-471-3520	OWTS
LONGMONT	80501	THE LIGHT CENTER	970-226-3430	OWTS
		LUMENAREA.COM INC.	303-485-8600	OWTS
CONNECTICUT				
NEW HARTFORD	06057	B.W. MORSE & SONS INC.	860-379-9855	10 -MILE RADIUS
BRIDGEPORT	06605	FEDERAL ELECTRIC CONST.CO.	203-334-6455	
CLINTON	06413	GRAHAM CO.	800-942-5575	
EAST HARTFORD	06118	GRAHAM CO.	800-942-5575	
WOODSTOCK	06281	RANDY MATTEAU	860-963-8979	
WILLINGTON	06279	GEORGE OPALENK	860-684-4558	
HARTFORD	06114	CONNECTICUT LTG. CTR. INC.	860-249-7631	ISO
GREENWICH	06830	FASHION LIGHT CENTER	203-869-3098	ISO, OWTS
NEW HAVEN	06534	NEW GRAND LIGHT	203-777-5781	ISO
DELAWARE				
DOVER	19901	BRUCE DRAJEM/ THE FAN MAN	302-734-7737	
NEW CASTLE	19720	ERIC SHURR	302-998-5147	
FLORIDA				
WINTER HAVEN	33880	ALL ABOUT FANS & LIGHTING	863-299-9593	
GAINESVILLE	32608	AUTHORIZED APPLIANCE SERV.	352-375-3886	ISO
JACKSONVILLE	32217	AUTHORIZED APPLIANCE SERV.	904-737-5312	ISO
SOUTH DAYTONA	32119	BOB'S FIX-IT	386-761-4055	
BOYNTON BEACH	33437	C M S	561-736-0170	W PALM BEACH
WINTER HAVEN	33884	CYPRESS LIGHTING SHOWROOM	800-975-2677	
NE PALM BAY	32905	FAN DOCTOR/ M. FERRUZZO	321-728-5638	
NAPLES	34110	GOODWIN ELECTRIC	239-649-8880	
SPRINGHILL	34606	FAN DOCTOR/KEN R. CHURCHES	352-683-4428	
DAVIE	33330	LASERLAND INC.	854-558-3743	
NOKOMIS	34275	GRAHAM ELECTRICAL CONTR.	941-486-8190	
CORAL GABLES	33134	MICHAEL HANSEN	305-444-4111	
MAITLAND	32751	HENRY ELECTRIC CO.	407-834-4032	IN SHOP ONLY
DEERFIELD BEACH	33442	JARMO ELECTRIC INC.	954-360-9024	
TARPON SPRINGS	34689	PETER LONTAKOS ELECTRICAL	727-938-8895	
CLEARWATER	33765	STEPHEN J. MERCER/ELECTRICAL	727-712-3090	
PUNTA GORDA	33982	SELECT SERVICE & REPAIR	941-637-7850	
ORLANDO	32807	MID-FLORIDA FAN	407-893-6226	
TALLAHASSEE	32303	JIM LACZKO/TODAY'S KIDS	850-562-4661	
PORT CHARLOTTE	33952	JACKSONS LIGHTING INC.	941-625-0044	OWTS
BRANDON	33511	LUMENAIR LTG. & FANS	813-653-3460	ISO
NAPLES	34109	WILSON LIGHTING OF NAPLES	941-592-6006	OWTS/ISO ANY
GEORGIA				
COLUMBUS	31904	GRADY GLASS DBA DAN'S FAN CITY	706-571-3242	ISO
GRAYSON	30017	RG TENNEY ELECTRIC	770-378-9255	
WOODSTOCK	30188	BRUCE A. RUGG, GC	404-925-1133	
HAWAII				
KAILUA KONA	96740	KU'S ELECTRONIC SVC.	808-329-4346	
HILO	96720	BAY LIGHTING & DESIGN	808-961-5688	
AIEA	96701	THE FAN SHOP, INC.	808-488-1221	OWTS
KAILUA KONA	96740	KONA COAST HOUSE OF LTS. INC.	808-329-0748	
KAHULUI	96732	READ LIGHTING	808-871-8995	
IDAHO				
MERIDIAN	83642	S-K ELECTRIC, INC.	208-941-6264	
IDAHO FALLS	83402	HOME LIGHTING	208-523-2300	
ILLINOIS				
CENTRALIA	62801	BAKER APPLIANCE REPAIR	618-532-8437	
RICHMOND	60071	CARAVELLE LIGHTING INC.	815-678-4558	ISO
CHICAGO	60630	D & S FAN SPECIALTIES INC.	847-824-2430	
PRINCETON	61356	ELMORE ELECTRIC INC.	815-643-2354	
CHAMPAIGN	61821	TERRY GOBBLE	217-384-5891	IN SHOP ONLY
BELLEVEILLE	62223	JOHN HASSENSTAB	618-398-4640	
SPRINGFIELD	62704	HOME WORKS INC.	217-753-3305	NO IN SHOP
NORMAL	61761	KIRK SMALL APPLIANCE	309-452-5248	ISO
SPRINGFIELD	62707	SHAWN SCHALK	217-585-0670	ISO
CORNLAND	62519	DELMAR VEECH	217-364-4121	
QUINCY	62301	HEINTZ LIGHTING CENTER	217-223-0101	
TRENTON	62293	LITE BRITE DIST	618-224-7314	
CHAMPAIGN	61821	SPRINGFIELD ELEC SPLY #3	217-351-7600	ISO
YORKVILLE	60560	UNIFIED SUPPLY INC.	630-553-0660	
INDIANA				
EVANSVILLE	47711	MICHAEL BAXTER	812-453-6498	
FORT WAYNE	46805	CARL J. SMITH	260-484-7295	
GREENFIELD	46140	D & D REPAIR	317-467-0600	
VALPARAISO	46383	D & K ELECTRIC	219-464-7576	
INDIANAPOLIS	46222	INDIANA LTG. CTR. INC.	317-293-9333	ISO
IOWA				
CEDAR RAPIDS	52404	ACME ELECTRIC COMPANY	319-365-8677	
SIOUX CITY	51106	DIVERSIFIED ELECTRONICS	712-276-1034	
SIOUX CENTER	51250	HILLS HOME SYSTEMS	712-722-2539	
DES MOINES	50311	ADVANCED LIGHTING	515-255-5009	OWTS

TYPES OF SERVICE OFFERED:

ISO = IN-SHOP ONLY OWTS = PRODUCT SOLD BY DEALER ISO/OWTS = BOTH



STATE/CITY	ZIP	SERVICE CENTER NAME	PHONE	TYPE	STATE/CITY	ZIP	SERVICE CENTER NAME	PHONE	TYPE
IOWA (CONTINUED)					NEBRASKA (CONTINUED)				
MONTICELLO	52310	REM ELECTRIC INC.	319-465-3346		NORFOLK	68701	THE POWER STATION/FROBERG ELEC.	402-371-6671	
CARROLL	51401	J & L ELECTRIC INC.	712-792-2444	ISO	LINCOLN	68510	LINCOLN LIGHTING CTR.	402-476-1297	
CORALVILLE	52241	RALSTON CREEK	319-351-2189	OWTSH/ISOA	NEVADA				
DAVENPORT	52803	SHAW ELECTRIC INC.	563-323-3611		SPARKS	89431	EAGLE ELECTRIC, INC.	775-356-7300	
KANSAS					LAS VEGAS	89103	KS&S ELECTRIC, LLC	702-222-9306	
WICHITA	67211	ACTION APPLIANCE SERVICE INC.	316-263-0652	ISO	LAS VEGAS	89119	FANCO	702-898-8522	
EMPORIA	66801	C.A.P.	316-342-0448		NEW HAMPSHIRE				
OVERLAND PARK	66213	KAL ELECTRIC INC.	913-897-6767		NEW IPSWICH	03071	HOUSE DOCTOR	603-731-5036	
OVERLAND PARK	66210	RANDY RUSSELL	913-338-5330		EXETER	03833	EDWARD HEINE	603-772-2359	
WICHITA	67226	ACCENT LTG INC.	316-636-1278		NASHUA	03060	AFFORDABLE FANS ETC.	603-759-8332	
MANHATTAN	66502	ENDACOTT LIGHTING	785-776-4472		NEW JERSEY				
TOPEKA	66611	K & S LIGHTING	785-267-0422		BELLMAWR	08031	JOSEPH ASHLEY	609-694-3785	
LENEXA	66215	RENSH HOUSE OF LIGHTS	913-888-0888	ISO	WASHINGTON	07882	C.P. ORLANDO	908-689-4750	
SALINA	67401	SALINA APPL. SHOWROOM	785-827-1420		TRENTON	08619	WIRING UNLTD./RICHARD DOBRON	609-584-1122	
OVERLAND PARK	66223	WESTERN CHANDELIER CO.	913-685-2000		THOROFARE	08086	HARRY R. HABICHT	856-845-2541	
OVERLAND PARK	66212	WILSON FANS & LIGHTING	913-642-1500		MORRIS PLAINS	07950	MANNY HERRERA	973-993-1137	
KENTUCKY					LINWOOD	08221	JACK BRESLAU-HANDYMAN SVCS.	609-601-1797	20 MI. RAD.
LEXINGTON	40510	CHARLET ELECT./RON CHARLET	606-231-7344		RANDOLPH	07869	ANTHONY MAKOMASKI	908-475-5569	
LOUISIANA					W. LONG BRANCH	07764	CHRIS KIBBE/NO SHORTS ELECTRIC	732-222-4228	ISO
LAFAYETTE	70501	ACADIA SERVICE CO.	318-233-8910		MULLICA HILL	08062	STEPHEN RICE	856-223-8645	
HOUMA	70363	GULF SOUTH ARMATURE	985-872-0486		JACKSON	08527	ROBERT ROLZHAUSEN	732-363-3729	
BATON ROUGE	70815	HOME APPLIANCE SERVICE	504-272-7725	ISO	CHESTER	07930	CHESTER LIGHTING, INC.	908-879-7200	OWTS
MONROE	71201	ALBERT SURLCO	318-699-0619	ISO	PARK RIDGE	07656	KRELL LIGHTING	201-391-7685	OWTS
NEW IBERIA	70560	WALET'S INC.	318-364-7486	ISO	NEW MEXICO				
LAKE CHARLES	70601	JOSEPH'S ELECTRICAL CTR INC.	318-436-4930		ALBUQUERQUE	87123	FRANK'S ELECTRIC	505-293-6724	ISO
METAIRIE	70006	ROMAINE'S	504-887-7077		ROS WELL	88201	J & G ELECTRIC CO.	505-622-0146	
MAINE					ALBUQUERQUE	87112	A-1 LAMP DOCTOR	505-296-5050	
SOUTH PORTLAND	04106	T.A. NAPOLITANO	207-799-0538	NO CLIPS	ALBUQUERQUE	87109	B-ELECTRIC	505-828-0241	SANTA FE
MARYLAND					NEW YORK				
FREDERICK	21704	GL FAN SERVICE	301-831-4925		COMMACK	11725	AIR-TEK DBA REPUBLIC LIGHTING	631-499-1854	ISO
WHITE HALL	21161	BT ELECTRIC/BILL TYRRELL	410-329-6353		BROOKLYN	11204	JERRY PICCOLINO/J&R SERVICE	718-259-1789	
FORESTVILLE	20747	BURGESS LIGHTING	301-568-8000	ISO,OWTS	ALBANY	12205	BERT ELECTRIC	518-869-7140	
MASSACHUSETTS					E. MEADOW	11554	C.D. SERVICE	516-538-3481	
S. ATTLEBORO	02703	AJ ELECTRIC	508-761-5021	20 MI. RAD.	BUFFALO	14206	CRAFTMASTERS SERVICENTER	716-893-9557	20-MI. RAD.
BRIDGEWATER	02324	BILTCLIFFE ELECTRIC	508-697-7630	ISO	QUEENSBURY	12804	DEAN ELECTRIC	518-792-4781	
MAYNARD	01754	HOUSE DOCTOR	978-897-9085		HASTINGS	13076	ELECTRICAL WORK BY MARTY	315-668-0220	
W SPRINGFIELD	01089	JALBERT ELECTRIC	413-734-4976		BUFFALO	14226	THE FAN COLLECTION, INC.	716-839-2447	ISO
NATICK	01760	J.G. ELECTRIC CO INC.	508-653-3042	ISO	PLAINVIEW	11803	JOSEPH GOTTDANK	516-932-7618	
DANVERS	01923	PLAZA LIGHTING	978-774-7801	ISO	NEWBURGH	12550	J D PARRELLA ELECT.	845-562-4112	
DENNIS	02638	RICK SEXTON	508-385-7536		STATEN ISLAND	10312	JOE VALLETUTTI JR.	718-608-9008	
WORCESTER	01603	EDWARD A. TORTORA	508-755-3735		YONKERS	10704	JAY D. KOSACK	914-237-9051	
NEW BEDFORD	02740	VANDER ELECTRIC & EQUIP. CO.	508-993-6383	ISO	POUGHKEEPSIE	12601	MANNINO ELECTRIC INC.	914-452-3520	IN SHOP
ORLEANS	02653	ASSOCIATED ELECTRICAL SERV.	508255-4589		ROCHESTER	14620	BARRY MALADY DBA CAM ELECTRIC	585-271-8560	
MICHIGAN					LONG BEACH	11561	NICK'S IMPROVEMENT COMPANY	516-659-8989	
BELLEVILLE	48111	MIKE AYERST	734-699-9698		SHOKAN	12481	OLIVE FANS & LTG.	845-657-5823	
LANSING	48906	INTEGRITY ELECTRIC	517-484-0300		LYNBROOK	11563	SHADERITE-PZ REPAIR	516-593-8973	
LANSING	48917	LARGENT ENTERPRISES INC.	517-627-4229		STATEN ISLAND	10301	FRANK RAGUCCI/F&R SERVICE CNTR.	718-273-5518	
TRAVERSE CITY	49686	CREATIVE LTG. & RESTORATION	231-938-1332	ISO	REGO PARK	11374	MARK RALIN	718-896-7844	QUEENS
HOWELL	48855	LIGHTNING ELECTRIC INC. CO	810-227-3375		AMHERST	14228	SHANOR LTG. CTR.	716-691-3622	ISO
BIRMINGHAM	48009	21ST CENTURY ELECTRIC	248-645-6464		SCHENECTADY	12303	FRANK SALVATORE	518-355-5789	
GRAND RAPIDS	49512	GRAND RAPIDS LTG. CTR. INC.	616-949-4931	OWTS,ISO	TROY	12180	TROY LIGHT COMPANY	518-274-6931	ISO
KALAMAZOO	49002	HODGSON ENTERPRISES	269-343-4428	OWTS	COMMACK	11725	TURNPIKE APPLIANCE	631-499-3355	20-MI. RAD.
MINNESOTA					STATEN ISLAND	10304	V & P SERVICE COMITO PICCOLINO	718-447-7945	
ROCHESTER	55906	KROUPA'S ELECTRONICS	507-281-4064		PEARL RIVER	10965	BOB VAZQUEZ	845-735-5861	
MINNEAPOLIS	55422	LEO'S ELECTRIC SALES & SERVICE	612-546-5625		BEDFORD	10507	BEDFORD LIGHTING INC.	914-666-0680	ISO
MAPLEWOOD	55109	NORTH COUNTRY ELECTRIC	651-748-4027		CARLE PLACE	11514	LIGHTING CTR. BY CAMEO INC.	516-747-4748	ISO
MINNEAPOLIS	55411	PENN ELEC. MOTOR SERV.	612-588-5333		BROOKLYN	11219	MAIN LAMP CORP.	718-436-2207	ISO
PLYMOUTH	55441	FAN MAN #101 (FLOWC #21)	612-559-0761	ISO	BROOKLYN	11223	MANHATTAN LIGHTS INC.	718-998-1111	
BURNSVILLE	55337	FAN MAN #102 (FLOWC #22)	612-898-2754	ISO	NANUET	10954	NOVA LIGHTING, INC.	914-623-5211	ISO
EDEN PRAIRIE	55344	FAN MAN #106 (FLOWC#26)	612-941-9243	ISO	AMHERST	14226	ROYALITE INC.	716-832-1492	ISO
ST. PAUL	55108	FAN MAN #107 (FLOWC #27)	651-649-0686	ISO	NEW YORK	10003	SUPERIOR LIGHT & FAN	212-677-9191	
BAXTER	56425	THE LIGHT DEPOT	218-829-0770	ISO	NORTH CAROLINA				
MISSISSIPPI					SALISBURY	28146	HAUSS ELECTRICAL SERV.	704-637-7774	
MADISON	39110	JACKSON SERVICE CTR.	601-856-9469		CHARLOTTE	28205	EFIRD'S INTERIORS, INC.	704-376-5648	ISO
OCEAN SPRINGS	39564	KELLY'S APPLIANCE	228-872-7181	ISO	HICKORY	28602	EFIRD'S INTERIORS, INC.	704-322-2203	ISO
MISSOURI					CHARLOTTE	28203	SIMPSON'S LIGHTING /LT.FIXT	704-376-5463	OWTS
SPRINGFIELD	65802	COMPLETE MAINTENANCE	417-866-2700	SECONDARY	NORTH DAKOTA				
ST LOUIS	63123	LEINWEBER SERVICE CO.	314-892-8177		FARGO	58102	MIDSTATES ELECTRIC INC.	701-293-0441	
SPRINGFIELD	65804	LOYD'S ELECT/LIGHTHOUSE GALL.	417-889-1088		OHIO				
BRANSON	65616	LOYD'S ELECTRIC SUPPLY INC.	417-334-2171		CANTON	44706	APPLIANCE PARTS CO.	330-453-8077	ISO
MONTANA					COLUMBUS	43235	CERTIFIED SYSTEMS	614-799-0778	
KALISPELL	59901	LASALLE LIGHTING	406-752-2424		LOVELAND	45140	HANK GRINSHPAN	513-683-8666	
HELENA	59601	SUPREME LIGHTING	406-442-8200		MAUMEE	43537	K.O.V ELECTRONIC REPAIR	419-865-8893	
MISSOULA	59801	WESTERN MONTANA LTG SPY	406-543-7166	ISO	DAYTON	45419	LARKIN ELECTRIC CO.	937-294-4115	
NEBRASKA					COLUMBUS	43231	THE LAMP LIGHTER	614-891-7940	
OMAHA	68104	D & L ELECTRONICS	402-571-5233		CLEVELAND	44109	WESTSIDE LTG. CTR.	216-459-1970	
GRAND ISLAND	68803	QUALITY SEW & VAC.	308-382-7310	ISO	N. OLMSTED	44070	CHANDELIER SHACK INC.	440-777-6969	ISO
OMAHA	68144	OAK HILLS ELECTRIC INC.	402-691-4567		NORTH LIMA	44452	DICKEY ELECTRIC	330-549-3976	
					SOUTH EUCLID	44121	LAMP SHADER EAST/DBA LTG. EXPO	216-291-3030	OWTS/ISO
					DAYTON	45459	OHIO LAMP & FIXTURE CO.	937-439-0822	ISO

STATE/CITY	ZIP	SERVICE CENTER NAME	PHONE	TYPE
OKLAHOMA				
OKLAHOMA CITY	73105	APPLIANCE SERVICE BY CK	405-525-8862	
OKLAHOMA CITY	73132	LARKIN E. STEVENSON	405-728-8810	
OKLAHOMA CITY	73127	JAMES LIGHTING INC.	405-947-6663	
OREGON				
PORTLAND	97225	SYLVAN ELECTRONICS INC.	800-473-1244	ISO
BEND	97701	DESIGN LIGHTING INC.	541-389-9997	ISO
PENNSYLVANIA				
HOPWOOD	15445	GEORGE R. SMALLEY CO. INC.	724-437-1927	
DREXEL HILL	19026	PATRICK HASTINGS	610-853-2709	
ALLENTOWN	18105	LIGHTING FIXTURE & SUPPLY CO	610-435-9691	
PITTSBURGH	15224	MARK DIULUS ELECTRIC CO.	412-681-2553	
PHILADELPHIA	19111	KLAUS OTTE	215-745-4266	
EASTON	18045	PRIMROSE ELECTRICAL	610-258-1359	
ALLENTOWN	18102	SCHOLL'S ELECTRIC	610-435-5876	
LANCASTER	17601	S. DEAN'S ELECTRIC	717-285-4545	
WEST CHESTER	19382	TOBIAS ELECTRIC	610-942-4000	IN HOME ONLY
FAIRLESS HILLS	19030	ASTRO LTG. GALLERIES	215-943-0331	ISO
WEST READING	19611	A TO Z VACUUM STORES	610-374-4888	OWTS
HARRISBURG	17111	YALE ELECTRIC SUPPLY	717-233-8401	ISO
CONSHOHOCKEN	19428	KAY ELECTRIC SUPPLY	610-825-0100	ISO
WILLOW GROVE	19090	NORTH-WEST ELEC. SUPPLY CO.	215-659-5757	
STATE COLLEGE	16803	WHITEHILL LIGHTING & SPLY.	814-238-2449	
RHODE ISLAND				
PAWTUCKET	02861	WICKFORD APPLIANCE & LTG CTR.	401-726-4240	ISO
SOUTH CAROLINA				
HANAHAN	29406	BOBBY LUTES ELECTRICAL INC.	843-797-0948	ISO
SPARTANBURG	29306	BOBBY JACKSON ELECTR.	803-583-6035	
BLUFFTON	29910	J. HEAVENER & CO.	843-837-8300	
GOOSE CREEK	29445	DAVID MIMS	843-514-2380	
MYRTLE BEACH	29575	RAY ELECTRIC	843-293-0068	
COLUMBIA	29212	EASTWIND ENTERPRISES	803-781-3267	
SOUTH DAKOTA				
SIOUX FALLS	57105	LAMPS AND SHADES INC.	605-332-6680	
SIOUX FALLS	57104	MAHLANDER'S	605-336-7798	
TENNESSEE				
MT CARMEL	37645	APPALACHIAN ELEC. SVC.	423-357-0783	ISO
MEMPHIS	38111	APPLIANCE SERVICE CTR.	901-324-5898	ISO
LOUISVILLE	37777	BEN SNYDER	865-380-5491	
BRENTWOOD	37027	PAUL TAMPIEN/SUNSHINE ELECT.	615-371-9383	
TEXAS				
LEWISVILLE	75067	SOUTHERN COMFORTS	940-536-1406	
HOUSTON	77089	BENNETT FAN INSTALL., INC.	281-484-1401	
CORPUS CHRISTI	78404	BRAND APPLIANCE & MICROWAVE	512-854-1851	ISO
FREEPORT	77541	SKIP'S ELECTRIC AND AIR	979-233-3903	
AMARILLO	79106	DI'S LAMP & FAN REPAIR	806-331-5267	
DENTON	76201	FANTASIA CEILING FANS	940-484-4222	
ODESSA	79761	GOFORTH ELECTRIC	432-550-8927	
DENTON	76201	LARRY W. GOFF	940-387-7304	
DAMON	77430	GULF COAST FAN SERVICE	281-495-6434	
KERRVILLE	78029	MAURICE HAMMIT	210-367-4937	
PARIS	75460	HARGIS ELECTRIC	903-785-8055	
SAN ANTONIO	78212	CEILING FAN SERVICE CTR.	210-804-1362	
AUSTIN	78757	KLOCK ELECTRIC	512-837-4704	
GIDDINGS	78942	ORSAG'S INC.	409-542-3167	
LUBBOCK	79413	ORECK VACUUMS	806-792-2821	


STATE/CITY	ZIP	SERVICE CENTER NAME	PHONE	TYPE
ARLINGTON	76001	P&M QUALITY CONT.	817-478-2004	
TYLER	75707	CHARLES R. RAINS	903-566-3119	
TEXAS (CONTINUED)				
HEARE	77859	THOMPSON SUPPLY	409-280-5737	
CARROLLTON	75006	ADFANTAGE CEILING FAN	972-446-9393	
HUMBLE	77338	CAROLS LTG. & FAN SHOP	281-446-7613	ISO
AUSTIN	78703	TEXAS CEILING FANS/CEILING FAN SHOP	512-477-3132	ISO
HOUSTON	77069	CHAMPIONS LIGHTING	281-440-5339	ISO
RICHARDSON	75080	COOL BREEZES	972-690-4580	
HURST	76053	ARC FAN & LIGHTING	817-268-2218	ISO,OWTS
BEAUMONT	77702	FAN FACTORY	409-833-8207	ISO
DALLAS	75206	LIGHTS FANTASTIC	214-987-9655	
VICTORIA	77904	HALL ELECTRIC CO., INC.	512-578-6221	
SAN ANGELO	76904	HERITAGE HAUS	325-949-6541	
WICHITA FALLS	76308	LANTERN HOUSE INC.	940-692-7381	ISO
HOUSTON	77063	LIGHTING PLUS INC.	713-784-2440	ISO
HARLINGEN	78550	THE LIGHT HOUSE	956-423-6664	OWTS
MCALLEN	78504	THE LIGHT HOUSE	956-631-1155	OWTS
SEALY	77474	TEXAS CEILING FANS	979-885-6900	ISO
UTAH				
MURRAY	84107	CENTRAL ELECTRIC CO.	801-467-5479	
RIVERTON	84065	VERN O. FRANCIS	801-254-4178	
LAYTON	84040	HARUO YOSHIKAWA	801-546-6008	
VIRGINIA				
RICHMOND	23228	FANNING ELECTRICAL SERVICE	804-262-3681	
BURKE	22015	L&S ELECTRIC INC.	703-237-0011	
WILLIAMSBURG	23185	TAPROOT COMPANY	757-229-3722	ISO
VIRGINIA BEACH	23451	FANS,LIGHTING, 'N' MORE	757-422-3616	
WASHINGTON				
SPOKANE	99216	BRITE-WAY ELECTRIC	509-922-0275	
TACOMA	98404	M.G.M. ELECTRONICS	253-752-9826	
WENATCHEE	98801	SEW CREATIVE/ADVANTAGE STORE	509-663-5516	
PASCO	99301	ARHA TOTAL SERVICE	509-547-3799	
BELLINGHAM	98225	JOHN WIGGINS DBA TWIN SISTER'S ELEC.	360-676-1257	
YACOLT	98675	S&L ELECTIRC	503-657-0633	
YAKIMA	98902	INLAND LIGHTING	509-248-4647	ISO
WASHINGTON, DC				
WASHINGTON	20007	FAN FAIR	202-342-6290	ISO
WEST VIRGINIA				
SO. CHARLESTON	25309	PEPPER ELECTRIC	304-768-8195	
WHEELING	26003	TOP HAT STOVE SALES	304-233-6262	
WISCONSIN				
MILWAUKEE	53219	BOB'S FAN REPAIR	414-546-2501	
GREEN BAY	54313	KARL DEVROY	920-494-6090	
FONTANA	53125	J&L PROPERTY MAINT.	262-275-2345	
BROOKFIELD	53005	CITY LIGHTS & FANS	414-781-9048	ISO/OWTS
MADISON	53719	MADISON LIGHTING	608-271-6911	
LA CROSSE	54601	WETTSTEIN'S	608-784-5555	
CANADA				
TORONTO, ONT.,	M6M2P5	ZANEEN LIGHTING	416-247-922	
OVERSEAS				
ST. THOMAS	00805	DUANE LOBERG	809-775-2399	

PRODUCT SPECIFICATIONS

Collection: Casablanca Designer
Model Name: Silhouette II
Model Number: C2M72M

Dimensions:
A = 10"
B = 13"
C = N/A"
D = N/A"
E = 24"

NOTE: Dimension B includes light fixture and glass.

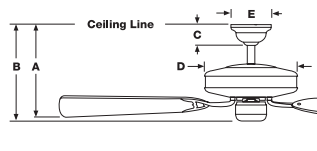

Weight: 30 lbs.

Finishes: Architectural White
Motor: 188 x 25mm
Blade Span: 52"
Blade Iron Pitch: 15°
No. of Blades: 5
Technology: Versa•Touch2™ W-72
Lightbulb Type: (1) 100w Halogen

NOTES

NOTES