




Owner's Use and Care Guide
Guide d'utiliser et soins de Propriétaire
Guía a utilizar y a cuidar del Proprietario

Model • Modèle • Modelo
DBC128BLS

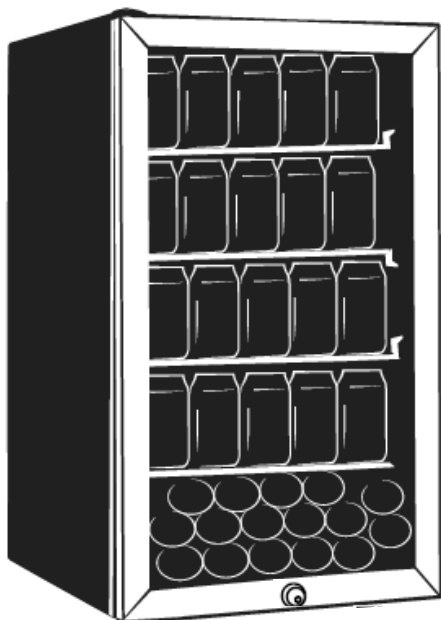

CAUTION:
Read and follow
all safety rules
and operating
instructions
before first use of
this product.

PRECAUTION:
Veuillez lire
attentivement les
consignes de
sécurité et les
instructions
d'utilisation avant
l'utilisation
initiale de ce
produit.

PRECAUCION:
Lea y observe
todas las reglas de
seguridad y las
instrucciones de
operación antes de
usar este producto
por primera vez.

FREE STANDING BEVERAGE CENTER

Owner's Use and Care Guide

..... 1-7

- Important Safety Information
- Installation Instructions
- Features
- Operating Instructions
- Care and Maintenance
- Troubleshooting
- Warranty

CENTRE DE BREUVAGES AUTONOME

Guide d'utiliser et soin de Propriétaire

..... 8-14

- Consignes de Sécurité Importante
- Consignes d'installation
- Caractéristiques
- Consignes de Fonctionnement
- Soins et Entretien
- Dépannage
- Garantie

CENTRO DE BEBIDAS AUTÓNOMO

Guía a utilizar y a cuidar del Proprietario

..... 15-21

- Instrucciones Importantes de Seguridad
- Instrucciones de Instalación
- Características
- Instrucciones Operadoras
- Cuidado y Limieza
- Diagnostico de Problemas
- Garantia

WELCOME

Welcome to the Danby family. We're proud of our quality products, and we believe in dependable service, like you will find in this owner's use and care guide, and like you will receive from our friendly customer service department. Best of all, you will experience these values each and every time you use your Danby Beverage Center. That's important, because your new appliance will be a part of your family for a long time.

For easy reference, may we suggest that you attach a copy of your sales receipt to this page, and note the information below; you will need this information to obtain service under warranty.

Model No.: _____

Serial No.: _____

Date Purchased: _____

NEED HELP?

Before you call for service, there are a few things you can do to help us serve you better...

Read this Owner's Use and Care Guide:

It contains instructions to help you use and maintain your appliance properly.

If you received a damaged appliance:

Immediately contact the builder (or dealer) that sold you the Beverage Center.

Save time and money:

Check the Trouble shooting section before calling. This section helps you solve common problems that may occur.

If you do need service, you can relax knowing help is only a phone call away.

Tel: 1-800-26- Danby®

IMPORTANT SAFETY INFORMATION

READ ALL SAFETY INFORMATION BEFORE USING

ELECTRICAL REQUIREMENTS

This appliance must be grounded. In the event of an electrical short circuit, grounding reduces the risk of electrical shock by providing an escape wire for the electrical current.

This appliance is equipped with a cord having a grounding wire with a grounding plug. The plug must be plugged into an outlet that is properly installed and grounded.

WARNING: Improper use of the grounding plug can result in a risk of electric shock. Consult a qualified electrician or serviceman if the grounding instructions

are not completely understood, or if doubt exists as to whether the appliance is properly grounded.

DO NOT USE AN EXTENSION CORD

Use an exclusive wall outlet. Do not connect your refrigerator to extension cords or together with any other appliance in the same wall outlet. Do not splice the cord.

IMPORTANT WARNING: An empty refrigerator can pose a threat to children. To render the unit harmless we strongly recommend removing the door prior to disposal.

SAVE THESE INSTRUCTIONS!

SAFETY PRECAUTIONS

- This appliance must be grounded. Connect only to a properly grounded outlet. See Electrical Requirements section above.
- Do not operate this appliance if it has a damaged power cord or plug, if it is not working properly, or if the appliance has been damaged or dropped.
- Do not splice the power cord that is equipped with this appliance.
- Keep power cord away from heated surfaces.
- Do not immerse power cord, plug or the appliance itself in water.
- Do not use this product near water- for example, in a wet basement, near a swimming pool or near a sink.
- Do not use corrosive chemicals or vapors in this appliance.
- Use this appliance only for its intended use, as described in this manual.
- Do not store perishable food items such as (but not limited to) meats and dairy products in your Beverage Center.
- See door surface cleaning instructions in the Care and Maintenance section(s) of this manual.
- Do not cover or block any openings on the appliance.
- This appliance should be serviced only by qualified service personnel. Contact the nearest authorized service facility for examination, repair or adjustment.

INSTALLATION INSTRUCTIONS

LOCATION

DO...

- ✓ Select a location with a strong, level floor.
- ✓ Allow 5 inches of space between the back of the appliance and any adjacent wall.
- ✓ Avoid direct sunlight and heat. Direct sunlight may affect the acrylic coating. Heat sources nearby will cause higher electricity consumption.


DO NOT...

- ⊘ Use this appliance outdoors. This appliance is intended for household use only. Do not attempt to operate or store this appliance outdoors.
- ⊘ Build this appliance into an enclosure. This appliance is designed for a free-standing application only and is not intended to be “built-in”.

INSTALLATION INSTRUCTIONS (cont'd)


DOOR REVERSAL INSTRUCTIONS

- 1) Unplug the unit from the electrical outlet (if connected) and lay it on its back.
- 2) Remove the screws from the lower hinge assembly as shown in Figure 1.
- 3) Pull the door downward to remove it from the Beverage Center.
- 4) Remove the cap from the top left side of the door (Fig. 3) and reinstall it on the top right side.
- 5) Remove the three (3) screws supporting the top hinge (Fig. 4).
- 6) Remove the plastic caps from the left side of the frame (Fig. 2) and reinstall them on the right side of the frame (the previous hinge location).
- 7) Install the upper hinge assembly on the left side of the frame.
- 8) Carefully reposition the door into the upper hinge assembly, then onto the unit.
- 9) While the door remains closed, install the lower hinge assembly.
- 10) Close the door and return the unit into its upright position (wait 60 minutes before reconnecting power to the Beverage Center); verify the door alignment and proper seal against the unit.

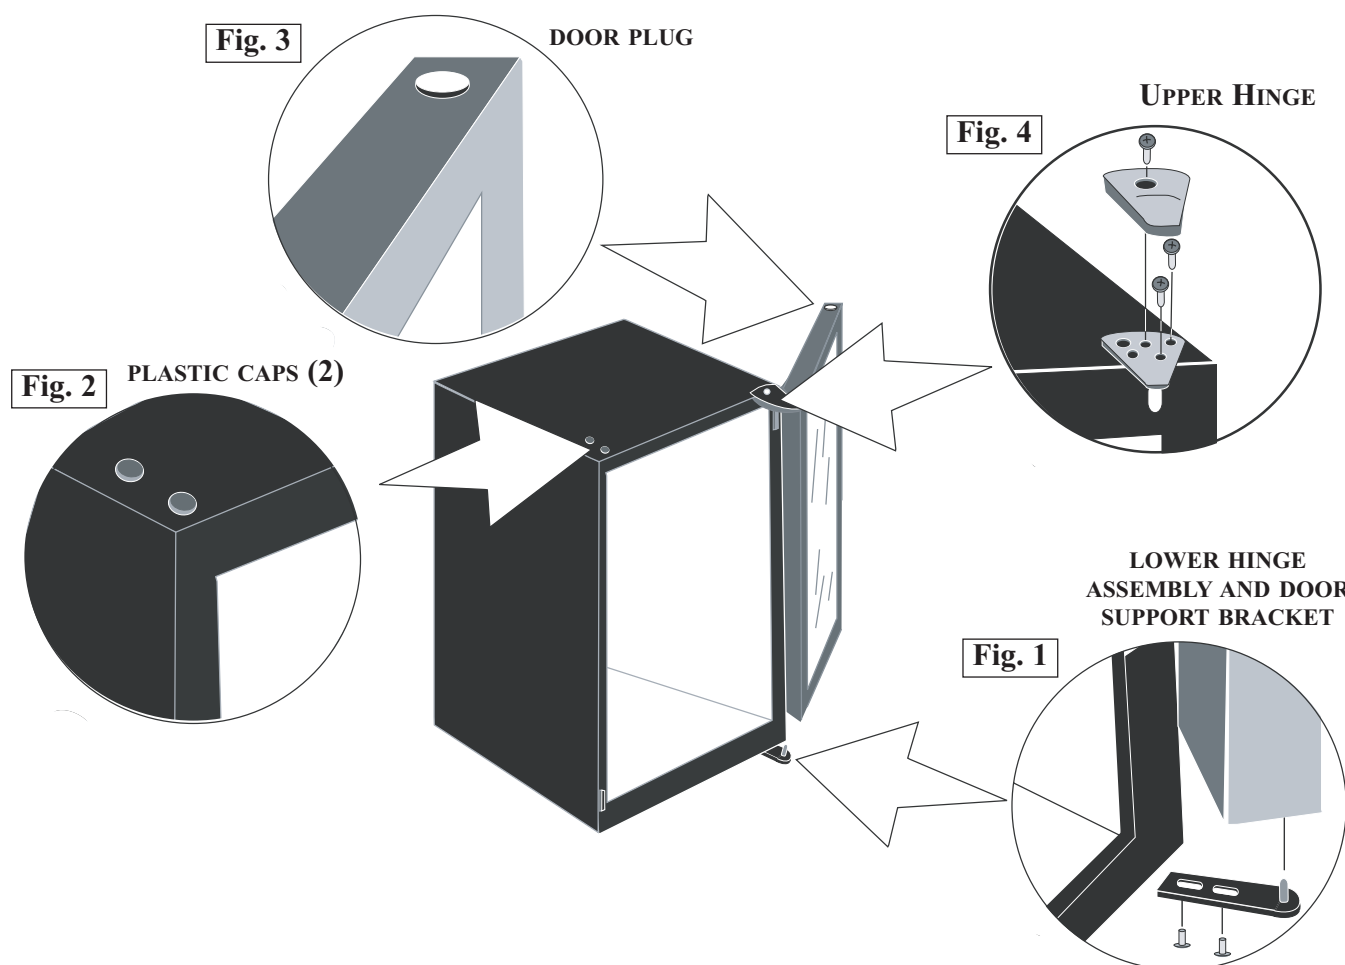

FEATURES

- 1) **Tempered Glass Door:** Tinted for UV protection while still allowing for easy interior viewing.
- 2) **Magnetic Door Gasket:** Tight fitting door seal keeps all the cool air locked inside.
- 3) **Plastic Coated Wire Shelves**
- 4) **Leveling Leg**
- 5) **Child Proof Lock with Key**
- 6) **Interior Light (not shown):** Illuminates the compartment when the door is opened.

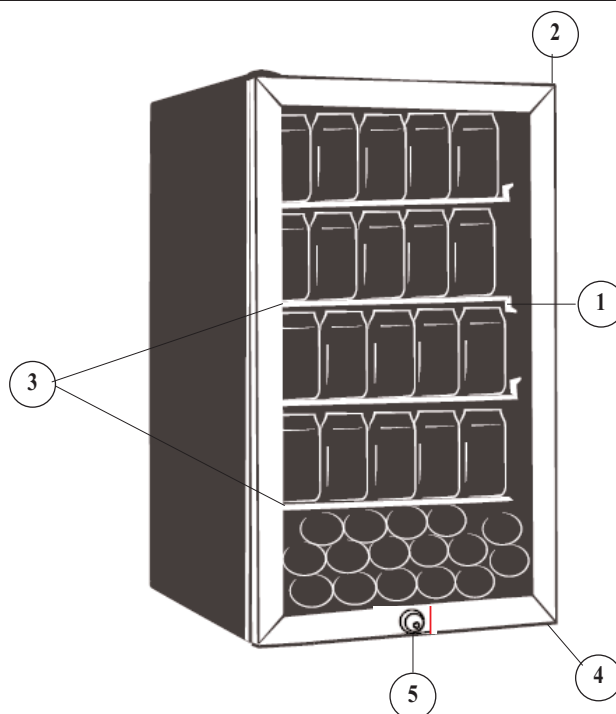

OPERATING INSTRUCTIONS

THE CONTROLS OF YOUR BEVERAGE CENTER

To start the Beverage Center, turn the temperature control to the position corresponding to the desired cooling. The Beverage Center temperature will vary depending on the quantity of cans stored and on the frequency with which the door is opened.

Setting The Temperature Control:

The temperature of the Beverage Center compartment is controlled by adjusting/setting the thermostat control knob, located on the exterior rear wall of the cabinet.

To start the Beverage Center and achieve maximum cooling quickly;

- Turn the temperature control knob clockwise to the furthest (maximum) setting on the darker blue (wide) section of the graduated control dial.

- Allow the unit to run at this setting for 3-4 hours.

- When maximum cooling is achieved, turn back the temperature control knob setting to the 2 o'clock position on the graduated blue control dial. See Fig. A.

- To turn off the beverage center, (no cooling) rotate the control knob to the "0" (off) position. See Fig. B. Turn the control to the "OFF" (0) position to temporarily disconnect the cooling cycle. When the beverage center is not to be used for a long period of time, disconnect the plug and leave the door partially open.

NOTE: Wait 3 to 5 minutes before restarting if operation has been interrupted.

