


# Electric Drop-In Cooktops

## EW30EC55G S, EW30EC55G W, EW30EC55G B




### Flex-2-Fit™ System

Premium smoothtop cooking with triple-ring expandable, double-ring expandable and single-ring elements fits all pots and pans.

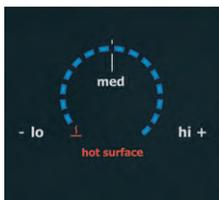

### Glide-2-Set™ Controls

Glide-2-Set™ electronic controls have precise settings and blue LED for repeatable results. Arc-designed graphics are intuitive to use.

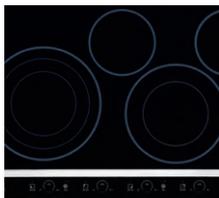

### Ceramic Glass Smoothtop

Flat, smooth and easy to clean.



### Kitchen Timer

Easy to read at a glance and conveniently located near your cooktop controls so you use it more often.

### 30" ELECTRIC TOUCH-CONTROL DROP-IN COOKTOPS

Sabbath Mode (Star-K® Certified)	Yes
----------------------------------	-----

#### Features

Glide-2-Set™ Electronic Touch Controls	Yes
Ceramic Smoothtop Glass Surface	Yes
6" to 9" to 12" Triple Expandable Element – 1000W/2000W/2700W	1
6" to 9" Dual Expandable Element – 1600W/3000W	1
6" Electric Element – 1200W	2
Hot-Surface Indicator Lights	Yes
Sealed Spill Control Cooktop	Yes

#### Accessories


Cleaning Sponge	Included
-----------------	----------

#### Specifications

Overall Exterior Dimensions –	
Height (Extreme Bottom to Underside of Cooktop) (Extreme Bottom to Topside of Cooktop)	6-3/4" 7-1/2"
Width	30-3/4"
Depth (to Front Corner) (to Center of Arc)	21-1/2" 21-3/4"
Power Supply Connection Location	Right Center Rear
Connected Load (kW Rating) @ 240/208 Volts	8.4/6.3
Amps @ 240/208 Volts	35.0/30.3
Minimum Circuit Required (Amps)	40
Electrical – Single phase 4-wire cable, 120/240 Volts or 120/208 Volts, 60 Hz, fused on both sides of line with ground.	Required
Armored Electrical Cable	Included
Approved for Single Oven Combination Installation*	Yes
Product Weight	50 Lbs.
Shipping Weight	58 Lbs.

NOTE: Always consult local and/or national electric codes. Refer to Product Installation Guide for detailed installation instructions on the web at [www.electroluxappliances.com](http://www.electroluxappliances.com). Specifications subject to change.

\*Approved to be used over any Electrolux Single Wall Oven.

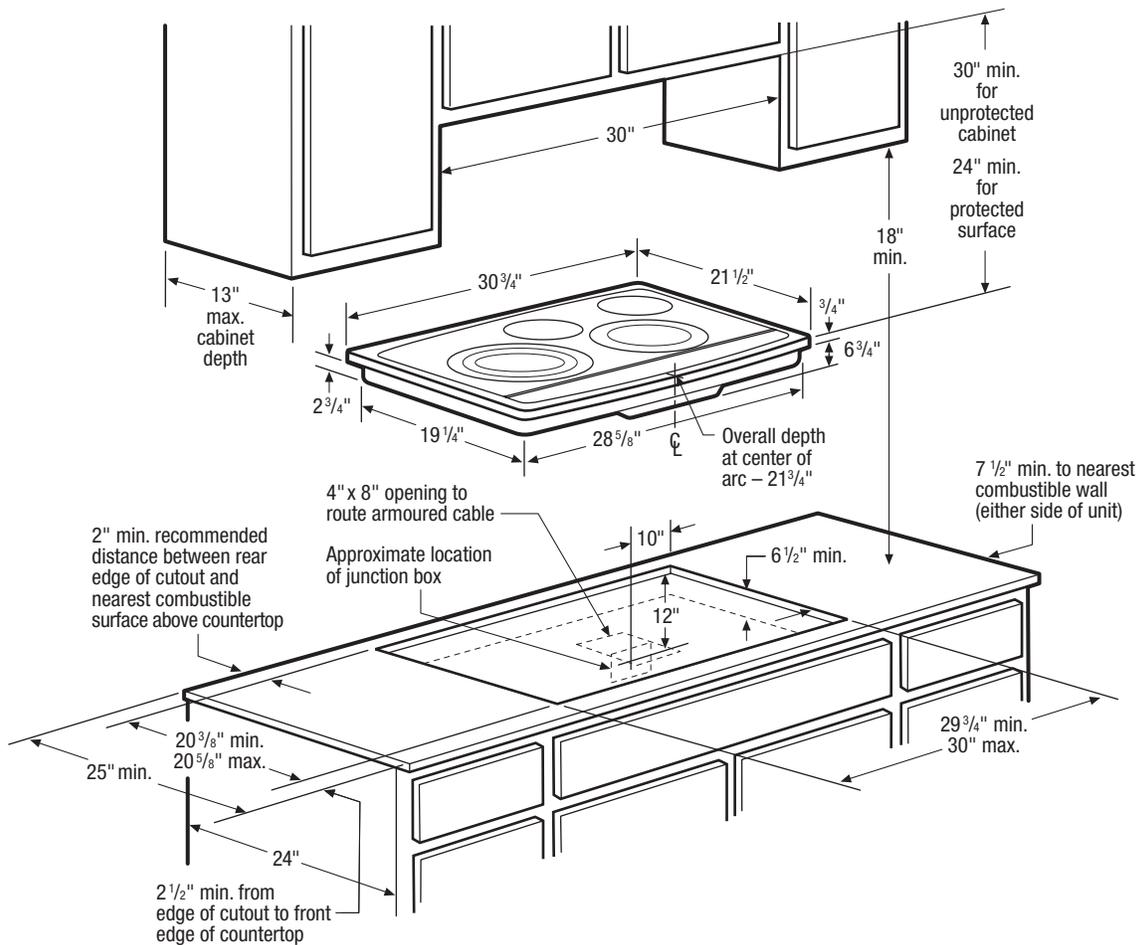

### 30" Electric Touch-Control Drop-In Cooktop Specifications

- Product Weight – 50 Lbs.
- Single phase 3- or 4-wire cable, 120/240 or 120/208 Volt, 60 Hertz AC only electrical supply with ground required on separate circuit fused on both sides of line.
- Connected Load (kW Rating) @ 240/208 Volts = 8.4/6.3kW
- Amps @ 240/208 Volts = 35.0/30.3 Amps
- Recommended Circuit Breaker – 40 Amps
- Always consult local and/or national electric codes.
- Allow 2" space below armoured cable opening to clear electrical cable and allow space for installation of junction box on wall at back of cooktop.
- Overhead cabinetry should not exceed a 13" maximum depth.
- Allow 30" minimum clearance between top of cooktop and bottom of unprotected wood or metal overhead cabinetry.
- Absolute minimum horizontal distance between overhead cabinets installed to either side of appliance must be no less than maximum width of appliance.
- Allow 24" minimum clearance when bottom of wood or metal overhead cabinet is protected by not less than 1/8" flame-retardant millboard covered with not less than No. 28 MGS sheet steel, 0.015" stainless steel, 0.024" aluminum or 0.020" copper.
- Allow 2" minimum clearance between rear edge of cutout and nearest combustible surface above countertop.
- Allow 7-1/2" minimum clearance from edge of cooktop to nearest combustible wall on either side of unit.
- It is recommended that drawers not be used beneath cooktop.
- To reduce risk of fire when using overhead cabinetry, install range hood that projects horizontally a recommended minimum of 5" beyond bottom of cabinets.
- Touch-Control Drop-In Cooktop model EW30EC55G is approved to be used over any Electrolux Single Wall Oven.

**Note:** For planning purposes only. Refer to Product Installation Guide on the web at [electroluxappliances.com](http://electroluxappliances.com) for detailed instructions.