





1


a

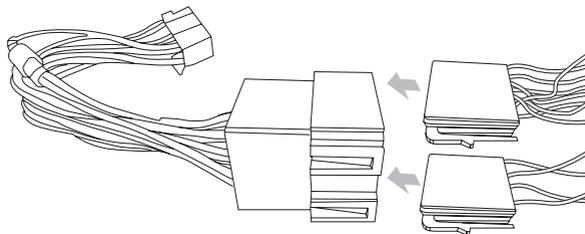

b

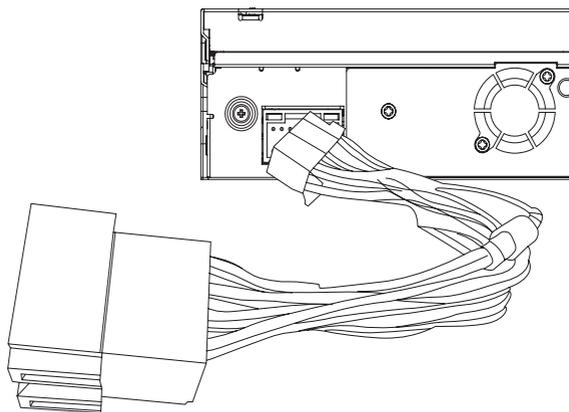


C

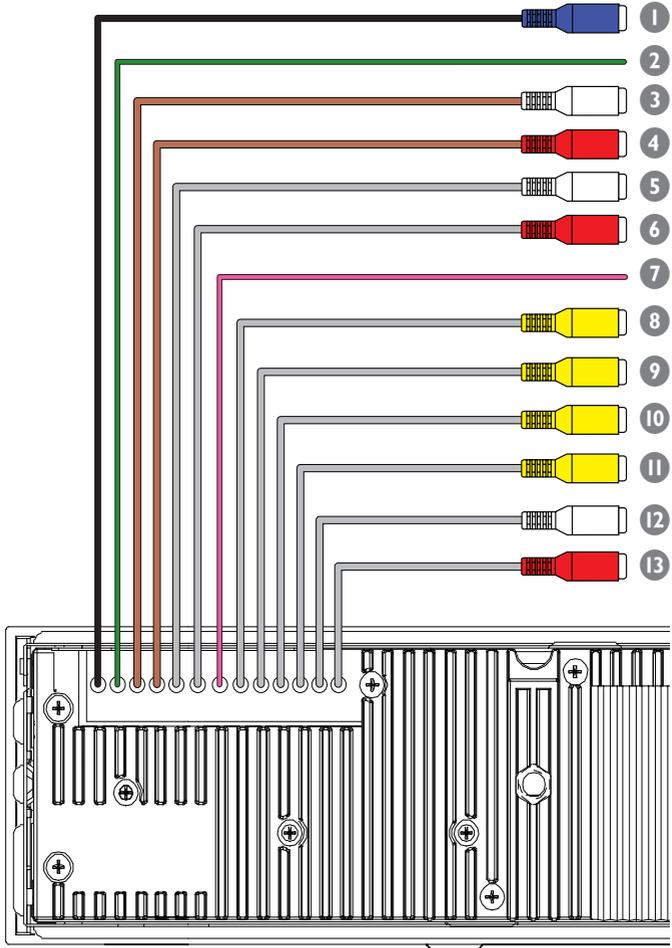


2


a

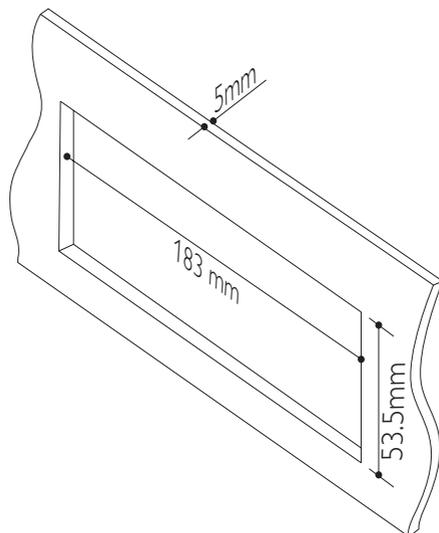


b

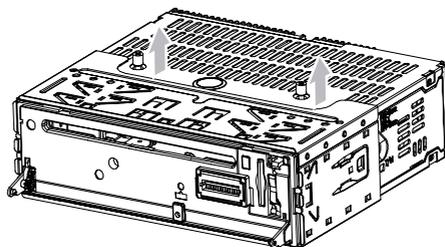


c

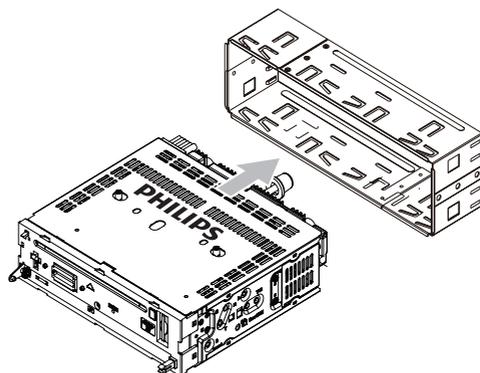


d

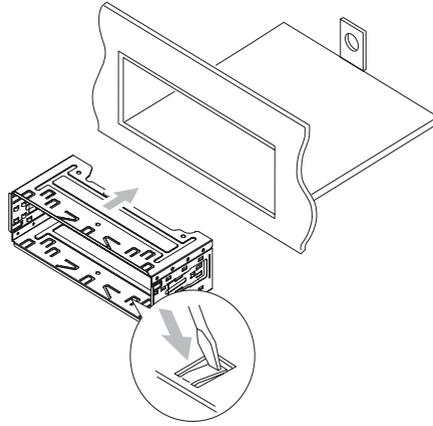


e

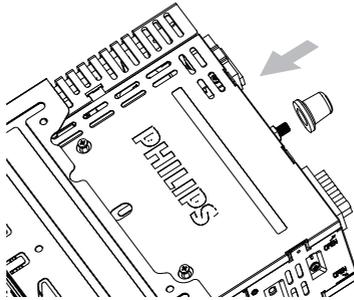


f

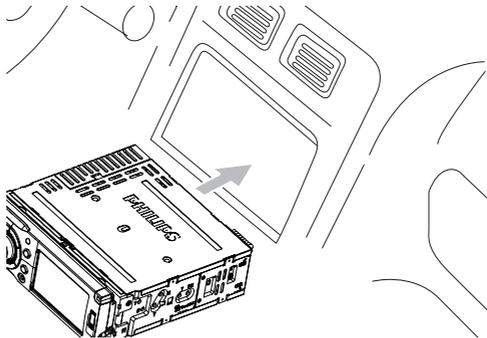


3

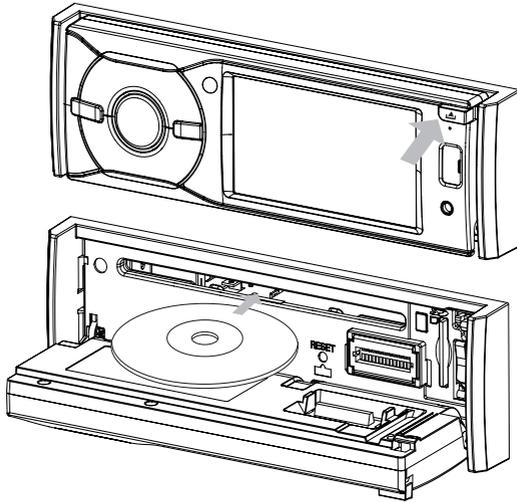

4

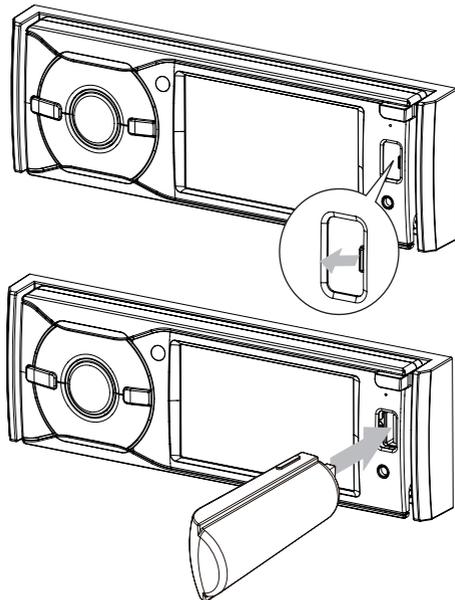

5

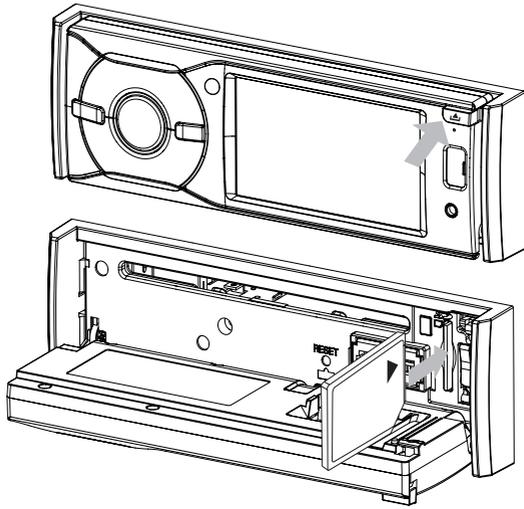

Install the car audio

These instructions are for a typical installation. However, if your car has different requirements, make the corresponding adjustment. If you have any questions regarding installation kits, consult your Philips car audio dealer.

Connect wires 1

- 1 Pull out the ISO connectors from the car dashboard and connect them to the bigger end of the supplied standard connector. **a**
- 2 Connect the other end of supplied standard connector to the unit. **b**
 - If necessary, connect the following: **c**

	Connector	Connect to/with
1	Blue cable	Sub woofer out
2	Green/white wire	Parking (see 'Connect parking brake wire' on page 16) switch (see 'Connect parking brake wire')
3	White cable	Left front line out
4	Red cable	Right front line out
5	White cable	Left rear line out
6	Red cable	Right rear line out
7	Pink wire	Camera
8	Yellow cable	Camera in
9	Yellow cable	Video in
10	Yellow cable	Video out 2
11	Yellow cable	Video out 1
12	White cable	Left audio in
13	Red cable	Right audio in

Mount in the dashboard 2

- 1 If the car does not have an on-board drive or navigation computer, disconnect the negative terminal of the car battery.
- 2 Ensure that car dashboard opening is within these measurements: **a**

- 3 Remove the two transport screws on the top of the unit. **b**
- 4 Remove the mounting sleeve with the removal keys. **c**
- 5 Install the sleeve into the dashboard and bend the tabs outward to fix the sleeve. **d**
- 6 Place the rubber cushion over the end of the bolt. **e**
- 7 Slide the unit into the dashboard until a click sound is heard. **f**
- 8 Reconnect the negative terminal of the car battery.

Turn on

- 1 Press **⏻** to turn on the unit.
 - ↳ The available OSD (On-Screen Display) languages display.



- 2 Touch a language to select.
 - ↳ The OSD language changes to the selected language immediately.
 - To turn off the unit, press and hold **⏻** for more than 2 seconds.

Set clock

- 1 Touch **🏠** to display main menu.
- 2 Touch **[Setting]** to display setting menu.
- 3 Touch **[Time]**.
- 4 Touch **[Clock Mode]** to switch between clock mode options.
- 5 Touch **[Set Time]**.

- 6 Touch ▼/▲ to adjust each setting.
- 7 Touch ⬆ to exit time setting menu.

Listen to Radio

- 1 Touch ⬆ to display main menu.
- 2 Touch [Radio].



- 3 Touch [FM] repeatedly at the right-lower corner to switch among the band options.
- 4 Touch ◀▶ to tune to a radio station manually.
 - To tune to a radio station automatically, touch and hold ◀▶ more than 1 second.

Play disc 3

You can play video, audio or images stored on the following discs:

- DVD video, DVD-R, DVD-RW
- VCD
- Audio CD, CD-R, CD-RW

- 1 Press ⬆ to open the front panel.
- 2 Insert the disc into the disc slot with label side facing up.
- 3 Close the front panel.
 - To remove the disc, press the ▲ button.

Play USB device 4

- 1 Slide the USB socket cover to the left.
- 2 Insert the USB device into the USB socket.

Remove the USB device

- 1 Press Ⓞ to turn off the unit.
- 2 Remove the USB device.

Insert SDHC card 5

- 1 Press ⬆ to open the front panel.
- 2 Insert the SDHC card into the card slot.
 - ↳ The unit starts playing from the SDHC card automatically.

Remove the SDHC card

- 1 Press Ⓞ to turn off the unit.
- 2 Press the card until you hear a click sound.
 - ↳ The card is now disengaged.
- 3 Remove the card.

Play with Bluetooth device

Pair the Bluetooth-enabled devices

The first time you connect your Bluetooth device to the unit, you need to pair the device to the unit. Pairing needs only to be done once. You can pair up to eight devices.

- 1 Turn on the Bluetooth function on your device.
- 2 Search for Bluetooth device with your device.
- 3 Select "CED370" in the pairing list.
- 4 Enter default password "0000".

Make a call

- 1 Pair the phone with the unit.
- 2 Touch ⬆ > [Media] > [BT] to access phone call menu.
- 3 Touch ▲/▼ to navigate through the options under this menu.

- 4 Touch on an option to access all the calls or numbers under this option.
 - 5 Touch on a call.
 - Or touch  to enter number directly, then touch green  to dial.
-

Receive call

By default, all incoming calls are received automatically.

- 1 If there is incoming call, **[Incoming call...]** flashes on the screen. Speak into the Bluetooth microphone.
- 2 When conversation ends, touch  (red) to terminate the call.

