

ADDENDUM

Addendum No. C2499M-A

Date November 17, 2005

Manuals Affected Spectra III™ SE Series Dome Drive Manuals: **C2443M-C**, **C2444M-C**, and **C2445M-D**

Manual Update The following are manual changes for Spectra III SE software Version 1.28 and greater and instructions for accessing a Spectra III EVS dome system.

Presets

Spectra III SE system presets have been upgraded from 80 to 150. Each of the user-definable presets can be programmed to use pan, tilt, camera settings, and motion detection. The programmable presets are numbered 1-32, 35-82, and 100-150.

The following presets are predefined for specific functions:



33	"Flip" command	95	Select main programming menu
34	"Pan zero" command	96	Stop a scan
88	IR filter IN (color)	97	Random scanning
89	IR filter OUT (black-white)	98	Frame scanning
90-91	Manual limit stops	99	Start auto scanning
92-93	Scan limit stops		

Title Text


Title Text has been added to the Dome Settings menu. The title text is the label used to identify the camera when it is viewed on the monitor. Up to 20 characters can be used for a title.

To edit the title text label, do the following:

1. Use the joystick to position the cursor beside EDIT TITLE TEXT.

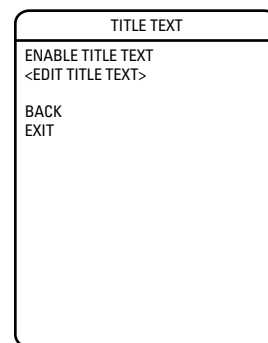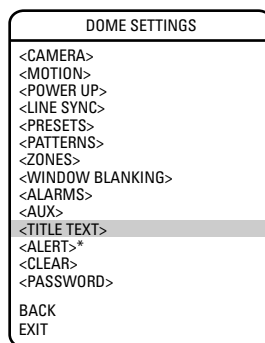

2. Press Iris Open.
3. Use the joystick to position the cursor beside a character. Press Iris Open to select the character. To clear a character, position the cursor beside BACKSPACE and then press Iris Open.
4. When the title is completed, move the cursor to OK. Press Iris Open to return to the Title Text menu.
5. Enable the title text label by doing the following:
 - a. Move the cursor beside ENABLE TITLE TEXT.
 - b. Press Iris Open. The cursor moves to the right.
 - c. Move the joystick up or down to view the selections. Select ON and then press Iris Open to enable the title text.

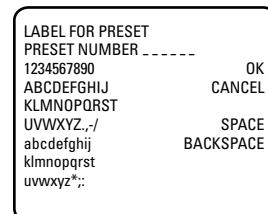

(Continued on next page)

Label Position

The Title Text label can be positioned anywhere on the monitor. This feature allows you to customize the appearance of your monitor screen.

To move the Title Text label, do the following:

1. Use the joystick to position the cursor beside a label.
2. Press Iris Open.
3. Use the joystick to move the label up, down, left, and/or right.
4. Press Iris Open.
5. Repeat steps 1 through 4 to position other labels.
6. Position the cursor next to Save and Exit. Press Iris Open to save the settings and exit the menu.

DISPLAY SETUP	
PRESET LABEL	2 (SECS)
ZONE LABEL	2 (SECS)
ZOOM	2 (SECS)
AZIMUTH/ELEVATION	2 (SECS)
DIRECTION	OFF
ALARM MESSAGE	2 (SECS)
<LABEL POSITIONS>	
RESTORE FACTORY DEFAULTS	
BACK	
EXIT	

LABEL POSITION	
[ZONE LABEL-----]	
[PRESET LABEL-----]	
[ALARM 1-----]	
[ALERT MESSAGE-----]	
[TITLE TEXT-----]	
SAVE AND EXIT	
CANCEL AND EXIT	
HELP	
XXX./-XXX.	
NE	
XXX.XX	<input type="text"/>

Spectra III EVS

If your dome drive is used in a Spectra III EVS Series (Endura™) dome system, the following instructions tell you how to access the main programming menu from an Endura WS5050 Workstation or VCD5000 video console display.

To access the main programming menu from a WS5050:

1. Right-click in the video pane of the Spectra dome system.
2. Click Preset and then click Select Preset.
3. Enter 95 and then click OK.

To access the main programming menu from a VCD5000:

1. Enter 95 for the preset action. The shortcuts menu appears.
2. Press the Preset button on the KBD5000.



Worldwide Headquarters • 3500 Pelco Way • Clovis, California 93612 USA • www.pelco.com
USA & Canada • Tel: 800/289-9100 • Fax: 800/289-9150
International • Tel: 1-559/292-1981 • Fax: 1-559/348-1120