ADDONICS TECHNOLOGIES
Model: ADSAIDE44

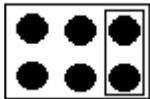## Installation Guide

Front View

44-pin IDE Connector

SATA Power and
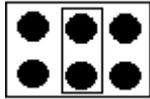Data Connector
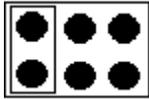
Master, Slave &
Cable Select
Jumpers

Pin 1 Marker
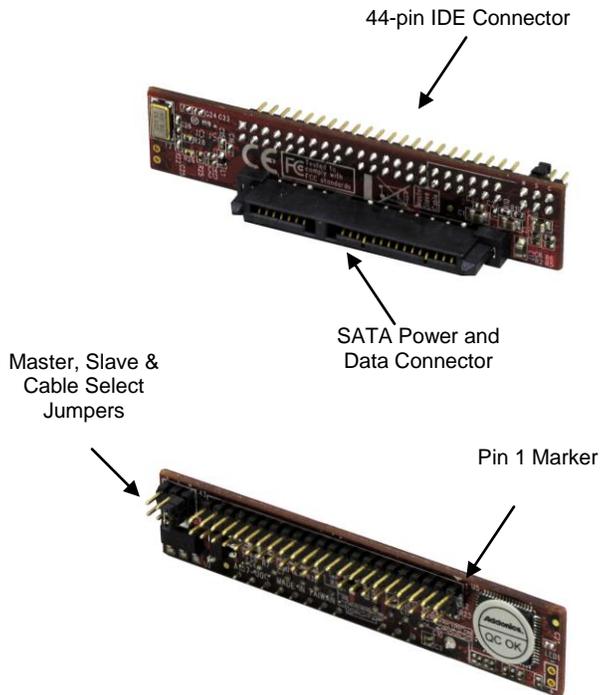
Jumper Settings

Master

Slave

Cable Select

Note: To set the SATA hard drive as a Master Device
when connected to an IDE channel, you need to
short the top pins located on the converter by
placing a jumper. As a Slave Device short the
middle pins.

1.   Locate the SATA connector of your 2.5" SATA drive.

15-pin SATA Power &
7-pin Data Connector

2.   Connect the converter board to the SATA connector of
the hard drive.

3.   (Optional) Connect the IDE ribbon cable to the 44-pin
connector on the converter. The red edge of the ribbon
cable needs to line up to pin 1 marker of the 44-pin
connector. The other end of the ribbon cable will be
connected to your motherboard's 44-pin IDE channel.