

FMWHS3 Hand Strap

Installation Instructions

PenCentra 130 and 200

The hand strap can be attached to your PenCentra 130 or PenCentra 200 pen tablet to provide additional support while using the system in a hand-held position.

Installing the Hand Strap

The hand strap can be installed in on of two locations on the pen tablet to accommodate right- or left-handed users. To install the hand strap,

1. Using a sharp object such as a penknife, pry the round, adhesive covers from the back of the system to expose the screw bosses in the location that you want to install the hand strap. See Figure 1 for the screw boss locations.

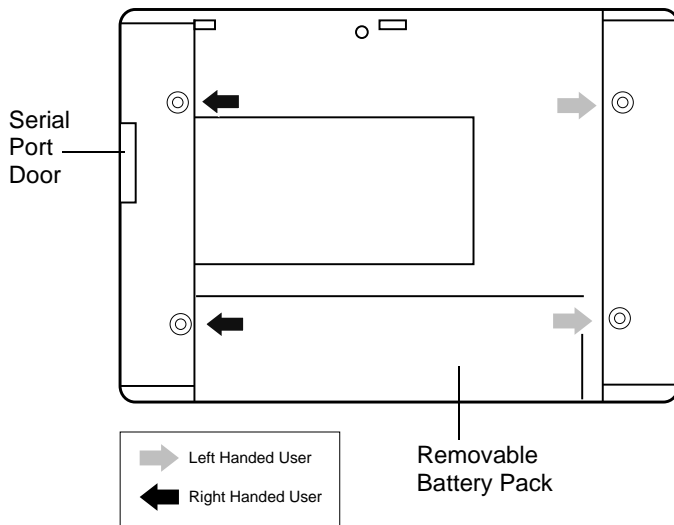


Figure 1. Hand Strap Fastening Points

2. Use the screws provided to attach the hand strap in the desired location as shown in Figure 2.
3. The hand strap is now attached to your system.

Using the Hand Strap

4. If you are a right-handed user, install and use the hand strap as shown in Figure 3. The Velcro strip on the hand strap allows you to adjust the strap to the most comfortable position. If you are a left-handed user, install and use the hand strap as shown in Figure 4.

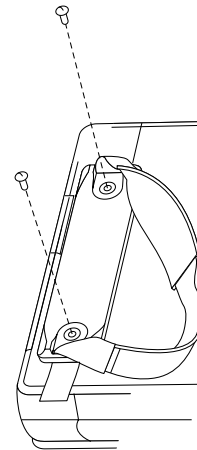


Figure 2. Installing the Hand Strap

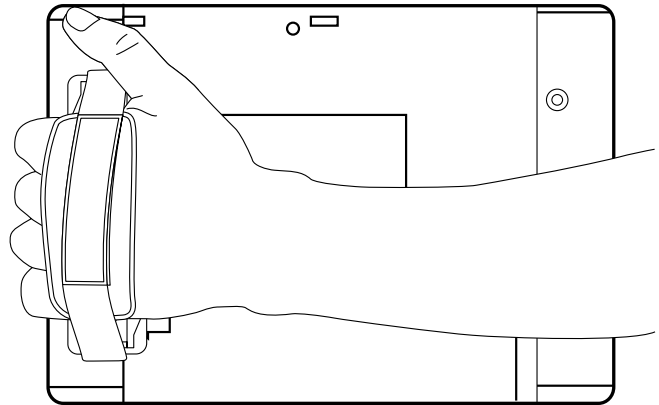


Figure 3. Using the Hand Strap (Right-handed User)

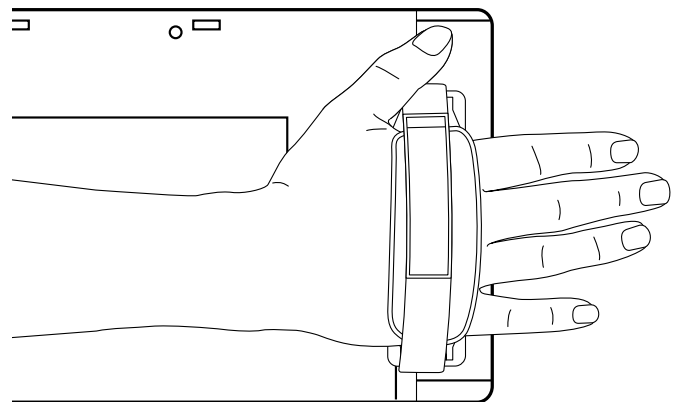


Figure 4. Using the Hand Strap (Left-handed User)