
## Lightolier

45 INDUSTRIAL WAY, WILMINGTON, MA 01887

## **OVER BED (OB SERIES) INSTALLATION INSTRUCTIONS**

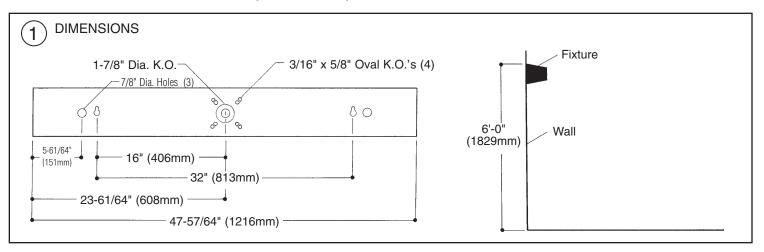


Place fingers between Lens and Housing. Pull Lens on Top and Bottom Spring-loaded Latches away from Housing. Release Lens from Bottom Spring-loaded Latches and lift Lens to clear Top Spring-loaded Latches to remove Lens.

Top Spring-loaded Latch (2)

Housing

Bottom Spring-loaded Latch

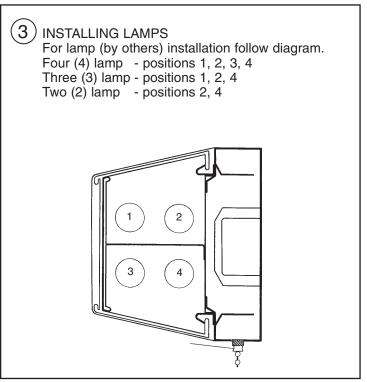

(4) REPLACING LENS
Hook Lens onto Top Spring-loaded Latches.
Hook Lens onto Bottom Spring-loaded Latches.
Push Lens and Spring-loaded Latches towards
Housing until Lens is secured to Housing.

