


## IR104E Entry Intercom System

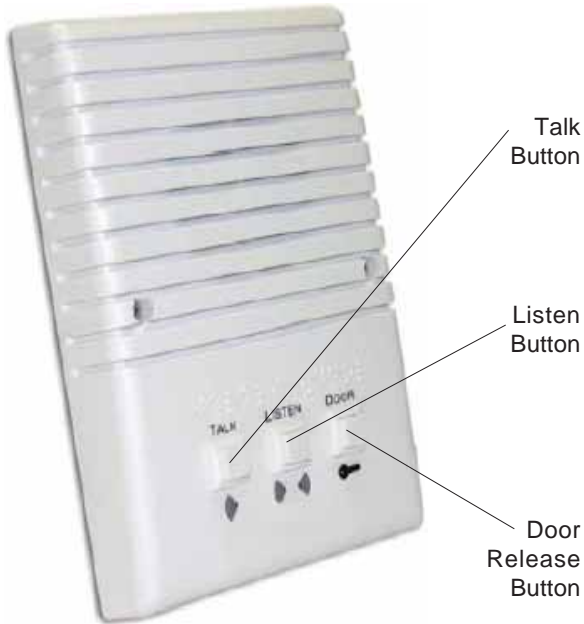

*(actual station may appear slightly different from the image shown)*

### APPLICATION

The Alpha Communications® IR104E series entry intercom system uses the most advanced technology available for positively identifying visitors to a building, (by voice) and securing the residents.

Visitors call from one or more lobby entrance stations, and the system will automatically switch all voice and door release functions to the calling entrance.

Once a visitor is positively identified (by voice), the resident can activate the entrance door release, by depressing the Door Release Button for a few seconds.

**NOTE:** Although this User Guide makes reference to the model# IR104E station, it can be used for almost any of the TALK / LISTEN / DOOR type intercom stations that are used for door entry purposes.

Copyright© 2008, Alpha Communications®, All Rights Reserved

### OPERATING INSTRUCTIONS

#### AT THE ENTRY STATION:

1. Momentarily depress button (for a few seconds) for apartment you wish to call. This will signal the pleasant tone signal at the IR104E apartment intercom station.
2. Reply in a normal voice when spoken to. Visitor reply is hands-free (unless a privacy handset is provided at the entrance station).
3. When door release activates (buzzes), enter through door.

#### AT THE IR104E INTERCOM STATION:

1. You will hear a pleasant tone signal when a visitor presses your button at the entrance station.
2. Press and hold the TALK button and say "who is there"?
3. Release the TALK button and immediately press and hold the LISTEN button, and wait for the reply from the visitor. You may repeat steps 2 and 3 as needed, to continue your conversation. Do not press the TALK and LISTEN buttons at the same time!

**NOTE:** When speaking into the IR104E station, speak at a normal voice level, and stand about 1-2 feet from the station.

4. If you do not wish to allow the visitor access to the building, do nothing further. Only if you are fully satisfied with the identity of the visitor, momentarily depress the DOOR button on the intercom, which will electrically activate the door release mechanism. Make sure you positively identify all visitors *before* activating the door release... or do **not** open the door!

In systems with multiple door entry stations, the system will automatically switch the voice and door release functions to the last entry station that placed a call.

### FEATURES

- Simple Push Button Operation
- Crystal Clear Voice
- Easy Flush or Surface Mount Installation (or desk with optional desk cabinet)
- Clear Voice Fidelity
- Rugged and Reliable. Simple to Operate

*Due to continuous product improvement, all colors, sizes, materials, finishes and specifications are subject to change without notice.*