

Vivitar®



Battery Charger + Battery

Item #VIV-CHBT-4C

User's
Manual

VIV-CHBT-4C Charger Limited One Year Warranty

Vivitar warrants this quality product to be free of defects in material and workmanship for a period of one year from the date of purchase. During the period, Vivitar will repair or replace the product at no charge for parts or labor.

TIME PERIOD OF THIS WARRANTY

The time period of this warranty starts from the date of the original purchase and expires on the first anniversary date of purchase.

WHAT IS NOT COVERED BY THIS WARRANTY

No express or implied warranty is made for any defects in this product which result from accident, abuse, misuse, failure to operate the product in accordance with relevant instructions, neglect, immersion in or exposure to chemicals or liquids, extremes of climate, fungus, excessive wear and tear/cosmetic damage and defects resulting from other extraneous causes such as unauthorised disassembly, repair or modification.

This warranty shall not extend to any incidental or consequential damages arising from the purchase, use or inability to use this product even if Vivitar has been advised of such damages. The laws of some countries and some States thereof do not allow the limitation of incidental or consequential damages, so the above limitation or exclusion may apply to you.

VIV-VB-4C Battery Limited Five Year Warranty

Vivitar warrants this quality product to be free of defects in material and workmanship for a period of five years from the date of purchase. During the period, Vivitar will repair or replace the product at no charge for parts or labor.

TIME PERIOD OF THIS WARRANTY

The time period of this warranty starts from the date of the original purchase and expires on the fifth anniversary date of purchase.

WHAT IS NOT COVERED BY THIS WARRANTY

No express or implied warranty is made for any defects in this product which result from accident, abuse, misuse, failure to operate the product in accordance with relevant instructions, neglect, immersion in or exposure to chemicals or liquids, extremes of climate, fungus, excessive wear and tear/cosmetic damage and defects resulting from other extraneous causes such as unauthorised disassembly, repair or modification.

This warranty shall not extend to any incidental or consequential damages arising from the purchase, use or inability to use this product even if Vivitar has been advised of such damages. The laws of some countries and some States thereof do not allow the limitation of incidental or consequential damages, so the above limitation or exclusion may apply to you.

Introduction

Thank you for purchasing the VIV-CHBT-4C digital camera battery charger with bonus battery. You can use this charger anywhere in the world to charge your VIV-VB-4C camera and camcorder batteries. With its rapid charging speeds, and easy to understand LED charging indicator, you will find that this charger provides you with a quick and simple solution to all of your charging needs.

Using Your VIV-CHBT-4C Charger

Step. 1




Slide your battery onto the charger. Be sure to match up the contact pins on the battery to the corresponding markings on your battery plate. The battery should slide firmly into place.

Using Your VIV-CHBT-4C Charger (continued)

Step.2


Red on

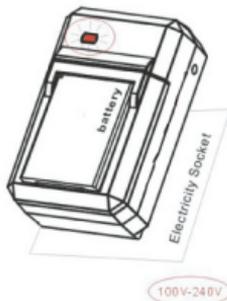

Plug your charger into an available electricity socket. When it is plugged in with a battery inserted, a red light will turn on to indicate the battery is charging.

Step.3

Green on

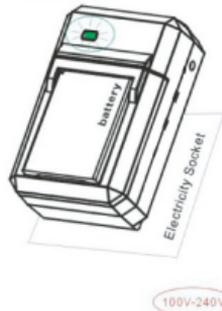

When your battery is fully charged, the light on the charger will turn green.

Using Your VIV-CHBT-4C Charger (continued)

Step.4



Use the DC car cable to connect to one of your car's DC power outlets if you would like to charge your battery while you are on the road.

Battery Compatibility

Your battery is compatible with the following cameras:

Vivitar V8025, VX029, DVR-865 and similar models

Specifications of Your Charger

Input: AC 100-240V 50/60HZ 110mA * DC 12V

Output: 3.7V===600mA

Compatibility: Charges Vivitar VIV-VB-4C Battery

Features of Your Charger

-Charges Your Battery in One Hour

-Automatically Detects Battery Voltage

-LED Charging Indicator

Specifications of Your Battery

Format: Lithium Ion

Capacity: 750mAh

WHAT TO DO WHEN SERVICE IS NEEDED

STEP 1. Package the product and relevant accessories carefully, using ample padding materials and a sturdy mailing container to prevent damage in transit.

STEP 2. Include in package:

- a) Evidence of date and place of original purchase (for example, a copy of your sales receipt).
- b) Detailed description of your problem.
- c) When possible, a sample evidencing the problem.

STEP 3. Return item (insured) to: (in the U.S.):

Vivitar
Attn: Technical Support
195 Carter Drive
Edison NJ 08817

(in the U.K.)

Sakar UK
2D Siskin Parkway East
CV3 4PE, UK

When service is complete, the product will be returned to you shipping prepaid. In the event the product is deemed to be not faulty or the defect is a result in wear and tear, Vivitar may levy a handling charge for the return of the product. This warranty gives you specific legal rights. You may also have other rights which vary from country and State to State thereof. For more information visit our website www.vivitar.com

TECHNICAL SUPPORT

For technical support issues please visit our website at www.vivitar.com. You can find manuals, software and FAQ's at the website. Can't find what you are looking for? E-mail us at support@vivitar.com and one of our technical support team members will answer your questions. For phone support in the US please call 1-800-592-9541, in the UK call 0800 917 4831. If you would like to call from anywhere else, please visit www.vivitar.com for your local toll free number.

Vivitar