




Microwave Bottle Sterilizer • User Guide

- Dose not contain Bisphenol A

Thank you for choosing a product by *hisense*.


This product is designed to provide a safe and easy way to keep your baby bottles sterilized. Please take a few minutes to carefully read the following instructions and warnings before using your hisense microwave bottle sterilizer for the first time.

PARTS:

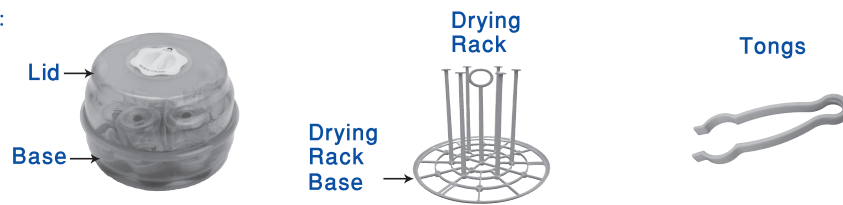

ASSEMBLING DRYING RACK:

- Place drying rack according to the mark (this side up)
- Insert A into slot B
- For 4-6 bottles place C into slots in circle D.
- For less than 4 bottles place C into any slots you choose.

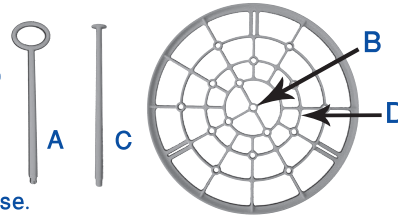

BEFORE FIRST USE:

Wash all items with soap and warm water, then rinse with clean water.

DIRECTIONS:

- Place drying rack in sterilizer base.
- Place bottles and bottle accessories on drying rack.
- Pour 200 ml./7oz. of tap water into base. (use baby bottle for measuring).
- Place lid on base and make sure it is properly closed.
- Place sterilizer in center of microwave.
- Set microwave timer to 5 minutes at high level.
- After microwave operation ends, wait at least 2 minutes to allow sterilizer to cool down, Then carefully remove from microwave.
- Use tongs to remove the bottles.
- Bottles remain sterile for up to 24 hours if lid remains closed.



IMPORTANT:

- Always use recommended amount of water. Too much or not enough water will affect the operation of the sterilizer.
- Never use disinfectants, chemicals or cleaning detergents of any kind while sterilizing baby bottles.
- If using an integrated microwave-oven device, make sure the oven function is disabled.

CLEANING AND CARE:

- Empty water left in sterilizer base.
- Wash to prevent accumulation of scale.
- Do not clean the sterilizer with abrasive materials.
- Store sterilizer only when completely dry.
- All sterilizer parts are dishwasher safe. (place on top dishwasher's shelf).

WARNINGS:

- The sterilizer and contents will be extremely hot when microwave action ends. Handle with caution!
- When removing from microwave, be sure to keep the sterilizer level to avoid spilling hot water.
- When opening the lid, turn it away from your body to avoid scorching from hot steam.
- Use supplied tongs to handle sterilized items.
- Do not over-load sterilizer.
- Do not place bottle caps upside-down to prevent accumulation of water.
- Do not leave sterilizer parts in direct sun light or heat-source when not in use.
- Do not clean bottle brush in sterilizer.
- Use only to sterilize baby bottles and/or baby bottle accessories.
- Keep out of the reach of children.
- Do not use without water.

Manufactured for *hisense*

Visit us at : www.hisense.co.il

For any questions please contact us at: hisense@netvision.net.il