

IS 3000 User Manual - Making a roll into a poly bag


01



Cut a roll as long as you want

*Cut the roll, considering enough margin up to 6cm more space than the size of the content to be packaged.


02

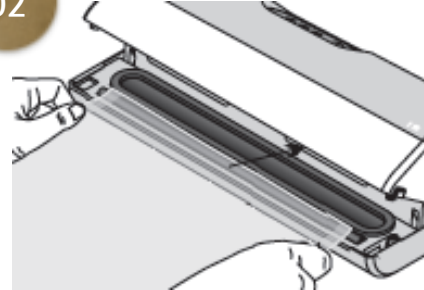

Insert the power plug to an outlet

*Put the vacuum sealer, IS 3000 on the table and turn on power switch and then put the roll for sealing


03

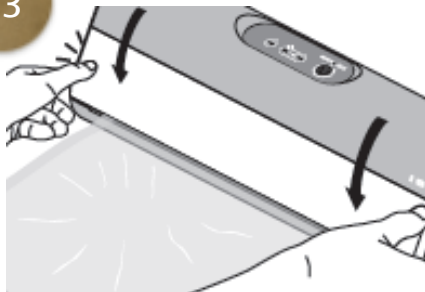

Open the cover and put the roll on the heating line, pushing the buttons on either side until clicking

*Put the roll on heating line and then close Vacuum sealer cover

04

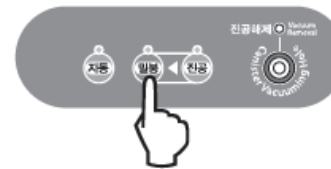


Tap the sealing button

*Push sealing button and finish one side sealing of the roll

*Make sure that the sealing part of the roll is still hot right after the sealing procedure.

IS 3000 User Manual - Vacuuming

05

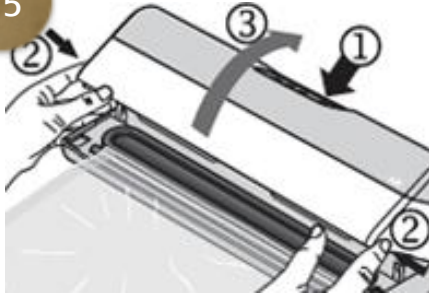


Upon pushing the vacuum-removal button on the both edges of the cover, open the cover and take out the sealed bag.

*Without pushing the vacuum-removal button, you cannot open the cover.

*Check out whether the poly bag is tightly sealed or not.


06

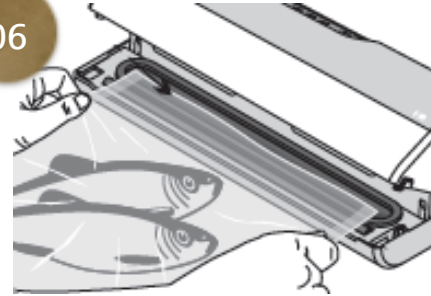

Vacuuming

Put the content to be stored inside the poly bag.
*Please, not too much or big to be filled in

07

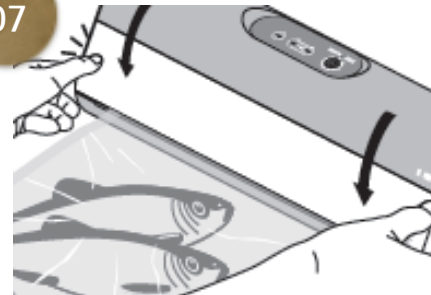


Put the other side which is not yet sealed in the below part of the chamber and close the cover and tap the both buttons on the both edges in turn until clicking.

End of bag should be located in the center of Chamber

IS 3000 User Manual - Vacuuming

08

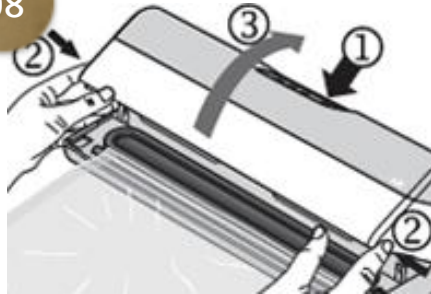

**Press
the automatic button**


*The sealing lamp turns into orange, red into green during the vacuuming and sealing.

*Upon turning orange light into green, Vacuuming is not yet completed.

If you would like to stop in the middle of the vacuuming process, push the automatic button to halt it and open the cover to rerun the procedure all over again.

*It take up to maximum 45 seconds to vacuum it packaged once and stop automatically after vacuuming process finished.

09

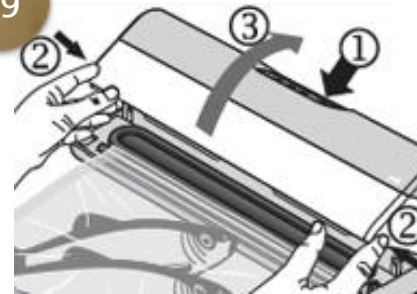

Pushing the (1)[vacuum removal button](#), press the (2)[cover-release buttons](#) on both ends of above cover and open the cover to take out the poly bag.

*Make sure that the poly bag is entirely sealed.