

Lenox GS


OWNER'S MANUAL

Please read user's Manual thoroughly
before using pedicure spa



Copyright 2010 by J&A USA Inc.
Printed in USA

***Senox* GS**
Identification

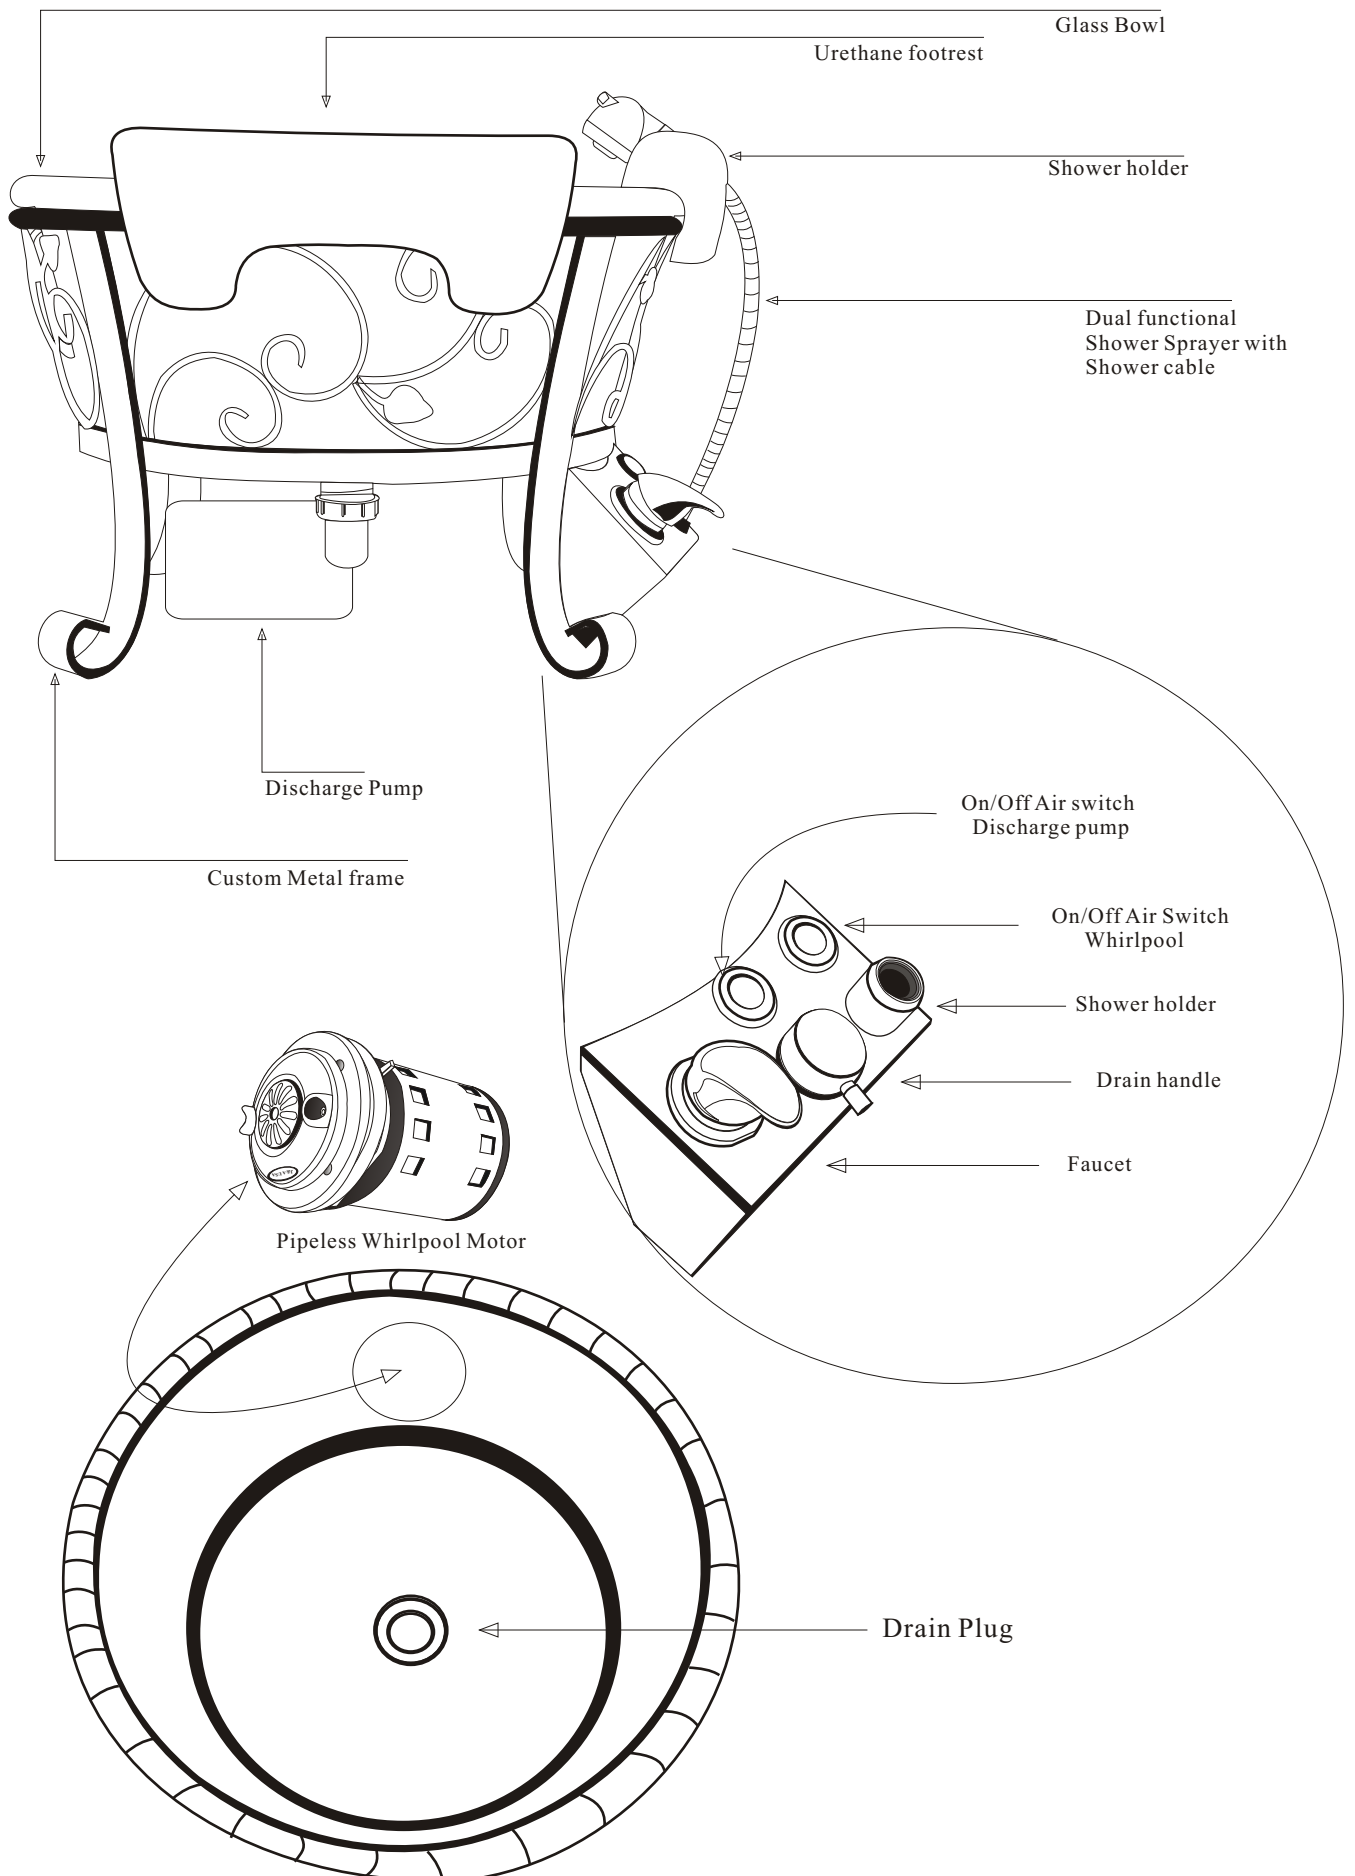

Lenox -GS Specification

Glass Bowl with Stand

Shipping Information

Dimension	28"L x 27"W x 34"H - Include Spa Basin, Stand, and Carton 48"L x 40"W x 6"H - Per Single Shipment 66"L x 37"W x 6"H - Per Multi Shipment
Weight	125 lbs - Include Glass Bowl, Stand, carton and pallet 230 lbs - Multi shipment

Lenox-GS information

Dimension	25"L x 25"W x 15.1/2"H
Net Weight	75 lbs
Water Capacity	5.5 Gallons
Pipeless Motor	115V, 60Hz, 0.3A, 30W
Discharge Pump	120V, 60 Hz.
Power source	115V, 2.5A, 60Hz (GFCI Protected)

Caution: Pedicure Spa must be installed by a licensed electrician and a licensed plumber, conforming to all local and national electrical code.


Construction	Glass Bowl, Metal Stand, Pre-Plumbed w/D Pump
Chair Specification	Recommended Vertical dimension from seat bottom to Floor 16"
Magnetic Pipeless	2 water channels, Fully drained, easy to clean and sanitize. No closed loop circulating pipes.
Electrical Switches	On/Off air activated switch / Optional power Pump

Dura-Jet III

Safety Instructions

When using electrical equipment, basic safety precautions should always be followed to reduce the risk of fire, electrical shock, and injury to persons, including the following:

1. Read and follow all instructions before using the equipment.
2. Keep the cord out of heavy traffic area. To avoid fire hazard NEVER put the cord under the rugs, near heat generating devices.
3. Always turn off the equipment before servicing.
4. Do not drop or insert any object into any openings.
5. Do not operate any equipment with a damage parts.
6. Any other use not recommended by the manufacturer may electrical shock or injury to persons.
7. Never use outdoors
8. Do not attempt to repair or adjust any electrical or mechanical functions on the unit.

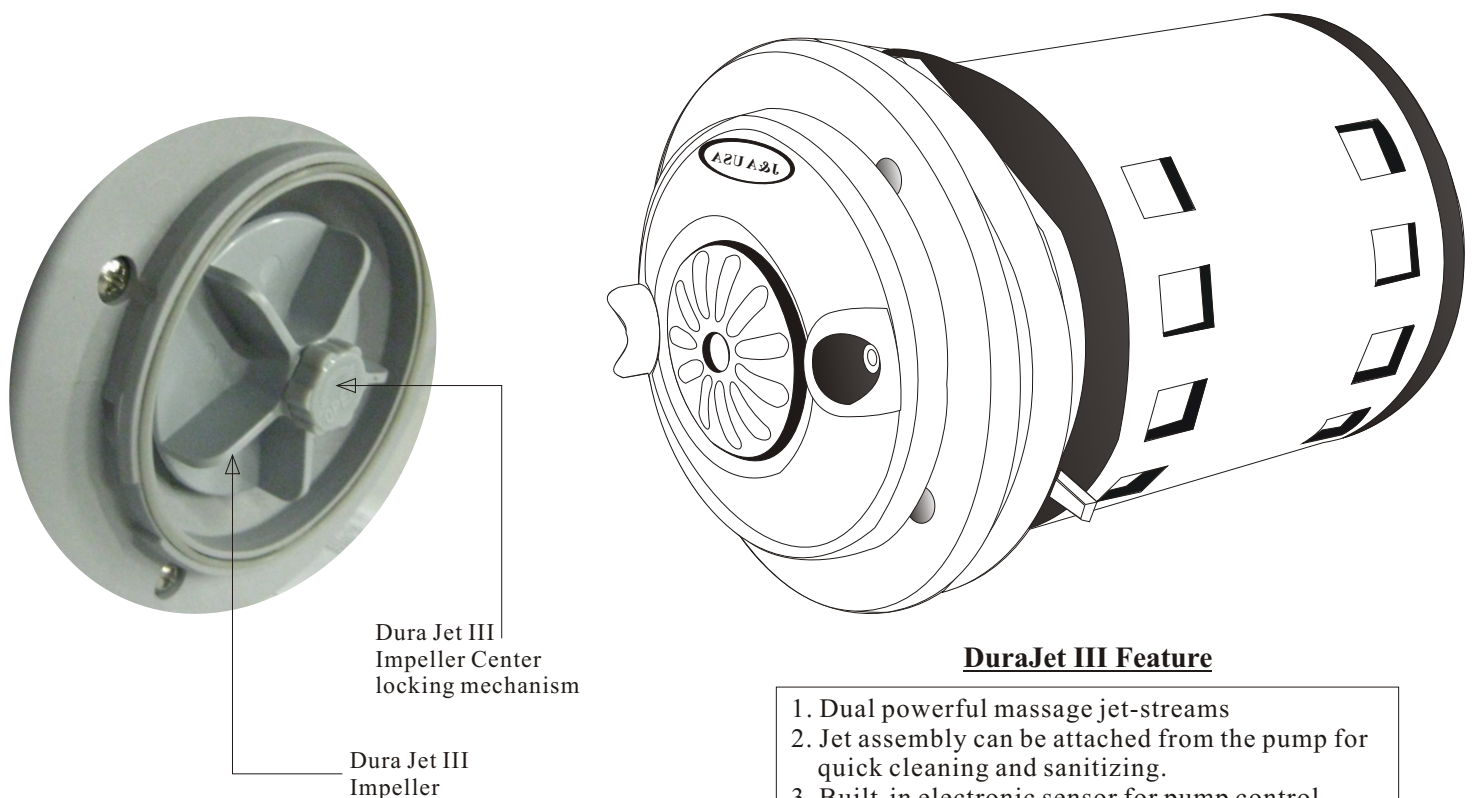

Cleaning Instruction

1. Turn the unit off and wait until the motor is fully stops.
2. Remove the front jet cover and notice the locking screw in the center
3. Remove the locking center screw (turn counter clockwise) and pull out impeller from housing.
4. Use Anti-Bacterial solution (EPA Registered) to clean all part/s.
5. After sanitization, place impeller onto the motor shaft and fasten with center locking screw (Turn clockwise)

DuraJet III Feature

1. Dual powerful massage jet-streams
2. Jet assembly can be attached from the pump for quick cleaning and sanitizing.
3. Built-in electronic sensor for pump control.
4. AC motor (long life)
5. Extremely low power consumption .
6. Manufactured in USA.

DURA-JET III Specifications

Model: DURA_JETIII -120Vac, 0.4 Amp. 60Hz,

Pump: Dual Air Jet Flow


Mounting: Single 3.5" hole Diameter
Auto tighten Mounting screws(4)

MAGNA-JET (OPTIONAL)

Safety Instructions

When using electrical equipment, Basic safety precautions must be followed to reduce the risk of fire, electrical shock, and injury to Persons.

1. Read and follow all instructions before using the equipment.
2. Keep electrical cord out of heavy traffic area. To avoid fire hazard NEVER place electrical cord under the rug, near heat Generating devices.
3. Always turn power off the equipment before service.
4. Do not drop or insert any object into any openings.
5. Do not operate any equipment with damaged parts.
6. Any other use not recommended by the manufacturer may cause electrical shock or cause injury to person/s.
7. Never use it outdoors
8. Do not attempt to repair or adjust any electrical or mechanical.

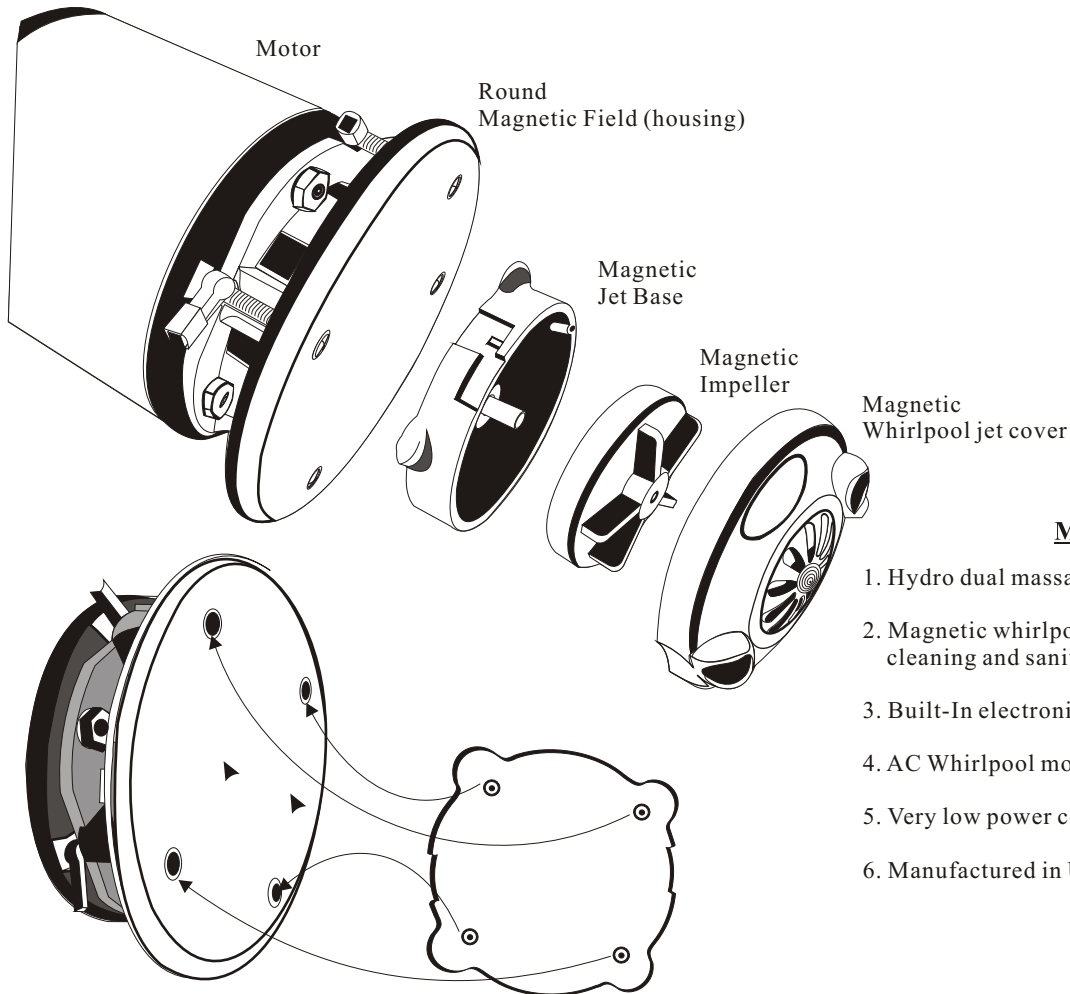

MAGNA-JET Features

1. Hydro dual massage jet stream
2. Magnetic whirlpool jet cover can be remove for quick cleaning and sanitizing.
3. Built-In electronic sensor for pump control.
4. AC Whirlpool motor (long life)
5. Very low power consumption (27W)
6. Manufactured in USA.

Cleaning Instruction

1. Turn off the unit and wait until the motor is fully stops.
2. Hold Hydro whirlpool jet cover firmly and pull to separate from the round magnetic field.
3. Turn hydro whirlpool jet cover to left to open and pull out impeller.
4. Use Anti - Bacterial solution (EPA Registered) to clean all parts.
5. After sanitize all parts, place impeller and close hydro whirlpool jet cover to turn right to lock
6. Hold firmly the whirlpool cover jet and gently place it onto the round magnetic field. Do not release the hydro whirlpool jet cover until Jet cover is on the round magnetic housing.

MAGNA-JET Specifications

Model: MAGNA-JET - 120VAC, 60Hz, 1.0Amp, 27W

Pump: Hydro-Massage Dual jet Flow

Mounting: Single 3.5" hole Diameter
Auto tighten Mounting screws(4)

How to USE Magnetic jet !

WARNING: DO NOT RUN DRY, BASIN MUST FILLED WITH WATER TO LEVEL INDICATOR.


CAUTION: MAGNETIC JET COVER ASSEMBLY MUST ALIGN WITH DISCHARGE PORT POSITIONED AT 3/9 O'CLOCK.

WHEN READY TO USE, **MAKE** SURE JET COVER IS POSITIONED AT **3/9 OCLOCK** FOR PROPER WHIRLPOOL ACTION IN THE BASIN. IF JET COVER IS **NOT** ALIGN AT 3/9 O'CLOCK, WATER WILL SPLASH OUTSIDE OF THE BASIN.





PROPER WAY TO USE MAGNETIC JET SYSTEM

- 1- FILL THE WATER TO WATER LEVEL INDICATOR.
- 2- HOLD MAGNETIC JET FIRMLY TO BRING CLOSER TO THE ROUND MAGNETIC FIELD AND DO NOT RELEASE THE MAGNETIC JET PREMATURELY OR THIS WILL CAUSE IMPACTS ON THE JET COVER AND THE ROUND MAGNETIC FIELD(HOUSING) SHORTENING THE LIFE EXPECTANCY OF THE JET COVER. WHEN THE JET COVER NEARS THE ROUND MAGNETIC FIELD, PLACE JET COVER ONTO THE FOUR DIMPLE AREA (SEE DIAGRAM). THE JET COVER MUST ALIGN WITH DISCHARGE PORTS POSITIONED AT 3/9 O'CLOCK.
- 3- WHEN FINISHED WITH CLIENT, DO NOT REMOVE MAGNETIC JET UNTIL MOTOR IS FULLY STOPPED.
- 4- WHEN MOTOR IS FULLY STOPPED, REMOVE MAGNETIC JET COVER FROM THE MOTOR AND REMOVE JET COVER AND IMPELLER FOR SANITIZATION.

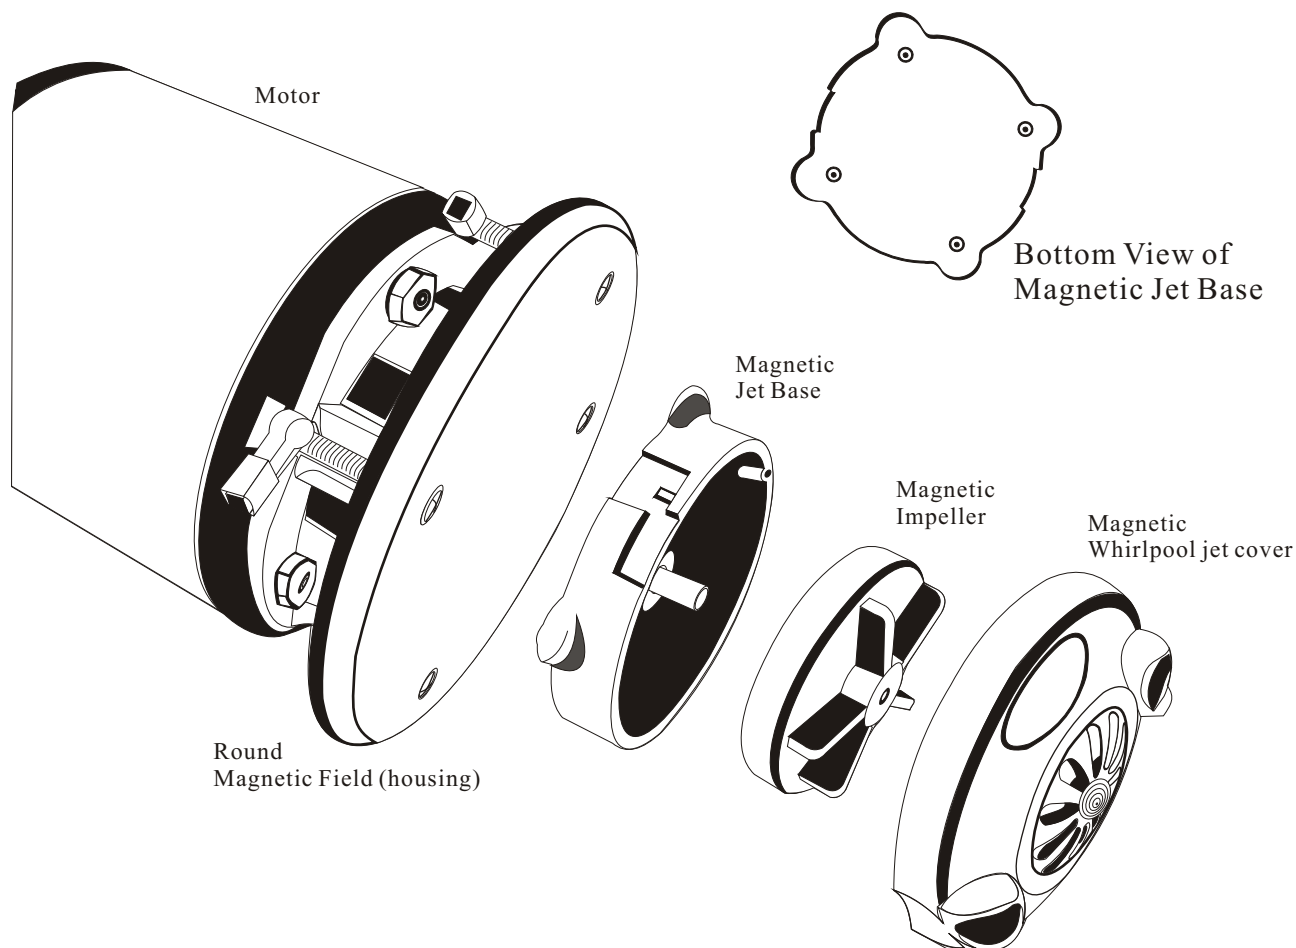

Lenox GS Dimension

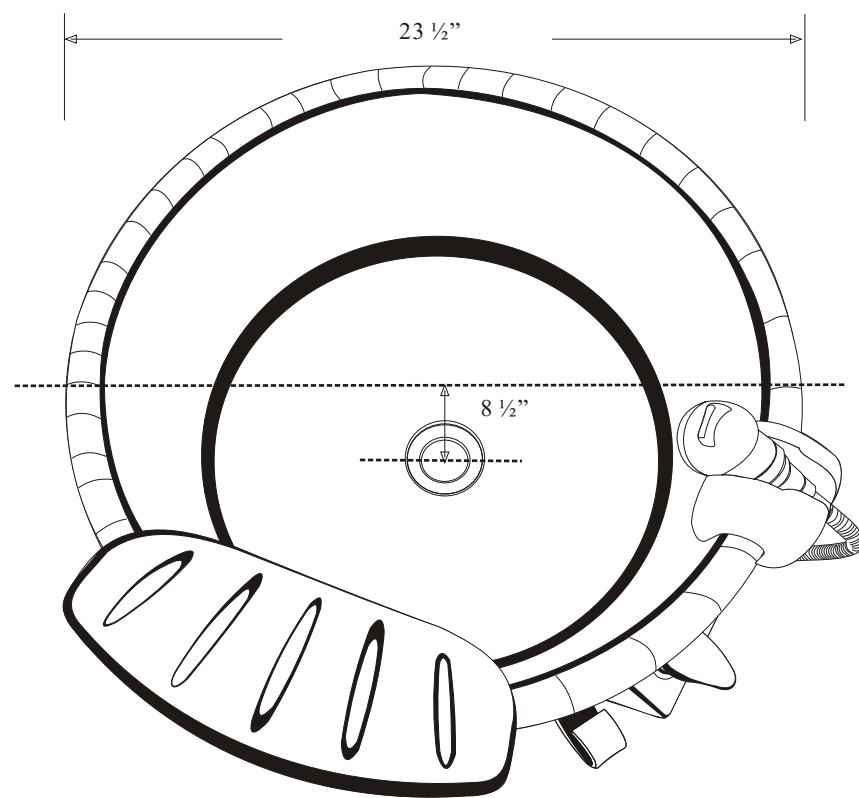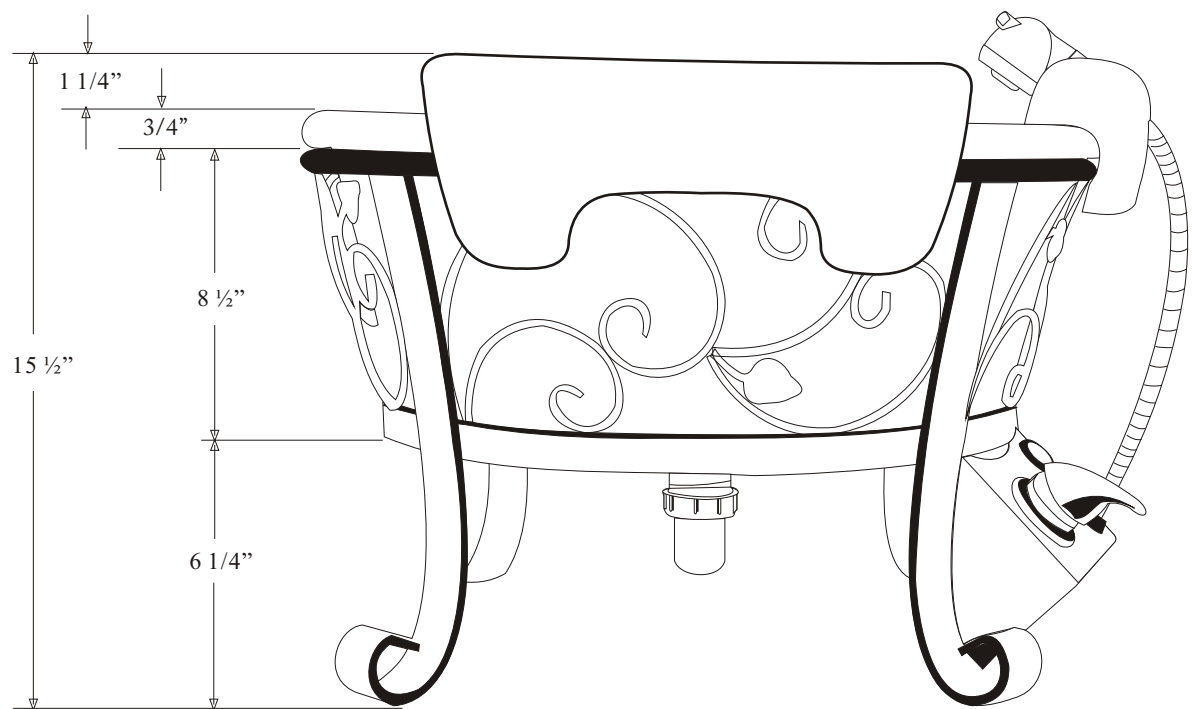

Lennox GS

Plumbing Requirement

Electrical Requirements:
One dedicated GFCI protected wall outlet (15 amp) MUST be used per unit


Each unit will be supplied with standard three ground electrical cord

Provided

- Multi Outlet Power box
- Pre-installed Discharge Pump (1 1/4") with 2 minute timer
- Pre-Plumbed hot and Cold (1/2") Water Supply

Requirements

- Utility Valve(2) - Hot and Cold (3/8")
- Hot and Cold braided flex hose (1/2" x 3/8" x desirable length from the wall)
- Flex Hose (1 1/4") or tube connection to be made from discharge pump To main Drain.

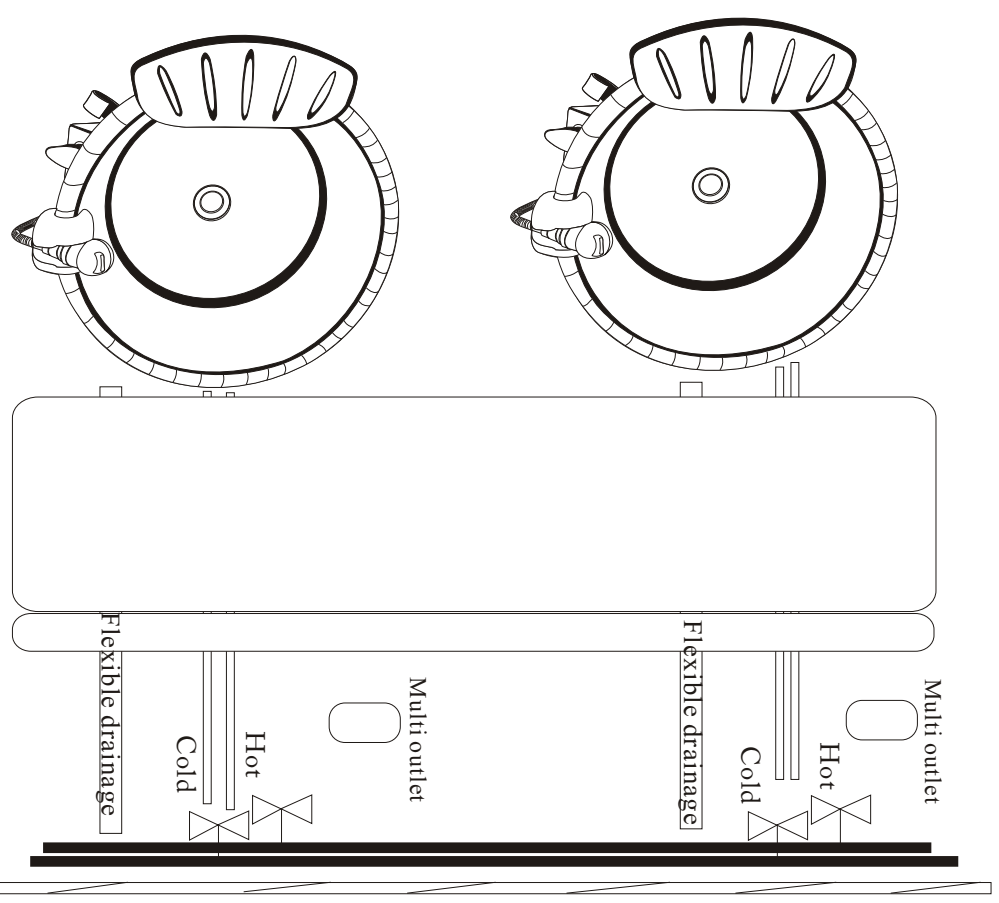

DISINFECTING YOUR PEDICURE SPA

Note: Please be advised that it is responsibility of purchaser/user to adhere strictly to the following procedure.
Any non-compliance will be considered negligence of the purchaser/user.

The Bureau of barbering and cosmetology requires that salons using whirlpool pedicure spas use the following disinfecting Procedures to ensure proper cleaning and maintenance of the equipment, and to prevent bacterial infection.

After each customer:

1. Drain all water and remove all debris from the pedicure spa.
2. Clean the surfaces and walls of the basin with soap or detergent and rinse with clean, clear water.
3. Disinfect with an EPA - registered disinfectant with bactericidal, fungicidal, and virucidal activity.
4. Wipe dry with clean towel.

At the end of the day:

1. Remove the intake suction screen, All debris trapped behind the screen of each pedicure spa must be removed. And the screen and the inlet shall be washed with soap or detergent and water
2. Before replacing the screen, Totally immersed the screen into an EPA- registered disinfectant with bactericidal, Fungicidal, and virucidal activity.
3. Finally, flush the whirlpool system with low-suding detergent and warm OR an EPA - registered cleanser for 10 minutes. Rinse with clean flash water and drain.

Every other week

1. After following the outlined required cleaning procedures for the end of each day, fill the basin with warm water And 1 teaspoon of 5.25% powdered bleach for each one gallon of water.
2. Circulate the solution through the whirlpool system for 5 to 10 minutes.
3. The solution rests for over night (at least 6-10 hours)
4. The following morning (before the first customer) drain and flush the system with water.

USER RECOMMENDATION

PLEASE READ THE MANUAL THOROUGHLY BEFORE USE TO ENSURE CORRECT OPERATION.

THOSE UNDER A DOCTORS CARE OR WHO ARE EXPERIENCING ONE OR MORE OF THE FOLLOWING DONDITIONS SHOULD CONSULT THEIR DOCTOR BEFORE USE.

- You are receiving medical treatment or are feeling ill.
- Your body shows any cute symptoms.
- You have heart disease.
- You are pregnant or having a menstrual period.
- Your doctor has ordered you to rest.
- You have a back disorder resulting from an accident or disease.
- You have a high fever.
- You have sensory disorders.
- You have medical electrical device (e.g. pacemaker).
- You have service interruption in the circulation of the legs.
- You are diabetic.

FAILURE TO DO SO MAY RESULT IN ACCIDENTS AND HEALTH PROBLEMS.



Glass bowl Care and Cleaning

CARE AND CLEANING

Clean the surface of your ***JSG Oceana*** glass product with mild soap and warm water. Wipe the entire surface completely dry with a clean, soft cloth.

LIMITED ONE - YEAR WARRANTY

JSG Oceana Glass products are warranted free of manufacturing defects. ***JSG Oceana*** LLC will, at its election, repair, replace, or make appropriate adjustment where ***JSG Oceana*** LLC inspection discloses any such defects occurring in normal usage within one year after installation. ***JSG Oceana*** is not responsible for installation or removal costs. Proof of purchase requires the original sales receipt from the original consumer purchaser and must accompany all warranty claims.

Implied warranties, including that of merchantability or fitness for a particular purpose, are expressly limited in duration to the duration of this warranty. *JSG Oceana* LLC disclaims any liability for special, incidental or consequential damages.

Some States do not allow limitation on how long an implied warranty lasts or the exclusion or limitation or special, incidentals, or consequential damages, so these limitations and exclusions may not apply to you. This warranty gives you specific rights. You may also have other rights which vary state to state.

This limited warranty provides specific legal rights as they apply within U.S.A, and other rights may be available, but may vary from country to country.

Crystalline material and air bubbles are a unique characteristic of art glass. They are an inherent part of the glass making process and are not detrimental to the mechanical strength or function of the glass basins. Each piece of *JSG Oceana* is individually inspected for durability and superior performance.

J&A USA Inc. Limited Warranty

J&A USA Product: Lenox, Episode, Petra, Toepia, Cleo, Pacific
J&A Accessories: Tri-Stool, Euro Stool, Galaxy Stool and Cookie stool

The Original Purchase Receipt is required as a proof of purchase.
Duration of the Limited Warranty for J&A Accessories : 90 Days from date of Purchase
Duration of the Limited Warranty For Pedicure Spa: One year from date of Purchase
Coverage on Limited Warranty: Part/s & Labor

Extent of Limited Warranty

J&A USA warrants that the J&A Pedicure Spas that you have purchased are free from defects in material or workmanship under normal use during the Limited Warranty period. The Limited Warranty period starts on the date of purchase. You will be required to provide proof of purchase as a condition of receiving warranty service.

During the Limited Warranty period, J&A will, at its sole discretion, repair or replace any defective component. All component parts removed under this Limited Warranty become property of J&A USA Inc.

In the unlikely event that J&A is unable to repair or provide equivalent parts for defective product covered under the Limited Warranty, J&A will, at its sole discretion, may elect to provide customer with a replacement unit of J&A's choosing that is the same or equivalent to customer's J&A Pedicure Spa in performance OR may give customer a refund of the purchased price in lieu of replacement. Let it be understood that J&A has no obligation to repair, replace or refund until the verification process by J&A USA is deemed complete. J&A USA Inc's Limited Warranty is valid in the USA where the covered J&A's Pedicure Spa is distributed by J&A and its distributors.

It is required that serial number be made available when requesting a limited warranty service. Failure to do so may result in "service request" to be categorized as that of "out of warranty" request which as a result, will incur charges to the requester.

Unless otherwise stated, and to the extent permitted by local law, J&A will, at its sole discretion, repair or replace any defective component with new or parts equivalent to new. Replacement parts are warranted to be free from defects in material or workmanship for ninety(90) days or for the remainder of the Limited Warranty period of the J&A's Pedicure Spa at issue, whichever is longer.

Warranty Exclusion

J&A USA is not responsible for damage that occurs as a result of customer's failure to follow the instructions intended for J&A Pedicure Spa. The Limited Warranty does not apply to consumable part/s as well as to parts considered "wear & tear" items such as , but not limited to, whirlpool components, showerhead, impeller, jet covers and does not extend to Product which has (1) been improperly or inadequately maintained or modified (2) been modified in any way or misused (3) been installed / set up on improperly prepared site. (4) been tampered with in any way such as (a) improper installation (b) usage of re-manufactured or refurbished plumbing component/s. (C) abused, (d) neglected, (e) Moved from its initial location of the installation, and (f) Subject to faulty maintenance, abuse, misuse, accident or other damages.

The Limited Warranty does not apply to local building code compliance. Since local building codes vary considerably, the customer must check with a local building or plumbing contractor to ensure the local code compliance is met before installation. The Limited Warranty applies only to the original purchaser of the J&A product.

Limitation of Warranty

TO THE EXTENT ALLOWED BY LOCAL LAW, NEITHER J&A NOR ITS THIRD PARTY SUPPLIER MAKES ANY OTHER WARRANTY OR CONDITION OF ANY KIND WHETHER EXPRESSED OR IMPLIED WITH RESPECT TO THE J&A PRODUCT AND SPECIFICALLY DISCLAIM THE IMPLIED WARRANTIES OR CONDITIONS OF MERCHANTABILITY, SATISFACTORY QUALITY, AND FITNESS FOR A PARTICULAR PURPOSE. Some state or provinces do not allow limitations on the duration of an implied warranty. In this case above limitation or exclusion may not apply to you. This warranty gives you a specific legal right that varies from State to State or province to province.

Limitation of liability

TO THE EXTENT ALLOWED BY LOCAL LAW, EXCEPT FOR THE OBLIGATIONS SPECIFICALLY SET FORTH IN THIS WARRANTY STATEMENT, IN NO EVENT WILL J&A OR ITS THIRD PARTY SUPPLIERS BE LIABLE FOR ANY DAMAGED CAUSED BY J&A'S PEDICURE SPA OR THE FAILURE OF J&A PEDICURE SPA INCLUDING ANY LOST PROFIT OR SAVINGS, BUSINESS INTERRUPTION, LOSS OF USE OR ANY OTHER COMMERCIAL OR ECONOMIC LOSS OF ANY KIND, OR SPECIAL, INCREMENTAL, OR CONSEQUENTIAL DAMAGES. THIS LIMITATION OF LIABILITY APPLIES WHETHER DAMAGES ARE SOUGHT, OR A CLAIM MADE, UNDER THIS LIMITED WARRANTY OR AS A TORT CLAIM, A CONTRACT CLAIM OR ANY OTHER CLAIM.