

*Fluorescence and
Optoelectronics
Research for the
Communication between
Ecophysiology
and
Agriculture*



DUALEX SCIENTIFIC+™



USER'S MANUAL

Table of content

I	DUALEX SCIENTIFIC+™ OPTICAL LEAF-CLIP.....	1
I.1.	DESCRIPTION	1
I.2.	DUALEX SCIENTIFIC+™ TRANSPORT CASE	2
II	GETTING STARTED	3
II.1.	CHARGING THE DUALEX SCIENTIFIC+™	3
II.2.	SWITCHING ON THE DUALEX SCIENTIFIC+™	3
II.3.	MAIN MENU	3
II.4.	SUB MENU 'MEASUREMENT'	4
II.4.a.	Calibration	4
II.4.b.	Measurement	4
II.4.c.	How to delete a measurement.....	6
II.4.d.	Power alarm.....	7
II.4.e.	Management of the memory	7
II.5.	SUBMENU 'USB'	8
II.5.a.	Connection	8
II.5.b.	DUALEX SCIENTIFIC+™ update	9
II.6.	SUBMENU 'SETTINGS'	12
II.6.a.	GPS	12
II.6.b.	Format.....	13
II.6.c.	Measurement	14
II.6.d.	Date & Time	15
II.6.e.	Contrast.....	15
II.6.f.	Standby.....	15
II.6.g.	Languages	16
II.6.h.	About	16
III	DATA FILE	17
IV	DUALEX SCIENTIFIC+™ TECHNICAL SPECIFICATIONS.....	18
V	PRECAUTIONS OF USES.....	19
V.1.	ENVIRONMENT OF USE	19
V.2.	SHOCKS AND VIBRATIONS	19
V.3.	STORAGE	19
V.4.	CLEANING.....	19
V.5.	EXCHANGE OF BATTERIES	19
VI	CONDITIONS OF GUARANTEE.....	20
VII	FAQ	21

I DUALEX SCIENTIFIC+™ optical leaf-clip

I.1. Description



1) Handle to open the clip: when pressing on this handle, the clip opens and the leaf can be introduced between the 2 heads. When released, the heads hold the leaf allowing the measurement to be done. The testing position of the DUALEX® is with the clip closed.

2) The head that contains 5 different LEDs: 1 UV-A emitting LED, 2 visible-emitting LEDs and two NIR-emitting LEDs.

3) The head that contains the optical detector: a filtered PIN photodiode.

4) Keyboard.

5) LCD Screen.

6) USB Interface that allows to download data, to upgrade the software and to charge the DUALEX SCIENTIFIC+™ unit.

7) The wrist-strap must be tied to the DUALEX SCIENTIFIC+™ unit in order to avoid the fall of the device.

The 5 buttons on the **keyboard** are used to navigate through the software. The buttons are multitask, and every action depends on the state of the tool.

- The button  is used to switch on the DUALEX SCIENTIFIC+™ with a long press. This button is also used to switch off the DUALEX SCIENTIFIC+™: one press in the main menu, or a long press at any time.
- The button  is used to enter a selection in a sub-menu, to validate a selection or to make a measurement.
- The button  is used to cancel an action or a selection, and allow the suppression of the last measurement; in this case the software will come back to the previous state. A long press turns back to the main menu.
- Buttons  and  are used to navigate in the menus, to increase the group rank and to change the side tag.

I.2. DUALEX SCIENTIFIC+™ transport case

The DUALEX SCIENTIFIC+™ is delivered in a shock resistant case. It contains the Dualex Scientific leaf-clip, a USB cable with a USB wall plug adapter and this user's manual.

The DUALEX SCIENTIFIC+™ is powered by an internal rechargeable Li-Po battery. The battery can be charged using the USB cable directly from the computer, or using the wall plug adapter (110-220/50-60Hz).

II Getting Started


Unpack the DUALEX SCIENTIFIC+™ and check that there is no evident damage.
The DUALEX SCIENTIFIC+™ is charged before delivery, however depending on storage time, the battery can be discharged.

II.1. Charging the DUALEX SCIENTIFIC+™

To charge the DUALEX SCIENTIFIC+™, connect the USB cable to either:

- the wall plug adapter cable and plug it in a regular power supply (check that voltage (110-220V) and frequency (50-60 Hz) are compatible)
- a USB port on a computer.

While connected, a charge indicator will appear on the screen:

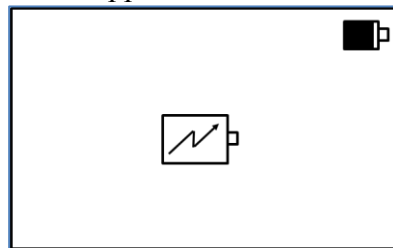


The DUALEX SCIENTIFIC+™ unit can be operated when the battery is under charge.
The full charge of the battery will be completed after 4 hours.
With a full charge, operating time is nearly 7 hours in continuous use.

II.2. Switching on the DUALEX SCIENTIFIC+™

To switch on the DUALEX SCIENTIFIC+™, press a 'long push'  on the keyboard.
A screen with FORCE-A image will quickly appear.
Then the main menu will be displayed.

II.3. Main menu

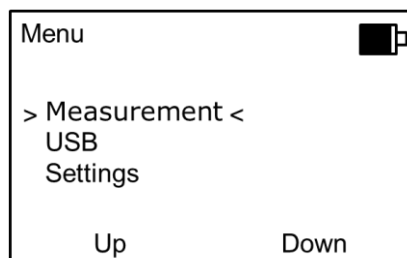

The main menu includes 3 sub-menus:

1. Measurement: allows measurements.
2. USB: allows to download the recorded data and to update the device software from a computer.
3. Settings: give access to the different menu configurations like the GPS, Format, Measure,

Date & hours, Contrast, Stand-by mode, Language and About.

The navigation among the menus is made by using buttons up  and down  on the keyboard.


The selected sub-menu is marked by (> <). Use the button  to select the sub-menu.

II.4. Sub menu 'measurement'

To initialize a measurement sequence, select the sub-menu 'Measurement' and press  button.

II.4.a. Calibration

When the measurement sub-menu is selected and before any measurement, the DUALEX SCIENTIFIC+™ unit will ask for a short self-calibration. The following screen will appear:

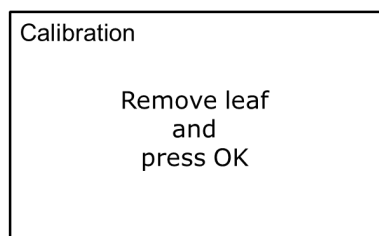


Be careful during calibration process that there is nothing between the optical heads and that the clip is well closed.

To start self-calibration, press on the button .

Warning: You can face three potential problems during the calibration:


- The clip is opened: close it and press on the button .
- There is a leaf between both heads: remove it and press on the button .

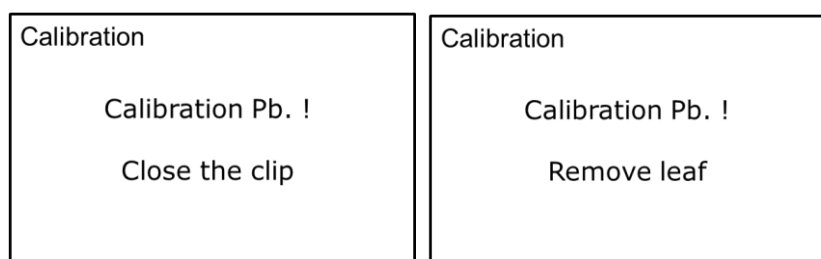

- Heads are dirty, clean them and press on the button .

II.4.b. Measurement

Once calibration succeeded, the DUALEX SCIENTIFIC+™ unit is ready to measure and displays the following screen:

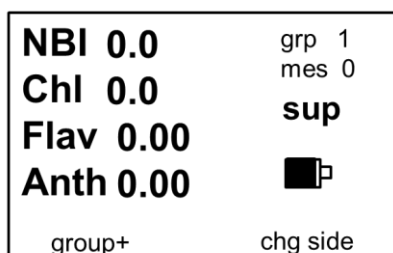

(Depending on the version of your DUALEX®, Anth index is calculated or not)


To make a measurement, open the clip by pressing the handle and place a leaf between the optical heads.



Release the handle, the measurement is automatically made. When a measure is taken, two types of beep can ring:

- A long beep which means that the measurement is well done and recorded.
- Three short beeps which mean that the measurement is wrong and not recorded.

If the reading succeeds, the indices values appear on the screen:

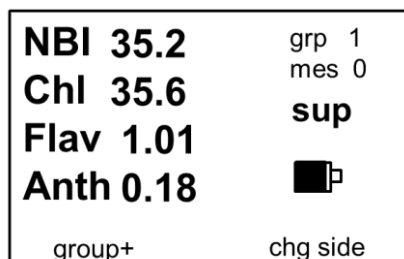

► **NBI:** or Nitrogen Balance Index. This index is the ratio between Chl and Flav.

The range of this index is 0 - 999. If the measured value is outside these limits, the value displayed on the screen is ***. This state is recorded in the memory of the device under the tag “NaN”. If the measurement is inconsistent, the displayed tag is: —

► **Chl:** chlorophyll content.

The range of this index is 0-150. If the measured value is outside these limits, the displayed value on the screen is: ***. This state is recorded in the memory of the device under the tag “NaN”. If the measurement is inconsistent, the displayed tag is: —

► **Flv:** index of phenolics, mostly flavonols, content.

The range of this index is 0-3. If the measured value is outside these limits, the displayed value on the screen is: ***. This state is recorded in the memory of the device under the tag “NaN”. If the measurement is inconsistent, the displayed tag is: —

► **Anth**: index of phenolics, anthocyanins content.

The range of this index is 0-3. If the measured value is outside these limits, the displayed value on the screen is: ***. This state is recorded in the memory of the device under the tag “NaN”. If the measurement is inconsistent, the displayed tag is: —

► **grp**: indicates the group rank. The measurements can be grouped into a set of measurements statistically connected. Press on  (group+) to increment the number of group. The statistical results of the latest group are then displayed.

Group results	
NBI	141,8 (sd 78,369)
Chl	29,6 (sd 13,921)
Flav	0,34 (sd 0,305)
Anth	0,37 (sd 0,026)

If the data are not valid, the statistical results appear under the tag ***. To return to the measure menu, press on .

► **mes**: corresponds to the rank number of the measurement performed in the group. This value increases automatically with every measurement.

► **sup** / **inf**: the side of the leaf, adaxial or abaxial, and its associated epidermis – that is positioned against the light source head (upper head) – will be measured. To measure the opposite side of the leaf, you may flip over the leaf or invert the position of the Dualex heads.

You can add the leaf side tag which will be associated to the next measurement: adaxial (**sup**) or abaxial (**inf**). To change this tag, just press on . This information is stored with the measurement.

Warning: there is no limitation to the measurements rank in a group. The capacity of the internal flash memory (1.8Mo) allows more than 10 000 measurements. Nevertheless, it's recommended to transfer the data by the command >USB< onto a computer after every campaign of measurements. After the transfer of the data file, you can erase it from the flash memory using your computer.

II.4.c. How to delete a measurement

The last made measurement can be deleted by pressing the button  (short press), the screen asks for confirmation. Press on the button  (No) or  (Yes):

Delete measure	
Are you sure ?	
No	Yes


A long press on the button  leads to the main menu and saves the measurement.

II.4.d. Power alarm

In order to avoid a loss of data, a double alarm informs you about the level of the battery.

The first alarm informs you that there is only 20% of the battery power left « Low battery ». You can continue your measurements for some time (approximately 1 hour).

The second alarm informs that there is only 10% of the battery power left « Empty battery ». To avoid a loss of data, the device automatically shuts down. Measurements are not possible any more.

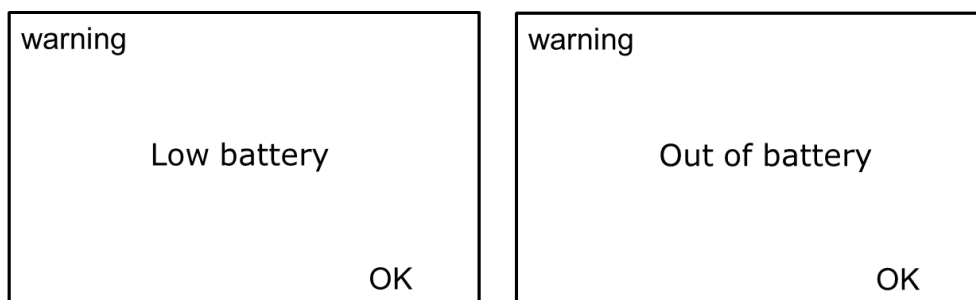

II.4.e. Memory management

The DUALEX SCIENTIFIC+™ manages the capacity of the memory and displays two safety messages to ask to empty the memory card:


- « memory almost full » between 200 kB and 2 kB free memory left
- « Memory full » with less than 2 kB free memory left (less than 15 measurements).

► If you switch on the DUALEX SCIENTIFIC+™, when only between 200 kB and 2 kB free memory is available, the following message is displayed:



Press on the button . Download the memory content to a computer. If you go to the submenu 'measurement', the message will be displayed a second time.

► When DUALEX SCIENTIFIC+™ is switched on, if less than 2 kB of free memory remains, the following message is displayed:

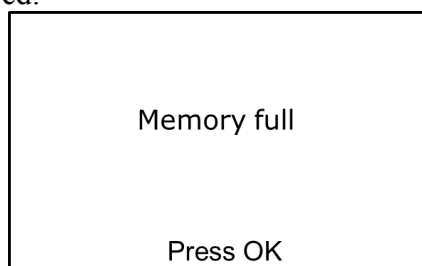

Press the button . You cannot go up to the submenu 'Measurement'. It is necessary to empty the memory of the DUALEX SCIENTIFIC+™.

► During the measurements, if the free memory decreases below 200 kB, the message «memory almost full» appears. Press the button . You can continue the measurements but please empty the memory as soon as possible.

► During the measurements, if the memory decreases below 2 kB the message «memory full » appears. Press the button . The last measurement is saved and the DUALEX SCIENTIFIC+™ returns to the main menu. You cannot reach anymore the submenu 'measurement'. It is necessary to empty the memory.

II.5. Submenu 'USB'

The submenu USB allows transferring the measured data to a computer and also it allows to update DUALEX SCIENTIFIC+™ from a computer.

II.5.a. Connection

Connect the cable USB to the mini connector USB:

		The mini connector USB to be plugged into the DUALEX®'s connector located at the bottom of the device.
		The connector USB to be plugged into the USB port of the computer.

In the main menu, select the sub-menu 'USB' with the buttons  (top) and  (bottom), and press the button .

Menu 	
Measurement	
> USB <	
Settings	
Up	Down

USB mode

The DUALEX SCIENTIFIC+™ behaves then as an USB device.

Use the command interface of your operating system to transfer the file containing the measurements. In DUALEX®, one file is created per calendar day of measurement: all the measurements of the day are stored in this file, named « DX yyyyymmdd.csv », where « yyyy » represents the year, « mm » the month and « dd » the day. Once the file on your computer, it can be

analysed using any spreadsheet software.

Note: When the Dualex Scientific is used in USB mode, no measurement can be realized. To go out of the USB mode, press on . The software returns then to the main menu.

II.5.b. DUALEX SCIENTIFIC+™ update

WARNING:

- In order to avoid a loss of data, please copy the files from the memory before proceeding to an update. The DUALEX SCIENTIFIC+™ will erase the memory at the end of the process.
- The USB has to remain connected throughout the update. If the device is disconnected, the following message will be displayed:



Switch on the DUALEX® with the button .


Connect the cable USB to the mini connector USB. In the main menu of DUALEX®, select the sub-menu >USB< with the bottom  and . Press the button . The DUALEX SCIENTIFIC+™ behaves then as an USB device.

Transfer of the software: Copy the files boot.dx4 and flavxxx (xxx correspond to the number of the update: it is an applicative software) in the memory of your DUALEX SCIENTIFIC+™.


WARNING: Do not do anything during the files transfer.

Software set up:


- Leave the USB mode once the **2** files are transferred, by pressing on the button .
- Re-start the device by pressing on the button . The updating of the software begins. The following screens appear:

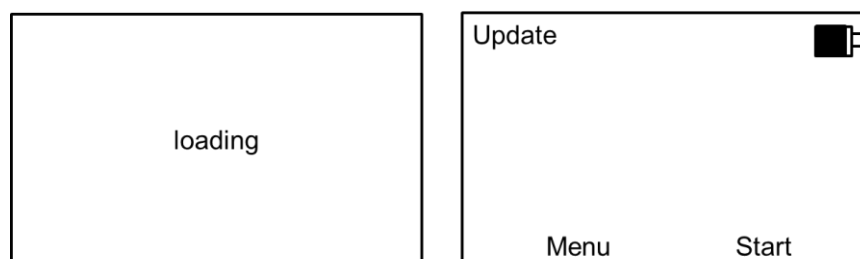

- Press the button  to select « start »:

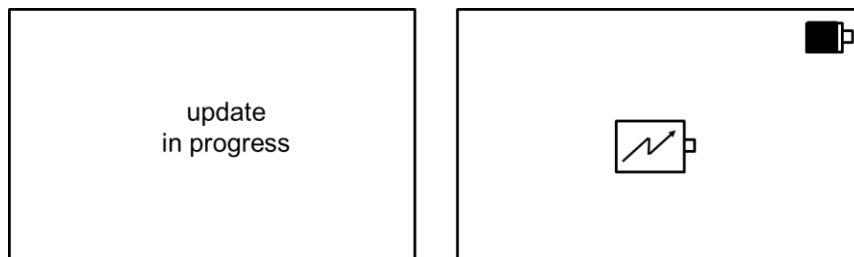


Note: if your update requires a license, press the button  to select « Menu ».

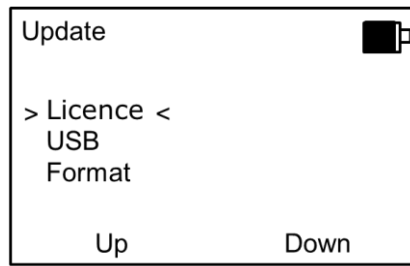

Select the sub-menu >license< and press the button .

The license allows to change the rights (addition or deletion of application).


This screen allows entering the licence key. To change the number, press on the button “+” and to change the digit, press on the button “->”.

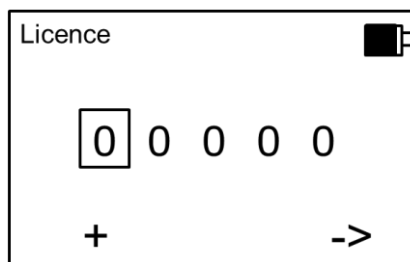

Once the number is entered, press on . Press twice the button  to return at the update menu. Press the button  (launching) to start the updating program.

Note: The cancellation is possible at anytime without saving, by pressing on the button .

WARNING: If the 5 figures are not correct, the following screen appears:

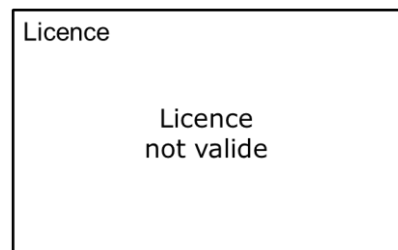

The licence keys are unique: they are specific to the device.

II.6. Submenu 'settings'


The submenu 'settings' gives an access to adjustable parameters:

1. GPS: toggles GPS in mode Off, Light or Full.
2. Format: formates the flash memory.
3. Measurement: allows selecting the acquisition mode for measurements.
4. Date & Time: updates date and time.
5. Contrast: allows variation of screen contrast.
6. Standby: adjusts the time before standby mode.
7. Language: allows to change the language of the DUALEX SCIENTIFIC+™.
8. About: displays the version of the software and the DUALEX SCIENTIFIC+™ serial number.

These parameters are validated by using the button . Or left as previously by pressing on , the software returns then to the main menu.


II.6.a. GPS

There are three ways to use the GPS:

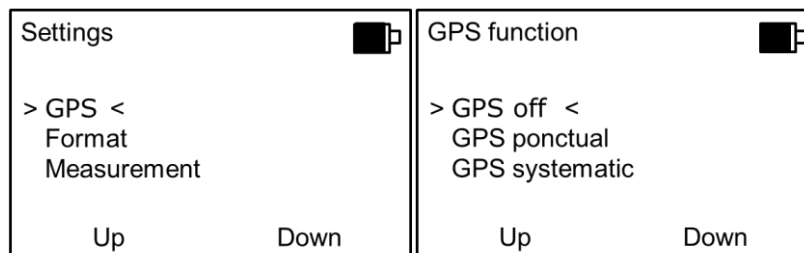


- GPS Off (by default): no GPS data saved.
- GPS ponctual: GPS data are saved by pressing a few seconds on the button  during the measurement.
- GPS systematic: the GPS is active all the time, it saves GPS datas for every measurement.

We can adjust the time zone in > Time zone <:

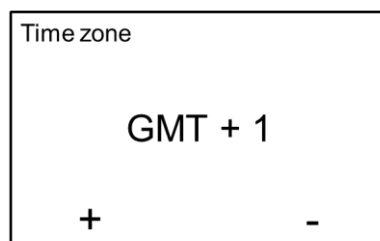

When the GPS is active in mode ponctual or systematic, the device begins looking for the GPS with the aim to update the time and the date.

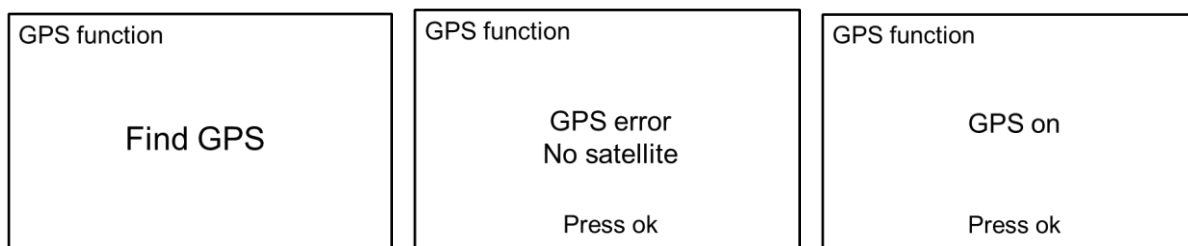


II.6.b. Format

The setting 'format' deletes all datas from the memory of the DUALEX SCIENTIFIC+™.


WARNING: in order to avoid a loss of data, please copy the files from the memory before proceeding to an update. The DUALEX SCIENTIFIC+™ will erase the memory at the end of the process.

To format the memory, press on , the screen asks for a confirmation before formatting the memory. Press on the button  (No) or  (yes):

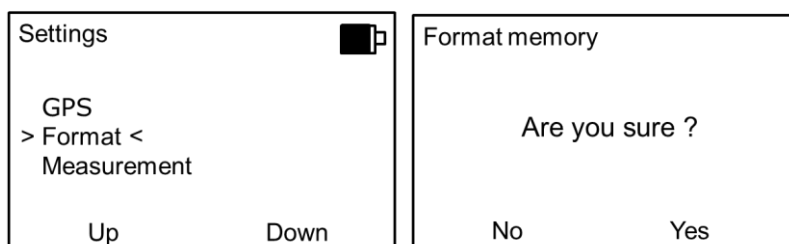

If the buttons  (No) or  are selected, the datas are left intact and the software returns to the main menu.

If the button  (Yes) is pressed, all the datas are erased from the memory:

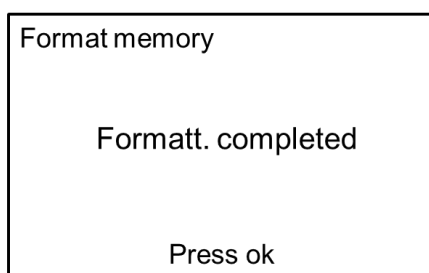

But if an error occurs during the formatting, the screen displays « Error format ». If this error appears, please switch off the device and load the battery. If the problem persists, please contact FORCE-A.

Press on the button , the DUALEX® returns then to the sub menu 'settings'.

WARNING: The DUALEX® uses the format FAT 12. Do not try to format your DUALEX® memory by using the formatting functions offered by your operating system; it could block the memory.

II.6.c. Measurement

Settings  Format > Measurement < Date-Time Up Down	Measurem. mode > Triggering < 1 side/2 sides Up Down
--	--

Measurements can be performed by alternative ways:

- **Triggering:**

Triggering > Automatic < Manual Tuning Up Down

Automatic (by default): at every closure of the clip or a press on the button , a measurement is saved.

Manual: the recording of the measurement is only made once the button  is pressed.

Tuning: this function re-adjusts the parameters to allow the automatic mode, depending on the clip aperture. Use it if automatic mode doesn't work.

- **1 Side/2 Sides:**

1 side/2 sides > 1 side < Mean 2 sides Up Down
--

1 Side: at every closure of the clip or a press on the button , a measurement is recorded (following the triggering previously selected). At every measurement, values Chl, Flav, Anth and NBI **of the side** (adaxial **or** abaxial side) are displayed.

Mean 2 Sides: 2 measurements are needed to get values for one leaf (adaxial and abaxial side).

Chl = mean of 2 values


Flav = sum of 2 values

Anth = mean of 2 values

NBI = Chl / Flav.


II.6.d. Date & Time

This setting allows adjusting the date and the time. To change the number, press on the button “+” and to change the next field, press on the button “->”, once the date and the time are adjusted, press on  to save it.

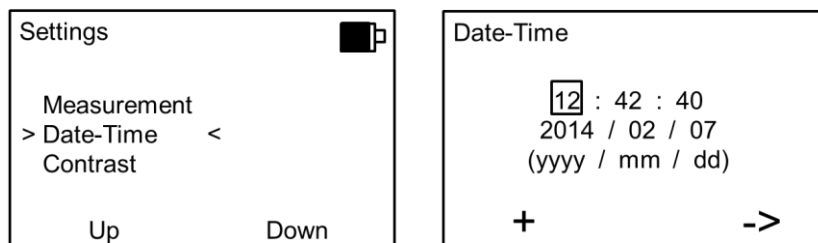


II.6.e. Contrast

You can adjust the contrast of the screen with the buttons  and . After having adjusted the contrast, return to the main menu by pressing .

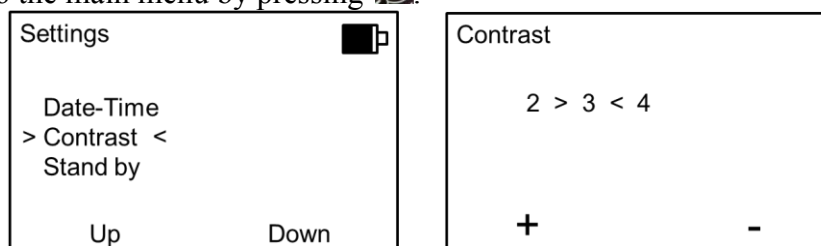


II.6.f. Standby

The time before DUALEX SCIENTIFIC+™ enters the standby mode can be chosen. It can be adjust between 1 and 10 minutes; the default setting is 5 minutes.

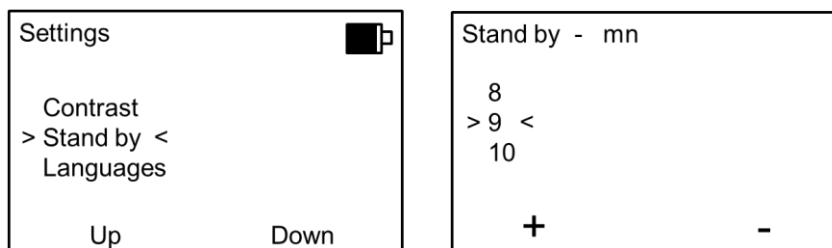

When the DUALEX SCIENTIFIC+™ enters the standby mode, all measurements and settings are saved. When you restart the device by a long press on the button , to measure, a new self-calibration is needed.:

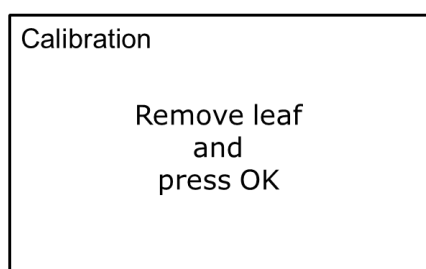


Press on the button .

The standby function is disabled when you are in USB mode.

II.6.g. Languages


This mode allows to select the language: French, English and Spanish.

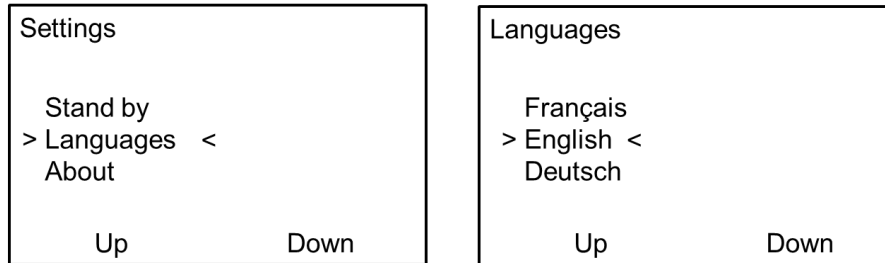

II.6.h. About

The submenu 'About' displays the version of the software and the serial number of your DUALEX SCIENTIFIC+™.

Please refer to this information when you contact FORCE-A.

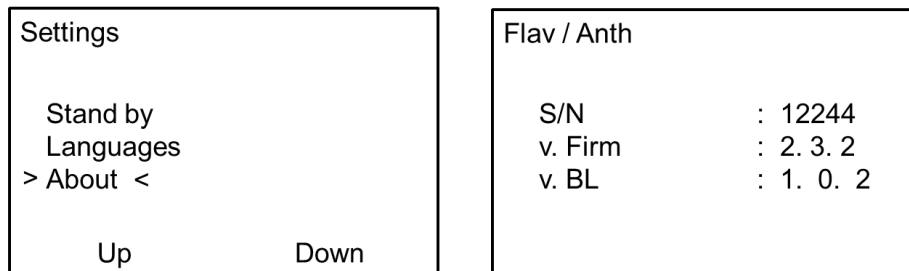

III Data file

The datas generated by the DUALEX SCIENTIFIC+™ have a .csv format. They are thus compatible with any spreadsheet and any operating system.

A DUALEX SCIENTIFIC+™ file is described in **DX20130102.xls**:

#Model.....Dx4.5		Meaning of the row or column in commentary.												
#SN.....11_205														
#version.....Sci. Flav/Anth														
#software.....2.2.7														
#yyyy/mm/c hh:mm:ss	longitude	latitude	altitude	sat_qual	temp	group	measure	side	Chl	Flav	Anth	NBI	Calib	
##### 00:14:17					21.00	1	1	sup	3.557	2.455	0.384	1.45	NEW	
##### 00:14:21					21.00	1	2	sup	66.427	0.346	0.382	191.78		
##### 00:55:41					22.61	1	3	sup	16.449	0.152	0.38	108.27		
##### 00:55:45					22.61	1	4	sup	14.063	0.143	0.38	98.24		
##### 00:55:47					22.61	1	5	sup	14.509	0.155	0.378	93.46		
##### 00:55:48					22.61	1	6	sup	13.801	0.149	0.38	92.86		
#Group	Chl	Chl_sd	Flav	Flav_sd	Anth	Anth_sd	NBI	NBI_sd						
1	14.706	1.198	0.150	0.005	0.381	0.001	98.210	7.129						
#yyyy/mm/c hh:mm:ss	longitude	latitude	altitude	sat_qual	temp	group	measure	side	Chl	Flav	Anth	NBI	Calib	
##### 00:56:04					22.62	2	1	sup	13.882	0.16	0.384	86.92		
##### 00:56:05					22.62	2	2	sup	14.69	0.155	0.382	94.62		
##### 00:56:07					22.62	2	3	sup	14.65	0.154	0.38	95.04		
##### 00:56:26					22.63	2	4	sup	16.485	0.157	0.38	104.68		
##### 00:56:27					22.63	2	5	sup	14.652	0.15	0.378	97.87		
##### 00:56:29					22.63	2	6	sup	16.646	0.159	0.38	104.95		
##### 00:56:31					22.63	2	7	sup	14.065	0.113	0.38	124.94		
##### 00:56:32					22.63	2	8	sup	12.636	0.096	0.378	130.98		
##### 00:56:34					22.63	2	9	sup	17.407	0.168	0.38	103.83		
#Group	Chl	Chl_sd	Flav	Flav_sd	Anth	Anth_sd	NBI	NBI_sd						
2	15.013	1.531	0.146	0.024	0.380	0.001	104.870	14.399						
#yyyy/mm/c hh:mm:ss	longitude	latitude	altitude	sat_qual	temp	group	measure	side	Chl	Flav	Anth	NBI	Calib	
##### 00:57:42					22.68	3	1	sup	15.762	0.163	0.38	96.41	NEW	
##### 00:57:52					22.69	3	2	sup	15.302	0.183	0.38	83.55		
##### 00:57:54					22.69	3	3	sup	14.015	0.168	0.378	83.4		
##### 00:57:55					22.69	3	4	sup	15.343	0.162	0.38	94.5		
##### 00:57:56					22.69	3	5	sup	13.518	0.169	0.38	79.9		
#Group	Chl	Chl_sd	Flav	Flav_sd	Anth	Anth_sd	NBI	NBI_sd						
3	14.788	0.966	0.169	0.008	0.380	0.001	87.555	7.394						

IV DUALEX SCIENTIFIC+™ technical specifications

Measured material	Leaf
Measured parameters	4 measured indices: Chl: chlorophyll index Flav: flavonol index NBI: nitrogen status, Chl/Flav ratio Anth: anthocyanin index
Measurement process	Automatic or manual
Measured area	5 mm in diameter
Sample thickness	1 mm maximum
Measurement area access	8.5 cm maximum (half-leaf width)
Acquisition time	< 500 ms
Storage capacity	10,000 multiparametric measurements
Data classification	3 levels (file, group, and measurement numbers)
Temperature range	From 5 to 45°C
Light sources	5 LED 1 UV-A, 1 green, 1 red and 2 NIR (near-infrared)
Detectors	1 silicon photodiode
User interface	LCD screen Sound warning
Data downloading	USB connection for data transfer
Battery	Li-ion rechargeable battery
Battery life	10 hours
Charge time	4 hours
Total weight	220 g (with battery)
Size	205 mm x 65 mm x 55 mm
Positioning	Internal GPS
Relative accuracy	< 2.5 m (CEP, 50%, 24 h static)
Languages	English, French, Spanish and German
Safety	Ring for leash
Updating	Remote program updating

Warning: as FORCE-A is continuously improving its products, technical specifications are subject to change without notice.

V Precautions of uses.

V.1. Environment of use

The DUALEX SCIENTIFIC+™ is adapted to be used in various environmental conditions. The device is resistant to natural humidity of the plant material. In the range of 5°C to 40°C, the temperature is permanently measured.

V.2. Shocks and vibrations

During the use, it is important to avoid shocks as well as intense vibrations.

V.3. Storage

When you finished the measurements, please mind to switch off the device.

Keep the DUALEX SCIENTIFIC+™ in a dry (0 - 40°C non condensing), clean and dust free environment.

V.4. Cleaning

During every return in the laboratory, the DUALEX SCIENTIFIC+™ should be cleaned by using a tissue slightly moistened with a mixture of water and alcohol.

The optical parts of the device must be carefully cleaned by blowing clean and dry air, and then with a cotton stalk slightly moistened with ethanol.

V.5. Exchange of batteries

If the batteries of the DUALEX SCIENTIFIC+™ need replacement, please contact FORCE-A. The batteries are especially designed for this device. The replacement of batteries by an unsuitable model can seriously damage the unit.

VI Conditions of guarantee

In the case of a normal use, the DUALEX SCIENTIFIC+™ leaf-clip is guaranteed for 1 year (after delivery) against any defect or manufacturing defect.

Any attempt of modification or repair by a non authorized person ends this guarantee.

The DUALEX SCIENTIFIC+™ leaf-clip is a data acquisition instrument. FORCE-A company is not responsible of any interpretations which could result from measurements realized by the DUALEX SCIENTIFIC+™.

In case of dysfunction, please contact FORCE-A company for the return. The material must be then sent back to the following address:

FORCE-A
Centre Universitaire Paris-Sud - Bât. 503
91893 Orsay Cedex
France

Tel: +33 1 69 35 88 39
Fax: +33 1 69 35 88 97
e-mail: info@force-a.fr

Complaints:

To benefit from the guarantee, please get in touch with the company FORCE-A and enclose to the package a description of the problem and the clearing of the transport costs for return.

FORCE-A will repair or will exchange at its expenses the defective product. However if FORCE-A estimates that the problem is due to a misuse, a modification of the product, an accident or any use not in compliance with the recommendations, FORCE-A reserves the right to charge the repairs, the necessary spare parts as well as the transport costs for return.

VII FAQ

Questions	Solution 1	Solution 2
The device does not start	Recharge battery	If the symptom persists, please contact FORCE-A
Display on the screen of "Format Error" after start	Recharge battery, then perform a new formatting of the memory	If the symptom persists, please contact FORCE-A
Too many measurements are out of the limits, frequent display of “ *** “	Apply a light pressure to heads during the measurement, or over the clip to avoid leaf veins.	Likely cause: your plant material is very concentrated in compounds



Contact:

Secretariat
Force A, Université Paris Sud 11 – Bâtiment 503
91893 Orsay Cedex, France

Tel: + 33 1 69 35 88 62 - Fax: + 33 1 69 35 88 97

Email: info@force-a.fr

Web site: www.force-a.eu

Dualex FAQ



Dualex. Values range.

Chl:

Dualex is factory calibrated to provide a linear response to increasing leaf Chl content in units of $\mu\text{g}/\text{cm}^2$.

Usual experimental conditions: from 5 to 80

Flav:

Dualex units, convertible to $\mu\text{g}/\text{cm}^2$ after calibration.

Indoor : usual experimental conditions : from 0.1 to 1

Outdoor : usual experimental conditions : from 0.5 to 2.5

Anth:


Dualex units, convertible to $\mu\text{g}/\text{cm}^2$ after calibration.

Usual experimental conditions : from 0 to 1.5

NBI :

Dualex units.

Usual experimental conditions (indoor & outdoor): from 0 to 300.

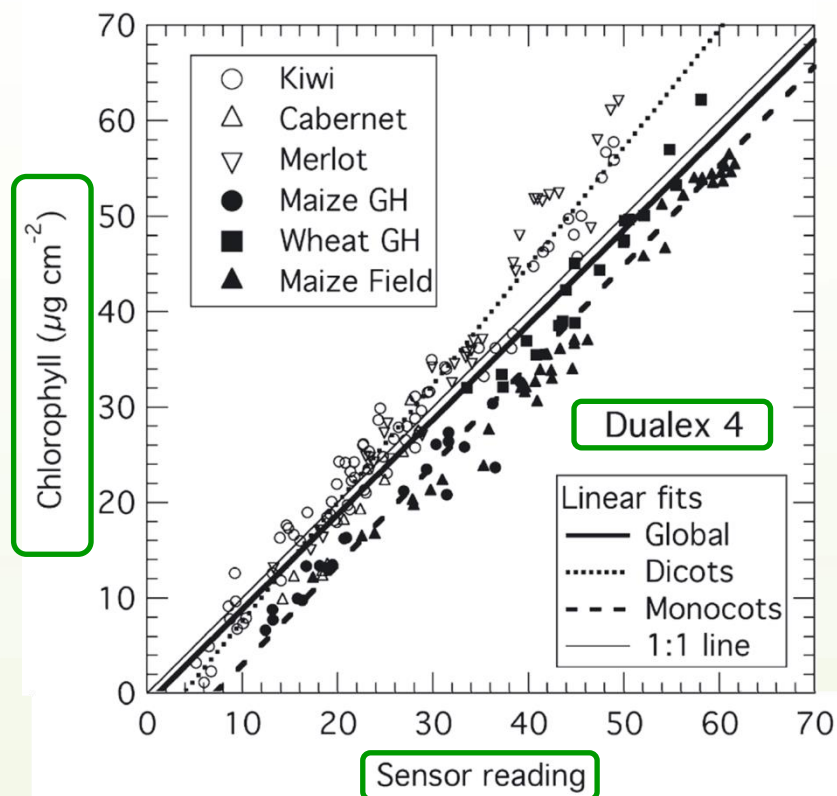

Cerovic et al, *Physiologia Plantarum*, 2012

Dualex. Values examples.


Leave Number	Nb	Chl	Flav	NBI
1	30	10	2,8	3,5
2	30	14	2,6	5,6
3	30	18	2,5	7,3
4	30	20	2,5	8,3
5	30	25	2,5	10,3
6	30	27	2,4	11,4
7	30	27	2,3	12,6
8	30	29	2,2	14,4
9	30	31	2,1	15,3
10	30	33	2,2	15,6

Grape vines.


Results of readings on leaves of 30 branch vines, from leave number 1 to 10 (1 is the top).

Flav = sum of both sides


Dx. Mean of 30 branches.

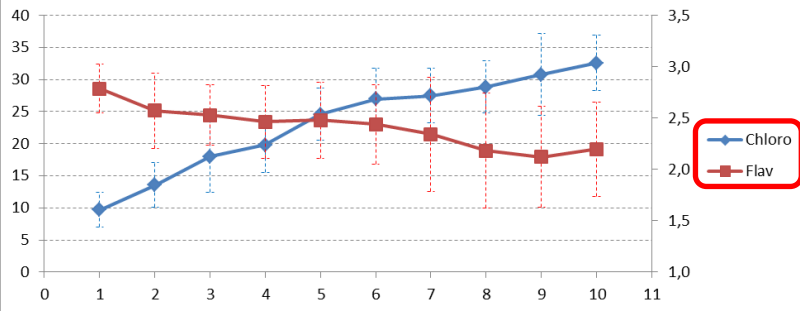

Dx. Mean of 30 branches.



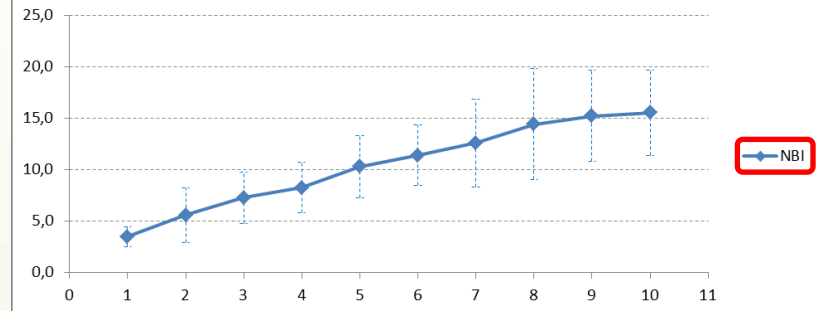


- ⇒ Importance to make readings on leaves with the same physiological age
- ⇒ Vine leaves : choice of the F5 for instance

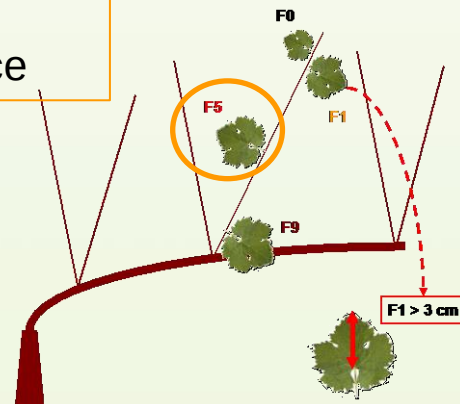

Dualex. Values examples.


Scaterring of Dualex values on wheat flag leaves, for different stages, different levels of nitrogen input

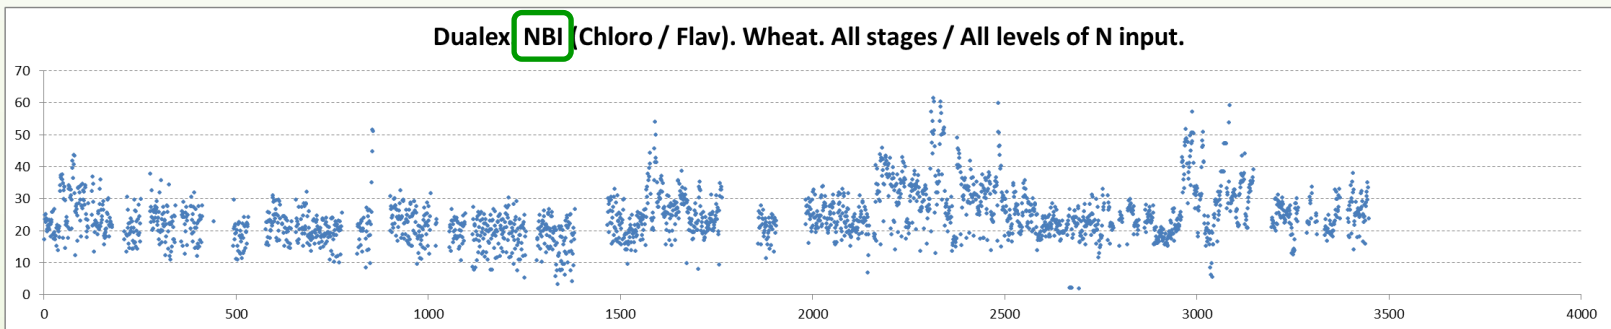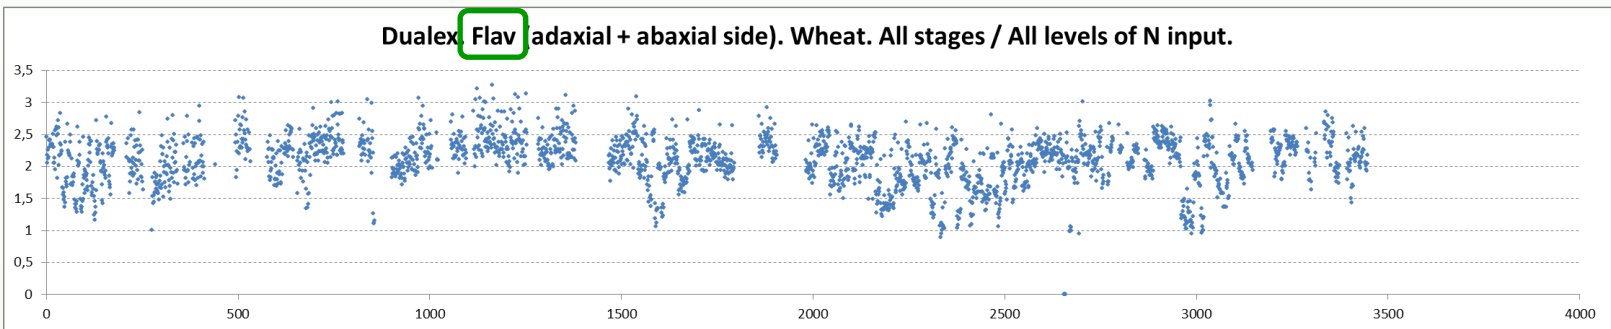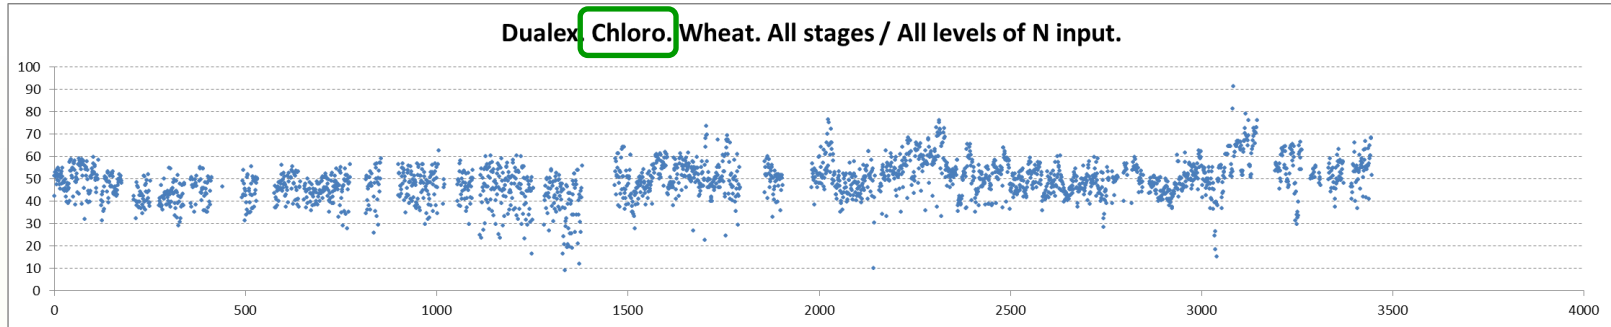

The different range of values are:

- Chloro: 30 - 70
- Flav of the leaf (adaxial + abaxial side): 1 - 3
- NBI (chloro / flav of the leaf): 10 - 50

Dualex. Values examples.

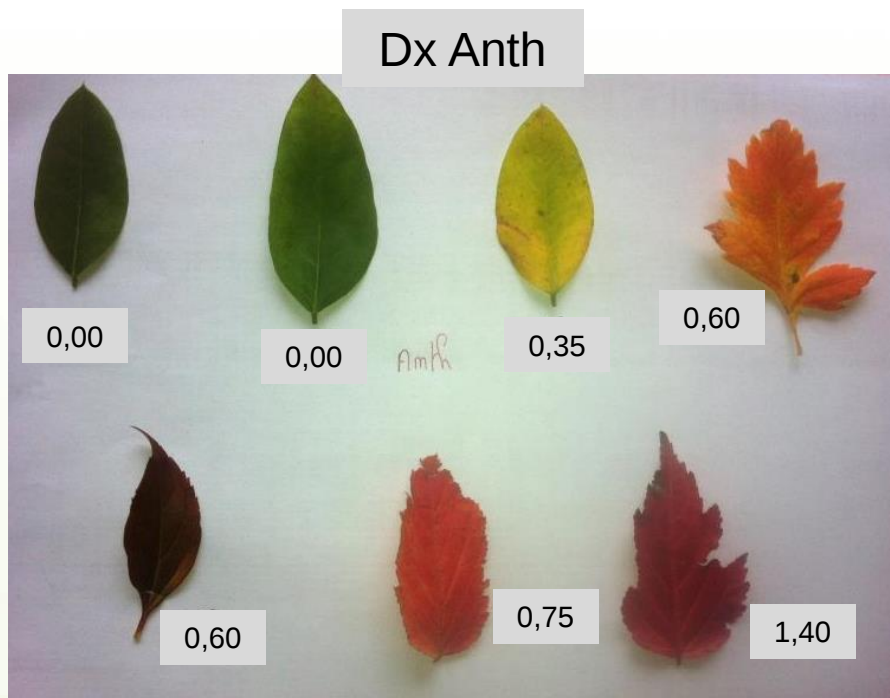


Autumn leaves (adaxial side)




Dualex. Readings.

3 main rules to respect to compare treatments :


- ① - Make readings on leaves with the same physiological age. Prefer well developed young leaves.
- ② - Make readings on the same position of the leaves, for all leaves
- ③ - The entire Dx window must be covered by the leaf.

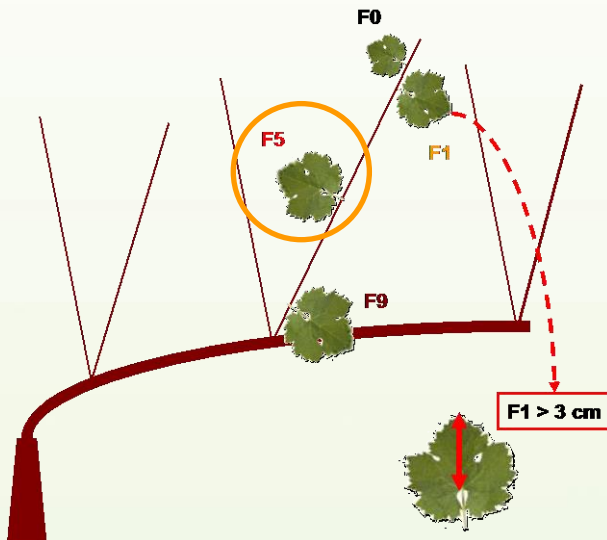

①

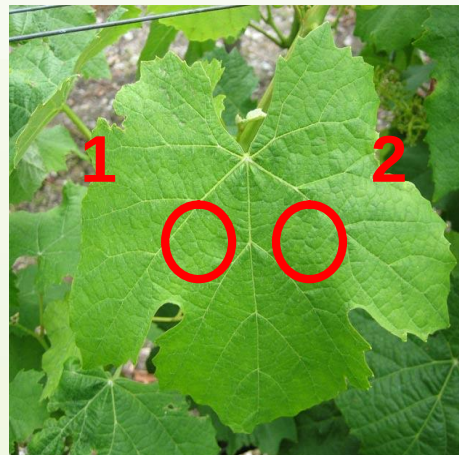

②

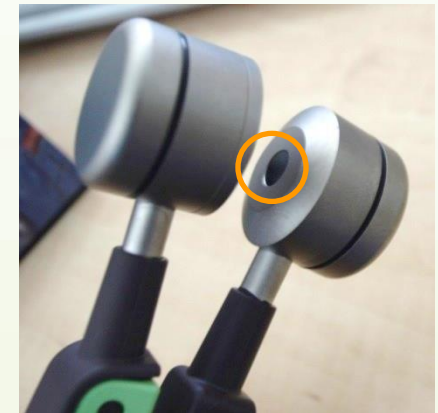

③

**DUALEX®
description**



Keyboard description



(long tap): switch on / off the DUALEX®



(short tap): validate a selection / make a reading (manual mode)




(short tap): cancel a selection / delete the last reading
(long tap): back to the main menu




(short tap): navigate in the menu / validate the option displayed at the bottom (left or right) of the screen

DUALEX SCIENTIFIC+™

Quick Start

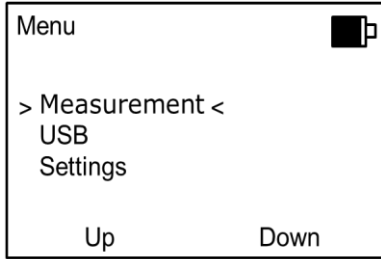

1/ Select 'Measurement'

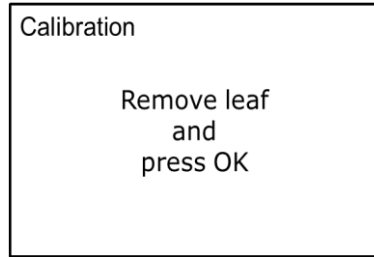

2/ Do a self-calibration
(1 sec)



**3/ Choose a leaf and
place it in the
DUALEX®**

**First
readings**

NBI 35.2	grp 1
Chl 35.6	mes 1
Flav 1.01	sup
Anth 0.18	
group+	chg side

NB:

DUALEX SCIENTIFIC+™


measures the
NBI/Chl/Flav/Anth.

DUALEX SCIENTIFIC™
measures the NBI/Chl/Flav.

4/ Values are displayed on the screen

1/ Plug the USB cable from your DUALEX® to your computer

**2/ Select 'USB' on your
DUALEX®**

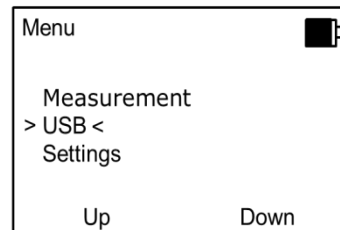

**Data
downloading**

3/ Download the .csv file whose name is the date of your readings

