

Dear Sir/Madam,

Thanks for your reading this PL-C laser user manual


. As this PL-C model has been upgraded a few times, we will always send out the latest version without notice. Hope you enjoy using this FDA Complaint portable laser.

*See one of the sectional pictures of upgraded PL-C Model as shown below.*



FDA requires all class IIIb

and class IV lasers offered in commerce in the US to have five standard safety features: a key switch, a safety interlock dongle, a power indicator, an aperture shutter, and an emission delay (normally two to three seconds).

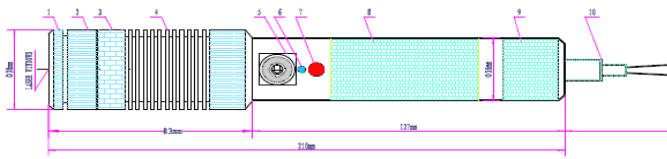






**Components name:**

- 1) ON / OFF Aperture Stop
- 2) Focus adjustable Mechanism
- 3) Focus Adjustable Mechanism Ring
- 4) Heat-sink Radiator
- 5) Key Switch
- 6) LED indicator
- 7) ON/OFF self-locking switch
- 8) Battery tube
- 9) Tail-cap

10) Remote Connector Key

**Main User Instructions, Step by Step...**

- 1. Install the Battery, 18650 Lithium Battery, 3.7V, 2400mah, Rechargeable.
- 2. Insert the Remote Connector Key(can be custom made or remove upon request)
- 3. Plug the key switch and turn it clockwise till the blue led indicator is on.
- 4. Screw the aperture stop off. The laser beam emits there.
- 5. Practise the focus adjustable mechanism and adjust the beam spot size or the focal distance.

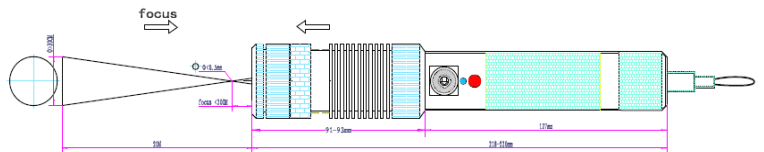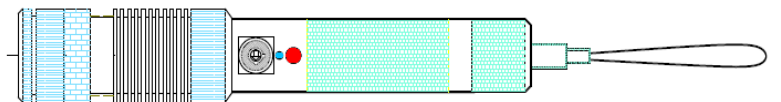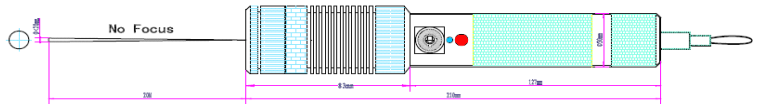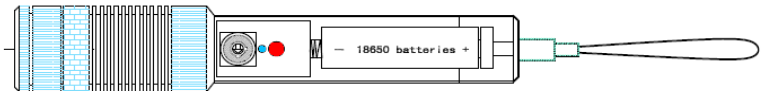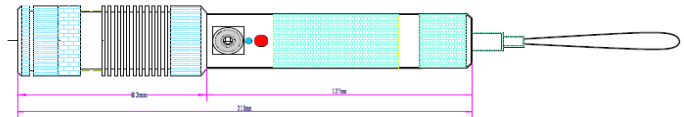

**Laser Safety Guide**

