


**monitech**  
**interlock systems**

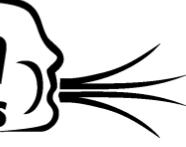

***QuicTest QT-1***



**Operators Manual**

**Monitech Interlock Systems**  
**215 Southport Drive**  
**Suite 400**  
**Morrisville, NC 27560**  
**919 459 1700 local**  
**800-521-4246 toll free**

**Table of Contents**

1. Important Information.....	3
2. QuicTest Overview.....	4
3. QuicTest Menu Functions	
• Wakeup.....	4
• Menu Mode.....	4
• Redundant buttons.....	5
• Personal Identification Number (PIN).....	5
• Start Test.....	5
• BAC Check.....	5
• Volume Adjust.....	5
• Language Selection.....	5
• Sample Head Removal.....	5
• Service Mode.....	6
• Override Mode.....	6
• Appointment Check.....	6
• System Info.....	6
4. Glossary of Terms.....	6
5. Taking a Breath Test.....	8
6. Starting your vehicle with QuicTest.....	9
7. Information about Alcohol Failures.....	11
8. QuicTest operation while driving your vehicle.....	11
• Running Mode.....	11
• Required Tests.....	11
• If your vehicle stalls.....	13
• Restricted Driving Times.....	13
9. Service Mode.....	13
10. Override Mode.....	14
11. How to care for your Interlock Sample Head.....	14
12. Potential Difficulties with QuicTest.....	15
13. Potential Difficulties with your vehicle.....	15
14. Monitor Appointments.....	16
15. Interlock Program Do's and Don'ts.....	16

## Section 1    **IMPORTANT INFORMATION for the QuicTest BAID**

The QuicTest Breath Alcohol Ignition Interlock Device offers state of the art alcohol measuring and driver interaction, however, the use of this device does not guarantee the driver's ability to safely operate a motor vehicle. Under no circumstances should you attempt to drive if you have been consuming alcohol. This not only puts you and other driver's at risk, but may violate the terms of your Interlock Program, subjecting you to additional fines and / or the loss of your license.

There are no user serviceable parts in your Interlock unit. DO NOT ATTEMPT TO OPEN OR TAMPER with any part of the device. Doing so WILL disable your vehicle, and be a violation of your program, resulting in additional fees and / or the loss of your license.

Do not attempt to introduce anything other than clean human breath into the device. Introduction of any other sample will result in an Invalid Sample, and abort the test, and prevent your vehicle from starting.

Test criteria requires a clean mouth cavity (no eating, drinking, etc.) for five minutes prior to blowing a sample. Remember to remove gum, candy, smokeless tobacco, and foodstuffs, etc. from your mouth and to clear your lungs / mouth of any cigarette smoke or other fumes **before taking the test**. The QuicTest Interlock will not fail you for substances other than alcohol, but other substances (especially cigarette smoke) can damage the Interlock. **BE CAREFUL; YOU WILL BE CHARGED FOR ANY DAMAGE TO THE INTERLOCK CAUSED BY CIGARETTE SMOKE OR OTHER FOREIGN SUBSTANCES BLOWN, SPRAYED, POURED, OR SPILLED INTO THE UNIT.**

Do not attempt to abuse or mistreat the device in any way. Such activity may be detected and recorded, and may result in service charges, fines or loss of license.

**WARNING:** Do not attempt to circumvent the device by starting the vehicle in any manner other than the normal ignition method. Do not attempt to remove or modify any wiring or other equipment installed as part of the device installation. Doing so may result in service charges, fines, loss of license, damage to the vehicle or electrical shock.

No other person is allowed to take a Breath Test other than the person intending to drive the vehicle.

**WARNING:** Attempting to instruct and/or allow any person underage or without a valid driver's license to perform the Ignition Interlock Testing Procedure is a direct violation of Program rules and will result in removal of the Interlock and subsequent license revocation.

As always, you should buckle your seat belt and be an alert and courteous driver at all times. The life you save may be yours.

## Section 2 QuicTest Sample Head Overview



Figure 2-1 Sample Head – Front View

1. Display Window
2. Mouth Piece Port
3. Disposable Mouth Piece
4. Left (Back, <<<) Button
5. Right (Next, >>>) Button
6. Detachable Coil Cord Connector
7. Speaker Ports



Figure 2-2 Sample Head – Back View

1. Trigger Button
2. Serial Number
3. Mounting Clip

## Section 3 QuicTest User Menu

### Unit Wake Up

Under normal circumstances, the unit will go to “sleep” within 3 to 6 minutes (sometimes longer). This is indicated by an asterisk (\*) that slowly moves across the bottom of the display. To wake the unit up you may either pick it up and move it, or press any button. The unit will wakeup and say “*QuicTest by Monitech*”. A brief stand by period (countdown) may begin, depending on how long the unit has been asleep and the outside temperature. During this time the unit is verifying that it is functioning properly and warming up. At the end of the standby period, the LCD will display “START TEST”, unless there are lockouts, recalls, or other service needs. These will be addressed in a later section.

### Menu Mode

After the unit has woke up and played any recall messages or other notifications, the display will read “START TEST”. At this point the unit is in MENU MODE, and any of the following functions described below are available by using the BACK, NEXT and TRIGGER buttons.

## Redundant Buttons

In the event that any of the 3 buttons used to operate the unit becomes inoperable, the remaining buttons will assume that function, as follows:

- If the LEFT button is not working, use the RIGHT button to scroll all the way around.
- If the RIGHT button is not working, use the LEFT button to scroll all the way around.
- If the TRIGGER is not working at any time, press BOTH the LEFT AND RIGHT buttons at the same time for TRIGGER functionality.

## Personal Identification Number (PIN)

When the unit was installed, you were issued a 4 digit PIN. The purpose of this number is to confirm timing and coordination and ensure only you or persons that you intend are able to operate the unit. Before taking any Standing BAC Test (Start, Arrival or Engine Off) you will be asked to enter your PIN. Depending on how your unit is configured, you may also be asked to enter your PIN when the unit wakes up.

To enter PIN, use the BACK or NEXT buttons to scroll to the desired digit, then press the TRIGGER to enter. Repeat for each of the next 3 digits.

## Start Test

This menu option is used to take the test that allows you to start your vehicle. To take this test, press the TRIGGER (*See Section 6 for further instructions*).

## Adjust Volume

This function allows the user to adjust the audio volume when the vehicle is NOT RUNNING. To adjust the volume, press the TRIGGER from this option, and then use the LEFT (DOWN) and RIGHT (UP) buttons until the desired volume level is achieved, and then press the TRIGGER to set the volume to that level.

## Select Language

This function allows the user to select the language that will be displayed in the text and played for the audio. To select another language, press the TRIGGER from this option, and use the LEFT (BACK) and RIGHT (NEXT) buttons until the desired language is displayed. This unit offers English and Spanish. When the desired language is displayed press the TRIGGER to set the language.

## Remove Unit

NOTE: AS AN ANTI-THEFT MEASURE, IF THE SAMPLE HEAD IS REMOVED WITHOUT SELECTING THIS OPTION, THE VEHICLE SIREN WILL SOUND.

This option allows the user to remove the Sample Head from the vehicle if desired. This may be done for the following reasons:

- To prevent theft.
- To protect your vehicle battery during long periods of inactivity (beyond 5 days), such as vacation for several weeks.
- To protect the device from extreme cold temperatures.

To remove the Sample Head, press the TRIGGER from this option, and then remove the unit when instructed to. Do this by grasping the knurled part of the connector barrel only, and pull it straight back until the connector releases.

When you reconnect the unit, it may require a short amount of time to re-establish communication, do a system check and warm up. When you see the asterisk (\*) scroll across the bottom of the screen, you may wake the unit up and proceed.

### Service Mode

This option is used if the vehicle requires automotive (non-Interlock) service by a mechanic. To use this function, instruct the mechanic to call Monitech and to ask the operator for QuicTest Support.

### Override Mode

In the event that your unit is in PERMANENT LOCKOUT, due to a malfunction or missed Monitor Appointment, it may be possible to have the Service Provider Office issue a number that will override the lockout, and allow you to drive for a limited time until you can get to a Service Center. To use this option, call your Interlock Service Provider, and ask the operator for QuicTest Support. **Unless warranted, this service may require additional charges.**

### Appointment Check

This allows the user to check the date of the next scheduled Monitor Appointment. To check your appointment date, press the TRIGGER from this option. Your next appointment date will be displayed for a few seconds, and then return to the Menu Mode. (This is the appointment made at the last Service Center visit. Changes to your appointment made over the phone, or appointments required due to a recall are NOT visible when using this feature).

### System Info

This function will display the Serial Number and Firmware level of your QuicTest Sample Head and Control Module.

## Section 4 QuicTest Glossary of Terms

**Alarm or Alarm Mode** – This occurs when you have violated a critical requirement that you were instructed to follow. If the unit enters Alarm Mode – the unit will instruct you to safely pull over and turn off your vehicle. During this time, the Interlock System siren will sound, the vehicle hazard lights will flash, and your horn may sound. The only way to stop this is to turn off your vehicle. Alarm Mode occurs due to the failure to take an Engine Off Test when required, an unauthorized vehicle start, or the disconnection of the Sample Head while the vehicle is in operation.

**Appointment Check** – This feature allows the user to check the date of their next regularly scheduled Monitor Appointment (This is the appointment made at the last Service Center visit). Changes to your appointment made over the phone, or appointments required due to a recall are NOT visible when using this feature.

**Arrival (Destination) Test** – A Breath Test that may be required when you turn your vehicle off.

**Aggressive Mode** – If your Breath Tests (Start or Running) result in alcohol levels in the Warn or Fail range, the frequency of Running Tests you will be required to take will increase for a period of time.

**BAC Test** – A Breath Test that can be taken without the vehicle in operation, and not part of the vehicle start sequence, to determine your Breath Alcohol Content, in terms of Pass, Warn or Fail. (This option may not be available in all states.)

**Blow Tone** – An audible tone generated by the unit as you take a Breath Test, to indicate that you are blowing at an acceptable pressure.

**Breath Alcohol Ignition Interlock Device (BAIID)** – A device that prevents a vehicle from starting based on a Breath Alcohol Sample.

**Breath Alcohol (BrAC)** – The level of alcohol present in a deep lung (alveolar) breath sample.

**Data Logging** – The recording of all unit, user and vehicle events into the unit memory.

**Diminished Lung Capacity** – Some Interlock users may have difficulty blowing into the Interlock due to a legitimate medical condition such as asthma or emphysema. If this condition applies to you, and your State Agency allows this feature, your Service Provider can adjust the Interlock to meet your specific diminished lung capacity. See your state Department of Motor Vehicles or your Service Provider for more information.

**Diminished (Running) Retest** – The requirement for you to take Running Tests as you operate the vehicle may decrease as a reward for program compliance. This is based on the number of alcohol-free starts you have over a long period of time. This is also dependant of the requirements and limitations of the State Agency you are working with.

**Engine Off (Standing) Test** – A Breath Test that must be taken with the car stopped in a safe place, and the engine turned OFF.

**Fail** – A Breath Test result that is equal to or greater than the Fail Level set by your State Agency.

**Flashers** – The hazard flashers and / or turn signals of your vehicle.

**High Fail** – A Breath Test result that meets or exceeds the definition of a High Fail as set by your State Agency.

**Hum Tone** – Some State Agencies require the user to hum while they blow into the device for a Start Test. If your agency requires this, you will be trained on how to do this when your Interlock is installed.

**Invalid Sample** – Any sample that is blown into the unit that is not direct, unaltered human breath is an Invalid Sample.

**Mouth Contamination** – Any alcohol that may be present in the mouth only, due to very recent use of mouthwash, cough medicine or a sip of an alcoholic beverage. This is normally gone within 5 minutes of use.

**Override Code** – This is a single use code that your Service Provider may use to allow you to operate your vehicle for a limited time, in the event that your unit has gone into Permanent Lockout due to a missed appointment caused by extreme circumstance. This may be used for situations such as natural disasters, severe weather, serious illness, hospitalization, etc. Anytime your unit is in Permanent Lockout, call your Service Provider.

**Pass** – A Breath Test result lower than the Warn level set by your State Agency.

**Pending Service Date Notification** – As the Scheduled Service Appointment approaches, the unit will notify the user each time the unit “wakes up”. Also – if the unit is in recall, the unit will notify the user that service is required in the next X days before lockout occurs, so that an urgent Service Appointment can be made.

**Permanent Lockout** – A condition that does not allow vehicle Start at any time, for any reason. This could be the result of a missed Service Appointment, tampering with the unit, or unit malfunction. If the unit is in Permanent Lockout – you must call your Service Provider.

**PIN** – A Personal Identification Number that must be entered to operate the unit.

**Program Violation** – Any event that is a violation of your Interlock Agreement. This may include Breath Test failures (if applicable), excessively high failures, tampering with the unit, attempting to alter or circumvent the installation of the unit, driving during restricted drive times (if applicable), ignoring required tests (such as an Engine Off Test), or other actions specific to your agreement with the State Agency and Service Provider you are working with.

**Recall** – A requirement to bring your vehicle back to your Interlock Provider's Service Center within a limited number of days for servicing of the unit. This is generated by a pending Monitor Appointment, a program violation, unit malfunction, or suspected tampering or abuse of the unit.

**Redundant Alcohol Sensor** – In the event that the Primary Alcohol Sensor in the unit malfunctions, a Secondary Alcohol Sensor may be used (depending on the requirements of your State Agency). This will allow vehicle operation for a limited number of days, until you can reach your Service Provider's Service Center for repair. This sensor may be sensitive to substances other than Alcohol, so it is very important that you ensure that you have not been eating, smoking or drinking ANYTHING (other than water) for at least 5 minutes prior to any Breath Test. Failure to do so may result in Temporary Lockout until your mouth is clear of all residues.

**Running Test** – A Breath Test required at random time intervals while the vehicle is being driven. This can be taken as you drive, or you may pull off the road in a safe place and take it while the engine is running.

**Service Mode** – This allows your vehicle to be serviced by a certified mechanic when your vehicle requires automotive (not Interlock) service. It provides the mechanic with a means to diagnose and operate the vehicle for a very limited amount of time without having to un-install the device, or take a Breath Test. It requires a phone call from the mechanic to your Service Provider.

**Siren** – This is the Alarm Siren that was included in your Interlock System installation.

**Stall Protection** – A 2 minute period of time after the engine is turned off for any reason (including engine stall). It allows an immediate restart without the need to take a Start Test, to ensure the driver is able to quickly move from an unsafe location (i.e. railroad tracks, a busy intersection, etc) in the event of an engine stall.

**Start Test** – The Breath Test taken to allow you to start your vehicle.

**Temporary Lockout** – A short period of time, typically 5 or 30 minutes, when vehicle Start is not permitted. This occurs after a failed Start Test. The first failure will normally result in a 5 minute lockout. If the next test is also a failure, the next lockout, and any following, will be for 30 minutes.

**Visual Alert Device (VAD)** – This is a small flashing light that can be installed (as an option) on the vehicle dashboard for hearing impaired users. This will alert the user (who may not hear the audible prompts and messages) that new information (text) is being displayed on the unit's LCD that requires their attention when they can safely do so.

**Warn** – A Breath Test result equal to or greater than the Warn Level set by your State Agency, but below the Fail Level.

**Warning** – Any caution message the device issues due to a user error or upcoming violation. These include the detection of a level of Breath Alcohol below your set Fail Level, accidentally trying to start your vehicle before taking a test, driving your vehicle close to a restricted drive time (if applicable) and a variety of other events.

## Section 5 Taking a Breath Test with QuicTest

The following instructions apply for any of the required tests; START, RUNNING, ENGINE OFF, ARRIVAL, or BAC.

1. Before taking a Breath Test, make sure that your mouth is completely empty, and has had nothing other than water in it for at least the last 5 minutes. If needed, rinse your mouth with water to remove any other substances. Taking a Breath Test with food, beverage or smoke residue may impact the results or damage the unit, and possibly delay starting your vehicle,

or arriving at your destination. Make sure that you have a Monitech Disposable Mouthpiece inserted into the Mouthpiece Port, as shown in Figure 2-1.

2. When instructed by the device, press and hold the TRIGGER, take a deep breath and blow into the mouthpiece. You will hear a Blow Tone to indicate that you are blowing with the correct pressure. Continue blowing until you hear a “Pop!” and “THANK YOU”, then immediately stop blowing and release the TRIGGER.

If you stop blowing before the “Pop”, or take your finger off the TRIGGER before the “Pop”, the test will abort and you will have to try again when instructed by the unit. After the unit clears itself (you will hear a pump run for a moment), another test may be taken.

If you were blowing too hard or too soft, follow the instructions given and try again when instructed by the device. You may need to wait a moment or two for the unit to purge any partial breath samples and reset. After the unit clears itself (you will hear a pump run for a moment), another test may be taken.

If the unit indicates *INVALID SAMPLE*, the unit may have been exposed to something other than a human breath, and has aborted the test. After the unit clears itself (you will hear a pump run for a moment), another test may be taken. Keep in mind that blowing anything other than clean human breath into the device will result in an Invalid Sample, and abort the test, preventing your vehicle from starting.

NOTE: If you are blowing a sample on a day when the outside temperature is quite cold, it is recommended that you hold the disposable mouthpiece in your hand for a moment, or blow through it without it being inserted into the unit, to warm it up. It is possible for a very cold mouthpiece to cause an Invalid Sample.

3. If you have successfully completed the blow, the unit will display “ANALYZING”, and then will indicate the results of the test, in terms of a *PASS*, *WARN* or *FAIL*, with further instructions, depending on the specific test you are taking.

## Section 6 Starting Your Vehicle with QuicTest

This section describes how to start your vehicle. Please refer to Section 5 for instructions on how to take a BREATH TEST before reading this section.

**WARNING:** You can be arrested and convicted of DWI even though you might pass the Ignition Interlock test with a level of alcohol in your body that is normally not prohibitive. This is especially true if you are involved in a traffic accident or stopped for driving or other vehicular violations. Even a small amount of alcohol causes impairment in decision-making and coordination activities, especially driving.

Ultimately, it is your choice whether to drive after drinking alcohol. The Ignition Interlock does not relieve you of the legal responsibilities related to driving after drinking any amount of alcohol and can not be used as a legal defense in a court of law.

1. To START your vehicle, select *START TEST* from the menu mode. Enter your PIN if requested.

2. Follow the instructions above (Section 5) to take a Breath Test.
3. The unit will *display PASS, WARN or FAIL*

**If the unit indicates *PASS*:** WAIT a brief moment, until the unit displays “OK TO START”. Attempting to start before this message is displayed (even if you passed) will result in an aborted start attempt, and require another BREATH TEST. When the unit says “OK TO START”, start the car as you normally would. As soon as your vehicle is started, you may begin to drive. The display on the unit may say *OK TO START* for an additional 2 minutes (typically 30 seconds) and then the unit will display “RUNNING”. (To learn more about unit operation and testing requirements as you continue to drive, please see Section 7.0.)

**If the unit indicates a *WARN*:** This means that a low level of Alcohol has been detected, but not enough to fail the Breath Test, based on the Fail Level set by your State Agency. You will be allowed to start your vehicle, however you should understand that if your Breath Alcohol Content (BrAC) rises as you are driving, you may be required to stop the vehicle (due to Running Test results to be discussed in a later section) before you reach your destination. If you choose to start your vehicle, WAIT a brief moment, until the unit displays “OK TO START”. Attempting to start before this message is displayed will result in an aborted start attempt, and require another Breath Test. When the unit says “OK TO START”, start the car by turning the ignition key (or, in very recent models, pushing the ignition switch), as you normally would. As soon as your vehicle is started, you may begin to drive. The display on the unit may say *OK TO START* for an additional 2 minutes (typically 30 seconds) and then the unit will display “RUNNING”. To learn more about unit operation and testing requirements as you continue to drive, please see Section 7.0)

**If the unit indicates a *FAIL (only)*:** You have blown a sample that contains alcohol equal to or greater than the Fail Level established for your Interlock Program. If this is the first sample you have blown for this start attempt, the unit will go into a 5 minute *TEMPORARY LOCKOUT*. If this is a second (or more) attempt after an initial Fail, the unit will go into *TEMPORARY LOCKOUT* for 30 minutes. You will be able to see how much time is remaining before the lockout expires on the display. At the end of each Temporary Lockout period, the unit will return to menu mode, at the *START TEST* option. At this time you will be able to take another Test. Please remember that you should not have had any substance in your mouth other than water for the 5 minutes prior to the Test.

**If the unit indicates a *HI FAIL (only)*:** This indicates that you have blown a sample that is equal to or greater than the High Fail limit set by your State Agency. This may also cause the unit to initiate a 3 day Service Recall.

**IMPORTANT:** If the Interlock detects a BAC level of .08% or more, then an **EARLY RECALL** will be initiated. You will have 3 days to bring the Interlock vehicle into one of the Monitech Service Centers to have the system downloaded. A printout of the excessive alcohol level(s) will then be forwarded to the Division of Motor Vehicles or related jurisdiction for review and action.

Failure to bring the vehicle into a Monitech Service Center for **EARLY RECALL** will result in a permanent lockout and your vehicle's Ignition Interlock will require special service at your expense before allowing vehicle startup again.

**If the unit indicates a *FAIL* or *HI FAIL*, with “*POSSIBLE MOUTH CONTAMINATION*”:**

You have blown a sample that contains more alcohol than the Fail or High Fail Level

established for your Interlock Program – however it appears that it may be due to a high level of Mouth Contamination (see Glossary of Terms), not a true deep lung BrAC. If it is Mouth Contamination, it will decrease quickly. The unit will offer you the option of holding the trigger button continuously for 3 minutes, to allow a quicker retest opportunity, and avoid Temporary Lockout. If you choose to do so, at the end of 3 minutes, you may retest. If you do not hold the trigger down for 3 minutes, you will be in Temporary Lockout (5 or 30 minutes, depending on if this was your first test of this start attempt or a subsequent one). While the unit will never allow you to start a vehicle with any *FAIL* result – mouth contaminant or true BrAC, if a breath sample is identified as having *POSSIBLE MOUTH CONTAMINATION*, you are offered the opportunity of a quicker retest, and the report that is submitted to your state agency will show that this result may have been mouth contamination.

## Section 7 IMPORTANT INFORMATION ABOUT ALCOHOL FAILURES

Every person's body metabolism is different and will even vary from day to day in the same person. The only way to guarantee your ability to pass the Alcohol Test is to avoid alcohol intake for 24 hours prior to testing.

Since all alcohol failures will be recorded as part of your permanent record with Monitech (and the agency or court ordering your Interlock probation), it is strongly recommended that you avoid Testing AND DRIVING with any level of alcohol in your body.

There is a chance that certain alcohol-based substances (mouthwash, cough medicine, etc.) may cause a Test Failure if such "innocent" substances are still fresh on your breath. If this occurs, ***rinse with water and take several deep breaths*** to make sure the substance in question is thoroughly removed from your mouth before testing again.

**WARNING:** Attempts to test and start the Interlock vehicle after drinking are considered extremely serious by the Division of Motor Vehicles and other adjudicating agencies and courts. Continuous readings of alcohol at any level or detection of high BrAC levels can result in removal from the Interlock Program and revocation of your driving privilege. Do not Test or attempt to drive if you have been drinking even small amounts of alcoholic beverage. Excessive alcohol intake can require 12 to 24 hours before dissipation takes place.

## Section 8 QuicTest Operation While Driving Your Vehicle

This section describes operation and interaction with QuicTest while you are driving your vehicle. Please refer to Section 5 for instructions on how to take a Breath Test, and Section 6 for instructions on how to start your vehicle before reading this section.

1. Once your vehicle is started and you are driving, the display will read "*RUNNING*". This is the normal mode of the unit when you are driving. None of the Menu Mode options, such as Adjust Volume, Select Language, APPOINTMENT CHECK, etc. are available while the vehicle is underway. Also – under no circumstance should you disconnect the Sample Head from the coil cord during vehicle operation. Doing so will result in ALARM MODE. Periodically, the unit will make a buzzing sound for about 10-12 seconds. This is normal unit operation and does not indicate a malfunction. The unit contains a pump that periodically circulates fresh air through the unit.

2. As you are driving, there are timed events that you will be required to comply with as part of your State Agency Interlock Program.
  - a. **RANDOM RUNNING TEST:** The first of these is the Random Running Test. If required by your program, you will be asked to take a **RUNNING TEST** at random time intervals. When this occurs, the unit will alert you with 2 beeps, and say *"A Running Test is required. You have 3 minutes. Take Running Test as soon as you can safely do so, off the road or while the vehicle is underway"*. At this point the unit will display **HOLD TRIGGER AND BLOW**, as it waits for you to take a Breath Test. It will repeat this request at 2 minutes, and again at 1 minute.

You have the option of taking this test while you are driving, or pulling off the road in a safe place, and taking the test with the engine still running. This Test is designed to be simple enough to take while the vehicle is in motion. There is no need to actually look at the QuicTest Sample Head. Simply pick it up. Your fingers will fall in place around the handle and your index finger will be on the **TRIGGER**. Press the **TRIGGER** and raise the device to your mouth, and blow a breath sample, as described in detail in Section 5.

If the result of your **RUNNING TEST** is **PASS**, the unit will return to **RUNNING MODE**.

If the result of your **RUNNING TEST** is **WARN**, the unit will announce. *"Warning, a low level of alcohol has been detected. If further tests show higher levels, you may be required to stop the vehicle before reaching your destination"*. The unit will then return to **RUNNING MODE**.

If the result of your **RUNNING TEST** is **FAIL**, the unit will announce *"An Engine Off Test is required. You have 10 minutes to pull off the road in a safe location, turn off the vehicle, and take an Engine Off Test. Failure to perform this within 10 minutes will activate alarm"*.

If the result of your **RUNNING TEST** is **HI FAIL**, you will have only 3 minutes to take an Engine Off Test.

If you choose to ignore the request for a **RUNNING TEST**, or you do not feel you can safely perform it with the vehicle underway, and there is no safe place to get off the road, you can allow the 3 minute **RUNNING TEST** window to expire. If you do this, the unit will then announce, *"An Engine Off Test is required. You have 10 minutes to pull off the road in a safe location, turn off the vehicle, and take an Engine Off Test. Failure to perform this within 10 minutes will activate alarm"*.

There is no penalty for choosing to stop for a standing retest rather than attempting an unsafe Running Test. Ultimately, it is your choice of whether to attempt a rolling retest or to find a safe location in which to stop and perform the Test.

- b. **ENGINE OFF TEST:** Messages requesting the Engine Off Test will continue (at 5, 3, 2, and 1 minutes) until the time for you to test has expired. Find a safe place to pull off the road. Never pull off on the shoulder or into the emergency lane or the median of a highway; get completely off the highway, on a side street, parking lot, turn around etc. Turn the vehicle completely off, enter your PIN (if requested) and take a Breath Test, as instructed by the unit and described in Section 5.

If you do not take an Engine Off Test in the 10 minutes provided, the **ALARM MODE** will be activated, your siren will sound and your hazard lights will flash. You **MUST** pull off the road in a safe place and turn off the vehicle at this time. The only way to silence the alarm is to turn off the vehicle. When you turn off your vehicle, it is normal for the alarm to continue for a few seconds before shutting off. The activation of Alarm Mode will also generate a 3 day Service Recall.

If you can not find a safe place to stop for an Engine Off Test within the allotted 10 minutes, continue driving until a safe location is found. Under normal driving circumstances, it is rare that a safe location can not be found if the participant begins looking as soon as the alert is sounded.

You may ignore an Engine Off Test request if you are about to turn the vehicle off, however you may be asked to take a test when you arrive at your destination (see Arrival Test, below).

- c. **HOURLY ENGINE OFF TEST:** Some State Agencies (such as North Carolina) require an Engine Off Test to be taken after every 60 minutes of continuous driving. If you have been driving for a full hour, the unit will announce, *"An Engine Off Test is required. You have 10 minutes to pull off the road in a safe location, turn off the vehicle, and take an Engine Off Test. Failure to perform this within 10 minutes will activate alarm"* Please follow the instructions in Section 7.3.b above.

It is recommended you plan for Hourly Engine Off Tests (especially on long trips) by taking advantage of rest areas, fuel stops, and to use the rest room, etc., rather than waiting until the last minute when an appropriate stopping place is much more difficult to find.

- d. **ARRIVAL (DESTINATION) TEST:** If you reach your destination during a RUNNING TEST request, or an ENGINE OFF TEST request, (and have not yet taken the Test prior to turning off the vehicle), you will be asked to take an Arrival Test before leaving the vehicle. Failure to take an Arrival Test will not activate alarm, but may be a Program Violation, depending on your State Agency's Interlock Program Requirements, and will be recorded in the unit's event log. To take the Arrival Test – when instructed by the unit, follow the steps for taking a Breath Test in Section 5.

- 3. **Stall Protection:** If your vehicle stalls at any time, you may re-start it without being required to take a BREATH TEST for up to 2 minutes after the engine has stalled. Turn the ignition switch off, and then start the car as you normally would. Even if you stalled during a Test Request, and the unit is asking for an Arrival Test, you may restart the vehicle in this manner after a stall.
- 4. **Restricted Drive Times:** If your Interlock Program has restricted your driving privileges to certain times of day, do not attempt to drive outside those times. Depending on the requirements of your State Agency, the device will either log the fact that the vehicle is being driven during restricted times, or enforce the restriction, by activating the alarm.

## Section 9 (Vehicle) Service Mode

This section describes how a mechanic can troubleshoot and service your vehicle with the QuicTest Interlock installed.

If your vehicle needs automotive service – your mechanic can troubleshoot and repair it with the QuicTest Installed, without having to take Breath Tests.

1. Take your vehicle to a State Licensed service mechanic.
2. Advise the mechanic that your car is equipped with a QuicTest Ignition Interlock. Please inform him that he will have to call the call center at your Service Provider prior to moving or working on the vehicle. (See number below.)
3. If your unit requires a PIN to wakeup, you will have to give this number to the mechanic.

**SERVICE PROVIDER: Monitech Ignition Interlock Systems**  
**Customer Support Center 1 (800) 521-4246 or (919) 459-1700**

## Section 10 (Lockout) Override Code

If your unit has put your vehicle in Permanent Lockout due to an extreme situation (such as a missed Service Appointment due to natural disaster, severe weather, severe illness, etc), it may be possible for the lockout date to be temporarily reset remotely. This will allow you to get the vehicle to a Service Center for servicing. If this has occurred, call your Service Provider and request QuicTest Support. If at all possible, call with a cell phone so you can be with the unit, in your vehicle. **Unless warranted, this service may require additional charges.**

## Section 11 Care of Your Interlock Unit

- Your QuicTest Ignition Interlock is a complex instrument. With proper use and handling it will help you comply with your Interlock Program requirements in a simple, easy to use manner, with minimal inconvenience - however, improper or rough handling, or attempts to tamper with or circumvent the unit may result in vehicle lockout, alarm activation, service fees or loss of license.
- Always keep the Sample Head clean, dust free and dry at all times. While the Sample Head is water resistant, it is NOT water proof. Service calls resulting in exposure to water or other liquids may be charged to the customer.
- Do not leave the unit in Direct Sunlight. (i.e. on the dashboard on a hot day.)
- Do not pull excessively on the coil cord that is connected under the dashboard.
- There are no user serviceable parts in your Interlock unit. DO NOT ATTEMPT TO OPEN OR TAMPER with any part of the device. Doing so WILL disable your vehicle, and be a violation of your program, resulting in additional fees and / or the loss of your license.
- Always use a clean QuicTest Disposable mouthpiece when taking a Breath Test. (As long as the mouthpiece remains clean, it is not necessary to use a “new” mouthpiece every time.)

- Do not attempt to introduce anything other than clean human breath into the device. Introduction of any other sample will result in an INVALID SAMPLE, and abort the test, and prevent your vehicle from starting.
- Remember to remove gum, candy, smokeless tobacco, and foodstuffs, etc. from your mouth and to clear your lungs / mouth of any cigarette smoke or other fumes **before taking the test**. The QuicTest Interlock will not fail you for substances other than alcohol, but other substances (especially cigarette smoke) can damage the Interlock. **BE CAREFUL; YOU WILL BE CHARGED FOR ANY DAMAGE TO THE INTERLOCK CAUSED BY CIGARETTE SMOKE OR OTHER FOREIGN SUBSTANCES BLOWN, SPRAYED, POURED, OR SPILLED INTO THE UNIT.**
- If it will be extremely cold outside, or your vehicle will be without power, or you know your battery is low, go to REMOVE UNIT in the Menu Mode. Press the trigger, and disconnect the coil cord from the Sample Head when instructed to do so. Take the unit in the house, and reconnect it again before you drive.
- Do not attempt to abuse or mistreat the device in any way. Such activity may be detected and recorded, and may result in service charges, fines or loss of license.

## Section 12 Potential problems with the QuicTest:

- If the outside temperature is very cold, remember to remove the mouthpiece and warm it up by holding in your hand or blowing into it, before inserting it back in the QuicTest and taking a Start Test. Failure to do this may result in an "INVALID SAMPLE".
- If the vehicle IS NOT RUNNING, and the QuicTest unit does not wakeup, or seems to have "Locked-up" without going to menu mode, disconnect the coil cord from the Sample Head, wait a few seconds, and reconnect. If this does not correct the problem, call the Monitech Customer Service Center.
- If the unit states that it is in Permanent Lockout, or displays "UNABLE TO TAKE TEST" call the Monitech Customer Service Center. There may be a 4 digit number on the display after the Permanent Lockout message; if so, write it down and tell that number to the Customer Service Representative you speak with.

## Section 13 Potential problems with the vehicle:

- If the Ignition Interlock will not wakeup or the display indicates "*LOW VEHICLE BATTERY*" it means the Interlock is not getting enough voltage to allow a test. Check your battery, terminals, and charging system.
- If you pass the Interlock test, but your vehicle will not start, there is a high probability of a fault in your starting system (although sometimes a low battery voltage can be the problem). This difficulty is often in the starter, starter-solenoid, the ignition switch, or the connections in between. Such problems should be addressed by a qualified automotive mechanic.

- If the Interlock does not power up, your battery may be completely discharged. Have your automotive repair center (ie. service mechanic, auto parts store, etc.) check your battery. They can advise you as to whether your battery may need to be charged or replaced. If your Interlock does not power up after this or any other repair work has taken place on the vehicle, call Monitech immediately.
- Did the problem appear after other work took place on the vehicle? Check the fuses. Have you installed a stereo, telephone, or any other item that could have caused other wires to come loose or a fuse to blow?
- Remember that the Ignition Interlock can only prevent your car from starting. Once your vehicle is running, the Ignition Interlock can not make your vehicle shut off. If your vehicle is running rough, stalling out while underway, or won't start even though the starter is clicking or "turning over," the difficulty can not be the Ignition Interlock. Such problems should be addressed by a qualified automotive mechanic.

## Section 14 Monitoring Appointments

- Before you leave the Service Center, please be sure to schedule your first monitor check appointment at the Monitech Service Center of your choice. Although we do have Service Centers throughout the state, all appointments are scheduled through our Customer Service Center, which you can contact during regular business hours. The number appears on your appointment card. Please be sure to call this number if you ever need to reschedule your monitoring appointment.
- Remember that all monitoring checks are performed by appointment and in the order they're scheduled. While we will do everything possible to make your visit go as smoothly as possible, previously scheduled appointments will often prevent us from being able to service your Interlock at a time other than your scheduled appointment. For that reason, it is not recommended that you arrive too early. Of course, when possible, we will be glad to service your vehicle early and get you on your way.
- Anytime you wish to come for an appointment other than the scheduled time, BE SURE to call the Customer Service Center. Because of the number of Service Centers, it is not always safe to assume that there will be a Service Technician available if you just "show up."
- When it is time to have your Interlock serviced the QuicTest unit will notify you each time it wakes up, beginning seven days from your scheduled appointment. This signifies that you have seven days to return to a Service Center for a monitoring check. Please note that failure to report for your Monitor Appointment may cause the vehicle to go onto Permanent Lockout.
- Assuming that no problems are encountered, a monitoring check will generally last 15 to 20 minutes. During this time, the Interlock is tested and calibrated, the internal clock is reset to allow another two months driving time, and a *data logger report* (listing of the Interlock's memory) is downloaded to determine if any violations and/or alcohol failures have occurred in the past two months.

## Section 15 Do's and Don't of your Interlock Program

- Do contact Monitech emergency service if the vehicle must be used by untrained persons in an emergency situation or if the emergency has caused you to be unable to successfully complete the test.
- Don't attempt to "hot wire," "cross-ground," or "roll start" your vehicle in an attempt to CIRCUMVENT the Ignition Interlock. The Interlock will record such actions, go into IMMEDIATE RECALL and the horn will blow. The charging system of your vehicle may be damaged. License revocation is probable.
- Don't allow mechanical work that might require vehicle startup in your absence without providing the Monitech toll free number to the service technician. Instruct all involved that Monitech must be contacted BEFORE any related wiring is detached and / or a service CIRCUMVENTION is attempted.
- Don't avoid a monitoring appointment because of financial difficulty. Call the Monitech Office to make special payment arrangements. Your appointments must be kept.
- When contacting emergency service after hours, make sure that you leave a phone number that you can be reached at in the next 20 minutes. Call emergency service back if you are not contacted within 20 minutes.
- Do keep the Operator Manual, next appointment date and emergency number in your vehicle at all times.
- Don't disconnect any wiring that might be related and / or connected to the Ignition Interlock in any way. Call Monitech before disconnect if there is any doubt.
- Don't allow anyone who might have alcohol content on their breath to attempt a test "just for fun." All alcohol readings are assumed to belong to the participant.
- Don't allow anyone to drive the vehicle if you are not willing to accept responsibility for any alcohol readings that might result.
- Do remember to plan ahead for Standing Retest stops. Do look for safe, lighted areas - away from traffic flow - when stopping for an Engine Off Test.
- Don't leave the ignition switch "ON" without starting the vehicle.
- Do review the *Operators Manual* periodically.