

# **User Manual**

**Model: Helmet** 

# Index

1	Introduction				
	1.1	Package Contents	3		
	1.2	Product Features	3		
	1.3	Product Specifications	4		
2	Арре	6			
	2.1	Appearance	6		
	2.2	Back of the Camera	6		
3	Setup and Installation				
4	Returns and Exchanges				
	4.1	What is Your Return Policy?	12		
	4.2	Can I Exchange an Item?	12		
5	FCC	Caution	12Frrort Bookmark not defined		

#### 1 Introduction

Helmet works with your iPhone or iPad so you can see the video feed anytime and anywhere as long as you are connected to the Internet (including Wi-Fi, 3G/4G network, etc.). From your free app, you can set up motion/sound alerts, zoom in and snap photos so you will never miss an important moment.

This product is meant for providing convenience for home monitoring. The manufacturer is not responsible for any legal liability caused by negligence.

#### 1.1 Package Contents

- √ 1 Helmet Monitor
- ✓ 1 Power Adapter
- ✓ 1 Quick Installation Guide
- ✓ 1 Wall Mount

#### 1.2 Product Features

- ✓ Supports 802.11b/g/n protocol for wireless monitoring.
- ✓ It works on TCP/IP network protocols.
- ✓ Users can browse video with an iPhone and iPad, as well as Android devices.
- ✓ Selectable video resolution for comprehensive network bandwidth & mobile device.
- ✓ Half duplex two-way talkback.
- ✓ High performance P2P technology for high reliable connectivity.
- ✓ Video & audio recording (local memory card, iBaby cloud), social sharing.
- ✓ Pan & tilt support.
- ✓ Supports Micro SD Card Recording.
- ✓ Supports UPNP, P2P, and port forwarding automatically on the router.

# 1.3 Product Specifications

Model: Helmet				
Features	P2P	Support P2P		
	Cloud Storage	Support the pictures stored in the cloud		
CPU	os	Embedded Linux OS		
	СРИ	32Bit RSIC Embedded Processor		
Video	Compression	H.264 baseline		
	Frame Rate	Max.30fps		
	Resolution	HD 1080p - 720p - VGA 480p		
	Image Rotation	Brightness, contrast, resolution is adjustable, mirror /flip		
	Lens	f=3.6mm, F=2.0, fixed iris		
Lighting	Minimum	0 Lux (IR on automatically)		
	Illumination			
	Lighting	10pcs 12ML Infrared LEDs, 8m distance		
Audio	Compression	G711		
	Audio In	One way input / internal microphone		
	Audio Out	One way output / internal speaker		
	User Access	Support 4 users at the same time		
	Protocol	TCP/IP, HTTP, UDP, DHCP, UPNP, NTP, P2P		
	IP address	DHCP IP address		
Wi-Fi	Protocol	Support 802.11b/g/n		
	Encryption	Support WPA/WPA2 encryption		
	Setting	The app will automatically pick up the Wi-Fi network your phone uses		
	USB Interface	Connect with iOS devices		
	Antenna Port	One external antenna port		
PTZ	Motor	Built-in motor control		
	Coverage	Horizontal: 355°, vertical: 110°		
Other	Shape material	Plastic		
	Work	Indoors		
	Environment			

	Power	DC5V 1.5A
	Reset	One
	Product Power	Daytime 2.5W, night 3W
	Operating	Temperature: 0~40 °C, humidity: ≤75% at 30°C
	Environment	
	Storage	Temperature : -40 $^{\circ}$ C ~ 55 $^{\circ}$ C , humidity : $\leq$ 90% at 40 $^{\circ}$ C
	environment	
	Size	Monitor size: 110mm(L)*110mm(W)*135mm(H)
		Package size: 180mm(L)*156mm(W)*131mm(H)
	Weight	Weight: 272g
	Package contents	Power adapter, Quick Start guide, warranty card, bracket and screw
Software	Software	iOS 6.0 or later, Android 4.0 or later
Certification	Certification	FCC, CE, ROSH, RCM

# 2 Appearance and Interface

# 2.1 Appearance



#### 2.2 Back of the Camera



- 1 Power Input Socket: Power adapter socket. The adapter's output is 5V and 1.5A.
- 2 SD CardSocket: Supports Micro SD Card recording.

### 3 Set-up and Installation

### 3.1 Download the App

- 1. Download iFamCare app from the App Store.
- 2. Click on the 'Install App' button.



### 3.3 **Preparation**


- 1) Connect the mobile device to Wi-Fi. The upload speed should be at least 2.4 Mbps.
- 2) Reset Helmet when you perform initial setup:
- Plug in the power adapter to Helmet and wait until you hear a short jingle, which means the monitor activation was successful.
- Hold the reset button until LED light starts flashing. Please wait until you hear a short jingle again. The LED light should turn solid red color, indicating a successful reset.

#### 3.4 Helmet installation


- 1) Open the iFamCare app.
- 2) Click on 'Register' and create a new account.




3) When you fill out all fields, click on 'Register' to log in.

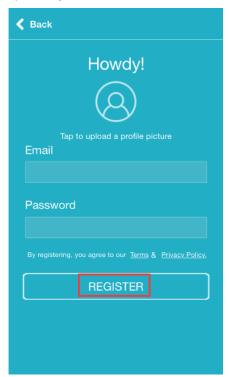


#### 4) Click on 'I am ready. Let's start!'

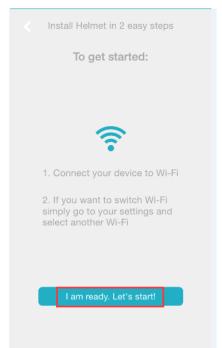

5) Check the LED light at the back of Helmet and select options 'Yes' or 'No'.

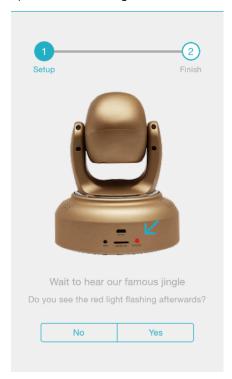


6) The app will automatically connect to the Wi-Fi network your mobile device is on. Type in the Wi-Fi password and click 'Next'.

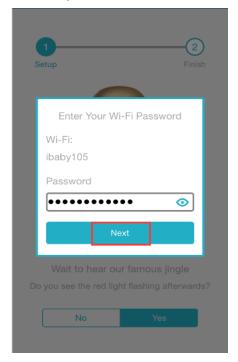

Note: Wi-Fi password MUST BE correct, otherwise you will not be able to view the video feed on your mobile device.

#### 7) Wait until the installation is complete.

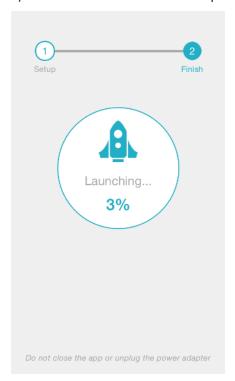


Note: During the process you should hear a jingle. Once the installation circle is 100% complete, please also check on the LED light on the back of the monitor. If it is green, the installation was successful. If it is red, the installation failed.

#### 8) View the video feed.



#### 3.4 Introduction to main interface.

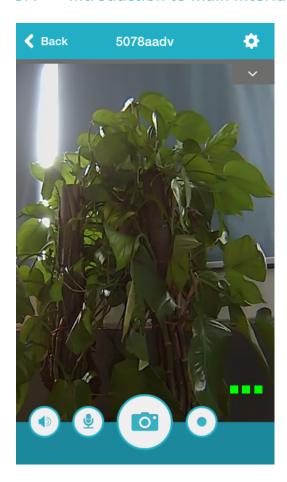

### 4 Returns and Exchanges

### 4.1 What is Your Return Policy?

Defective merchandise may be returned to us within 30 days from the date merchandise was received. Item(s) must be returned in the condition received; otherwise we will not be able to accept your return. We will credit your refund to the original credit card, with shipping and handling charges deducted from the refund amount.

### 4.2 Can I Exchange an Item?

Exchanges are only allowed within a year of purchase date when the merchandise is defective or damaged upon receipt.

#### **5** FCC Caution:

Any changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) this device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

#### **FCC Radiation Exposure Statement:**

This equipment complies with the FCC radiation exposure limits set forth for an uncontrolled environment. This equipment should be installed and operated with minimum distance of 8 inches between the radiator and your body.

This transmitter must not be co-located or operated in conjunction with any other antenna or transmitter.