

Tabletop Atomizer Crimping Machine

BAL-5215 BAL-5220



Dimension

Height : 45 cm

Weight : 7.8 kg

Size of clip :

BAL-5215 13~15 mm

BAL-5220 18~20 mm

Introduction:

Portable and convenient laptop crimping machine specialized in Atomizer cap. Competitive price, easy operating, can achieve safety speed and time saving requirements.

Application:

Perfume, Cosmetic, Medicine, Atomizer...etc.

Accessories :

item	Name of article	No.	Quantity	Description
1	Manual		1 copy	
2	12mm spanner		1 PC	
3	Thickness adjusting pad (for head)		3 PCS	
4	Accessory		1 tin	

Filler Co., Ltd.


Tel : (02)2593-1616 / 2591-6873

Fax : (02)2586-4587

www.filler.com.tw


E-mail: filler@filler.com.tw

Structure :

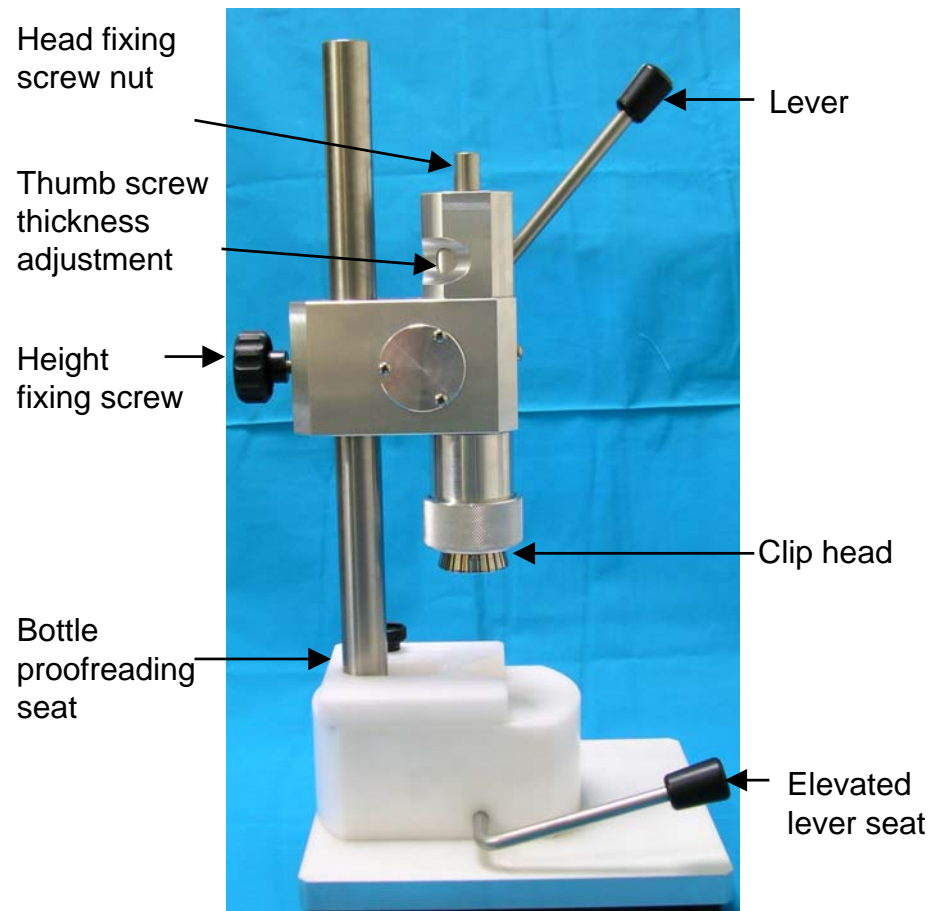

Task Adjustment at the beginning:

1. Push the lever to elevate the seat (1) then put on the bottle (2). Loosen the height fixing screw (3) in order to make the clip head suitable for the pump cap (4) then screw it on. Pull the lever (5), while the cap is crimped by clip head, move the proofreading seat to fix the bottle in the center then screw on (7).

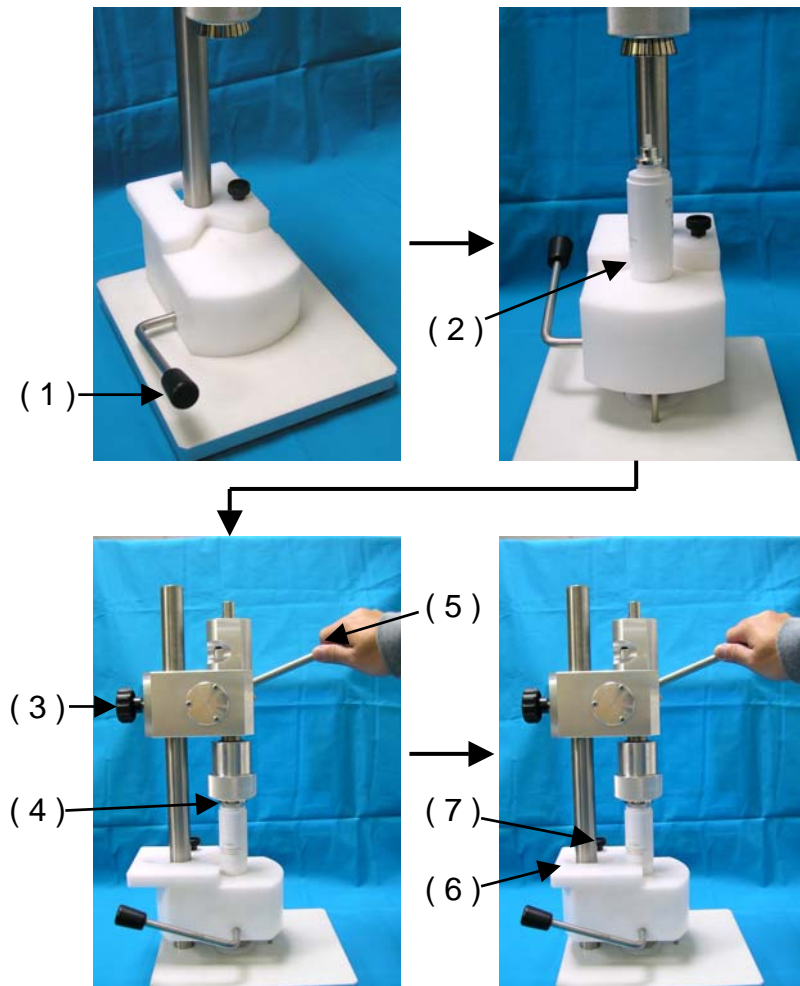


Thickness adjustment :

When the clip head can't suit for the size of cap in normal use, adjust the thumb screw(1) to loosen or fasten.

Screw the screw clockwise--loosen

Screw the screw counterclockwise--fasten

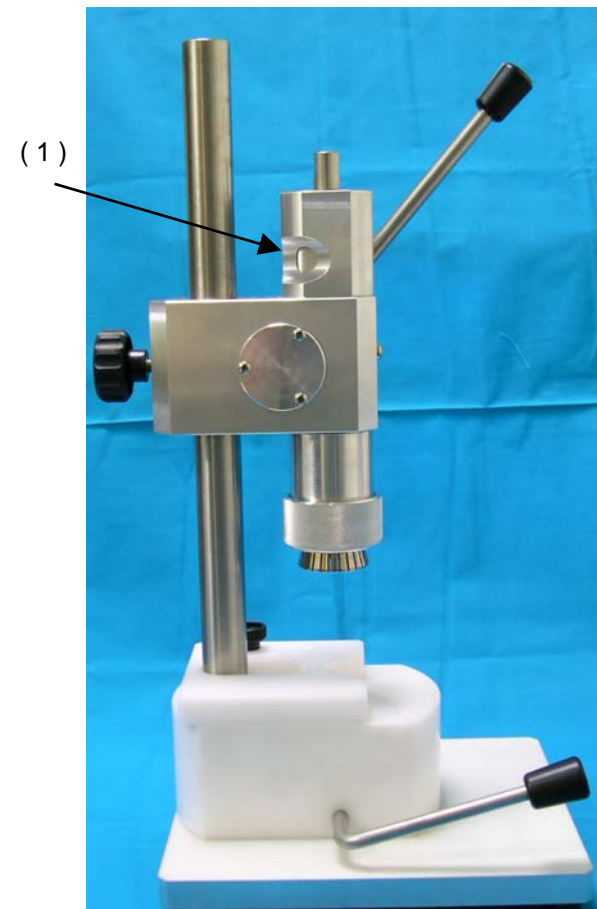


Thickness of clip head modification and Clip head exchange :


1. When the thumb screw thickness adjustment can't be adjusted precisely for the mouth of bottle, it needs to add the pad (accessory 3) under the head.
 2. When the size of clip head can't suit for the pump cap please change the other size of head together with bush.
- * Please note that the head and bush should be used together.

Disassembling Procedures :

1. Disassemble the screw first by spanner.
2. Take off the clip head and the parts as the picture show.

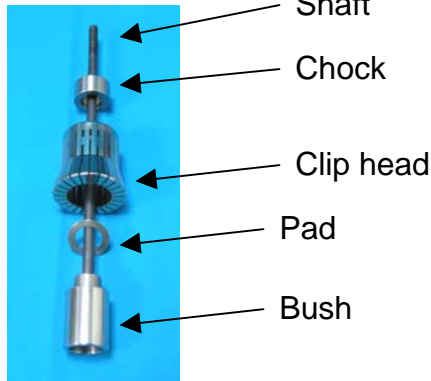

Assembling Procedures :

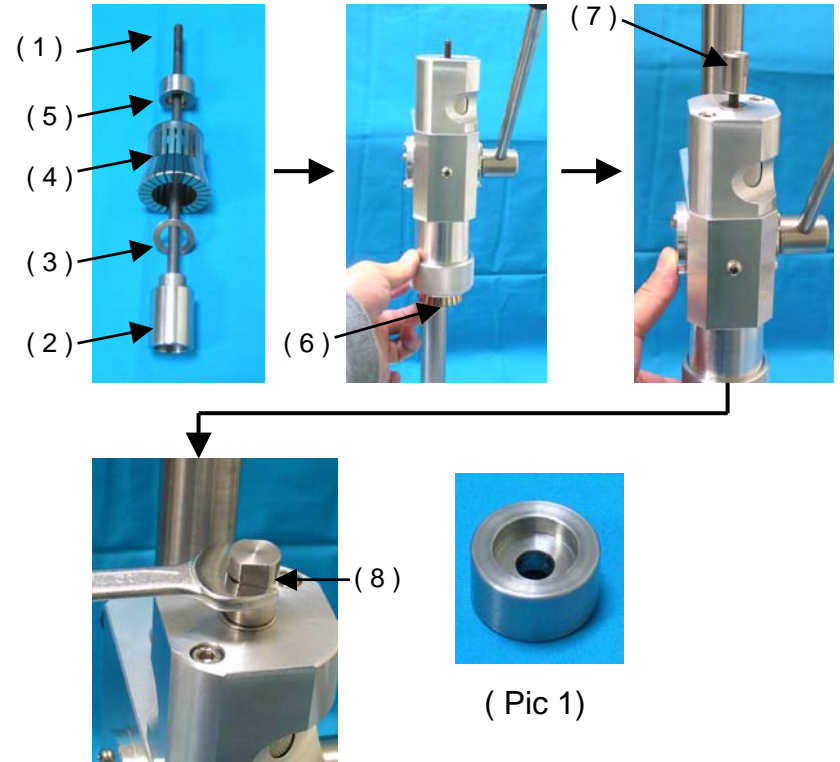

1. Pierce the shaft through the bush, pad, clip head, and chock. **The side with bigger hole faces below.** (Pic 1)
2. Fix the shaft by the screw nut and assist with spanner.

One (1) Year Limited Warranty - Worldwide

Filler Co. warrants their standard products against defects in their operation and non-consumable materials under normal use for a period of ONE (1) YEAR from the date of purchase by the original purchaser (“Warranty Period”). When a non-consumable hardware defect arises within the Warranty Period, a claim written in detail is to be received by Filler Co. within 30 days of the date the defect was discovered. At its option, Filler Co. will either (1) repair the hardware defect at no charge, using new or refurbished replacement parts, or (2) exchange the product with a product that is new or which has been manufactured from new or serviceable used parts and is at least functionally equivalent to the original product. This Limited Warranty does not apply to the damage caused by failure to either (1) follow instruction relating to the product’s use, or (2) handle, fill, transmit, wash, clamp, and/or manufacture the materials that are feasible and agreed upon through product testing beforehand and under general industrial acceptance.

Except as provided in this Warranty and to the extent permitted by law, Filler Co. shall not be liable for any direct, special, incidental, or consequential damages of any kind, including, but not limited to any expenses for removal or reinstallation resulting from a defect; loss of use; loss of revenue; loss of actual or anticipated profits (including loss of profits on contracts); loss of the use of money; loss of anticipated savings; loss of business; loss of opportunity; loss of goodwill; loss of reputation; loss of, damage to or corruption of material; or any indirect or consequential loss or damage howsoever caused including the replacement of equipment and property, any costs of recovering, programming, or reproducing any material stored, filled, transmitted, handled, washed, clamped or used with Filler Co.’s products.

In practical terms:

- 1) We warrant this machine with quality of performing steady operation in normal use (based on existing industrial standard) according to its design, for one year counting from the date of purchase.*
 - 2) Parts that are considered consumables (such as Filling Pipe, Hand-held extension Pipe, Intake Pipe, etc.) are not covered under this warranty.*
 - 3) Parts & labor will be charged additional if the breakdown of machine is due to following:*
 - Unauthorized disassembling of the machine.*
 - Unauthorized operation based on instructions NOT included in User’s Manual.*
 - Inappropriate power supply voltage applied.*
 - Damage from rats, insects, poor working condition, and natural disasters.*
 - Accident caused by failure in following instructions on assembling, disassembling, and cleaning procedures. (for example, sinking/soaking machine into water)*
-

* Proof of Purchase *

Owner's Name		
Address		
Article		
Purchase Date		
Dealer		Signature
Model		
TEL		
FAX		
Manufacturer	Filler Co.,LDT.	
Model	BAL-5220	
TEL	886-2-2593-1616	886-2-2591-6873
FAX	886-2-2586-4587	

1. We warrant the quality of this machine, in normal use, for one year from the date of purchase.
Consumables are not under warranty.
 2. Under warranty, partial material costs and service charges are necessary to repair the breakdown owing to
 - a. Irregular use against the User's Manual
 - b. Unauthorized disassembling
 - c. Inappropriate power supply voltage applied
 - d. Private modification
 - e. Disasters, rats and insects
 - f. Personal factors (sinking / soaking into water) to cause severe damage
-