Since 1968



# **User Manual**

## Doorphone AP-3SG



#### www.commax.com


### COMMAX Co.,Ltd.



- Thank you for purchasing COMMAX products.
- Please carefully read this User's Guide (in particular, precautions for safety) before using a product and follow instructions to use a product exactly.
- The company is not responsible for any safety accidents caused by abnormal operation of the product.



| 1. Greetings             |
|--------------------------|
| 2. Warnings and caution2 |
| 3. Part names            |
| 4. Features & Functions4 |
| 5. Contents              |
| 6. Wiring                |
| 7. Installation          |
| 8. Operating             |
| 9. Trouble shooting      |
| 10. Specification        |




- \* Thank you very much for purchasing of COMMAX products.
- \* Please read carefully this user manual and follow its rules.
- \* This intercom can be used in offices, and shopping outlets, and provide convenience to use communication on long distances.


1

# 📦 2. Warnings and caution


Please follow the things described below in order to prevent any danger or property damage.

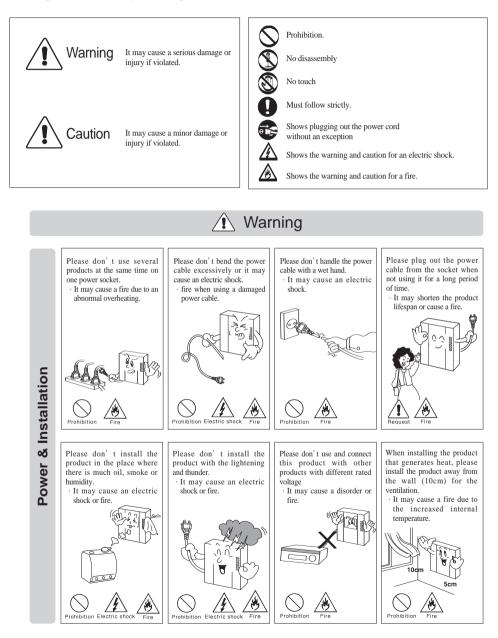

2

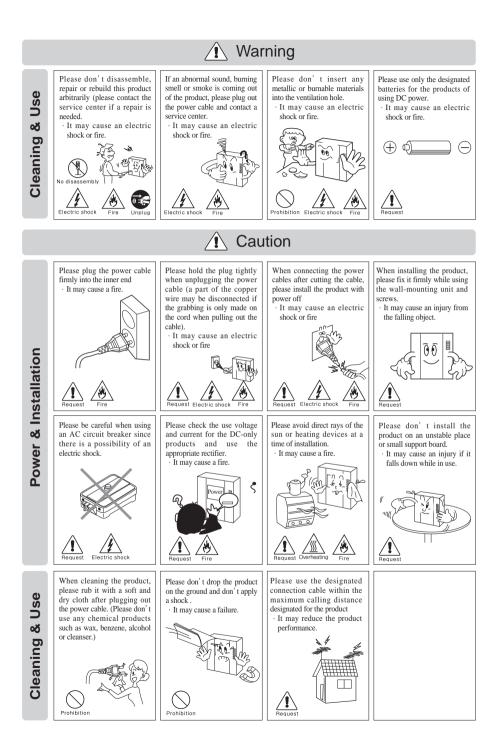



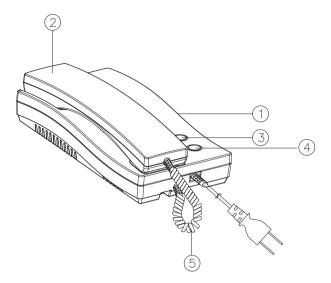

| No. | Name               | Description                     |
|-----|--------------------|---------------------------------|
| 1   | Call Volume switch | The part to control call volume |
| 2   | Handset            |                                 |
| 3   | Guard button       | To call guardian                |
| 4   | Door open button   |                                 |
| 5   | S•code             |                                 |




4

## 📦 4. Functions

- \* Calling to Guard unit and talking
- \* Door release (Interlocking with Door phone)
- \* Talking to Common lobby and Individual front door













User's guide



HAND SET




Connector (3P X 1, 6P X 1)




T4×18 Mounting screw

6. Wiring

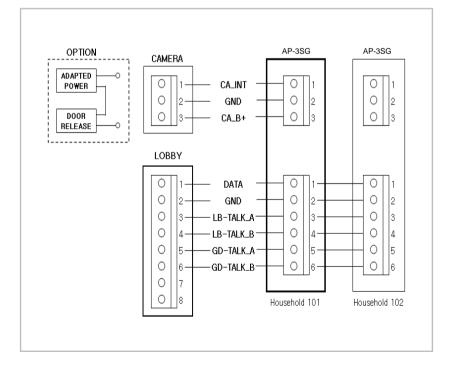




#### 1. AP-3SG

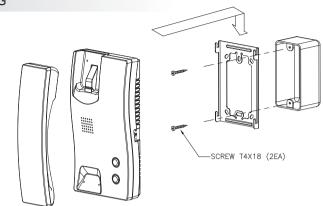

#### \* Caution for Monitor

When to install it, avoid the place where can be influenced by Magnetism, Humidity, Direct light and heater.

2. Audio Door Station

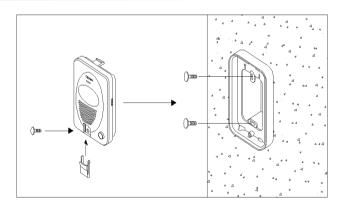



#### 1) Calling of Visitor

- ① When a visitor presses call button, with Calling sound from the speaker is emitted.
- 2 For Visitors, please talk with the hanset (Currency time 60 second)
- (3) When lay the handset after the end of taking with a visitor, everything is done. When a visitor is allowed to be in, the door is released with the sound, if a user presses the door open button,

(In case of using the camera which is interlocked with Door released function)

④ If guard or lobby calls during the coversation between house and individual entrance, phone rings. If you hang up the phone and pick it up again at this time, it will switch the phone over to guard or lobby. (Previous call is ended) Caution : Do not hold the handset at your ear when you press hook switch to switch call.

#### 2) Calling with Common lobby

- (1) Calling sound from the speaker is emitted when a visitor calls from Common lobby. Pick the handset to talk this time
- ② The sound of Door station is emitted while talking over the phone with the Common lobby.
- ③ If you hang up the phone and pick it up again, the coversation with Lobby will be disconnected, and the coversation with individual entracne will be available. If the door release button is pressed while talking over the phone with Common lobby, the door is released with sound and the talk is ended.

Caution: Do not hold the handset at your ear when you press hook switch to switch call.

#### 3) Calling with Guard station

- Pick up the handset which is connected with a Guard station. and if a user presses the Guard button, the sound will be emitted from Guard station. The talk between Guard and monitor is available this time.
- ② The calling sound is emitted from the handset if the Call button is pressed while talking over the phone with Guard station, and it is automatically shut down after 30 minutes by showing the screen of outside status

Caution : Do not hold the handset at your ear when you press hook switch to switch call.

③ If the call button is pressed from Guard station while talking over the phone with the Door station, the Signal sound is emitted to the handset. And the talk with Guard station is available if a user lays and picks the handset of the monitor or press the Guard button.

Caution : Do not hold the handset at your ear when you press hook switch to switch call.

④ When a guardian would like to talk with a household, the calling sound is emitted from the Monitor if the guardian presses the call button. And if a users picks up the handset, the talk is available with a Guardian

# 📦 9. Trouble shooting.

If you think that the product has trouble, please first check below contents before you ask a repair.

| Troubles   | Check Point  | Actions   |
|--|--|---|
| <ul> <li>The power supply is<br/>not on.</li> <li>All works are stopped</li> </ul> | <ol> <li>The power supply<br/>cord is missing or not.</li> <li>The power supply switch<br/>(down) is off or not.</li> </ol>                    | <ol> <li>Please connect the<br/>power supply cord</li> <li>Please turn on the power<br/>switch pushing the left<br/>(down) to the right(up).</li> </ol> |
| A Call operation is not<br>performed.<br>(Door, Interphone function)               | <ol> <li>The wiring between other<br/>units is connected correctly<br/>in good order or not.</li> <li>The wiring is missing or not.</li> </ol> | <ol> <li>Please refer to connection<br/>related page and manage.</li> <li>Please connect correctly<br/>to the terminal.</li> </ol>                      |
| The product does not<br>produce the sound.<br>(Call volume, Talk volume)           | 1. A sound volume lies<br>in minimum or not.   | 1. Please adjust the sound<br>volume switch proprely<br>turing the left(down) to<br>the right(up), as you<br>want.                                      |



8

# 📦 10. Specifications

| Contents          | Description (AP-3SG)                          |
|-------------------|---|
| Wiring            | Common Lobby : 6 wires, Door camera : 4 wires |
| Rated Voltage     | 220~230V~, 50/60Hz                            |
| Power consumption | Stan-by mode : 3W<br>Operating : (Max.) 4W    |
| Distance          | Door : 50m/ Ø 0.65, Common lobby : 300m (UTP) |
| Temperature       | 0°C ~ +40°C                                   |
| Dimension         | 107(W) X 195(H) X 38(D) mm                    |
| Weight            | 600g  |



### **COMMAX Co.,Ltd.**

513-11, Sangdaewon-dong, Jungwon-gu, Seongnam-si, Gyeonggi-do, Korea Int'l Business Dept. Tel. : +82-31-7393-540~550 Fax. : +82-31-745-2133 Web site : www.commax.com

Printed In Korea / 2011.11.104