

PRONOMIC ULTIMATE




OPERATION GUIDE & USER MANUAL

HEIGHT CONTROL

Pendant control with up/down switches for height adjustment is located on the handle. Handset is removable for use and hangs when idle.



Pressing the button up/down will raise/lower the forks.

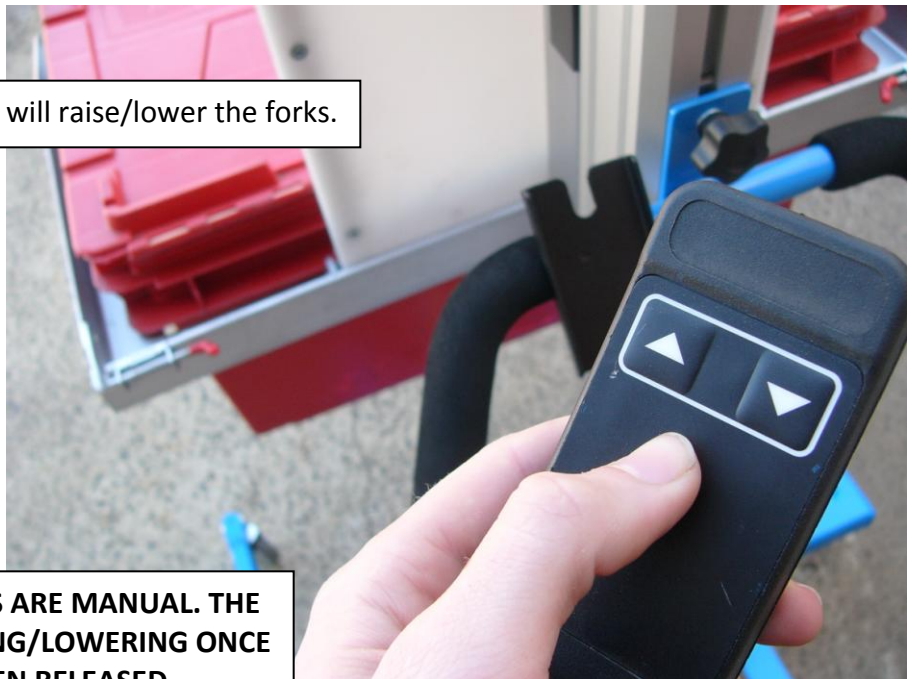

PLEASE NOTE THE BUTTONS ARE MANUAL. THE PLATFORM WILL STOP LIFTING/LOWERING ONCE THE BUTTON HAS BEEN RELEASED. BUTTON SHOULD BE RELEASED ONCE PLATFORM REACHES EITHER FULL HEIGHT OR GROUND LEVEL TO PREVENT DAMAGE TO COMPONENTS.

BRAKE OPERATION

To activate the brake press with your foot on the back of the grey brake lever, this will activate the brake. To release the brake, press foot on the top section of the brake lever.



USING THE FORKS



By pulling the small pin the forks will then be allowed to lower.

Once the pin has been pulled the fork will be released and then can be carefully lowered.

Fork at full extension, this is now able to lift the crate style loan case sets.



LIFTING THE CASES



Lower forks below rim case, as the forks pick the case up from the rim; make sure the case is lined up correctly before proceeding with the next step.




Once in this position the case is ready to be lifted, please ensure case is in proper position before continuing to the next step.



Press the button forwards to raise the case to the desired height, once at the correct height the Pronomic may be pushed forward, sideways or backwards to allow the case to be placed or unloaded in the appropriate area.

FOLDING AWAY THE FORKS

Lift forks from the horizontal position and push upwards.

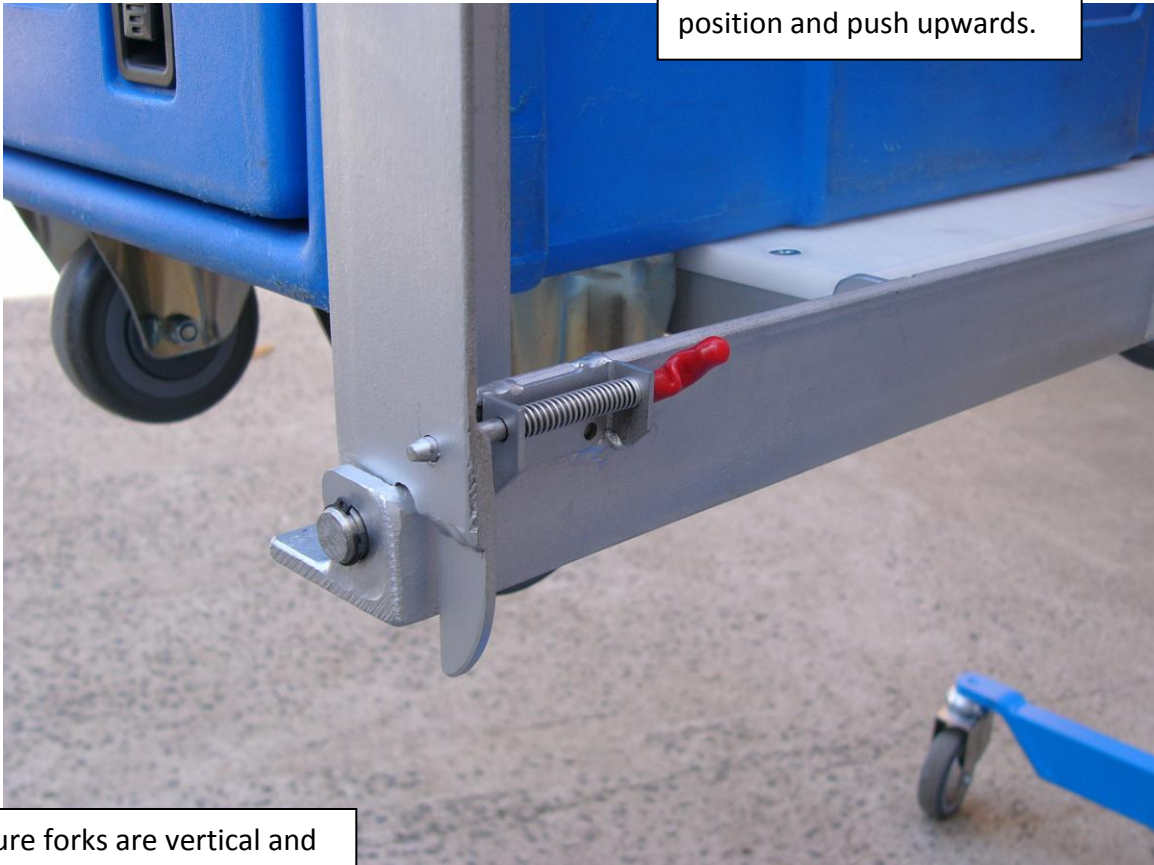

Ensure forks are vertical and the holding pin clicks into place to hold forks upright.

LOWERING THE FLAT PLATE



Pulling the tab located above the flat plate will allow the plate to be lowered in order to pick up the road case style loan sets.



Once the tab has been pulled the flat plate will then have to be lowered by hand to its complete position.



This is the flat plate at full extension; this is now ready to lift road case style crates.

LIFTING THE ROAD CASE



Line up the flat plate with the bottom of the road case; please ensure that you have enough room.




Once the trolley is correctly placed underneath the road case, making sure that the case is stable before continuing. It is now ready to be lifted.



Make sure the road case is stable when lifting this item. Carefully lift case to appropriate height and position, where the case can be rolled off and unloaded and unpacked safely.

LOCKING AWAY THE FLAT PLATE

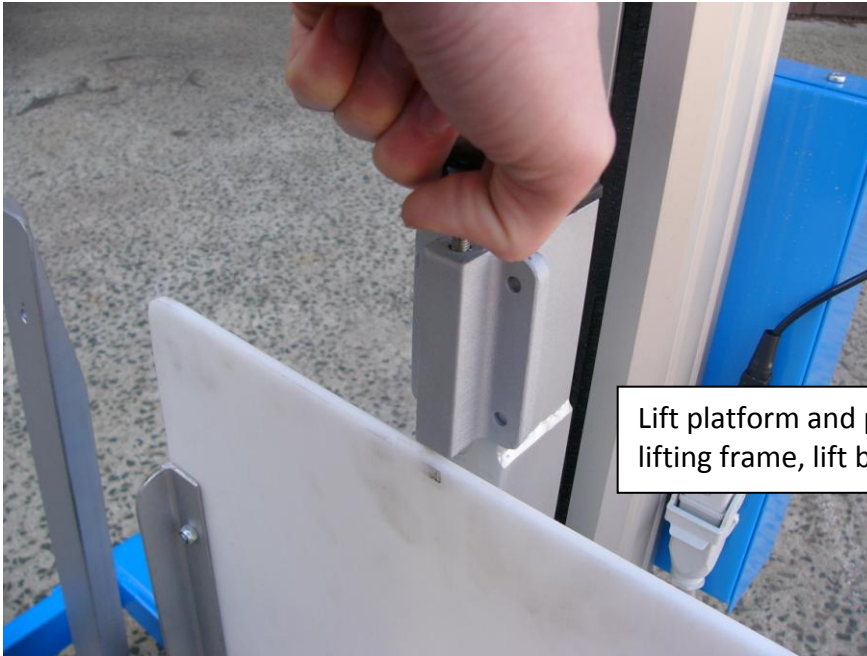

Lift platform and push back against the lifting frame, lift black knob to assist locking.



Ensure locking tab has a good hold of the platform before releasing it.

RECHARGING THE PRONOMIC (PART 1)



Locate the charger, and find a suitable power outlet.



Plug the charger into the lifter
BEFORE plugging into the wall outlet.

**WARNING: POWER SOCKET MUST BE
TURNED OFF BEFORE CONNECTION
TO EITHER LIFTER OR WALL SOCKET.**

RECHARGING THE PRONOMIC (PART 2)



Plug the charger into the wall outlet and turn the power on.

A light will appear indicating that the Pronomic is now recharging.

RED = No Charge/Charging
YELLOW = Charging
GREEN = Ready/Standby

OH&S SOLUTIONS

At **Service Assist** we specialise in Healthcare OH&S products and solutions to aid your staff, and solve potential OH&S issues before they arise.

Our team has years of experience in healthcare and manual handling, and can help you solve any OH&S issues. No problem is too big, or too small.

Some of our standard solutions include:

- Electric, hydraulic or mechanical lifting solutions
- Motorised drive solutions to new or existing customer trolleys
- Height adjustable trolleys and I.T. workstations
- Lightweight folding trolleys such as the “CLAX”
- General use stock and medication trolleys
- Service and maintenance of all mobile equipment on site

If we don't have a ready solution, we will work with you to develop one specific to your requirements. If you would like further information or a site visit, please do not hesitate to contact us:

Peter - 0438 709 004

Paul - 0438 700 413

Please visit our website serviceassist.com.au for more products and solutions

