

PORTABLE PCIT HEADSET SYSTEM

HOW TO USE YOUR PORTABLE PCIT SYSTEM

1. Assemble the multi-port charger system.




2. Next insert the 2 transmitter and 2 receiver modules into the charger bases. Charge over night before the first use. Any unit may be charged in any socket. The batteries do not need to be recharged after each session. Some experimentation will determine how long the batteries will last. Recharge over night and then remove from the charger



3. Note: the 2 modules marked with a "T" are the trainer's set and must always be paired together. The other 2 modules are the patient's.
4. Prior to use, connect the headset/microphone to the trainer's modules as shown below. Be sure the Pink microphone plug is inserted into the module jack labeled "MIC" and the green plug is inserted into the module jack labeled "EARPHONE".
5. Also connect the lapel microphone into the patient's transmitter and the earphone into the receiver.
6. Turn on all modules. Set all the volume control to mid point or slightly higher. Ensure all channel switches are set to channel A.




7. Insert the 2 trainer modules (T) into one pouch and the patient's modules in the other pouch. Place each belt around the person's waist as show.

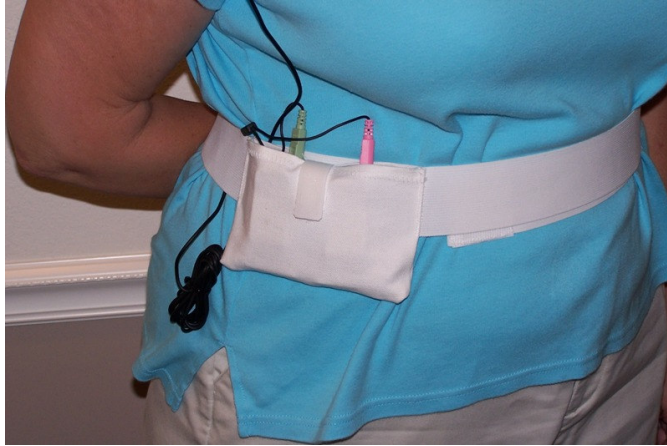

8. Then place the headset on the trainer's head. Adjust for most comfortable fit.



9. Place the patient's belt around the person's waist. It may help to wear the belt under the blouse or shirt to conceal it. Route the microphone wire up the inside front of the blouse/shirt and clip to the neck line in a convenient place (microphones may vary in style). Then route the earphone wire up the back of the shirt and up to the ear.

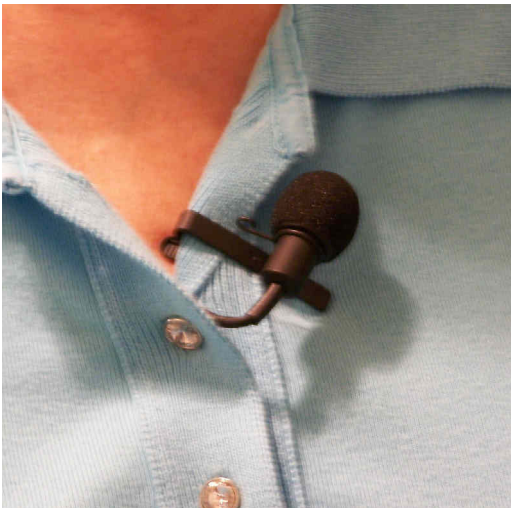

10. Note; the elastic belts are provided in two sizes. If the large belt is too loose, there are 2 Velcro pads on the belt to allow for different waist sizes.
11. Test the communications between both persons. They should be able to hear and talk to each other simultaneously, just like a telephone

IN CASE OF DIFFICULTY

1. If the trainer cannot hear the patient –
 - a. Check the **T**rainer receiver earphone volume and is set to Channel A.
 - b. Check that the patient transmitter module is turned on and mic is plugged all the way into the jack. Make sure the patient's transmitter is set to "Channel A".
2. If the patient cannot hear the trainer –
 - a. Check the patient's receiver volume, and is set to Channel A.
 - b. Check that the **T**rainer's transmitter is turned on and mic is plugged all the way into the jack. Make sure the trainer's transmitter is set to "Channel A".
3. The range on this system is limited. If the patient and trainer are too far apart, they may hear some high pitched noise or static in the earphone.
4. The batteries do not need to be recharged after each session. Some experimentation will determine how long the batteries will last. Recharge over night and then remove from the charger.
5. Check the LES 370 User Manual for other troubleshooting tips.

CARE OF ELASTIC BELTS

1. The belts come in 2 sizes. Medium for most users. The large belt has two Velcro patches for both medium and large size.
2. Belts should be washed regularly or when they appear dirty or have been wet from perspiration.
3. Wash belts on Normal wash, regular detergent and bleach if desired. (HINT – close both the small and large Velcro fasteners to prevent the "hook" patch from sticking to other garments.)
4. The belts are made to order and additional/replacement belts may be ordered at any time.