

User's manual

LIFE IS MORE! TRUST US **TRUST.COM** 


56K V92 BLUETOOTH WIRELESS MODEM




Thank you for your purchase. Register your product via our Internet site at www.trust.com/register, so that you will be eligible for optimal guarantee and service support. You will also be automatically informed of the development of your and other Trust products.

Hirust

### LIFE IS MORE! TRUST US TRUST.COM

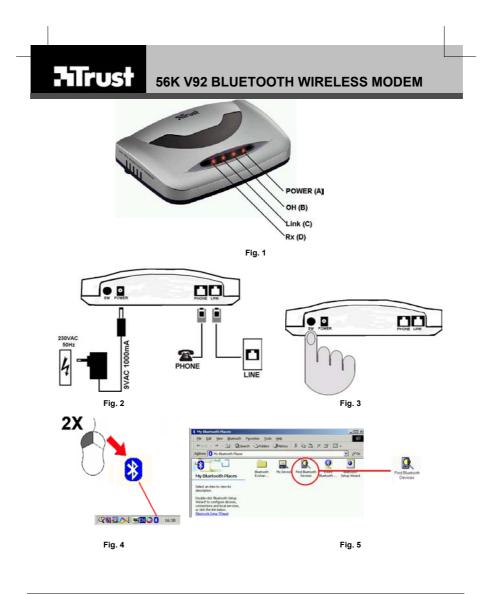

# LIFE IS MORE! TRUST US TRUST.COM

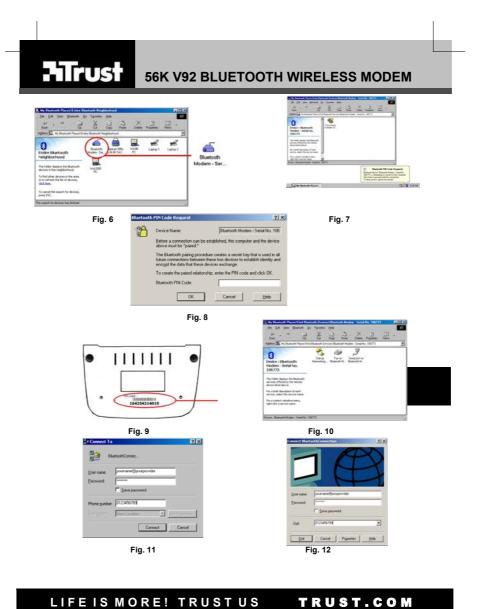

56K V92 BLU	
Ale standard h Facus     Ale standard h F	
The Life one Daniel Facebook has been <b>Q but + ◯ - ∱ ⊅ Seet ◯ hass</b> [1] +	Fig. 14
	Fig. 16

Dial Cancel Properties Help LIFE IS MOREL Fig. 17 Fig. 18

U S TRUST.COM

LIFE IS MORE! TRUSTUS TRUST.COM

#### 1 Introduction

This instruction manual is for users of the TRUST 56K V92 BLUETOOTH WIRELESS MODEM. The Bluetooth Class I technology allows the TRUST 56K V92 BLUETOOTH WIRELESS MODEM to be used as a wireless modem with a maximum range of 100 metres between the modem and your computer. This gives you greater freedom of movement whilst you are connected to the Internet. υĸ

- If you have installed a Bluetooth Adapter Class II in your computer, the Note: maximum distance between the modern and your computer will be 10 metres.
- 2 Safety
- Carefully read the following instructions before use: The TRUST 56K V92 BLUETOOTH WIRELESS MODEM does not require any
- special maintenance. Use a slightly damp, soft cloth to clean the modem. Do not use aggressive substances, such as white spirit, to clean the device. These may harm the material. Do not use this device near water.

- Do not use this device near water. Do not repair this device yourself. Nowadays, there are an increasing number of wireless products (video, audio, convenience, computer, etc.) which work in the same frequency range as this device. It may, therefore, be possible that the functionality of this device is limited by or is limiting for other wireless devices. This can only be avoided by paying attention to the distance between devices and, where possible, by changing channels. Be careful when using wireless devices if you have a pacemaker or are dependent on other life-saving, sensitive electronic equipment, because this product transmits radio signals.

#### 3 Approval

### (€0560①

- This device meets the essential requirements and other relevant conditions of the applicable European directives. The Declaration of Conformity (DoC) is available

- applicable European directives. The Declaration of Conformity (DoC) is available at www.trust.com/13854/ce. This wireless device works at a frequency of 1 MHz. It meets the essential requirements and other relevant conditions of R&TTE Directive 1999/5/EC and can be used in all EU countries: United Kingdom, Germany, Belgium, France, Spain, Portugal, Italy, Switzerland, Austria, Denmark, Norway, Sweden, Finland, the Netherlands, Iceland, Ireland, Greece and Luxembourg. There may be restrictions for the use of this device outside of the EU. If this device is used outside of the EU, check whether this device meets local regulations. Frequency: 2.400 GHz; 2.440-2.4835, Bandwidth: 1 MHz (Bluetooth Standard), Power: 25 mW.

#### 4 Functions

The table below and figure 1 on the gatefold page can be used to give you an explanation of the indicators on the modem.

	Function	Description
Α	POWER	This indicator is lit when the modem is turned on.
В	OH (Off Hook)	This indicator is lit when the modem has a dial tone or is online.
С	Link	This indicator is lit when there is a Bluetooth connection.
D	Rx	This indicator is lit when transmitting or receiving data.

Table 1 : Accompanying table for figure 1

#### Connecting 5

A Bluetooth adapter must be installed in your computer before the TRUST 56K V92 BLUETOOTH WIRELESS MODEM can be used. Note:

An example of a Bluetooth adapter is the TRUST BT180 CLASS1 USB BLUETOOTH ADAPTER (item no. 13853). You can also use a Bluetooth Class II Adapter, such as the TRUST BT120 USB BLUETOOTH ADAPTER (item no. 13428). A Bluetooth Class II Adopter has a maximum range of 10 metre.
5.1 Connecting the modem
Follow the instructions given below and refer to figure 2 and figure 3.
1. Connect the telephone cable to the 'LINE' connection at the rear of the

- modem 2. Connect the other end of the telephone cable to your analogue telephone
- If desired, connect your analogue telephone to the 'PHONE' connection. Connect the power adapter to the 'POWER' connection at the rear of the 3. 4.
- Insert the plug into the plug socket. Turn the modem on using the 'SW' switch (see figure 3). The power indicator (A) will be lit. 5. 6.

#### Creating a connection in Windows 98 / Windows ME / 5.2 Windows 2000

- The TRUST 56K V92 BLUETOOTH WIRELESS MODEM does not Note: The root softwar is been investigated and the software software in the require a driver. It uses the driver for your Bluetooth adapter. Therefore, make sure the driver for your Bluetooth adapter has been installed correctly. See the instruction manual provided with your Bluetooth adapter for more information.
- 1.
- Make sure Windows is running. Double-click on the Bluetooth icon (see figure 4) in the Windows taskbar. 2.
- Figure 5 will appear. Double-click on the '**Find Bluetooth Devices**' icon 3.
- 4. 5.
- Double-click on the modem icon  $\widehat{\longrightarrow}$ . Figure 7 will appear. Click on the text balloon (see figure 7) in which you are requested to enter your PIN code. Figure 8 will appear. Enter the PIN code found on the bottom of the modem (see figure 9) and click on 'OK'. Figure 10 will appear. The 'LINK' indicator C will now be lit. 6.
- Double-click on the 'Dial-up Networking' icon . Figure 11 will appear in Windows 98 SE and Windows ME. Figure 12 will appear in Windows 2000. 7.
- 2

8. Enter the following information which you have received from your Internet Service Provider (ISP).

#### User name Password

9.

### Phone number Click on 'Connect' to create a connection. The 'OH' indicator will now be lit.

# Double-click on the Internet Explorer icon 彦 to connect to the Internet.

### 5.3 1. 2.

- Creating a connection in Windows XP Turn on your computer and start Windows. Double-click on the Bluetooth icon (see figure 4) in the Windows taskbar.
- 3.
- Figure 13 will appear.
- 5.
- Click on the text balloon (see figure 7) in which you are requested to enter your PIN code. Figure 8 will appear. Enter the PIN code found on the bottom of the modem (see figure 9) and click on 'OK'. Figure 16 will appear. The 'LINK' indicator C will now be lit. 6.
- Double-click on the 'Dial-up Networking' icon . Figure 17 will appear. Enter the following information which you have received from your Internet Service Provider (ISP). User name 7. 8.
  - User name

### Password

Phone number Click on 'Connect' to create a connection. The 'OH' indicator B will now be lit.

Double-click on the Internet Explorer icon 6 to connect to the Internet. 9.

**Comment:** The modem supports the V92 protocol. However, as a result of the Bluetooth connection, a number of components, such as 'Modem On Hold', will not be available.

### 6 Checking the installation of the Bluetooth modem

Since the Bluetooth modem makes a connection via a Bluetooth adapter which has already been installed, no modem components will be installed on your computer. The operation of the Trust Bluetooth modem is largely dependant on the correct installation of your Bluetooth adapter. The modem is ready for use if the Bluetooth adapter has been installed correctly and if the Bluetooth settings have been configured correctly.

#### 7 Sharing a Bluetooth connection

The Bluetooth modem's Windows dial-up connection can be shared with other computers via your Bluetooth network. This can be useful if the modem is connected to the Internet via your desktop PC whilst you wish to access the Internet via your notebook. However, since it is a 56k modem, the speed of the connection on both computers will be slow.

See the Quick Installation Guide, points 13 to 28, for instructions on how to share a dial-up connection in Windows XP. Windows XP has a simple Wizard for creating a network for sharing an Internet connection. Although other versions of Windows can be used as a central computer, these options are not as simple to configure (Windows 2000 server) or do not work as well (Windows 98). It is strongly

3

υĸ

recommended to use Windows XP. For other Windows versions, see the Windows Help function.

8 Fax program The fax program BVRP Classic PhoneTools is provided with this modem. This program can be used to send a fax. This software does not have to be installed if you only wish to use the modem to access the Internet.

- 8.1 Installation
- Note: Make sure all other programs are closed during the installation.
- Note: In the example, 'D:V is used to indicate the CD-ROM drive. This may be different for your computer.
- different for your computer.

   Insert the CD-ROM into your computer's CD-ROM drive. The installation program will start automatically. If it does not start automatically, carry out the following:

   a) Select 'Run' from the Windows Start menu.
   b) Type [D:\SETUP.EXE] and click on 'OK' to start the Trust Installer.
   The Trust Installer will appear (see figure 18).

   Select the language you wish to have the Trust Installer displayed in.
   Click on 'Install FAX software' to start the installation of the fax program.
   Follow the on-screen instructions. If requested for your type of modem, select
   Bluetooth modem'.
   Select the language you show the "Installent of the select th 1.

- 2. 3. 4. 5. 'Bluetooth modem'.
- Do not select 'Bluetooth fax modem'. Note:
- 8.2 Use

4

When you start the fax program for the first time, you will be asked whether you wish to register the program. You do not have to register the program. The program will work even if you do not register it. Note:

Click on 'Start – Programs – Classic PhoneTools – Classic PhoneTools'. The program will start. See the instruction manual provided with the BVRP software or the program's Help function for more information. The instruction manual can be opened via the Trust Installer when the Trust installation CD-ROM is inserted into your CD-ROM drive (see figure 18).

## 9 Troubleshooting

Method					
1. Read the solutions given below.					
2. Check for up-to-date FAQs and instruction					
manuals on the Internet ( <u>www.trust.com/13854</u> ).					
Problem	Cause	Possible solution	]		
My Bluetooth	The modem is turned off.	Check whether the			
modem is not		adapter has been			
detected.		connected. Check whether the	ł		
		modem has been turned			
		on using the switch at the			
		rear of the modem.			
	The distance between the	A Bluetooth Adapter Class			
	computer and the modem is	II has a maximum range			
	too great.	of 10 metres. A Bluetooth			
		Adapter Class I has a maximum range of 100			
		metres.			
The PIN code does	The wrong PIN code has	Enter the PIN code found			
not work.	been entered.	on the bottom of the			
		modem.			
My dial-up	The modem is being used by	The modem can only be			
connection gives an	another computer.	used directly by one computer at a time.			
error message.		Disconnect the connection			
		between the modem and			
		the other computer and try			
		again.			
		If you use a Bluetooth			
		network, you share the			
		modem's dial-up connection on one of the			
		computers (see chapter			
		7).			
The error message	You have dialled the wrong	Check the number you			
"Error code 678	number.	have dialled.			
There was no	The Internet Service	Try to connect to your ISP			
answer" is	Provider you have dialled is engaged.	again.	ł		
displayed. The error message	The telephone line has not	Try at a different time. Check whether the			
"Error code 680	been connected correctly.	modem has been			
There was no dial	·····	connected to the			
tone" is displayed.		telephone line.	Į		
		Check whether the			
		telephone connection			
		works by testing it with an analogue telephone.			
L	l	analogue telephone.	1		

It is not possible to access the Internet via the Bluetooth network PC.	The computer with the dial- up connection has not been turned on.	Make sure the PC with the dial-up connection has been turned on. It is not necessary for this computer to be connected to the Internet.
The problem is not listed here.	The latest FAQs are available on the Internet.	Go to <u>www.trust.com/13854</u> for FAQs and other product information.
	It is a different modem problem.	See the Troubleshooter: www.trust.com/customerc are/help/modem

If you still have problems after trying these solutions, please contact one of the Trust Customer Care Centers. You can find more information at the back of this instruction manual. Please have the following information available: The article number. This is 13854. A good description of what does not work. A good description of when the problem occurs.

7

#### 10 Warranty conditions

- 10 Warranty conditions
  Our products have a two-year manufacturer's warranty which is effective from the date of purchase.
  If there is a fault, return the product to your dealer and include a description of the fault, the proof of purchase and all the accessories.
  During the warranty period, you will receive a similar product, if one is available. If no similar product is available, your product will be repaired.
  Please contact our help desk for missing components, such as the instruction manual, software or other components.
  The warranty becomes invalid if the product has been opened, if there is mechanical damage, if the product has been repaired by a third party, in the case of negligence or if the product has been used for a purpose other than that originally intended.
  Excluded from the warranty:
  Damage caused by accidents or disasters, such as fire, flood, earthquakes,
- Damage caused by accidents or disasters, such as fire, flood, earthquakes, war, vandalism or theft.
   Incompatibility with hardware/software which is not stated in the minimum system requirements.

system requirements. • Accessories, such as batteries and fuses (if applicable). Under no circumstances will the manufacturer be held responsible for any incidental or consequential damage, including the loss of income or other commercial losses, resulting from the use of this product.

# ATrust

# CUSTOMER CARE CENTERS

24 HOURS free service: www.trust.com					
Residents in the UK	and Ireland should	I contact:			
	UK Office	oontaot.			
Mon - Fri	Phone	+44-(0)845-6090036			
From 8:00 - 16:00	Fax	+31-(0)78-6543299			
I residenti in Italia po	ossono contattare:				
lun - ven	Ufficio italiano				
9:00 - 13:00 /	Telefono	+39-051-6635947			
14:00 -18:00	Fax	+39-051-6635843			
Les habitants de la F		ue du Nord peuvent contacter :			
	Bureau français				
Lundi-vendredi	Téléphone	+33-(0)825-083080			
De 9:00 à 17:00	Fax	+31-(0)78-6543299			
Kontaktadresse für					
	Deutsche Gesch				
Mo – Fr	Telefon	0800-00TRUST (0800-0087878)			
9:00 - 17:00	Fax	+31-(0)78-6543299			
Los habitantes de Es		erse en contacto con:			
	Oficina española				
lun – viernes	<b>T</b> 1/2				
De las 9:00 a las 17:00 horas	Teléfono Fax	+34-(0)902-160937			
		+31-(0)78-6543299			
Osoby mieszkające i	na terytorium Polsi Biuro w Polska	ki powinny skontaktować się:			
Od pon. do pt.	Tel	+48-(0)22-8739812			
w godz 09:00-17:00	Fax	+46-(0)22-6739612 +31-(0)78-6543299			
Inwoners van Neder					
inwoners van Neder	Kantoor Nederla				
ma – vr	Telefoon	0800-BELTRUST (0800-23587878)			
9:00 - 17:00 uur	Fax	+31-(0)78-6543299			
All other countries / Alle anderen Länder / Tous les autres pays Tutti gli altri paesi / Todos los demás países / Alle andere landen					
rata giraitri paesi /	European Head Office				
Mon - Fri	Phone +31-(0)78-6549999				
From 9:00 - 17:00	Fax	+31-(0)78-6543299			
	·				

# LIFE IS MORE! TRUST US TRUST.COM