

LB-EO

L-BAND Electrical to Optical Converter

User manual

Rev. 5

Nevion Support

Nevion Europe

P.O. Box 1020 3204 Sandefjord, Norway Support phone 1: +47 33 48 99 97 Support phone 2: +47 90 60 99 99 Nevion USA

1600 Emerson Avenue Oxnard, CA 93033, USA Toll free North America: (866) 515-0811 Outside North America: +1 (805) 247-8560

E-mail: <u>support@nevion.com</u> See <u>http://www.nevion.com/support/</u> for service hours for customer support globally.

Revision history

Current revision of this document is the uppermost in the table below.

Rev.	Repl.	Date	Sign	Change description
5	4	2011-02-21	AA	New template.
				Updated Declaration of Conformity.
				Removed Chapter 2.4 (Environmental conditions).
4	3	2008-04-01	GMW	Added connector interface description and more
				application details in product overview. Added 6
				CWDM channels. Added Declaration of Conformity.
3	2	2007-11-02	GMW	Added new product LB-EO-13T 0dBm. Added
				Materials Declaration and EFUP.
2	1	2007-09-25	GMW	Changed optical budget to 16dB for 15T/CWDM and
				6dB for 13T
1	0	2007-07-04	GMW	Added specifications for LB-EO-13T
0	А	2007-03-29	GMW	First official version
Α	-	2006-05-01	GMW	Preliminary version


Contents

Revision history	2
1 Product overview	4
2 Specifications 2.1 RF Characteristics 2.2 Optical Characteristics 2.3 Power connection	6 6
3 Configuration 3.1 Format configuration	
4 Connections 4.1 Mounting the connector module1 4.2 Terminal format support1	10
5 Module status	11
6 Laser safety precautions 1	13
General environmental requirements for Nevion equipment1	14
Product Warranty1	15
Appendix A Materials declaration and recycling information	16
EC Declaration of Conformity 1	17

1 Product overview

The Flashlink LB-EO is an electrical to fiber optical converter module providing high performance media conversion for analogue signals with bandwidth from 950 to 2150 MHz. This state of the art unit offers low noise amplifiers and a high quality laser diode technology with low distortion and capable of amplifying large signal levels. The attenuator is a high performance digitally controlled device, giving low distortion and flat frequency response. The Flashlink LB-EO is therefore the first choice for all optical transport demands on L-band.

The Flashlink LB-EO converter and the Flashlink LB-OE converter can transport all L-band signals between 950 and 2150 MHz over long distances using fiber optical transport media. The optical output comes with a sophisticated wideband laser diode designed to convert the electrical signal to optical giving very little inter modulation and excellent signal to noise ratio.

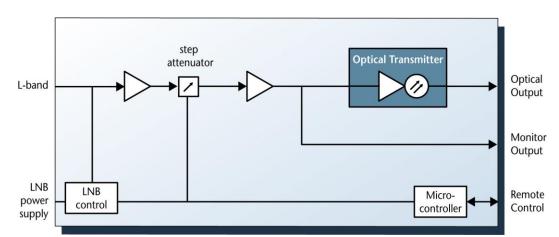

There is also an attenuated electrical monitor output for test and service purposes as well as a remote control interface.

Figure 1: LB-EO L-band electrical to optical converter.

This L-band link is normally used in conjunction with other equipment like satellite tuners, LNBs in parabolic dishes etc, and the link performance is dependant of good signal to noise ratio from the signal source and good noise figure of the receiver equipment. The link quality is also dependant of the number of channels transferred on the link. For instance, the link's signal to noise ratio is reduced with 3dB when doubling the number of the channels (twice the power).

An optical link will add some noise to the signal. The amount of noise is dependant of the fiber loss, the satellite receiver sensitivity, number of channels and the total power level of the signal. The combination if analogue and digital satellite signals is also important. Many analogue satellite signals (which tend to have higher power), will reduce the signal to noise ratio on the digital signals. This is because the link's power must be reduced according to the total power of the link.

Noise figure of the link is a number usually in dB that states how much the signal to noise ratio (S/N ratio) is reduced from the input to the output. If the S/N ratio from the dish is X dB, the noise figure on the link is Y dB, the S/N ratio on the output will be X-Y dB. Dependant on the application (fiber loss, total power on signal and power of the laser), one link will typically add 4-5dB noise for fiber distances less than 3000 meters.

A coaxial cable will attenuate more on higher frequencies than lower. If the attenuation on 2GHz is more than the noise figure for the L-band link, there will be a system improvement regarding total signal to noise ratio. Therefore, to distance from the dish to the receiver must be significant (more than 200 meters, dependent of the coaxial cable specification) for getting

return of the investment of the L-band link. If the application needs galvanic isolation, the L-band link is a very good way to achieve this.

It is recommended that the wavelengths 1270, 1370, 1390, 1410, 1590 and 1610 nm are reserved for digital communication in CWDM systems due to fiber distortion issues (see fiber specification).

2 Specifications

2.1 RF Characteristics

Frequency band width	950-2150 MHz
Return loss	>10dB
RF interface	F-connector
Gain flatness	±1.5dB over entire band ±0.25dB at any 36 MHz
Maximum usable input signal	< -5dBm
Maximum input signal without damage	>+10dBm
Inter modulation products (two carriers, 5dB optical loss)	< -55dBc (15T/CWDM) < -45dBc (13T)
Link gain	40dB
Link gain Optical link budget	40dB 16dB/50km (15T/CWDM) 6dB (13T)
•	16dB/50km (15T/CWDM)
Optical link budget	16dB/50km (15T/CWDM) 6dB (13T)
Optical link budget 1dB compression (output)	16dB/50km (15T/CWDM) 6dB (13T) 0dBm <10dB @ 3dB fiber optical loss

2.2 Optical Characteristics

Wavelength	1310nm ±40nm, 16 CWDM channels ±2nm 1270, 1290, 1310, 1330, 1350, 1370, 1390, 1410, 1470, 1490, 1510, 1530, 1550, 1570, 1590 and 1610 nm			
Power output	+3dBm (15T/CWDM) 0dBm or -3dBm (13T)			
Optical interface	SC/UPC, Single mode			

2.3 Power connection

Maximum power	<3W (+5V)
consumption	<1.5W (-15V)
	<1.5W (+15V)

3 Configuration

3.1 Format configuration

The LB-EO can be configured in three different modes:

- Automatic gain control (AGC mode)
- Manually controlled gain using rotary switches (SW2 and SW3)
- Sample AGC (automatically adjust gain and lock gain adjustment)

The configuration can either be set with a DIP switch or with the Flashlink GYDA Control System. The layout of the Flashlink LB-EO is shown in the drawing below with the DIP switch to the upper left position.

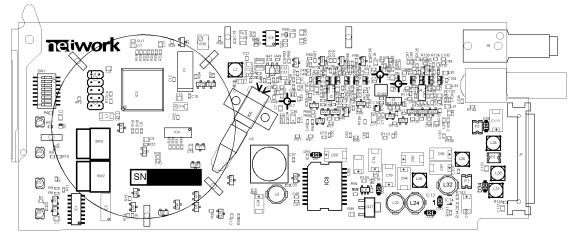


Figure 2: LB-EO board layout.

For setting the gain manually, use the rotary switches SW2 and SW3 situated near the extractor handle. The two switches make a two digit number. SW3 is the tens and SW2 is the ones. The number is gain in decibel (0-31dB). If larger number than 31 is set, the gain will be 31. An ideal setting for the attenuator is LOS green and no light in LEVEL. Decrease the number until LEVEL orange, and then increase the number one by one until LEVEL stops lighting.

DIP switch configuration must be set according to the table below:
--

Switch #	Label	Function, DIP = ON	Function, DIP = OFF	Comment
1	AGC	Automatic gain control	Manual gain control	
2	R/S	Run AGC	Sample AGC level	Only valid in Manual gain control
3	LNB	Enable power supply for LNB	Disable power supply for LNB	
4	H/V	Horizontal polarization	Vertical polarization	Sets voltage on LNB
5	LLC	Line length compensation on	Line length compensation off	If on, output voltage from card to LNB will increase by 1 volt. Set to ON when using long cables (cable more than approx 3 ohms DC resistance in cable)
6	H/L	High band	Low band	22kHz tone control
7	GPI	H/V and H/L controlled by GPI	H/V and H/L controlled by DIP or GYDA	When GPI is set, DIP 4 and 6 will be disregarded
8	OVR	Override GYDA control. Config. with DIP switch	GYDA control. Config. with GYDA	Select configuration from GYDA

All DIP switches are off when pointing towards the release handle.

4 Connections

The Flashlink LB-EO has a dedicated connector module: LB-EO-C1. This module is mounted at the rear of the sub-rack. The module is shown in the figure below.

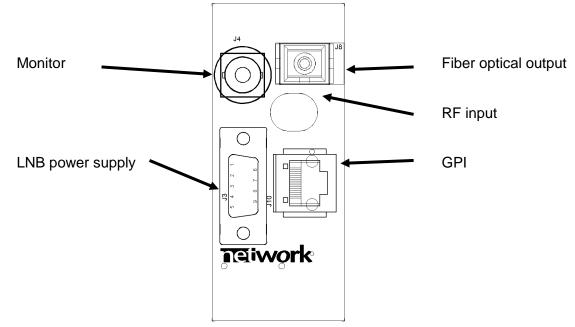


Figure 3: Connector module for L-band.

In typical use, an LB-EO / LB-OE module at each end will be used. An LNB is connected to the F-connector of the LB-EO, and a satellite tuner is connected to the F-connector of the LB-OE. The voltage/22kHz output from the satellite tuner, can not be transferred on the fiber between LB-EO and LB-OE, because this signal goes the other way. The LB-OE can nevertheless detect voltage and/or tone, and put them to the GPI output on the LB-EO. Using a separate communication line (two digital signals using D422MG or similar), these signals can be transferred to the LB-EO.

LB-EO tone/voltage output on the RF-connector can be controlled is three different ways: directly using GYDA, DIP switches or the GPI inputs (see chapter 3.1 for DIP switch settings).

The LB-OE will always detect the voltage/tone from the satellite tuner or other equipment, and set the GPI according to the detected tone and voltage. A 22 kHz tone on top of the LNB power supply indicates high band (11.7-12.75 GHz) and no tone is for low band (10.7-11.7 GHz).

Vertical polarization is chosen with a voltage less than 15 volts, typically 13 volts. Most LNBs will set vertical polarization within a voltage window (for instance from 11.5 to 14.2 volts dependant of the LNB). Accordingly the horizontal polarisation is voltage greater than 15 volts, typically 18 volts (for instance from 15.8 to 19.0 volts). If the voltage is near 15 (for instance between 14.2 and 15.8), the polarization will be uncertain. The example voltages are LNB manufacturer dependant, please check the user manual for the LNB voltage thresholds. If the RF coaxial cable is long, there will be a DC loss. By adding one volt out from the LB-EO, longer cables can be used without risking getting the wrong polarization. This configuration is called LLC (long line compensation).

There is also a power connection for LNB. Connect pin 4 to a positive voltage (+12V to +24V) and pin 1 to power supply ground. The frame power supply can only supply 15W totally on +15V, and external power supply must be used if 15W is exceeded. LNBs can draw up to 9W, please check the LNB's user manual for current consumption.

The LB-EO LNB power supply connector powers only its own LNB, so each backplane must be connected to a power supply (or daisy chained if the power can handle the total current needed for all the LNBs). The pinning is the same as a Sublime power supply, and it is possible to use this desktop power for the LNBs.

4.1 Mounting the connector module

The details of how the connector module is mounted, is found in the user manual for the subrack frame FR-2RU-10-2.

This manual is also available from our web site: <u>http://www.nevion.com/</u>

4.2 Terminal format support

The different input and output ports on LB-EO can support a number of formats. The table below shows which signal formats are supported on the selected terminals.

Terminal format support:

Terminal	Function	Supported Format	Mode
OPT	Optical output	Analogue 950-2150 MHz	Output
RF	Electrical input	Analogue 950-2150 MHz	Input
Monitor	Electrical output (attenuated)	Analogue 950-2150 MHz	Output
GPI Input	Control High/low band and polarity	Digital input	CMOS Input
GPI Output	Data Output	Digital output	Open collector output
GPI ALARM	Open Collector Alarms	Wired alarms	Open Collector Output

5 Module status

The status of the module can be monitored in three ways.

- 1. GYDA System Controller (optional).
- 2. GPI at the rear of the sub-rack.
- 3. LED's at the front of the sub-rack.

Of these three, the GPI and the LED's are mounted on the module itself, whereas the GYDA System Controller is a separate module giving detailed information on the card status. The functions of the GPI and the LED's are described in sections 5.1 and **Error! Reference source not found.** The GYDA controller is described in a separate user manual.

5.1 GPI Alarm – Module status outputs

These outputs can be used for wiring up alarms for third party control systems. The GPI outputs are open collector outputs, sinking to ground when an alarm is triggered. The GPI connector is shown in figure below.

LB-EO module GPI pinning:

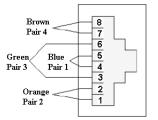


Figure 4: GPI output.

Signal	Name	Pin #	Mode
Status	General error status for the module	Pin 1	Open Collector
LOS	Loss of Signal (open = signal detected)	Pin 2	Open Collector
LEVEL	Level too high (open = level ok)	Pin 3	Open Collector
H/L	High/low band (ground for 22kHz tone enable/high	Pin 4	CMOS Input
	band)		
H/V	Horizontal/vertical polarization (ground for vertical	Pin 5	CMOS Input
	polarisation)		
DATA	Data output	Pin 6	Open Collector
Ground	0 volt pin	Pin 8	0V.

Electrical Maximums for GPI outputs

Max current: 100 mA

Max voltage: 30 V

5.2 Front panel – Status monitoring

The status of the module can be easily monitored visually by the LED's at the front of the module. The LED's are visible through the front panel as shown in the figure below.

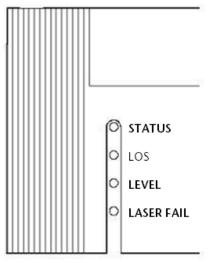


Figure 5: Front panel indicators for the LB-EO.

The LB-EO has 4 LED's each showing a status showed in the table below.

Diode / State	Red LED	Green LED	Orange LED	No light
STATUS	Module is faulty,	Module is OK		Module has
	or module is	Module power is		no power
	initialising.	OK		
LOS	No signal	Signal is present		Module has
				no power
LEVEL	Signal level too		Signal level	Signal level
	high – increase		critical - increase	not critical
	attenuation or		attenuation or	
	reduce input level		reduce input level	
LASER FAIL	Laser failure	Laser OK		Module has
				no power

6 Laser safety precautions

These are guidelines to limit hazards from laser exposure.

All the available EO units in the Flashlink range include a laser. Therefore this note on laser safety should be read thoroughly.

The lasers emit light at wavelengths from 1270nm up to 1610nm. This means that the human eye cannot see the beam, and the blink reflex cannot protect the eye. (The human eye can see light between 400 nm to 700 nm).

A laser beam can be harmful to the human eye (depending on laser power and exposure time). Therefore:

Be careful when connecting / disconnecting fiber pigtails (ends).

Never look directly into the pigtail of the laser/fiber.

Never use microscopes, magnifying glasses or eye loupes to look into a fiber end.

Use laser safety goggles blocking light at 1310 nm and at 1550 nm

Instruments exist to verify light output power: Power meters, IR-cards etc.

Flashlink features:

All the laser module cards in the Flashlink product range, are Class 1 laser products according to IEC 825-1 1993, and class I according to 21 CFR 1040.10 when used in normal operation.

More details can be found in the user manual for the FR-2RU-10-2 frame.

Maximum output power¹: 5 mW

Operating wavelengths: > 1270 nm





¹ Max power is for safety analysis only and does not represent device performance.

General environmental requirements for Nevion equipment

- 1. The equipment will meet the guaranteed performance specification under the following environmental conditions:
- Operating room temperature range: 0°C to 40°C
- Operating relative humidity range: <90% (non-condensing)
- 2. The equipment will operate without damage under the following environmental conditions:
 - Temperature range:
 - Relative humidity range:
- -10°C to 55°C
- <95% (non-condensing)

Product Warranty

The warranty terms and conditions for the product(s) covered by this manual follow the General Sales Conditions by Nevion, which are available on the company web site:

www.nevion.com

Appendix A Materials declaration and recycling information

A.1 Materials declaration

For product sold into China after 1st March 2007, we comply with the "Administrative Measure on the Control of Pollution by Electronic Information Products". In the first stage of this legislation, content of six hazardous materials has to be declared. The table below shows the required information.

	Toxic or hazardous substances and elements					
組成名稱 Part Name	鉛 Lead (Pb)	汞 Mercury (Hg)	镉 Cadmium (Cd)	六价 铬 Hexavalent Chromium (Cr(VI))	多溴联苯 Polybrominated biphenyls (PBB)	多溴二苯醚 Polybrominated diphenyl ethers (PBDE)
LB-EO	0	0	0	0	0	0

O: Indicates that this toxic or hazardous substance contained in all of the homogeneous materials for this part is below the limit requirement in SJ/T11363-2006.

X: Indicates that this toxic or hazardous substance contained in at least one of the homogeneous materials used for this part is above the limit requirement in SJ/T11363-2006.

This is indicated by the product marking:




A.2 Recycling information

Nevion provides assistance to customers and recyclers through our web site <u>http://www.nevion.com/</u>. Please contact Nevion's Customer Support for assistance with recycling if this site does not show the information you require.

Where it is not possible to return the product to Nevion or its agents for recycling, the following general information may be of assistance:

- Before attempting disassembly, ensure the product is completely disconnected from power and signal connections.
- All major parts are marked or labeled to show their material content.
- Depending on the date of manufacture, this product may contain lead in solder.
- Some circuit boards may contain battery-backed memory devices.

EC Declaration of Conformity

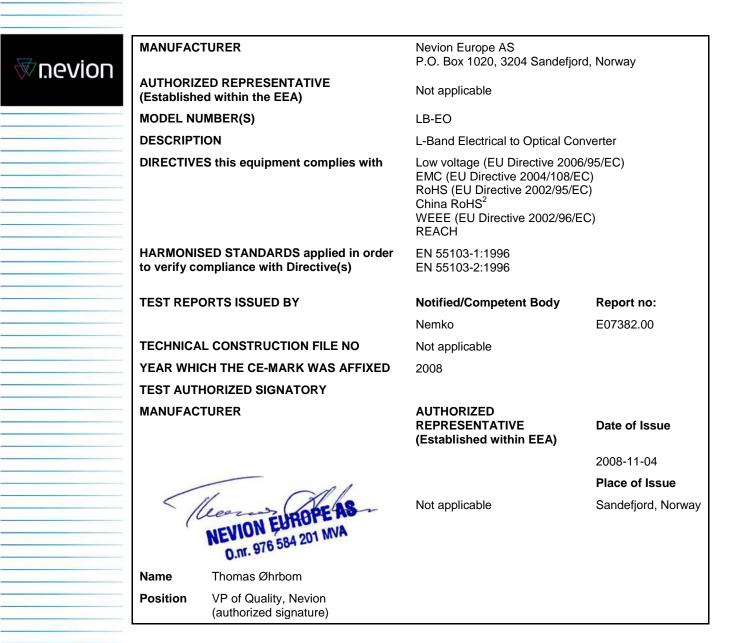

² Administration on the Control of Pollution Caused by Electronic Information Products