




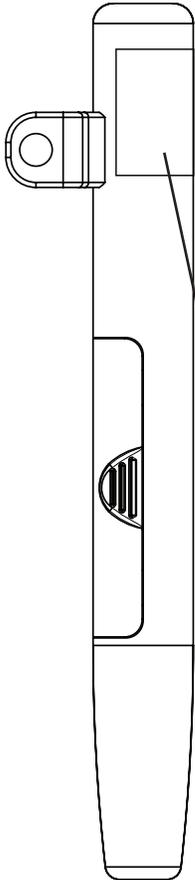

User Manual

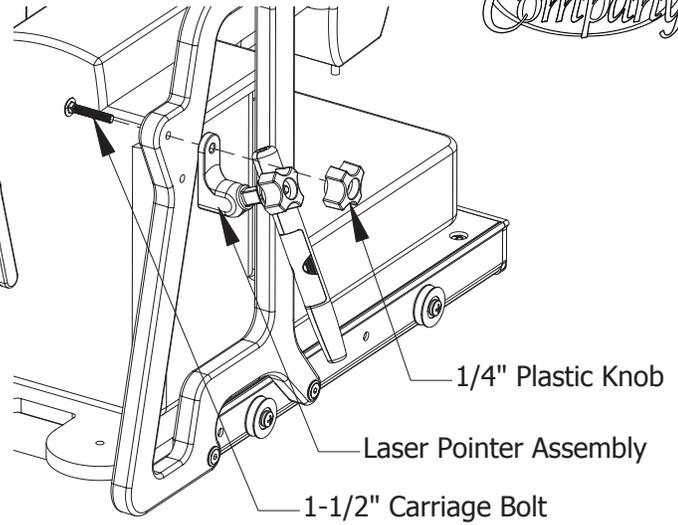

SAFETY PRECAUTIONS

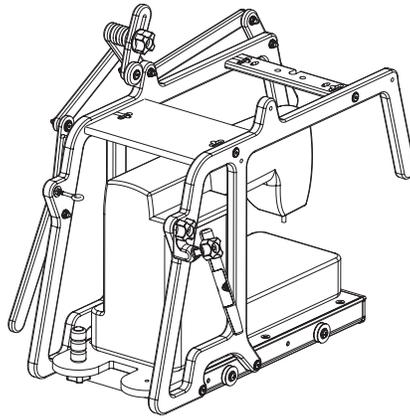

Warning Labels are located on the product, as shown:



Installation:

Step 1: First, Remove the 1-1/2" Carriage Bolt and Plastic Knob from the hole in the top of the Laser Mount. Now insert the 1-1/2" Carriage Bolt through an available 1/4" hole in the Top Platform. (If none of the available holes suit your needs drill a 1/4" hole in the desired location.)

NOTE: The Laser Pointer may be mounted on either side of the Top Platform, and is easily moved from one side of the Top Platform to the other. If you are using the Pedal Pusher, when mounting the Laser Pointer make sure that it doesn't interfere with your Pedal Pusher Levers.

Step 2: Place the Laser Pointer Assembly onto the Carriage Bolt.


Step 3: Secure the Laser Assembly to the Top Plate with the 1/4" Plastic Knob.

Battery Installation: Use a butter knife or flat screw driver to remove the battery cover. Batteries are inserted with their positive pole (+) pointing down. (Illustration below)

1. CAUTION: Use of controls, adjustments, or performance of procedures other than given in USER MANUAL may result in hazardous laser light exposure.
2. This product is safe to use in normal operations as described in these instructions. **AVOID DIRECT EYE EXPOSURE. DO NOT LOOK DIRECTLY INTO THE LASER EMITTER.**

Specifications:

Power: Class II
 Wavelength: 650nm
 Output Power: 1mW
 Battery Type: 2 AA
 Battery Life: 150 Continuous hours
 Weight: 31.2g Without Batteries
 Dimensions: 6.929" L X 1.533" W
 Color: Dark Grey

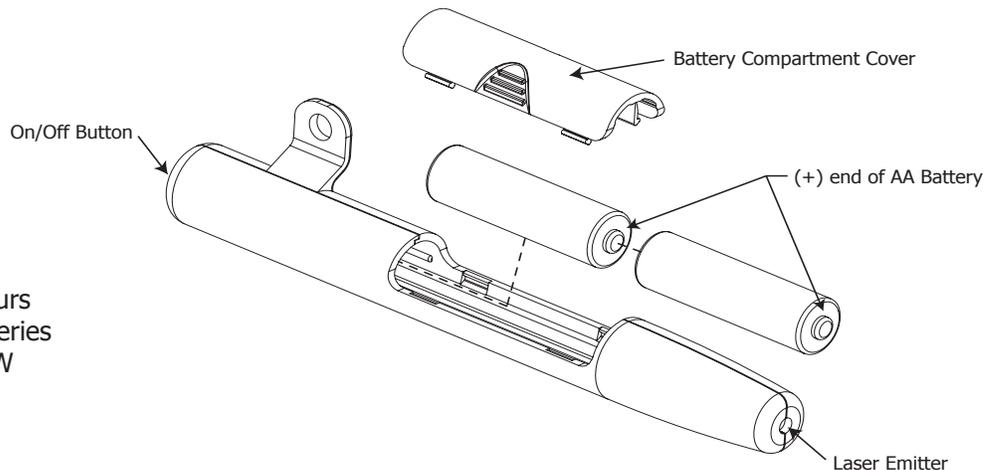

The Grace Company certifies that the Gracie Laser complies with the government FDA regulation 21CFR 1040.10 and 1040.11.