

Touch Screen Monitor

User Manual



Content:

Cautions	2
1 Package contents	2
2 Driver install	2
3 Touch Screen Calibration.....	6

Cautions

- 1.1 Touch screen is made of glass material. It's easily breakable from dropping or impact, please handle it with care.
- 1.2 Please make sure touch screen (USB or serial port) connected to the PC.
- 1.3 Please close Antivirus Program when install the driver.
- 1.4 After driver installation, please reboot computer.
- 1.5 Please allow the installed application to automatically launch once OS boot up
- 1.6 Please do not plug-in and plug-out frequently when the computer is on. Please clean the front and rear surface of touch screen in order to make it best performance.
- 1.7 Touch screen system comprising of: touch screen and PC.

1 Package contents

In the carton, you will find the following:

- Infrared touch screen
- USB connecting wire
- CD (User manual, software)


2 Driver install

Open the Driver CD disk, and choose the driver according to the user's computer system.


Here it is an example for reference:

2.1 Double click  Win7DriverSetup32Bit.exe , as below


 ETO, RS232 Series, Serial	For single touch screen, Serial Port
 ETO, USB Series, USB	For single touch screen, USB
 ETO, MT, Serial	For multi touch screen, Serial port
 ETO, MT, USB	For multi touch screen, USB
 ETO, RS232, Serial	For single touch, Serial port

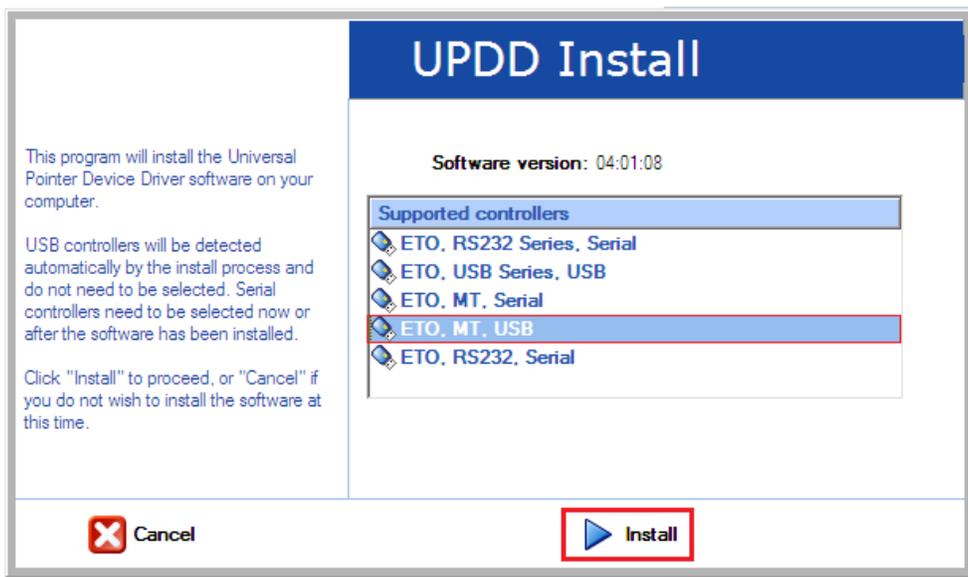


2.2 Choose "ETO, MT, USB", Click "install"

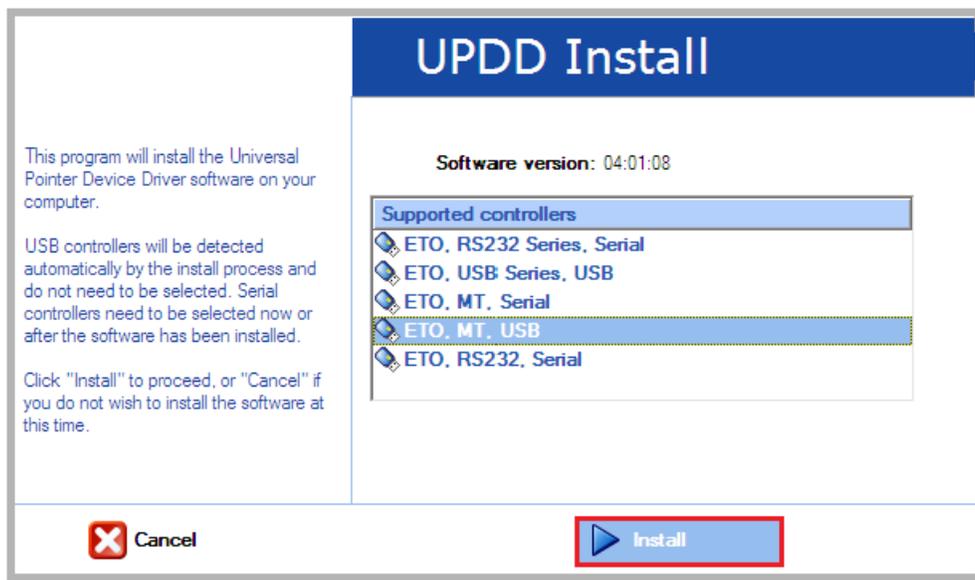


2.3 Click "Install", below Progress Bar will appear

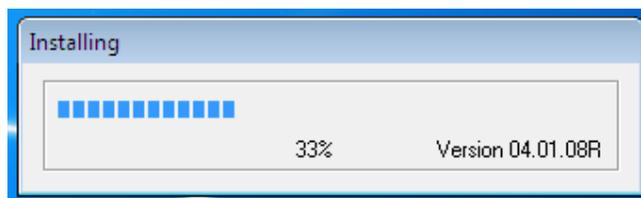

2.4 During installation, you will see below Dialog

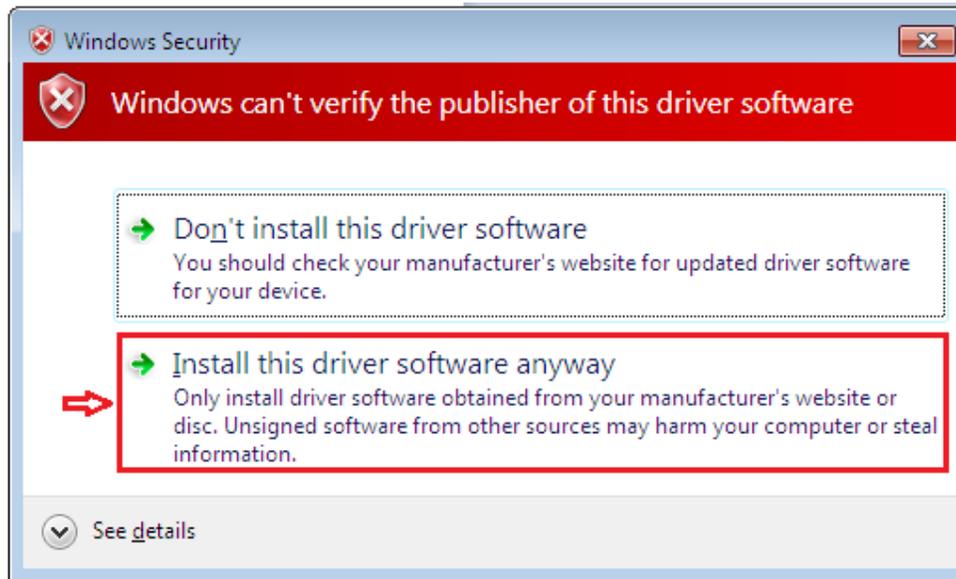


Click Install as below

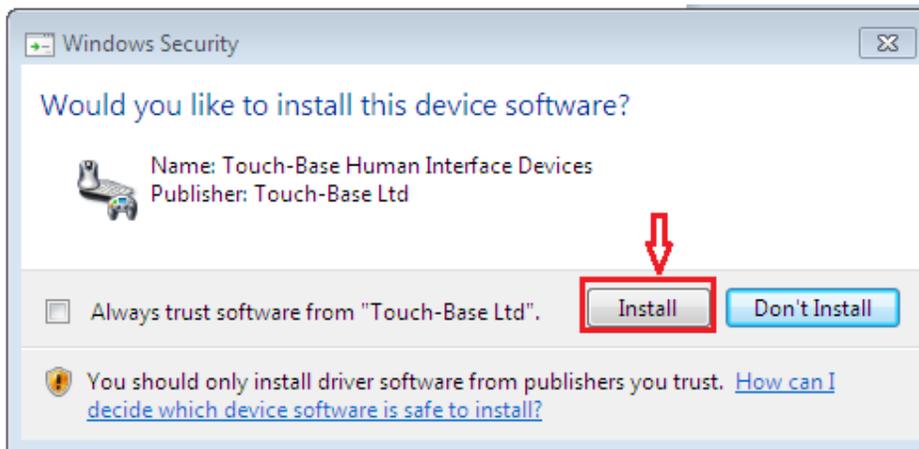



Click “Close”, the driver is installed successfully


After driver installation, there is icon show on the right corner of computer. For more detailed instruction, please refer to “Help” as below.

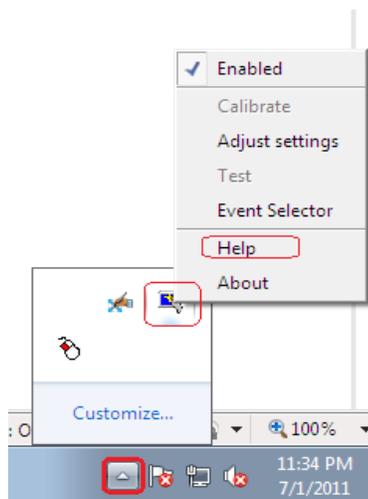


3 Touch Screen Calibration

If you find that touch is not accurate, please use this option to calibrate.

Click the Driver Icon, and choose “Calibrate”

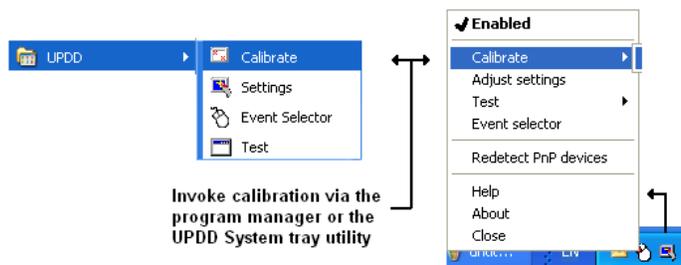

Touch the “arrows” as it appears to calibrate the touch screen.

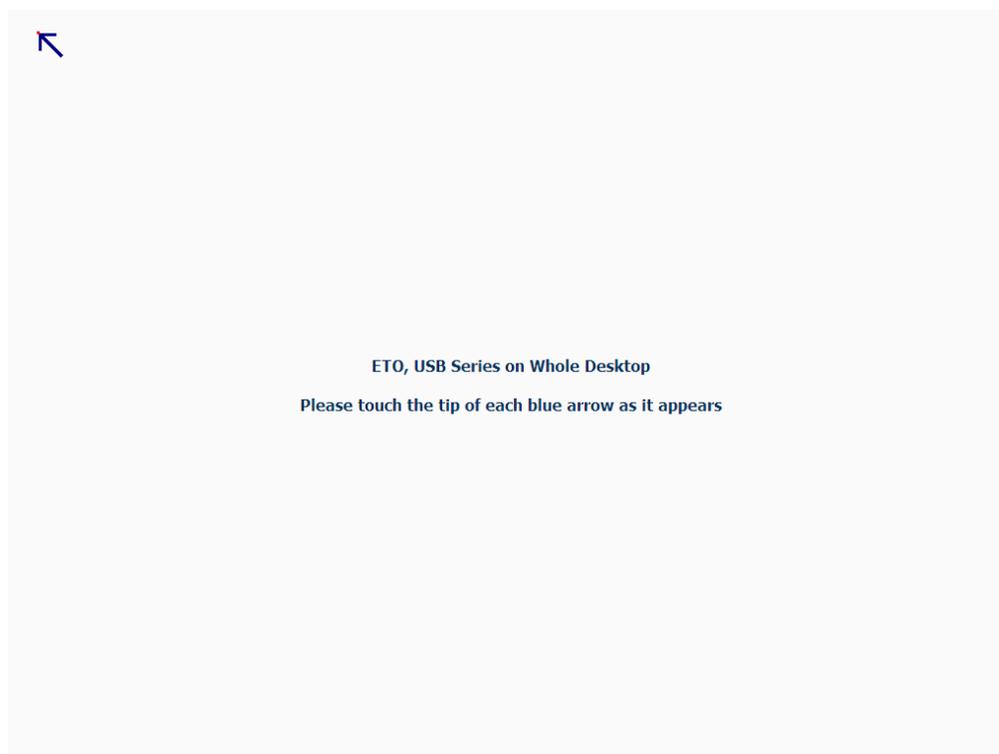



After finishing calibration, please reboot computer.