


Tablet Management Cart / Module

Sync Cable Kit

for iPad®



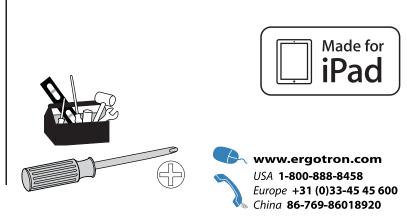



Make sure the Module power cord is disconnected from wall power supply before proceeding.



Unlock the module and open the doors.


NOTE: the Module power cord acts as the connect/disconnect device switching power off and on.

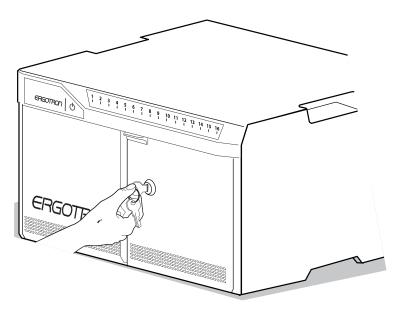


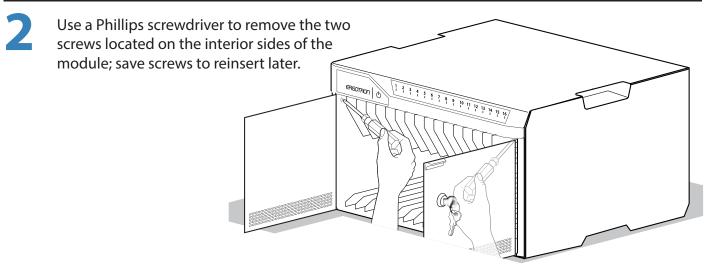


Apple, iPad, iPad Air, iPad mini, Retina and Macintosh are trademarks of Apple Inc., registered in the U.S. and other countries.


"Made for iPad," means that an electronic accessory has been designed to connect specifically to iPad, and has been certified by the developer to meet Apple performance standards. Apple is not responsible for the operation of this device or its compliance with safety and regulatory standards. Please note that the use of this accessory with iPad may affect wireless. Partially slide out the module drawer. You'll need to unplug two cables before sliding the drawer completely out. Open the strap to access the two cables.

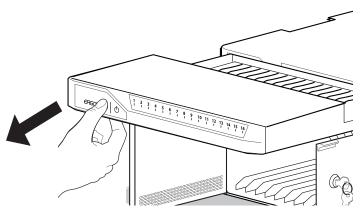

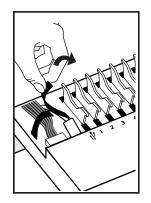


Unplug the USB and DC power cables (push up on the lever under the DC connector to release). The drawer can now be removed.

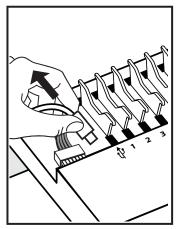

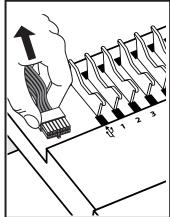


Unwind and remove the existing USB cables from drawer.

NOTE: Please recyle or dispose the removed cables in a responsible manner.

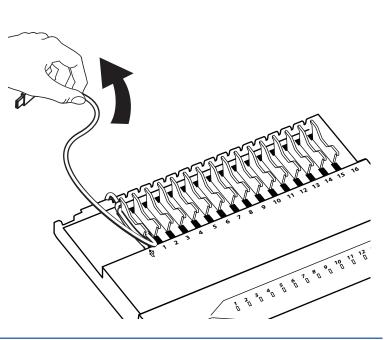



5

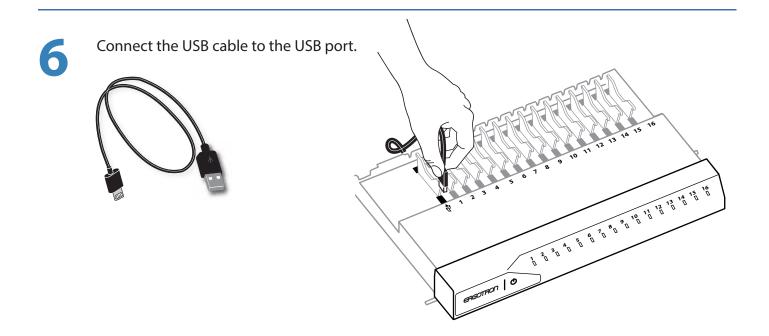





Place the drawer upside down on the cart top and route the USB cable through the slot on the back of the drawer and under the hooks toward the front. Make sure there is no slack in the cable. All excess cable should hang from the hooks.

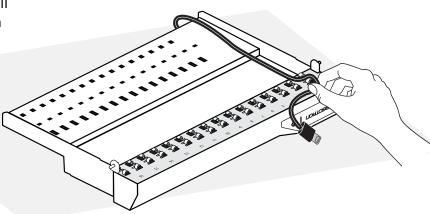

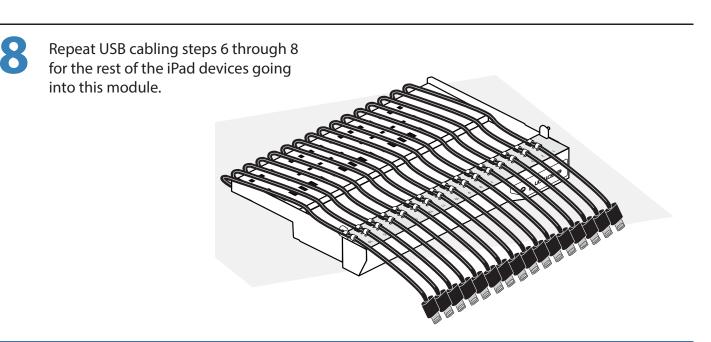


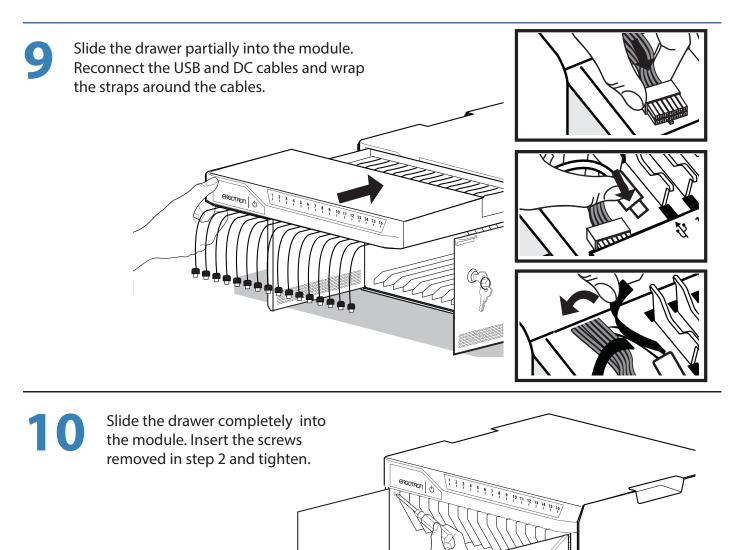

Insert iPad devices into module. Connect the tablet USB charging cables to the iPad devices.

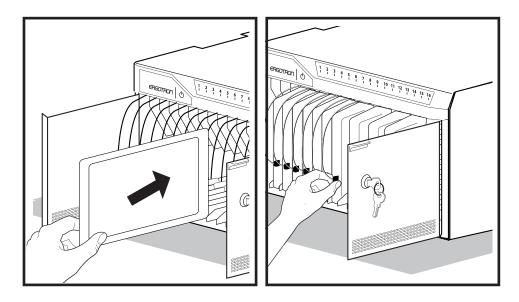

12 Tablet Charging

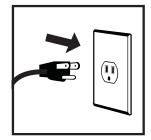

To begin charging the tablets, plug in the Module power cord.

The power cord is used to turn the Module power on and off. Charging occurs whenever the cart power cord is connected UNLESS a Macintosh[®] or PC notebook USB cable is connected to the cart for syncing.



NOTE: the Module power cord acts as the connect/disconnect device switching power off and on.

ERGOTRON

© 2014 Ergotron, Inc. All rights reserved.

While Ergotron, Inc. makes every effort to provide accurate and complete information on the installation and use of its products, it will not be held liable for any editorial errors or omissions (including those made in the process of translation from English to another language), or for incidental, special or consequential damages of any nature resulting from furnishing this instruction and performance of equipment in connection with this instruction. Ergotron, Inc. reserves the right to make changes in the product design and/or product documentation without notification to its users. For the most current product information, or to know if this document is available in languages other than those herein, please contact Ergotron. No part of this publication may be reproduced, stored in a retrieval system, or transmitted in any form or by any means, electronic, mechanical, photocopying, recording or otherwise without the prior written consent of Ergotron, Inc.,1181 Trapp Road, Eagan, Minnesota, 55121, USA Patents Pending and Patented U.S.& Foreign. Ergotron is a registered trademark of Ergotron, Inc.

Americas Sales and Corporate Headquarters

St. Paul, MN USA (800) 888-8458 +1-651-681-7600 www.ergotron.com sales@ergotron.com

APAC Sales

Tokyo, Japan www.ergotron.com apaccustomerservice@ergotron.com

Amersfoort, The Netherlands +31 33 45 45 600 www.ergotron.com info.eu@ergotron.com

EMEA Sales

Worldwide OEM Sales

www.ergotron.com info.oem@ergotron.com