


SAFETY-GLO[®] COOL MIST HUMIDIFIER

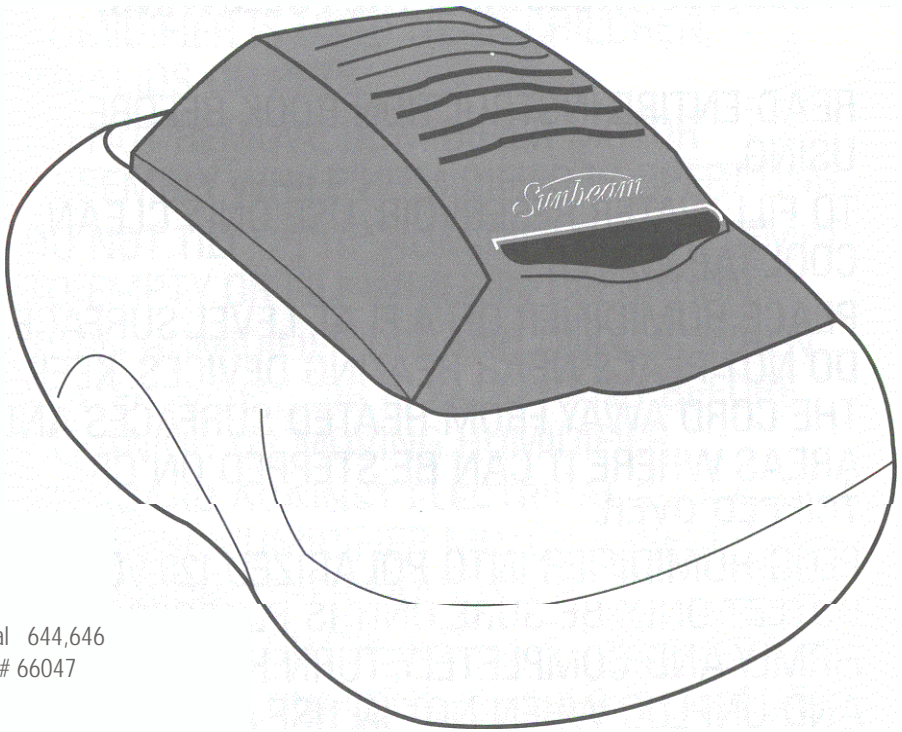

Model 644,646
Part # 66047

Important notes

Please read this manual carefully before using this device
For Household Use Only.

SAFETY-GLO®
COOL MIST HUMIDIFIER
INSTRUCTION BOOK

READ AND SAVE THESE INSTRUCTIONS WHEN USING ELECTRICAL APPLIANCES, ESPECIALLY WHEN CHILDREN ARE PRESENT, BASIC SAFETY PRECAUTIONS SHOULD ALWAYS BE FOLLOWED, INCLUDING THE FOLLOWING:

1. READ ENTIRE INSTRUCTION BOOK BEFORE USING.
2. TO FILL WATER RESERVOIR, USE ONLY CLEAN, COOL TAP WATER.
3. PLACE HUMIDIFIER ON A FLAT, LEVEL SURFACE. DO NOT PLACE NEAR HEATING DEVICES. KEEP THE CORD AWAY FROM HEATED SURFACES AND AREAS WHERE IT CAN BE STEPPED ON OR TRIPPED OVER.
4. PLUG HUMIDIFIER INTO POLARIZED 120 VOLT AC OUTLET ONLY. BE SURE UNIT IS PLUGGED IN FIRMLY AND COMPLETELY. TURN HUMIDIFIER OFF AND UNPLUG WHEN NOT IN USE AND BEFORE CLEANING.
5. NEVER OPERATE HUMIDIFIER WITH A DAMAGED CORD OR PLUG. IF IT IS NOT WORKING PROPERLY, OR IT HAS BEEN DROPPED OR DAMAGED, RETURN IT TO THE APPLIANCE SERVICE STATION FOR EXAMINATION, REPAIR, OR POSSIBLE

ELECTRICAL OR MECHANICAL ADJUSTMENT

6. DO NOT ADD MEDICATION OF ANY TYPE INTO THE WATER IN THE RESERVOIR. DO NOT COVER VENTS OR LOUVERS OR PLACE ANYTHING OVER THEM WHILE HUMIDIFIER IS OPERATING. NEVER DROP OR INSERT ANY OBJECT INTO ANY OPENING.
7. SUPERVISION IS RECOMMENDED WHEN HUMIDIFIER IS USED NEAR CHILDREN, INVALIDS OR PETS.
8. DO NOT REMOVE HUMIDIFIER MOTOR ASSEMBLY WHILE HUMIDIFIER IS OPERATING.
9. DO NOT TILT OR TIP HUMIDIFIER OR ATTEMPT TO EMPTY OR FILL WHILE IN OPERATION.
10. TURN HUMIDIFIER OFF AND UNPLUG WHEN WATER RESERVOIR IS EMPTY AND BEFORE CLEANING OR MOVING HUMIDIFIER.
11. TO GUARD AGAINST ELECTRICAL SHOCK, DO NOT IMMERSE HUMIDIFIER MOTOR ASSEMBLY IN WATER OR OTHER LIQUIDS.
12. DO NOT USE OUTDOORS.
13. DO NOT USE HUMIDIFIER OTHER THAN FOR HUMIDITY CONTROL.

INSTRUCTIONS

Please refer to the directions below for inserting and removing the humidifier motor assembly. Unit may make vibrating noise if motor assembly is not placed properly on humidifier water reservoir.

To remove motor assembly from water reservoir lift motor assembly directly upwards from water reservoir. To insert motor assembly onto water reservoir set motor assembly gently on ridge of water reservoir. Be sure motor assembly cannot move around on water reservoir.


Warning: Protect yourself against electrical shock. Always unplug your humidifier when not in use, and before cleaning, rinsing, filling or moving. Unit will reach maximum output after about five uses. If greater output is desired, warm tap water may be used.

OPERATING INSTRUCTIONS

1. Always rinse and empty the water container before each filling and after each use.
2. Before filling container, unplug the unit, lift top of unit and place upside down to avoid damaging the impeller stem.
3. Fill with cool tap water to fill line indicated on the outside of the bucket. There are two fill lines located on the back side of the reservoir. The first line is half full and the top line is full. Do not fill the reservoir higher than the top line. The half full line is to be used for running the humidifier half the normal running time. (Example: If your humidifier runs 20 hours when you fill it up, and you only want to fill 10 hours, simply fill your humidifier to the first line.) Do not add medication of any type to the water in the container. After filling, replace top as explained above.
4. Place the humidifier on flat hard surface. Do not place under a tent. Do not direct the mist toward the patient or toward walls or furniture.
5. The power cord must be extended to its full length (unhanked; not bunched up) to prevent overheating of the cord. Plug humidifier into a 120 volt outlet only



Figure 1

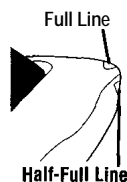

6. If humidifier does not start immediately, make sure humidifier is plugged in. If a wet area forms around your humidifier, the room air is at maximum humidity; unplug and empty your humidifier.




To reduce the risk of electric shock, this appliance has a polarized plug (one blade is wider than the other). This plug will fit in a polarized outlet only one way. If the plug does not fit fully in the outlet, reverse the plug. If it still does not fit, contact a qualified electrician to install the proper outlet. Do not change the plug in any way.

HUMIDIFIER IMPELLER TIP

This humidifier contains a removable moisture control impeller tip. The impeller tip comes already placed on the units impeller stem (Figure 2).

The impeller tip enables you to control the amount of moisture the unit puts into the air. If you would like to increase moisture output, carefully lift motor assembly from water reservoir and remove impeller tip and place on tip holder on under side of humidifier cap. (Figure 3).

This enables more water to flow through impeller stem and increases the amount of moisture that is put into the air. To decrease moisture output just slide impeller tip back on to impeller stem.

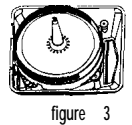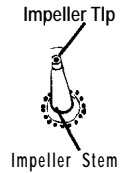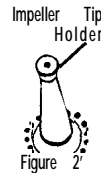

CLEANING INSTRUCTIONS

WARNING: Always unplug humidifier before attempting any service, especially cleaning.

1. Periodically, it is imperative to clean impeller, due to the impurities found in water. Deposits will build up within the impeller stem and limit the moisture output of your humidifier.
2. To clean inside impeller stem, set motor assembly on flat sturdy surface with impeller stem facing up.
3. Use a small brush or toothpick to clear or loosen any minerals that are built up in impeller stem.

NOTE: If impeller stem is completely or partially blocked it will inhibit the performance of the product.

WEEKLY CLEANING:

(Always Clean Humidifier Before Storing).

1. Disconnect the humidifier and remove top of unit.
2. Fill the container with one gallon water and $\frac{1}{4}$ cup household bleach. Seal humidifier opening with a soft cloth to prevent moisture from escaping.
3. Plug unit into 120 volt outlet and run for 30 minutes with opening sealed. Operate unit in an empty bathtub to avoid damage to surrounding area from bleach water.
4. Remove cloth from opening, empty bucket, and thoroughly rinse until bleach smell is gone.
5. Wipe humidifier dry.

Failure to properly clean your humidifier will result in the build up of harmful bacteria and mold.

In areas where tap water contains excessive mineral matter, a white dust may accumulate in the area near the humidifier. This white dust can be readily removed with a cloth or vacuum cleaner or be completely eliminated by using distilled water. The white dust is not a defect in the humidifier, but is due to minerals suspended in the water. DO NOT use any type of water conditioning tablet as it may cause other problems.

DO NOT

add medication of any type to the water in the container.



DO NOT

use impeller stem as a handle.

This could damage your humidifier.

Do not allow humidifier to stand with water unused; this could cause growth of fungi.

It will not harm unit to continue running without water, if the water is used up during normal operation. However, do not leave humidifier plugged in when not in use.

SAFETY GLOW HUMIDIFIERS

All Sunbeam humidifiers are built with the safety of our customers as a priority. Our Safety Glow plastic glows in the dark, letting you know the location of your humidifier at night. The length and intensity of the glow will vary depending upon the amount and quality of light the product absorbs during the day. To achieve the greatest glow at night, place in direct sunlight during the day. The brightness of the glow will be more intense for the first 1-2 hours in the dark. The glow will then diminish, but still remain at a level noticeable to the human eye. Our safety thermostat motors automatically turn off if any overheating occurs. There is no changing of fuses with a Sunbeam humidifier. If overheating occurs just unplug the unit from outlet for a short period of time, plug back into outlet and resume operation of humidifier.

2 Year Limited Warranty

Congratulations on your recent purchase of a quality Sunbeam product. We are confident that our product will perform well and therefore warrant to you, as the original retail purchaser, for a period of 2 years from the date of original purchase, that your new product will be free of mechanical and electrical defects in material and workmanship.

If your product is covered during the warranty period, we will repair or replace a new or refurbished unit of your new product (at our option) without cost to you, which will be your exclusive remedy under this warranty. Please do not return this product to the place of purchase; doing so may delay the processing of your claim and our repair of your product. Simply send your product postage prepaid, with proof of purchase and a short description of the problem directly to our factory service center at the following address: SUNBEAM PRODUCTS, Sunbeam Appliance Service Station, 95 WL Runnels Industrial Drive, Dock M5, Hattiesburg, MS 39401. California residents may call the following number to locate the nearest authorized service center: 1-800-597-5978.

Our warranty for your product will not cover normal wear of parts, damage resulting from negligent use or misuse of the product, use of improper voltage or current, use contrary to operating instructions, glass breakage (if applicable), or disassembly, repair, or alteration by any person other than an authorized service station. Any implied warranty of merchantability or fitness for a particular purpose on your product is limited to the duration of this written warranty. We shall not be liable for any incidental or consequential damages for breach of any express or implied warranty on your product.

Some states do not allow limitations on how long an implied warranty lasts or the exclusion or limitation of incidental or consequential damages, so the above limitation may not apply to you. This warranty gives you specific legal rights, and you may also have other rights which vary from state to state.

©1999 Sunbeam Corporation or its affiliated companies, all rights reserved. SUNBEAM® and HEALTH AT HOME® are registered trademarks of Sunbeam Corporation or its affiliated companies. Distributed by Sunbeam Products, Inc., Boca Raton, Florida 33431. Imported by Sunbeam Corporation. The product you buy may differ slightly from the one shown on this carton due to continuing product development. Questions or comments, please call customer service at 1-800-435-1250.