

# EZEKLEEN 2.5 HD


4 - STAGE ULTRA CLEAN WATER SYSTEM

Model: 8000


## CONNECTING & DISCONNECTING CARTRIDGES

The Ezeekleen 2.5 HD is equipped with a unique collet locking system that allows cartridge changes to take only seconds and requires no special training or tools.

### To make a connection

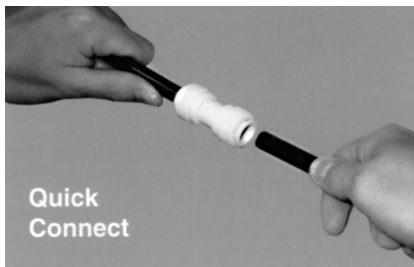


#### 1. Cut tube square

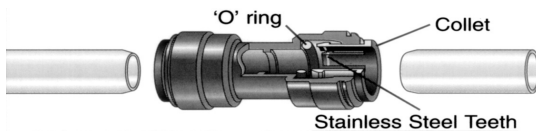


Cut tube square. It is essential that the outside diameter be free of score marks and that burrs and sharp edges be removed before inserting into fitting. For soft thin walled plastic tubing we recommend the use of a tube insert.

#### 3. Push up to tube stop

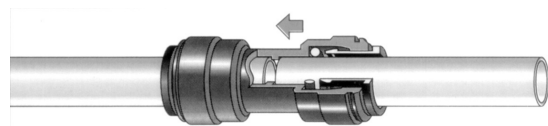


Push the tube into the fitting to the tube stop. The collet (gripper) has stainless steel teeth which hold the tube firmly in position while the 'O' ring provides a permanent leak proof seal.

#### 2. Insert tube

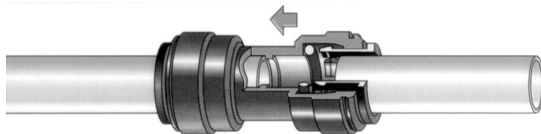


Fitting grips before it seals. Ensure tube is pushed into the tube stop.

#### 4. Pull to check secure

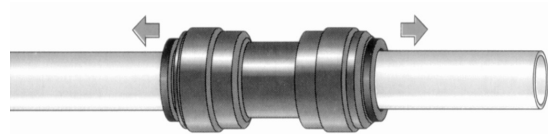


Pull on the tube to check that it is secure. It is a good practice to test the system prior to leaving site and/or before use.

### Disconnecting

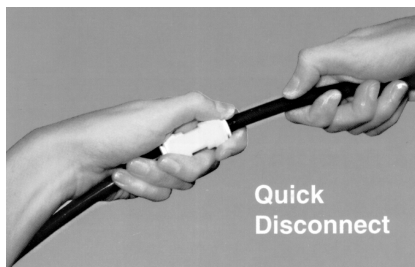

#### Push in collet and remove tube



To disconnect, ensure the system is depressurized before removing the tube. Push in collet squarely against face of fitting, with the collet held in this position, the tube can be removed. The fitting can then be reused.